


(3430) - 3 CYL AG TRACTOR ALL PURPOSE (3/90-1/98) > (06C01) - CAMSHAFT, ROCKER ARMS, VALVES

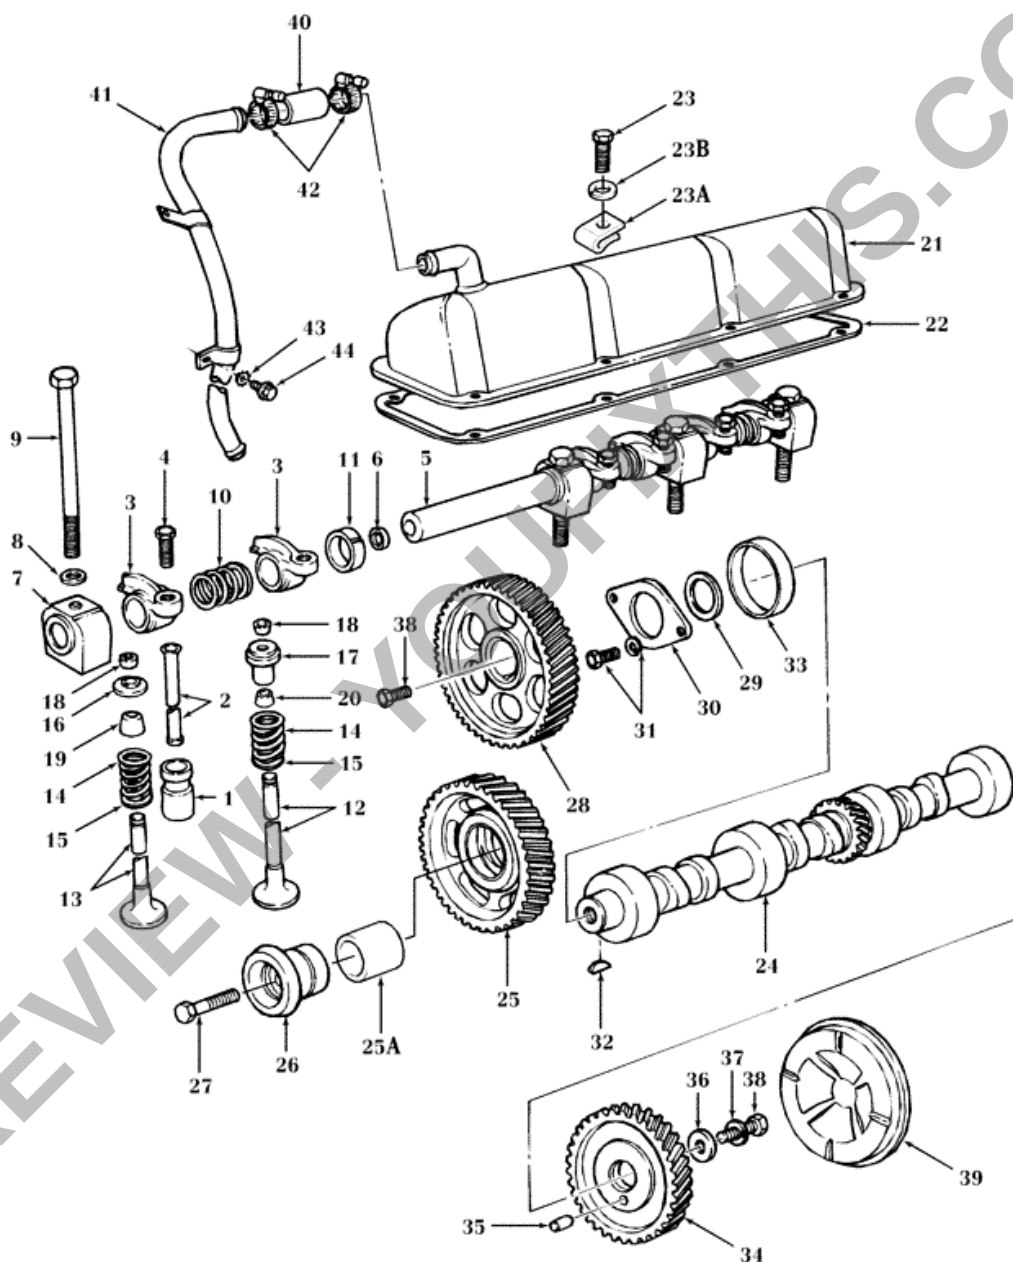




PARTS & MERCHANDISE
STORE

New Holland Agriculture 621 State Street
NA Customer Relations@newholland.com Racine, Wisconsin 53404
866-639-4563 option 1


(3430) - 3 CYL AG TRACTOR ALL PURPOSE (3/90-1/98) > (06C01) - CAMSHAFT, ROCKER ARMS, VALVES

Diag #	Part #	Name	Description	Qty
1	E4HN6500AA	TAPPET	Valve, Start Year: 01-MAR-90	6
2	81813399	ROD	Pushrod, Start Year: 01-MAR-90	6
3	81804316	ROCKER ARM	Arm Assy., Rocker, Exhaust Valve, 3230, 3430, 3930, 3930H, 3930N, 3930NO, 4130, 4130N, 4130NO, 4630N, 4630NO, 4630-O, Start Year: 01-MAR-90	3
3	87802659	ROCKER ARM	Arm Assy., Rocker, Intake Valve, 3230, 3430, 3930, 3930H, 3930N, 3930NO, 4130, 4130N, 4130NO, 4630N, 4630NO, 4630-O, Start Year: 01-MAR-90	3
3	C7NN6529A	ARM	Assy., Rocker, Exhaust Valve, 4630, Start Year: 01-JUN-94	3
3	E5NN6529AA	ROCKER ARM	Arm Assy., Rocker, Intake Valve, 4630, Includes: Ref. 4 thru 6, Start Year: 01-JUN-94	3
4	87801302	ADJUSTMENT SCREW	Adjustable, Rocker Arm, Start Year: 01-MAR-90	1
5	E7NN6563AA	SHAFT	Rocker Arm, Start Year: 01-MAR-90	1
6	376099S	PLUG	Cup, .755", Start Year: 01-MAR-90	2
7	D5NN6531A	SUPPORT	Rocker Arm Shaft, Start Year: 01-MAR-90	4
8	377490S	WASHER, 13.46mm ID x 26.98mm OD x 4.32mm Thk	Flat, 1/2", Start Year: 01-MAR-90	4
9	87802207	BOLT, Cyl Hd, 9/16" - 12 x 203.50mm	Screw, Cap, Flg Hd, G8, 9/16"-12 x 8", Start Year: 01-MAR-90	4
10	C5NE6587A	SPRING	Locating, Start Year: 01-MAR-90	3
11	C7NN6590A	SPACER	Rocker Arm Valve, Start Year: 01-MAR-90	3
12	87802143	STD EXHAUST VALVE	Valve, Exhaust, Standard, W/Hydraulic Gear, W/Hand Primer, 3930H, 4630, 4630N, 4630NO, 4630-O, Start Year: 01-MAR-90	3
12	D3NN6505A	STD EXHAUST VALVE	Valve, Exhaust, Standard, W/Hydraulic Gear, L/Hand Primer, 3230, 3430, 3930, 3930H, 3930N, 3930NO, 4130, 4130N, 4130NO, Start Year: 01-MAR-90	3
12	87800341	OVERSIZE EXHAUST VALVE	Valve, Exhaust, .003" (.0762mm) O/S, Start Year: 01-MAR-90	1
12	87800342	OVERSIZE EXHAUST VALVE	Valve, Exhaust, .015" (.381mm) O/S, Start Year: 01-MAR-90	1
12	87802147	STD EXHAUST VALVE	Valve, Exhaust, Standard, 3930, 4630, Start Year: 01-JAN-98	4
		Used W/ Emissionised Engine.	Used W/ Emissionised Engine.	1
12	F0NN6505CD	OVERSIZE EXHAUST VALVE	Valve, Exhaust, .015" (.381 mm) O/S, 3930, 4630, Start Year: 01-JAN-98	1


(3430) - 3 CYL AG TRACTOR ALL PURPOSE (3/90-1/98) > (07H01) - CLUTCH INPUT SHAFT, W/SYNCHRONIZED TRANSMISSION, W/16 X 8

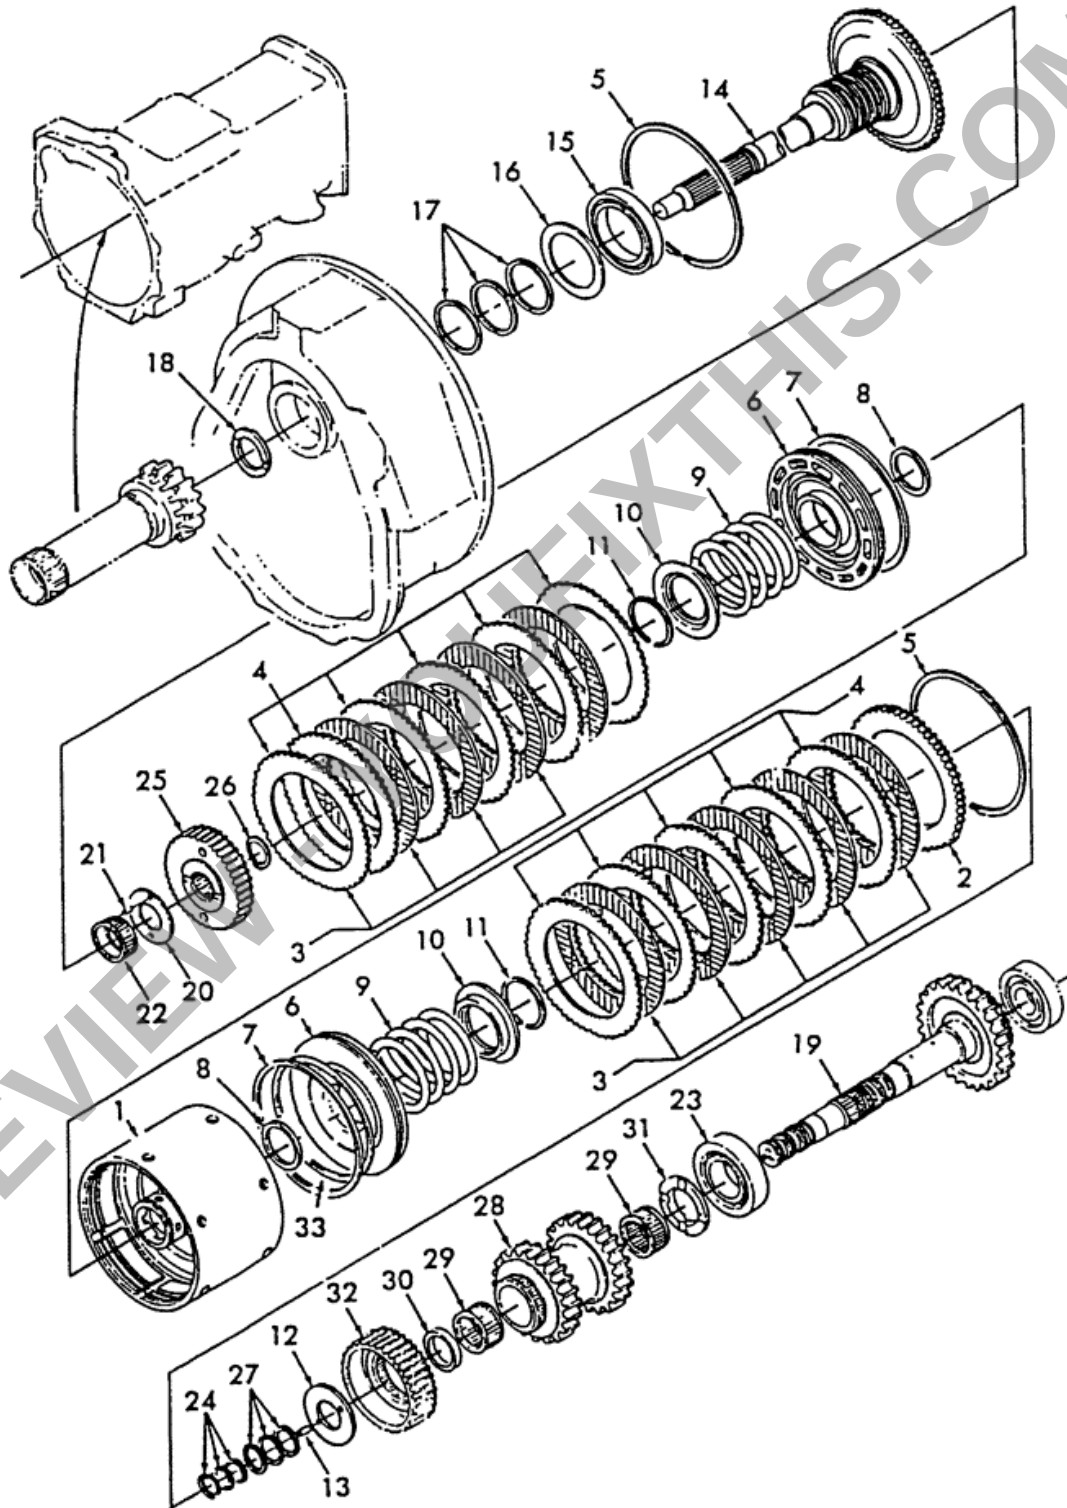

(3430) - 3 CYL AG TRACTOR ALL PURPOSE (3/90-1/98) > (03G01) - AXLE SUPPORTS, HOUSINGS, STEERING CYLINDER

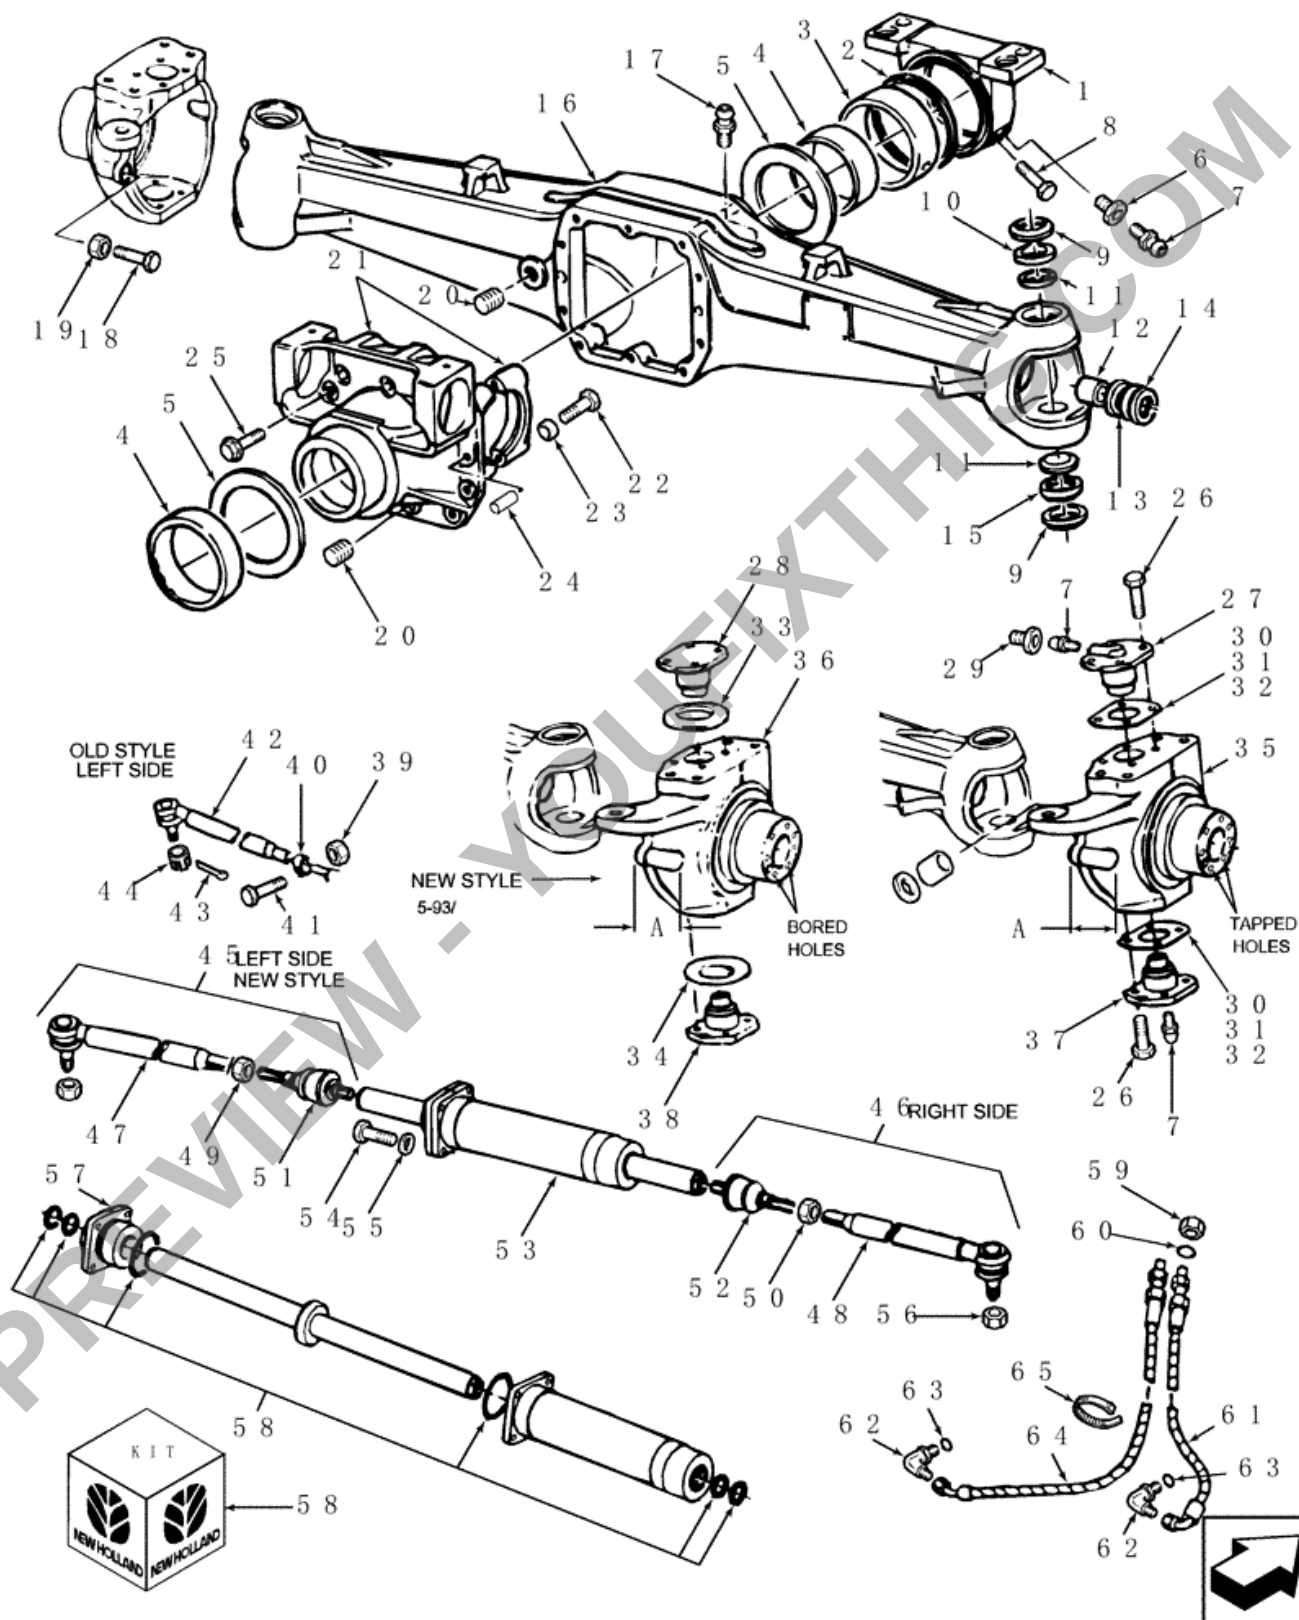

(3430) - 3 CYL AG TRACTOR ALL PURPOSE (3/90-1/98) > (15A01) - CAB ASSEMBLY, COMPLETE - 3430, 3930, 3930H, 4130, 4630

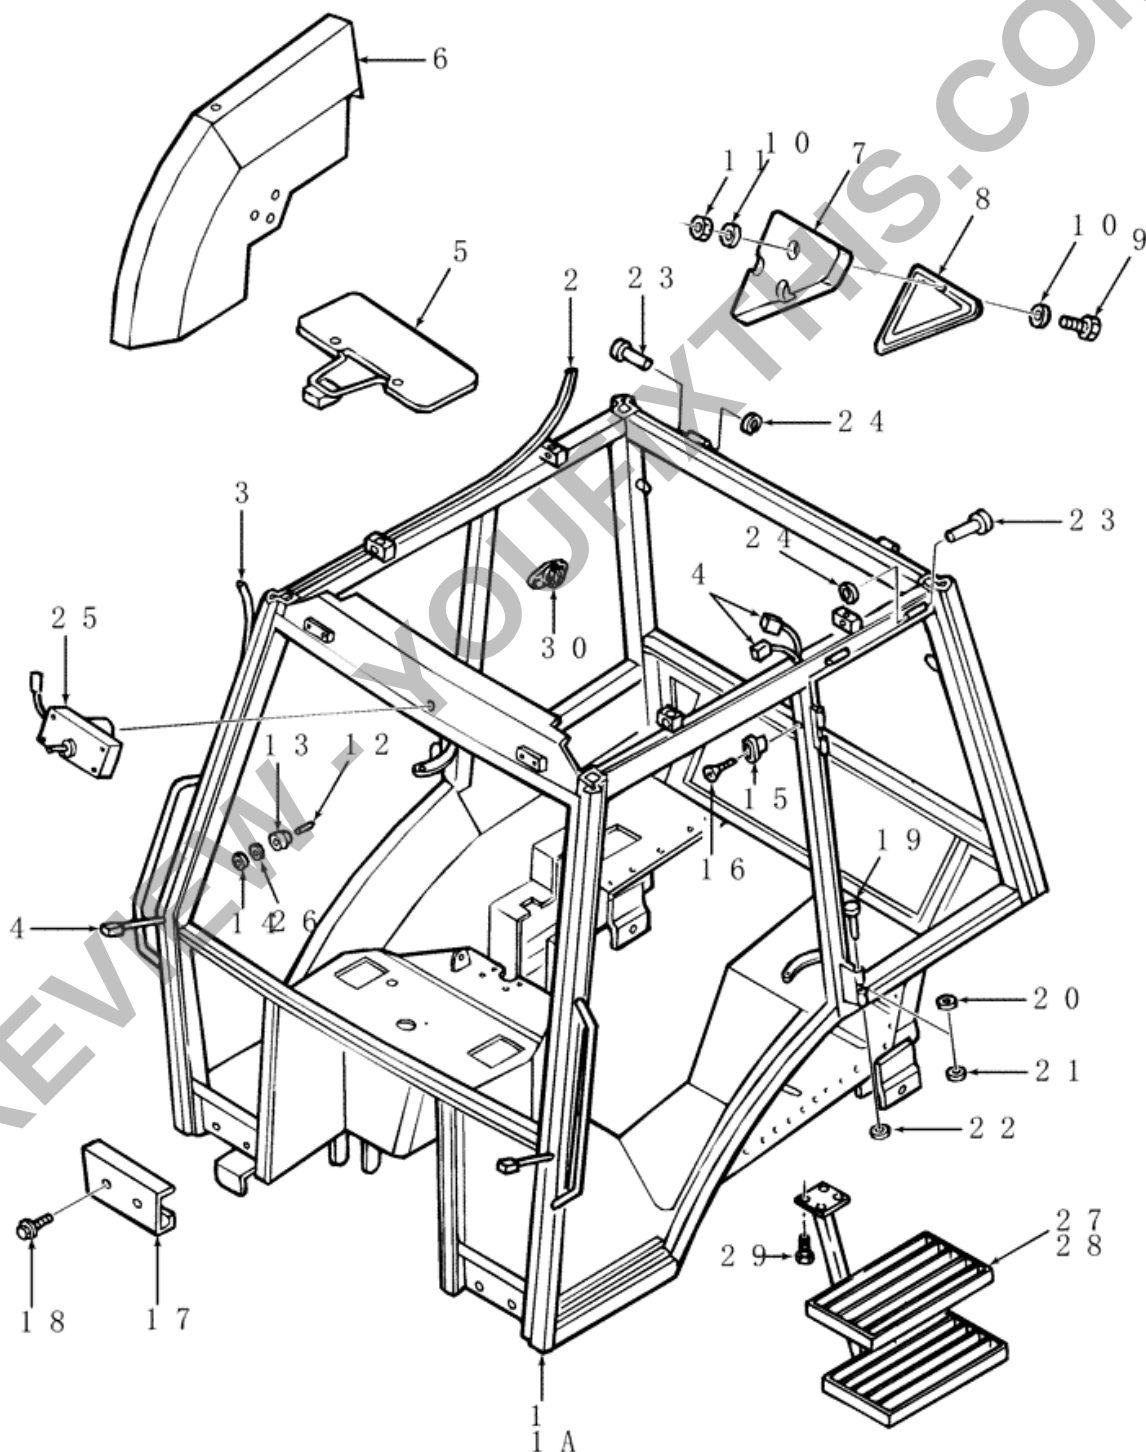




Diag #	Part #	Name	Description	Qty
20	87840154	SEAL	Valve Stem, 4630N, 4630NO, 3930, 3930H, 4630, 4630-O, Start Year: 01-JAN-92	6
21	87801411	COVER	Valve Cover Assy., Rocker Arm, Start Year: 01-MAR-90	1
22	83976374	GASKET,4.47mm Thk	Rocker Arm Cover, Start Year: 01-MAR-90	1
23	83925616	FLANGE BOLT,Hex, 5/16" - 18 x 1/2"	Cap, Flg Hd, G5, 5/16"-18 x 1/2", Start Year: 01-MAR-90	8
23A	F0NN14N202AB	CLIP	Spring, Start Year: 01-MAR-90	4
23B	83925582	WASHER,7.94mm ID x 16mm OD x 1.52mm Thk	11/32", Start Year: 01-MAR-90	4
24	87800323	CAMSHAFT	, Years: 01-MAR-90-30-DEC-97	1
24	87801338	CAMSHAFT	3930, 4630, Start Year: 01-JAN-98	1
		Used W/ Emissionised Engine.	Used W/ Emissionised Engine.	1
25	E3NN6A253AB	GEAR	Assy., Camshaft Drive, Start Year: 01-MAR-90	1
25A	83923678	BUSHING,50.51mm ID x 54.13mm OD x 27.05mm L	Camshaft Drive Gear, Start Year: 01-MAR-90	1
26	F2NN6A255AA	ADAPTER	Adaptor, Camshaft Drive Gear, Years: 01-MAR-90-31-MAY-94	1
26	87840404	ADAPTER	Adaptor, Camshaft Drive Gear, Start Year: 01-JUN-94	1
27	82852337	BOLT,Hex, 5/8" - 11 x 2 1/4", Gr 8	Cap, HH, G8, Self-Locking, 5/8"-11 x 2-1/4", Start Year: 01-MAR-90	1
28	E3NN6N251AB	GEAR	Camshaft, Start Year: 01-MAR-90	1
29	87802905	SPACER,17mm ID x 20mm OD x 230mm L	Camshaft Gear, Start Year: 01-MAR-90	1
30	83957730	PLATE	Thrust, Start Year: 01-MAR-90	1
31	86500692	BOLT,Hex, 3/8" - 16 x 3/4", Gr 8, Full Thd	Screw, Cap, G8, HH, 3/8"-16 x 3/4", Start Year: 01-MAR-90	2
32	80810	WOODRUFF KEY,#9, 3/16" x 3/4"	Key, Woodruff, # 9, 3/16" x 3/4", Start Year: 01-MAR-90	1
33	87800499	CAMSHAFT BEARING	Bearing, Camshaft Front, 2.54 OD x .0835 - .0865 Thick, Start Year: 01-MAR-90	4
34	87802906	GEAR	Assy., Hydraulic Pump Drive, Includes: 24	1
35	382015S	DOWEL	Pin, Dowel, 5/16" x 5/8", Start Year: 01-MAR-90	1
36	81804024	WASHER	Camshaft Gear, Start Year: 01-MAR-90	1
37	81547	BEARING WASHER,7/16"	WASHER, LOCK, 7/16", Start Year: 01-MAR-90	1
38	83909101	FLANGE BOLT,Hex, 7/16" - 14 x 1 1/4"	Bolt, Cap, Flg Hd., G5, 7/16"-14 x 1-1/4", Start Year: 01-MAR-90	2
39	81816594	COVER	Hydraulic Pump Drive Gear, Start Year: 01-MAR-90	1
40	81804486	FLEXIBLE HOSE,26.90 mm ID x 60.45 mm, SAE 30R2 Type 1	- Crankcase Vent Tube 26.90 mm ID x 60.45 mm, SAE 30R2 Type 1, Start Year: 01-MAR-90	1

Diag #	Part #	Name	Description	Qty
8	87791050	SET OF CONN ROD BRGS U/S	Kit, Connecting Rod Bearing, .002" (.051mm) U/S, Green, Start Year: 01-SEP-90	1
8	87791051	SET OF CONN ROD BRGS U/S	Kit, Connecting Rod Bearing, .010" (.25mm) U/S, White, Start Year: 01-SEP-90	1
8	87791052	SET OF CONN ROD BRGS U/S	Kit, Connecting Rod Bearing, .020" (.51mm) U/S, Start Year: 01-SEP-90	1
8	87791053	SET OF CONN ROD BRGS U/S	Kit, Connecting Rod Bearing, .030" (.762mm) U/S, Start Year: 01-SEP-90	1
8	87791054	SET OF CONN ROD BRGS U/S	Kit, Connecting Rod Bearing, .040" (1.02mm) U/S, Start Year: 01-SEP-90	1
8	87790304	BEARING SET	Kit, Connecting Rod Bearing, Standard, Start Year: 01-JUN-94	3
8	87790305	SET OF CONN ROD BRGS U/S	Kit, Connecting Rod Bearing, .002" (.051mm) U/S, Green, 3430, 3930, 3930H, 3930N, 3930NO, 4130, 4130N, 4130NO, 4630, 4630N, 4630NO, 4630-O, Start Year: 01-JUN-94	1
8	87790306	BEARING SET	Kit, Connecting Rod Bearing, .010" (.25mm) U/S, 3430, 3930, 3930H, 3930N, 3930NO, 4130, 4130N, 4130NO, 4630, 4630N, 4630NO, 4630-O, Start Year: 01-JUN-94	1
8	87790307	BEARING SET	Kit, Connecting Rod Bearing, .020" (.51mm) U/S, 3430, 3930, 3930H, 3930N, 3930NO, 4130, 4130N, 4130NO, 4630, 4630N, 4630NO, 4630-O, Start Year: 01-JUN-94	1
8	87790308	BEARING SET	Kit, Connecting Rod Bearing, .030" (.762mm) U/S, 3430, 3930, 3930H, 3930N, 3930NO, 4130, 4130N, 4130NO, 4630, 4630N, 4630NO, 4630-O, Start Year: 01-JUN-94	1
8	87790309	SET OF CONN ROD BRGS U/S	Kit, Connecting Rod Bearing, .040" (1.02mm) U/S, 3430, 3930, 3930H, 3930N, 3930NO, 4130, 4130N, 4130NO, 4630, 4630N, 4630NO, 4630-O, Start Year: 01-JUN-94	1

Diag #	Part #	Name	Description	Qty
27	82013062	RIGID TUBE,9.525 mm OD, 310, 86 mm Length	Tube Assy., Tank to Fuel Filter, Start Year: 01-JAN-98	1
		Used W/ Emissionised Engine.	Used W/ Emissionised Engine.	1
28	83947824	FITTING,9/16"-24 x 1/2"-20 O-Ring	Connector 9/16"-24 x 1/2"-20 O-Ring, Start Year: 01-MAR-90	2
28	9845219	HYD CONNECTOR	Connector, 3/8" x 1/2"-20, Start Year: 01-JAN-98	1
		Used W/ Emissionised Engine.	Used W/ Emissionised Engine.	1
29	129270	O-RING,0.072" Thk x 0.414" ID, -905, CI 6, 90 Duro	5-1, 90 Duro, .414" ID x .072" Thk, Start Year: 01-MAR-90	2
29	14463681	O-RING,31.34mm ID x 3.53" Width	1.234" ID x .139" Thk. O-Ring p/n 9846567, Start Year: 01-JAN-98	1
		Used W/ Emissionised Engine.	Used W/ Emissionised Engine.	1
30	E8NN9A086BB	FUEL TUBE,7.92 mm OD x 100, 235 mm L	Tube Assy., L/Cab, 201 CID, Fuel Return to Tank, Start Year: 01-MAR-90	1
30	E8NN9A086CB	TUBE,7.92 mm OD	Assy., W/Auxiliary Fuel Tank, Fuel Return to Tank, Start Year: 01-MAR-90	1
30	82013063	RIGID TUBE	Tube Assy., W/Auxiliary Fuel Tank, Fuel, Start Year: 01-JAN-98, Serial Range: Return-Tank	1
		Used W/ Emissionised Engine.	Used W/ Emissionised Engine.	1
31	81817024	CLIP	, Start Year: 01-MAR-90	1
33	E3NN9N035EA	HYD CONNECTOR	Connector, Fuel, Start Year: 01-MAR-90, Serial Range: Return-Tank	1
34	82012717	HOSE CLAMP,11 x 17mm	CLAMP, HOSE, , 7/32" x 5/8" 11 x 17mm, Start Year: 01-MAR-90	1
35	87801706	FUEL TUBE,0.313" OD	Tube Assy., Leak Off, Start Year: 01-MAR-90	1
35	87801721	RIGID TUBE,8.1 mm OD x 360, 140 mm L	Tube Assy., Leak Off, Includes Ref. 35A, Start Year: 01-JAN-98	1
		Used W/ Emissionised Engine.	Used W/ Emissionised Engine.	1
35A	353288S	SLEEVE	Ferrule, Start Year: 01-JAN-98	1
35	87802291	RIGID TUBE	Leak Off; Replaces 87801721; Tube Has A Female Nut At Pump End, Use Adapter P/N 82850285	1
	82850285	HYD CONNECTOR,M14 x 1.5 x 1/2" - 20 ORB	HYD CONNECTOR,M14 x 1.5 x 1/2" - 20 ORB	1
36	387345S36	ELBOW	Street, 1/2", 90°, Start Year: 01-MAR-90	1
37	384059S	HYD CONNECTOR	Nipple, Start Year: 01-MAR-90	1
38	E8NN9N109AA	FUEL HOSE	Hose, Fuel Tank to Auxiliary Fuel Tank, Start Year: 01-MAR-90	1

Diag #	Part #	Name	Description	Qty
41	E6NN7C095AA	SHAFT	Main Transmission, Start Year: 01-MAR-90	1
42	E9NND745AA	BALL BEARING	Bearing, 1", PTO Shaft, Rear, Start Year: 01-MAR-90	1
43	C5NN7086A	GASKET	Transmission Output Shaft, Start Year: 01-MAR-90	1
44	E6NN7N100AA	GEAR SET	Gear Assy., 1st Speed, Start Year: 01-MAR-90	1
45	E6NN7N101AA	GEAR SET	Gear Assy., 2nd Speed, Start Year: 01-MAR-90	1
46	E6NN7N012AA	GEAR	Assy., Main Shaft, Reverse, Start Year: 01-MAR-90	1
47	E9NN7N315AA	GEAR	Assy., 3rd Speed, Start Year: 01-MAR-90	1
48	957E790	SNAP RING,3.03" OD	RING, SNAP, , PTO Bearing 3.03" OD, Start Year: 01-MAR-90	1
49	C5NN7N064A	SNAP RING	Ring, Main Transmission Drive, Start Year: 01-MAR-90	1
50	86503781	SNAP RING,#156, Ext	Ring, Snap, , Transmission Countershaft #156, Ext, Start Year: 01-MAR-90	1
51	C5NN7N160A	RING,4.63" OD	Counter Secondary Front 4.63" OD, Start Year: 01-MAR-90	1
52	E1ADKN77014	SNAP RING	Ring, Front Transmission, Start Year: 01-MAR-90	1
53	C5NN7140B	SHAFT,28.52mm OD x 158.75mm L	Transmission Reverse Idler, Start Year: 01-MAR-90	1
54	C5NN7N034B	WASHER	Transmission Shaft, Start Year: 01-MAR-90	1
55	81804625	THRUST WASHER,45.77mm ID x 63.5mm OD x 1.4mm Thk	Transmission Main Shaft 1.81" x 2.50" x .055" Thk, Start Year: 01-MAR-90	1
56	46051S36	LOCK BOLT,Hex, 7/16"-14 x 1 1/8", G5	BOLT, LOCK, Hex, 7/16"-14 x 1 1/8", G5, Start Year: 01-MAR-90	4
57	C5NN7N011B	BOLT	Transmission Reverse Idler, Start Year: 01-MAR-90	1
58	C5NN7N144A	SEAL	Reverse Idler, Start Year: 01-MAR-90	1
59	46007S36	SCREW	Cap, HH, G5, Self-Locking, 3/8"-16 x 7/8", Start Year: 01-MAR-90	5
60	C7NN7N054C	PLATE	Assy., Release Bearing Support, Start Year: 01-MAR-90	1
61	73269S	PIN,3/8" x 11/16"	Dowel 3/8" x 11/16", Start Year: 01-MAR-90	2
62	E6NN7N057AA	GASKET	Gasket, Release Bearing Plate, Start Year: 01-MAR-90	1
63	81804648	GASKET,0.31mm Thk	Bearing Hub Support, Start Year: 01-MAR-90	1
64	D5NN7050A	RETAINER	Transmission Gear Bearing, Start Year: 01-MAR-90	1
65	42999S8	SCREW	Cap, HH, G8, Self-Locking, 3/8"-16 x 1-1/8", Start Year: 01-MAR-90	7
66	83908455	BALL BEARING	Bearing Assy., #6210, 90 x 50 x 20, Start Year: 01-MAR-90	1

(3430) - 3 CYL AG TRACTOR ALL PURPOSE (3/90-1/98) > (07U12) - PTO GUARD, DETACHABLE

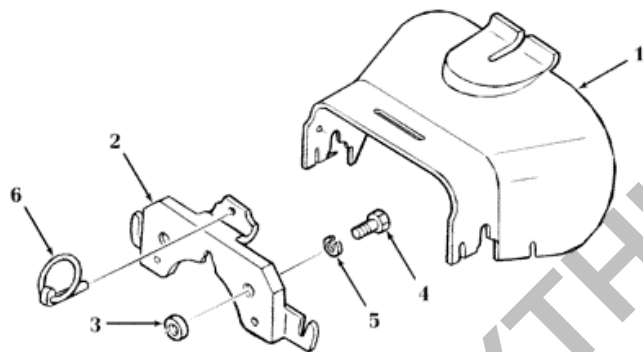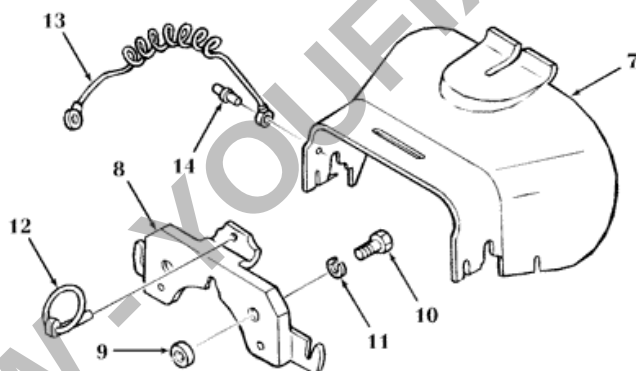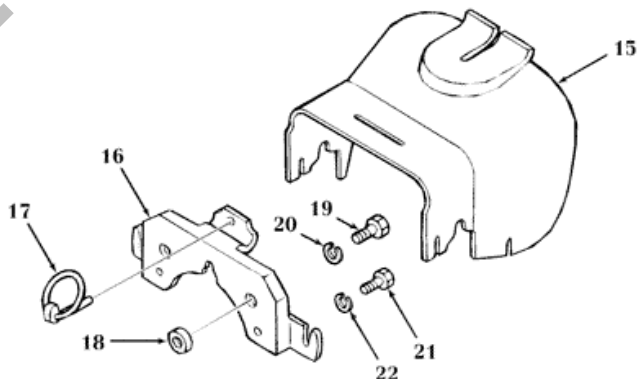




PARTS & MERCHANDISE
STORE

New Holland Agriculture 621 State Street
NA Customer Relations@newholland.com Racine, Wisconsin 53404
866-639-4563 option 1

(3430) - 3 CYL AG TRACTOR ALL PURPOSE (3/90-1/98) > (07P01) - SHIFTER 3

Diag #	Part #	Name	Description	Qty
1	K3660229251	ROD	Shift, 3	1
2	K3660229261	FORK	Shift, 3	1
3	K3660229141	ROD	Detent, Neutral, Start Year: 01-MAR-90	1
4	K3660229151	SPRING	, Start Year: 01-MAR-90	1
5	K0541100328	PIN	Spring, Start Year: 01-MAR-90	1
6	K0541100632	PIN	Spring, Start Year: 01-MAR-90	3
7	K3660229331	PIN	, Start Year: 01-MAR-90	2
8	K3660229221	SPRING	, Start Year: 01-MAR-90	1
9	K0771500803	BALL	, Start Year: 01-MAR-90	1
10	K0771503211	BALL,8.73mm OD	Interlock, 3	2
11	K3660229412	ROD	Shift, High	1
12	K3660229421	ROD	Boss, High	1
13	K3660229501	SWITCH	Assy., Safety, Start Year: 01-MAR-90	1
14	K3660229441	SHIFT, FORK	Fork, Shift High	1
15	K0471100200	GASKET	, Start Year: 01-MAR-90	1
16	K3660229472	PLUNGER	Neutral Safety Switch, Start Year: 01-MAR-90	1
17	K3660229221	SPRING	, Start Year: 01-MAR-90	1
18	K0771500803	BALL	, Start Year: 01-MAR-90	1

(3430) - 3 CYL AG TRACTOR ALL PURPOSE (3/90-1/98) > (08B01) - WATER PUMP

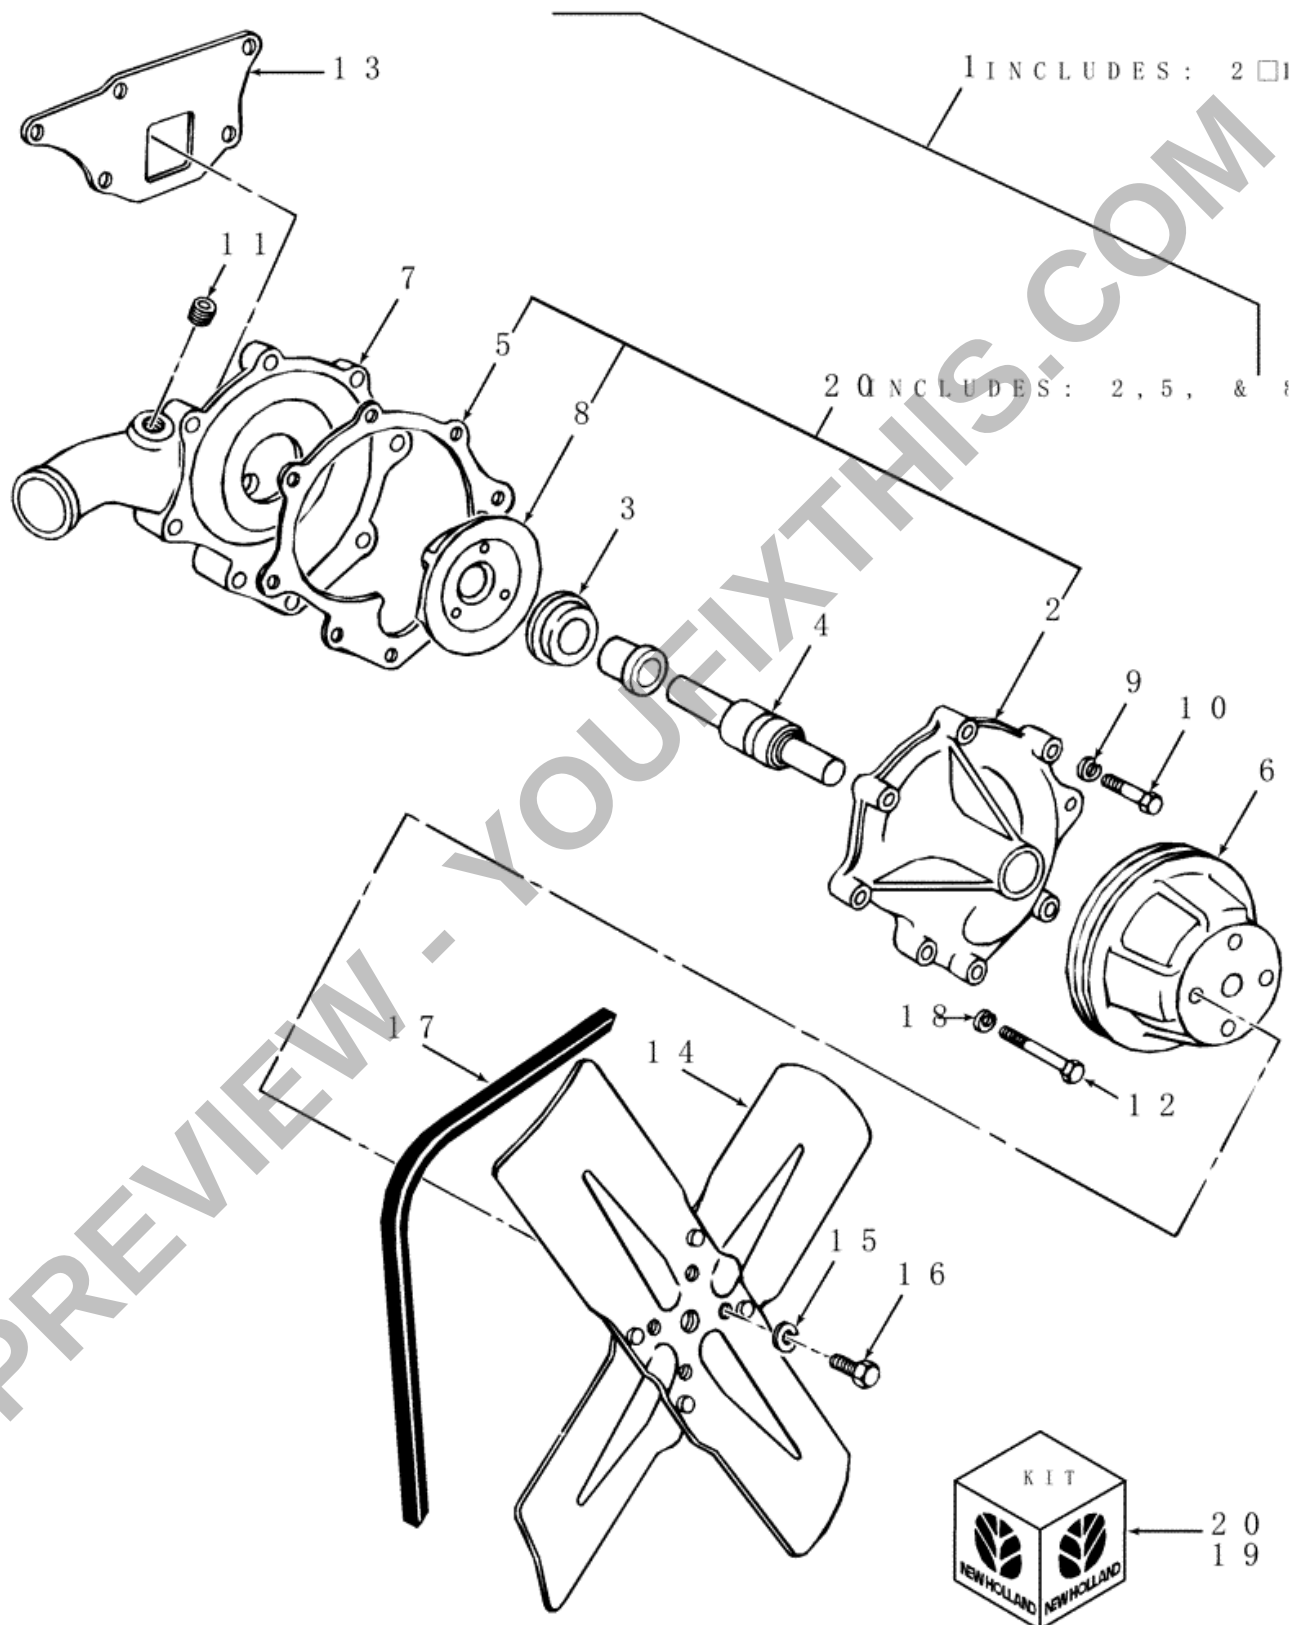



PARTS & MERCHANDISE
STORE

New Holland Agriculture 621 State Street
NA Customer Relations@newholland.com Racine, Wisconsin 53404
866-639-4563 option 1

(3430) - 3 CYL AG TRACTOR ALL PURPOSE (3/90-1/98) > (03A05) - FRONT AXLE ASSEMBLY (6-94/) - EXCEPT 3230

Diag #	Part #	Name	Description	Qty
1	5169930	FRONT AXLE	Axle Assy., Low Clearance, Start Year: 01-JUN-94	1
1	5169997	FRONT AXLE	Axle Assy., High Clearance, Includes: Ref. 1A thru 28	1
		No Longer Serviced - NH-E.	No Longer Serviced - NH-E.	1
1A	5166089	FRONT AXLE	Axle, Center, Start Year: 01-JUN-94	1
2	5166094	EXTENSION	End, Axle, High Profile, Start Year: 01-JUN-94	2
2	5166105	TRACK ROD END ASSY	End, Axle, Low Profile, Start Year: 01-JUN-94	2
3	5189894	SERVO STEERING CYL	Cylinder Assy., Steering, Start Year: 01-JUN-94	1
	5189894R	REMAN-HYD CYLINDER	3430 (3/90-1/98); 3930N,4130N 3930,4130 3930H, 3930NO, 4130NO 4630O (3/90 -) - ALL FRONT AXLE ASSEMBLY (6-94/) - EXCEPT 3230	1
	5189894C	CORE-HYD CYLINDER	Return Number	1
4	5166080	STEERING ARM	Arm, Steering, LH, Start Year: 01-JUN-94	1
5	5166081	STEERING ARM	Arm, Steering, RH, Start Year: 01-JUN-94	1
6	15862131	BOLT,Hex, M14 x 1.5 x 80mm, CI 10.9	M14 x 1.5 x 80, Start Year: 01-JUN-94	2
7	10517174	WASHER,14.2mm ID x 24.1mm OD x 3.5mm Thk	Washer, Lock, M14, Start Year: 01-JUN-94	2
8	12164021	NUT,Thick Hex, M14, 1.50mm Pitch, 11.00mm High, CI 10, ZND	M14 x 1.5, CI 10, Start Year: 01-JUN-94	2
9	5168833	LOCK PIN,30mm OD x 110mm L	Pin, Start Year: 01-JUN-94	4
10	11191779	BELLEVILLE WASHER	M20, Start Year: 01-JUN-94	4
11	16980931	NUT	EBM, M20 x 1.5, Start Year: 01-JUN-94	4
12	5168896	RIGID TUBE	Tube, Steering, RH, Start Year: 01-JUN-94	1
13	5168898	TUBE	Steering, LH, Start Year: 01-JUN-94	1
14	5166075	TRACK ROD ASSY	Tie Rod Assy., Start Year: 01-JUN-94	1
15	12575921	NUT,M16 x 1.5, CI 05	Lock, M16 x 1.5, CI 05, Start Year: 01-JUN-94	3
16	5100730	WASHER,20.5mm ID x 28mm OD x 5.25mm Thk	, Start Year: 01-JUN-94	1
17	5166099	STUB AXLE/STRG. SPINDLE	Spindle, RH, High Profile, 11.45" L, Start Year: 01-JUN-94	1
17	5166109	STUB AXLE/STRG. SPINDLE	Spindle, RH, Low Profile, 8.74" L, Start Year: 01-JUN-94	1



PARTS & MERCHANDISE
STORE


New Holland Agriculture 621 State Street
NA Customer Relations@newholland.com Racine, Wisconsin 53404
866-639-4563 option 1

(3430) - 3 CYL AG TRACTOR ALL PURPOSE (3/90-1/98) > (03C01) - POWER STEERING PUMP

Diag #	Part #	Name	Description	Qty
1	E6NN3K514PA99M	HYDRAULIC PUMP	Pump	1
	82858430R	REMAN-HYD PUMP	3930H,3930NO,4130NO,4630NO All (3/90-8/99),3230,4130,4630 All (3/90-7/99),3930N,4130N,4630N All (3/90-6/95),3430 (3/90-1/98),4630O (3/90-),Reman For New P/N E6NN3K514PA99M	1
	82858430C	CORE-HYDRAULIC PUMP	Return Number	1
1	E6NN3K514PA99M	HYDRAULIC PUMP	Pump	1
	82858430R	REMAN-HYD PUMP	3930H,3930NO,4130NO,4630NO All (3/90-8/99),3230,4130,4630 All (3/90-7/99),3930N,4130N,4630N All (3/90-6/95),3430 (3/90-1/98),4630O (3/90-),Reman For New P/N E6NN3K514PA99M	1
	82858430C	CORE-HYDRAULIC PUMP	Return Number	1
1	E8NN3K514BA	HYDRAULIC PUMP,13.11 CC	Pump	1
	E8NN3K514BAR	REMAN-HYD PUMP	3930, 4130, Both (3/90-7/99), 3230 (3/90-9/93), 3430 (3/90-1/98), All 3 CYL AG TRACTOR ALL PURPOSE, 3930N, 4130N, Both 3 CYL AG NARROW TRACTOR (3/90-6/95), 3930NO, 4130NO, Both 3 CYL NARROW ORCHARD TRACTOR (3/90-8/99), 3930H 3 CYL HIGHWAY TRACTOR (3/90-8/99)	1
	E8NN3K514BAC	CORE-HYDRAULIC PUMP	Return Number	1
1	E8NN3K514BA	HYDRAULIC PUMP,13.11 CC	Pump	1
	E8NN3K514BAR	REMAN-HYD PUMP	3930, 4130, Both (3/90-7/99), 3230 (3/90-9/93), 3430 (3/90-1/98), All 3 CYL AG TRACTOR ALL PURPOSE, 3930N, 4130N, Both 3 CYL AG NARROW TRACTOR (3/90-6/95), 3930NO, 4130NO, Both 3 CYL NARROW ORCHARD TRACTOR (3/90-8/99), 3930H 3 CYL HIGHWAY TRACTOR (3/90-8/99)	1
	E8NN3K514BAC	CORE-HYDRAULIC PUMP	Return Number	1
1	F1NN3K514BA99M	SMALL PUMP	Pump	1
1A	NSS	NOT SERVICED SEPARATELY	Body, Start Year: 01-MAR-90	1
2	C5NN3N560A	BEARING ASSY	Bearing	2
2	E6NN3N560AA	BEARING ASSY	Bearing	2
3	NSS	NOT SERVICED SEPARATELY	Gear Set, Start Year: 01-MAR-90	1

Diag #	Part #	Name	Description	Qty
20	86513024	TEE,3/4" - 16 ORB x 3/4" - 16 JIC x 3/4" - 16 JIC	Flare, Straight Thread O-Ring, Both Ends, 3/4", Start Year: 01-MAR-90	1
21	86511870	TEE,3/4" - 16 JIC x 3/4" - 16 JIC x 3/4" - 16 JIC	37° FL, 37° Female Swivel, 1/2" Tube Run, Start Year: 01-MAR-90	1
22	128818	UNION,3/4" - 16 ORB x 3/4" - 16 JIC	Connector, Start Year: 01-MAR-90	1
23	176081	HYD CONNECTOR,3/4"-16, 37° x 1 1/16"-12, O-Ring	Connector, 37° FL to O-Ring, 1/2" - 3/4" Tube, W/O-Ring, Start Year: 01-MAR-90	3
24	167266	O-RING,0.116" Thk x 0.924" ID, -912, CI 6, 90 Duro	12-1, 90 Duro, .924 ID x .116" Thk, Start Year: 01-MAR-90	3
25	128825	O-RING,0.087" Thk x 0.644" ID, -908, CI 6, 90 Duro	8-1, 90 Duro, .644" ID x .087" Thk, Start Year: 01-MAR-90	1
26	87063S95	O-RING,0.139" Thk x 1.609" ID, -223, CI 6, 90 Duro	90 Duro, 1.625" ID x .139" Thk, Start Year: 01-MAR-90	1
27	134372	O-RING,1.109" ID x 0.14" Width	1.109" ID x .139" Thk, Start Year: 01-MAR-90	1
28	80680	LOCK WASHER,3/8 0.381 CST ZND	WASHER, LOCK, 3/8", Start Year: 01-MAR-90	3
29	87381	WASHER,0.81" ID x 1.47" OD x 0.13" Thk	SAE, 3/4", Start Year: 01-MAR-90	2
30	86512036	SUPPORT	Bracket, Start Year: 01-MAR-90	1
		NHNA Only.	NHNA Only.	1
31	83904166	WASHER,10.5mm ID x 30mm OD x 4mm Thk	M10.5 x 30 x 4 Thk, HDN, Start Year: 01-MAR-90	1
32	280129	NUT,1/4"-20	Nut, Lock, 1/4"-20, GC, Start Year: 01-MAR-90	4
33	385894S36	BOLT	3/8"-16 x 1-1/2", Start Year: 01-MAR-90	1
34	353374S36	BOLT	3/8"-16 x 1-3/8", Start Year: 01-MAR-90	1
35	88044	BOLT,Hex, 3/8" - 16 x 1 1/2", Gr 5	Screw, Cap, HH, G5, 3/8"-16 x 1-1/2", Start Year: 01-MAR-90	2
36	88692	BOLT,Hex, 3/4" - 10 x 1 1/2", Gr 5, Full Thd	, Start Year: 01-MAR-90	1
37	88206	BOLT,Hex, 3/8" - 16 x 1", Gr 5	, Start Year: 01-MAR-90	1
38	87845	BOLT,Hex, 1/4" - 20 x 2 1/2", Gr 5	HH, G5, 1/4"-20 x 2-1/2", Start Year: 01-MAR-90	4
39	50569	BOLT,Hex, 7/16"-14 x 5", G5	Cap, HH, G5, 7/16"-14 x 5", Start Year: 01-MAR-90	2
40	280426	BOLT,Hex, 7/16" - 14 x 2 1/4", Gr 8	Screw, Cap, HH, G8, 7/16"-14 x 2-1/4", Start Year: 01-MAR-90	1
41	281071	BOLT,Hex, 7/16" - 14 x 2 1/2", Gr 8	Screw, Cap, HH, G8, 7/16"-14 x 2-1/2", Start Year: 01-MAR-90	1
42	83944762	HYDRAULIC VALVE	Valve, Remote Control, Double Spool, Refer to Fig. 05G02, Start Year: 01-MAR-90	1

(3430) - 3 CYL AG TRACTOR ALL PURPOSE (3/90-1/98) > (05B03) - LIFT CONTROL

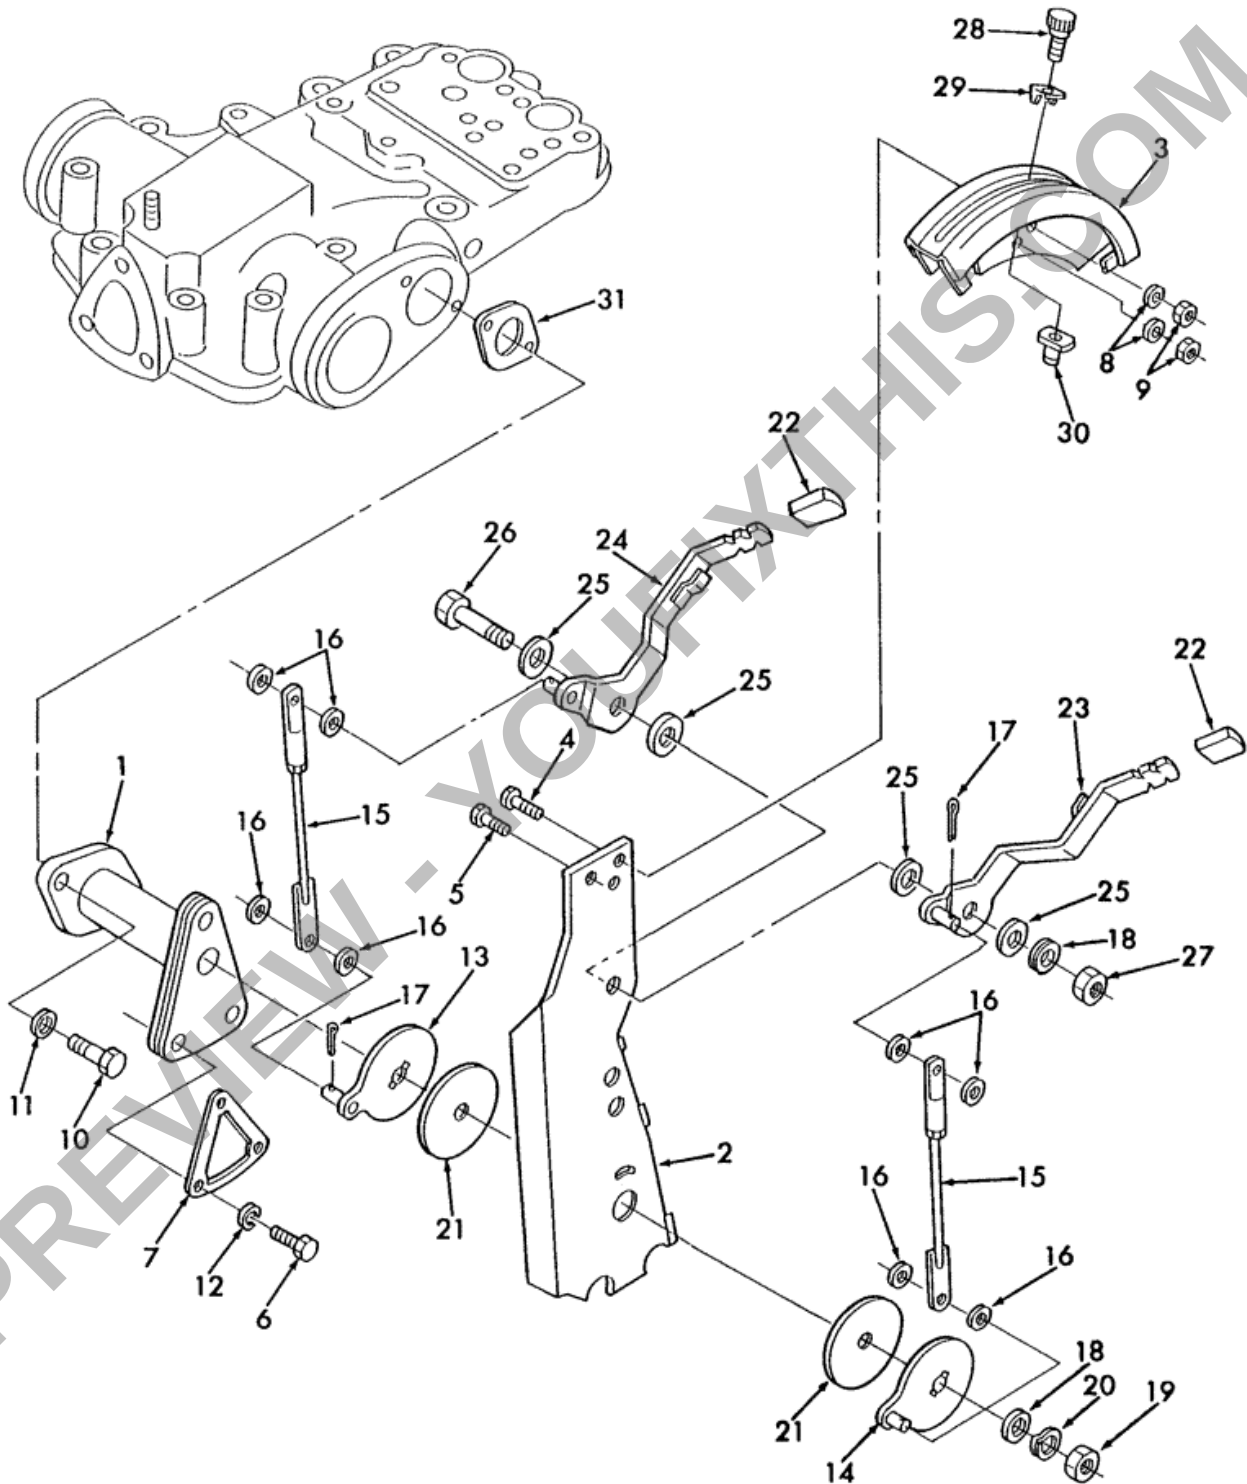

Diag #	Part #	Name	Description	Qty
33	86509733	TUBE,0.50" OD	Pump Pressure, Pump to Tapping Manifold, Refer to Fig. 05H03, Start Year: 01-MAR-90	1
34	87063S95	O-RING,0.139" Thk x 1.609" ID, -223, CI 6, 90 Duro	90 Duro, 1.625" ID x .139" Thk, Start Year: 01-MAR-90	1
35	E0NNR957AA	BRACKET	L/Cab, 3230,3430,3930,3930H,4130,4630,4630, Start Year: 01-MAR-90	1
35	E1NNR957AA	BRACKET	W/Cab, 3230,3430,3930,3930H,4130,4630, Start Year: 01-MAR-90	1
36	D5NNN871A	GROMMET	, Start Year: 01-MAR-90	1
37	E2NNN885CA	BRACKET	, Start Year: 01-MAR-90	1
38	E2NNN885BA	BRACKET	, Start Year: 01-MAR-90	1
39	E9NNU831AA	CLIP	Inlet Tube, W/Cab, 3230,3430,3930,3930H,4130,4630, Start Year: 01-MAR-90	1
39	83925885	CLIP,28.5mm, 21.38mm Bolt Hole, P Type	Inlet Tube, L/Cab, 3230,3430,3930,3930H,4130,4630,4630 (Replaces N801758S2), Start Year: 01-MAR-90	1
40	E9NNU832AA	CLIP	Pressure Tube, W/8 x 2, Start Year: 01-MAR-90	1
40	E9NNU832BA	CLIP	Pressure Tube, L/8 x 2, Start Year: 01-MAR-90	1
41	88206	BOLT,Hex, 3/8" - 16 x 1", Gr 5	, Start Year: 01-MAR-90	1
42	83904166	WASHER,10.5mm ID x 30mm OD x 4mm Thk	M10.5 x 30 x 4 Thk, HDN, Start Year: 01-MAR-90	1
43	88692	BOLT,Hex, 3/4" - 10 x 1 1/2", Gr 5, Full Thd	, Start Year: 01-MAR-90	1
44	87381	WASHER,0.81" ID x 1.47" OD x 0.13" Thk	SAE, 3/4", Start Year: 01-MAR-90	1



PARTS & MERCHANDISE
STORE



New Holland Agriculture 621 State Street
NA Customer Relations@newholland.com Racine, Wisconsin 53404
866-639-4563 option 1

(3430) - 3 CYL AG TRACTOR ALL PURPOSE (3/90-1/98) > (14C04) - FRONT FENDERS

Diag #	Part #	Name	Description	Qty
1	82001945	REAR FENDER	Fender, Start Year: 01-MAR-90	2
		W/9.5 x 20 Tire.	W/9.5 x 20 Tire.	1
		NH-E Only.	NH-E Only.	1
1	E5NN16015AA	FRONT FENDER	Fender, Start Year: 01-MAR-90	2
		W/8.3 x 24, 9.5 x 24, 11.2 x 24 or 12.4 x 24 Tire.	W/8.3 x 24, 9.5 x 24, 11.2 x 24 or 12.4 x 24 Tire.	1
		Basildon.	Basildon.	1
2	83956541	BRACKET	LH, Start Year: 01-MAR-90	1
		W/9.5 x 20 Tire.	W/9.5 x 20 Tire.	1
		NH-E Only.	NH-E Only.	1
2	82005181	BRACKET	LH, Start Year: 01-MAR-90	1
		W/8.3 x 24, 9.5 x 24, 11.2 x 24 or 12.4 x 24 Tire.	W/8.3 x 24, 9.5 x 24, 11.2 x 24 or 12.4 x 24 Tire.	1
		Basildon.	Basildon.	1
3	82007361	BRACKET	RH, Start Year: 01-MAR-90	1
		W/9.5 x 20 Tire.	W/9.5 x 20 Tire.	1
3	82007357	BRACKET	Assy., RH, Start Year: 01-MAR-90	1
		W/8.3 x 24, 9.5 x 24, 11.2 x 24 or 12.4 x 24 Tire.	W/8.3 x 24, 9.5 x 24, 11.2 x 24 or 12.4 x 24 Tire.	1
4	82005189	BRACKET	Fender Support, LH, Start Year: 01-MAR-90	1
5	82005187	BRACKET	Fender Support, RH, Start Year: 01-MAR-90	1
6	82917239	SUPPORT	Base, Start Year: 01-MAR-90	2
7	9847468	BOLT,Hex, M16 x 2 x 70mm, CI 10.9	, Start Year: 01-MAR-90	4
8	E630176S71	LOCK WASHER	Washer, Lock, M16, Start Year: 01-MAR-90	8
9	N620045S36	NUT	CL 9, M16 x 2, Start Year: 01-MAR-90	4
10	43465	CARRIAGE BOLT,Short NK, M8 x 30, CI8.8, Full Thd	Bolt, Carriage, Short Neck, CL 8.8, M8 x 1.25 x 30, Start Year: 01-MAR-90	6
11	44729S36	WASHER	3/8", Start Year: 01-MAR-90	6
12	87016617	LOCK WASHER,M8	Washer, Spring Lock, Type A8, Start Year: 01-MAR-90	6
13	N620041S36	NUT	CL 9, M8 x 1.25, Start Year: 01-MAR-90	6
14	N605572S36	BOLT	Screw, Cap, HH, CL 9.8, M12 x 2 x 35 35, Start Year: 01-MAR-90	4
15	280248	LOCK WASHER,9/16"	Washer, Lock, 9/16", Start Year: 01-MAR-90	4
16	E5NN3N322AA	ELBOW	, Start Year: 01-MAR-90	2
17	E5NN3N323AA	SIEVE EXTENSION	Extension, Start Year: 01-MAR-90	2


Diag #	Part #	Name	Description	Qty
18	E610346S71	SCREW	Self-Tapping, Pan Hd, #8 x M13, Start Year: 01-MAR-90	2
19	E9NN11654AA	LIGHT SWITCH	Switch Assy., Lighting, Start Year: 01-MAR-90	1
20	E4NN13A350AA	FLASHER SWITCH	Switch Assy., Emergency Warning, Start Year: 01-MAR-90	1
21	83990006	LAMP	Assy., Differential Lock, Warning, Finland	1
		NH-E Only.	NH-E Only.	1
22	82013124	RELAY,12V, 30A	Start, 5 prong (Replaces 82003697, 5-Prong), Start Year: 01-MAR-90	1
23	81864737	COVER	Relay, Start Year: 01-MAR-90	1
24	E603143S72	SCREW	M5, Start Year: 01-MAR-90	1
25	89706690	NUT,M8, CI 8	, Start Year: 01-MAR-90	1

(3430) - 3 CYL AG TRACTOR ALL PURPOSE (3/90-1/98) > (11J03) - PLOW LAMP, W/FLAT-TOP FENDERS, NHNA, 3930 W/WIDE FENDERS (NH-E), 3430, 3930, 4130

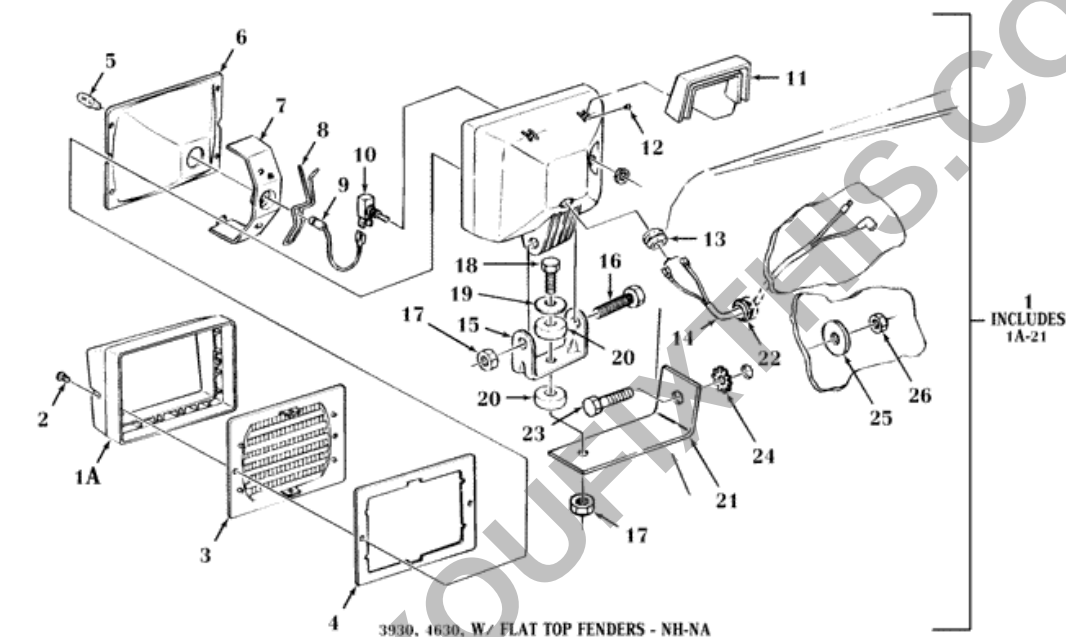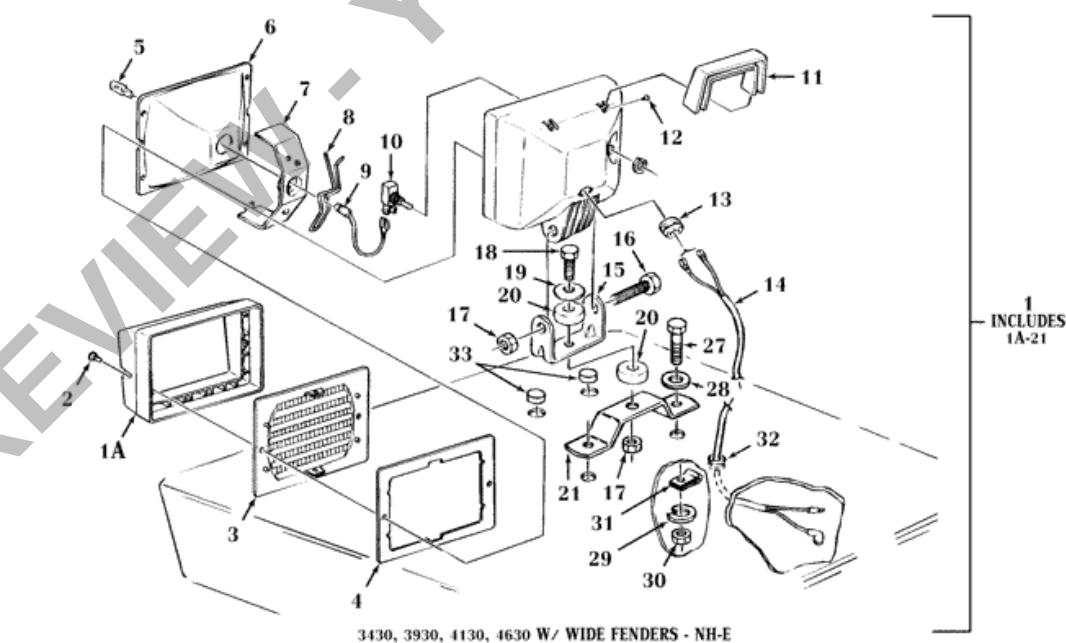

Diag #	Part #	Name	Description	Qty
27	86050212	BOLT,Hex, 7/16" - 14 x 1 1/2", Gr 8	Screw, Cap, HH, G8, 7/16"-14 x 1-1/2", Start Year: 01-MAR-90	2
28	83924047	SEAL,27.2mm ID x 39.95mm OD x 7.92mm Thk	Assy, Cross Shaft 1 1/8" x 1.565" x 5/16", Start Year: 01-MAR-90	2
28	82004422	SEAL	Seal Assy., Cross Shaft, Double Lip, Korean Models Only, Start Year: 01-JUL-95	2
		NH-E Only.	NH-E Only.	1
29	C5NN2N547B	WASHER	Cross Shaft, Brake, Start Year: 01-MAR-90	2
30	D2NN2N155A	SLEEVE	Cross Shaft, Brake, Start Year: 01-MAR-90	2
31	D6NN2N511A	LEVER	Brake, LH, Start Year: 01-MAR-90	1
32	25121	SNAP RING,#100, Ext	Ring, Snap, #100, Ext, Start Year: 01-MAR-90	1
33	D4NN2N185A	SPACER	Brake Lever, Start Year: 01-MAR-90	1
34	C5NN2N547E	THRUST WASHER,1.04" x 1.51" x .102" Thk	WASHER, , Brake Pedal 1.04" x 1.51" x .102" Thk, Start Year: 01-MAR-90	1
35	D4NN2N510H	LEVER	Assy., Brake, Open, Start Year: 01-MAR-90	1
36	76240S36	CLEVIS PIN	Pin, Clevis, 7/16" x 1-17/64", Start Year: 01-MAR-90	2
37	80755	COTTER PIN,1/8" OD x 1" OAL	PIN, SPLIT (COTTER), 1/8" x 1" L, Start Year: 01-MAR-90	2
38	81802674	CLEVIS	Brake Pull, Start Year: 01-MAR-90	2
39	D2NN2N520A	NUT	Brake Pull, Start Year: 01-MAR-90	2
40	50456	NUT,7/16"-20, G5	NUT, G5, 7/16"-20, Start Year: 01-MAR-90	2
41	81802590	WASHER,12.9mm ID x 63.5mm OD x 2.69mm Thk	Brake Rod, Start Year: 01-MAR-90	2
42	81802589	WASHER,12.22mm ID x 21.03mm OD x 0.08mm Thk	Brake Control, Start Year: 01-MAR-90	2
43	E1NN2N376AA	SLEEVE	Brake Rod, Start Year: 01-MAR-90	2
44	356420S36	WASHER,.45" x 1" x .18" Thk	, Start Year: 01-MAR-90	2
45	82007922	LEVER	LEVER	1
46	81866090	HANDLE GRIP	Grip, Handbrake Lever, Start Year: 01-MAR-90	1
		No Longer Serviced - NH-E.	No Longer Serviced - NH-E.	1
47	76031S36	PIN,9.53mm OD x 33.33mm L	Clevis, 3/8" x 1-5/16", Start Year: 01-MAR-90	1
48	E1NN2A724BA	CLEVIS	Parking Brake Cable, Start Year: 01-MAR-90	1
49	82011915	CABLE,1238mm L	Assy., Parking Brake, 53.39" (1356mm), Start Year: 01-MAR-90	1
49	81871715	CABLE,1660mm L	Assy., Parking Brake, 40 KPH, 65.35" (1660mm), Start Year: 01-MAR-90	1
		NH-E Only.	NH-E Only.	1
50	82011914	CABLE,606mm L	Assy., Parking Brake, 23.86" (606mm), Start Year: 01-MAR-90	1
51	86629539	NUT,5/16"-24, G5	G5, 5/16"-24, Start Year: 01-MAR-90	4

(3430) - 3 CYL AG TRACTOR ALL PURPOSE (3/90-1/98) > (01B02) - WEIGHTS, POWER ADJUSTABLE WHEEL (NHNA), 30"

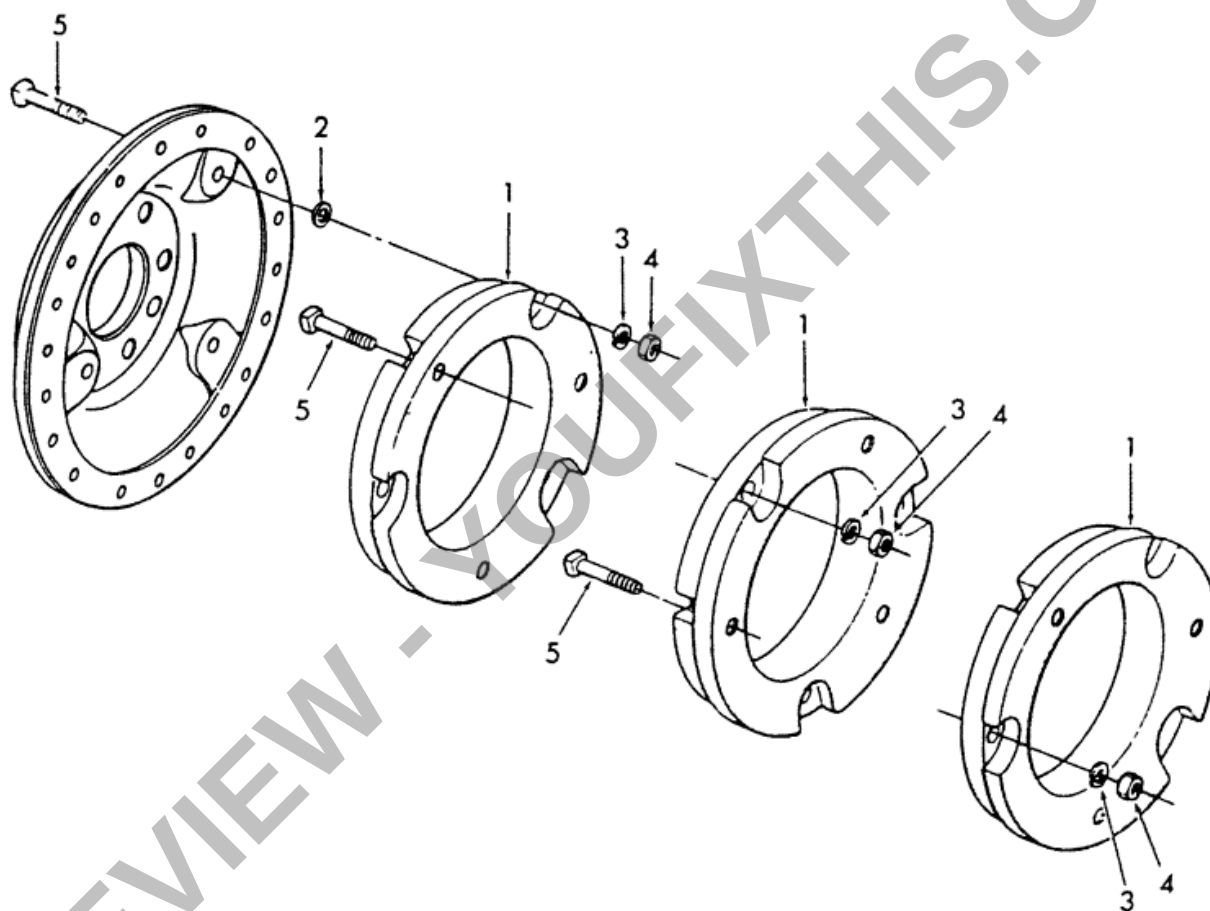

(3430) - 3 CYL AG TRACTOR ALL PURPOSE (3/90-1/98) > (16C01) - WARNING, OPERATION

<p>Operator</p> <p>WARNING</p> <p>WHENEVER YOU SEE THIS SYMBOL IT MEANS: WARNING! BE ALERT! YOUR SAFETY MAY BE INVOLVED! THE INFORMATION BELOW YOUR HANDS AND FEET AND OTHER ITEMS REQUIRING YOUR ATTENTION IS IN YOUR OPERATOR'S MANUAL.</p> <p>PTO-KEEP HANDS, FEET AND CLOTHING AWAY FROM PTO AND OTHER MOVING PARTS.</p> <p>DISengage PTO and SHUT OFF ENGINE BEFORE SERVICING TRACTOR OR IMPLEMENTS OR ATTACHING OR DETACHING IMPLEMENTS.</p> <p>KEEP SAFETY SHIELDS IN PLACE FOR YOUR PROTECTION.</p> <p>PULL ONLY FROM THE DRAWBAR OR LOWER LINKS. NEVER FROM DOWN POSITION. PULLING FROM THE SIDE OR ANY POINT ABOVE THE AXLE MAY CAUSE REARWARD FLIP.</p> <p>Lock tractor brake pedals together for correct operation of trailer brake system.</p> <p>When traveling on the road outer most part of the vehicle must not extend more than 40cm beyond outside edge of front or rear position lights.</p> <p>Do not attempt to adjust the exterior leveling crank while raising or lowering the hydraulic lift.</p> <p>Serious injury could result due to limited hand clearances.</p>	<p>WHENEVER YOU SEE THIS SYMBOL IT MEANS: WARNING! BE ALERT! YOUR SAFETY MAY BE INVOLVED! THE INFORMATION BELOW YOUR HANDS AND FEET AND OTHER ITEMS REQUIRING YOUR ATTENTION IS IN YOUR OPERATOR'S MANUAL.</p> <p>PTO-KEEP HANDS, FEET AND CLOTHING AWAY FROM PTO AND OTHER MOVING PARTS.</p> <p>DISengage PTO and SHUT OFF ENGINE BEFORE SERVICING TRACTOR OR IMPLEMENTS OR ATTACHING OR DETACHING IMPLEMENTS.</p> <p>KEEP SAFETY SHIELDS IN PLACE FOR YOUR PROTECTION.</p> <p>PULL ONLY FROM THE DRAWBAR OR LOWER LINKS. NEVER FROM DOWN POSITION. PULLING FROM THE SIDE OR ANY POINT ABOVE THE AXLE MAY CAUSE REARWARD FLIP.</p> <p>Lock tractor brake pedals together for correct operation of trailer brake system.</p> <p>When traveling on the road outer most part of the vehicle must not extend more than 40cm beyond outside edge of front or rear position lights.</p> <p>Do not attempt to adjust the exterior leveling crank while raising or lowering the hydraulic lift.</p> <p>Serious injury could result due to limited hand clearances.</p>	<p>WHENEVER YOU SEE THIS SYMBOL IT MEANS: WARNING! BE ALERT! YOUR SAFETY MAY BE INVOLVED! THE INFORMATION BELOW YOUR HANDS AND FEET AND OTHER ITEMS REQUIRING YOUR ATTENTION IS IN YOUR OPERATOR'S MANUAL.</p> <p>PTO-KEEP HANDS, FEET AND CLOTHING AWAY FROM PTO AND OTHER MOVING PARTS.</p> <p>DISengage PTO and SHUT OFF ENGINE BEFORE SERVICING TRACTOR OR IMPLEMENTS OR ATTACHING OR DETACHING IMPLEMENTS.</p> <p>KEEP SAFETY SHIELDS IN PLACE FOR YOUR PROTECTION.</p> <p>PULL ONLY FROM THE DRAWBAR OR LOWER LINKS. NEVER FROM DOWN POSITION. PULLING FROM THE SIDE OR ANY POINT ABOVE THE AXLE MAY CAUSE REARWARD FLIP.</p> <p>Lock tractor brake pedals together for correct operation of trailer brake system.</p> <p>When traveling on the road outer most part of the vehicle must not extend more than 40cm beyond outside edge of front or rear position lights.</p> <p>Do not attempt to adjust the exterior leveling crank while raising or lowering the hydraulic lift.</p> <p>Serious injury could result due to limited hand clearances.</p>
--	---	---

WARNING

Operator

Whenever you see this symbol it means: WARNING! BE ALERT! YOUR SAFETY MAY BE INVOLVED! THE INFORMATION BELOW YOUR HANDS AND FEET AND OTHER ITEMS REQUIRING YOUR ATTENTION IS IN YOUR OPERATOR'S MANUAL.

PTO-Keep hands, feet and clothing away from PTO and other moving parts.

Disengage PTO and shut off engine before servicing tractor or implements or attaching or detaching implements.

Keep safety shields in place for your protection.

Pull only from the drawbar or from the lower links in the down position. Pulling from the side or any point above the axle may cause rearward flip.

Lock links must be in the fully down position before raising booster cylinder. Raise coupler from pressure coupler or adjusting the lift hand in rod.

Air conditioning system contains refrigerant at high pressure. Do not disconnect or disassemble lines. Read safety instructions in operator's manual.

Always apply parking brake and shift transmission to neutral or park before dismounting. Dual power transmission will not prevent tractor from rolling when engine is shut off.

Lock tractor brake pedals together for correct operation of trailer brake system.

When traveling on the road outer most part of the vehicle must not extend more than 40cm beyond outside edge of front or rear position lights.

Do not attempt to adjust the exterior leveling crank while raising or lowering the hydraulic lift.

Serious injury could result due to limited hand clearances.

WARNING

Operator

Whenever you see this symbol it means: WARNING! BE ALERT! YOUR SAFETY MAY BE INVOLVED! THE INFORMATION BELOW YOUR HANDS AND FEET AND OTHER ITEMS REQUIRING YOUR ATTENTION IS IN YOUR OPERATOR'S MANUAL.

PTO-Keep hands, feet and clothing away from PTO and other moving parts.

Disengage PTO and shut off engine before servicing tractor or implements or attaching or detaching implements.

Keep safety shields in place for your protection.

Pull only from the drawbar or from the lower links in the down position. Pulling from the side or any point above the axle may cause rearward flip.

Lock links must be in the fully down position before raising booster cylinder. Raise coupler from pressure coupler or adjusting the lift hand in rod.

Air conditioning system contains refrigerant at high pressure. Do not disconnect or disassemble lines. Read safety instructions in operator's manual.

Always apply parking brake and shift transmission to neutral or park before dismounting. Dual power transmission will not prevent tractor from rolling when engine is shut off.

Lock tractor brake pedals together for correct operation of trailer brake system.

When traveling on the road outer most part of the vehicle must not extend more than 40cm beyond outside edge of front or rear position lights.

Do not attempt to adjust the exterior leveling crank while raising or lowering the hydraulic lift.

Serious injury could result due to limited hand clearances.

WARNING

Before starting and operating:

- Know the operating and safety instructions in the operator's manual and on the tractor.
- Clear the area of bystanders.
- Locate and know operation of controls.
- Fasten your seat belt.
- Start engine only from operator's seat with transmission in neutral, PTO disengaged and hydraulic controls in lowered position.
- Avoid accidental contact with gear shift lever while the engine is running. Unexpected tractor movement can result.
- Slow down on turns, rough ground and slopes to avoid upset.
- Do not permit anyone but the operator to ride on the tractor. There is no safe place for riders.
- Lock brakes together, use warning lights and SMV emblem while driving on roads.
- Lower equipment, place gear shift levers in neutral, stop engine and apply parking brake before leaving tractor seat.

FAILURE TO FOLLOW ANY OF THE ABOVE INSTRUCTIONS CAN CAUSE SERIOUS INJURY TO THE OPERATOR OR OTHER PERSONS.

ATTENTION

Units equipped with synchromesh transmissions should not be towed unless shuttle and main levers are in neutral and range lever is in high.

Replacement manuals are available from your New Holland dealer.

87003488

Diag #	Part #	Name	Description	Qty
28	E9NN9413010CB	MAT	Access, 8 x 2, Start Year: 01-SEP-92	1
28	E9NN9413010BB	MAT	Access, 8 x 8, 16 x 8, Start Year: 01-SEP-92	1
29	E9NN7Z233CD	COVER	Transmission Access, Includes: Ref. 29A, Start Year: 01-SEP-92	1
29A	E9NN7Z309BA	FOAM INSULATION	Insulation, Start Year: 01-SEP-92	1
30	E7NN94111N20BC	PLUG	W/Hydraulic Remote Controls, Start Year: 01-SEP-92	1
31	E9NNL984AA	BOOT	W/Auxillary Service, Start Year: 01-SEP-92	1
32	N805015S	PLUG	14mm, Start Year: 01-SEP-92	1
33	E9NN9413010DB	MAT	Floor, Filler, Start Year: 01-SEP-92	1
34	E9NN9413010AC	MAT	Floor, Front, Start Year: 01-SEP-92	1
		Refer to Fig. 15D03 for Under Mat Insulation.	Refer to Fig. 15D03 for Under Mat Insulation.	1
35	83989537	FOAM INSULATION	Insulation, Fuel Tank, LH, Start Year: 01-SEP-92	1
36	83989535	FOAM INSULATION	Insulation, Fuel Tank, Upper, Start Year: 01-SEP-92	1
37	83989540	FOAM INSULATION	Insulation, Fuel Tank, RH, Start Year: 01-SEP-92	1
38	81878445	PANEL	Fender, LH, Start Year: 01-SEP-92	1
		NH-E Only.	NH-E Only.	1
38	81878444	PANEL	Fender, RH, Start Year: 01-SEP-92	1
		NH-E Only.	NH-E Only.	1
39	82851328	INSULATOR	Tape, Foam Back, Start Year: 01-SEP-92	1



PARTS & MERCHANDISE
STORE

New Holland Agriculture 621 State Street
NA Customer Relations@newholland.com Racine, Wisconsin 53404
866-639-4563 option 1

(3430) - 3 CYL AG TRACTOR ALL PURPOSE (3/90-1/98) > (13B01) - SEAT ASSEMBLY, ECONOMY, BOSTROM

Diag #	Part #	Name	Description	Qty
1	E9NN400MC	DRIVER SEAT	Seat Assy., Complete, Includes: Ref. 2 thru 7, Start Year: 01-MAR-90	1
2	E9NNA405AA	SEAT BACK	Pan	1
3	E9NN422AB	SUSPENSION	Assy., Start Year: 01-MAR-90	1
4	E9NNF412AA	KIT	Weight Adjustment, Start Year: 01-MAR-90	1
5	E9NNN409AA	BUMPER	, Start Year: 01-MAR-90	1
6	E9NND446AA	SHOCK ABSORBER	Kit, Shock Absorber, Start Year: 01-MAR-90	1
7	E9NNE416AA	KIT	Boot, Start Year: 01-MAR-90	1
8	80394628	LOCK WASHER	Washer, M8, Start Year: 01-MAR-90	4
9	44881S36	WASHER	Hardened, G8, 5/8", Start Year: 01-MAR-90	2
9	81541	WASHER, 0.5" ID x 1.25" OD x 0.08" Thk	, Start Year: 01-MAR-90	2
10	120104	BOLT, Hex, M8 x 1.25 x 20mm, Cl 8.8	BOLT, HH, CL 8.8, M8 x 1.25 x 20, Years: 01-MAR-90-31-MAY-90	4
10A	86528533	LOCK NUT	Hex, M8 x 1.25, Start Year: 01-JUN-90	4
11	280747	BOLT, Hex, 7/16" - 14 x 1 3/4", Gr 5	, Start Year: 01-MAR-90	1
11	9637916	BOLT, Hex, 7/16" - 14 x 1 1/2", Gr 5	, Start Year: 01-MAR-90	1
12	356420S36	WASHER, .45" x 1" x .18" Thk	, Start Year: 01-MAR-90	2
13	81547	BEARING WASHER, 7/16"	WASHER, LOCK, 7/16", Start Year: 01-MAR-90	2
14	87891	BHD LOCK NUT, Jam, 7/16"-20, G2	Jam, G2, 7/16"-20, Start Year: 01-MAR-90	1
15	E1NN669AA	PIN, 11.18mm OD x 82.3mm L	Hydraulic Lift Plunger, W/Seat Belt, L/Hydraulic Remote Guide, Start Year: 01-MAR-90	1
15	D3NN669A	PIN	Hydraulic Lift Plunger, Start Year: 01-MAR-90	1
16	E9NNB429BB	BRACKET	, Start Year: 01-MAR-90	1
17	280580	BOLT, Hex, 5/8" - 11 x 1", Gr 5, Full Thd	Screw, Cap, HH, G5, 5/8"-11 x 1", Start Year: 01-MAR-90	2
17	304669S36	SCREW	Cap, HH, G5, 7/16"-20 x 7/8", Start Year: 01-MAR-90	2
18	86729275	LOCK WASHER, 5/8 0.634 CST ZND	Washer, Lock, 5/8", Start Year: 01-MAR-90	2
18	81547	BEARING WASHER, 7/16"	WASHER, LOCK, 7/16", Start Year: 01-MAR-90	2
19	87872	BOLT, Hex, 5/16" - 18 x 3/4", Gr 5	Screw, Cap, HH, G5, 5/16"-18 x 3/4", Start Year: 01-MAR-90	2

PREVIEW ONLY

You're viewing 25 of 722 pages

The full manual includes:

- All 722 pages, complete
 - Searchable PDF (find any keyword)
 - No watermarks
 - Instant download
 - Print-ready quality
-

GET FULL MANUAL NOW

New Holland 3430, 3930, 3930H, 3930N, 3930NO, 4130, 4130N, 4130NO, 4630, 4630N, 4630NO, 4630-O, 3230 Parts Catalog



Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual