
Torque

Minimum hardware tightening torques (in N m or lb in /lb ft) for normal assembly applications unless otherwise stated

NOTICE: *Shown below is the suggested initial torque tightening sequences for general applications, tighten in se-*


Blurred on purpose. The manual you buy has this page in full quality.

Main gearbox - Remove

Prior operation:


Remove the tying system, refer to **Net and plastic wrapper - Remove (68.200)**.

1. Loosen the safety cap (10) of the Power Take-Off (PTO) shaft (2) from the gearbox (1).
2. Remove the bolt (11) from the PTO shaft (2).

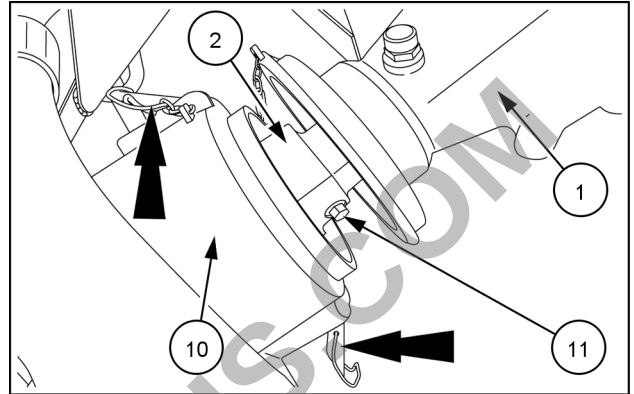

ZEIL14RB00100AA 1


3. Remove the PTO shaft (2) from the gearbox (1).

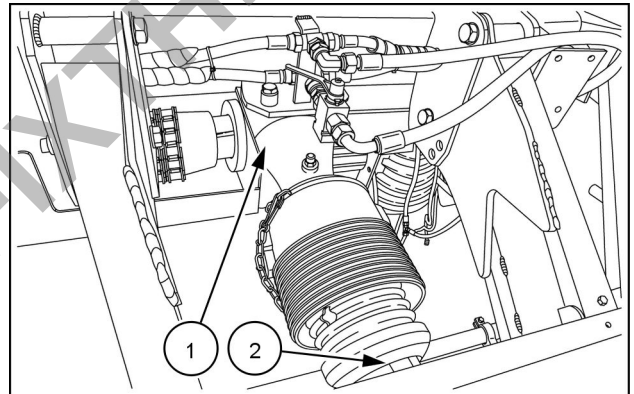


ZEIL14RB00002AA 2

4. Release the tension of:
 - The rotor/pickup main drive chain.
 - The front/rear rollers main drive chain.


NOTE: Refer to the operator's manual of the machine.

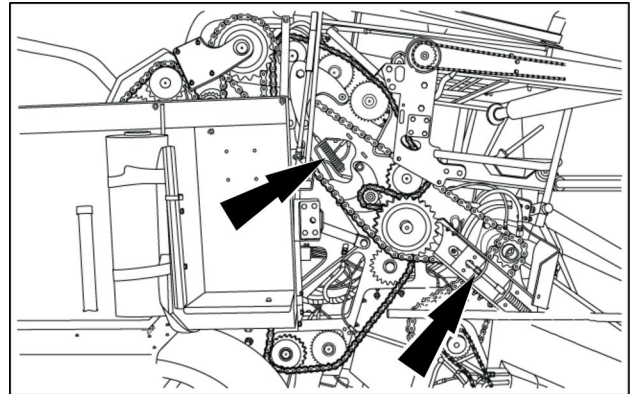


ZEIL12RB0041A0Z 3

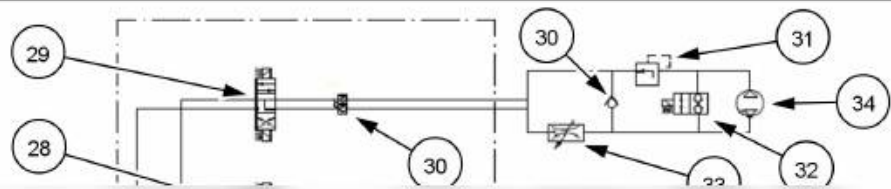

Blurred on purpose. The manual you buy has this page in full quality.

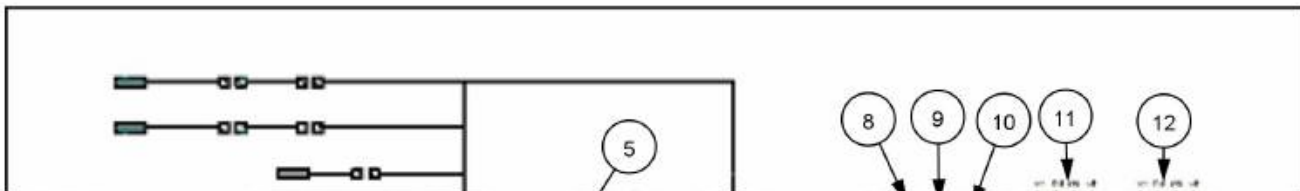

Blurred on purpose. The manual you buy has this page in full quality.

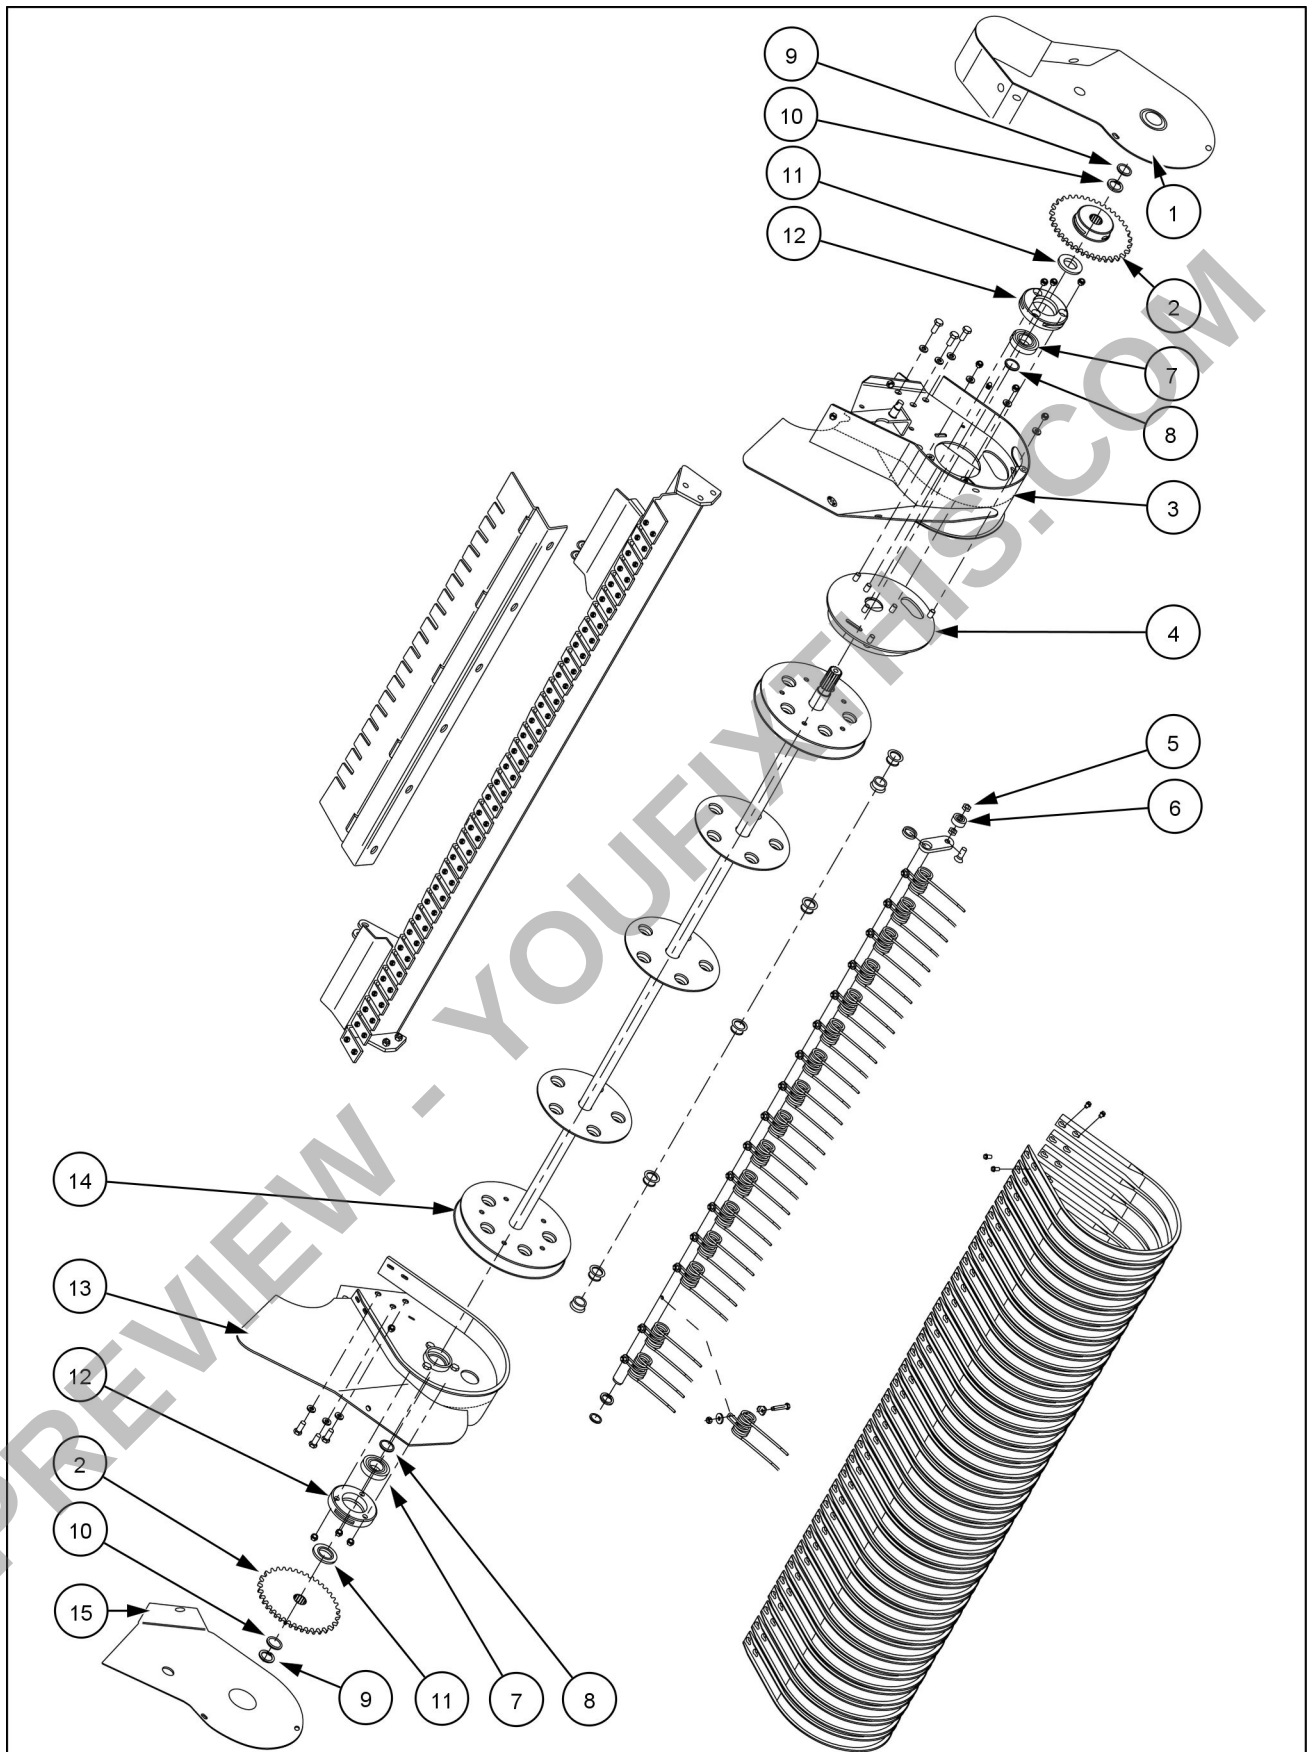

ZEIL14RB00056HA 1

Contents

INTRODUCTION

Main gearbox and drive	14
[14.100] Main gearbox and drive	14.1
Power Take-Off (PTO)	31
[31.220] Gearbox	31.1
Hydraulic systems.....	35
[35.359] Main control valve	35.1
[35.599] Combi hydraulic system.....	35.2
Frames and ballasting	39
[39.100] Frame	39.1
Electrical systems	55
[55.100] Harnesses and connectors.....	55.1
[55.408] Warning indicators, alarms, and instruments	55.2
Product feeding	60
[60.220] Pickup	60.1
[60.260] Rotor	60.2
Pressing - Bale formation.....	62
[62.140] Bale formation.....	62.1
Tying/Wrapping/Twisting	68
[68.200] Net and plastic wrapper	68.1
Ejection	70
[70.270] Combi frame and main parts	70.1
Platform, cab, bodywork, and decals	90
[90.105] Machine shields and guards	90.1

Safety rules

LEGAL OBLIGATIONS

This machine may be equipped with special guarding or other devices in compliance with local legislation. Some of these require active use by the operator. Therefore, check local legislations on the usage of this machine.

ACCIDENT PREVENTION

Most accidents or injuries that occur in workshops are the result of non compliance to simple and fundamental safety principles. For this reason, IN MOST CASES THESE ACCIDENTS CAN BE AVOIDED by applying the fundamental safety principles, acting with the necessary caution and care.

Accidents may occur with all types of machine, regardless of how well the machine in question was designed and built.

⚠ CAUTION

Unexpected machine movement!

- 1. Disengage all drives.**
- 2. Engage parking brake.**
- 3. Lower all attachments to the ground, or raise and engage all safety locks.**
- 4. Shut off engine.**
- 5. Remove key from key switch.**
- 6. Switch off battery key, if installed.**
- 7. Wait for all machine movement to stop.**

Failure to comply could result in minor or moderate injury.

C0038A


SAFETY REQUIREMENTS FOR FLUID POWER SYSTEMS AND COMPONENTS - HYDRAULICS (EUROPEAN STANDARD EN982)

- Flexible hose assemblies must not be constructed from hoses which have been previously used as part of a hose assembly.
- Do not weld hydraulic pipes: when flexible hoses or piping are damaged, replace them immediately.
- It is forbidden to modify a hydraulic accumulator by machining, welding or any other way.
- Before removing hydraulic accumulators for servicing, the liquid pressure in the accumulators must be reduced to zero.
- Pressure check on hydraulic accumulators must be carried out by a method recommended by the accumulator manufacturer.
- Take care not to exceed the maximum allowed pressure of the accumulator. After any check or adjustment, check for leakages or gas in the hoses or tubes.

SAFETY RULES

General guidelines

- Carefully follow specified repair and maintenance procedures.
- When appropriate, use P.P.E (Personal Protective Equipment)
- Do not wear rings, wristwatches, jewellery, unbuttoned or loose articles of clothing such as: ties, torn clothing, scarves, open jackets or shirts with open zips that may remain entangled in moving parts. It is advised to wear approved safety clothing, e.g.: non-slip footwear, gloves, safety goggles, helmets, etc.
- Do not carry out repair operations with someone sitting in the driver's seat, unless the person is a trained technician who is assisting with the operation in question.
- Do not operate the machine or use any of the implements from different positions, other than the driver's seat.
- Do not carry out operations on the machine with the engine running, unless specifically indicated.

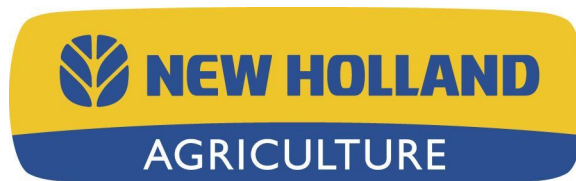

INTRODUCTION

PREVIEW - YOUFIXTHIS.COM



© 2015 CNH Industrial Belgium N.V.

All rights reserved. No part of the text or illustrations of this publication may be reproduced.

NEW HOLLAND policy is one of continuous improvement and the right to change prices, specification or equipment at any time without notices is reserved.

All data given in this publication is subject to production variations. Dimensions and weight are approximate only and the illustrations do not necessarily show products in standard condition. For exact information about any particular product, please consult your NEW HOLLAND Dealer.

Wiring harnesses - Electrical schema

Components

1. Wrapper loader/table sensors
2. Slipring
3. Wrapper arm sensors
4. Baler sensors
5. Baler control module
6. Baler valves
7. Fuse/relay box
8. Connector for greasing
9. Connector for additives
10. Connector for accessory
11. Connector for rear road lights (right-hand side)
12. Connector for rear road lights (left-hand side)
13. Connector for road lights (tractor)
14. Power connection
15. Main fuse (**40 A**)
16. Emergency stop
17. Monitor
18. Connector for additives pump
19. Wrapper control module
20. Wrapper valves



Product feeding - 60

Rotor - 260

Roll Baler 135 Ultra



© 2015 CNH Industrial Belgium N.V.

All rights reserved. No part of the text or illustrations of this publication may be reproduced.

NEW HOLLAND policy is one of continuous improvement and the right to change prices, specification or equipment at any time without notices is reserved.

All data given in this publication is subject to production variations. Dimensions and weight are approximate only and the illustrations do not necessarily show products in standard condition. For exact information about any particular product, please consult your NEW HOLLAND Dealer.

PREVIEW ONLY

You're viewing 12 of 275 pages

The full manual includes:

- All 275 pages, complete
 - Searchable PDF (find any keyword)
 - No watermarks
 - Instant download
 - Print-ready quality
-

GET FULL MANUAL NOW

New Holland Roll Baler 135 Ultra Service Manual



Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual