4.1 Operator's stand

4.1.1 Main control panel

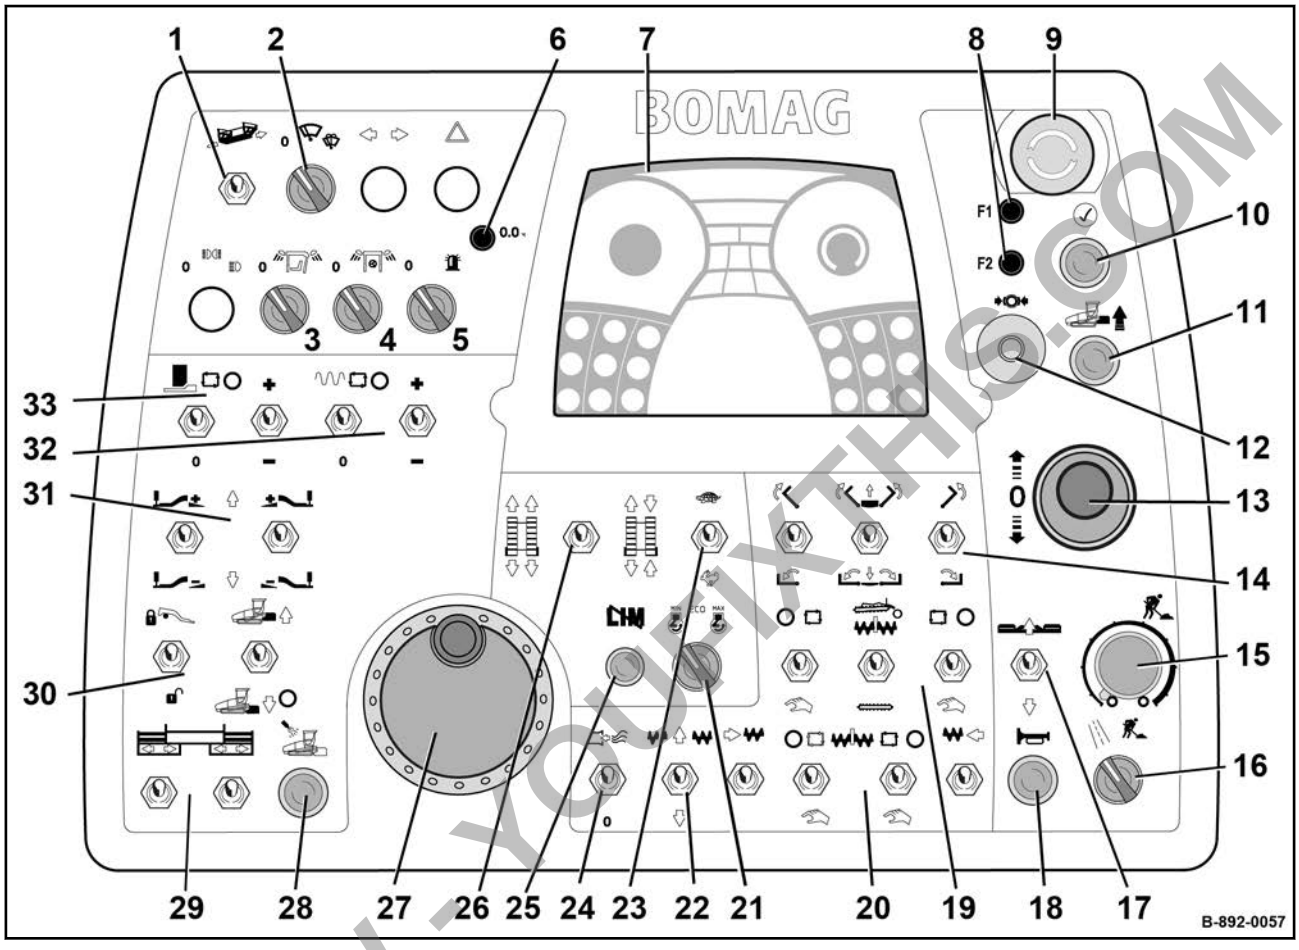


Fig. 14

1 Toggle switch on driver's platform *(optional equipment)*
2 Rotary switch/button windscreen wiper/washer *(optional equipment)*
3 Rotary switch working lights front and rear
4 Rotary switch, lateral working lights *(optional equipment)*
5 Rotary switch for flashing beacon
6 Function button to reset the meter counter
7 LC-Display unit
8 Function keys F1 and F2
9 Emergency stop push button
10 Push button to release hydraulics and travel functions
11 Push button for partial unloading of screed
12 Parking brake switch
13 Travel lever
14 Hopper control panel
15 Travel speed potentiometer
16 Rotary switch for operating mode
17 Toggle switch press rollers *(optional equipment)*
18 Push button for warning horn
19 Scraper belt control panel
20 Auger control panel
21 Rotary switch for engine speed

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

6.1 Setting-up the work place

1. Park the machine in secured condition *Chapter 6.7 'Park the machine in secured condition.' on page 119*.

6.1.1 Adjust the driver's seat

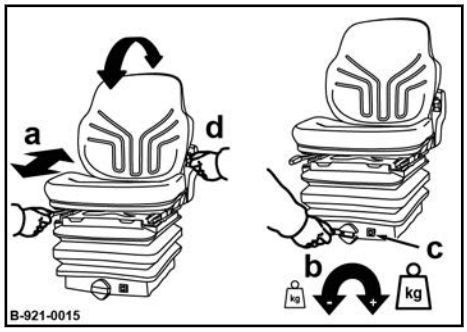


Fig. 92

a Length adjustment
b Weight adjustment
c Display of weight adjustment
d Inclination of the backrest

1. To adjust the inclination of the backrest operate lever (d) and tilt the backrest forward or back.
2. To adjust the seat in longitudinal direction disengage lever (a) and push the seat forward or back.
3. To adapt to the weight of the operator read the weight indication in the window (c) and, if necessary, turn lever (b) until the correct driver's weight has been adjusted.

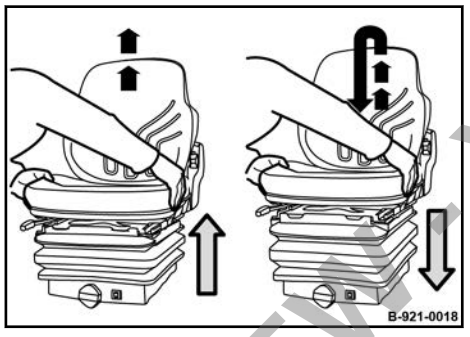


Fig. 93

4. To adjust the seat height lift up the seat, until it locks at the appropriate height.

When lifting the seat completely it will sink down to lowest position.

6.1.2 Sliding the driver's seat

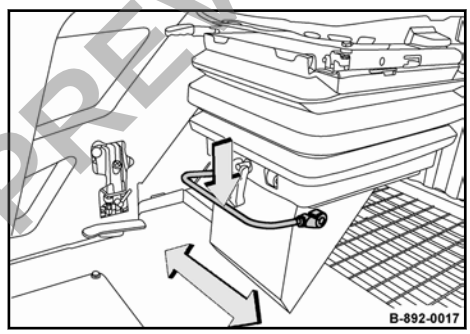


Fig. 94

1. Press down the unlocking bow, slide the seat to the desired position and lock it again.

PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

8.1 Preliminary remarks and safety notes

DANGER!

Danger to life caused by an operationally unsafe machine!

– The machine must only be serviced by qualified and authorized personnel.
– Follow the safety regulations for maintenance work.

WARNING!

Health hazard caused by fuels and lubricants!

– Safety regulations and environmental protection regulations when handling fuels and lubricants must be followed ↳ *Chapter 3.4 'Handling fuels and lubricants' on page 27*.

The terms right/left always correspond with travel direction forward.

1. Thoroughly clean machine and engine before starting maintenance work.
2. For all maintenance work park the machine is secured condition ↳ *Chapter 6.7 'Park the machine in secured condition.' on page 119*.
3. Wear your personal protective equipment.
4. Do not touch hot components.
5. Always remove the main battery switch for all maintenance work.
6. Perform maintenance work only with the engine shut down.
7. Dump the pressure from hydraulic lines before working on them.
8. Before working on electric parts disconnect the battery and cover it with insulation material.
9. After all maintenance work is completed reinstall all guards and safety installations.
10. Close all maintenance flaps and doors after maintenance work has been completed.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

9.1 Preliminary remarks

Malfunctions are frequently caused by incorrect operation of the machine or insufficient maintenance. Whenever a fault occurs you should therefore thoroughly read these instruction on correct operation and maintenance.

If you cannot locate the cause of a fault or rectify it yourself by following the trouble shooting chart, you should contact our customer service department.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Table of contents

1 Introduction ... **9**
1.1 Foreword ... **10**
1.2 Machine type plate and engine type plate ... **12**
2 Technical data ... **13**
2.1 Noise and vibration data ... **16**
2.1.1 Noise data ... 17
2.1.2 Vibration data ... 17
3 Concerning your safety ... **19**
3.1 General prerequisites ... **20**
3.1.1 General ... 20
3.1.2 Explanation of warning signs: ... 20
3.1.3 Personal protective equipment ... 21
3.1.4 Intended use ... 22
3.1.5 Improper use ... 22
3.2 Definition of responsible persons ... **24**
3.2.1 Operating company ... 24
3.2.2 Expert / qualified person ... 24
3.2.3 Driver / operator ... 24
3.3 Basic safety regulations for safe operation ... **26**
3.3.1 Remaining dangers, remaining risks ... 26
3.3.2 Regular safety inspections ... 26
3.3.3 Modifications and alterations to the machine ... 26
3.3.4 Damage, defects, misuse of safety devices ... 26
3.4 Handling fuels and lubricants ... **27**
3.4.1 Preliminary remarks ... 27
3.4.2 Safety regulations and environmental protection regulations for handling diesel fuel ... 28
3.4.3 Safety regulations and environmental protection regulations for handling AdBlue®/DEF ... 29
3.4.4 Safety regulations and environmental protection regulations for handling oil ... 30
3.4.5 Safety regulations and environmental protection regulations for handling hydraulic oil ... 31
3.4.6 Safety regulations and environmental protection regulations for handling coolants ... 32
3.4.7 Safety regulations and environmental protection regulations for handling battery acid ... 33
3.5 Loading/transporting the machine ... **34**
3.6 Taking the machine into service ... **35**
3.6.1 Before commissioning ... 35
3.6.2 Starting the engine ... 35
3.6.3 Starting the engine with jump leads ... 36
3.6.4 Taking the screed heating into service ... 36
3.7 Driving the machine, working operation ... **37**
3.7.1 Persons in the danger area ... 37
3.7.2 Driving the machine ... 37
3.7.3 Driving on inclinations and slopes ... 37
3.7.4 Working in railway areas ... 38
3.7.5 Laying asphalt near slopes ... 38
3.7.6 Laying asphalt on bridges ... 38

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

3.1 General prerequisites

3.1.1 General

This BOMAG machine has been built in compliance with the latest technical standard and complies with the applicable regulations and technical rules.

However, dangers for persons and property may arise from this machine, if:

- it is used for purposes other than the ones it is intended for,
- it is operated by untrained personnel,
- it is changed or converted in an unprofessional way,
- the safety instructions are not observed.

Each person involved in the operation, maintenance and repair of the machine must therefore read and comply with these safety regulations. If necessary, the customer must obtain the relevant signatures as confirmation.

Furthermore, the following obviously also applies:

- applicable accident prevention instructions,
- generally accepted safety and road traffic regulations,
- country specific safety regulations.

It is the duty of the operator to be acquainted with the safety regulations and to apply these accordingly. This also applies for local regulations amnd regulations concerning different types of handling activities. Should the recommendations in these instructions be different from the regulations valid in your country, you must comply with the safety regulations valid in your country.

3.1.2 Explanation of warning signs:



DANGER!

Danger to life if failing to comply!

Sections marked accordingly indicate an extremely dangerous situation that could lead to fatal or severe injuries, if this warning is disregarded.



WARNING!

Danger to life or danger of severe injuries if failing to comply!

Sections marked accordingly indicate a dangerous situation that could lead to fatal or severe injuries, if this warning is disregarded.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Table of contents

3.7.7 Parking the machine ... 38
3.8 Refuelling ... **39**
3.9 Topping up AdBlue®/DEF ... **40**
3.10 What to do in events of emergency ... **41**
3.10.1 Actuating the emergency stop switch ... 41
3.10.2 Disconnect the battery ... 41
3.10.3 Towing the machine ... 41
3.11 Maintenance work ... **42**
3.11.1 Preliminary remarks ... 42
3.11.2 Work on hydraulic lines ... 42
3.11.3 Working on the engine ... 43
3.11.4 Maintenance work on electric components and battery ... 43
3.11.5 Working on heating elements ... 44
3.11.6 Cleaning work ... 44
3.11.7 After maintenance work ... 44
3.12 Repair ... **45**
3.13 Stickers and decals ... **46**
4 Display and control elements ... **51**
4.1 Operator's stand ... **52**
4.1.1 Main control panel ... 52
4.1.2 Start switch ... 53
4.1.3 12 V Universal socket ... 53
4.1.4 LC-Display unit ... 54
4.1.5 Function button to reset the meter counter ... 56
4.1.6 Function keys F1 and F2 ... 57
4.1.7 Toggle button for operator's platform ... 57
4.1.8 Rotary switch/button windscreen wiper/washer ... 57
4.1.9 Rotary switch working lights front and rear ... 58
4.1.10 Rotary switch for lateral working light ... 58
4.1.11 Rotary switch for flashing beacon ... 58
4.1.12 Emergency stop switch ... 59
4.1.13 Push button to release hydraulics and travel functions ... 59
4.1.14 Push button for partial unloading of screed ... 59
4.1.15 Parking brake switch ... 60
4.1.16 Travel lever ... 60
4.1.17 Travel speed potentiometer ... 60
4.1.18 Rotary switch for operating mode ... 61
4.1.19 Toggle switch press rollers ... 61
4.1.20 Push button for warning horn ... 61
4.1.21 Hopper control panel ... 62
4.1.22 Scraper belt control panel ... 62
4.1.23 Auger control panel ... 63
4.1.24 Toggle button for auger height adjustment ... 63
4.1.25 Tumbler switch for asphalt fume extraction system ... 64
4.1.26 Rotary switch for engine speed ... 64
4.1.27 Push button reduced engine power ... 64

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

3.8 Refuelling

Do not inhale any fuel fumes.

Refuel only with the engine shut down.

Do not refuel in closed rooms.

No open fire, do not smoke.

Static charges may be generated in the fuel as it passes through the filling system. The discharge of these charges in the presence of combustible vapours can cause fire or an explosion.

Ultra-low sulphur diesel fuel poses a higher risk of combustion caused by the static charging than diesel fuel with a higher sulphur content.

You should therefore always make sure that the filling system is properly grounded and that there is equipotential bonding to the machine. If necessary use a connecting cable between filling system and vehicle ground.

Monitor the entire refuelling process.

Do not spill any fuel. Collect leaking fuel, do not let it seep into the ground.

Wipe off spilled fuel. Keep dirt and water away from the fuel.

A leaking fuel tank can cause an explosion. Ensure tight fit of the fuel tank cover, if necessary replace immediately.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

4.4 Screed operating console


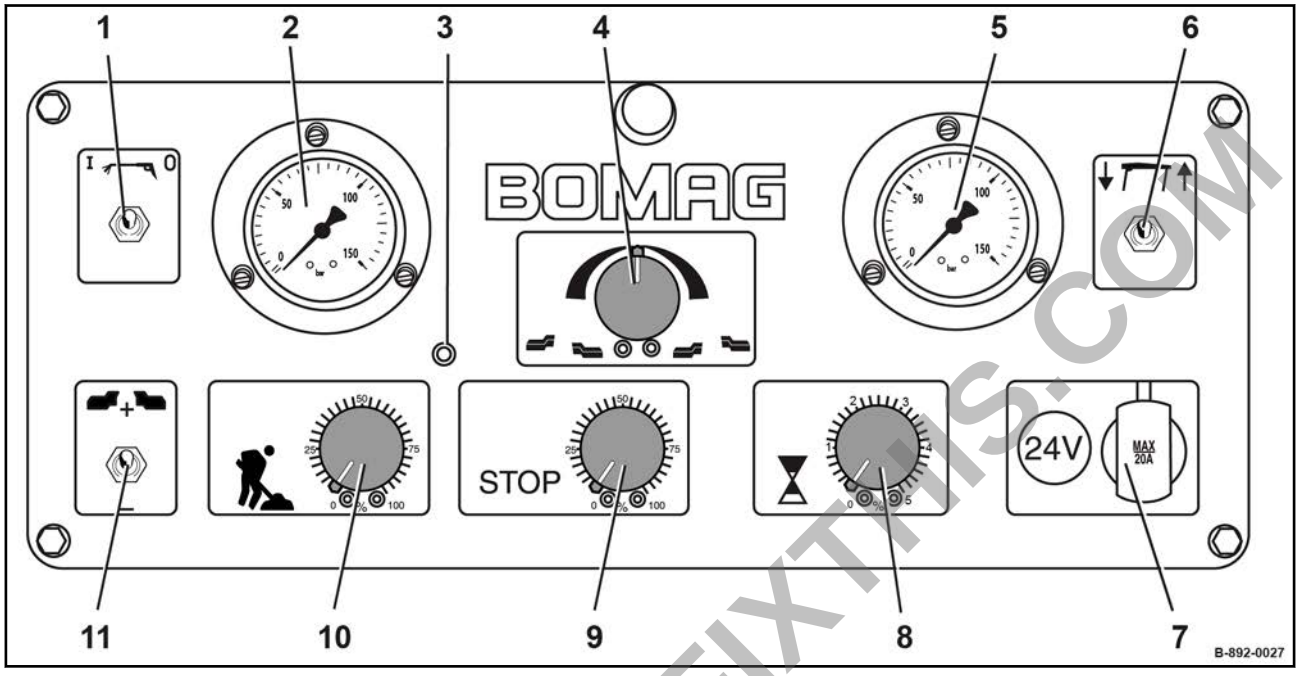


Fig. 61

1 Toggle switch for cleaning system
2 Pressure gauge for relief pressure
3 Control lamp screed relieved
4 Potentiometer screed relieve right/left distribution *(optional equipment)*
5 Pressure gauge for relief pressure *(optional equipment)*
6 Toggle button protection roof *(optional equipment)*
7 24 V Universal socket
8 Potentiometer for timer
9 Potentiometer for screed relief - machine stopped
10 Potentiometer for screed relief - machine in motion
11 Toggle button straight crossfalls adjustment *(optional equipment)*

4.4.1 Toggle switch for cleaning system

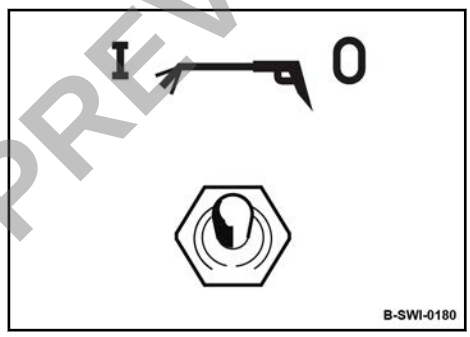

Position "Left"	Cleaning system on
Position "Right"	Cleaning system off

Fig. 62

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

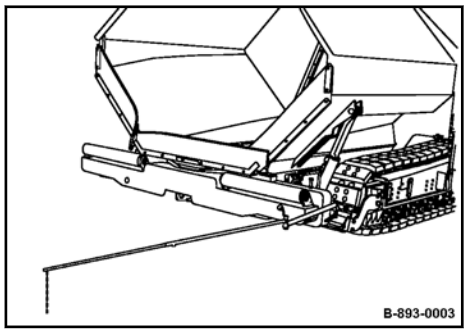


Fig. 123

12. Move the machine to start position and align the guide rod with the edge of the carriageway or a guideline.

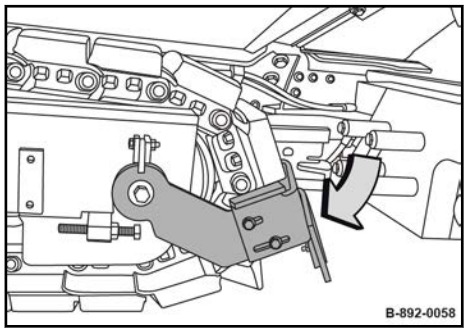


Fig. 124

13. Lower the scrapers on both sides.

14. If necessary, adjust the shape of the crown *Chapter 6.9.2 'Adjusting the straight crossfalls' on page 122*.

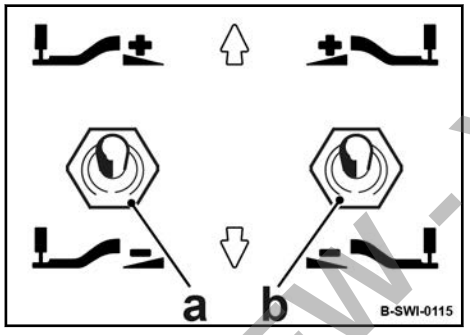


Fig. 125

15. Operate the toggle buttons for cylinder left (a) and right (b) to adjust the mat height left and right.

The mat thickness must be at least 2.5 times the maximum grain diameter.

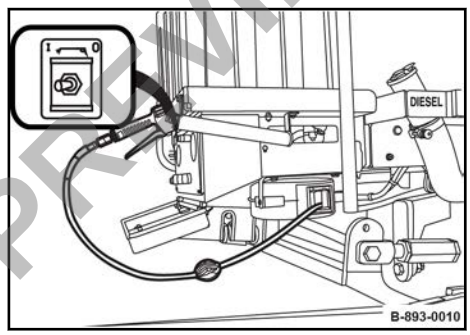


Fig. 126

16. Spray all parts, that come into contact with asphalt mix, with a release agent, using the cleaning system.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

8.9.9 Checking the track lengthening

	Distance between 5 track links
new track	622.4 mm (24.5 in)
Replace the track if	632.3 mm (24.9 in)

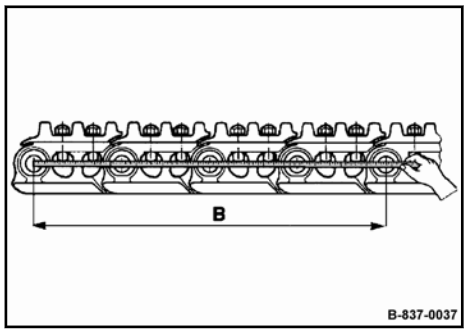


Fig. 256

1. Park the machine in secured condition ↳ *Chapter 6.7 'Park the machine in secured condition.' on page 119*.
2. Measure the length of five track links to the centre of the bolt (B).
3. In case of excessive track lengthening the track must be replaced.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 11 of 220 pages

The full manual includes:

- All 220 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Bomag BF 700 C-2 Operator Manual

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual