Torque - Minimum tightening torques for normal assembly

METRIC NON-FLANGED HARDWARE

NOM. SIZE	CLASS 8.8 BOLT and CLASS 8 NUT		CLASS 10.9 BOLT and CLASS 10 NUT		LOCKNUT CL.8 W/CL8.8 BOLT	LOCKNUT CL.10 W/CL10.9 BOLT
	UNPLATED	PLATED W/ZnCr	UNPLATED	PLATED W/ZnCr		
M4	2.2 N·m (19 lb in)	2.9 N·m (26 lb in)	3.2 N·m (28 lb in)	4.2 N·m (37 lb in)	2 N·m (18 lb in)	2.9 N·m (26 lb in)
M5	4.5 N·m (40 lb in)	5.9 N·m (52 lb in)	6.4 N·m (57 lb in)	8.5 N·m (75 lb in)	4 N·m (36 lb in)	5.8 N·m (51 lb in)
M6	7.5 N·m (66 lb in)	10 N·m (89 lb in)	11 N·m (96 lb in)	15 N·m (128 lb in)	6.8 N·m (60 lb in)	10 N·m (89 lb in)
M8	18 N·m (163 lb in)	25 N·m (217 lb in)	26 N·m (234 lb in)	35 N·m (311 lb in)	17 N·m (151 lb in)	24 N·m (212 lb in)
M10	37 N·m (27 lb ft)	49 N·m (36 lb ft)	52 N·m (38 lb ft)	70 N·m (51 lb ft)	33 N·m (25 lb ft)	48 N·m (35 lb ft)
M12	64 N·m (47 lb ft)	85 N·m (63 lb ft)	91 N·m (67 lb ft)	121 N·m (90 lb ft)	58 N·m (43 lb ft)	83 N·m (61 lb ft)
M16	158 N·m (116 lb ft)	210 N·m (155 lb ft)	225 N·m (166 lb ft)	301 N·m (222 lb ft)	143 N·m (106 lb ft)	205 N·m (151 lb ft)
M20	319 N·m (235 lb ft)	425 N·m (313 lb ft)	440 N·m (325 lb ft)	587 N·m (433 lb ft)	290 N·m (214 lb ft)	400 N·m (295 lb ft)
M24	551 N·m (410 lb ft)	735 N·m (500 lb ft)	762 N·m (560 lb ft)	1016 N·m (750 lb ft)	501 N·m (370 lb ft)	693 N·m (510 lb ft)

NOTE: *M4 through M8 hardware torque specifications are shown in pound-inches. M10 through M24 hardware torque specifications are shown in pound-feet.*


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Alternator - Remove

Prior operation:
Fan and drive Belt - Remove (B.50.A)

1. Remove the alternator **(2)** and it's supports **(1)** and **(3)**.

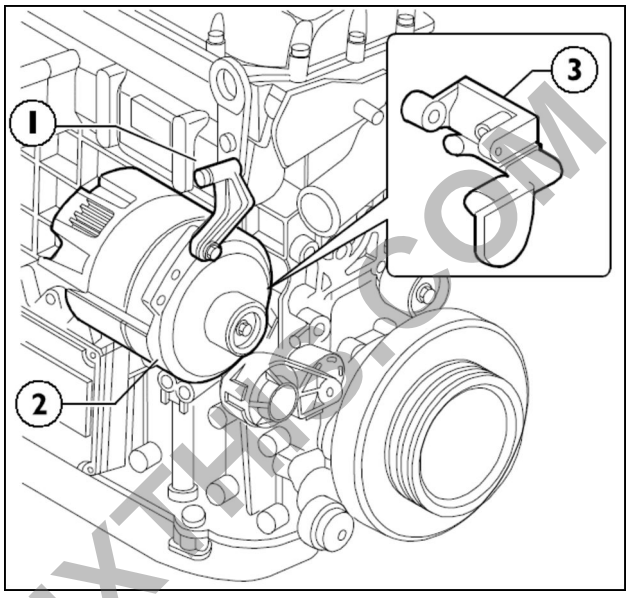


ALTERNATOR 1

Next operation:
Alternator - Install (A.30.A)

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

ENGINE - Overview

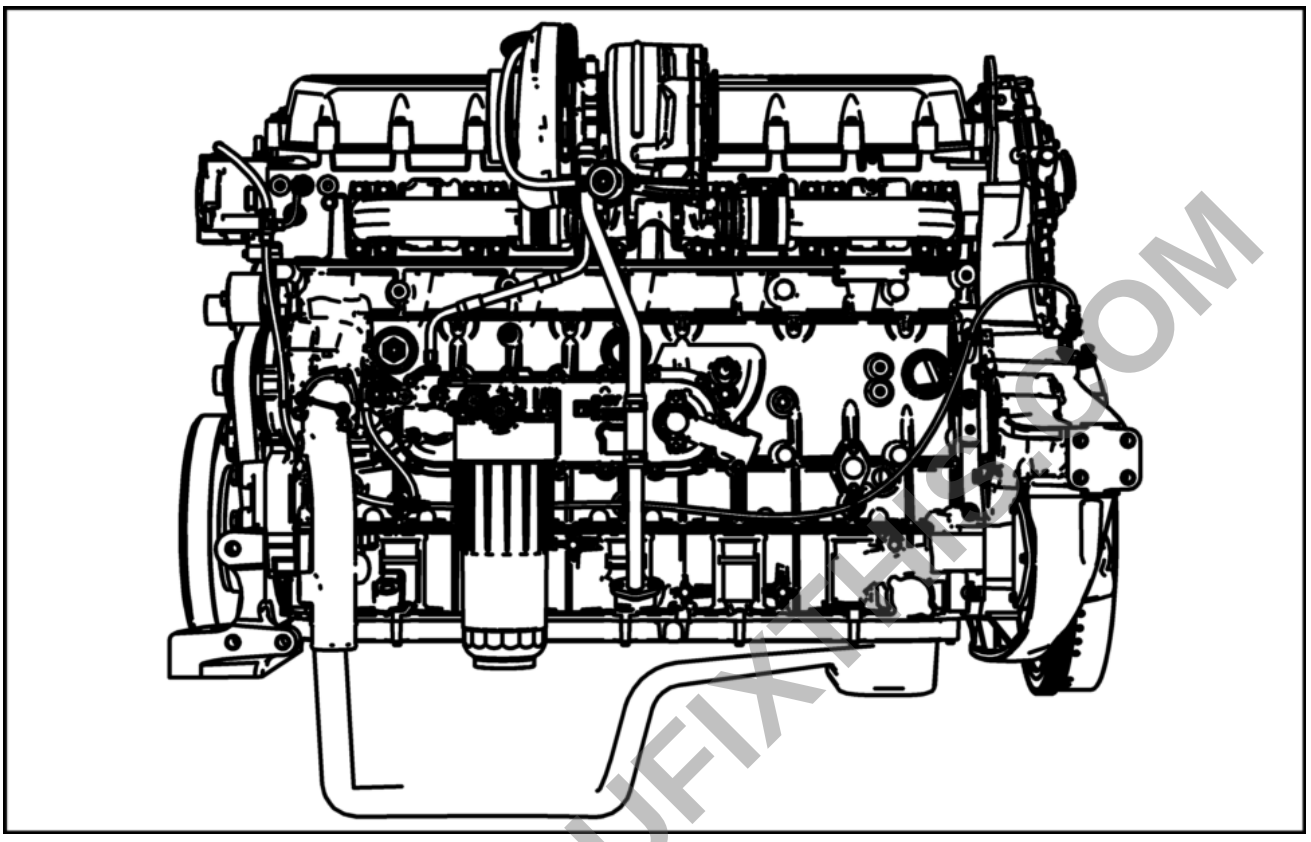

23110983 1

Left-hand side view

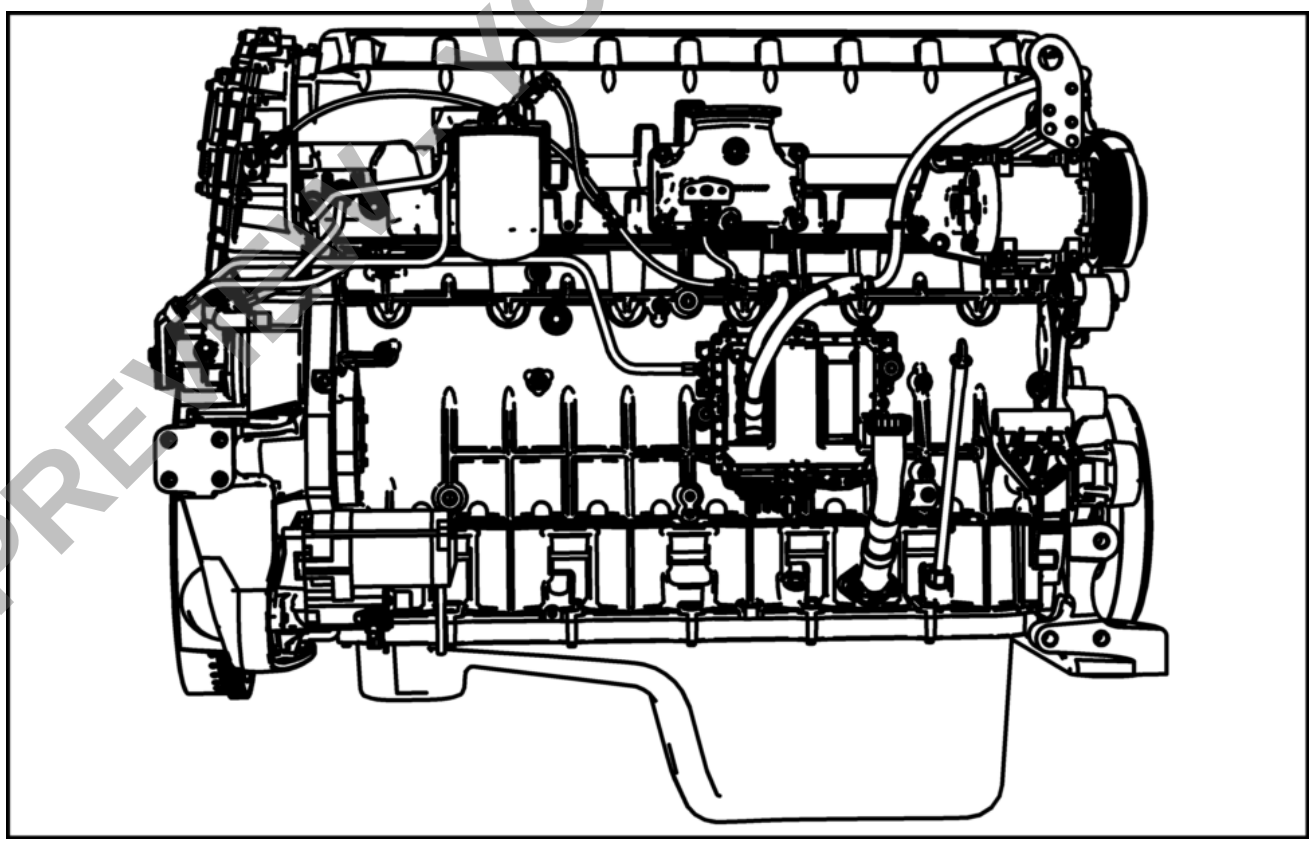

23110985 2

Right-hand side view

PREVIEW ONLY YOUFIXTHIS.COM


Download full manual at youfixthis.com

METRIC FLANGED HARDWARE

NOM. SIZE	CLASS 8.8 BOLT and CLASS 8 NUT		CLASS 10.9 BOLT and CLASS 10 NUT		LOCKNUT CL.8 W/CL8.8 BOLT	LOCKNUT CL.10 W/CL10.9 BOLT
	UNPLATED	PLATED W/ZnCr	UNPLATED	PLATED W/ZnCr		
M4	2.4 N·m (21 lb in)	3.2 N·m (28 lb in)	3.5 N·m (31 lb in)	4.6 N·m (41 lb in)	2.2 N·m (19 lb in)	3.1 N·m (27 lb in)
M5	4.9 N·m (43 lb in)	6.5 N·m (58 lb in)	7.0 N·m (62 lb in)	9.4 N·m (83 lb in)	4.4 N·m (39 lb in)	6.4 N·m (57 lb in)
M6	8.3 N·m (73 lb in)	11 N·m (96 lb in)	12 N·m (105 lb in)	16 N·m (141 lb in)	7.5 N·m (66 lb in)	11 N·m (96 lb in)
M8	20 N·m (179 lb in)	27 N·m (240 lb in)	29 N·m (257 lb in)	39 N·m (343 lb in)	18 N·m (163 lb in)	27 N·m (240 lb in)
M10	40 N·m (30 lb ft)	54 N·m (40 lb ft)	57 N·m (42 lb ft)	77 N·m (56 lb ft)	37 N·m (27 lb ft)	53 N·m (39 lb ft)
M12	70 N·m (52 lb ft)	93 N·m (69 lb ft)	100 N·m (74 lb ft)	134 N·m (98 lb ft)	63 N·m (47 lb ft)	91 N·m (67 lb ft)
M16	174 N·m (128 lb ft)	231 N·m (171 lb ft)	248 N·m (183 lb ft)	331 N·m (244 lb ft)	158 N·m (116 lb ft)	226 N·m (167 lb ft)
M20	350 N·m (259 lb ft)	467 N·m (345 lb ft)	484 N·m (357 lb ft)	645 N·m (476 lb ft)	318 N·m (235 lb ft)	440 N·m (325 lb ft)
M24	607 N·m (447 lb ft)	809 N·m (597 lb ft)	838 N·m (618 lb ft)	1118 N·m (824 lb ft)	552 N·m (407 lb ft)	

IDENTIFICATION

Metric Hex head and carriage bolts, classes 5.6 and up

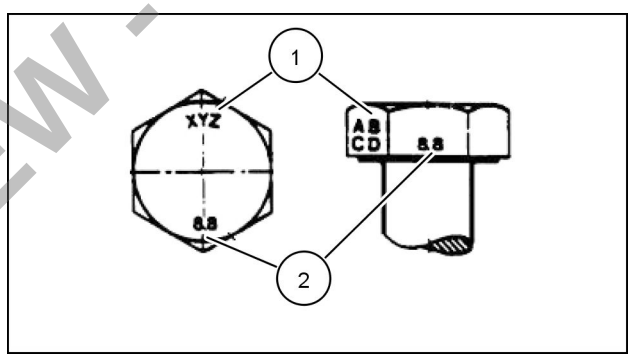

20083680 1

1. Manufacturer's Identification
2. Property Class


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Alternator - Install

Prior operation:
Alternator - Remove (A.30.A)

1. Install the alternator supports **(1)** and **(3)**.
2. Mount the alternator **(2)** to the supports **(1)** and **(3)**.

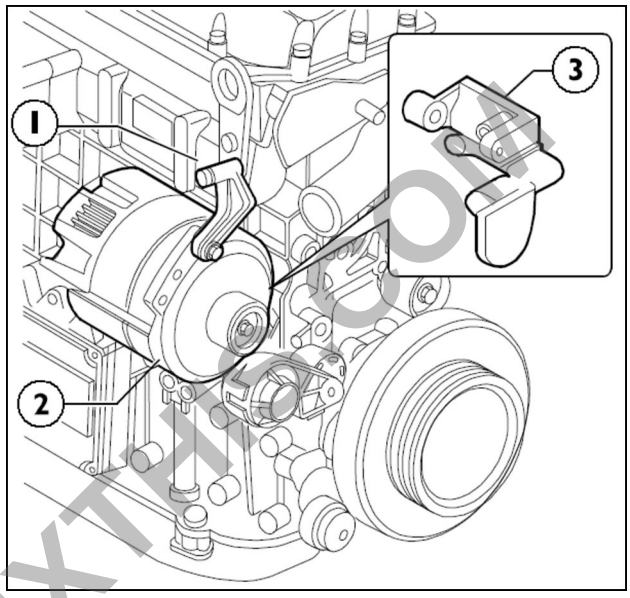


ALTERNATOR 1

Next operation:
Fan and drive Belt - Install (B.50.A)

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Timing gear - Overview

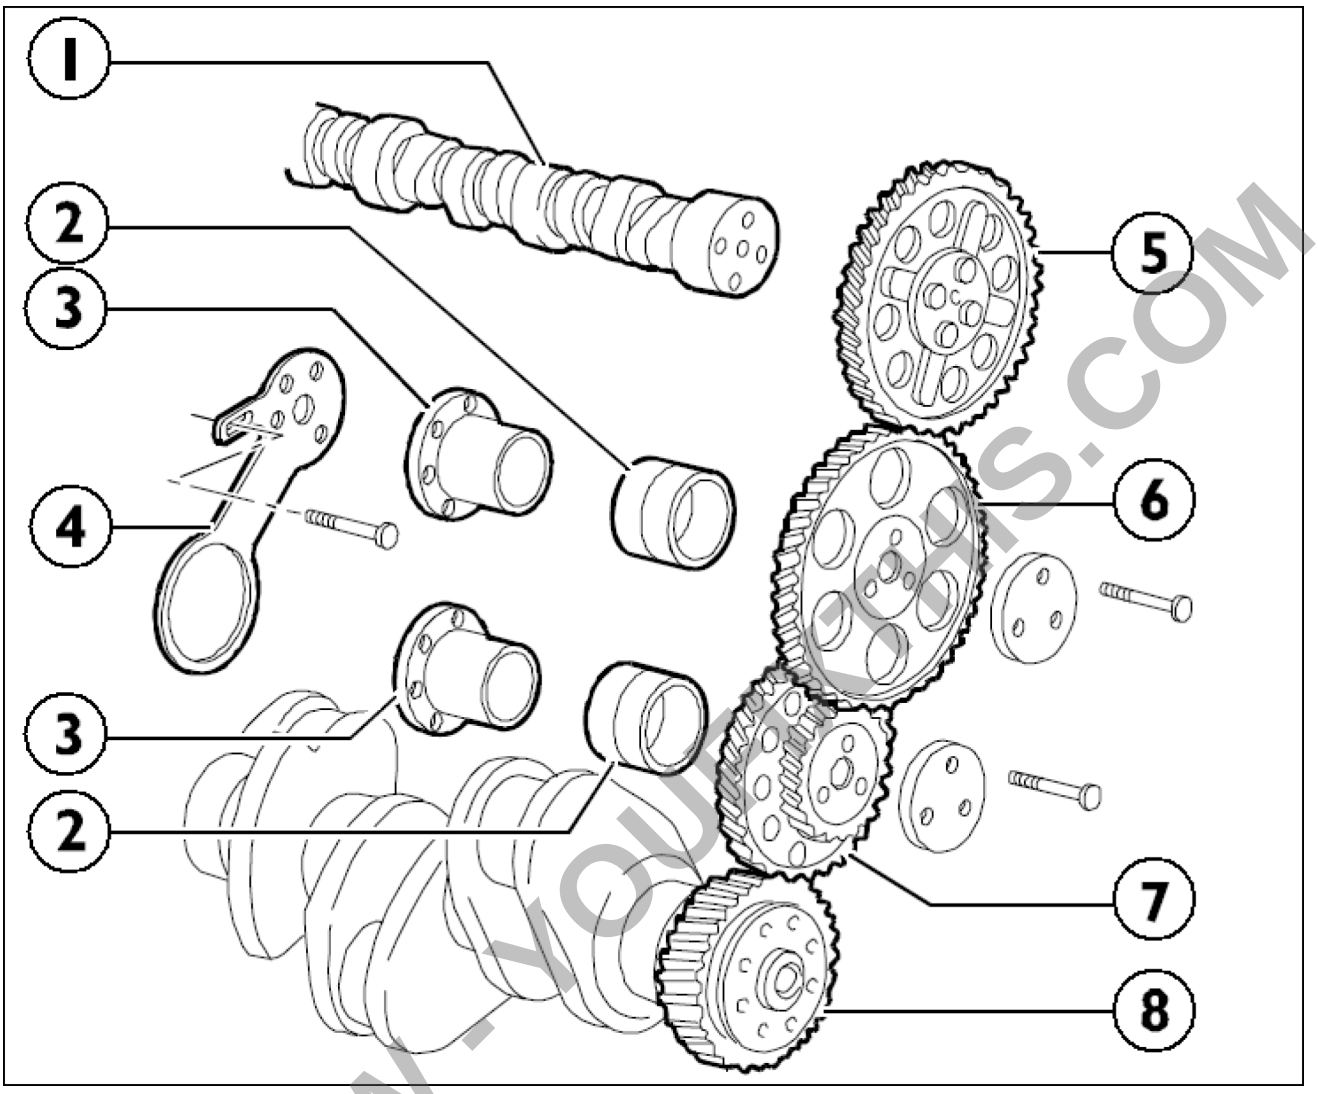

TIMINGGEARS 1

(1) Camshaft
(2) Bushing
(3) Pin
(4) Articulated rod
(5) Camshaft gear
(6) Idler gear
(7) Twin idler gear
(8) Crankshaft gear

The bushings **(2)** can be replaced when they are worn. They must be pressed out and pressed in from the block side of the gear.


Maximum amount of play between the bushings and the pins:

- Idler gear = **0.045 - 0.075 mm** (**0.0018 - 0.0030 in**).
- Twin idler gear = **0.045 - 0.085 mm** (**0.0018 - 0.0033 in**).

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Metric Hex nuts and locknuts, classes 05 and up

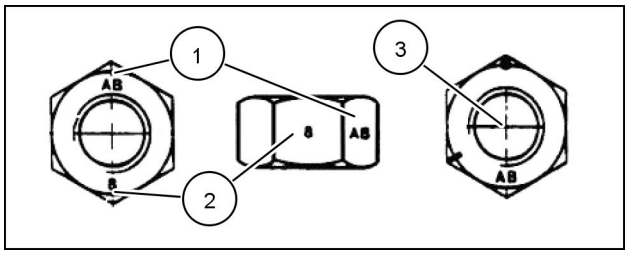

20083681 2

1. Manufacturer's Identification
2. Property Class
3. Clock Marking of Property Class and Manufacturer's Identification (Optional), i.e. marks **60 °** apart indicate Class 10 properties, and marks **120 °** apart indicate Class 8.

INCH NON-FLANGED HARDWARE

NOMINAL SIZE	SAE GRADE 5 BOLT and NUT		SAE GRADE 8 BOLT and NUT		LOCKNUT GrB W/ Gr5 BOLT	LOCKNUT GrC W/ Gr8 BOLT
	UN-PLATED or PLATED SILVER	PLATED W/ZnCr GOLD	UN-PLATED or PLATED SILVER	PLATED W/ZnCr GOLD		
1/4	**8 N·m (71 lb in)**	**11 N·m (97 lb in)**	**12 N·m (106 lb in)**	**16 N·m (142 lb in)**	**8.5 N·m (75 lb in)**	**12.2 N·m (109 lb in)**
5/16	**17 N·m (150 lb in)**	**23 N·m (204 lb in)**	**24 N·m (212 lb in)**	**32 N·m (283 lb in)**	**17.5 N·m (155 lb in)**	**25 N·m (220 lb in)**
3/8	**30 N·m (22 lb ft)**	**40 N·m (30 lb ft)**	**43 N·m (31 lb ft)**	**57 N·m (42 lb ft)**	**31 N·m (23 lb ft)**	**44 N·m (33 lb ft)**
7/16	**48 N·m (36 lb ft)**	**65 N·m (48 lb ft)**	**68 N·m (50 lb ft)**	**91 N·m (67 lb ft)**	**50 N·m (37 lb ft)**	**71 N·m (53 lb ft)**
1/2	**74 N·m (54 lb ft)**	**98 N·m (73 lb ft)**	**104 N·m (77 lb ft)**	**139 N·m (103 lb ft)**	**76 N·m (56 lb ft)**	**108 N·m (80 lb ft)**
9/16	**107 N·m (79 lb ft)**	**142 N·m (105 lb ft)**	**150 N·m (111 lb ft)**	**201 N·m (148 lb ft)**	**111 N·m (82 lb ft)**	**156 N·m (115 lb ft)**
5/8	**147 N·m (108 lb ft)**	**196 N·m (145 lb ft)**	**208 N·m (153 lb ft)**	**277 N·m (204 lb ft)**	**153 N·m (113 lb ft)**	**215 N·m (159 lb ft)**
3/4	**261 N·m (193 lb ft)**	**348 N·m (257 lb ft)**	**369 N·m (272 lb ft)**	**491 N·m (362 lb ft)**	**271 N·m (200 lb ft)**	**383 N·m (282 lb ft)**
7/8	**420 N·m (310 lb ft)**	**561 N·m (413 lb ft)**	**594 N·m (438 lb ft)**	**791 N·m (584 lb ft)**	**437 N·m (323 lb ft)**	**617 N·m (455 lb ft)**
1	**630 N·m (465 lb ft)**	**841 N·m (620 lb ft)**	**890 N·m (656 lb ft)**	**1187 N·m (875 lb ft)**	**654 N·m (483 lb ft)**	**924 N·m (681 lb ft)**


NOTE: *For Imperial Units,* ***1/4 in*** *and* ***5/16 in*** *hardware torque specifications are shown in pound-inches.* ***3/8 in*** *through* ***1 in*** *hardware torque specifications are shown in pound-feet.*

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


ENGINE - Service instruction - Finding Top Dead Center (TDC)

1. Using the tool **380000137**, turn the engine flywheel **(1)** in the direction of normal rotation until you see the hole with two reference marks **(3)**.
2. Continue to turn the flywheel until the following hole with one reference mark **(2)** can be seen. This marks TDC of the number one cylinder.

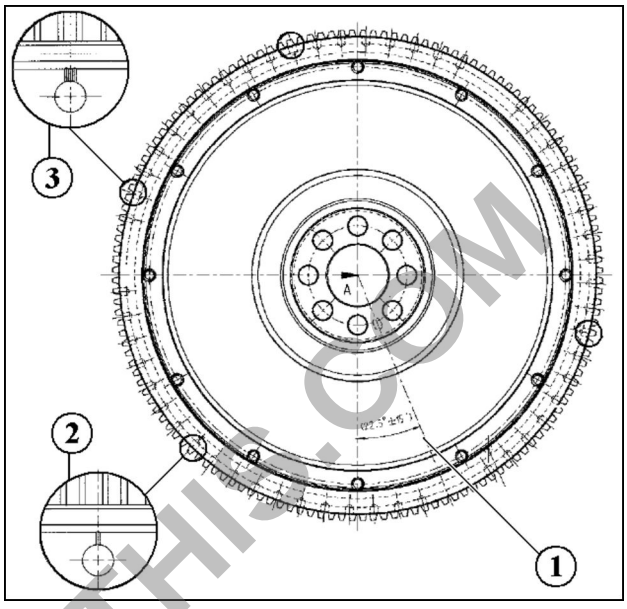

FLYWHEELF3C(B)2 1

3. The exact position of piston number one at TDC is obtained when the tool **380000150 (1)** goes through the seat **(2)** of the engine speed sensor into the hole **(3)** in the engine flywheel **(4)** appropriately.
4. Remove the tool **380000150 (1)**.

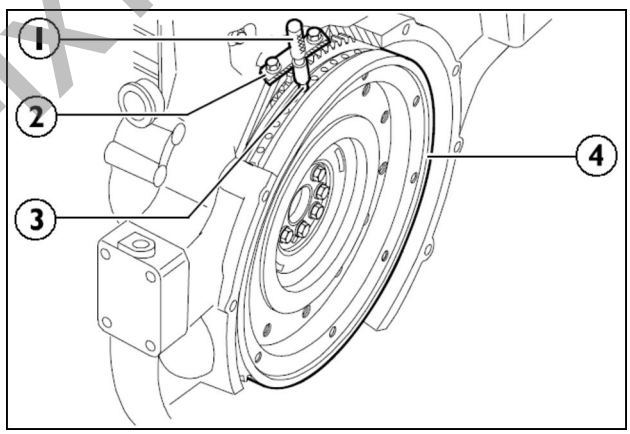


TDCLOCATE2F3C 2

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Sensing system - Component diagram

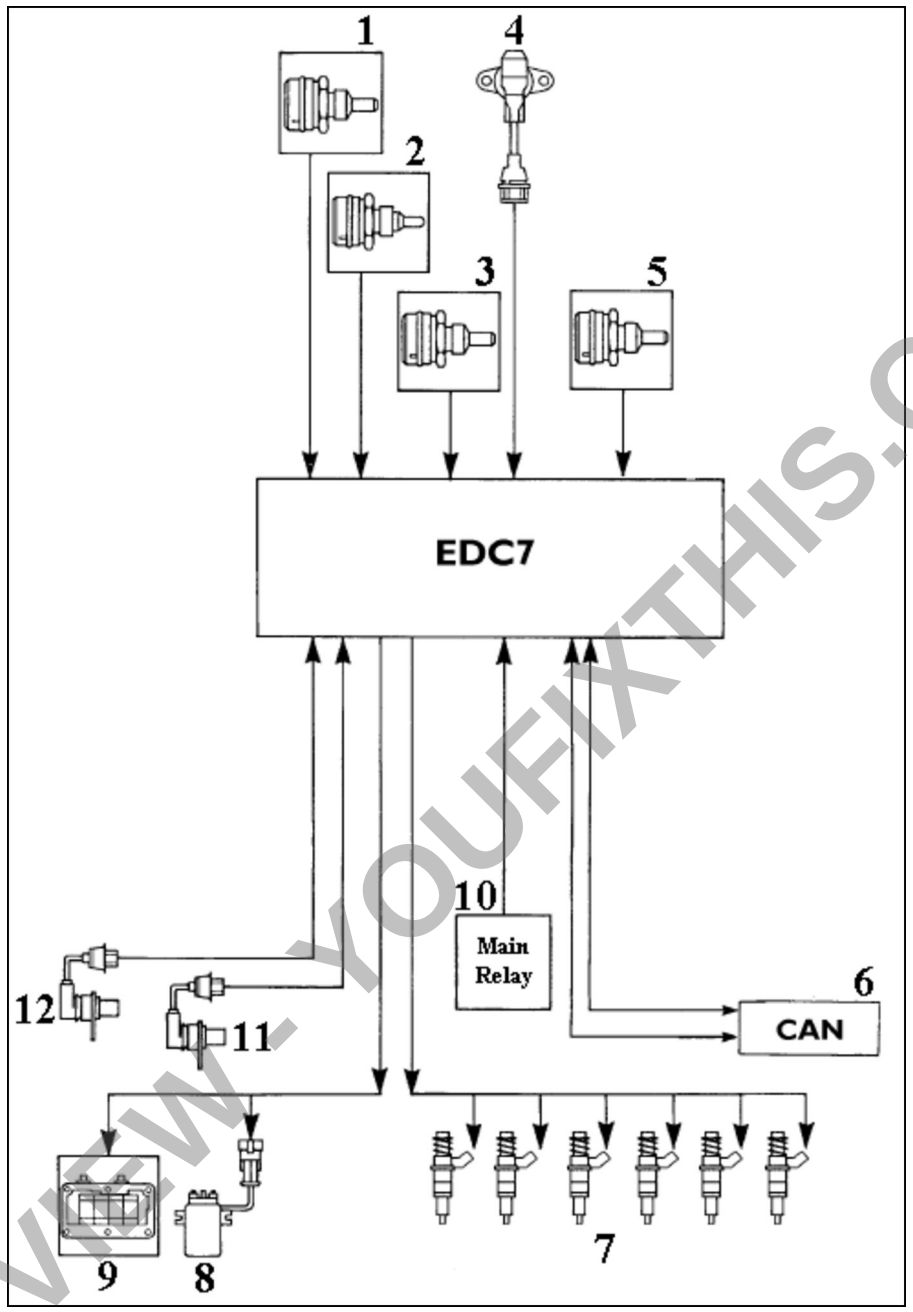

COMPDIAGRAM2 1

(1) Engine coolant temperature sensor
(2) Boost air temperature sensor
(3) Fuel temperature sensor
(4) Boost air pressure sensor
(5) Engine oil pressure/temperature sensor
(6) CAL L/H line
(7) Pump injectors
(8) Remote control switch for engine heater activation
(9) Engine heating resistance
(10) Main remote control switch
(11) Flywheel speed sensor
(12) Camshaft speed sensor

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Contents

INTRODUCTION

HYDRAULIC, PNEUMATIC, ELECTRICAL, ELECTRONIC SYSTEMS A

ELECTRICAL POWER SYSTEM A.30.A

ENGINE AND PTO IN ..... B

ENGINE B.10.A

FUEL AND INJECTION SYSTEM B.20.A

AIR INTAKE SYSTEM B.30.A

EXHAUST SYSTEM B.40.A

ENGINE COOLANT SYSTEM B.50.A

LUBRICATION SYSTEM B.60.A

STARTING SYSTEM B.80.A

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Safety rules

Personal safety



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

Throughout this manual and on machine decals, you will find the signal words DANGER, WARNING, and CAUTION followed by special instructions. These precautions are intended for the personal safety of you and those working with you.

Read and understand all the safety messages in this manual before you operate or service the machine.

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury. The color associated with DANGER is RED.

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury. The color associated with WARNING is ORANGE.

CAUTION, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. The color associated with CAUTION is YELLOW.

FAILURE TO FOLLOW DANGER, WARNING, AND CAUTION MESSAGES COULD RESULT IN DEATH OR SERIOUS INJURY.

Machine safety

NOTICE: *Notice indicates a situation which, if not avoided, could result in machine or property damage. The color associated with Notice is BLUE.*

Throughout this manual you will find the signal word Notice followed by special instructions to prevent machine or property damage. The word Notice is used to address practices not related to personal safety.

Information

NOTE: *Note indicates additional information which clarifies steps, procedures, or other information in this manual.*

Throughout this manual you will find the word Note followed by additional information about a step, procedure, or other information in the manual. The word Note is not intended to address personal safety or property damage.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Contents

INTRODUCTION

Foreword - Ecology and the environment 3
Safety rules 4
Basic instructions - Important notice regarding equipment servicing 5
Basic instructions - How To Use and Navigate Through This Manual 6
Basic instructions - Shop and Assembly 11
Torque - Minimum tightening torques for normal assembly 13

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 12 of 252 pages

The full manual includes:

- All 252 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Case IH F3BFE613A*A001, F3BFE613A*A002, F3BFE613B*A001, F3BFE613B*A002, F3BFE613C*A001, F3BFE613C*A002, F3BFE613D*A, F3BFE613E*A Service Manual



Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual