Maintenance


NOTE: *If passcodes are used, you must have an Administrator or Advanced level four digit passcode to enter the Maintenance screens. Contact your dealer for assistance.*

NOTICE: *Not all required machine maintenance is shown on the display. Refer to the Operator's manual to view all the required machine maintenance, maintenance schedule and maintenance procedures.*

Drive Chain Tension Check (SSL machines only)

- Service Interval Hours: **250 h**
- Time Until Service: hours remaining until service is due
- Action: Check

1. Press and hold the Enter key to reset the Time Until Service hours.
2. Press the arrow keys to move to the next maintenance interval.
3. Press the Return key to exit the Maintenance screen.

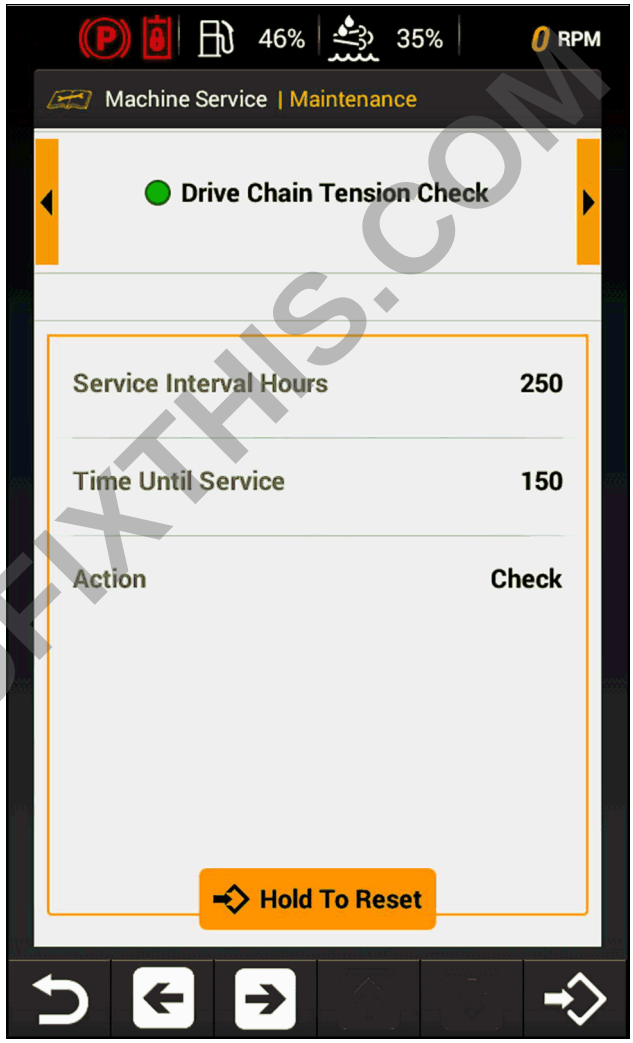

RAIL19SSL0356RA 1

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


Engine settings

NOTE: *If passcodes are used, you must have an Administrator or Advanced level four digit passcode to enter the Engine settings screens. Contact your dealer for assistance.*

1. Press the arrow keys ↑ ↓ to scroll between the following Engine settings.
   - Economy
   - Economy Timer
   - Engine Protection
   - Ignition Timeout
   - Ignition Timer
   - Regeneration Inhibit (if equipped)
2. Press the arrow keys ← → to highlight the On or Off setting or to adjust the number setting.
3. If prompted, press the Enter key ⇨ to save the setting.
4. Press the Return key ⮌ to exit the Engine settings screen.



RAIL19SSL0300RA 3

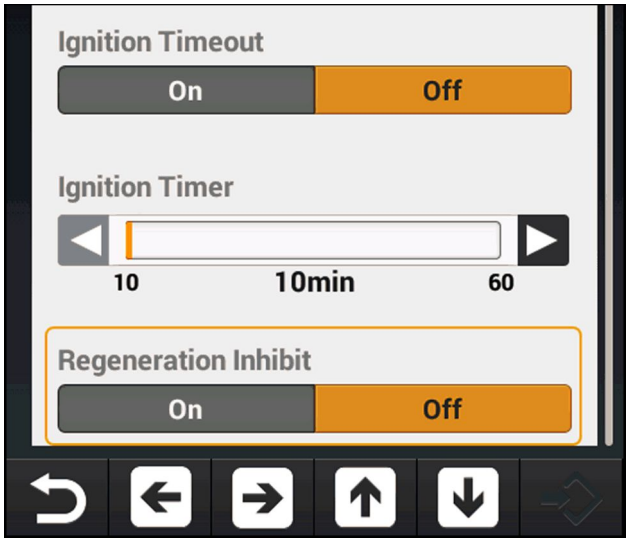

RAIL19SSL0299RA 4

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


Display navigation

A keypad is located on the bottom external border of the display.

Use this keypad to move from one screen to another, to choose various selections, to monitor the machine functions, and to retrieve information.

Follow any screen prompts when given and use the Enter key **(F)** to enter the selection. Use the Home key **(A)** to return to the Home screen. This will also lock the chosen selection into memory.

You can access all functions in the same basic manner.

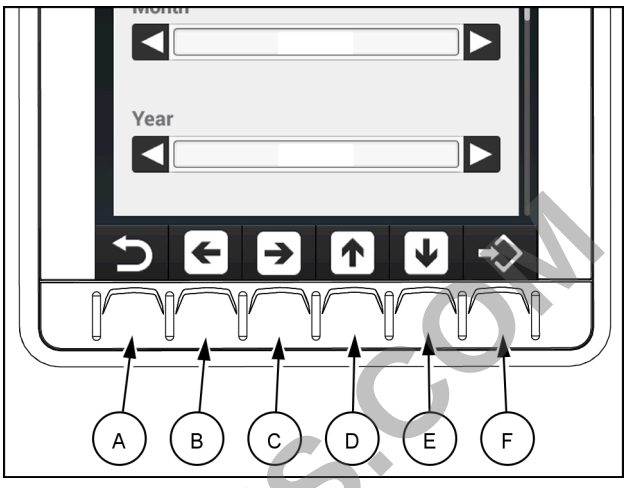

RAIL19SSL0077BA 1

	Icon	Description
(A)		Home key– When available, use this key to exit and return to the “Home” screen. Return key – When available, use this key anytime to start over and begin again or to exit a field. Reset key – When available, use this key to clear a passcode and start the passcode entry again.
(B)		Left arrow key – Use this key to scroll left to selections/screens.
(C)		Right arrow key – Use this key to scroll right to selections/screens.
(D)		Up arrow key – Use this key to scroll up to selections/screens.
(E)		Down arrow key – Use this key to scroll down to selections/screens.
(F)		Enter key – After selections have been highlighted, use the Enter key to confirm selections.


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Home screen – Icon identification

The LCD multi-function display will check each monitored system when you turn the key / knob switch to the ON position. All lights will illuminate, and the warning alarm will sound for **3 s**. At the end of this check all monitored systems will return to normal operation. If there is an open circuit between a sensor and the multifunction display on some circuits, the lights will flash and the warning alarm will sound for **5 s**.

Top section of the screen display (A)

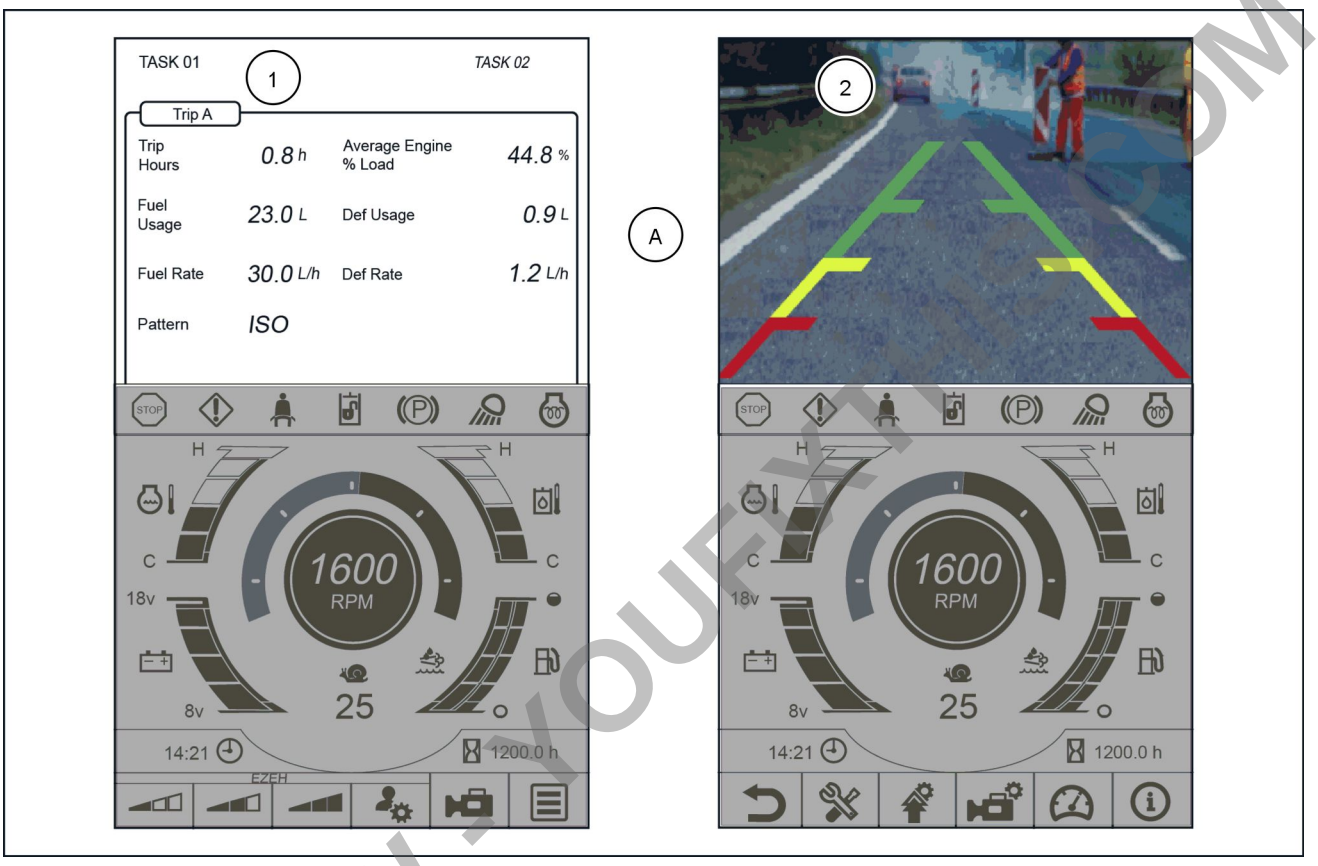

RAIL19SSL0123FA 1

The top section of the screen will display trip information **(1)** or the rear view camera screen **(2)** if selected. This part of the screen can be set per the operator's preference. The following attributes are shown if trip information is the operator's preference:

- Trip Hours
- Fuel Usage
- Fuel Rate
- Pattern – H or ISO control pattern (if applicable)
- Average Engine % Load
- DEF Usage (if applicable)
- DEF Rate (if applicable)

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Index

A

Air Cleaner Elements . . . 2-20
Auto Reverse setting . . . 2-5
Aux Override . . . 2-16

B

Blow By Re-Circulation System . . . 2-31

C

Camera Overlay setting . . . 2-6
Camera Settings . . . 2-5
Controller Information . . . 2-37
Crank Engine . . . 2-42
Create Passcode . . . 2-43
Creep Mode settings (if equipped) . . . 2-15
Current Passcode . . . 2-44

D

DEF Tank Filter & Sending Unit Filter . . . 2-27
Diagnostic History . . . 2-38
Diagnostic Trouble Codes . . . 2-38
Display, Universal Control Module (UCM), and Engine Control Module (ECM) information . . . 2-37
Display navigation . . . 1-8
Display settings . . . 2-11
Drive Chain Tension Check (SSL machines only) . . . 2-18

E

Economy . . . 2-9
Economy Timer . . . 2-9
EH Controls (if equipped) . . . 2-36
Engine . . . 2-34
Engine Cooling System Fluid . . . 2-33
Engine Oil & Filter . . . 2-21
Engine Protection . . . 2-9
Engine settings . . . 2-8
EZ-EH Custom settings (if equipped) . . . 2-14

F

Final Drive Chain Tank Oil (SSL machines only) . . . 2-26, 2-28
Final Drive Chain Tank Oil (SSL machines only) . . . 2-26, 2-28
Final Drive Oil (CTL machines only) . . . 2-22
Fuel Filter . . . 2-23
Fuel Pre-Filter . . . 2-19, 2-24
Fuel Pre-Filter . . . 2-19, 2-24

H

Home screen – Icon identification . . . 1-2
Hydraulic Fluid & Filter . . . 2-29
Hydraulic Oil Filter . . . 2-25
Hydraulics . . . 2-35

I

Ignition Timeout . . . 2-10
Ignition Timer . . . 2-10

L

LCD multi-function display . . . 1-1

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Final Drive Chain Tank Oil (SSL machines only)

- Service Interval Hours: **500 h**
- Time Until Service: hours remaining until service is due
- Action: Check

1. Press and hold the Enter key to reset the Time Until Service hours.
2. Press the arrow keys to move to the next maintenance interval.
3. Press the Return key to exit the Maintenance screen.

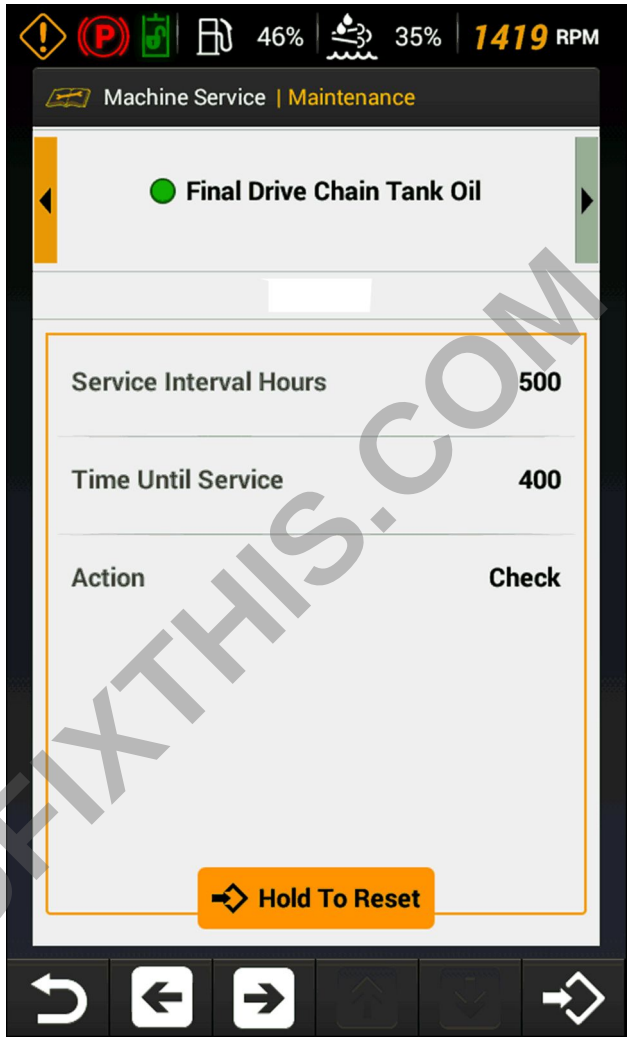

RAIL19SSL0284RA 9

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 7 of 62 pages

The full manual includes:

- All 62 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Case SRI75B, SR210B, SR240B, SR270B, SV185B, SV280B, SV340B, TR270B, TR310B, TR340B, TV370B, TV450B, SR175B Operator Manual



Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual