Specification for DX340LC

Edition 1

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

General Maintenance Procedures

Edition 1

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Standard Torques

Edition 1

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Hydraulic Schematic (DX340LC)

Edition 1

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Electrical Schematic (DX300LC/340LC)

Edition 1

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Table of Contents

Safety

Track Excavator Safety SP000014

Specifications

Specification for DX340LC SP000244

General Maintenance

General Maintenance Procedures SP000016
Standard Torques SP000017

Upper Structure

Cabin SP000018
Counterweight SP000019
Fuel Tank SP000277
Swing Bearing SP000022
Swing Reduction Gear SP000249

Lower Structure and Chassis

Track Assembly SP000024
Air Conditioner SP000025

Engine and Drive Train

Drive Coupling (Main Pump) SP000026

Hydraulics

Hydraulic System Troubleshooting, Testing and Adjustment SP000276
Accumulator SP000028
Center Joint (Swivel) SP000181
Cylinders SP000030

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

SAFETY PRECAUTIONS

CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that are in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

APPLICABLE MODELS

The contents of this section apply to the following models and serial number ranges.

MODEL	SERIAL NUMBER RANGE
DX300LC	5001 and Up
DX340LC	5001 and Up

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Swing Motor SP000261
Travel Motor SP000253
Main Pump SP000278
Gear Pump SP000260
Main Control Valve SP000034
Remote Control Valve (Work Lever / Joystick) SP000069
Travel Control Valve (With Damper) SP000070
Breaker EPPR Valve (Opt) SP000192
Hydraulic Schematic (DX340LC) SP000259

Electrical System

Electrical System SP000038
Electrical Schematic (DX300LC/340LC) SP000039

Attachments

Boom and Arm SP000040
Bucket SP000041

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

TOWING

Precautions When Towing

If any mistake is made in the method of selecting or inspecting the towing wire or in the method of towing, it may lead to serious personal injury. Always do the following:

- Always use the method of towing given in this Operation and Maintenance Manual. Do not use any other method.
- Use leather gloves when handling the wire rope.
- When carrying out the preparation work for towing with two or more workers, determine the signals to use and follow these signals correctly.
- Always fit the towing rope to the left and right hooks and secure in position.
- If the engine on the problem machine will not start or there is a failure in the brake system. always contact your *DOOSAN* distributor.
- Never go between the towing machine and the towed machine during the towing operation.
- It is dangerous to carry out towing on slopes, so select a place where the slope is gradual. If there is no place where the slope is gradual, carry out operations to reduce the angle of the slope before starting the towing operation.
- When towing a problem machine, always use a wire rope with a sufficient towing capacity.
- Do not use a frayed, kinked rope or a rope with any loss of diameter.
- Do not use the lightweight towing hook for towing another machine.

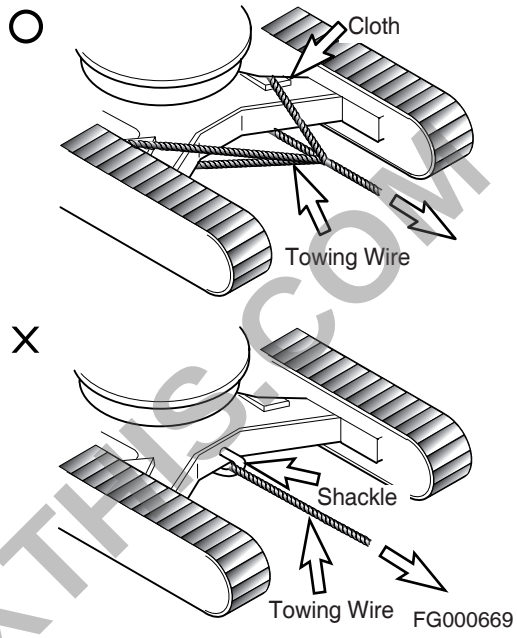


Figure 46

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

After inspection lightly coat the bearing and related parts with oil and wrap in a clean lintless cloth or paper and protect them from moisture and other foreign materials until installation.

It is also important to inspect the bearing housing and/or shaft for grooved, galled or burred conditions that indicate that the bearing has been turning in its housing or on its shaft.


If available, use magna-flux or similar process for checking for cracks that are not visible to the naked eye.

The following illustrations will aid in identifying and diagnosing some of the bearing related problems.

NOTE: *The illustrations will only show tapered roller bearings, but the principles of identifying, diagnosing and remedying the defects are common to all styles and types of bearings.*

Normal Bearing

Smooth even surfaces with no discoloration or marks.

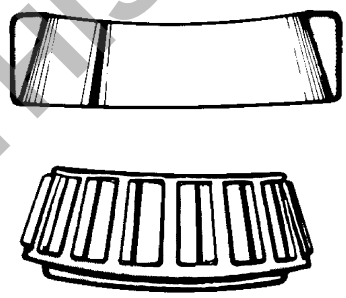


HASA620S

Figure 2

Bent Cage

Cage damage due to improper handling or tool usage.

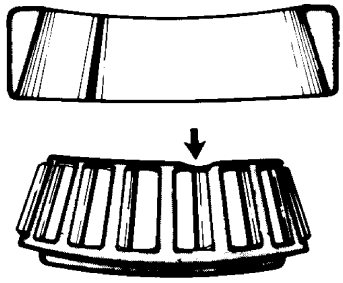

HASA460S

Figure 3

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

4. Erect the pin 2 above the pin hole (ø10) of the gear inserted carrier that the pin and the spring pin hole of the carrier are in the line, and push it with a hand or tap it with a hammer.

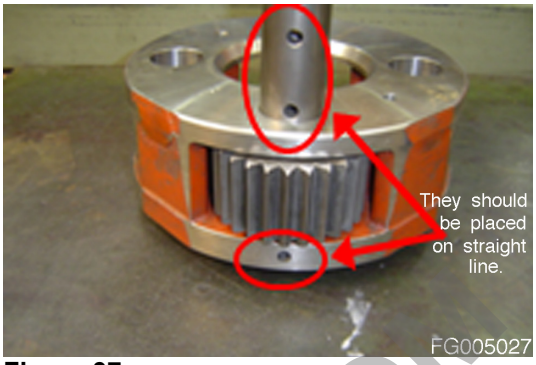


Figure 37



Figure 38

5. Assemble the remaining 3 parts in the same way.

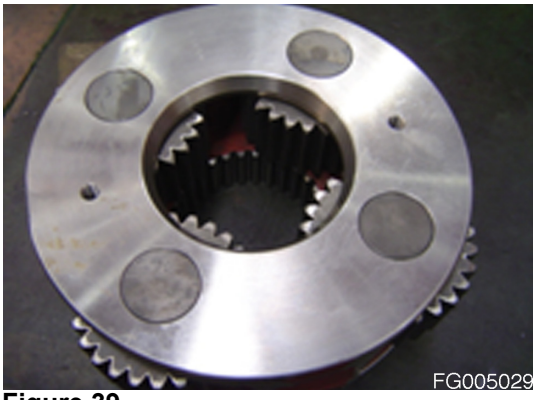


Figure 39

6. After the completion of assembling pins, erect the spring pin (ø10x25L) above the hole ø10 of the carrier, and push it inside with a hammer and then a caulking punch.



Figure 40

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

3. Do not over tighten connections when working on refrigerant system.
4. The new refrigerant system standards require new tools, equipment and parts. DO NOT attempt to use equipment use in servicing the old refrigerant system.
5. The new refrigerant oil (PAG type) has a high moisture absorption characteristic. When the refrigerant system vacuum seal has been broken, immediately plug up all openings to prevent moisture from entering into the system.
6. When joining unions which use O-ring seals, lightly coat O-rings with refrigerant oil. Be careful not to drip oil on the threads of the nut.
7. Be certain the O-rings are seated properly on the refrigerant line lip. Always use new O-rings when reassembling parts. Do not reuse old O-rings.
8. Use a vacuum pump to evacuate refrigerant system of air.
9. When charging the refrigerant system with the engine running, do not open the high-pressure valve on the manifold gauge as the reverse flow of high-pressure refrigerant will rupture the hose.
10. When releasing the high-pressure hose after completing the charging process, quickly disconnect the hose to minimize refrigerant released to the air.

Repair and Replacement Procedure

1. Work Procedure
   A. Before repairing or replacing any refrigerant components first, return all refrigerant oil to the compressor and perform recovery procedures.
2. Operating Condition
   A. Run engine at maximum engine speed.
   B. Select 'HI' blower fan speed and select A/C switch to 'ON'.
   C. Set the temperature control switch for maximum cooling and leave running for approximately 20 minutes.

      NOTE: *The manifold gauge dial pointer can vary depending on the outdoor temperatures.*

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

power mode selector at Power Mode and the work mode selector at digging mode:

- Unloaded maximum engine speed baseline test (all controls in neutral).
- Front pump test – operate "travel right" lever. Record values at all specified pressures.
- Rear pump test – operate "travel left" lever. Record values at all specified pressures.

Record the values for each of the three tests (neutral, travel right and travel left) at the following pump pressure levels, with travel speed control set at "high speed."

Engine RPM	Pressure	Flow
	100 kg/cm^2 (1,422 psi)	
	135 kg/cm^2 (1,930 psi)	
	180 kg/cm^2 (2,560 psi)	
	240 kg/cm^2 (3,413 psi)	
	320 kg/cm^2 (4,550 psi)*	
	*See below note.	

Compare recorded values with output shown in the P-Q curve in the specifications section of this book.


If test results do not measure up to specified values, pump output tests can be repeated using different control levers. Recheck front pump operation while stroking the bucket cylinder out lever, and the rear pump by actuating the swing control lever.

NOTE: *When testing bucket and swing functions, read maximum flow tests at 330 kg/cm^2 (4,785 psi), not 350 kg/cm^2 (5075 psi).*

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Dust Wiper Jig

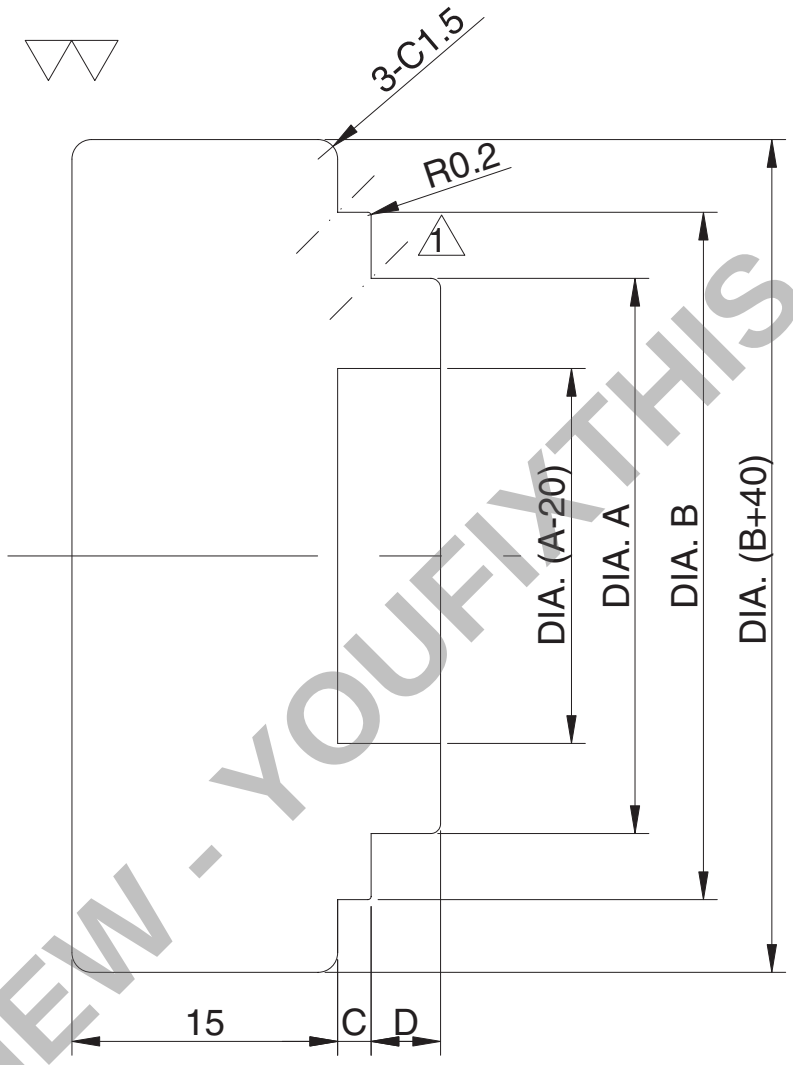

ARS4760L

Figure 9

Material: SM45C which is done thermal refining <QT> Hrc 22 - 28

Undefined Chamfer C/R = 0.5 Max.

1 Place: Finally work to used DNMG Tip <Nose R0.4>

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

4. Assemble anti-inversion valve set. Assemble anti-inversion valve set (34) and plug assembly (35) into rear cover (23) and tighten them with L wrench.

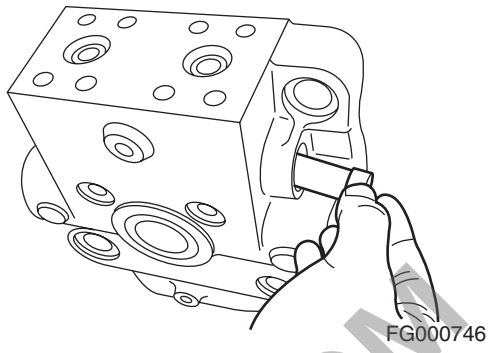


Figure 68

5. Assemble two relief valve assemblies (30) into rear cover (23) with torque wrench. (Left and right symmetrically.)

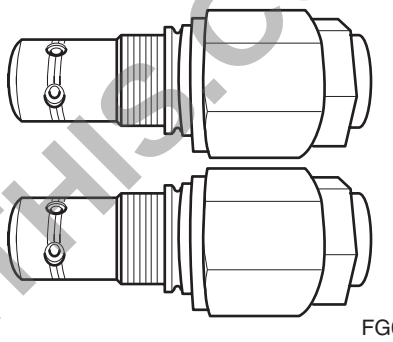


Figure 69



Figure 70

6. Coat valve plate (20) with grease and attach it to rear cover (23).

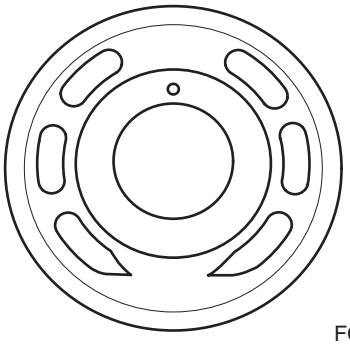


Figure 71

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

2. Install pin (451).



Figure 57

3. Install needle bearing (103) (if assembling it newly) if removed during disassembly.



Figure 58

Assembly of Valve Casing Subassembly

1. Assemble seat (541), steel ball (543), stopper (542), and plug (569).

   NOTE: *Be careful of assembly direction of seat and stopper.*

   NOTE: *Tightening torque for plug (569): 370kgf•cm.*

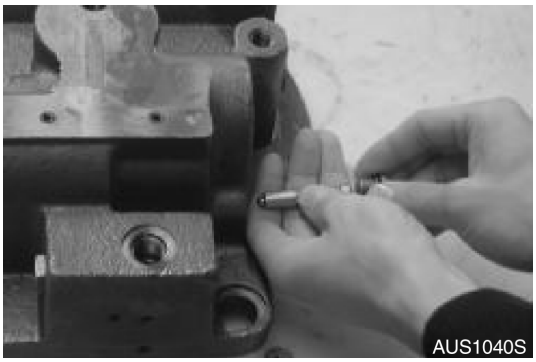


Figure 59

2. Assemble counterbalance spool (360), washer (361), and counterbalance spring (362).


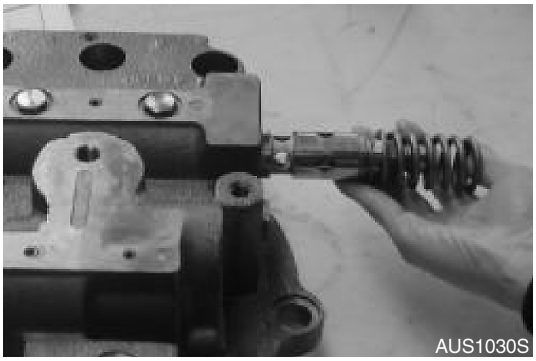


Figure 60

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


REMOVE AUXILIARY DRIVE (ROTATING GROUP)

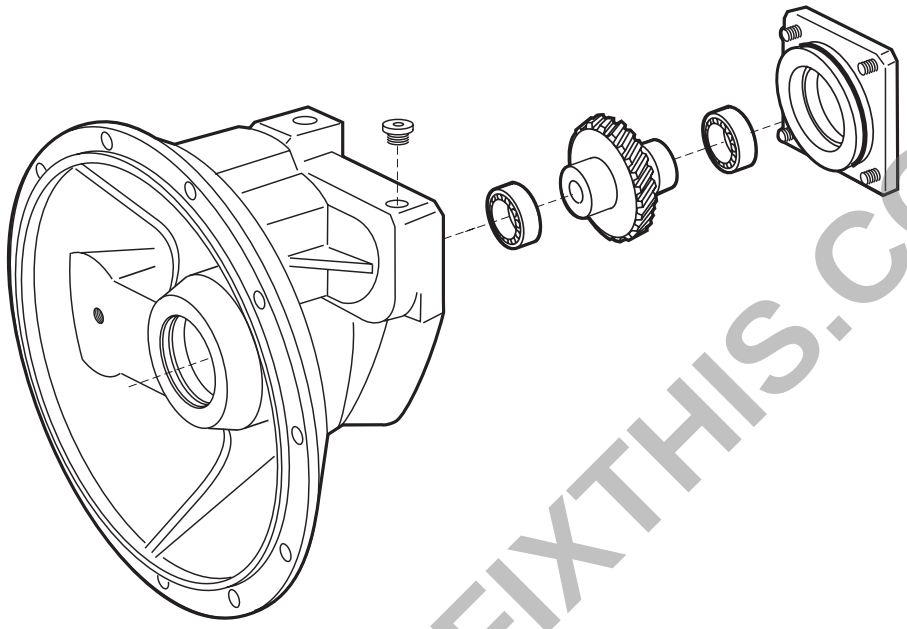

ASS0560L

Figure 52


1. Remove screws and auxiliary drive.

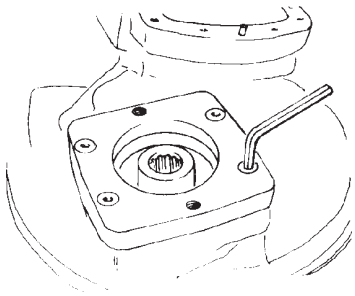

ASS0570L

Figure 53

2. Press off bearing cap.

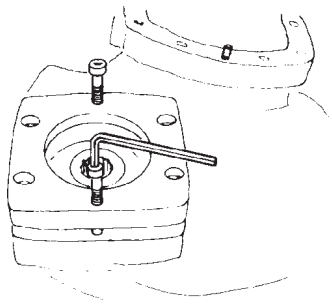

ASS0580L

Figure 54

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

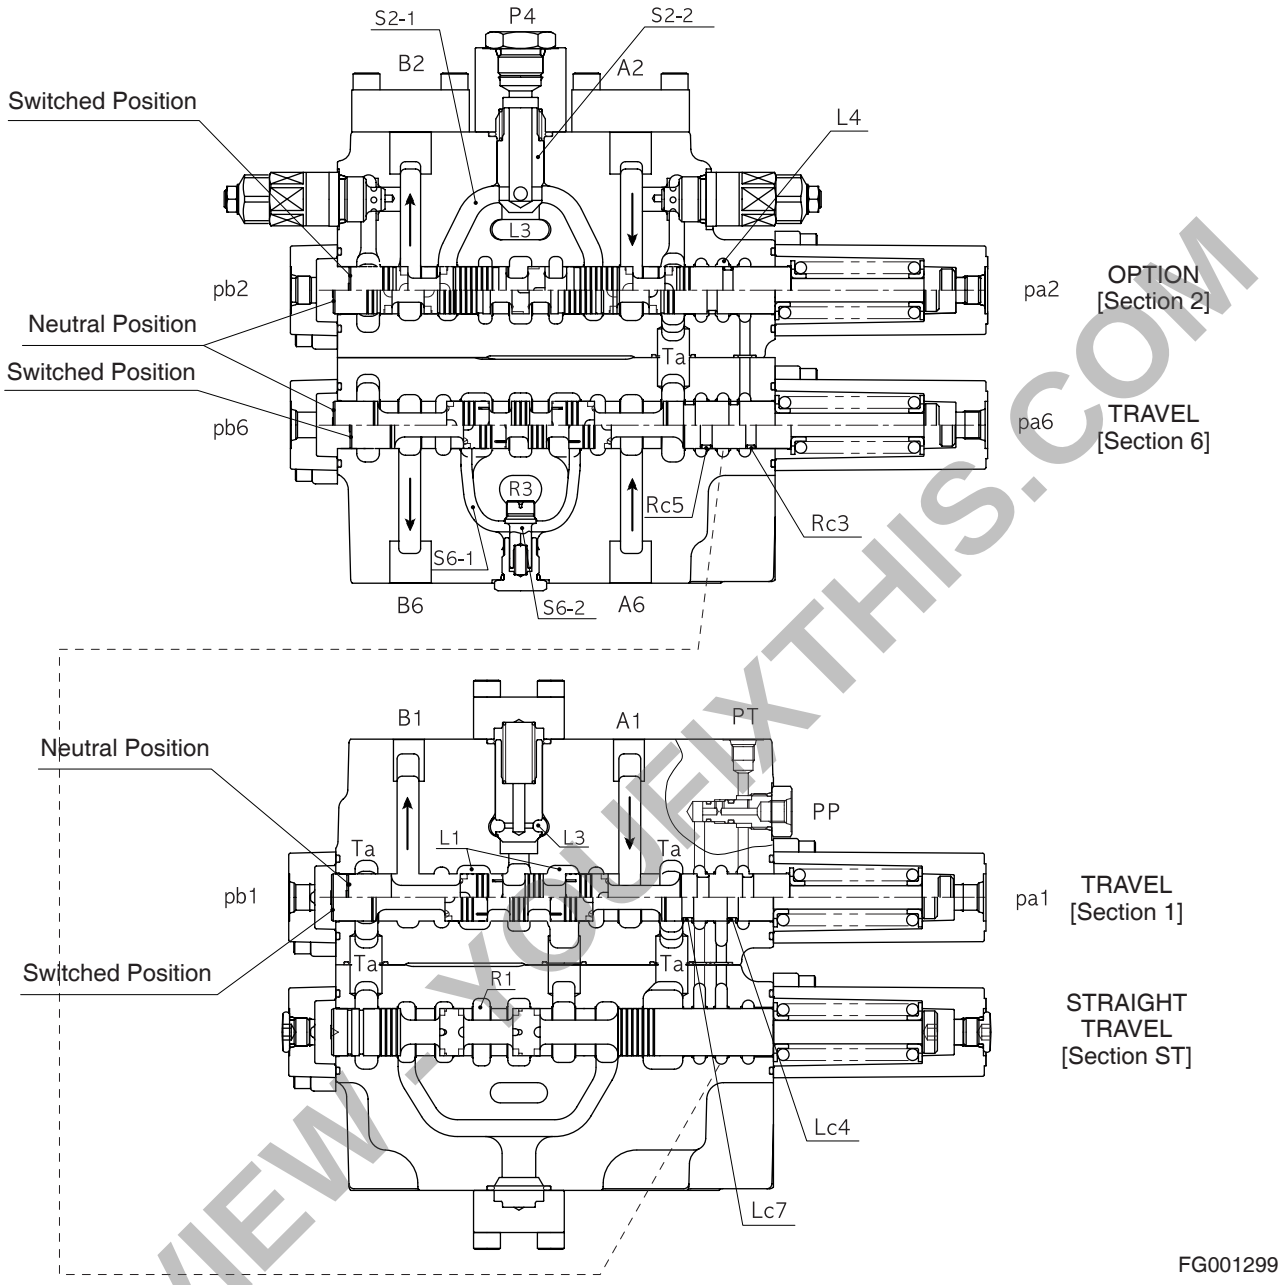


Figure 5

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Sequence of Subassembly

CAUTION!

Check number of each part, installation position and tools needed before reassembling.

Spool Assembly (Main Spool)

1. Apply Loctite to threaded portion of spool (2-6 and 14-17) and install spring seat, spring and spool end.
2. After gripping spool in vise with wood (that is used when disassembling it), tighten spool end. Tightening torque: 2.04 - 2.24 kg•m (15 - 16 ft lb).

CAUTION!

Be careful not to get Loctite into spool by over applying it.

Be careful that spool operation does become deteriorated by over torquing spool end.

When reassembling it and A56, be careful because there are two different types of springs.

Arm 1 Para-turn Spool Assembly

1. Apply Loctite to threaded portion of spool (19) and install spring seat (20), spring (21) and spool end (22).
2. After gripping spool in vise with wood (that is used when disassembling it), tighten spool end. Tightening torque: 1.94 - 2.24 kg•m (14 - 16 ft lb).

CAUTION!

Be careful not to get Loctite into spool by over applying it.

Be careful that spool operation does become deteriorated by over torquing spool end.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

DISASSEMBLY

1. Remove bellows (33).

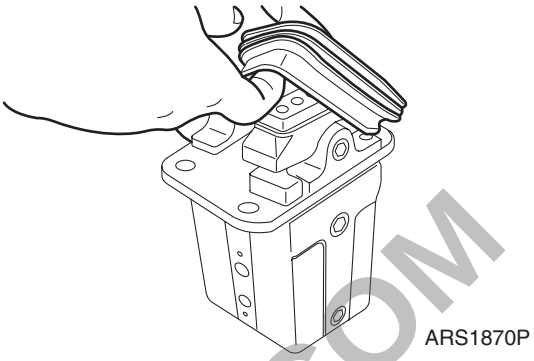


Figure 8

2. Remove set screw (30) from cam (27).

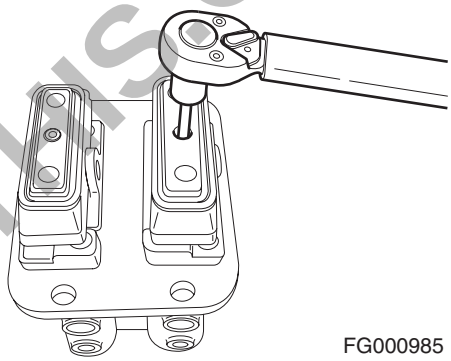


Figure 9

3. Remove cam shaft (29) and cover (25) from cam (27).

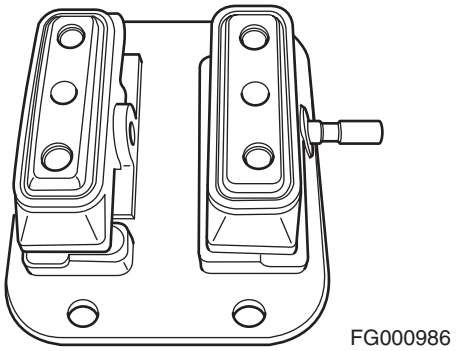


Figure 10

4. Remove hex nut (32) and swash plate (31) from cam.

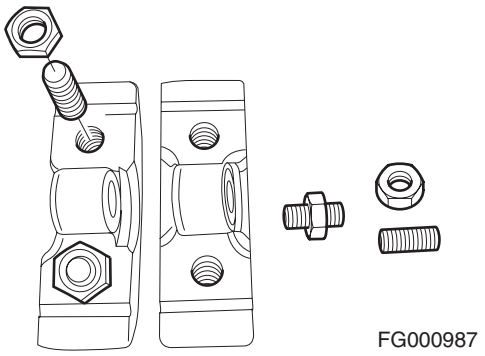


Figure 11

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Start Operation


When the starter switch is turned to the "START" position, the "S" and "E" terminals of the starter controller (7) are connected. At this time the contacts in the starter relay (8) are closed by the current flow from the battery (1) → fusible link (3) → fuse box (6) → "B" terminal of starter switch (5) → "C" terminal of starter switch (5) → "30" terminal of starter relay (12) - "87a" terminal → "C" terminal of starter relay (8) - "D" terminal → "S" terminal of starter controller (7) - "E" terminal → ground.

When the contact point "B" and "PP" of starter relay (8) are connected, the pinion gear of the starter (9) is pushed forward and makes contact with the ring gear of the flywheel and the internal contacts of the starter are connected. The current flows from the battery (1) → "A" terminal of the battery relay (2) → "B" terminal of the battery relay (2, Figure 3) → "B" terminal of the starter (9). The starter motor is rotated and the engine is started.

If the instrument panel has the password function activated , input number should match the set number, otherwise the start circuit closes and the engine does not start.

NOTE: *If the security system is "LOCKED," a four-digit password will be required to start the engine. If the system is "UNLOCKED," no password will be required and this display screen will not appear.*

In the event the security system is locked, current flows from battery (1) → fusible link (3) → fuse box (6) → "B" terminal of starter switch (5) → "ACC" terminal of starter switch (5) → "86" terminal of starter relay (12) → "85" terminal of starter relay (12) → "CN1-15" terminal of e-EPOS (13) → ground. This current flow causes the coil in starter relay (12) to be activated, opening contacts at "87a" terminal. This prevents starter relay (8) from functioning.

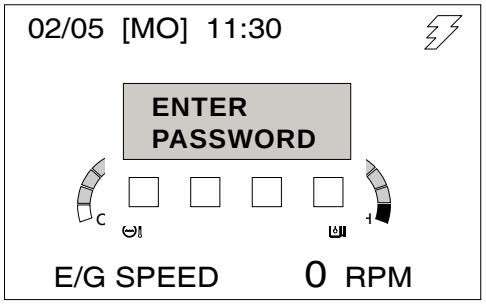

FG001445

Figure 2

PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

POWER MODE CONTROL

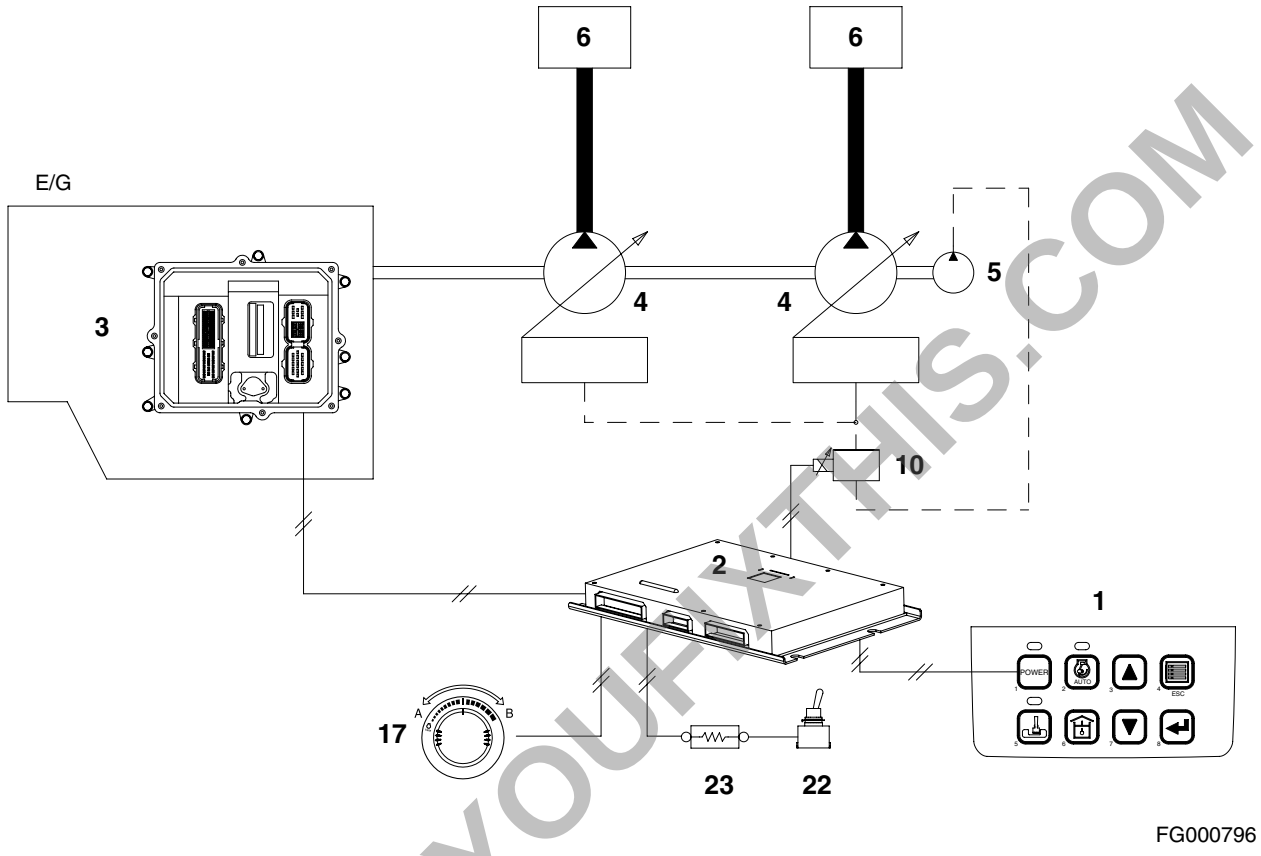


Figure 51

Reference Number	Description
1	Instrument Panel (Power Mode Selector Switch)
2	e-EPOS Controller
3	Engine Controller (ECU)
4	Main Pump
5	Aux Pump
6	Control Valve

Reference Number	Description
10	Electromagnetic Proportional Pressure Reducing Valve (Mode Control)
17	Engine Control Dial
22	Aux Mode Switch
23	Aux Mode Resistor

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


Error codes

Code	Description
E0	Normal
E1	Internal air temperature sensor short
E2	Internal air temperature sensor open
E3	Ambient air temperature sensor short
E4	Ambient air temperature sensor open
E5	Duct sensor short
E6	Duct sensor open
E7	Sun sensor short
E8	Sun sensor open
E9	Water temperature sensor short
E10	Water temperature sensor open
E11	D.P.S open
E12	Position error of wind direction actuator
E13	Position error of temperature control actuator

NOTE: *The position error means that it fails to move to designated place in 40 seconds.*

Sun sensor displays E8 in case of no sunlight.

2 and more fails: Codes concerned blinks twice at a time.

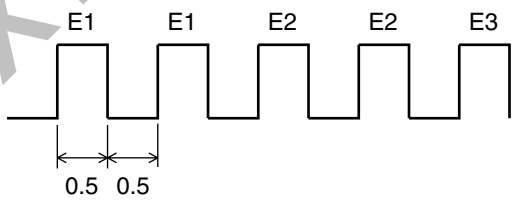

FG001067

Figure 90

Ambient Temperature Display

Selection of both the SEL and MODE switch for more than 3 seconds indicates the ambient temperature in the set temperature display department.

- Range of temperature display: -40 - +60°C

NOTE: *Display of ambient temperature may be released in the same way for its entry way.*

It returns automatically to default mode 5 seconds after entering the ambient air temperature display mode.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 25 of 840 pages

The full manual includes:

- All 840 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Doosan DX340LC, DX300LC Shop Manual

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual