Ref. No.	Part No.	Part Name	No. Req.
1	6H46E	U-Bolt	2
	653010	Hexagon Nut - 3/8	4
	654006	Plain Washer - 3/8	2
	654026	Lock Washer - 3/8	4
2	6H51B[A]	Conveyor Rest (Used before Serial #35001)	1
	042217	Conveyor Rest (Used after Serial #35000)	1
	650122	Hex. Hd. Cap Screw 1/2 x 3-1/4	2
	653077	Hexagon Lock Nut - 1/2	2
	654009	Plain Washer - 1/2	2
3	17H136A	Main Frame	1
	655013	Cotter Pin 1/8 x 2	2
	650060	Hex. Hd. Cap Screw 3/8 x 1	4
	650062	Hex. Hd. Cap Screw 3/8 x 1-1/4	5
	650106	Hex. Hd. Cap Screw 1/2 x 1-1/4	6
	653010	Hexagon Nut - 3/8	9
	653018	Hexagon Nut - 1/2	6
	653090	Castellated Nut - 7/8 N.F.	2
	654006	Plain Washer - 3/8	19
	654015	Plain Washer - 7/8	2
	654026	Lock Washer - 3/8	9
	654030	Lock Washer - 1/2	6
4	17H159A[B]	Mixer Tank Support - Side (Used before Serial #35001)	2
	042066	Mixer Tank Support - Side (Used after Serial #35000	2
	650031	Hex. Hd. Cap Screw 5/16 x 1-1/2	1
	650060	Hex. Hd. Cap Screw 3/8 x 1	4
	650062	Hex. Hd. Cap Screw 3/8 x 1-1/4	4
	653010	Hexagon Nut - 3/8	10
	653073	Hexagon Lock Nut - 5/16	1
	654004	Plain Washer - 5/16	1
	654006	Plain Washer - 3/8	6
	654026	Lock Washer - 3/8	10
5	17H160A	Mixer Tank Support - Front (Used before Serial #35001)	1
	042064	Mixer Tank Support - Front (Used after Serial #35000)	1
	650060	Hex. Hd. Cap Screw 3/8 x 1	2
	650062	Hex. Hd. Cap Screw 3/8 x 1-1/4	2
	653010	Hexagon Nut - 3/8	2
	654006	Plain Washer - 3/8	3
	654026	Lock Washer - 3/8	2
6	6H173	Conveyor Post (Used before Serial #35001)	1
	042215	Conveyor Post (Used after Serial #35000)	1
7	6H175	Conveyor Hold-Down Spring	1
8	6H176	Hold-Down Spring Hook	1
9	6H179	Conveyor Post Brace (Used before Serial #35001)	1
	042221	Conveyor Post Brace (Used after Serial #35000)	1
	650119	Hex. Hd. Cap Screw 1/2 x 2-3/4	1
	653018	Hexagon Nut - 1/2	1
	654030	Lock Washer - 1/2	1
10	17H275A	Drawbar Hitch - Upper (Used before Serial #20551)	1
	R13139A	Drawbar Hitch - Upper (Used after Serial #20550)	1
	650142	Hex. Hd. Cap Screw 5/8 x 1-1/2	2
	653080	Hexagon Lock Nut - 5/8	2
11	17H331	Screen Bracket	1
	650060	Hex. Hd. Cap Screw 3/8 x 1	3
	650062	Hex. Hd. Cap Screw 3/8 x 1-1/4	1
	653010	Hexagon Nut - 3/8	4
	654006	Plain Washer - 3/8	2
	654026	Lock Washer - 3/8	4
12	17H332	Screen Clamp	1
13	17H340[C]	Drawbar Hitch - Lower (Used before Serial #16051)	1
	R13140A	Drawbar Hitch - Lower (Used after Serial #16050 and before Serial #20551)	1
	17H340A	Drawbar Hitch - Lower (Used after Serial #20550)	1
14	17H341[D]	Universal Drive Rest (Used before Serial #15301)	1
15	17H362	Screen Retainer	1
16	17H392	Grease Tube (Used after Serial #21375 and before Serial #38001)	1
17	D9117	Washer	6
18	R13033D[E]	Hitch Jack	1
19	042826	Transmission Shim Washer (Used after Serial #38000)	3
20	044413	Grease Fitting Bracket (Used after Serial #38000)	1
	57 06	Grease Fitting	1
	650028	Hex. Hd. Cap Screw 5/16 x 1	2
	653007	Hexagon Nut - 5/16	2
	654004	Plain Washer - 5/16	2
	654024	Lock Washer - 5/16	2
21	520025	Bearing Cup	4
22	520027	Bearing Cone	2
23	520028	Bearing Cone	2
24	550002	Wheel Hub. (Includes two 520025)	2
25	550018	Dust Cap.	2
26	550022	Grease Seal.	2
27	550033	Drop Center Wheel (For 15" tires)	2
28	550041	Wheel Bolt	12
29	580073	Male Tube Connector (Used after Serial #21375 and before Serial #38001)	1
30	620005	Retaining Ring	1
31	620028	Conveyor Rest Grommet	6
32	660033	Pipe Nipple (Used after Serial #38000)	1


[A] For Replacement, Order 042217.
[B] For Replacement, Order 042066.
[C] For Replacement, Order R13140A.
[D] For Replacement, Order 17H275A.
[E] To Service Jack Latch, Order Latch Service Kit #620009.

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

65MX - FRAME

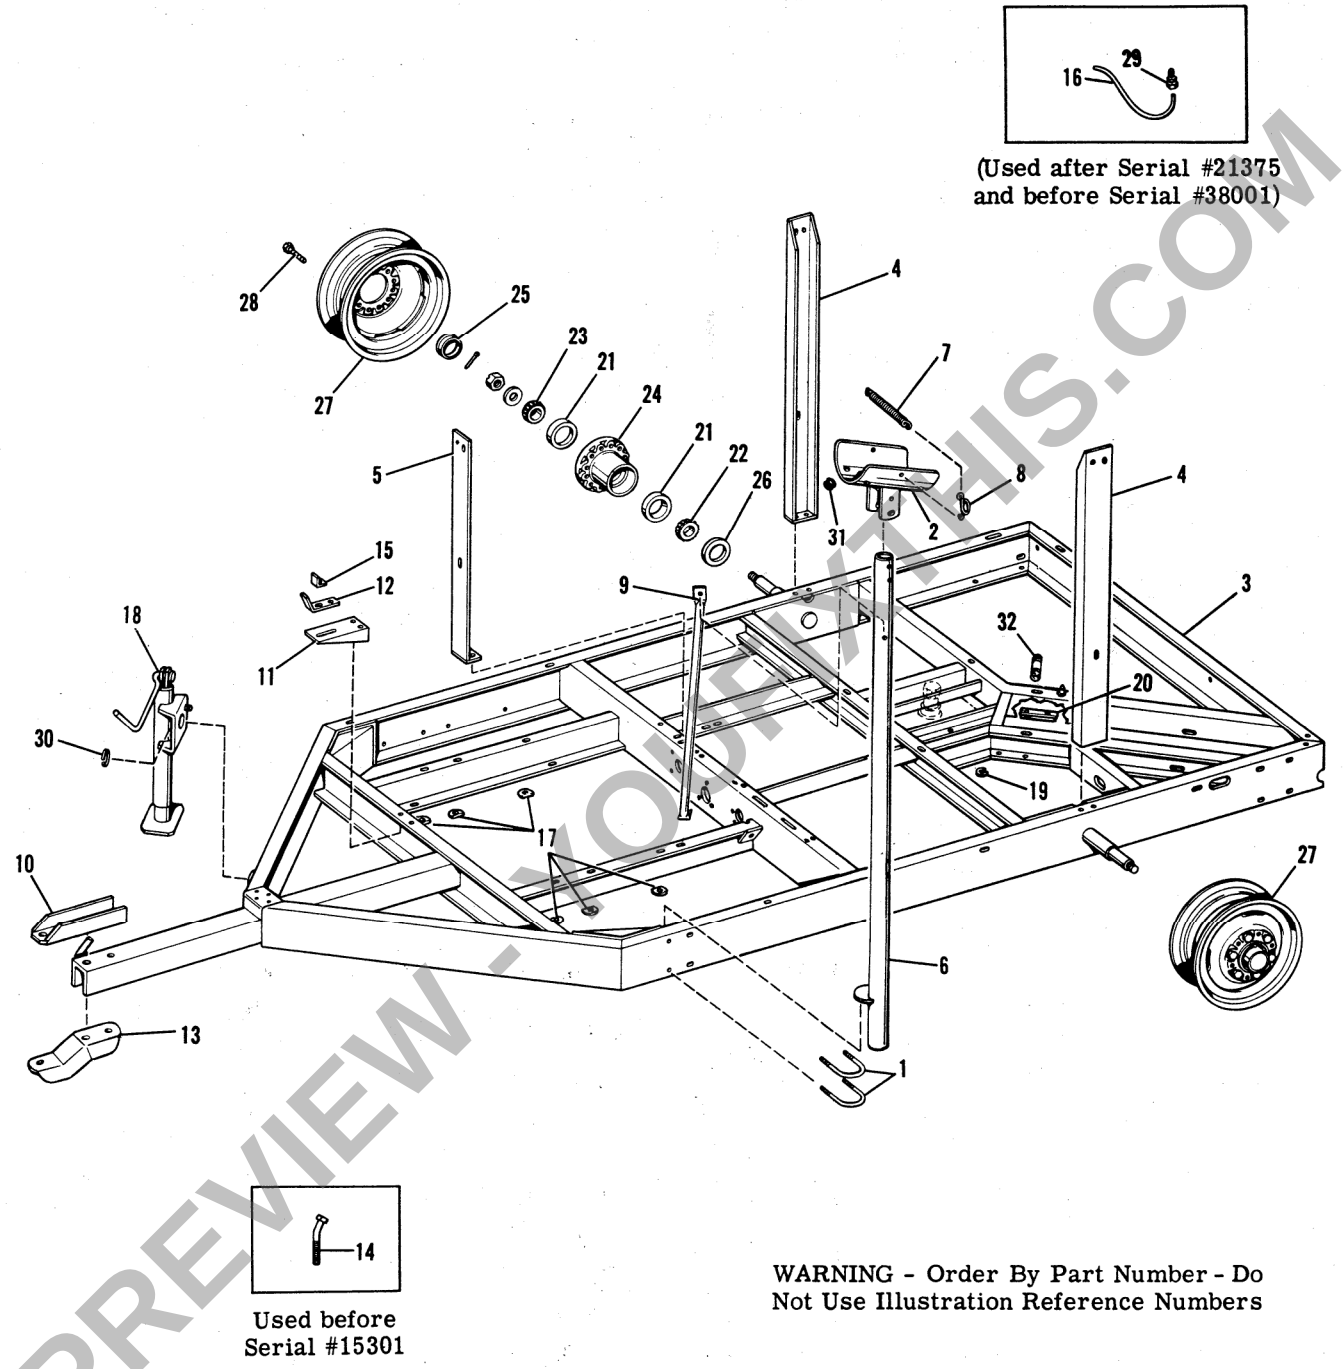

WARNING - Order By Part Number - Do Not Use Illustration Reference Numbers

PREVIEW - YOUFIXTHIS.COM

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

Download full manual at youfixthis.com

Ref. No.	Part No.	Part Name	No. Req.
1	6H1L	Dust Collector	1
2	6H14D	Dust Collector Elbow	1
	650005	Hex. Hd. Cap Screw 1/4 x 3/4	8
	653005	Hexagon Nut - 1/4	8
	654002	Plain Washer - 1/4	16
	654022	Lock Washer - 1/4	8
3	3H55A	Mixer Auger Shim (Used before Serial #25132)	5
4	7K73	Washer	4
5	6H90C	Blower Pipe (29") (Used before Serial #35001)	1
6	6H129	Attachment Clamp	1
	650036	Hex. Hd. Cap Screw 5/16 x 2	1
	653007	Hexagon Nut - 5/16	2
7	17H147A[A]	Mixer Tank (Used before Serial #25132)	1
	17H147C	Mixer Tank (Used after Serial #25131 and before Serial #35001)	1
	042233	Mixer Tank (Used after Serial #35000)	1
	650062	Hex. Hd. Cap Screw 3/8 x 1-1/4	5
	653007	Hexagon Nut - 5/16	2
	653010	Hexagon Nut - 3/8	5
	653094	Wing Nut - 5/16	4
	654004	Plain Washer - 5/16	4
	654006	Plain Washer - 3/8	10
	654026	Lock Washer - 3/8	5
8	17H148B	Discharge Conveyor (Used before Serial #35001)	1
	655507	Woodruff Key 5/16 x 1	1
	655020	Cotter Pin 3/16 x 1-1/2	2
	042218	Discharge Conveyor (Used after Serial #35000 and before Serial #38001)	1
	655507	Woodruff Key 5/16 x 1	1
	655020	Cotter Pin 3/16 x 1-1/2	2
	044508	Discharge Conveyor (Used after Serial #38000)	1
	655507	Woodruff Key 5/16 x 1	1
9	17H150	Mixer Cover - Front	1
	650003	Hex. Hd. Cap Screw 1/4 x 5/8	12
	653005	Hexagon Nut - 1/4	12
	653007	Hexagon Nut - 5/16	1
	654002	Plain Washer - 1/4	12
	654022	Lock Washer - 1/4	12
	654024	Lock Washer - 5/16	1
10	17H151	Mixer Cover - Center	1
	650003	Hex. Hd. Cap Screw 1/4 x 5/8	10
	653005	Hexagon Nut - 1/4	10
	654002	Plain Washer - 1/4	10
	654022	Lock Washer - 1/4	10
11	17H152[B]	Mixer Cover - Rear (Used before Serial #18301)	1
	17H152A	Mixer Cover - Rear (Used after Serial #18300)	1
	650003	Hex. Hd. Cap Screw 1/4 x 5/8	11
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	3
	650028	Hex. Hd. Cap Screw 5/16 x 1	2
	650267	Truss Head Screw 5/16 x 5/8	1
	653005	Hexagon Nut - 1/4	11
	653007	Hexagon Nut - 5/16	7
	654002	Plain Washer - 1/4	11
	654004	Plain Washer - 5/16	5
	654022	Lock Washer - 1/4	12
	654024	Lock Washer - 5/16	6
12	17H153B	Mixer Auger (Includes two 17H154A and one 17H274A) (Used before Serial #25132)	1
	17H153C	Mixer Auger (Includes two 17H154A and one 17H274A) (Used after Serial #25131 and before Serial #38001)	1
13	17H154A	Mixer Paddle	2
14	17H155	Mixer Tube	1
	650028	Hex. Hd. Cap Screw 5/16 x 1	4
	653006	Hexagon Nut - 5/16	4
	654024	Lock Washer - 5/16	4
15	17H156	Mixer Tube Guide	3
	655008	Cotter Pin 1/8 x 1-1/4	3
	653018	Hexagon Nut - 1/2	6
	654030	Lock Washer - 1/2	3
16	17H157B	Shut-Off Slide	1
17	17H158A	Mixer Cover Lid (Used before Serial #18301)	1
	17H158B	Mixer Cover Lid (Used after Serial #18300)	1
18	17H161	Mixer Cover Clip	2
	653007	Hexagon Nut - 5/16	1
	654024	Lock Washer - 5/16	1
19	17H162[C]	Clean-Out Cover (Used before Serial #18301)	1
	17H162A	Clean-Out Cover (Used after Serial #18300 and before Serial #38001)	1
	040316	Clean-Out Cover (Used after Serial #38000)	1
20	17H163A	Auger Seal	1
21	17H164A	Inspection Window	7
22	6H177	Conveyor Hanger Arm (Used before Serial #35001)	1
	042211	Conveyor Hanger Arm (Used after Serial #35000 and before Serial #38001)	1
	044397	Conveyor Hanger Arm (Used after Serial #38000)	1
23	17H177A	Concentrate Hopper	1
	650028	Hex. Hd. Cap Screw 5/16 x 1	4
	650062	Hex. Hd. Cap Screw 3/8 x 1-1/4	3
	653007	Hexagon Nut - 5/16	4
	653010	Hexagon Nut - 3/8	3
	654004	Plain Washer - 5/16	2
	654006	Plain Washer - 3/8	9
	654024	Lock Washer - 5/16	4
	654026	Lock Washer - 3/8	3
24	17H178A	Hopper Guard (Used before Serial #17551)	1
	17H178B	Hopper Guard (Used after Serial #17550)	1
25	17H179A	Hopper Guard Clip	2
	650023	Hex. Hd. Cap Screw 5/16 x 5/8	2
	653007	Hexagon Nut - 5/16	2
	654004	Plain Washer - 5/16	2
	654024	Lock Washer - 5/16	2
26	17H180A	Hopper Guard Catch	1
	650023	Hex. Hd. Cap Screw 5/16 x 5/8	1
	653073	Hexagon Lock Nut - 5/16	1
27	17H181A	Concentrate Hopper Cover	1


PARTS LIST CONTINUED ON NEXT PAGE

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

65MX - TANK AND HOPPER

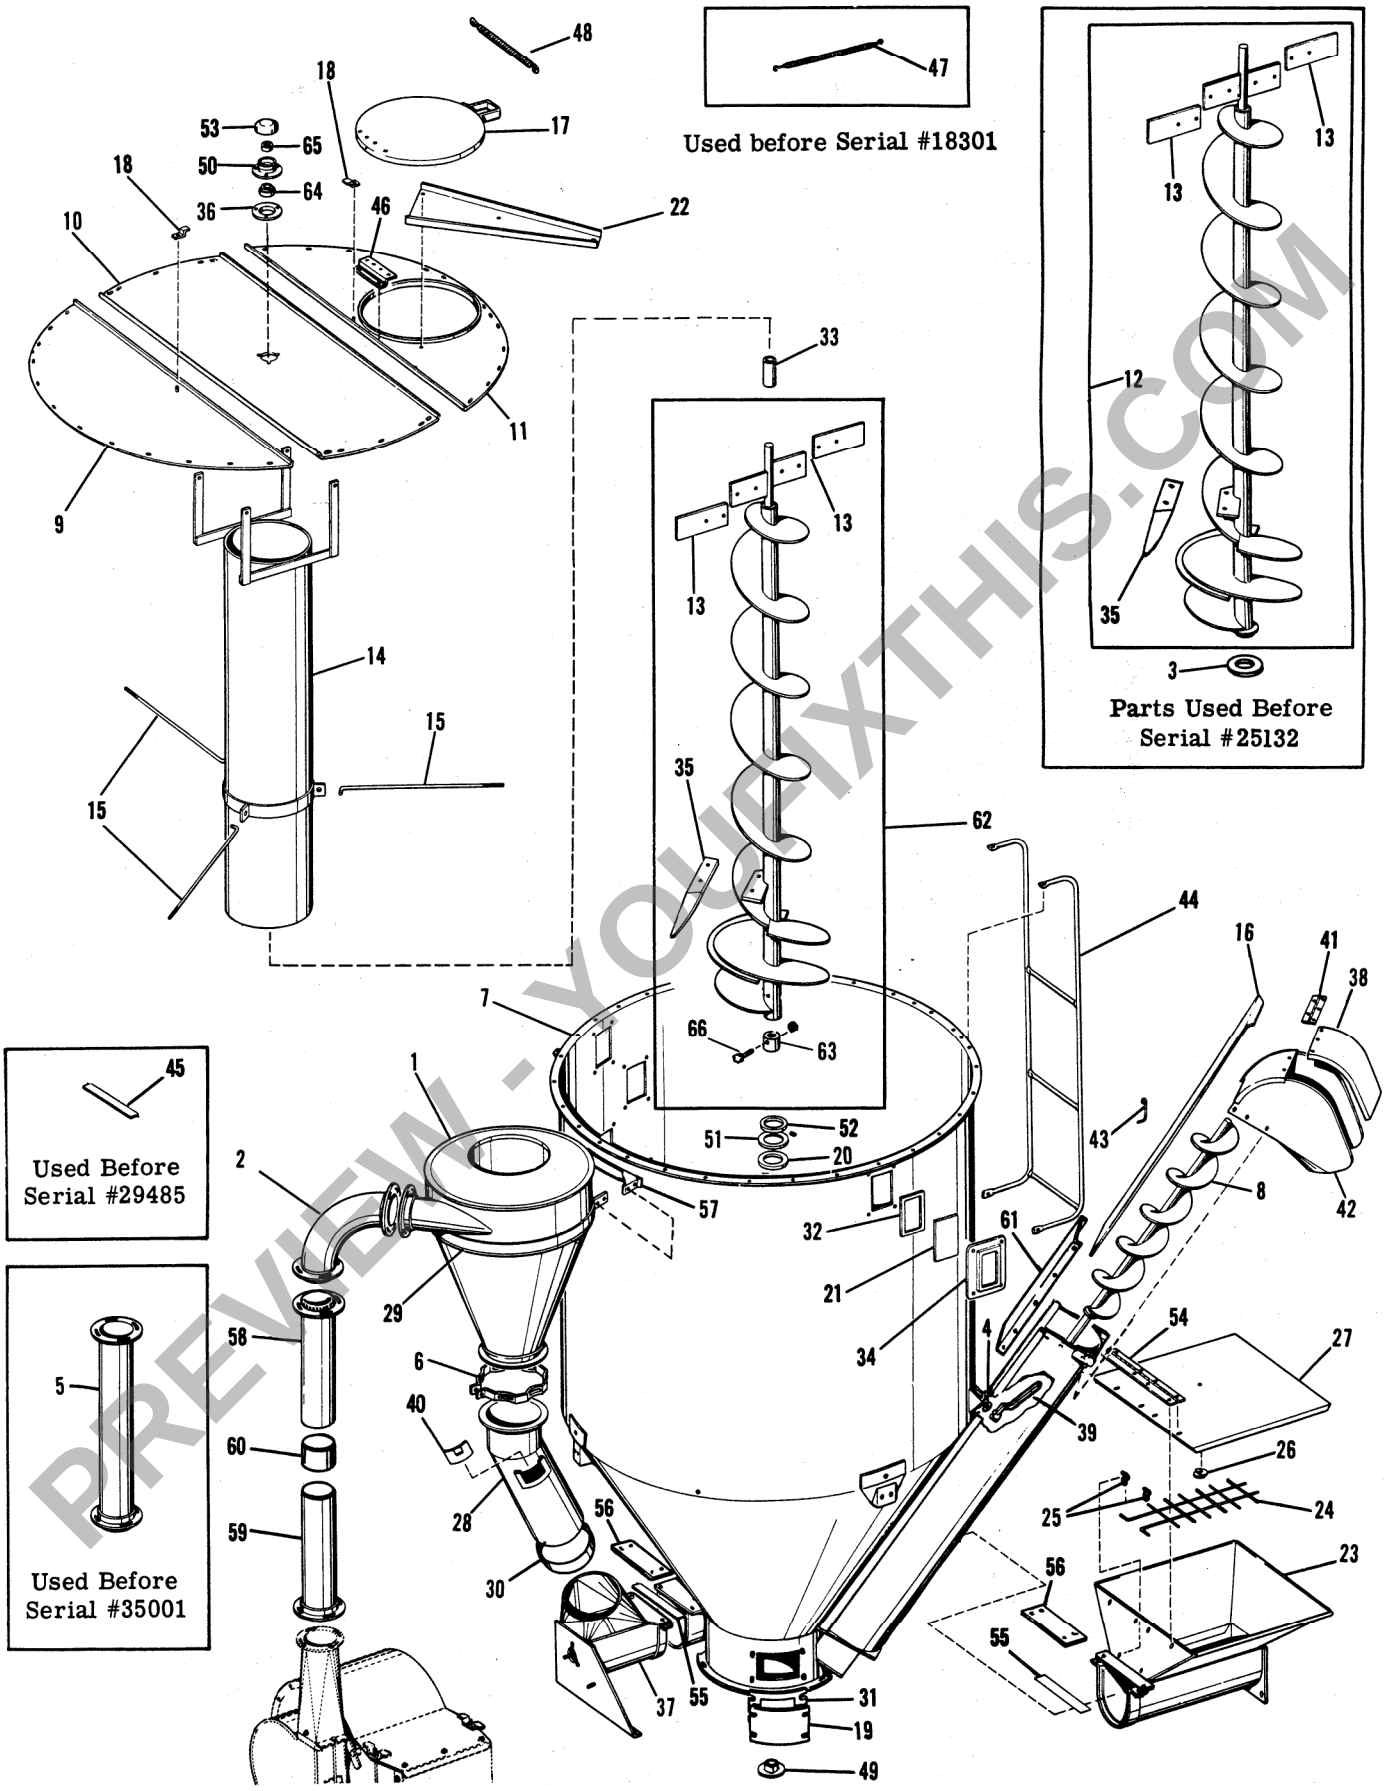

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com


65MX - TRANSMISSION

Ref. No.	Part No.	Part Name	No. Req.
1	4H42	Set Collar	1
	650216	Soc. Hd. Set Screw 3/8 x 3/4	1
2	7H73	Shim Washer	As Req.
3	17H137B	Transmission Assembled (Used before Serial #38001)	1
4	17H138A	Transmission Housing	1
	570016	Relief Fitting	1
	660001	Pipe Plug - 1/8	1
5	17H139	Mixer Drive Shaft - 1-3/8 x 10-13/32 (Used before Serial #38001)	1
	655507	Woodruff Key 5/16 x 1	1
6	17H141B	Transmission Drive Shaft	1
	655507	Woodruff Key 5/16 x 1	2
7	17H142A	Transmission Gear (14 T) (Three required before Serial #38001)	2
8	17H143A	Conveyor Drive Shaft 1 x 8-3/8	1
	655507	Woodruff Key 5/16 x 1	2
	655019	Cotter Pin 3/16 x 1-1/2	1
9	17H144	Conveyor Shaft Bearing (Includes two 17H238)	1
	650025	Hex. Hd. Cap Screw 5/16 x 3/4	4
	654024	Lock Washer - 5/16	4
10	17H145	Transmission Cover	1
	650023	Hex. Hd. Cap Screw 5/16 x 5/8.	4
	654024	Lock Washer - 5/16	4
11	17H146	Gear Spacer	1
12	17H238	Bearing Bushing	2
13	D932A	Washer	1
14	041129	Bearing Cover (Used after Serial #28875)	1
	650003	Hex. Hd. Cap Screw 1/4 x 5/8	3
	654022	Lock Washer - 1/4	3
15	041131	Cover Gasket (Used after Serial #28875)	1
16	041132	Bearing Cover Gasket (Used after Serial #28875)	1
17	043883	Retaining Ring (Used after Serial #38000)	2
18	044110	Retaining Ring (Used after Serial #38000)	2
19	044500	Transmission Drive Gear (14 T) (Used after Serial #38000)	1
20	044594	Transmission Assembled (Used after Serial #38000)	1
	652012	Hex. Hd. Machine Bolt 1/2 x 6-1/2	3
	653018	Hexagon Nut - 1/2	3
	654009	Plain Washer - 1/2	3
	654030	Lock Washer - 1/2	3
21	044596	Mixer Drive Shaft - 1-3/8 x 10-13/32 (Used after Serial #38000)	1
	655021	Cotter Pin 3/16 x 1-3/4	1
	655507	Woodruff Key 5/16 x 1	1
22	044645	Gear Spacer (Used after Serial #38000)	1
23	520000	Lock Nut	1
24	520001	Lock Washer	1
25	520032	Bearing Cone	2
26	520033	Bearing Cup	2
27	520062	Bearing	1
28	520064	Bearing	1
29	520084	Bearing Collar	1
30	520085	Bearing Collar	1
31	530008	Oil Seal	1
32	540000	Retaining Ring (Used before Serial #38001)	2
33	540001	Retaining Ring (Used before Serial #38001)	2
34	580073	Male Tube Connector. (Used after Serial #21375 and before Serial #38001)	1


ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

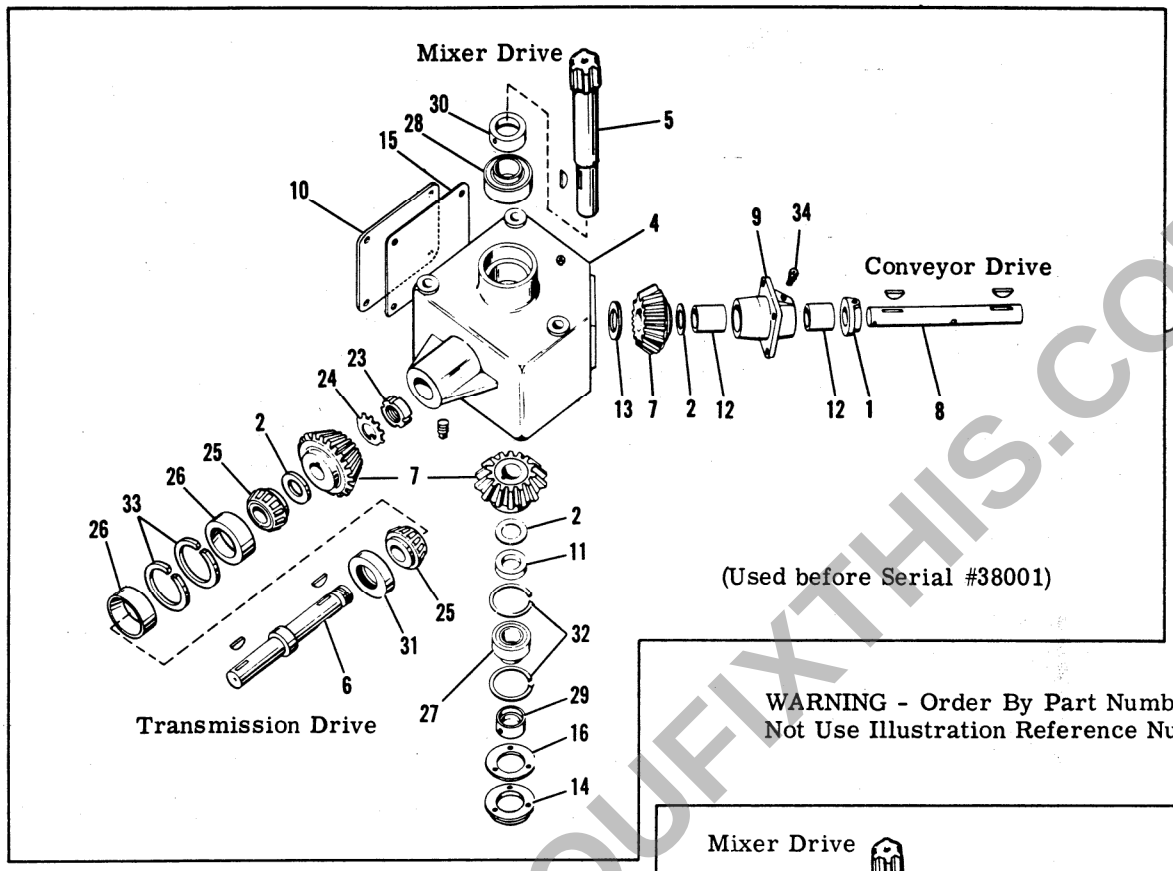

WARNING - Order By Part Number - Do Not Use Illustration Reference Numbers

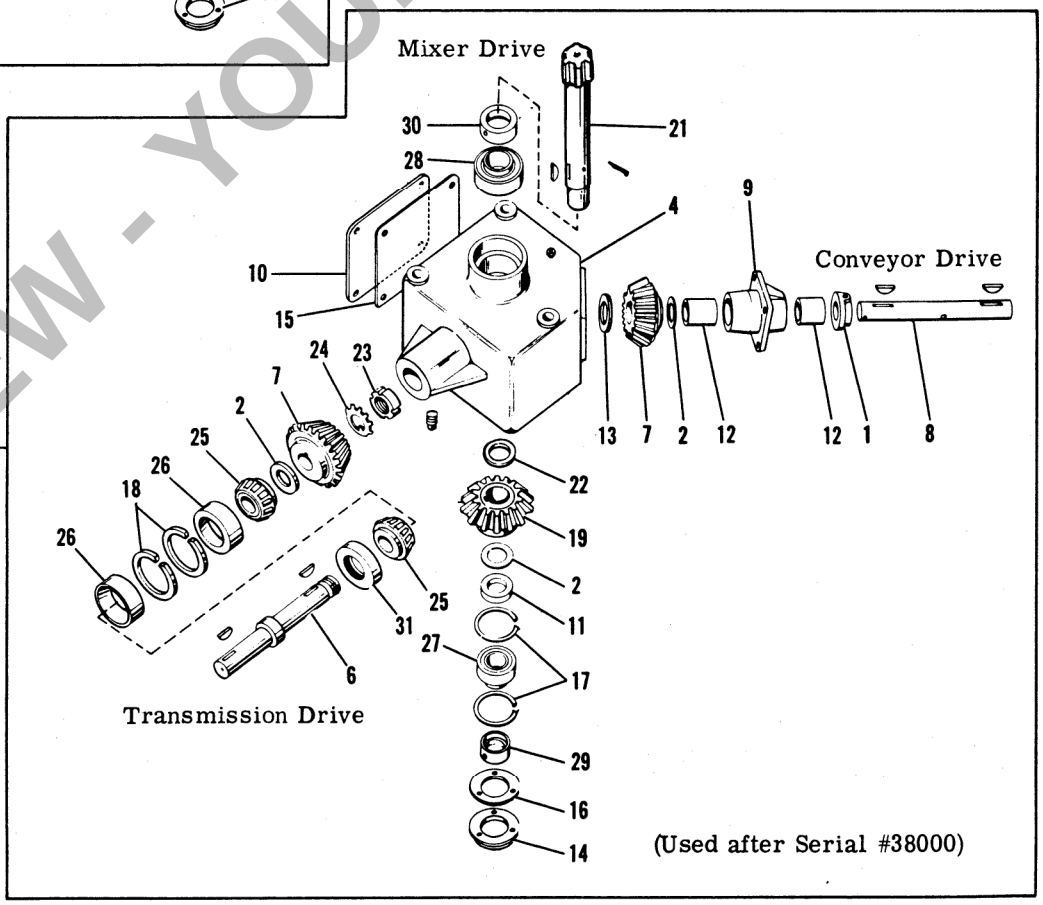

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Mr. Dealer:

Give complete information when ordering service parts. Always give complete part number and also complete part description. The model number and serial number should always be given. Numbers for the Mixer are stamped on a plate located where the Drawbar Hitch joins the Frame. Hammer Mill numbers are located on the Rear Frame Sheet. Crusher numbers are located on the Roller Cover. Swinging Auger Feeder numbers are located on the right side of the Pivot Frame and Traveling Feeder numbers are located on the left Hopper side.

"Right" and "Left" are determined when standing at the front (Drawbar end) of the Mixer. The Mill Feeder is on the Left side and the Mixer Unloading Conveyor on the Right side.

Note: You will find common hardware such as nuts, bolts, etc. listed but not illustrated in parts lists in this manual. Hardware listed with the particular parts is for mounting purposes and is not included when the part is ordered for replacement.

Gehl Company reserves the right to make changes or improvements in the design or construction of any part without incurring the obligation to install such changes on any unit previously delivered.

TABLE OF CONTENTS

Introduction	3
Frame	4-5
Tank and Hopper	6-8
Transmission	9-10
Mixer Drive	11-12
Unloading Conveyor	13
Conveyor Drive	14-16
Mill Drive (Used after Serial #82828)	17-18
Mill Drive (Used before Serial #82829)	19
Mill Frame	20-21
Mill Conveyor and Blower	22-23
Mill Cylinder	24
Feeder Drive	25-27
Feeder Trough (Used after Serial #15000)	28-29
Feeder Trough (Used before Serial #15001)	30-31
Crusher	32-33
Fiberglass Tank	34-35
Support and Drive	36-37
Discharge Pipe	38
Molasses Pump	39
#200 DFA Traveling Feeder	40-42
#200 DF Traveling Feeder	43
Hopper	44
Mixer Direct Drive	45
Roller Mill Mounting (600)	46
Roller Mill Mounting (F20S6)	47
Universal Drives	48-50
Accessories	51
Numerical Index	52-56



SAFETY FIRST

KEEP ALL SHIELDS IN PLACE.
STOP MACHINE TO ADJUST AND OIL.
WHEN MECHANISM BECOMES CLOGGED, DISENGAGE POWER BEFORE CLEANING.
KEEP HANDS, FEET AND CLOTHING AWAY FROM POWER-DRIVEN PARTS.
KEEP OFF IMPLEMENT UNLESS SEAT OR PLATFORM IS PROVIDED.
KEEP OTHERS OFF.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 7 of 58 pages

The full manual includes:

- All 58 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Gehl 65MX Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual