SL6620 - CHASSIS, FUEL TANK, ACCESS COVERS & GRILL

Ref. No.	Part No.	Description	Qty. Req.
1	079483	FLANGE/TANK	2
2	079482	ADAPTER/TANK	2
3	061166	CLAMP/HOSE	1
		(USED AFTER SN3125)	
	055335[a]	CLAMP/HOSE (USED AFTER SN2650 & BEFORE SN3126)	1
4	079339	BRACE/TANK	1
	650491	CS 3/8X1-1/4 (NILN,P)	1
5	080534	TANK/ASSY	1
		(USED AFTER SN2650)	
	079332[a]	TANK/ASSY	1
		(USED BEFORE SN2651)	
6	079335	TUBE/RETURN	1
		(USED AFTER SN2650)	
7	087852	CLAMP/HOSE	3
		(USED AFTER SN2650)	
8	079336	TUBE/SUCTION	1
		(USED AFTER SN2650)	
9	650548	RHMS #10-24X1/2 (L)	5
		(USED AFTER SN2650)	
	052048[a]	SCREW/HHSDT #10-32X1/2	5
		(USED BEFORE SN2651)	
10	077712	WIRE (USED BEFORE SN2901)	1
11	079267	SENDER/FUEL	1
12	072343	GASKET/FUEL SENDER	1
13	072574	GASKET/CLEAN OUT	1
14	073956	COVER/HYD CLEAN OUT	1
	651168	TCS 3/8X3/4	8
15	570016	FITTING/RELIEF	1
16	660025	COUPLING/PIPE 1/8	1
17	660031	NIPPLE/PIPE 1/8 X 3	1
18	079416[b]	CAP/LOCKING	2
19	073115	GUARD/SPILL	2
	650293	TFS #10X3/8	4
20	080680	CHAIN	2
		(USED AFTER SN2650)	
21	080679	RETAINER	2
		(USED AFTER SN2650)	
22	650517	PLUG/HEX SOC PIPE 1/4	1
23	074860	STEM/RUBBER	3
24	079168	ELBOW/PIPE TO BARBED	2
25	062023	CLAMP/HOSE	2
26	079169	TUBE/OIL LEVEL	1
27	064873	SHEET/MILL SAFETY STEP	2
		(USED AFTER SN2650)	
	079346[a]	MAT/FLOOR	1
		(USED BEFORE SN2651)	
28	087023	PLATE/FLOOR	1
		(USED AFTER SN3300)	
	080476	PLATE/FLOOR (USED AFTER SN2650 & BEFORE SN3301)	1
	079345	PLATE/FLOOR (USED BEFORE SN2651)	1
	650486	CS 5/16X3/4 (L)	2
	650487	CS 5/16X1 (L,P)	2
29	079174	GASKET/COVER	2
30	078595	COVER/ACCESS	2
	651168	TCS 3/8X3/4	24
31	079347	CONSOLE/SIDE RIGHT	1
	650486	CS 5/16X3/4 (L,P)	2
32	079348	CONSOLE/SIDE LT ASSY	1
	650486	CS 5/16X3/4 (L,P)	2
33	079369	COVER/BOTTOM FRONT	1
	650495	CS 1/2X1-1/4 (L,P)	2
34	079368	COVER/BOTTOM REAR	1
	650495	CS 1/2X1-1/4 (L,P)	1
35	057569	PLUG/PIPE MAGNETIC	1
36	079167	WASHER	40
37	046022[c]	BOLT/WHEEL	40
		(40) 1/2NF-NILN GR8	
38	080488	CHASSIS/ASSY	1
		(USED AFTER SN2650)	
	078743	CHASSIS/ASSY	1
		(USED BEFORE SN2651)	
39	650576	PLUG/PIPE HEX SOC 1/2	1
40	079310	PIN/LATCH	2
41	079311	ROD/LATCH	1
	655001	PIN/COTTER 1/16X3/4	2
		(2) 1/4P	
42	13E29	SPRING/COMPRESSION	1
43	056937	WASHER	1
44	054842	PIN/CLEVIS	1
	650551	PIN/COTTER 3/32X3/4	1
		(1) 1/4P	
45	079306	TUBE/SPACER	2
	650416	CS 3/4X2-1/2 (NILN)	2
46	079309	LEVER/GRILL	1
47	062282	GRIP	1
48	075237	BUSHING/PIVOT	1
	650835	CS 1/4X1 (NILN,P)	1
49	079170	BASE/TANK	1
50	079171	RETAINER/TANK	1
	650487	CS 5/16X1 (NILN)	2
51	092575	GRILL/REAR ASSY	1
		(USED AFTER SN3900)	
	079300[a]	GRILL/REAR ASSY	1
		(USED BEFORE SN3901)	
52	047269	SOCKET/MOUNTING	1
	650486	CS 5/16X3/4 (NILN)	2
53	087017	COVER (USED ON SINGLE GEAR PUMP MODELS, ONLY)	1
	650486	CS 5/16X3/4 (N,L)	3
	087019	COVER/ASSY (USED ON DUAL GEAR PUMP MODELS, ONLY)	1
	650486	CS 5/16X3/4 (N,L)	3
54	073458	STRIP/NON-SKID SURFACE	1
55	080480	ANGLE/RESET	1

a) For replacement, use current part(s).

b) For replacement Key, order 080306.

c) For repair before SN2901, use CS 651204 and NILN 087267.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Ref. No.	Part No.	Description	Qty. Req.
1	078917	TUBE/FUEL	2
2	062023	CLAMP/HOSE	6
3	081841	HOSE	1
		(USED AFTER SN3900)	
	077692	HOSE	1
		(USED BEFORE SN3901)	
4	078919	HOSE/FUEL SUCTION	1
5	077534	MOTOR/STARTING	1
6	080246	HEATER/ENGINE BLOCK	1
7	055648	TIE/WIRE	2
8	078918	HOSE/FUEL RETURN	1
9	072616	SWITCH/OIL PRESSURE	1
10	087855	SENDER/TEMP	1
		(USED AFTER SN3900)	
	079598[a]	SENDER/TEMP	1
		(USED BEFORE SN3901)	
11	079599[a]	ADAPTER/M16X1-1/2	1
		(USED BEFORE SN3901)	
12	077712	WIRE/BATTERY ALT	1
13	078910[b]	ENGINE/DIESEL PERKINS	1
14	080304[c]	ALTERNATOR & REGULATOR	1
15	080302	BELT/FAN	1
16	080007	GUARD/EDGE RUBBER	1
17	078636	MOUNT/REAR ENGINE ASSY RT	1
		(1) 7/16N,L	
18	075225	STRIP/TRIM LOCK	1
19	078640	MOUNT/REAR ENGINE ASSY LT	1
		(1) 7/16N,L	
20	065756	WASHER	4
	650694	CS 5/8X2-1/2 (NILN)	4
21	060039	MOUNTING/ISOLATOR	4
22	081432	SPACER	3
		(USED AFTER SN2650)	
23	078592	MOUNT/FRT ENGINE ASSY LT	1
	058920	CS 1/2X1-1/4 (L)	4
24	078610	ADAPTER/PUMP	1
	650634	CS 3/8NFX1 (L)	7
25	078589	MOUNT/FRT ENGINE ASSY RT	1
	058920	CS 1/2X1-1/4 (L)	4
26	054985	CABLE/SOLENOID GROUND	1
27	078629	HUB/COUPLING	1
28	078933	COUPLING/FLEXIBLE	1
29	078596	DISC/FLYWHEEL DRIVE ASSY	1
	650487	CS 5/16X1 (L)	8
30	079214	BUSHING	1
31	079213	PIN/SPRING CLEVIS 3/16	2
32	075042	YOKE/END	2
33	065163	CLAMP	1
	650387	RHMS #10-32X1/2 (N,L)	2
34	079951	BRACKET	1
35	079210	CABLE/THROTTLE	1
		(2) #10-32N	
36	070613	SPRING/EXTENSION	1
37	079341	LEVER/ARM ASSY	1
	650486	CS 5/16X3/4 (2JN)	1
38	057490	SPACER/CAM ROLLER	1
		(1) 1/2NILN, (3) 1/2P	
39	062282	GRIP	1
40	072866	STUD	1
		(1) 3/8NILN,P	
41	078630	HANDLE/THROTTLE ASSY	1
		(1) 1/2LN	
42	079212	STRIP/SLIP	1
43	078633	WASHER	1
44	054294	SPRING	1
45	058357	WASHER	1
46	079343	ROD/THROTTLE	1
	655001	PIN/COTTER 1/16X3/4	2
		(2) 3/8P	
47	056076	STRIP/NON SKID	1
48	080482	PEDAL/ASSY	1
		(USED AFTER SN2650)	
	056073	PEDAL/AUXILIARY ASSY	1
		(USED BEFORE SN2651)	
	650818	CS 3/8X3 (NILN)	1
49	054202	JOINT/BALL	1
		(2) 3/8NF-JN, 3/8P	
50	056078	BRACKET/PEDAL PIVOT	1
	650487	CS 5/16X1 (LN,P)	4
51	079344	SPACER	1
		(USED BEFORE SN2651)	
52	056997	ELBOW/90 DEG STREET BRASS	1
		(USED AFTER SN3125)	
53	079756	FILTER/OIL SPIN-ON	1
54	079757	FILTER/FUEL SPIN-ON	1

a) For replacement, order 087855.

b) For Engine Components NOT included in this manual, refer to Engine manufacture's parts manual.

c) For Enclosed Alternator, see pages titled Accessories.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

SL6620 - HYDRAULIC PUMP, FILTERS, CONTROL VALVE & OIL COOLER

(Single Gear Pump - Standard Equipment)


Ref. No.	Part No.	Description	Qty. Req.
1	078921	COOLER/OIL	1
2	078922	MOUNT/ELASTOMER	4
3	065538	WASHER	4
	650839	CS 1/4X2-1/4	4
4	054856	ELBOW/ADAPTER 90 DEG NPT	4
5	079101	HOSE/ASSY 3/4ID X 34	1
6	079091	TUBE/DRAIN	1
7	079092	TEE/MALE RUN STR THD (TWO USED BEFORE SN3101)	1
8	048953	O-RING FOR 1-1/16-12 THD	6
9	079094[a]	VALVE/RELIEF	1
10	079104	HOSE/ASSY 3/4ID X 14 (ONE USED BEFORE SN3101)	2
11	079106	CAP/DUST	2
12	079105	CHECK/PRESSURE	1
13	079028	ELBOW/90 DEG STR THD	1
14	078984	BRACKET/FILTER	1
	650490	CS 3/8X1 (NILN)	2
15	074020	FILTER/HYDRAULIC	1
	650488	CS 3/8X3/4 (L)	4
16	074830	FILTER ELEMENT	1
17	055005	ELBOW/MALE 90 JIC	1
18	087030	TUBE/RETURN (USED AFTER SN3300)	1
	079123	TUBE/DRAIN (USED BEFORE SN3301)	1
19	074282	TEE/SWIVEL (USED AFTER SN3300)	1
20	079098	PLATE/TWIN COVER (ONE USED BEFORE SN3101)	3
	650733	CS 5/16X2-1/2 (NILN)	2
21	079097	CLAMP/TUBE (ONE USED BEFORE SN3101)	2
22	079419	TUBE/CHARGE ASSY	1
23	079093	TUBE/DRAIN	1
24	079023	SUPPORT/TUBE	1
	650910	CS 3/8NFX1-1/4 (L,P)	1
25	079096	TUBE/DRAIN	1
26	075172	TEE/FEMALE RUN	1
27	057650	ELBOW/90 DEG MALE	1
28	062889	ADAPTER/STEEL PIPE	1
29	660050	BUSHING/RED 3/4 X 1/2	1
30	065507	TEE	1
31	079100	ELBOW/90 DEG MALE	1
32	079102	FITTING/ELBOW	1
33	079103	HOSE/ASSY 1-1/4ID X 51	1
34	055013	STRAINER/OIL	1
35	079960	TEE	1
36	074281	ADAPTER	1
37	056087	CONNECTOR/MALE (USED AFTER SN3100)	1
38	082898	TEE/STREET 3/4NPT (USED AFTER SN3100)	1
39	054819	CONN/STR THD MALE	1
40	055898	O-RING FOR 7/8-14-THD	1
41	079109	CHECK/PRESSURE	1
42	055897	O-RING FOR 9/16-18-THD	1
43	079107[a]	VALVE/CONTROL	1
	650490	CS 3/8X1 (L)	3
44	079420	HOSE/ASSY 3/4ID X 37	1
45	078830	SUPPORT/PUMP	1
	650495	CS 1/2X1-1/4 (L)	2
46	079289	O-RING	1
47	079037[a]	PUMP/GEAR (SINGLE)	1
	650453	CS 1/2X1-1/2 (L,P)	2
48	055064	ELBOW/45 DEG MALE	1
49	079288	ELBOW/45 DEG MALE	1
50	077970	O-RING FOR 1-5/8-12-THD	1
51	082800	FITTING/ELBOW 90 DEG (USED AFTER SN3100)	1
52	072587	CONNECTOR (TWO USED BEFORE SN3301 AND AFTER SN3100)	1

a) For service see pages titled Hydraulic Components.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

SL6620 - INSTRUMENT PANEL, WIRING & ELECTRICAL COMPONENTS

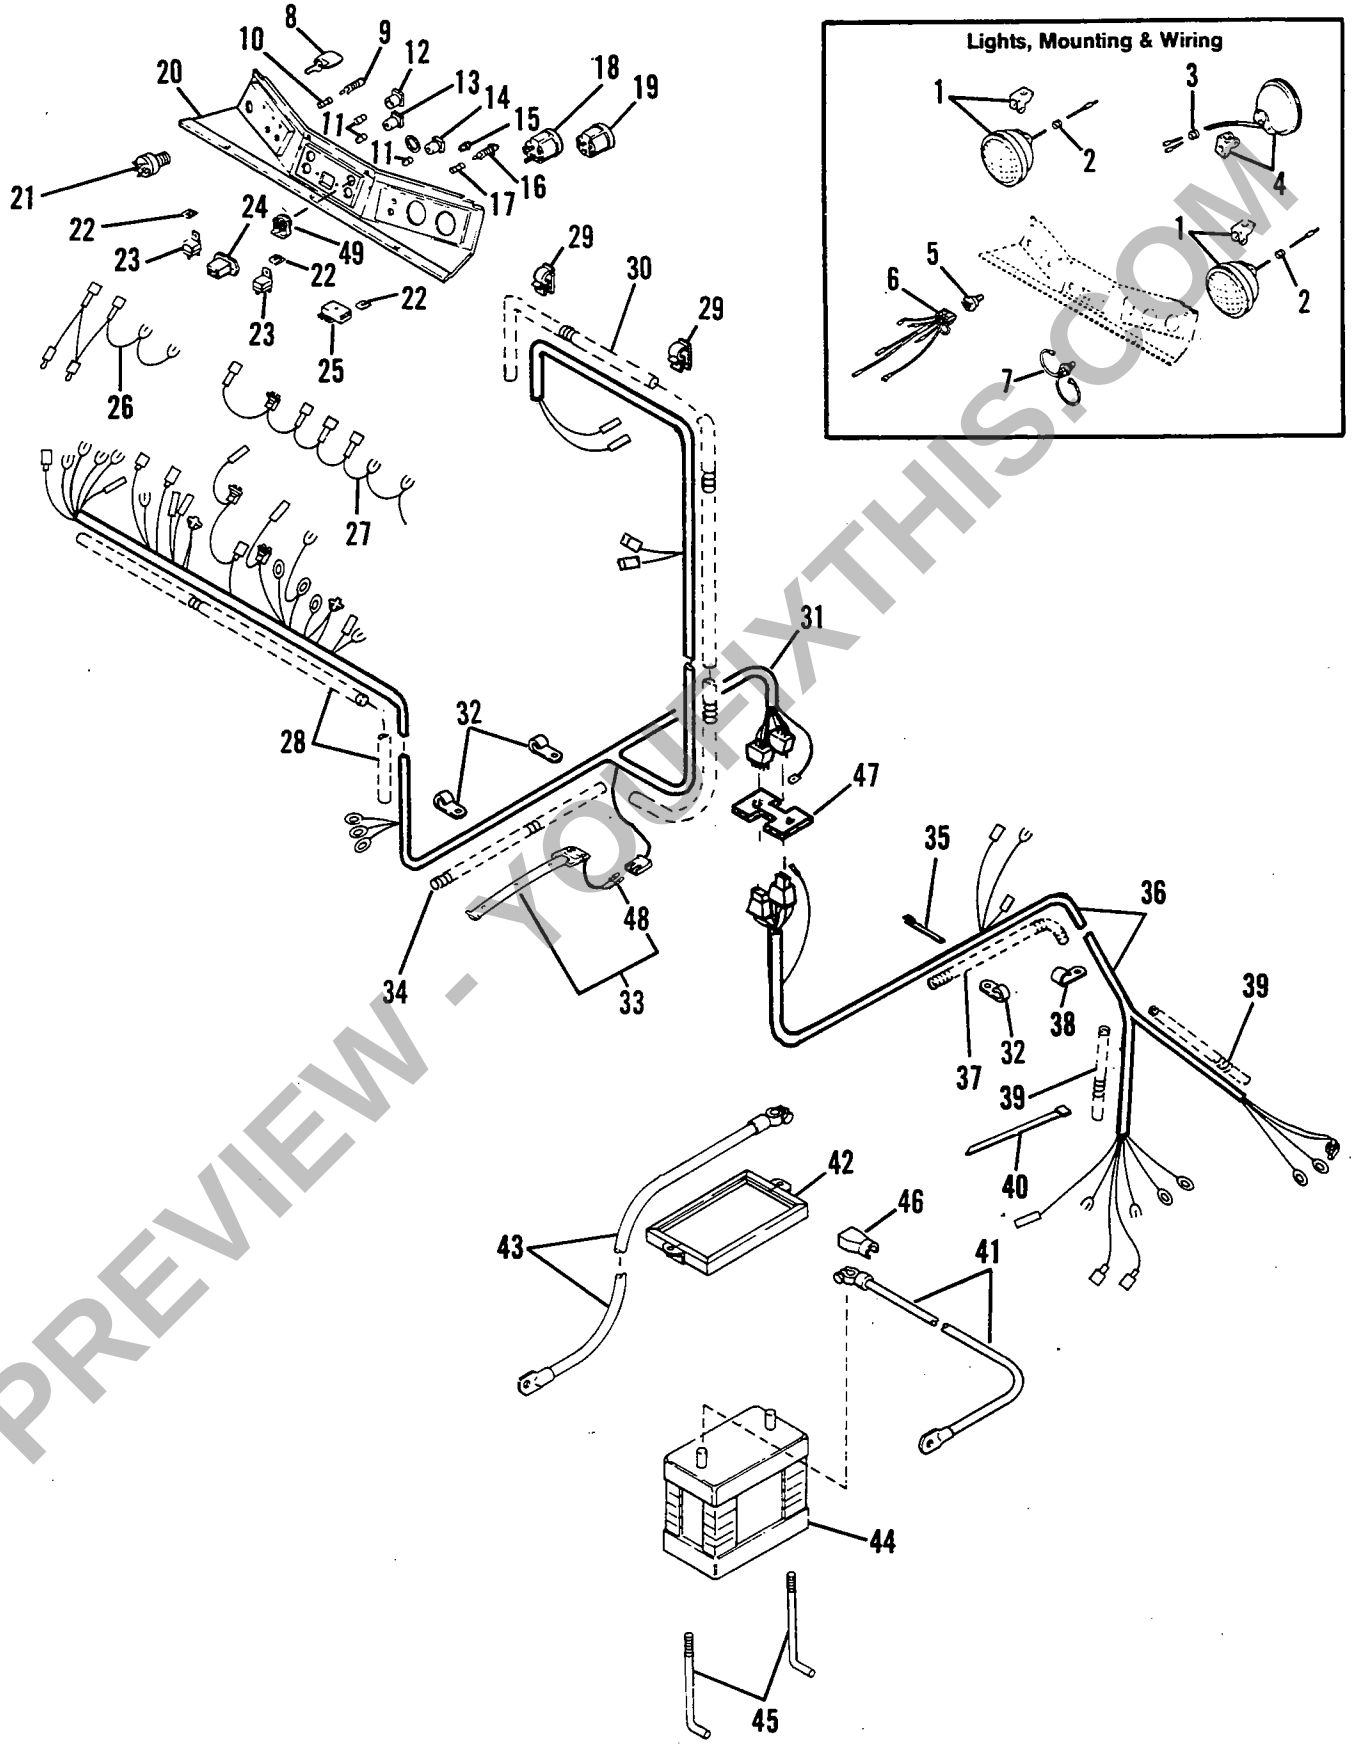

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

TORQUE SPECIFICATIONS FOR STANDARD MACHINE HARDWARE

All Torque Values are in Ft-Lbs (except when marked * which are In-Lbs).
(Multiply In-Lb value* by 0.113 or Ft-Lb value by 1.355 to obtain metric Nm value.)

Bolt Size	GR. 2		GR. 5		GR. 8	
	Dry	Lub.	Dry	Lub.	Dry	Lub.
8-32	19*	14*	30*	22*	41*	31*
8-36	20*	15*	31*	23*	43*	32*
10-24	27*	21*	43*	32*	60*	45*
10-32	31*	23*	49*	36*	68*	51*
1/4-20	66*	50*	9	75*	12	9
1/4-28	76*	56*	10	86*	14	10
5/16-18	11	9	17	13	25	18
5/16-24	12	9	19	14	25	20
3/8-16	20	15	30	23	45	35
3/8-24	23	17	35	25	50	35
7/16-14	32	24	50	35	70	55
7/16-20	36	27	55	40	80	60
1/2-13	50	35	75	55	110	80
1/2-20	55	40	90	65	120	90
9/16-12	70	55	110	80	150	110
9/16-18	80	60	120	90	170	130
5/8-11	100	75	150	110	220	170
5/8-18	110	85	180	130	240	180
3/4-10	175	130	260	200	380	280
3/4-16	200	150	300	220	420	320
7/8-9	170	125	430	320	600	460
7/8-14	180	140	470	360	660	500
1-8	250	190	640	480	900	680
1-12	270	210	710	530	1000	740

NOTE: *These torque values are to be used for all **GEHL** hardware excluding: Locknuts, Self-tapping Screws, Thread Forming Screws and Sheet Metal Screws. Unless otherwise specified, all torque values must meet this specification.*

Attaching Hardware

Size & Description	Part Number	Size & Description	Part Number	Size & Description	Part Number	Size & Description	Part Number
#6 L	654044	5/16 JN	653034	3/8 NF-N	650552	1/2 NILN	068034
#6-32 N	650658	5/16 L	654024	3/8 NF-NILN	064840	1/2 P	654009
#6 P	650848	5/16 LN	071701	3/8 NILN	067847	5/8 JN	653047
#10 L	650549	5/16 N	653007	3/8 P	654006	5/8 L	654032
#10-24 N	650550	5/16 NF-JN	653036	7/16 L	654028	5/8 NILN	067823
#10-32 N	650648	5/16 NF-N	651062	7/16 N	653015	3/4 P	654014
#10 P	654017	5/16 NILN	064260	7/16 NF-N	653016	3/4 NF-SN	653119
1/4 L	654022	5/16 P	654004	7/16 P	654046	3/4 NILN	079209
1/4 LN	071700	3/8 L	654026	1/2 L	654030	1-1/4 NF-SN	650964
1/4 N	653005	3/8 LN	071703	1/2 LN	071706	**METRIC**	
1/4 NILN	071401	3/8 N	653010	1/2 NF-JN	653045	M5/.8 N	656100
1/4 P	654002	3/8 NF-JN	653039	1/2 NF-NILN	064373	M10/1.50N	656102

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

SL6620 - AXLES, DRIVE CHAINS & RELATED COMPONENTS

Ref. No.	Part No.	Description	Qty. Req.
1	078961[a]	GEARCASE/PLANETARY ASSY	2
	651211	CS 3/8NFX3-1/2 GR8 (L)	24
2	078962	RING/RETAINING	2
3	078945	BEARING/CONE	6
4	078946	BEARING/CUP	6
5	078963[b]	GASKET/PLANETARY (USED BEFORE SN3501)	2
6	088470	ADAPTER/PLANETARY (USED AFTER SN2900)	2
	651085	CS 1/2NFX1-3/4 GR8 (22) 1/2NF-NILN	22
	078634[c]	ADAPTER/PLANETARY (USED BEFORE SN2901)	2
6A	046022[d]	BOLT/WHEEL (USED BEFORE SN2901)	12
6B	079167	WASHER (USED BEFORE SN2901)	12
6C	046001[d]	NUT/WHEEL (USED BEFORE SN2901)	12
7	078943	BEARING/CUP	6
8	078944	BEARING/CONE	6
9	078947	SEAL/OIL	6
10	078959	RETAINER/ASSY	4
11	078958	SHIM	AR
12	078953	TAKEUP	4
	655020	PIN/COTTER 3/16X1-1/2	4
	650572	CS 5/8X2-3/4 (L) (4) 3/4NF-SN,P	4
13	041885	CONE/BEARING (USED AFTER SN2650)	8
	054750[c]	CONE/BEARING (USED BEFORE SN2651)	8
14	041884	BEARING/CUP	8
15	078955	SPROCKET/IDLER ASSY 14T	4
16	078952	TAKEUP/ASSY	4
	650354	CS 5/8X4-1/2 (L)	4
17	650667	SQHSS 5/8X4 (JN)	4
18	078949	WASHER	4
19	078603	SPROCKET/ASSY 50T	4
20	078948	WASHER/SHIM	AR
21	078612	ADAPTER/WHEEL	4
	570002	FITTING/GREASE	4
22	078657	BOLT/WHEEL	32
23	078652	AXLE/ASSEMBLED	4
	650554	PIN/COTTER 1/4X2-1/4 (4) 1-1/4NF-SN	4
24	079154	WHEEL/15X6LB GREY	4
	079157	WHEEL/16.5X9.75 GREY	4
	081919	WHEEL & TIRE/SOLID	4
	081920	TRACK (NOT SHOWN)	2
25	079152	NUT/WHEEL	32
26	079155	STEM/VALVE	4
27	078950[e]	CHAIN/ROLLER (#80HE) OF 72 LINKS INCLUDING ONE 080305 PLAIN CONNECTOR W/PRESS-FIT SIDE BAR & COTTER PIN.	2
28	078599	SHAFT/PLANETARY ASSY	2
29	078951[f]	CHAIN/ROLLER (#80HE) OF 86 LINKS INCLUDING ONE 080305 PLAIN CONNECTOR W/PRESS-FIT SIDE BAR & COTTER PIN	2
30	078964[b]	GASKET/ADAPTER (USED BEFORE SN2651)	2

a) For service see pages titled Hydraulic Components.

b) NO replacement required; use RTV108 or equivalent sealant.

c) For replacement, order current part(s).

d) For repair before SN2901, use CS 9/16NFx1-3/4 (651204) and NILN 9/16NF (087267).

e) Short Chain for left front and right rear.

f) Long Chain for left rear and right front.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Ref. No.	Part No.	Description	Qty. Req.
1	078915	HOOD/INLET	1
		(USED BEFORE SN3901)	
2	078913	CLEANER/AIR-ASSEMBLED	1
3	078934	ELEMENT	1
4	078936	NUT	1
5	078935	CUP	1
6	076789	VACUATOR VALVE	1
7	078914	GAUGE/RESTRICTION	1
8	061166	CLAMP/HOSE	6
9	078916	HOSE/AIR CLEANER	1
10	078912	BAND/MOUNTING	2
	650486	CS 5/16X3/4 (NILN)	4
11	078911	BRACKET/AIR CLEANER	1
	650835	CS 1/4X1 (NILN)	2
	650898	CS 5/16NFX1 (L)	4
12	088912	WASHER	5
13	072384	MOUNT/RUBBER	5
		(5) 3/8NILN	
14	078925	BRACE/RADIATOR RT	1
		(USED BEFORE SN3901)	
	650486	CS 5/16X3/4 (NILN)	1
15	057067	PLUG/HOLE	1
16	078663	SHROUD/FAN ASSY	1
	650485	CS 5/16X5/8 (L,4P)	2
	650486	CS 5/16X3/4 (L,P)	1
17	078835	BRACE/RADIATOR LEFT	1
		(USED BEFORE SN3901)	
18	078927	HOSE/RADIATOR LOWER	1
19	078658	SUPPORT/SHROUD ASSY RT	1
	650486	CS 5/16X3/4 (L)	2
20	054958	CAP/RADIATOR	1
21	078920	RADIATOR	1
22	067685	COCK/DRAIN	1
23	078928	HOSE/RADIATOR UPPER	1
24	078660	SUPPORT/SHROUD ASSY LT	1
	650486	CS 5/16X3/4 (L)	2
25	078666	SHROUD/ASSY REAR	1
	650486	CS 5/16X3/4 (L)	4
26	078926[a]	BRACKET/MUFFLER	1
		(USED BEFORE SN3901)	
	650486	CS 5/16X3/4 (L)	2
27	078923[a]	BRACKET/MUFFLER	1
		(USED BEFORE SN3901)	
	650486	CS 5/16X3/4 (N,L)	1
28	078924	SHIELD/HEAT	1
	650486	CS 5/16X3/4 (L,P)	1
29	078929	PIPE/EXHAUST	1
30	062019	U-CLAMP	1
31	078930	MUFFLER/SPARK ARREST	1
32	078931	CLAMP/MUFFLER	1
33	092924	BRACKET	1
		(USED AFTER SN3900)	
	650487	CS 5/16X1 (NILN,P)	3
34	092925	BRACE/RADIATOR	1
		(USED AFTER SN3900)	
	650490	CS 3/8X1 (NILN,P)	2
35	092582	BRACKET/WIDE	1
		(USED AFTER SN3900)	
	650487	CS 5/16X1 (NILN)	2
36	092583	ISOLATOR	1
		(USED AFTER SN3900)	
	650487	CS 5/16X1 (NILN,P)	1
37	092584	BRACKET/HANGER	1
		(USED AFTER SN3900)	
	650487	CS 5/16X1 (NILN,P)	1

a) For repair, order Field Kit, 092580.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

SL6620 - HYDRAULIC PUMP, FILTERS, CONTROL VALVE & OIL COOLER

(Dual Gear Pump - Optional Equipment)

Ref. No.	Part No.	Description	Qty. Req.
1	078921	COOLER/OIL	1
2	078922	MOUNT/ELASTOMER	4
3	065538	WASHER	4
	650839	CS 1/4X2-1/4	4
4	054856	ELBOW/ADAPTER 90 DEG NPT	4
5	079101	HOSE/ASSY 3/4ID X 34	1
6	079091	TUBE/DRAIN	1
7	079092	TEE/MALE RUN STR THD (TWO USED BEFORE SN3101)	1
8	048953	O-RING FOR 1-1/16-12 THD	7
9	079094[a]	VALVE/RELIEF	1
10	079104	HOSE/ASSY 3/4ID X 14 (ONE USED BEFORE SN3101)	2
11	079106	CAP/DUST	2
12	079105	CHECK/PRESSURE	1
13	079028	ELBOW/90 DEG STR THD	1
14	078984	BRACKET/FILTER	1
	650490	CS 3/8X1 (NILN)	2
15	074020	FILTER/HYDRAULIC	1
	650488	CS 3/8X3/4 (L)	4
16	074830	FILTER ELEMENT	1
17	055005	ELBOW/MALE 90 JIC	1
18	087030	TUBE/RETURN	1
19	074282	TEE/SWIVEL	1
20	079098	PLATE/TWIN COVER (ONE USED BEFORE SN3101)	3
	650733	CS 5/16X2-1/2 (NILN) (ONE USED BEFORE SN3101)	2
21	079097	CLAMP/TUBE (ONE USED BEFORE SN3101)	2
22	079419	TUBE/CHARGE ASSY	1
23	079093	TUBE/DRAIN	1
24	079023	SUPPORT/TUBE	1
	650910	CS 3/8NFX1-1/4 (L,P)	1
25	079096	TUBE/DRAIN	1
26	075172	TEE/FEMALE RUN	1
27	057650	ELBOW/90 DEG MALE	1
28	062889	ADAPTER/STEEL PIPE	1
29	660050	BUSHING/RED 3/4 X 1/2	1
30	065507	TEE	1
31	079100	ELBOW/90 DEG MALE	1
32	079102	FITTING/ELBOW	1
33	079103	HOSE/ASSY 1-1/4ID X 51	1
34	055013	STRAINER/OIL	1
35	079960	TEE	1
36	074281	ADAPTER	1
37	056087	CONNECTOR/MALE (USED AFTER SN3100)	1
38	082898	TEE/STREET 3/4NPT (USED AFTER SN3100)	1
39	054819	CONN/STR THD MALE	1
40	055898	O-RING FOR 7/8-14-THD	1
41	079109	CHECK/PRESSURE	1
42	055897	O-RING FOR 9/16-18-THD	1
43	079107[a]	VALVE/CONTROL	1
	650490	CS 3/8X1 (L)	3
44	079420	HOSE/ASSY 3/4ID X 37	1
45	078830	SUPPORT/PUMP	1
	650495	CS 1/2X1-1/4 (L)	2
46	079289	O-RING	1
47	087013[a]	PUMP/GEAR (DUAL)	1
	650453	CS 1/2X1-1/2 (L,P)	2
48	055064	ELBOW/45 DEG MALE	1
49	079288	ELBOW/45 DEG MALE	1
50	077970	O-RING FOR 1-5/8-12-THD	1
51	082800	FITTING/ELBOW 90 DEG	1
52	055005	ELBOW/90 DEG STR	1
53	080439	HOSE/ASSY 1/2X30	1
54	075236	NUT/JIC CAP	1
55	080435	TUBE/CROSSOVER ASSY	1
56	065507	TEE/MALE RUN	2
57	064666	CONNECTOR/MALE	1
58	087018[a]	VALVE/DIFFERENTIAL RELIEF	1
59	062910	NIPPLE/STEEL ADAPTER	1
60	080447	HOSE/ASSY 1/2X28	1
61	054850	CONNECTOR/MALE STR	1
62	072942	STUD	1
63	080445	COUPLER/THREADED	1
64	065024[a]	VALVE/SELECTOR	1
	650485	CS 5/16X5/8 (L)	2
65	087029	BRACKET	1
	650486	CS 5/16X3/4 (NILN)	2
66	084202	KNOB/CONTROL	1
67	075928	HOSE/ASSY 1/2X84	1
68	068105	ELBOW/90 DEG MALE	1
69	082572	FILTER/OIL ASSY	1
	650663	CS 1/4X5/8 (L)	2
70	048959	ELEMENT/OIL FILTER	1
71	083223	BRACKET/FILTER	1
72	073411	CONNECTOR/MALE	1
73	087025	TUBE/MOTOR DRAIN	1
74	092926	SUPPORT/HYDRAULIC LINE (LATE STYLE-OFFSET BEND)	1
	075169	SUPPORT/HYDRAULIC LINE (EARLY STYLE-90 DEG BEND)	1
	650487	CS 5/16X1 (L)	2
75	054848	ELBOW/90 DEG	2
76	056080	NIPPLE/QUICK DISCONNECT (LATE STYLE)	1
	073403[b]	NIPPLE/QUICK DISCONNECT (EARLY STYLE)	1
77	056104	CAP/DUST	1
78	087016	TUBE/RETURN	1
79	072587	CONNECTOR (TWO USED BEFORE SN3301 AND AFTER SN3100)	1

a) For service see pages titled Hydraulic Components.

b) For replacement. use current part.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 8 of 76 pages

The full manual includes:

- All 76 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Gehl 6620, SL6620 Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual