
001

フ レ ー ム
Frame

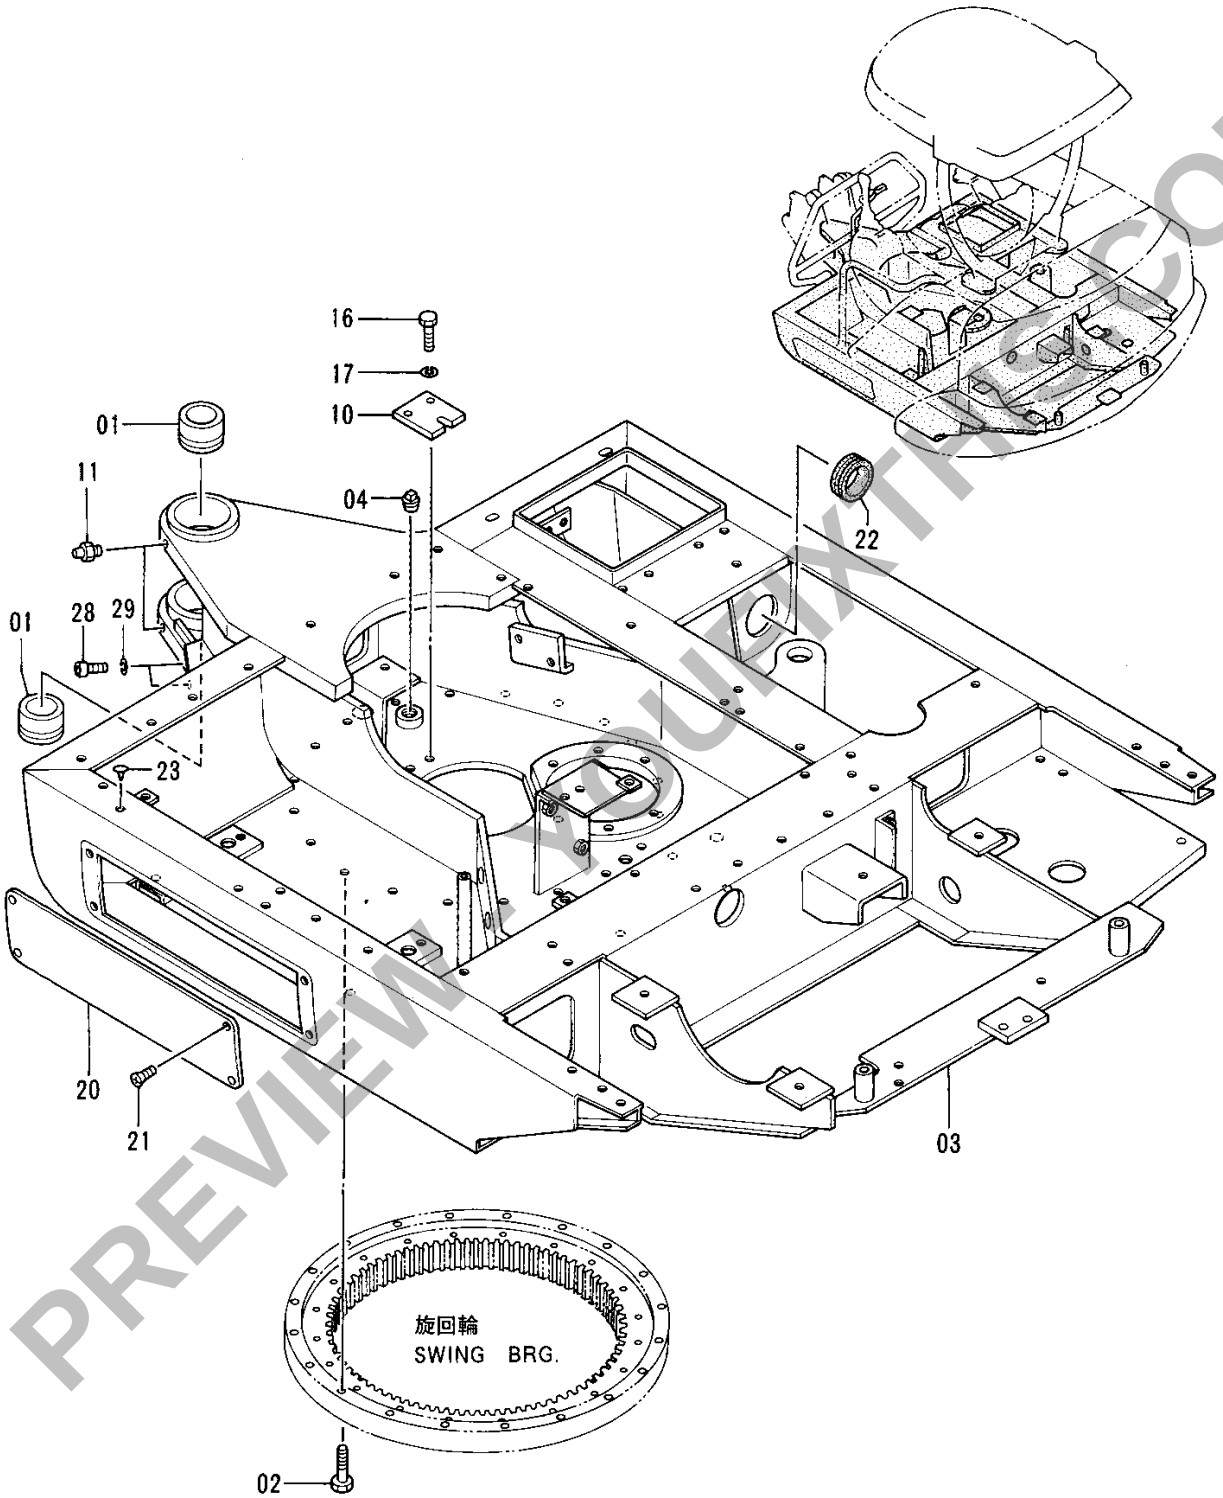

PREVIEW YOUFIXTHIS.COM


Download full manual at youfixthis.com


ITEM	PART NO.	PART NAME	Q'TY	S.C	SERIAL NO.	ICA	REPLACEABLE	REPLACEABLE
01	4293274	BUSHING	2		□`00424	I	4316500	2
01	4316500	BUSHING	2		00425□`			
02	J931260	BOLT	20					
03	5003525	FRAME;MAIN	1					
04	J75214	PLUG	1					
10	4276606	STOPPER	1					
11	J75481	FITTING;GREASE	2					
16	J901225	BOLT	2					
17	A590912	WASHER;SPRING	2					
20	4288387	COVER	1					
21	M470816	SCREW	4					
22	4184582	BUSHING;RUBBER	1					
23	4288579	PLUG	1					
28	M430810	SCREW	2					
29	4514388	WASHER;SPRING	2					

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

エ ン ジ ン
Engine

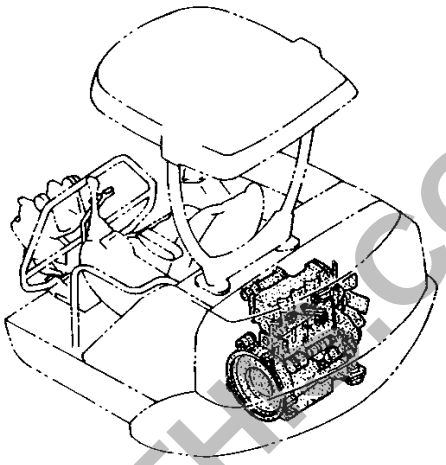

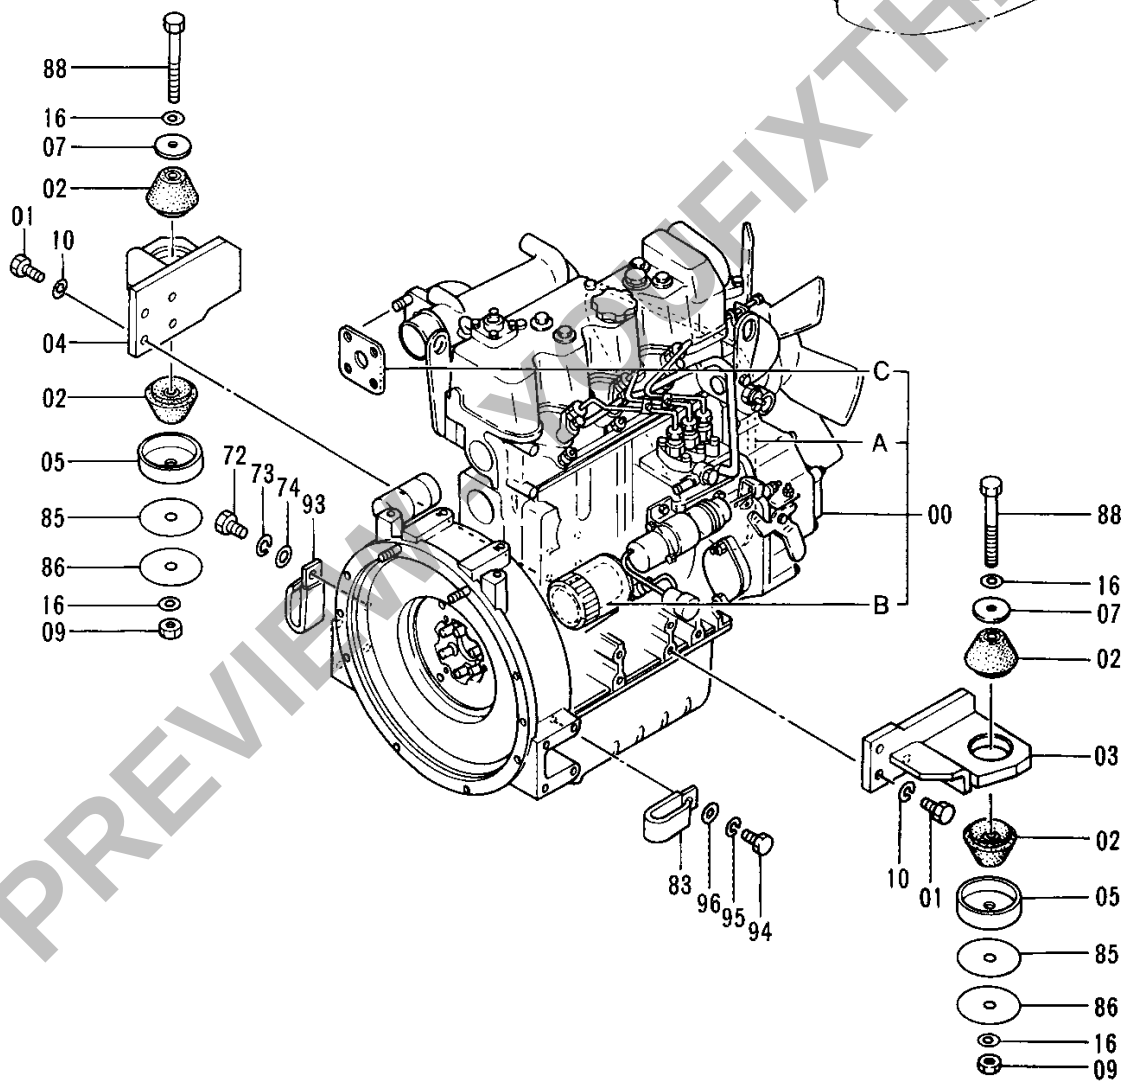


PREVIEW ONLY - YOUFIXTHIS.COM

Download full manual at youfixthis.com

009


ラジエータ
Radiator

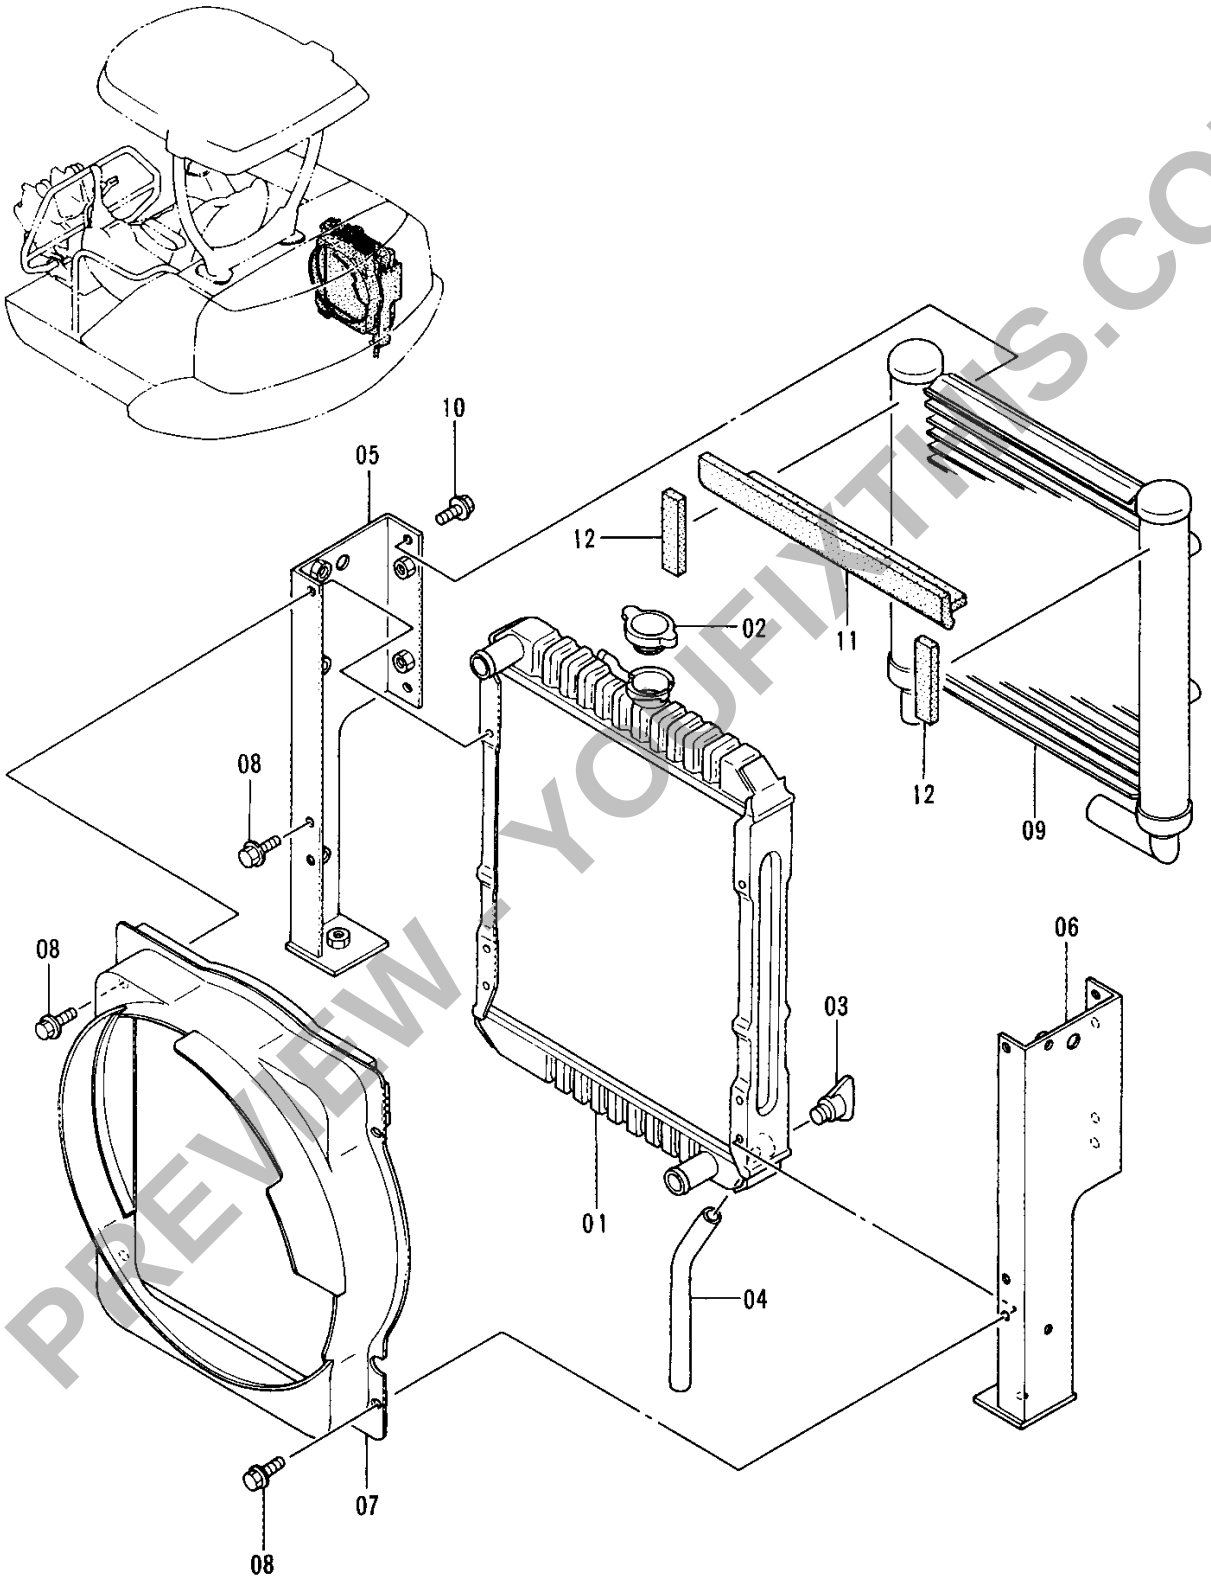

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


コンソール（右)〈キャノピ〉
Console（R)〈Canopy)

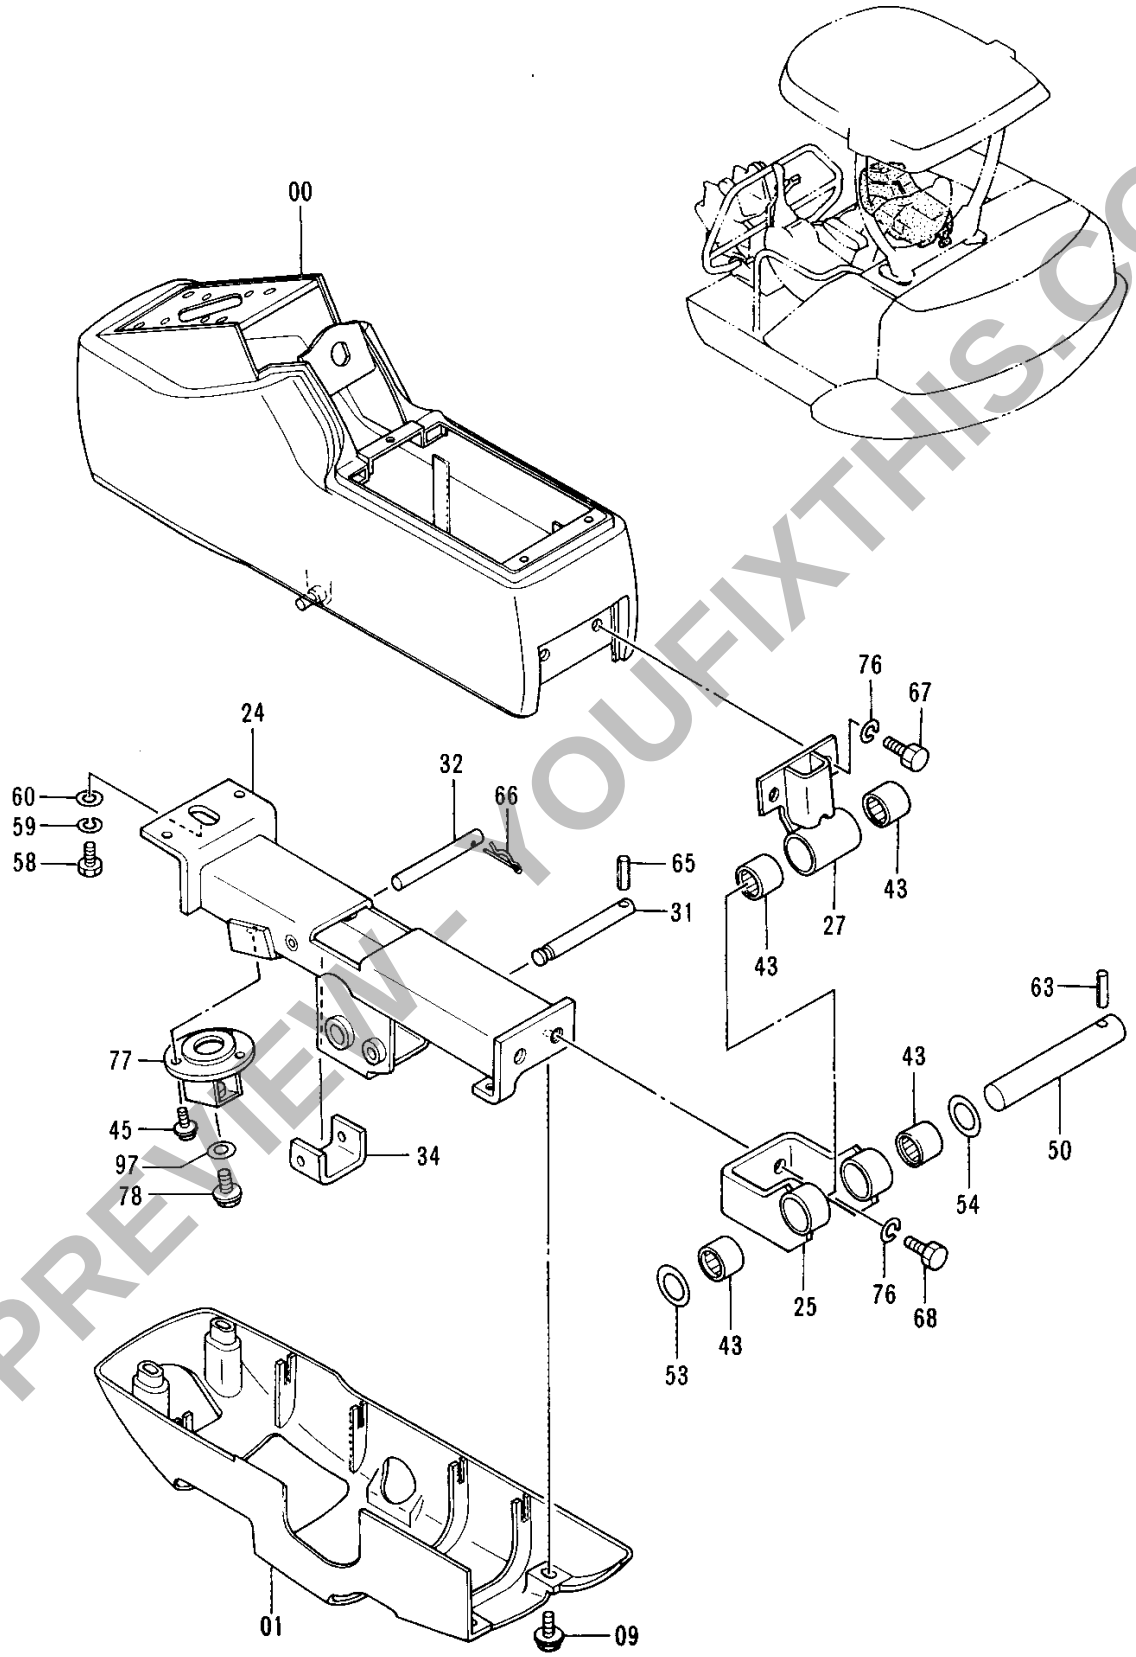


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

ブ　ー　ム
Boom

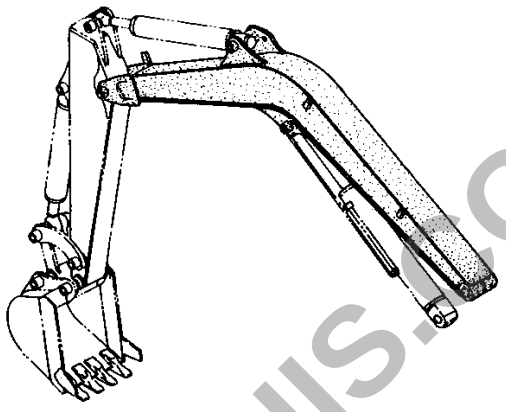

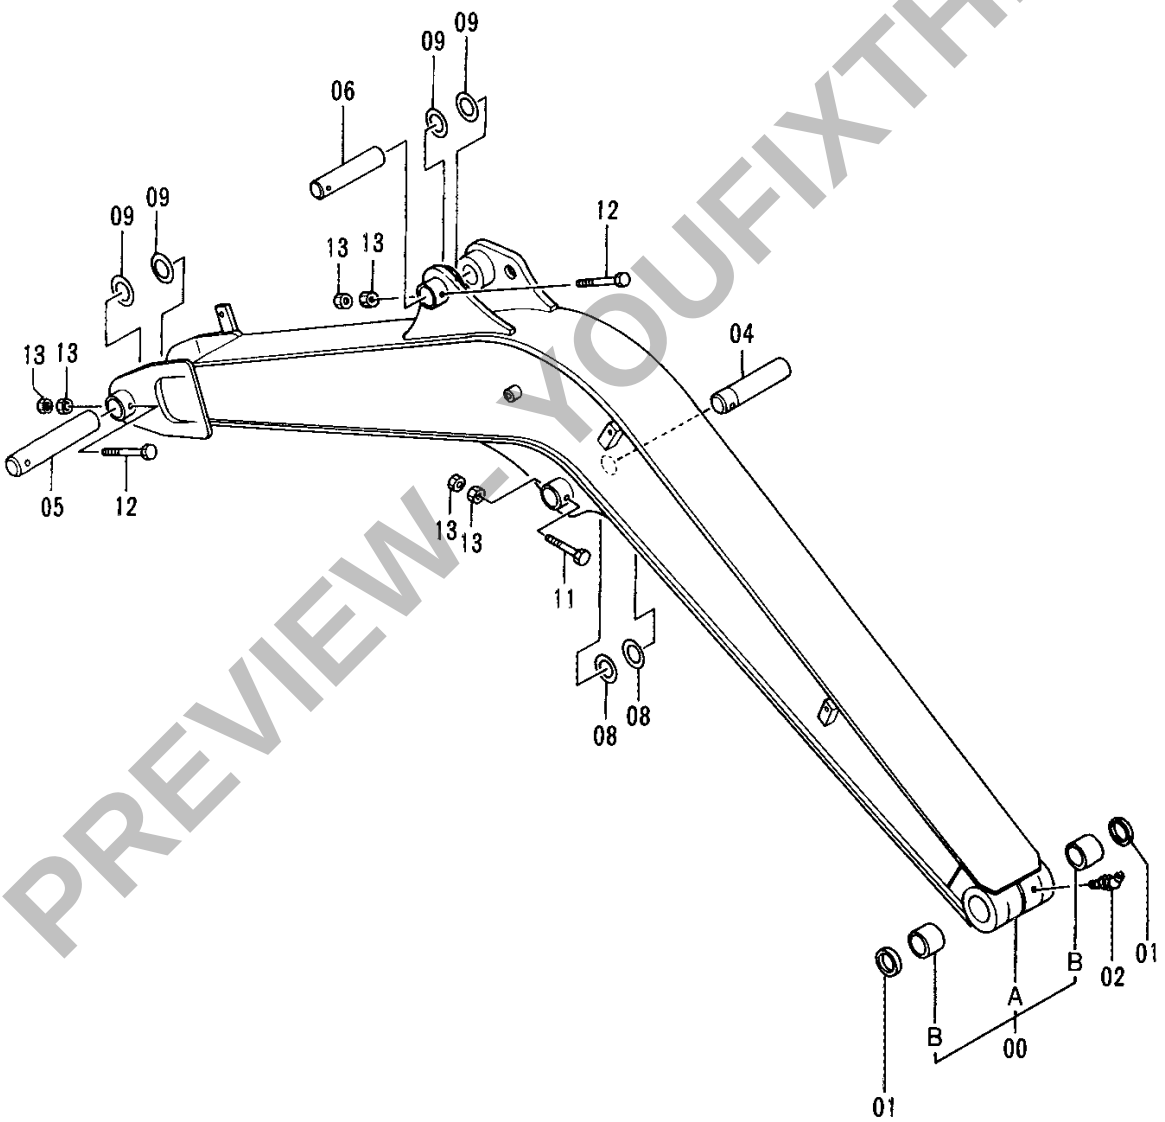

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

ITEM	PART NO.	PART NAME	Q'TY	S.C	SERIAL NO.	ICA	REPLACEABLE	REPLACEABLE
00	1018675	WEIGHT;(L)	1					
01	1018673	WEIGHT;CENTER	1					
02	1018674	WEIGHT;(R)	1					
05	A590914	WASHER;SPRING	4					
06	M660014	NUT;U	4					
07	4086894	WASHER	8					
08	4279636	SEAL;RUBBER	2					
09	J901475	BOLT	4					
12	4308547	RUBBER	1					
13	4308548	RUBBER	1					
57	4086894	WASHER	4					
58	A590914	WASHER;SPRING	4					
68	J901455	BOLT	4					

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

操作レバー (右)
Control Lever (R)

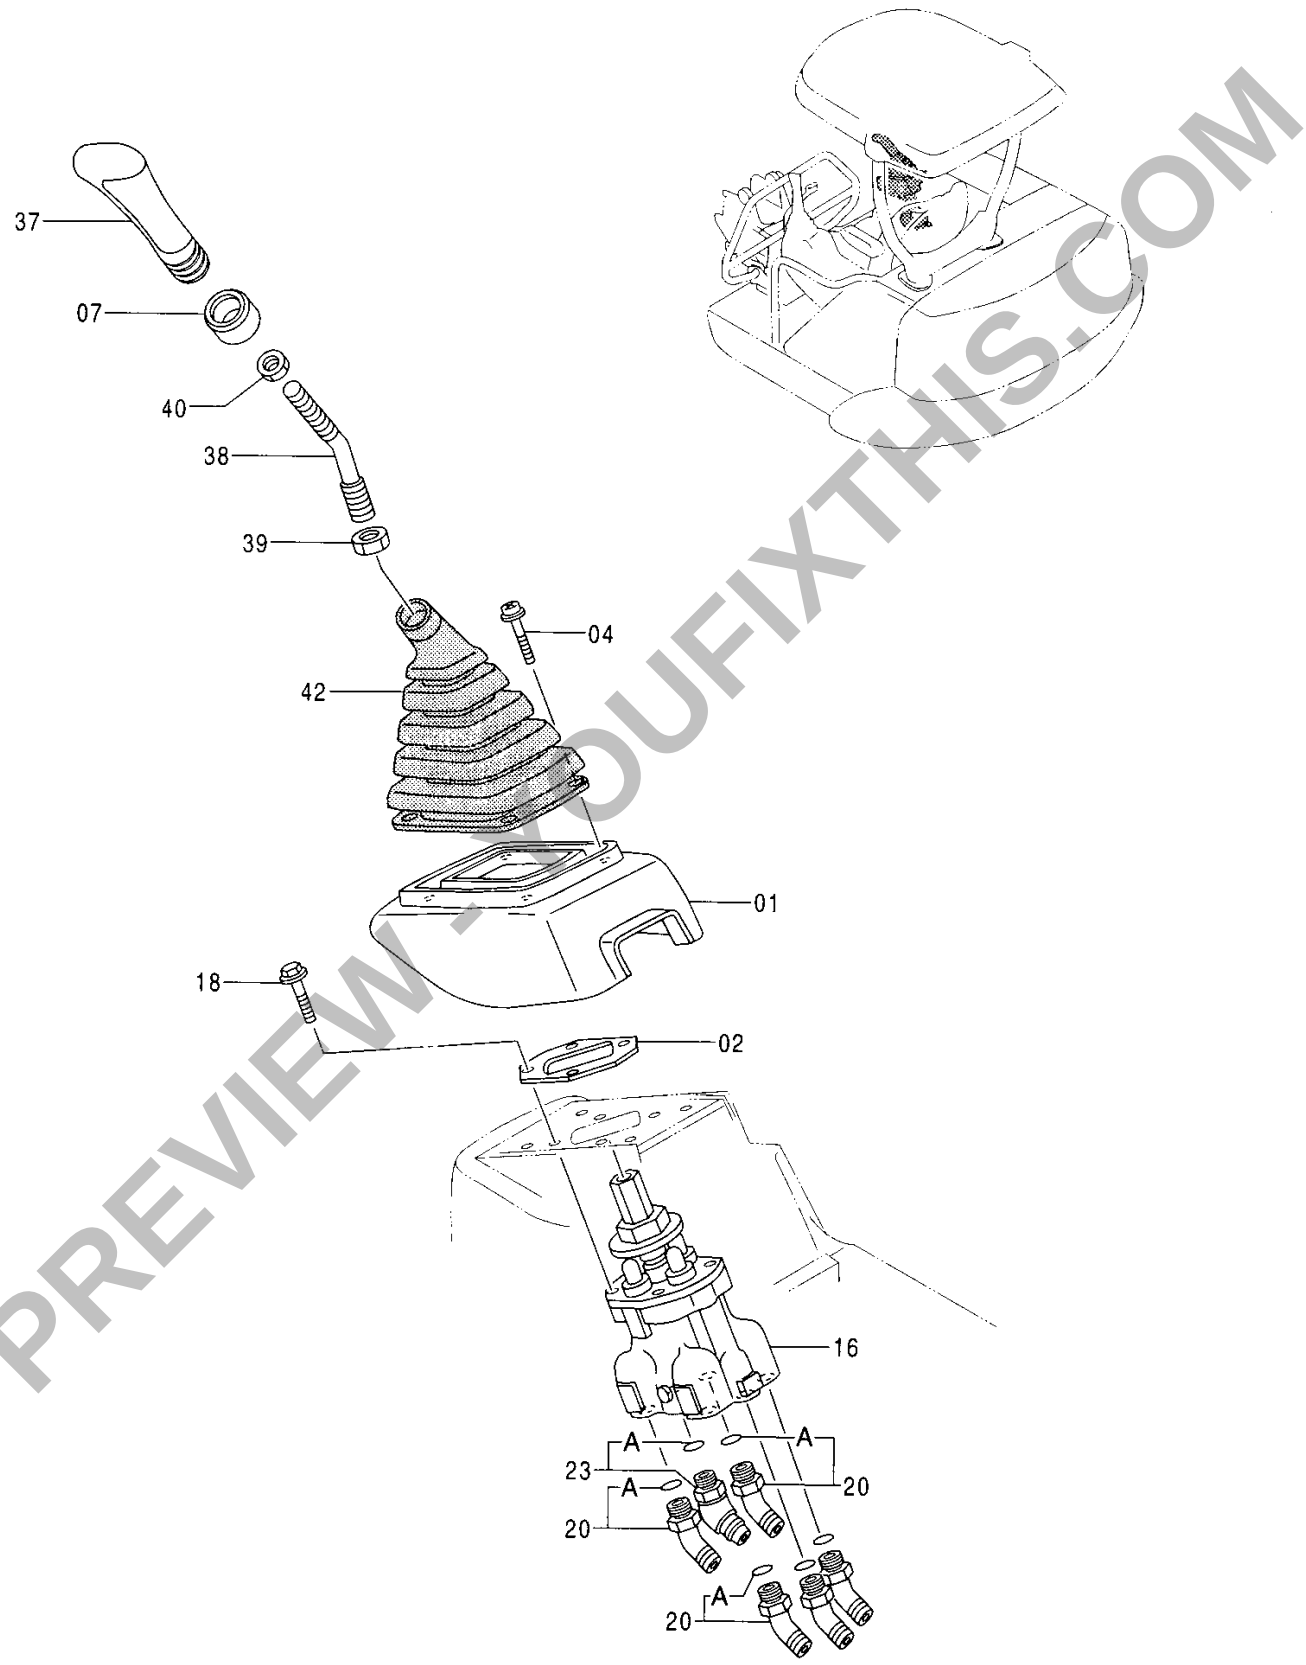

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

ITEM	PART NO.	PART NAME	Q'TY	S.C	SERIAL NO.	ICA	REPLACEABLE	REPLACEABLE
00	4289615	PANEL;GAUGE	1			I	4289616	1
01	4310843	.METER	1					
02	4310841	.HOUSING	1					
03	4310834	.GROMMET	1					
04	4288796	.CAP	1					
05	4310832	.HOUSING	1					
06	4310840	.BOARD;CONTROL	1					
07	4310830	.SWITCH	1					
08	4310829	.CAP	2					
09	4310828	.CAP	2					
10	4310827	.CASE	2					
11	4310826	.CASE	2					
12	4310825	.GROMMET	1					
13	4310824	.HARNESS;WIRE	1					
14	4310823	.BULB	9					
15	4310822	.DIODE	1					
16	4310821	.CLAMP	1					
17	4310820	.CLAMP	1					
18	4310819	.SCREW	4					
19	4310818	.SCREW	2					
20	4310817	.SCREW	6					
21	4310816	.SCREW	7					
102	J850435	SCREW	2					
103	J850425	SCREW	1					
104	J251004	WASHER;SPRING	3					
105	J250004	WASHER;PLANE	3					

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

ITEM	PART NO.	PART NAME	Q'TY	S.C	SERIAL NO.	ICA	REPLACEABLE	REPLACEABLE
00-08	9106668	LOWER ROLLER ASS'Y	8					
00	9106667	.ROLLER ASS'Y	1					
00A	8052183	..ROLLER	1					
00B	3056041	..BUSHING	2					
01	2037622	.COLLAR	1	#	01308□`			
02	2032635	.COLLAR	2		□`01307			
02	2032635	.COLLAR	1	#	01308□`			
03	3058192	.AXLE	1					
04	4285034	.RING;STOPPER	2					
06	A810025	.O-RING	2					
07	94-2010	.PLUG	2		□`01307			
07	94-2010	.PLUG	1	#	01308□`			
08	4274843	.SEAL;GROUP	2					
50	4303033	BOLT	16					
51	J222014	WASHER	16					

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

キャブ (5)
Cab (5)

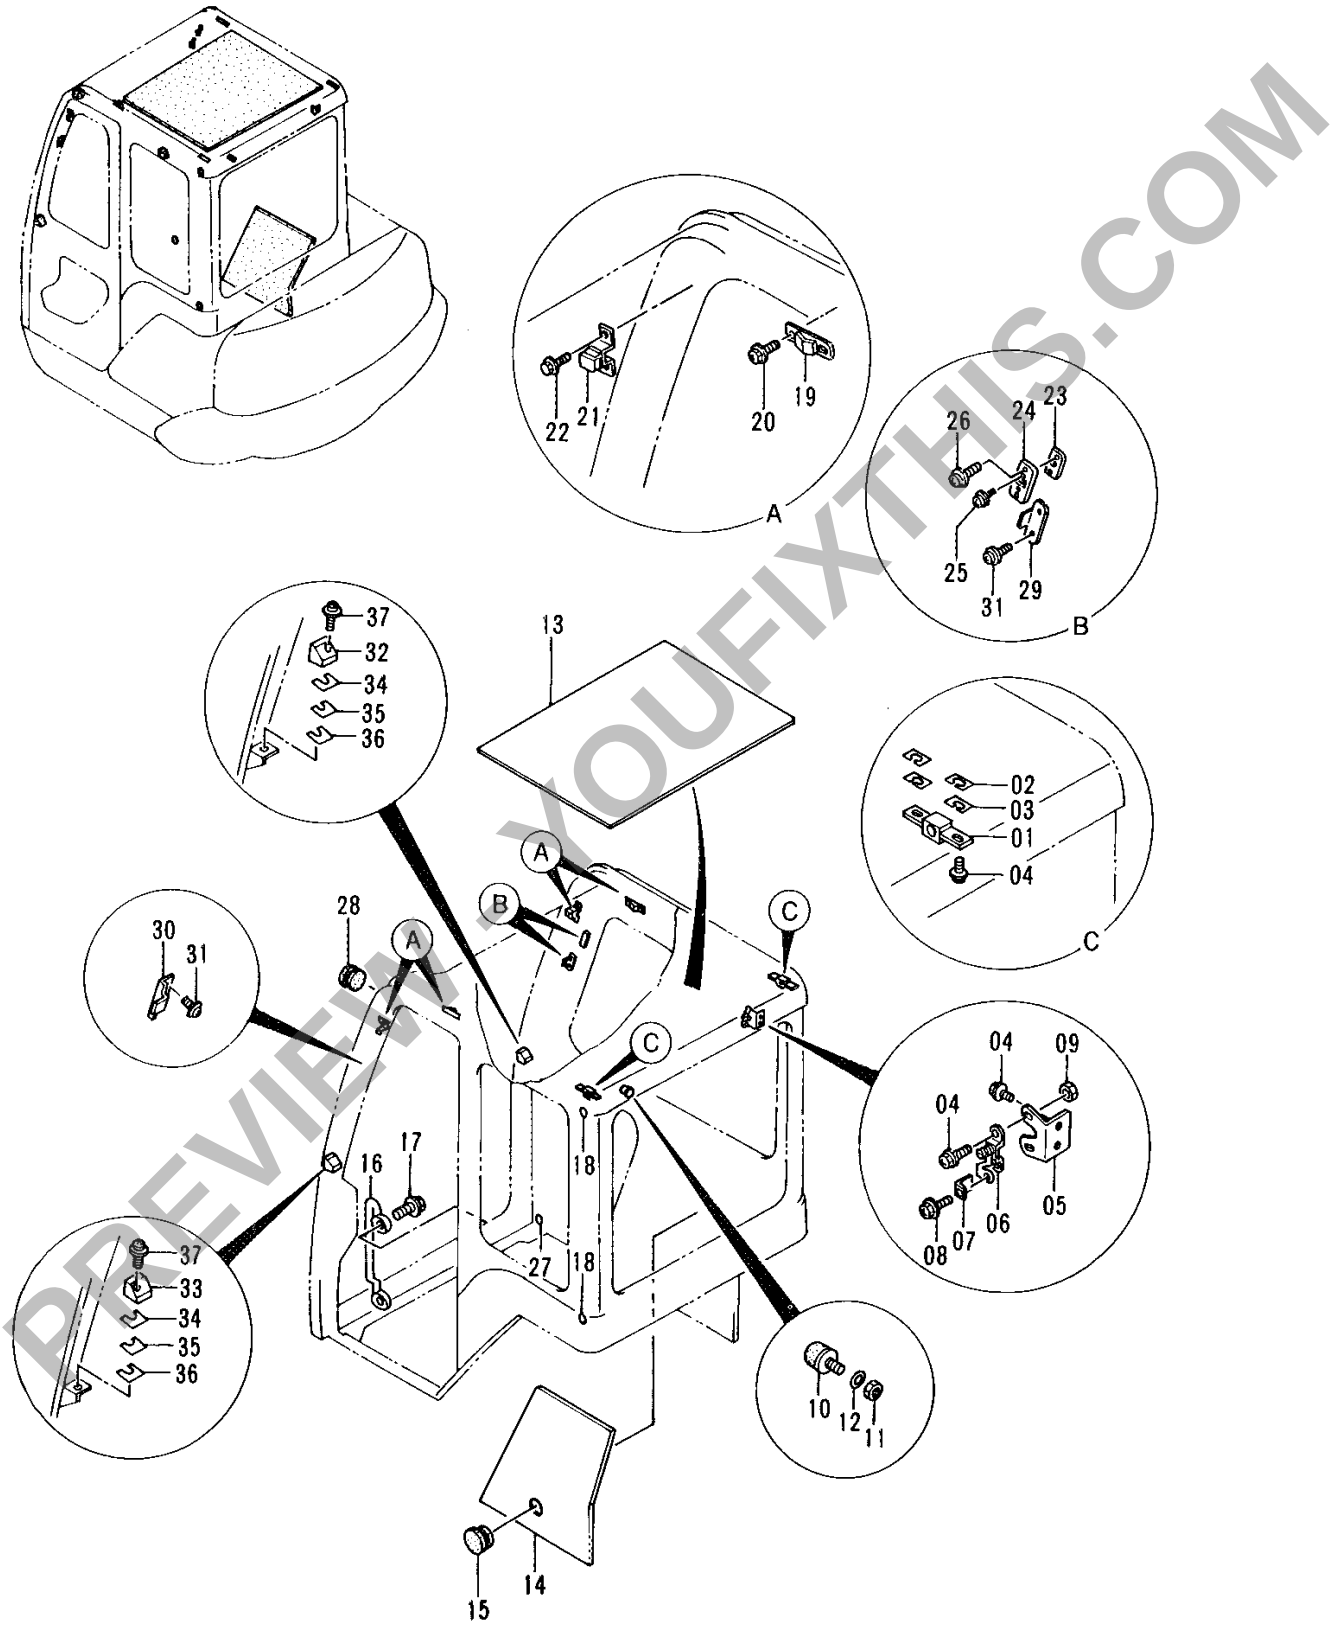

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

ITEM	PART NO.	PART NAME	Q'TY	S.C	SERIAL NO.	ICA	REPLACEABLE	REPLACEABLE
00	3060750	NAME-PLATE (MFG. NO.)	1					
01	4295995	RIVET	4					
02	2033676	NAME-PLATE(LUBRICATION)	1					
03	4295807	NAME-PLATE (LEVER LOCK)	2					
04	3060411	NAME-PLATE(NAME OF COMPANY)	1		□`00459			
05	3060416	NAME-PLATE(NAME OF COMPANY)	1					
06	3060487	NAME-PLATE(NAME OF COMPANY)	1					
08	3060490	NAME-PLATE (ACCENT)	1					
09	2034307	NAME-PLATE (WHITE)(NAME OF MA	1	#				
09	2036410	NAME-PLATE (LILAC)(NAME OF MA	1	#	00965□`			
10	2033661	NAME-PLATE (STAY OUT)	1					
11	4297360	NAME-PLATE (SWING LOCK)	1					
12	4278281	NAME-PLATE (HYD. OIL)	1					
13	4298944	NAME-PLATE (FUEL)	1					
14	4295812	NAME-PLATE (OPERATION)(ISO PA	1					
15	4288344	NAME-PLATE (LLC)	1					
16	4290468	NAME-PLATE(TRACK ADJUSTER)	1					
17	4296681	NAME-PLATE(LUBRICATION)	1					
18	1018001	NAME-PLATE (ACCENT)	1					
19	1018002	NAME-PLATE (ACCENT)	1					
20	3059274	NAME-PLATE (INSPECTION)	1					
21	4295806	NAME-PLATE (BOOM SWING)	1					
22	4295805	NAME-PLATE (FUEL LEVER)	1					
26	4299775	NAME-PLATE(CAUTION FOR SLOPE	1					
27	4298942	TAPE (ANTI-SKID TAPE)	1					

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 12 of 291 pages

The full manual includes:

- All 291 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Hitachi EX35 Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual