1. STRUCTURE

This service manual has been prepared as an aid to improve the quality of repairs by giving the serviceman an accurate understanding of the product and by showing him the correct way to perform repairs and make judgements. Make sure you understand the contents of this manual and use it to full effect at every opportunity.
This service manual mainly contains the necessary technical information for operations performed in a service workshop.
For ease of understanding, the manual is divided into the following sections.

SECTION 1 GENERAL
This section explains the safety hints and gives the specification of the machine and major components.

SECTION 2 STRUCTURE AND FUNCTION
This section explains the structure and function of each component. It serves not only to give an understanding of the structure, but also serves as reference material for troubleshooting.

SECTION 3 HYDRAULIC SYSTEM
This section explains the hydraulic circuit, single and combined operation.

SECTION 4 ELECTRICAL SYSTEM
This section explains the electrical circuit, monitoring system and each component. It serves not only to give an understanding electrical system, but also serves as reference material for trouble shooting.

SECTION 5 MECHATRONICS SYSTEM
This section explains the computer aided power optimization system and each component.

SECTION 6 TROUBLESHOOTING
This section explains the troubleshooting charts correlating **problems** to **causes**.

SECTION 7 MAINTENANCE STANDARD
This section gives the judgement standards when inspecting disassembled parts.

SECTION 8 DISASSEMBLY AND ASSEMBLY
This section explains the order to be followed when removing, installing, disassembling or assembling each component, as well as precautions to be taken for these operations.

SECTION 9 COMPONENT MOUNTING TORQUE
This section shows bolt specifications and standard torque values needed when mounting components to the machine.

The specifications contained in this shop manual are subject to change at any time and without any advance notice. Contact your HYUNDAI distributor for the latest information.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

CONTENTS

SECTION 1 GENERAL

Group 1 Safety Hints ····· 1-1
Group 2 Specifications ····· 1-10

SECTION 2 STRUCTURE AND FUNCTION

Group 1 Pump Device ····· 2-1
Group 2 Main Control Valve ····· 2-21
Group 3 Swing Device ····· 2-51
Group 4 Travel Device ····· 2-60
Group 5 RCV Lever ····· 2-67
Group 6 RCV Pedal ····· 2-74

SECTION 3 HYDRAULIC SYSTEM

Group 1 Hydraulic Circuit ····· 3-1
Group 2 Main Circuit ····· 3-2
Group 3 Pilot Circuit ····· 3-5
Group 4 Single Operation ····· 3-13
Group 5 Combined Operation ····· 3-23

SECTION 4 ELECTRICAL SYSTEM

Group 1 Component Location ····· 4-1
Group 2 Electrical Circuit ····· 4-3
Group 3 Electrical Component Specification ····· 4-20
Group 4 Connectors ····· 4-30

SECTION 5 MECHATRONICS SYSTEM

Group 1 Outline ····· 5-1
Group 2 Mode selection System ····· 5-3
Group 3 Automatic Deceleration System ····· 5-6
Group 4 Power Boost System ····· 5-7
Group 5 Travel Speed Control System ····· 5-8
Group 6 Automatic Warming Up Function ····· 5-9
Group 7 Engine Overheat Prevention Function ····· 5-10
Group 8 Anti-Restart system ····· 5-11

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


GROUP 1 SAFETY

FOLLOW SAFE PROCEDURE

Unsafe work practices are dangerous. Understand service procedure before doing work; Do not attempt shortcuts.


WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

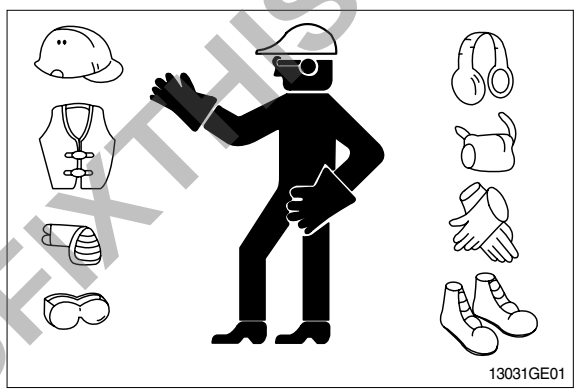


WARN OTHERS OF SERVICE WORK

Unexpected machine movement can cause serious injury.
Before performing any work on the excavator, attach a 「**Do Not Operate**」 tag on the right side control lever.

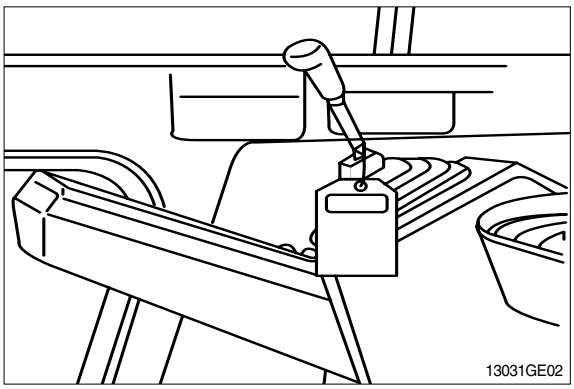

USE HANDHOLDS AND STEPS


Falling is one of the major causes of personal injury.
When you get on and off the machine, always maintain a three point contact with the steps and handrails and face the machine. Do not use any controls as handholds.
Never jump on or off the machine. Never mount or dismount a moving machine.
Be careful of slippery conditions on platforms, steps, and handrails when leaving the machine.

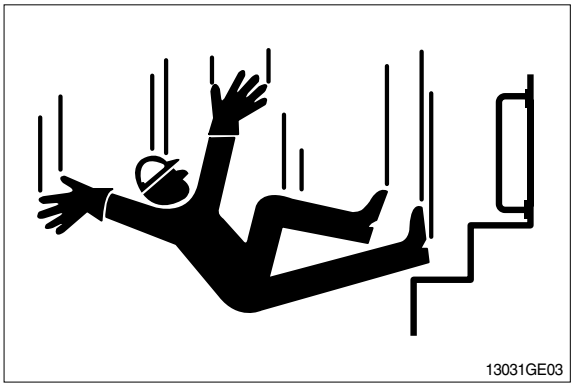

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

2. SPECIFICATIONS

1) ROBEX 210LC-7

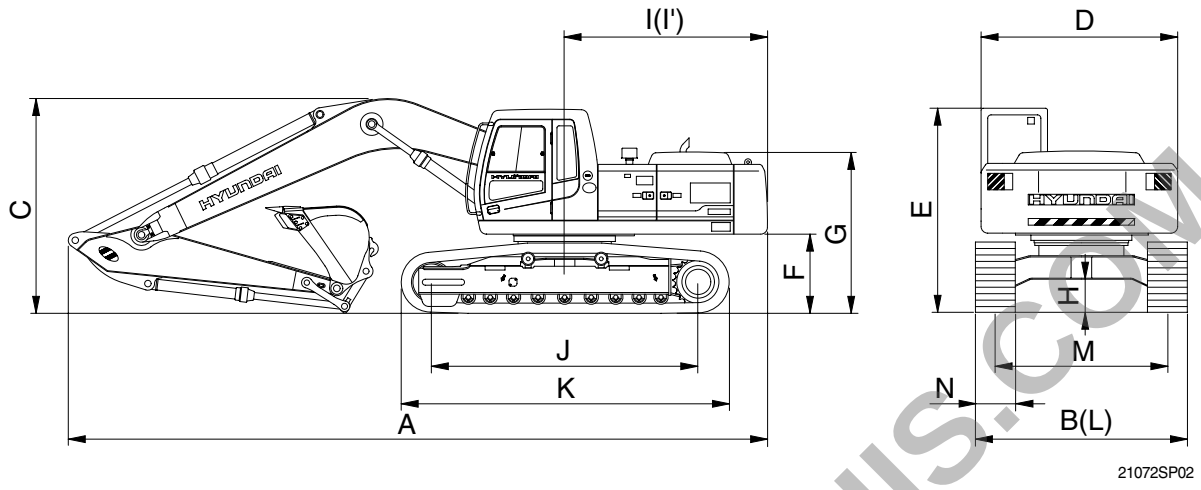

Description		Unit	Specification
Operating weight		kg(lb)	21700(47840)
Bucket capacity(SAE heaped), standard		$m^3(yd^3)$	0.92(1.20)
Overall length	A	mm(ft-in)	9520(31' 3")
Overall width, with 600mm shoe	B		2990(9' 10")
Overall height	C		2990(9' 10")
Superstructure width	D		2700(8' 10")
Overall height of cab	E		2920(9' 7")
Ground clearance of counterweight	F		1060(3' 6")
Engine cover height	G		2320(7' 7")
Minimum ground clearance	H		480(1' 7")
Rear-end distance	I		2770(9' 1")
Rear-end swing radius	I'		2830(9' 3")
Distance between tumblers	J		3650(12' 0")
Undercarriage length	K		4440(14' 7")
Undercarriage width	L		2990(9' 10")
Track gauge	M		2390(7' 10")
Track shoe width, standard	N		600(24")
Travel speed(Low/high)		km/hr(mph)	3.4/5.3(2.1/3.3)
Swing speed		rpm	12.5
Gradeability		Degree(%)	35(70)
Ground pressure(600mm shoe)		$kgf/cm^2(psi)$	0.46(6.54)


PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com


GROUP 1 PUMP DEVICE

1. STRUCTURE

The pump device consists of main pump, regulator and gear pump.

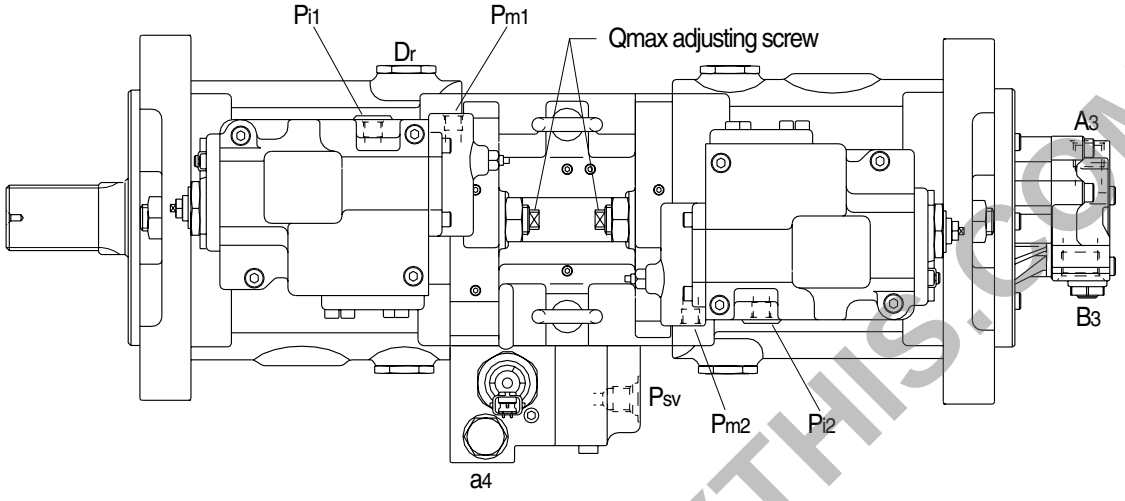

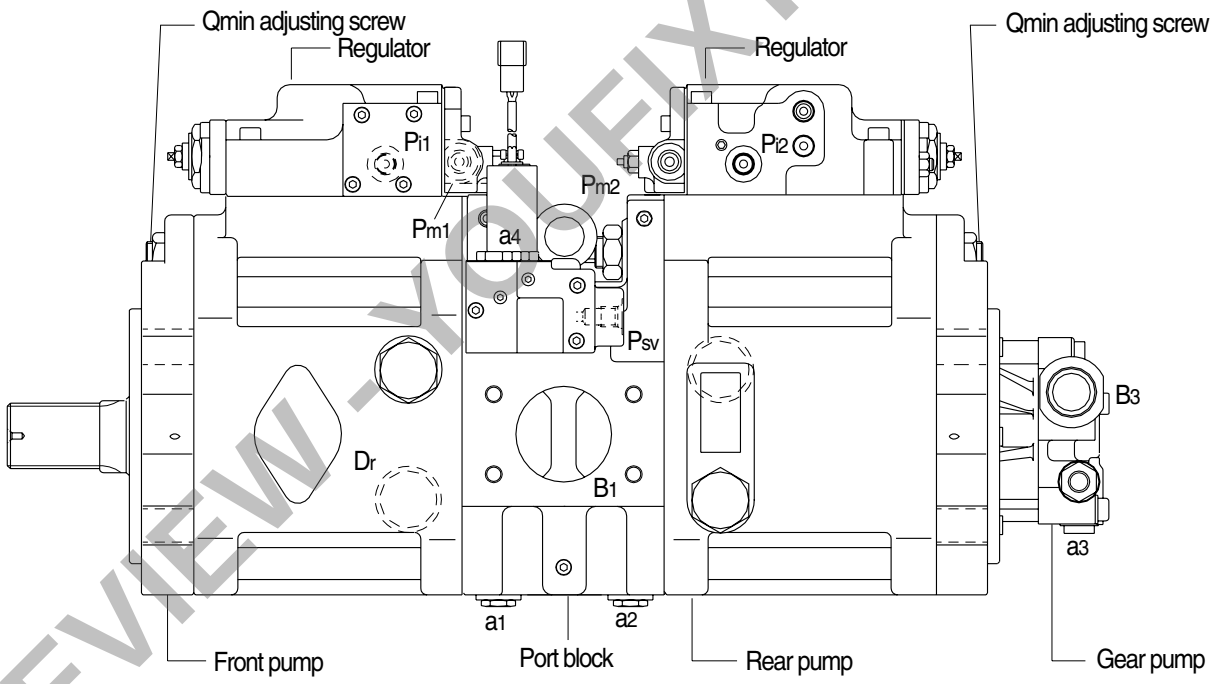

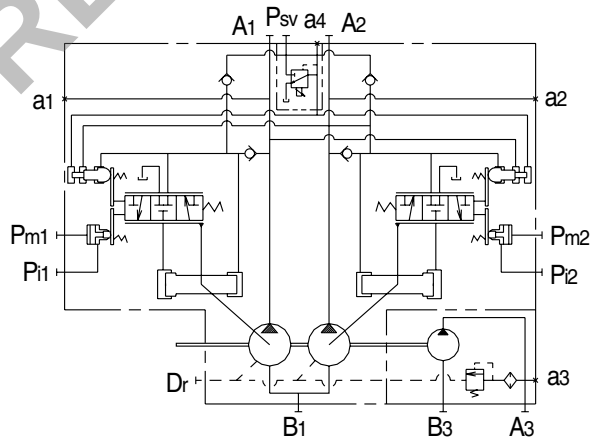


Port	Port name	Port size
A1,2	Delivery port	SAE6000psi 3/4"
B1	Suction port	SAE2500psi 2 1/2"
Dr	Drain port	PF 3/4 - 20
Pi1,i2	Pilot port	PF 1/4 - 15
Pm1,m2	Qmax cut port	PF 1/4 - 15
Psv	Servo assist port	PF 1/4 - 15
a1,2,4	Gauge port	PF 1/4 - 15
a3	Gauge port	PF 1/4-14
A3	Gear pump delivery port	PF 1/2 - 19
B3	Gear pump suction port	PF 3/4 - 20

Download full manual at youfixthis.com

PREVIEW - YOUFIXTHIS.COM

GROUP 1 HYDRAULIC CIRCUIT

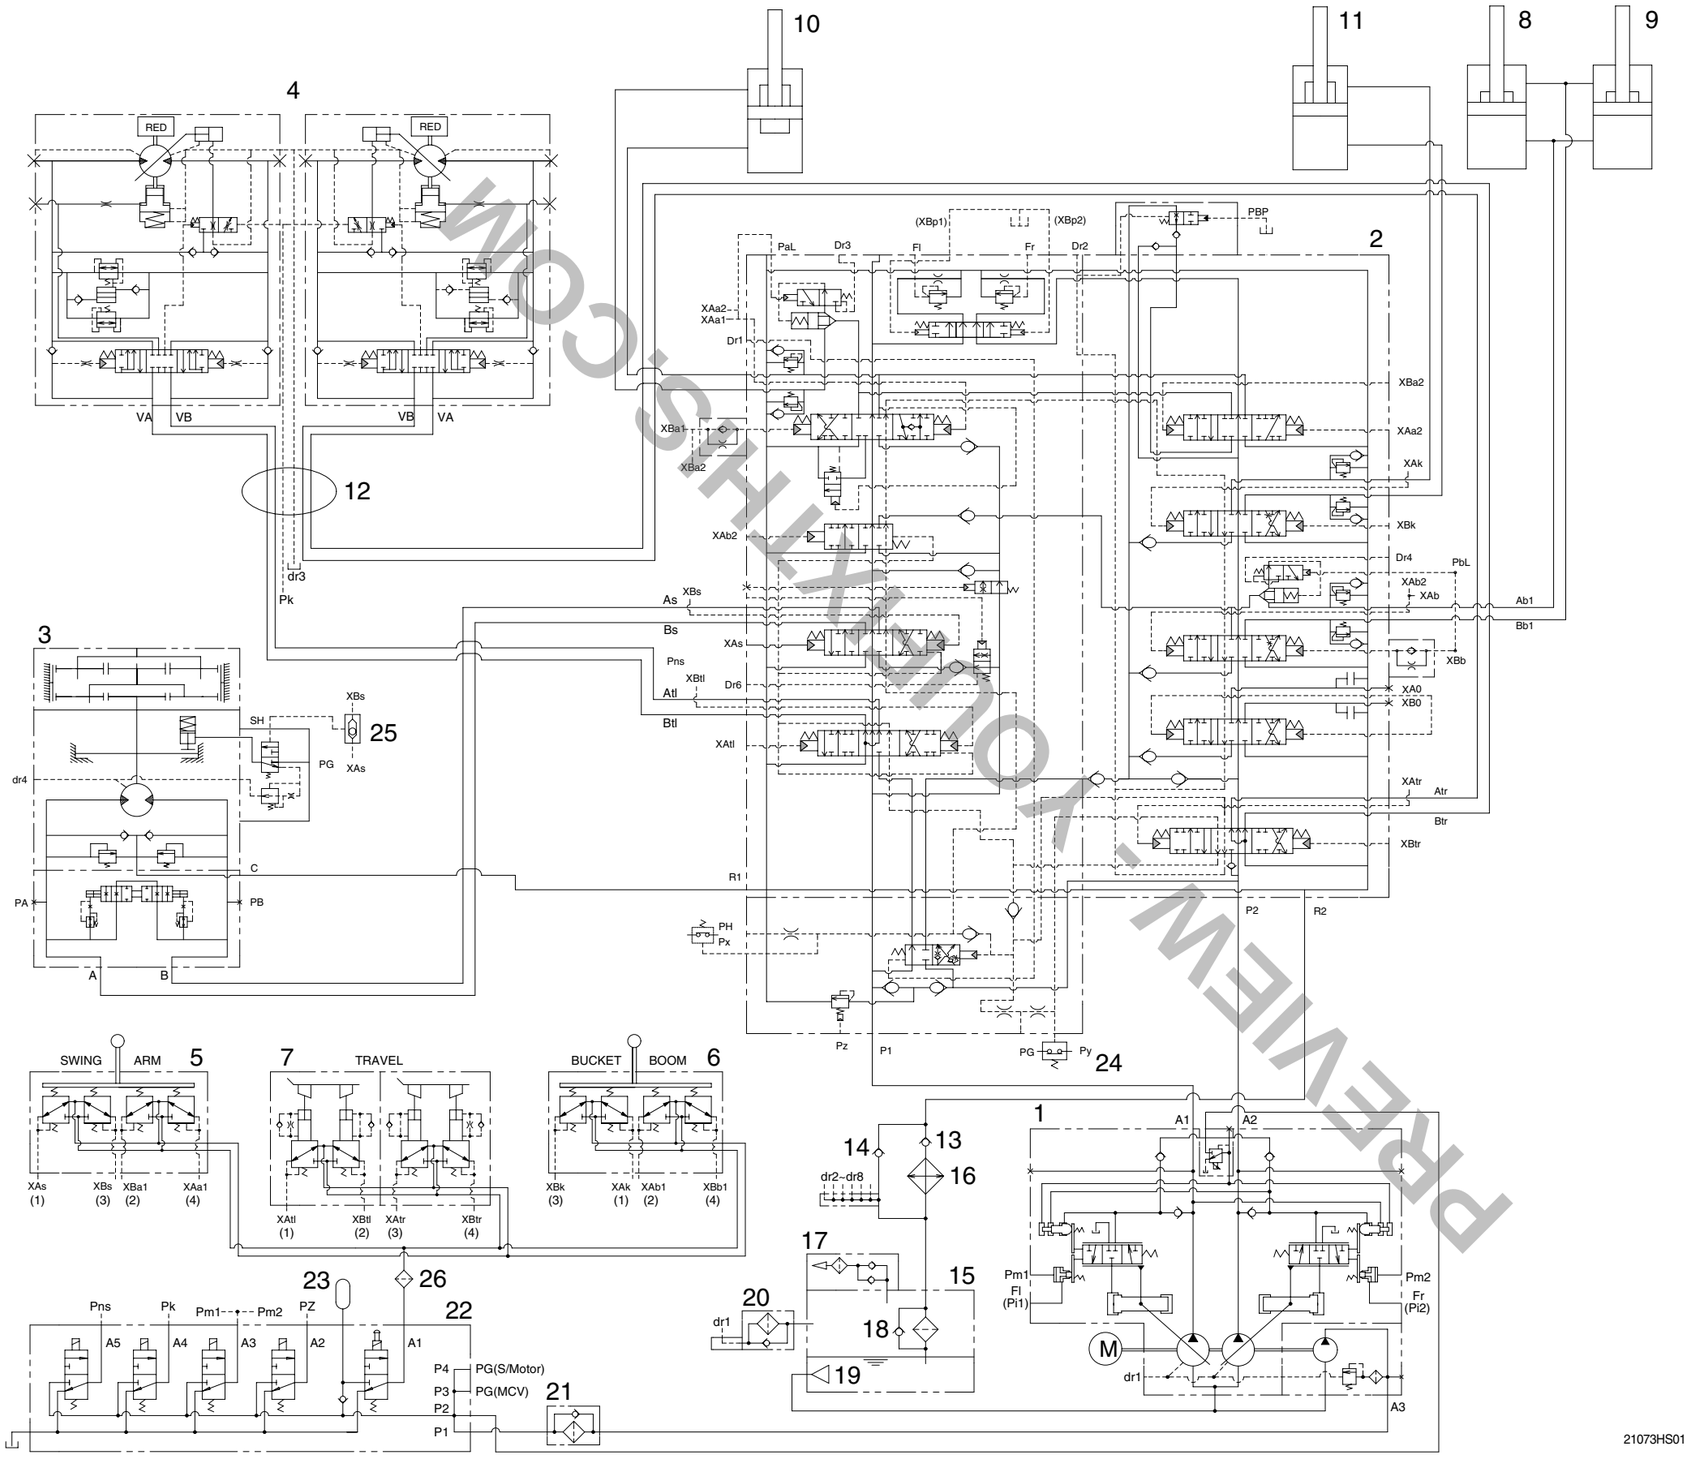


21073HS01

1 Main pump
2 Main control valve
3 Swing motor
4 Travel motor
5 RCV lever(LH)
6 RCV lever(RH)
7 RCV pedal
8 Boom cylinder(LH)
9 Boom cylinder(RH)
10 Arm cylinder
11 Bucket cylinder
12 Turning joint
13 Check valve
14 Check valve
15 Hydraulic tank
16 Oil cooler
17 Air breather
18 Bypass valve
19 Strainer
20 Spin filter
21 Line filter
22 Solenoid valve
23 Accumulator
24 Pressure switch
25 Shuttle valve
26 Last guard filter

PREVIEW - YOUFIXTHIS
Download full manual at youfixthis.com

GROUP 2 ELECTRICAL CIRCUIT

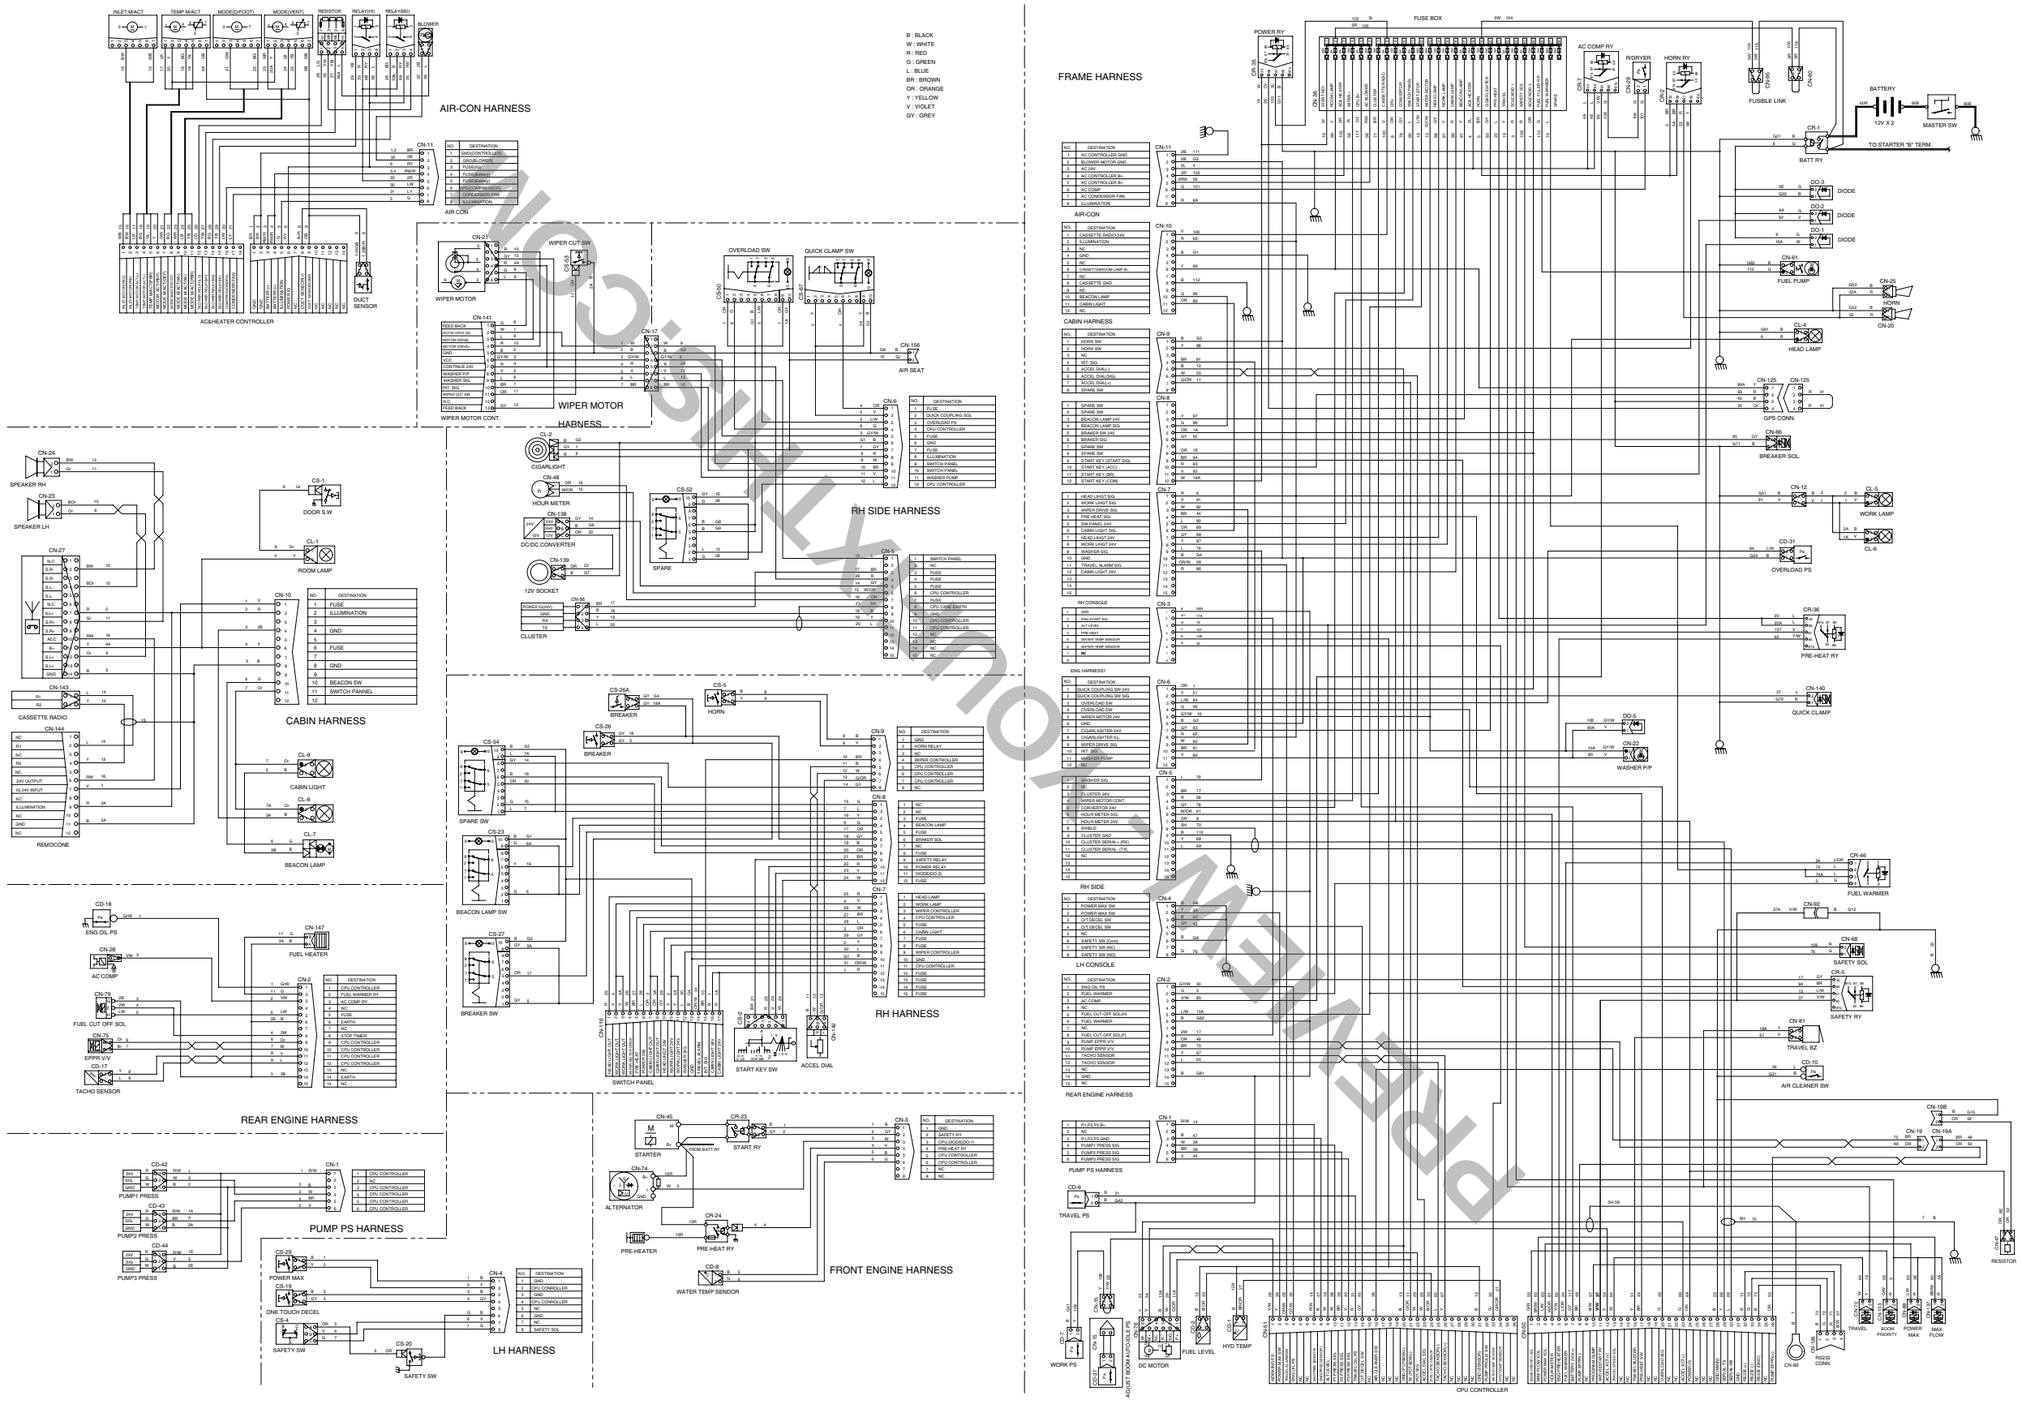

Download full manual at youfixthis.com
PREVIEW ONLY

21074EC55

SECTION 6 TROUBLESHOOTING

Group 1 Before Troubleshooting ····· 6-1
Group 2 Hydraulic and Mechanical System ····· 6-4
Group 3 Electrical System ····· 6-24
Group 4 Mechatronics System ····· 6-40

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

1. REMOVAL AND INSTALL

1) REMOVAL

(1) Lower the work equipment to the ground and stop the engine.

(2) Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping

(3) Loosen the breather slowly to release the pressure inside the hydraulic tank.

⚠ Escaping fluid under pressure can penetrate the skin causing serious injury.

(4) Loosen the drain plug under the hydraulic tank and drain the oil from the hydraulic tank.

- Hydraulic tank quantity : 180 ℓ

(5) Remove socket bolts(74) and disconnect pipe(1, 2).

(6) Disconnect pilot line hoses(4, 5, 6, 7, 8, 9, 10, 11).

(7) Remove socket bolts(72) and disconnect pump suction tube(3).


※ When pump suction tube is disconnected, the oil inside the piping will flow out, so catch it in oil pan.


(8) Sling the pump assembly and remove the pump mounting bolts.

- Weight : 120kg(265lb)

※ Pull out the pump assembly from housing. When removing the pump assembly, check that all the hoses have been disconnected.



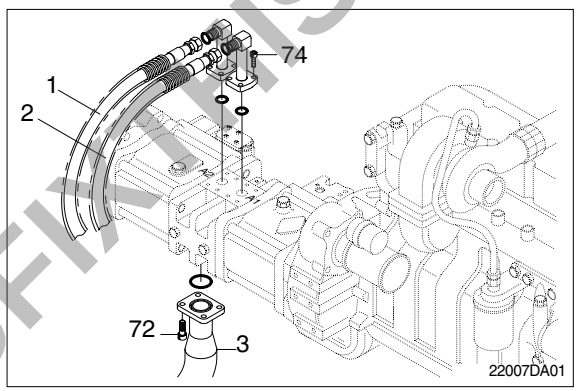

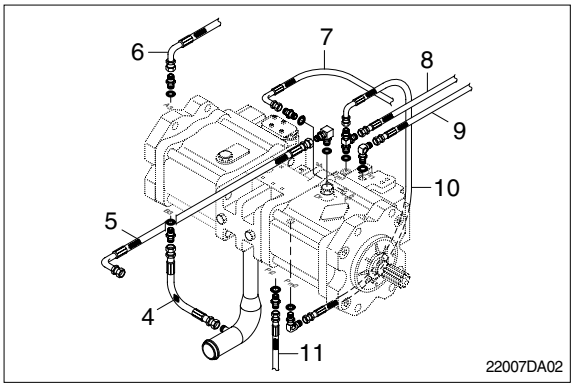

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

GROUP 2 TIGHTENING TORQUE

1. MAJOR COMPONENTS

No.	Descriptions		Bolt size	Torque	
				kgf · m	lbf · ft
1	Engine	Engine mounting bolt, nut	M24 × 3.0	90 ± 7.0	651 ± 51
2		Radiator mounting bolt	M12 × 1.75	12.8 ± 3.0	92.6 ± 21.7
3		Coupling mounting socket bolt	M18 × 2.5	32 ± 1.0	231 ± 7.2
4		Main pump housing mounting bolt	M10 × 1.5	4.8 ± 0.3	34.7 ± 2.2
5	Hydraulic system	Main pump mounting socket bolt	M20 × 2.5	42 ± 4.5	304 ± 32.5
6		Main control valve mounting nut	M12 × 1.75	12.2 ± 1.3	88.2 ± 9.4
7		Fuel tank mounting bolt	M20 × 2.5	45 ± 5.1	325 ± 36.9
8		Hydraulic oil tank mounting bolt	M20 × 2.5	45 ± 5.1	325 ± 36.9
9		Turning joint mounting bolt, nut	M12× 1.75	12.3 ± 1.3	88.9 ± 9.4
10	Power train system	Swing motor mounting bolt	M20 × 2.5	57.9 ± 8.7	419 ± 62.9
11		Swing bearing upper part mounting bolt	M20 × 2.5	57.8 ± 6.4	418 ± 46.3
12		Swing bearing lower part mounting bolt	M20 × 2.5	57.8 ± 6.4	418 ± 46.3
13		Travel motor mounting bolt	M16 × 2.0	23 ±2.5	166 ± 18.1
14		Sprocket mounting bolt	M16 × 2.0	26 ±4.0	188 ± 28.9
15	Under carriage	Carrier roller mounting bolt, nut	M16 × 2.0	23 ±2.5	166 ± 18.1
16		Track roller mounting bolt	M20 × 2.5	54.7 ± 5.0	396 ± 36.2
17		Track tension cylinder mounting bolt	M16 × 2.0	29.7 ± 4.5	215 ± 32.5
18		Track shoe mounting bolt, nut	M20 × 1.5	78 ± 8.0	564 ± 57.9
19		Track guard mounting bolt	M20 × 2.5	57.9 ± 8.7	419 ± 62.9
20	Others	Counter weight mounting bolt	M36 × 3.0	297 ± 33	2148 ± 239
21		Cab mounting bolt	M12 × 1.75	12.8 ± 3.0	92.6 ± 21.7
22		Operator's seat mounting bolt	M 8 × 1.25	4.05 ± 0.8	29.3 ± 5.8

※ For tightening torque of engine and hydraulic components, see each component disassembly and assembly.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Millimeters to inches

1mm = 0.03937in

	0	1	2	3	4	5	6	7	8	9
0		0.039	0.079	0.118	0.157	0.197	0.236	0.276	0.315	0.354
10	0.394	0.433	0.472	0.512	0.551	0.591	0.630	0.669	0.709	0.748
20	0.787	0.827	0.866	0.906	0.945	0.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.536
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.244	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.032	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898


Kilogram to Pound

1kg = 2.2046lb


	0	1	2	3	4	5	6	7	8	9
0		2.20	4.41	6.61	8.82	11.02	13.23	15.43	17.64	19.84
10	22.05	24.25	26.46	28.66	30.86	33.07	35.27	37.48	39.68	41.89
20	44.09	46.30	48.50	50.71	51.91	55.12	57.32	59.5.	61.73	63.93
30	66.14	68.34	70.55	72.75	74.96	77.16	79.37	81.57	83.78	85.98
40	88.18	90.39	92.59	94.80	97.00	99.21	101.41	103.62	105.82	108.03
50	110.23	112.44	114.64	116.85	119.05	121.25	123.46	125.66	127.87	130.07
60	132.28	134.48	136.69	138.89	141.10	143.30	145.51	147.71	149.91	152.12
70	154.32	156.53	158.73	160.94	163.14	165.35	167.55	169.76	171.96	174.17
80	176.37	178.57	180.78	182.98	185.19	187.39	189.60	191.80	194.01	196.21
90	198.42	200.62	202.83	205.03	207.24	209.44	211.64	213.85	216.05	218.26

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

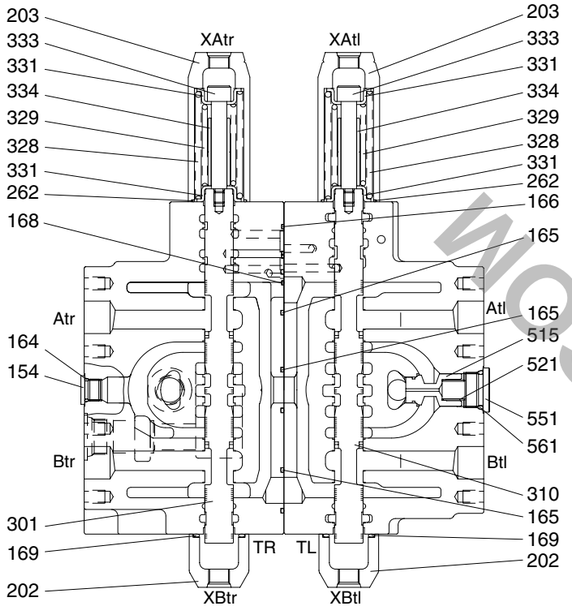


SECTION C-C

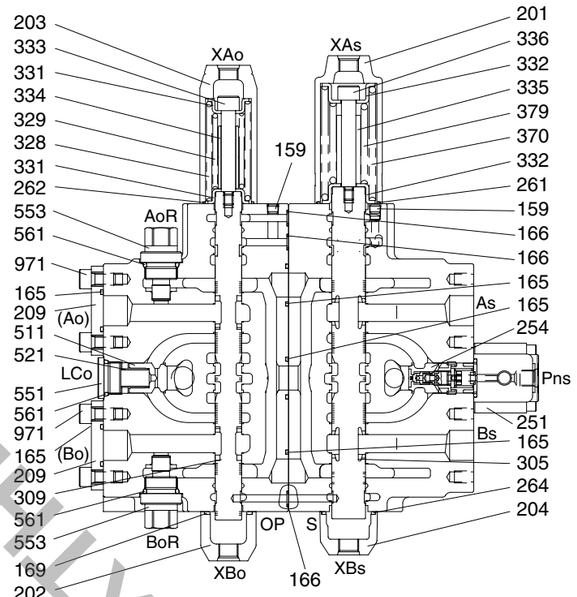


SECTION D-D

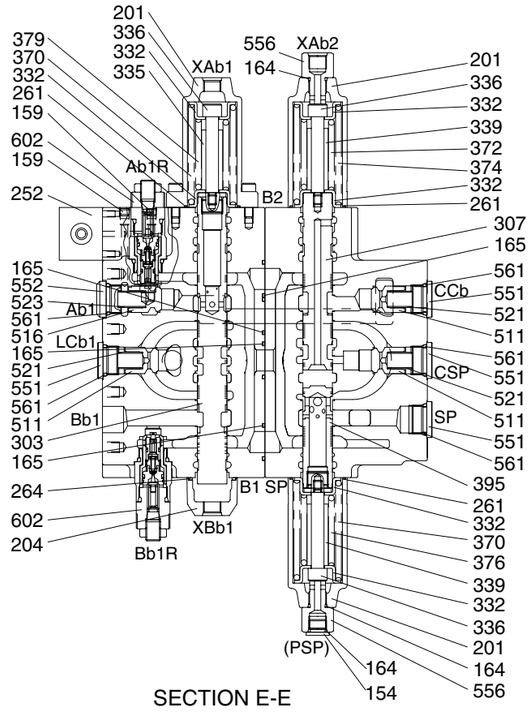


SECTION E-E

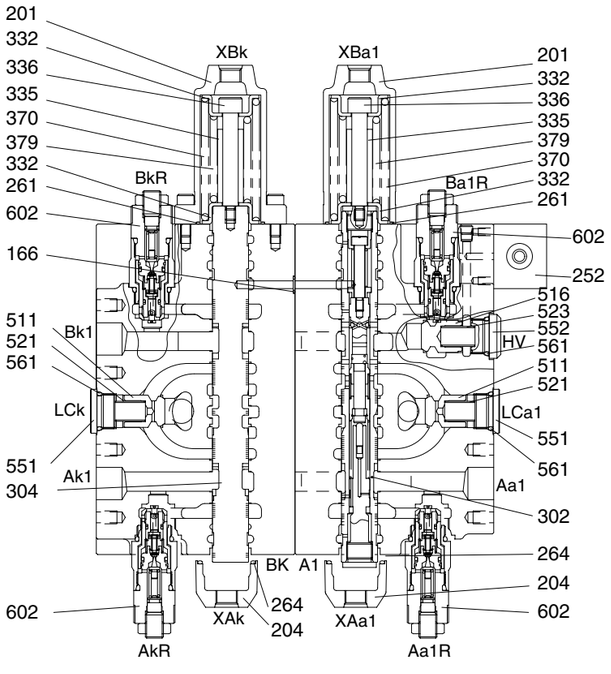

SECTION F-F

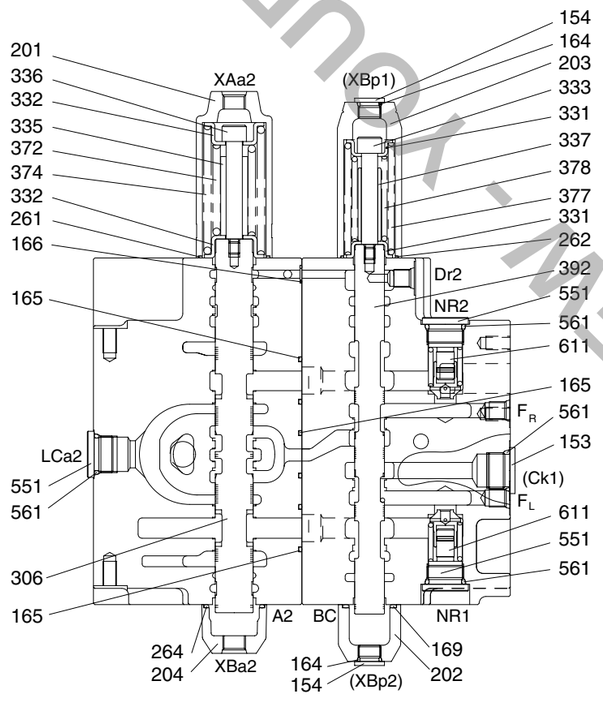


SECTION G-G

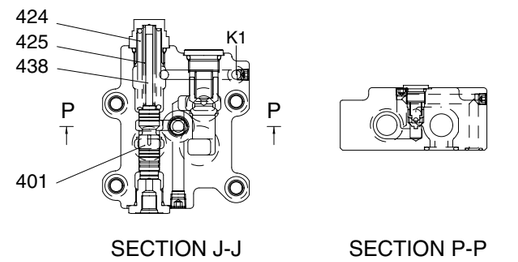


SECTION J-J


SECTION P-P

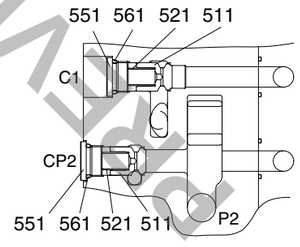

SECTION K-K

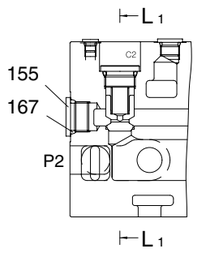

SECTION L-L

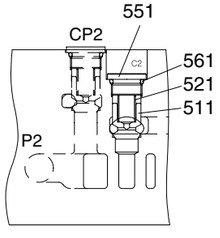


SECTION L 1 -L 1

21072MC14

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

(1) Case where handle is in neutral position





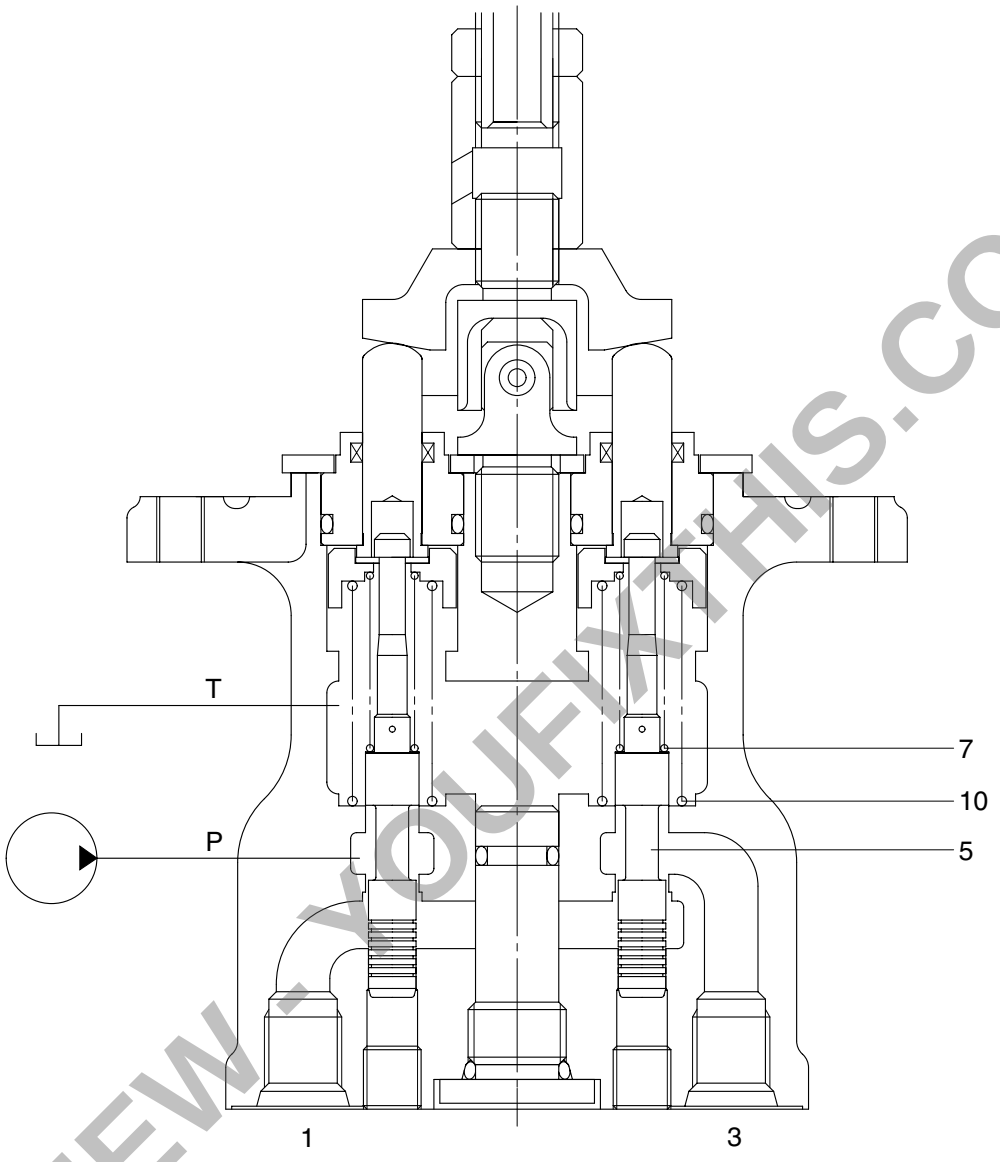


The force of the spring(7) that determines the output pressure of the pilot valve is not applied to the spool(5). Therefore, the spool is pushed up by the spring(10) to the position of port(1, 3) in the operation explanation drawing. Then, since the output port is connected to tank port T only, the output port pressure becomes equal to tank pressure.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

GROUP 3 ELECTRICAL COMPONENT SPECIFICATION

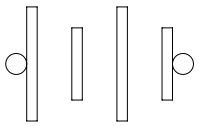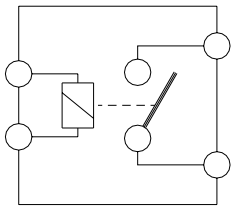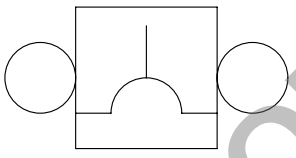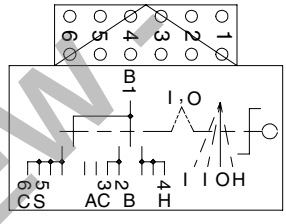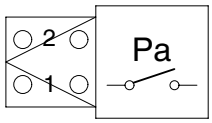Part name	Symbol	Specification	Check
Battery		12V × 100Ah (2EA)	※ Check specific gravity 1.280 over : Over charged 1.280 ~ 1.250 : Normal 1.250 below : Recharging
Battery relay	 CR-1	Rated load : 24V 100A(continuity) 1000A(30seconds)	※ Check coil resistance (M4 to M4) Normal : About 50 Ω ※ Check contact Normal : ∞ Ω
Reset button	 CS-60 CS-61	24V 60A	※ Check disconnection Normal : About 0 Ω Check button is up.
Start key		B-BR : 24V 1A B-ACC : 24V 10A B-ST : 24V 40A	※ Check contact OFF : ∞ Ω (For each terminal) ON : 0 Ω (For terminal 1-3 and 1-2) START : 0 Ω (For terminal 1-5)
Pressure switch (For overload)	 CD-31	3 ~ 6 kgf/cm² (N.O TYPE)	※ Check contact Normal : ∞(OPEN)

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

GROUP 12 MONITORING SYSTEM

1. OUTLINE


Monitoring system consists of the monitor part and switch part.

The monitor part gives warnings when any abnormality occurs in the machine and informs the condition of the machine.

Various select switches are built into the monitor panel, which act as the control portion of the machine control system.

2. CLUSTER

1) MONITOR PANEL

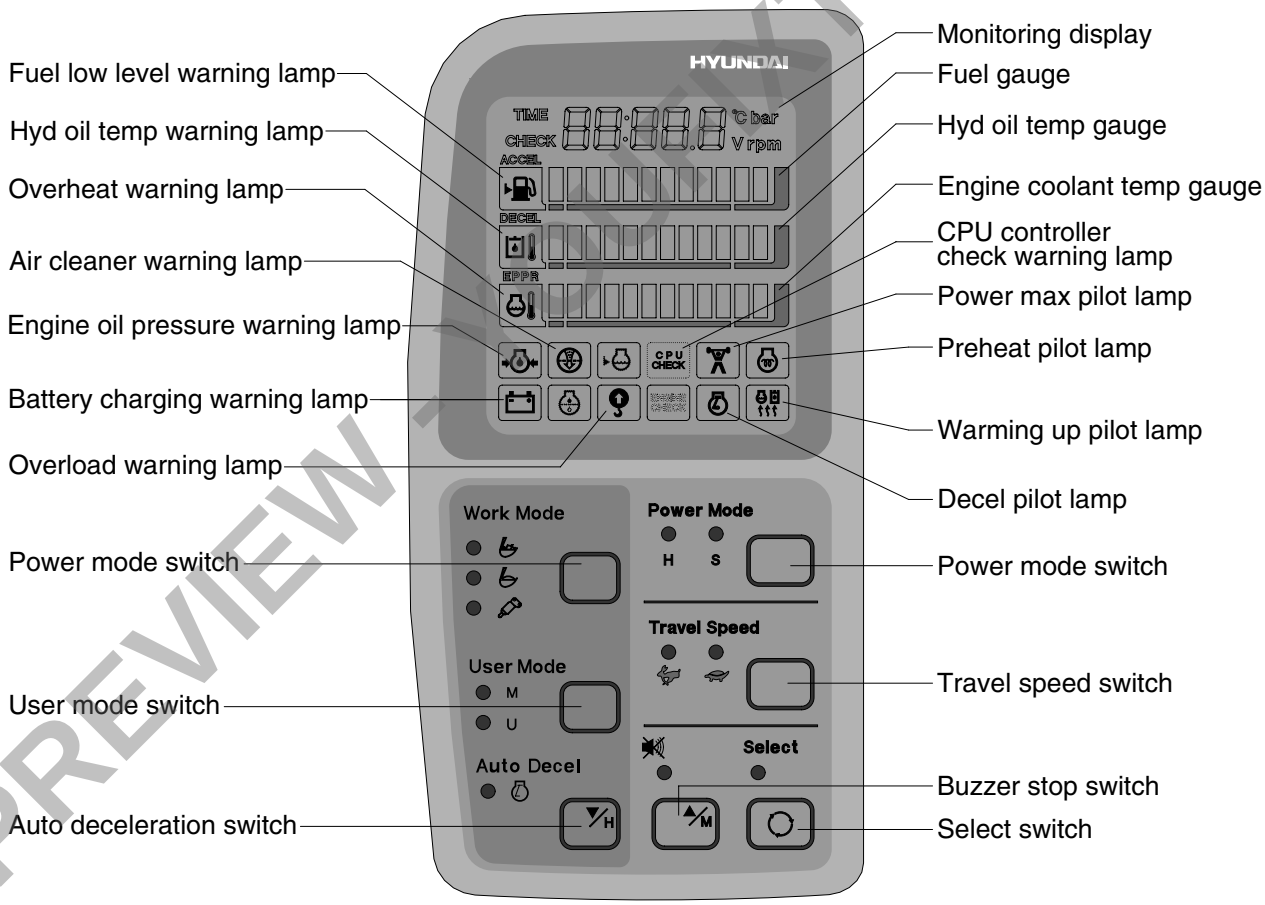

21075MS66


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

2) TEST PROCEDURE


(1) **Test 3 :** Check electric current at EPPR valve at S-mode

① Install multimeter as figure.
② Start engine.
③ Set the accel dial at "10"(max)
④ Set S-mode with 1950±50rpm.
⑤ Check electric current.

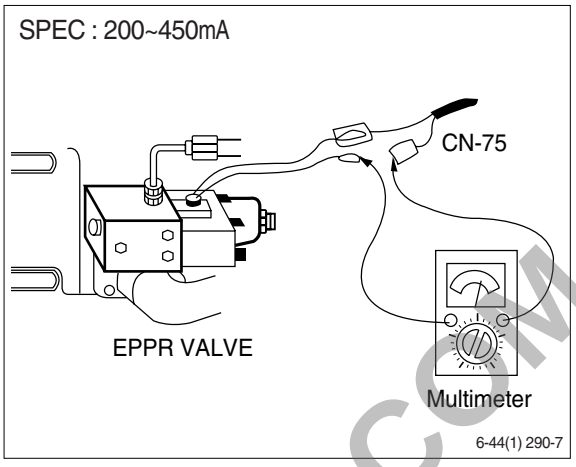

(2) **Test 4 :** Check pressure at EPPR valve at S-mode

① Connect pressure gauge at EPPR valve.
② Start engine.
③ Set the accel dial at "10"(max)
④ Set S-mode with 1950±50rpm.
⑤ Operate bucket lever completely push or pull.
⑥ Hold arm lever at the end of stroke.
⑦ Check pressure at relief position.

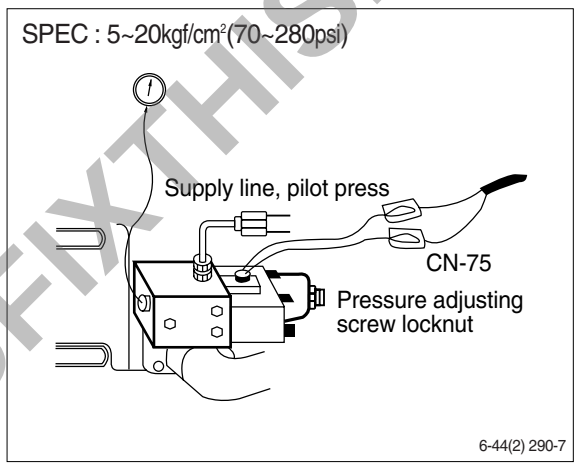


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

(7) Pull cylinder block(141) out of pump casing(271) straightly over drive shaft(111). Pull out also pistons(151), set plate(153), spherical bush(156) and cylinder springs(157) simultaneously.

※ Take care not to damage sliding surfaces of cylinder, spherical bushing, shoes, swash plate, etc.

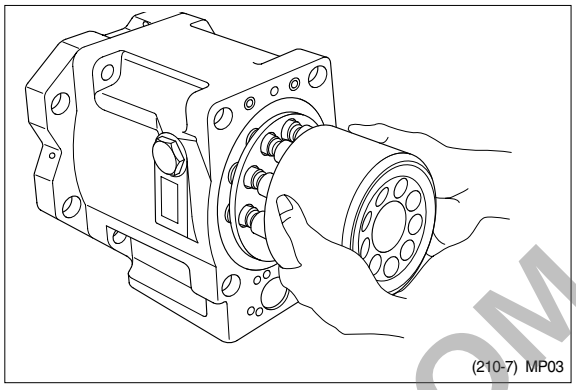

(210-7) MP03

(8) Remove hexagon socket head bolts(406) and then seal cover(F, 261).


※ Fit bolt into pulling out tapped hole of seal cover(F), and cover can be removed easily.

※ Since oil seal is fitted on seal cover(F), take care not to damage it in removing cover.


(9) Remove hexagon socket head bolts(408) and then seal cover(R, 262).
In case fitting a gear pump, first, remove gear pump.

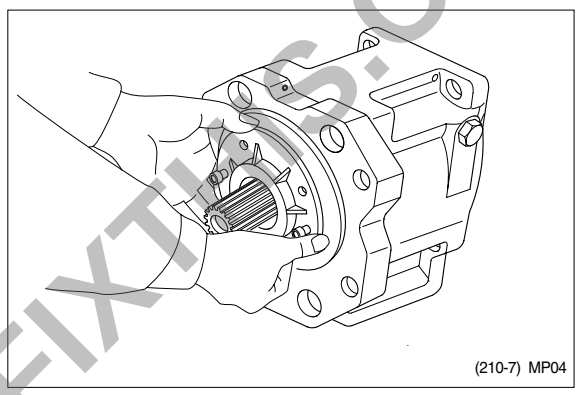
(210-7) MP04

(10) Tapping lightly fitting flange section of swash plate support(251) on its pump casing side, separate swash plate support from pump casing.

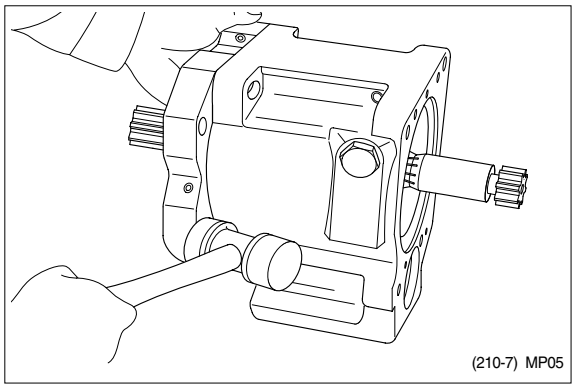
(210-7) MP05


(11) Remove shoe plate(211)and swash plate(212) from pump casing(271).

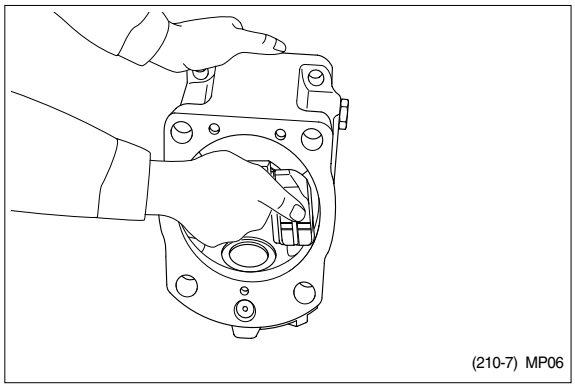

(210-7) MP06

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


(6) Loosen adjusting nut(19) and plate(18) with spanners on them respectively, and remove them.

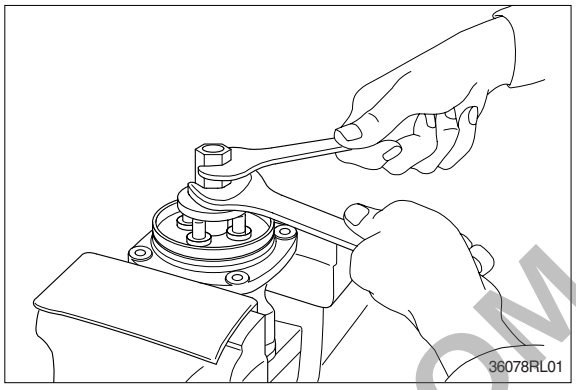


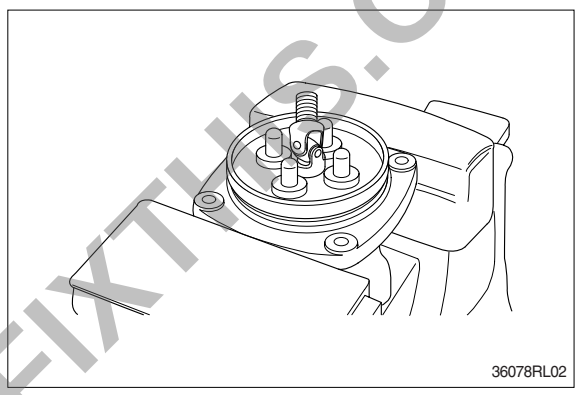

(7) Turn joint anticlockwise to loosen it, utilizing jig(Special tool).

※ When return spring(10) is strong in force, plate(15), plug(11) and push rod(14) will come up on loosening joint.
Pay attention to this.

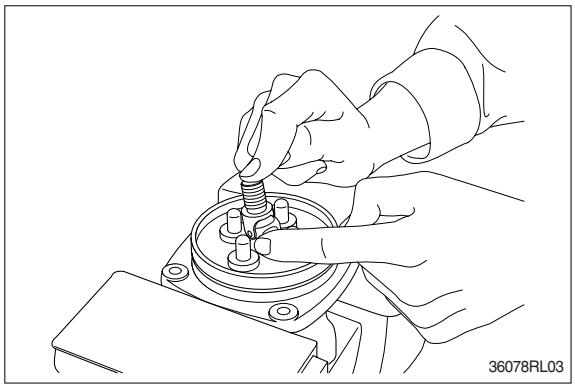

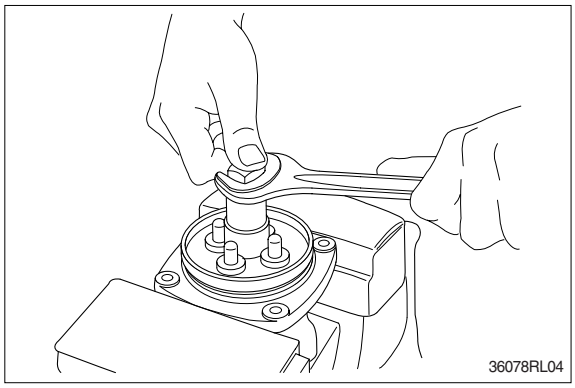

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 18 of 481 pages

The full manual includes:

- All 481 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Hyundai R210LC-7, R210LC-7 LONG REACH Shop Manual

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual