
2. SPECIFICATIONS

1) R210LC-9

· 5.68 m (18' 8") BOOM and 2.92 m (9' 7") ARM

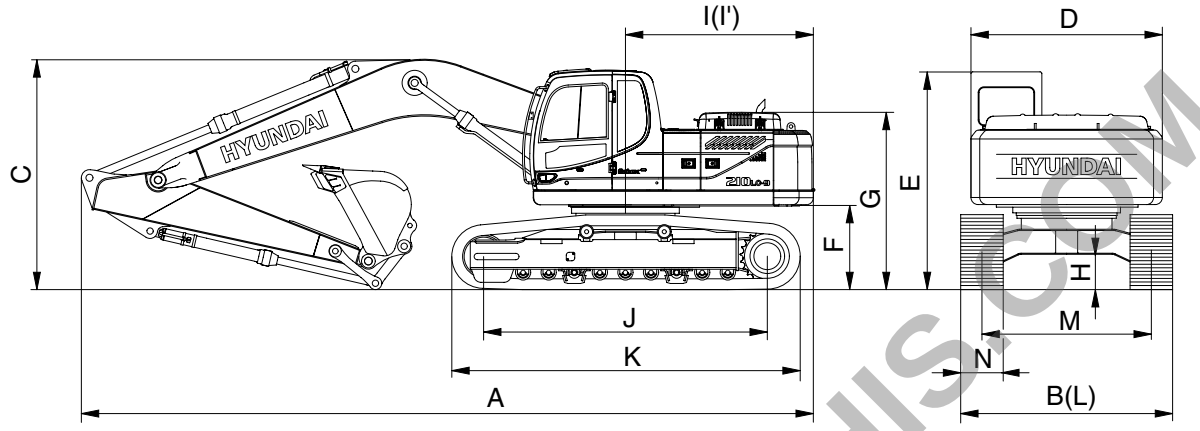


21092SP02

Description		Unit	Specification
Operating weight		kg (lb)	21900 (48280)
Bucket capacity (SAE heaped), standard		m^3 (yd^3)	0.92 (1.20)
Overall length	A	mm (ft-in)	9530 (31' 3")
Overall width, with 600mm shoe	B		2990 (9' 10")
Overall height	C		3030 (9' 11")
Superstructure width	D		2740 (9' 0")
Overall height of cab	E		2920 (9' 7")
Ground clearance of counterweight	F		1060 (3' 6")
Engine cover height	G		2320 (7' 7")
Minimum ground clearance	H		480 (1' 7")
Rear-end distance	I		2770 (9' 1")
Rear-end swing radius	I'		2840 (9' 4")
Distance between tumblers	J		3650 (12' 0")
Undercarriage length	K		4440 (14' 7")
Undercarriage width	L		2990 (9' 10")
Track gauge	M		2390 (7' 10")
Track shoe width, standard	N		600 (24")
Travel speed (low/high)		km/hr (mph)	3.4/5.3 (2.1/3.3)
Swing speed		rpm	12.0
Gradeability		Degree (%)	35 (70)
Ground pressure (600 mm shoe)		kgf/cm^2 (psi)	0.46 (6.54)
Max traction force		kg (lb)	21100 (46500)

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


GROUP 1 HYDRAULIC CIRCUIT

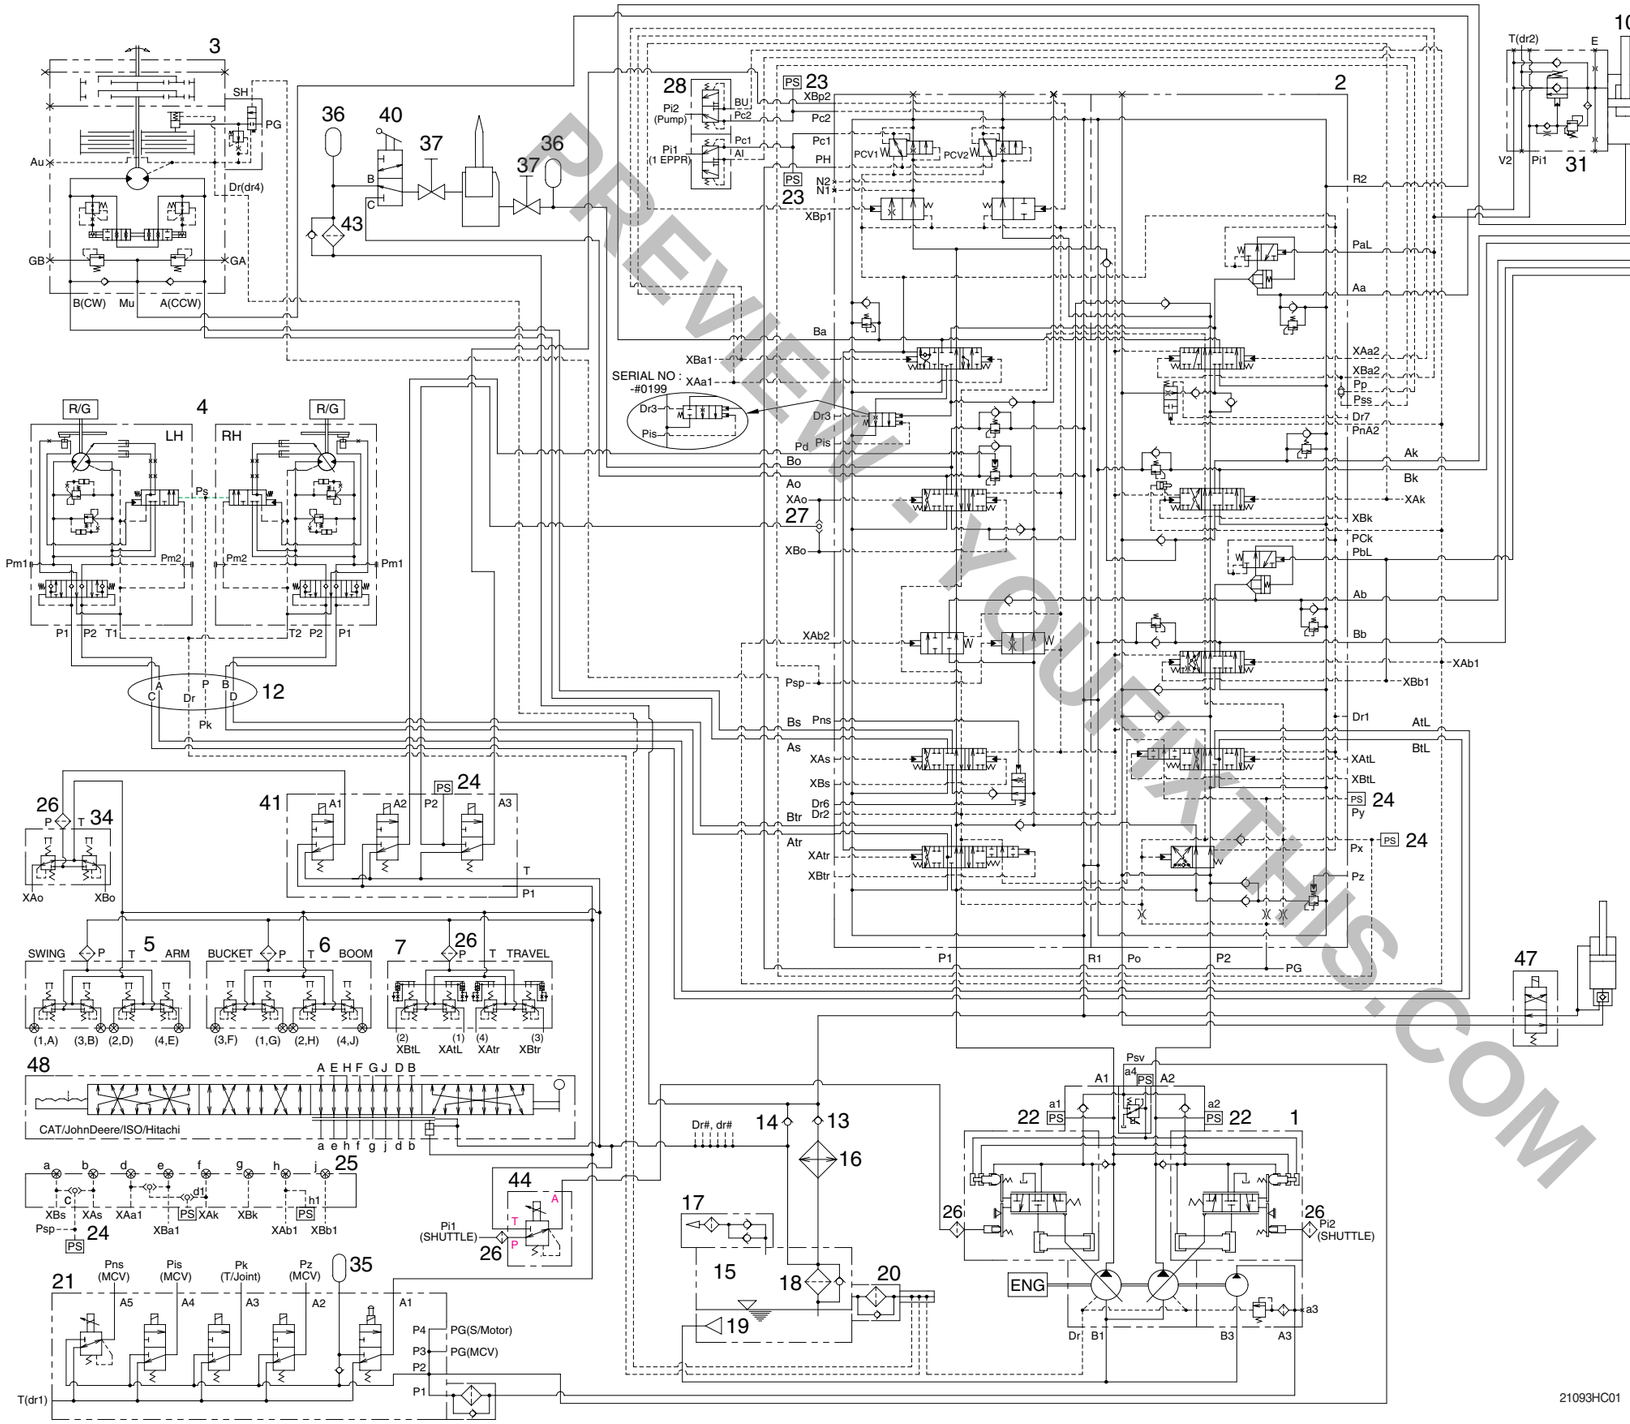

1 Main pump
2 Main control valve
3 Swing motor
4 Travel motor
5 RCV lever(LH)
6 RCV lever(RH)
7 RCV pedal
8 Boom cylinder(LH)
9 Boom cylinder(RH)
10 Arm cylinder
11 Bucket cylinder
12 Turning joint
13 Check valve
14 Check valve
15 Hydraulic tank
16 Oil cooler
17 Air breather
18 Bypass valve
19 Strainer
20 Drain filter
21 Solenoid valve
22 Pressure sensor
23 Posi-nega pressure sensor(Option)
24 Pressure sensor
25 Shuttle block
26 Last guard filter
27 Shuttle valve(Option)
28 Shuttle valve
30 Boom safety valve(Option)
31 Arm safety valve(Option)
34 Breaker pedal(Option)
35 Accumulator
36 Accumulator(Option)
37 Stop valve(Option)
40 Selector valve(Option)
41 Solenoid valve(Option)
43 Breaker return filter(Option)
44 EPPR valve(Option)
47 Quick clamp solenoid valve(Option)
48 Pattern change valve(Option)

PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

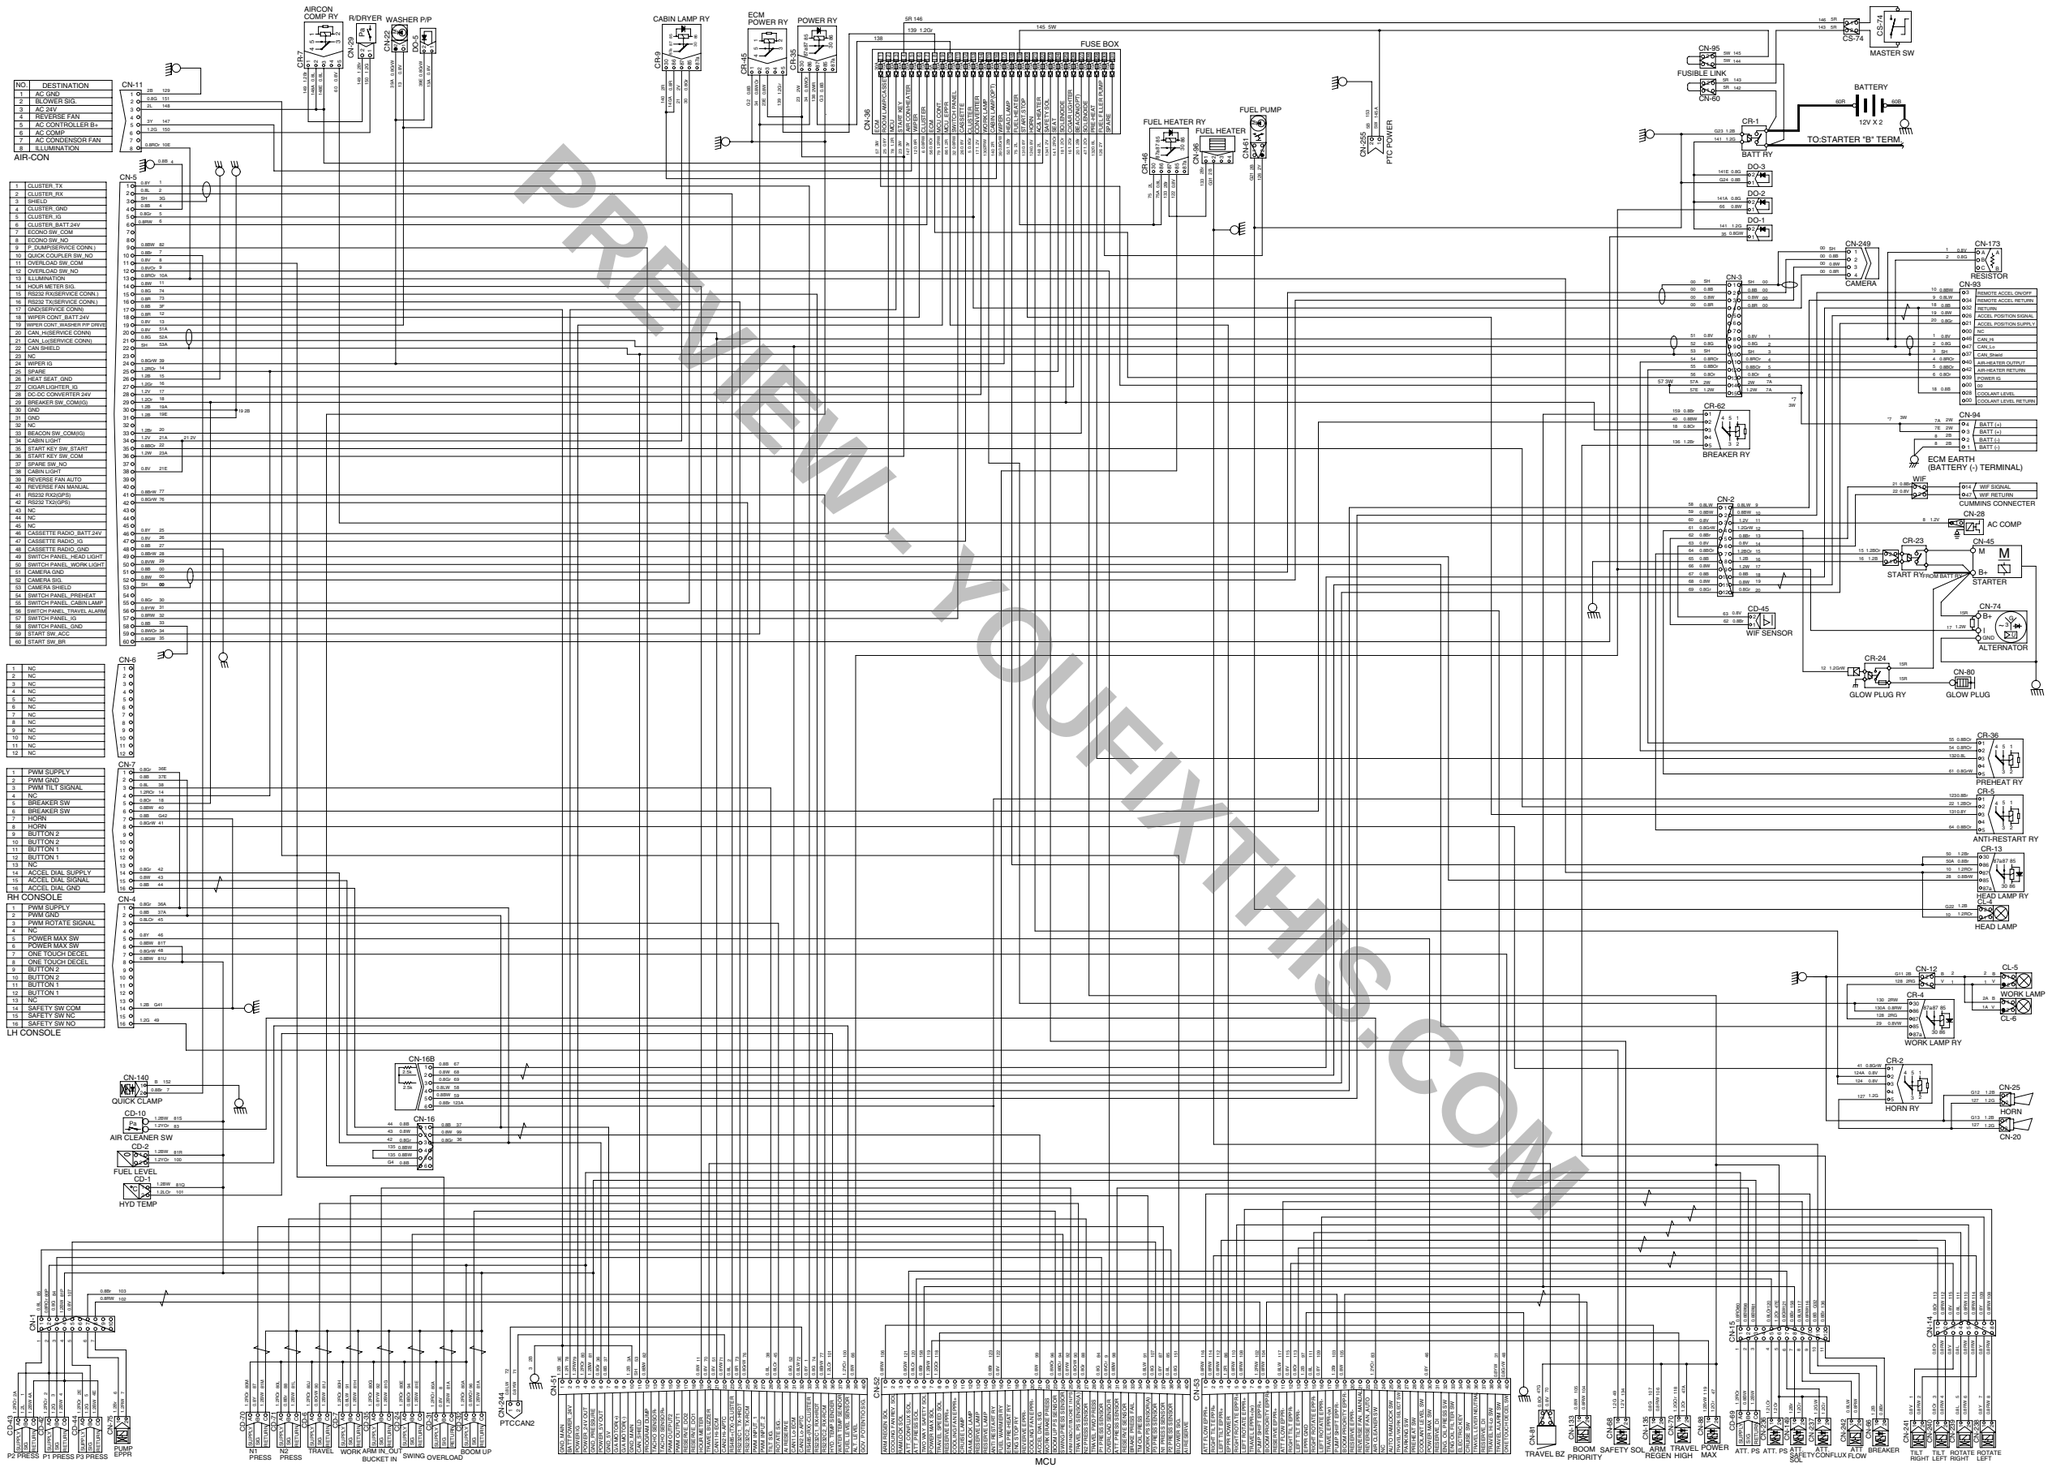

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

21094EC01


GROUP 1 BEFORE TROUBLESHOOTING

1. INTRODUCTION

When a trouble is occurred in the machine, this section will help an operator to maintain the machine with easy.

The trouble of machine is parted Hydraulic & Mechanical system, Electrical system and Mechatronics system. At each system part, an operator can check the machine according to the troubleshooting process diagram.

※ **Before carring out troubleshooting procedure, check monitoring menu in the cluster.**

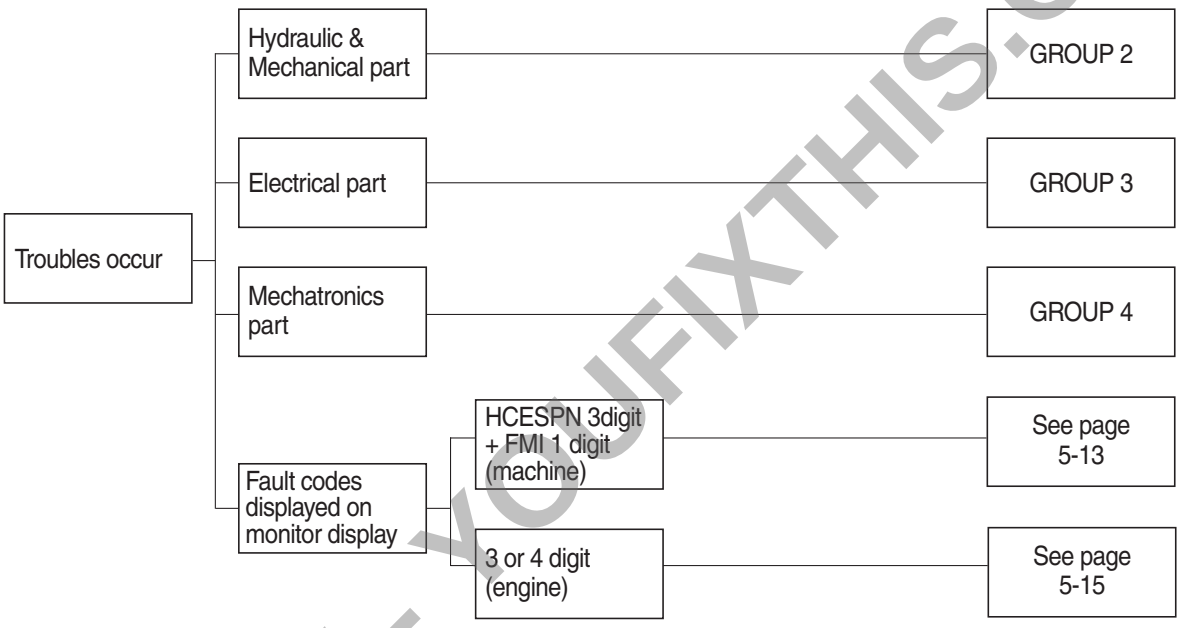

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


SECTION 8 DISASSEMBLY AND ASSEMBLY

GROUP 1 PRECAUTIONS

1. REMOVAL WORK

1) Lower the work equipment completely to the ground.
   If the coolant contains antifreeze, dispose of it correctly.
2) After disconnecting hoses or tubes, cover them or fit blind plugs to prevent dirt or dust from entering.
3) When draining oil, prepare a container of adequate size to catch the oil.
4) Confirm the match marks showing the installation position, and make match marks in the necessary places before removal to prevent any mistake when assembling.
5) To prevent any excessive force from being applied to the wiring, always hold the connectors when disconnecting the connectors.
6) Fit wires and hoses with tags to show their installation position to prevent any mistake when installing.
7) Check the number and thickness of the shims, and keep in a safe place.
8) When raising components, be sure to use lifting equipment of ample strength.
9) When using forcing screws to remove any components, tighten the forcing screws alternately.
10) Before removing any unit, clean the surrounding area and fit a cover to prevent any dust or dirt from entering after removal.
11) When removing hydraulic equipment, first release the remaining pressure inside the hydraulic tank and the hydraulic piping.
12) If the part is not under hydraulic pressure, the following corks can be used.

Nominal number	Dimensions		
	D	d	L
06	6	5	8
08	8	6.5	11
10	10	8.5	12
12	12	10	15
14	14	11.5	18
16	16	13.5	20
18	18	15	22
20	20	17	25
22	22	18.5	28
24	24	20	30
27	27	22.5	34

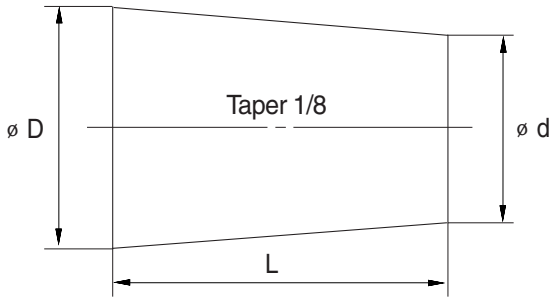

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

GROUP 2 TIGHTENING TORQUE

1. MAJOR COMPONENTS

No.	Descriptions		Bolt size	Torque	
				kgf · m	lbf · ft
1	Engine	Engine mounting bolt (engine-bracket)	M12 × 1.75	12.8 ± 3.0	92.6 ± 21.7
2		Engine mounting bolt (bracket-frame, FR)	M20 × 2.5	55 ± 3.5	398 ± 25
3		Engine mounting bolt (bracket-frame, RR)	M24 × 3.0	97 ± 7.0	702 ± 51
4		Radiator mounting bolt	M16 × 2.0	29.7 ± 4.5	215 ± 32.5
5		Coupling mounting socket bolt	M18 × 2.5	32 ±1.0	231 ±7.2
6		Fuel tank mounting bolt	M20 × 2.5	46 ± 5.1	333 ± 36.9
7	Hydraulic system	Main pump housing mounting bolt	M10 × 1.5	4.8 ± 0.3	34.7 ± 2.2
8		Main pump mounting socket bolt	M20 × 2.5	42 ± 4.5	304 ± 32.5
9		Main control valve mounting nut	M12 × 1.75	12.3 ± 1.3	89.0 ± 9.4
10		Hydraulic oil tank mounting bolt	M20 × 2.5	46 ± 5.1	333 ± 36.9
11		Turning joint mounting bolt, nut	M12 × 1.75	12.3 ± 1.3	89.0 ± 9.4
12	Power train system	Swing motor mounting bolt	M20 × 2.5	58.4 ± 6.4	422 ± 46.3
13		Swing bearing upper part mounting bolt	M20 × 2.5	57.8 ± 6.4	418 ± 46.3
14		Swing bearing lower part mounting bolt	M20 × 2.5	57.8 ± 6.4	418 ± 46.3
15		Travel motor mounting bolt	M16 × 2.0	23 ± 2.5	166 ± 18.1
16		Sprocket mounting bolt	M16 × 2.0	26 ± 2.5	188 ± 18.1
17	Under carriage	Carrier roller mounting bolt, nut	M16 × 2.0	29.7± 4.5	215 ± 32.5
18		Track roller mounting bolt	M16 × 2.0	29.7 ± 4.5	215 ± 32.5
19		Track tension cylinder mounting bolt	M16 × 2.0	29.7 ± 4.5	215 ± 32.5
20		Track shoe mounting bolt, nut	M20 × 1.5	78 ± 8.0	564 ± 57.9
21		Track guard mounting bolt	M20 × 2.5	57.9 ± 8.7	419 ± 62.9
22	Others	Counterweight mounting bolt	M36 × 3.0	340 ± 10	2460 ± 72.3
23		Cab mounting bolt	M12 × 1.75	12.8 ± 3.0	92.6 ± 21.7
24		Operator's seat mounting bolt	M 8 × 1.25	4.05 ± 0.8	29.3 ± 5.8

※ For tightening torque of engine and hydraulic components, see engine maintenance guide and service manual.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

3. MACHINE ERROR CODES TABLE

Error code		Description
HCESPN	FMI	
101	3	Hydraulic oil temperature sensor circuit - Voltage above normal, or shorted to high source.
	4	Hydraulic oil temperature circuit - Voltage below normal, or shorted to low source.
105	0	Working pressure sensor data above normal range.
	1	Working pressure sensor data below normal range.
	2	Working pressure sensor data error.
	4	Working pressure sensor circuit - Voltage below normal, or shorted to Low source.
108	0	Travel oil pressure sensor data above normal range.
	1	Travel oil pressure sensor data below normal range.
	2	Travel oil pressure sensor data error.
	4	Travel oil pressure sensor circuit - Voltage below normal, or shorted to low source.
120	0	Main pump 1 (P1) pressure sensor data above normal range.
	1	Main pump 1 (P1) pressure sensor data below normal range.
	2	Main pump 1 (P1) pressure sensor data error.
	4	Main pump 1 (P1) pressure sensor circuit - Voltage below normal, or shorted to low source.
121	0	Main pump 2 (P2) pressure sensor data above normal range.
	1	Main pump 2 (P2) pressure sensor data below normal range.
	2	Main pump 2 (P2) pressure sensor data error.
	4	Main pump 2 (P2) pressure sensor circuit - Voltage below normal, or shorted to low source.
122	0	Overload pressure sensor data above normal range.
	1	Overload pressure sensor data below normal range.
	2	Overload pressure sensor data error.
	4	Overload pressure sensor circuit - Voltage below normal, or shorted to low source.
123	0	Negative 1 pressure sensor data above normal range.
	1	Negative 1 pressure sensor data below normal range.
	2	Negative 1 pressure sensor data error.
	4	Negative 1 pressure sensor circuit - Voltage below normal, or shorted to low source.
124	0	Negative 2 Pressure sensor data above normal range.
	1	Negative 2 Pressure sensor data below normal range.
	2	Negative 2 Pressure sensor data error.
	4	Negative 2 Pressure sensor circuit - Voltage below normal, or shorted to low source.
125	0	Pilot pump (P3) pressure sensor data above normal range.
	1	Pilot pump (P3) pressure sensor data below normal range.
	2	Pilot pump (P3) pressure sensor data error.
	4	Pilot pump (P3) pressure sensor circuit - Voltage below normal, or shorted to low source.
127	0	Boom up pilot pressure sensor data above normal range.
	1	Boom up pilot pressure sensor data below normal range.
	2	Boom up pilot pressure sensor data error.
	4	Boom up pilot pressure sensor circuit - Voltage below normal, or shorted to low source.
133	0	Arm in/out & bucket in pilot pressure sensor data above normal range.
	1	Arm in/out & bucket in pilot pressure sensor data below normal range.
	2	Arm in/out & bucket in pilot pressure sensor data error.
	4	Arm in/out & bucket in pilot pressure sensor circuit - Voltage below normal, or shorted to low source.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

CONTENTS

SECTION 1 GENERAL

Group 1 Safety Hints 1-1
Group 2 Specifications 1-10

SECTION 2 STRUCTURE AND FUNCTION

Group 1 Pump Device 2-1
Group 2 Main Control Valve 2-20
Group 3 Swing Device 2-47
Group 4 Travel Device 2-58
Group 5 RCV Lever 2-66
Group 6 RCV Pedal 2-73

SECTION 3 HYDRAULIC SYSTEM

Group 1 Hydraulic Circuit 3-1
Group 2 Main Circuit 3-2
Group 3 Pilot Circuit 3-5
Group 4 Single Operation 3-13
Group 5 Combined Operation 3-23

SECTION 4 ELECTRICAL SYSTEM

Group 1 Component Location 4-1
Group 2 Electrical Circuit 4-3
Group 3 Electrical Component Specification 4-21
Group 4 Connectors 4-29

SECTION 5 MECHATRONICS SYSTEM

Group 1 Outline 5-1
Group 2 Mode selection System 5-3
Group 3 Automatic Deceleration System 5-6
Group 4 Power Boost System 5-7
Group 5 Travel Speed Control System 5-8
Group 6 Automatic Warming Up Function 5-9
Group 7 Engine Overheat Prevention Function 5-10
Group 8 Variable Power Control System 5-11

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Millimeters to inches

1mm = 0.03937in

	0	1	2	3	4	5	6	7	8	9
0		0.039	0.079	0.118	0.157	0.197	0.236	0.276	0.315	0.354
10	0.394	0.433	0.472	0.512	0.551	0.591	0.630	0.669	0.709	0.748
20	0.787	0.827	0.866	0.906	0.945	0.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.536
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.244	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.032	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898

Kilogram to Pound

1kg = 2.2046lb

	0	1	2	3	4	5	6	7	8	9
0		2.20	4.41	6.61	8.82	11.02	13.23	15.43	17.64	19.84
10	22.05	24.25	26.46	28.66	30.86	33.07	35.27	37.48	39.68	41.89
20	44.09	46.30	48.50	50.71	51.91	55.12	57.32	59.5.	61.73	63.93
30	66.14	68.34	70.55	72.75	74.96	77.16	79.37	81.57	83.78	85.98
40	88.18	90.39	92.59	94.80	97.00	99.21	101.41	103.62	105.82	108.03
50	110.23	112.44	114.64	116.85	119.05	121.25	123.46	125.66	127.87	130.07
60	132.28	134.48	136.69	138.89	141.10	143.30	145.51	147.71	149.91	152.12
70	154.32	156.53	158.73	160.94	163.14	165.35	167.55	169.76	171.96	174.17
80	176.37	178.57	180.78	182.98	185.19	187.39	189.60	191.80	194.01	196.21
90	198.42	200.62	202.83	205.03	207.24	209.44	211.64	213.85	216.05	218.26

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

3) R210LC-9 HIGH WALKER

(1) 5.68 m (18' 8") boom, 2.0 m (6' 7") arm equipped with 0.92 m³ (SAE heaped) bucket, 600 mm (24") triple grouser shoe and 3800 kg counterweight.

-  : Rating over-front
-  : Rating over-side or 360 degree


Load point height		Load radius								At max. reach		
		3.0 m (10 ft)		4.5 m (15 ft)		6.0 m (20 ft)		7.5 m (25.0 ft)		Capacity		Reach
												m (ft)
7.5 m (25 ft)	kg									*4010	*4010	6.82
	lb									*8840	*8840	(22.4)
6.0 m (20 ft)	kg					*4460	*4460			*4080	3800	7.88
	lb					*9830	*9830			*8990	8380	(25.9)
4.5 m (15 ft)	kg	*8630	*8630	*5930	*5930	*4940	*4940			*4210	3260	8.49
	lb	*19030	*19030	*13070	*13070	*10890	*10890			*9280	7190	(27.9)
-3.0 m (-10 ft)	kg			*7690	*7690	*5720	5600	*4870	3890	4310	3030	8.75
	lb			*16950	*16950	*12610	12350	*10740	8580	9500	6680	(28.7)
-1.5 m (-5 ft)	kg			*9130	8310	*6470	5350	*5220	3780	4290	3000	8.71
	lb			*20130	18320	*14260	11790	*11510	8330	9460	6610	(28.6)
Ground Line	kg			*9720	8100	*6950	5190	5320	3710	4560	3190	8.36
	lb			*21430	17860	*15320	11440	11730	8180	10050	7030	(27.4)
-1.5 m (-5 ft)	kg	*13860	*13860	*9570	8090	*6960	5160			*4900	3700	7.64
	lb	*30560	*30560	*21100	17840	*15340	11380			*10800	8160	(25.1)
-3.0 m (-10 ft)	kg	*12230	*12230	*8650	8240					*4800	*4800	6.42
	lb	*26960	*26960	*19070	18170					*10580	*10580	(21.1)

Note 1. Lifting capacity are based on SAE J1097 and ISO 10567.
2. Lifting capacity of the ROBEX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.
3. The load point is a hook located on the back of the bucket.
4. *indicates load limited by hydraulic capacity.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

1. STRUCTURE

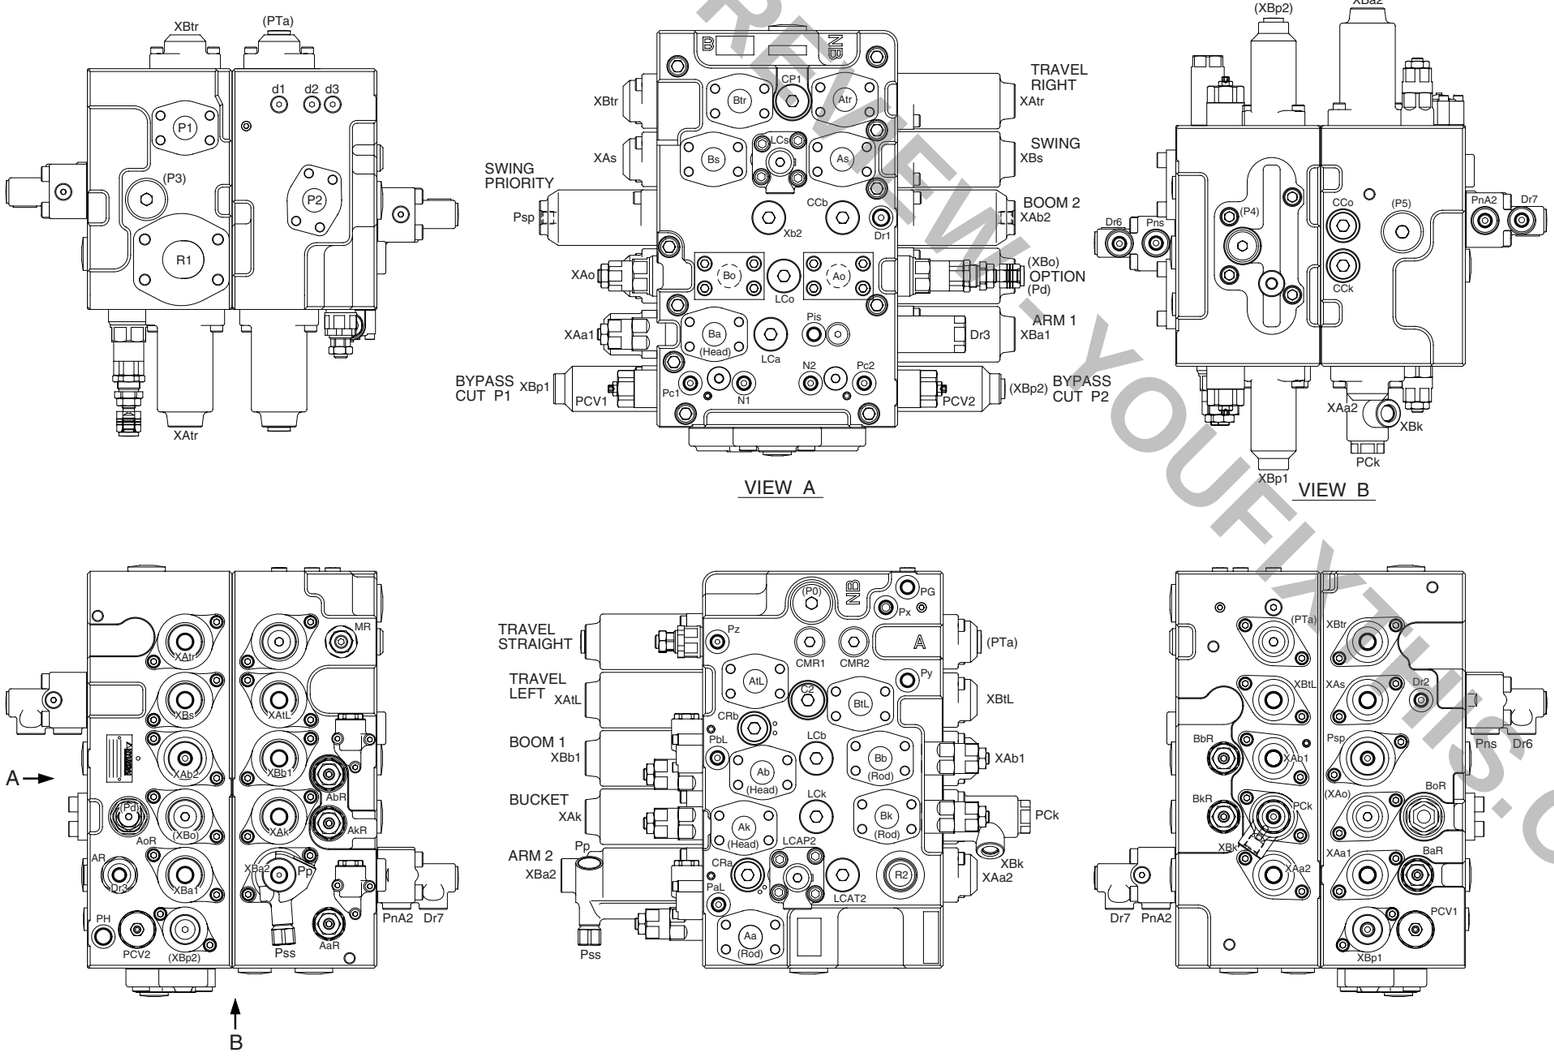


21092MC01

Mark	Port name	Port size	Tightening torque
R2	Make up port for swing	PF 1	20~25kgf · m (115~180lbf · ft)
XAtr XBtr (XAo) (XBo) XAk XBk XAb1 XBb1 XAa2 XBa2 XAtL XBtL XAs XBs XAa1 XBa1 PH Dr1	Travel right (reverse) pilot port Travel right (forward) pilot port Optional pilot port Optional pilot port Bucket in pilot port Bucket out pilot port Boom up pilot port Boom down pilot port Arm out confluence pilot port Arm in confluence pilot port Travel left (reverse) pilot port Travel left (forward) pilot port Swing left pilot port Swing right pilot port Arm out pilot port Arm in pilot port Pilot pressure port Drain port	PF 3/8	7~8kgf · m (50.6~57.8lbf · ft)
Px Py Pz PG Dr2 Dr3 Dr6 Dr7 Pns PaL PbL XAb2 Psp XBp1 (XBp2) (Pd) Pc1 Pc2 PCk Pis N1 N2 PnA2 Pss Pp	Pressure port for attachment Pressure port for travel Main relief pilot pressure port Pilot pressure port Drain port Drain port Drain port Drain port Swing logic valve pilot port Lock valve pilot port (arm rod side) Lock valve pilot port (boom head side) Boom up confluence pilot port Swing priority pilot port Bypass cut spool pilot port (P1 side) Bypass cut spool pilot port (P2 side) Breaker high pressure pilot lamp Posi-nega pressure port (P1 side) Posi-nega pressure port (P2 side) Bucket in stroke limiter pilot port Arm regeneration cut pilot port Arm1 Nega-con pressure port Boom1 Nega-con pressure port Arm2 logic valve pilot port Arm in or swing pilot signal Swing pilot signal	PF 1/4	3.5~3.9kgf · m (25.3~28.2lbf · ft)
Atr Btr (Ao) (Bo) Ak Bk Ab Bb AtL BtL As Bs Aa Ba P1 P2	Travel motor right side (reverse) port Travel motor right side (forward) port Optional port Optional port Bucket cylinder head side port Bucket cylinder rod side port Boom cylinder head side port Boom cylinder rod side port Travel motor left side (reverse) port Travel motor left side (forward) port Swing motor left port Swing motor right port Arm cylinder rod side port Arm cylinder head side port Pump port (P1 side) Pump port (P2 side)	M10	5~6.6kgf · m (36.1~47.7lbf · ft)
R1	Return port	M12	8.5~11.2kgf · m (61.5~81.1lbf · ft)

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

3) RELIEF VALVE

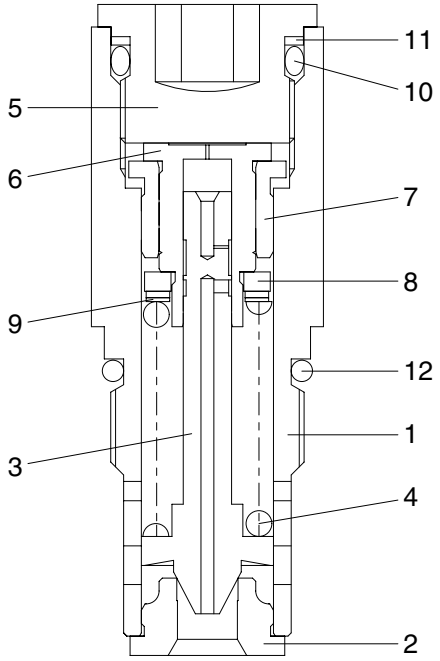


1 Body
2 Seat
3 Plunger
4 Spring
5 Adjusting screw
6 Piston
7 Bushing
8 Spring seat
9 Shim
10 O-ring
11 Back up ring
12 O-ring

(1) Construction of relief valve

The valve casing contains two cartridge type relief valves that stop the regular and reverse rotations of the hydraulic motor. The relief valves relieve high pressure at start or at stop of swing motion and can control the relief pressure in two steps, high and low, in order to insure smooth operation.

(2) Function of relief valve


Figure illustrates how the pressure acting on the relief valve is related to its rising process. Here is given the function, referring to the figure following page.

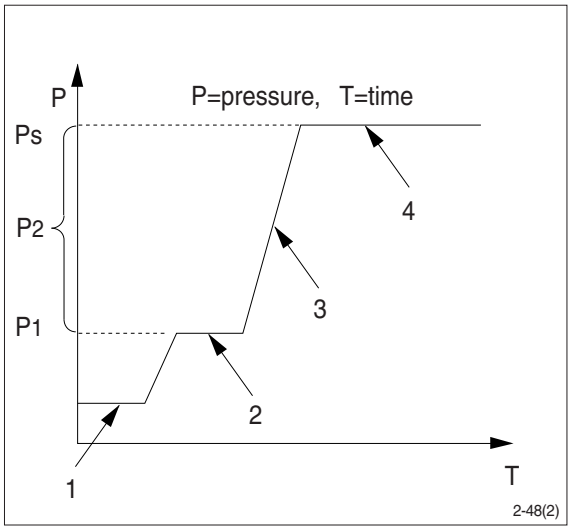

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

GROUP 3 PILOT CIRCUIT

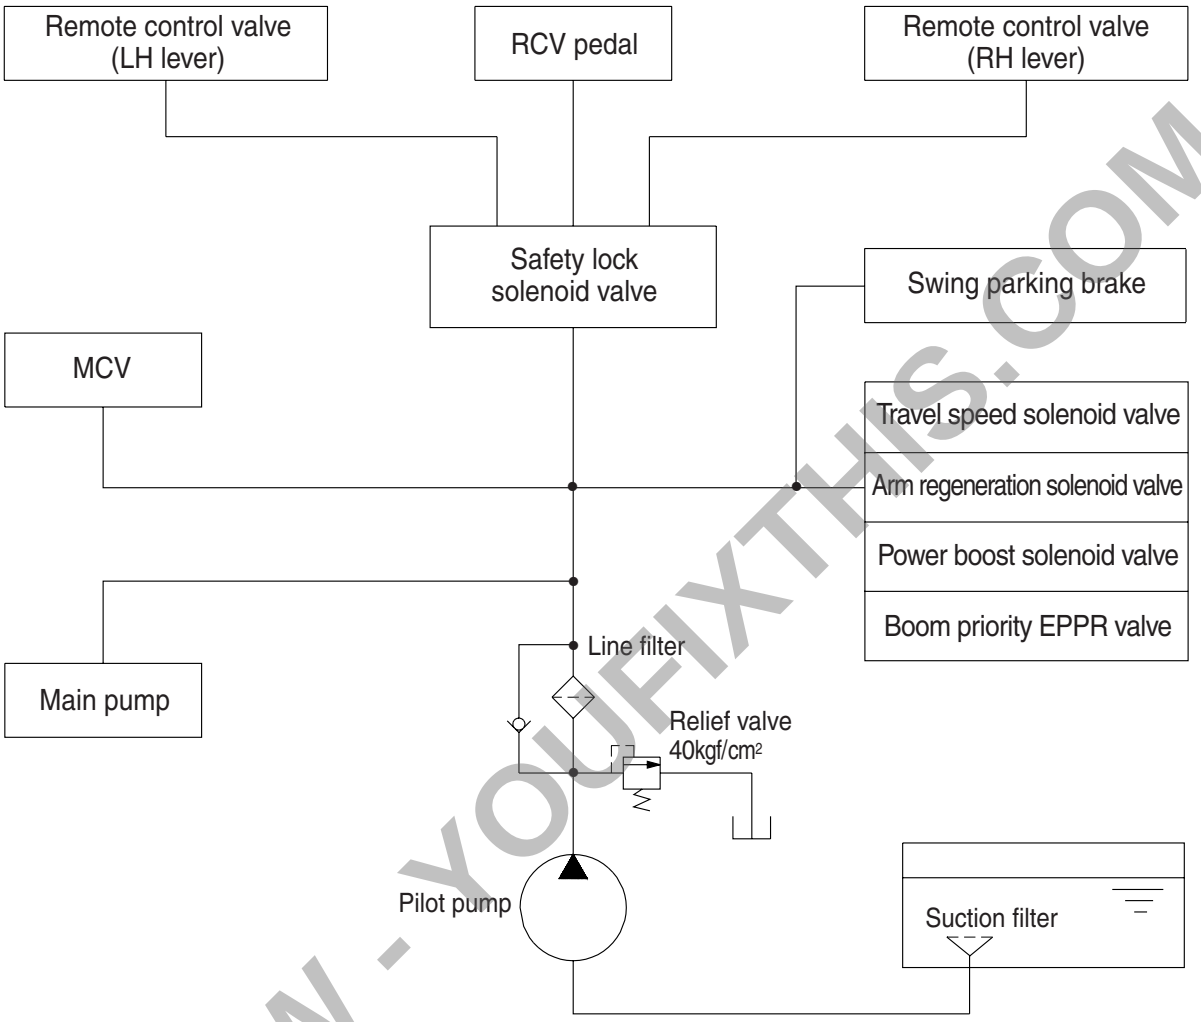

(210-7) 3-05

The pilot circuit consists of suction circuit, delivery circuit and return circuit.

The pilot pump is provided with relief valve, receives the oil from the hydraulic tank through the suction filter.

The discharged oil from the pilot pump flows to the remote control valve through line filter, EPPR valve, solenoid valve assemblies, swing parking brake, main control valve and safety lock solenoid valve.

PREVIEW - YOUFIXTHIS.COM









Download full manual at youfixthis.com

MEMORANDUM

PREVIEW - YOUFIXTHIS.COM

HYUNDAI HEAVY INDUSTRIES CO., LTD
CONSTRUCTION EQUIPMENT DIV.

Download full manual at youfixthis.com

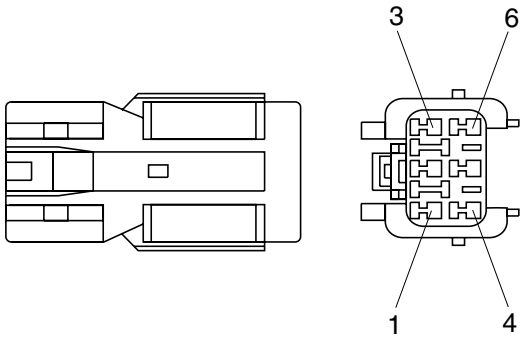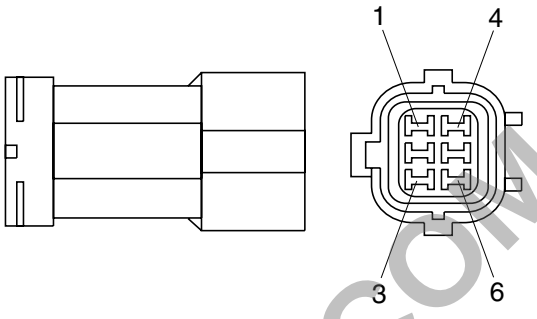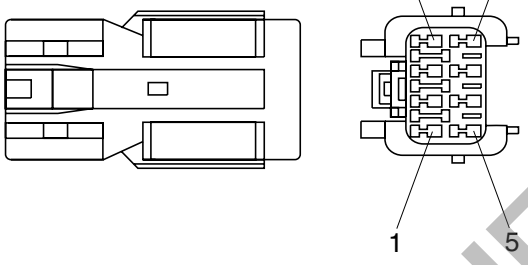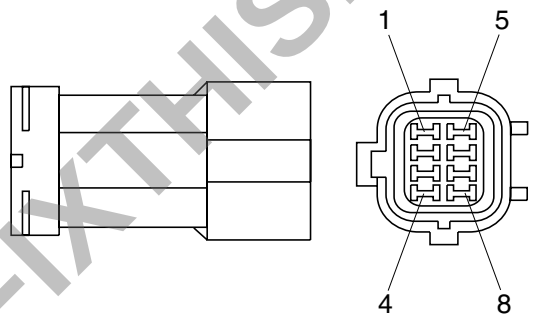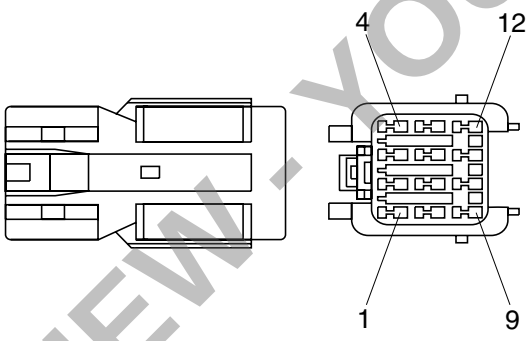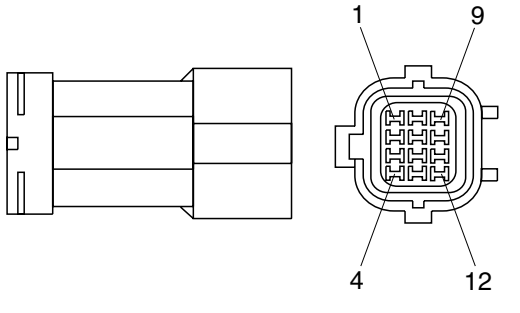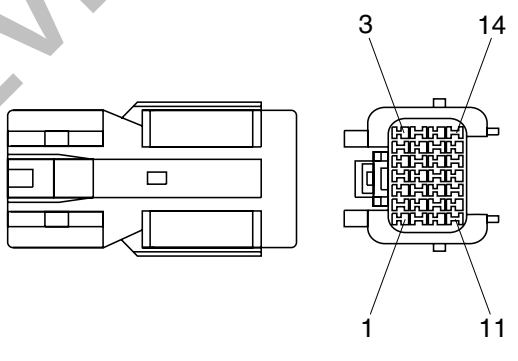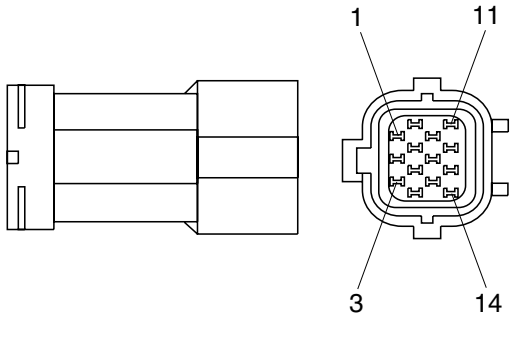No. of pin	Receptacle connector (female)	Plug connector (male)
6	 S814-006000	 S814-106000
8	 S814-008000	 S814-108000
12	 S814-012000	 S814-112000
14	 S814-014000	 S814-114000

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Error code		Description
HCESPN	FMI	
340	3	Potentiometer (G/A) circuit - Voltage above normal, or shorted to high source.
	4	Potentiometer (G/A) circuit - Voltage below normal, or shorted to low source.
341	5	Governor actuator circuit - Current below normal, or open circuit.
	6	Governor actuator circuit - Current above normal.
501	0	Transmission oil pressure sensor data above normal range.
	1	Transmission oil pressure sensor data below normal range.
	2	Transmission oil pressure sensor data error.
	4	Transmission oil pressure sensor circuit - Voltage below normal, or shorted to low source.
503	0	Brake pressure sensor data above normal range.
	1	Brake pressure sensor data below normal range.
	2	Brake pressure sensor data error.
	4	Brake pressure sensor circuit - Voltage below normal, or shorted to low source.
505	0	Working brake pressure sensor data above normal range.
	1	Working brake pressure sensor data below normal range.
	2	Working brake pressure sensor data error.
	4	Working brake pressure sensor circuit - Voltage below normal, or shorted to low source.
506	3	Working brake lamp circuit - Voltage above normal, or shorted to high source.
	4	Working brake lamp circuit - Voltage below normal, or shorted to low source.
520	3	Ram lock lamp circuit - Voltage above normal, or shorted to high source.
	4	Ram lock lamp circuit - Voltage below normal, or shorted to low source.
525	5	Ram lock solenoid circuit - Current below normal, or open circuit.
	6	Ram lock solenoid circuit - Current above normal.
530	0	Travel F pilot pressure sensor data above normal range.
	1	Travel F pilot pressure sensor data below normal range.
	2	Travel F pilot pressure sensor data error.
	4	Travel F pilot pressure sensor circuit - Voltage below normal, or shorted to low source.
531	0	Travel R pilot pressure sensor data above normal range.
	1	Travel R pilot pressure sensor data below normal range.
	2	Travel R pilot pressure sensor data error.
	4	Travel R pilot pressure sensor circuit - Voltage below normal, or shorted to low source.
701	3	Hourmeter circuit - Voltage above normal, or shorted to high source.
	4	Hourmeter circuit - Voltage below normal, or shorted to low source.
705	0	MCU input voltage high.
	1	MCU input voltage low.
707	1	Alternator node I voltage low.
714	3	Acc. dial circuit - Voltage above normal, or shorted to high source.
	4	Acc. dial circuit - Voltage below normal, or shorted to low source.
715	3	Rotate signal input circuit - Voltage above normal, or shorted to high source.
	4	Rotate signal input circuit - Voltage below normal, or shorted to low source.
716	3	Tilt signal input circuit - Voltage above normal, or shorted to high source.
	4	Tilt signal input circuit - Voltage below normal, or shorted to low source.
722	3	Travel alarm (buzzer) circuit - Voltage above normal, or shorted to high source.
	4	Travel alarm (buzzer) circuit - Voltage below normal, or shorted to low source.
830	12	MCU internal memory error.
840	2	Cluster communication data error.
841	2	ECM communication data error.
843	2	Option #1 (CAN 2) communication data error.
850	2	RMCU communication data error.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

(4) Management

① Maintenance information



21093CD67 21093CD67A 21093CD67Q 21093CD67R 21093CD67S 21093CD67T

- Alarm(☼ ✹ ✹) : Gray ☼ - Normal
  Yellow ✹ - First warning
  Red ✹ - Second warning
- Replacement : The elapsed time will be reset to zero (0).
- Change interval : The change or replace interval can be changed in the unit of 50 hours.
- OK : Return to the item list screen.
- **Change or replace interval**


No	Item	Interval
1	Engine oil	500
2	Final gear oil	1000
3	Swing gear oil	1000
4	Hydraulic oil	5000
5	Pilot line filter	1000
6	Drain filter	1000
7	Hydraulic oil return filter	1000
8	Engine oil filter	500
9	Fuel filter	500
10	Pre-filter	500
11	Hydraulic tank breather	250
12	Air cleaner (inner)	500
13	Radiator coolant	2000
14	Swing gear pinion grease	1000

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

1. WHEN STARTING SWITCH IS TURNED ON, MONITOR PANEL DISPLAY DOES NOT APPEAR


- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted and short of fuse No.7, 13.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

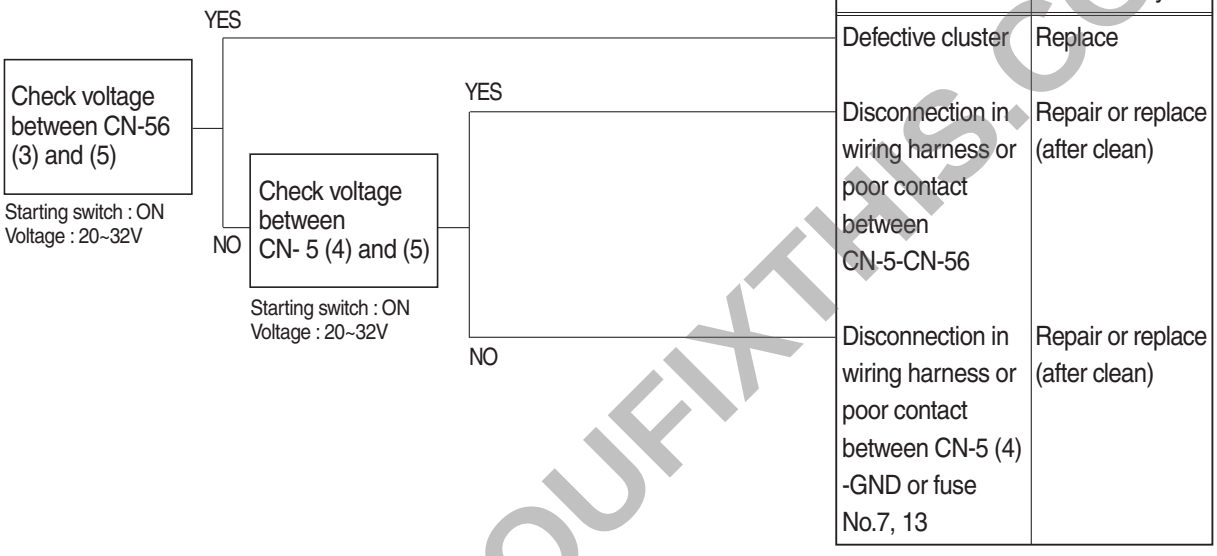

Cause	Remedy
Defective cluster	Replace
Disconnection in wiring harness or poor contact between CN-5-CN-56	Repair or replace (after clean)
Disconnection in wiring harness or poor contact between CN-5 (4) -GND or fuse No.7, 13	Repair or replace (after clean)

Check voltage

YES	20~32V
NO	0V

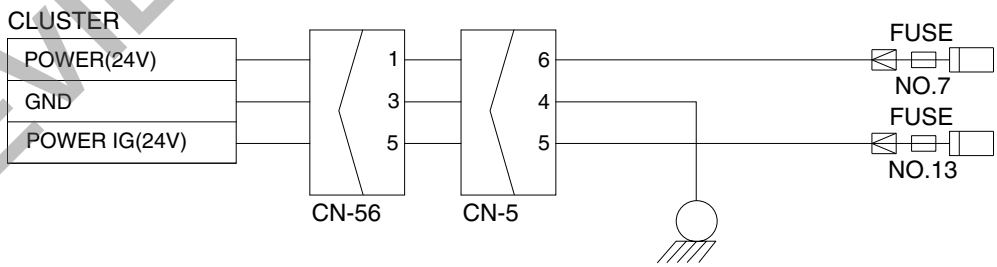

21096ES01

Download full manual at youfixthis.com

PREVIEW - YOUFIXTHIS.COM

2) TEST PROCEDURE


(1) Test 12 : Check voltage at CN-52(37) and ground.

① Prepare 1 piece of thin sharp pin, steel or copper.

② Insert prepared pin to rear side of connectors : One pin to (37) of CN-52.

③ Starting key ON.

④ Check voltage as figure.

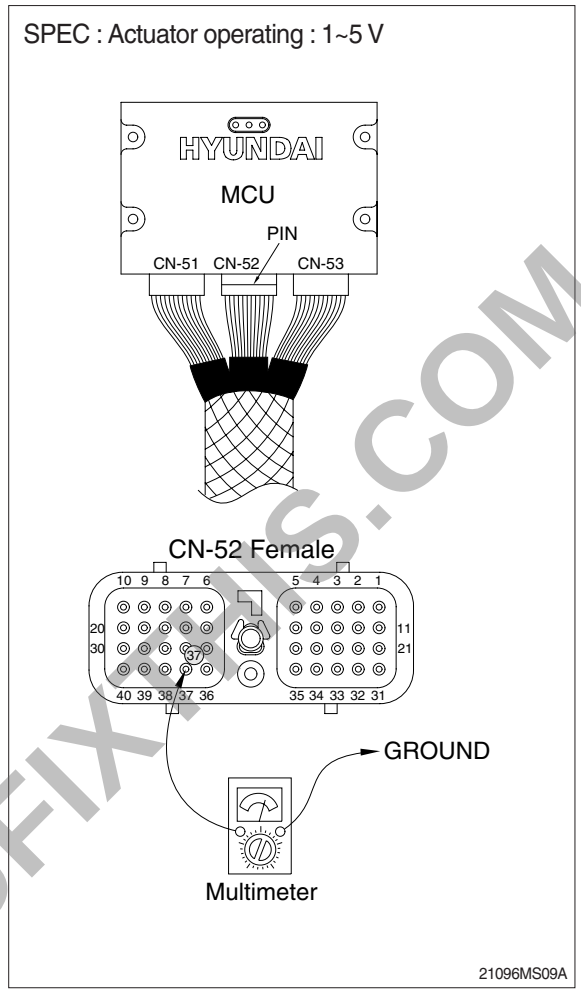

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

15) SWING PARKING BRAKE RELEASING PRESSURE

(1) Preparation

① Stop the engine.


② Loosen the cap and relieve the pressure in the tank by pushing the top of the air breather.

③ The pressure release L wrench to bleed air.

④ Install a connector and pressure gauge assembly to swing motor SH port, as shown.

⑤ Start the engine and check for oil leakage from the adapter.

⑥ Keep the hydraulic oil temperature at 50±5˚C.

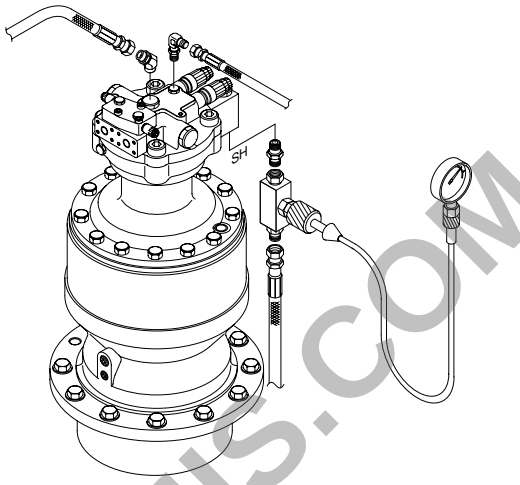

21077MS14

(2) Measurement

① Select the following switch positions.

· Power mode switch : P mode

② Operate the swing function or arm roll in function and measure the swing brake control pressure with the brake disengaged. Release the control lever to return to neutral and measure the control pressure when the brake is applied.

Repeat step ② three times and calculate the average values.

(3) Evaluation

The average measured pressure should be within the following specifications.


Unit : kgf / cm²

Model	Description	Standard	Allowable limits	Remarks
R210LC-9	Brake disengaged	40	Over 9	
	Brake applied	0	-	

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

(12) Tapping lightly shaft ends of drive shafts (111, 113) with plastic hammer, take out drive shafts from swash plate supports.

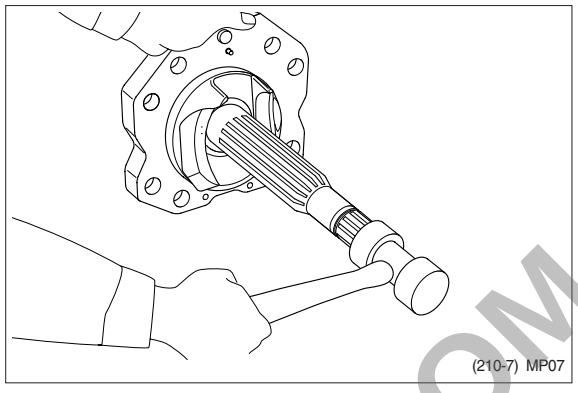
(210-7) MP07

(13) Remove valve plates (313, 314) from valve block (312).

※ These may be removed in work (6).

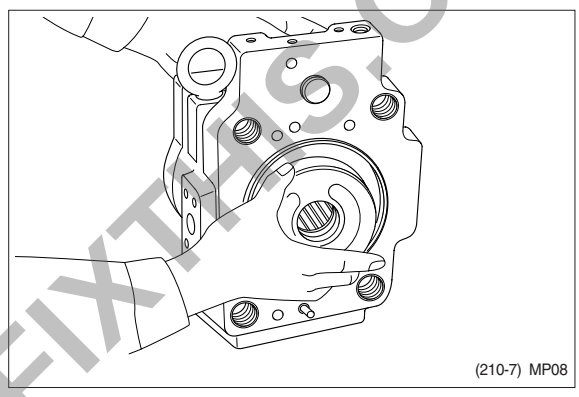
(210-7) MP08

(14) If necessary, remove stopper (L, 534), stopper (S, 535), servo piston (532) and tilting pin (531) from pump casing (271), and needle bearing (124) and splined coupling (114) from valve block (312).

※ In removing tilting pin, use a protector to prevent pin head from being damaged.

※ Since loctite is applied to fitting areas of tilting pin and servo piston, take care not to damage servo piston.

※ Do not remove needle bearing as far as possible, except when it is considered to be out of its life span.


※ Do not loosen hexagon nuts of valve block and swash plate support.
If loosened, flow setting will be changed.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

② Assemble of ball (541), spring Seat (542) and spring (543) : Put the O-ring (166) onto the plug (550), and tighten the plug (550) with specified torque.

- Hexagon key wrench : 6 mm
- Tightening torque : 2.55 ~ 2.96 kgf·m (18.4~21.4 lbf·ft)

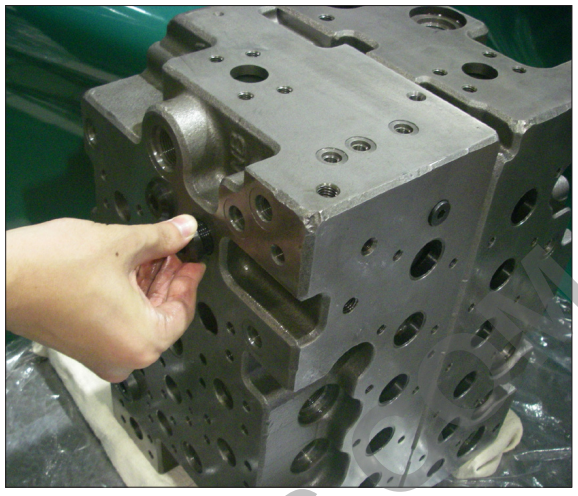

21098MC55

(2) Assembly of plate (210) :

Fit the O-rings (165) to the P1 housing (102), and tighten the hexagon socket head bolts (274) with specified torque.

- Hexagon key wrench : 10 mm
- Tightening torque : 10.0 ~ 12.2 kgf·m (72.3~88.2 lbf·ft)

So turn the control valve that the plate face may be directed downward.


(3) Assembly of flange (209) :

Fit the O-rings (165) to the flange (209), and tighten the hexagon socket head bolts (971) with specified torque.

- Hexagon key wrench : 8 mm
- Tightening torque : 5.0 ~ 6.6 kgf·m (36.2~47.7 lbf·ft)

(4) Assemble of logic control valve :

① Put the O-ring (250-115, 251-115) onto the plug (250-111, 251-111).

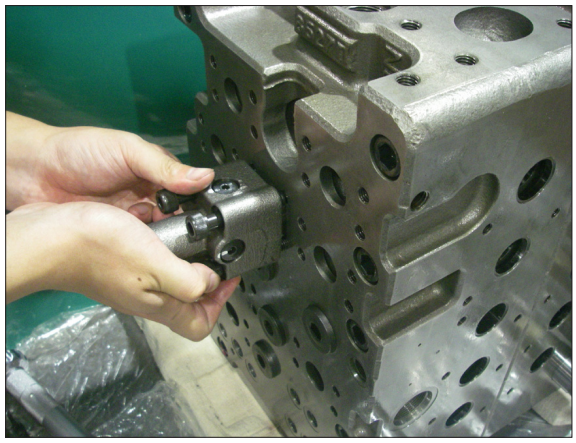

21098MC53

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

1. REMOVAL AND INSTALL

1) REMOVAL

(1) Swing the work equipment 90° and lower it completely to the ground.

(2) Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping.

(3) Loosen the breather slowly to release the pressure inside the hydraulic tank.

⚠ **Escaping fluid under pressure can penetrate the skin causing serious injury.**

※ When pipes and hoses are disconnected, the oil inside the piping will flow out, so catch it in oil pan.

(4) Remove the track shoe assembly.
For details, see **removal of track shoe assembly.**

(5) Remove the cover.

(6) Remove the hose.


※ Fit blind plugs to the disconnected hoses.

(7) Remove the bolts and the sprocket.

(8) Sling travel device assembly (1).

(9) Remove the mounting bolts (2), then remove the travel device assembly.
· Weight : 300 kg (660 lb)



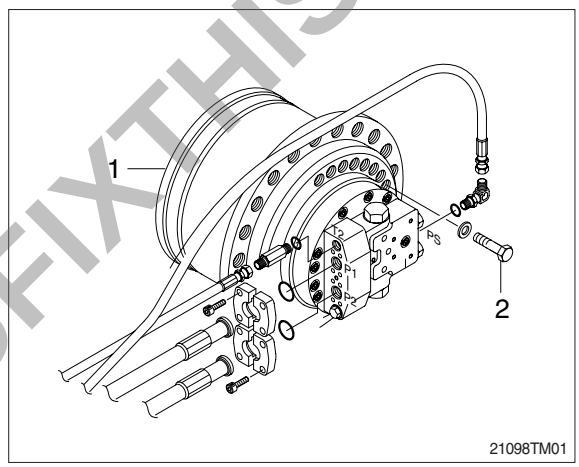

2) INSTALL

(1) Carry out installation in the reverse order to removal.

(2) Bleed the air from the travel motor.
① Remove the air vent plug.
② Pour in hydraulic oil until it overflows from the port.
③ Tighten plug lightly.
④ Start the engine, run at low idling, and check oil come out from plug.
⑤ Tighten plug fully.

(3) Confirm the hydraulic oil level and check the hydraulic oil leak or not.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

1. REMOVAL AND INSTALL

1) REMOVAL

(1) Lower the work equipment to the ground and stop the engine.

(2) Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping.

(3) Loosen the breather slowly to release the pressure inside the hydraulic tank.

⚠ **Escaping fluid under pressure can penetrate the skin causing serious injury.**


(4) Loosen the socket bolt (1).


(5) Remove the cover of the console box.

(6) Disconnect pilot line hoses (3).

(7) Remove the pilot valve assembly (2).

※ When removing the pilot valve assembly, check that all the hoses have been disconnected.

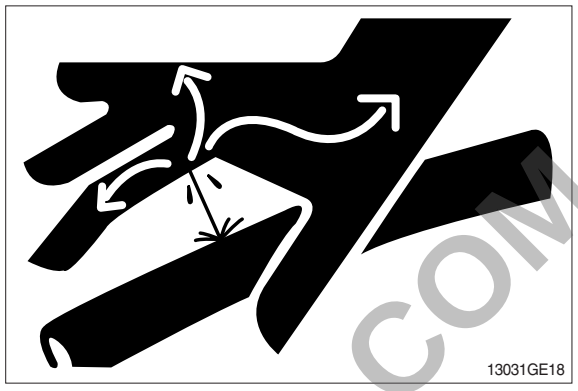

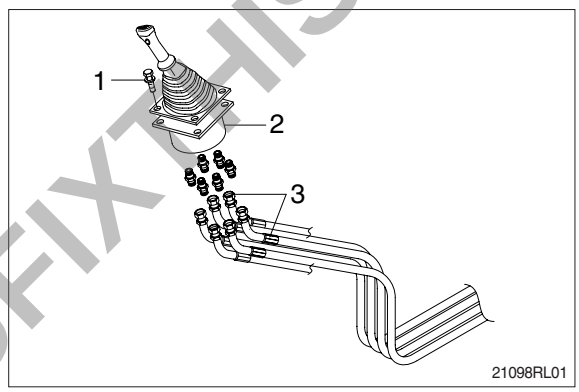

2) INSTALL

(1) Carry out installation in the reverse order to removal.

(2) Confirm the hydraulic oil level and check the hydraulic oil leak or not.

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

3) ASSEMBLY

(1) Assemble cylinder head assembly


※ Check for scratches or rough surfaces if found smooth with an oil stone.

① Coat the inner face of gland (3) with hydraulic oil.

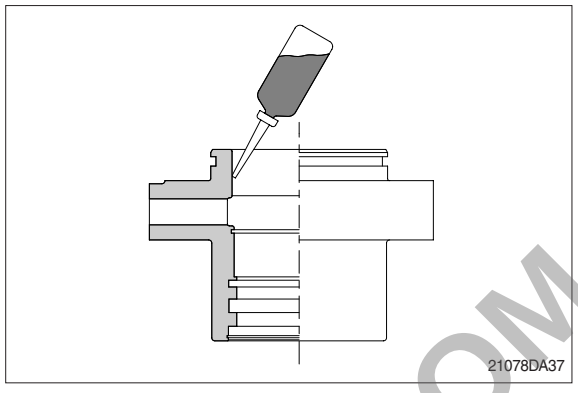

② Coat dust wiper (9) with grease and fit dust wiper (9) to the bottom of the hole of dust seal.
At this time, press a pad metal to the metal ring of dust seal.


③ Fit snap ring (10) to the stop face.

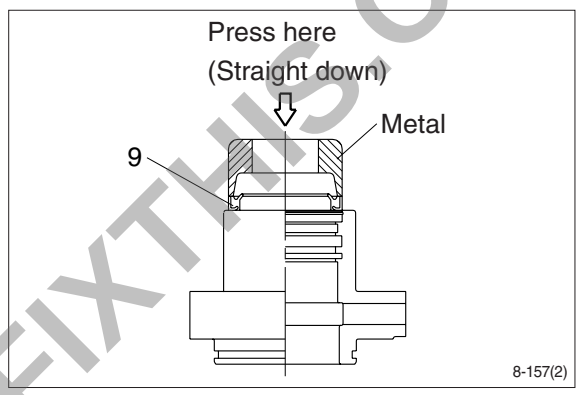

④ Fit back up ring (7), rod seal (6) and buffer ring (8) to corresponding grooves, in that order.


※ Coat each packing with hydraulic oil before fitting it.

※ Insert the backup ring until one side of it is inserted into groove.

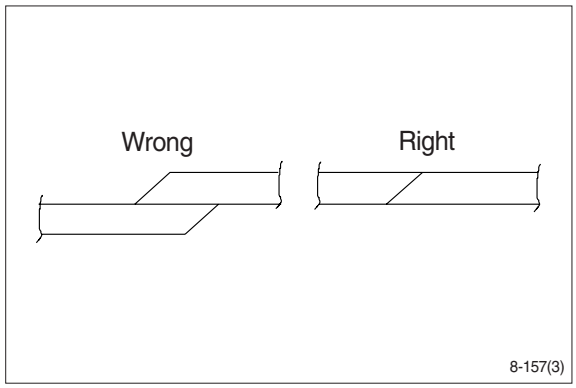

※ Rod seal (6) has its own fitting direction. Therefore, confirm it before fitting them.

※ Fitting rod seal (6) upside down may damage its lip. Therefore check the correct direction that is shown in fig.

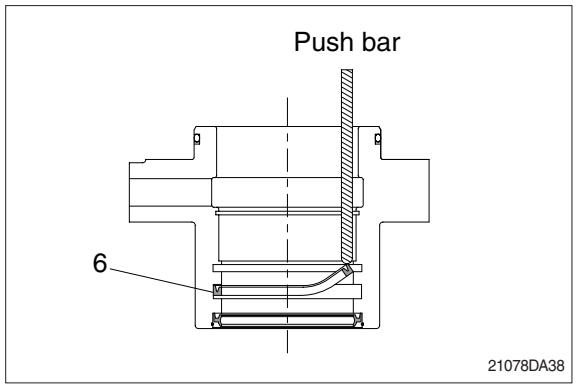

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 25 of 551 pages

The full manual includes:

- All 551 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Hyundai R210LC-9 Shop Manual

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual