
2. SPECIFICATIONS

1) R210NLC-9

· 5.65 m (18' 6") BOOM and 2.92 m (9' 7") ARM

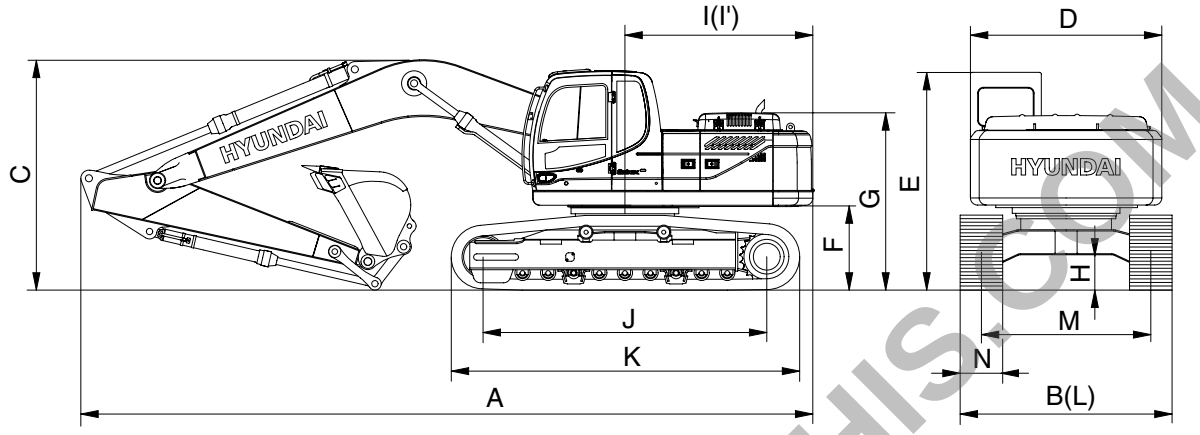


210N92SP02

Description		Unit	Specification
Operating weight		kg (lb)	22000 (48500)
Bucket capacity (SAE heaped), standard		m^3 (yd^3)	0.87 (1.14)
Overall length	A	mm (ft-in)	9510 (31' 2")
Overall width, with 600 mm shoe	B		2500 (8' 2")
Overall height	C		3100 (10' 2")
Superstructure width	D		2530 (8' 4")
Overall height of cab	E		2920 (9' 7")
Ground clearance of counterweight	F		1060 (3' 6")
Engine cover height	G		2320 (7' 7")
Minimum ground clearance	H		480 (1' 7")
Rear-end distance	I		2770 (9' 1")
Rear-end swing radius	I'		2790 (9' 2")
Distance between tumblers	J		3650 (12' 0")
Undercarriage length	K		4440 (14' 7")
Undercarriage width	L		2500 (8' 2")
Track gauge	M		2000 (6' 7")
Track shoe width, standard	N		500 (20")
Travel speed (low/high)		km/hr (mph)	3.4/5.3 (2.1/3.3)
Swing speed		rpm	12.0
Gradeability		Degree (%)	35 (70)
Ground pressure (500 mm shoe)		kgf/cm^2(psi)	0.56 (7.96)
Max traction force		kg (lb)	21100 (46500)

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

GROUP 1 HYDRAULIC CIRCUIT

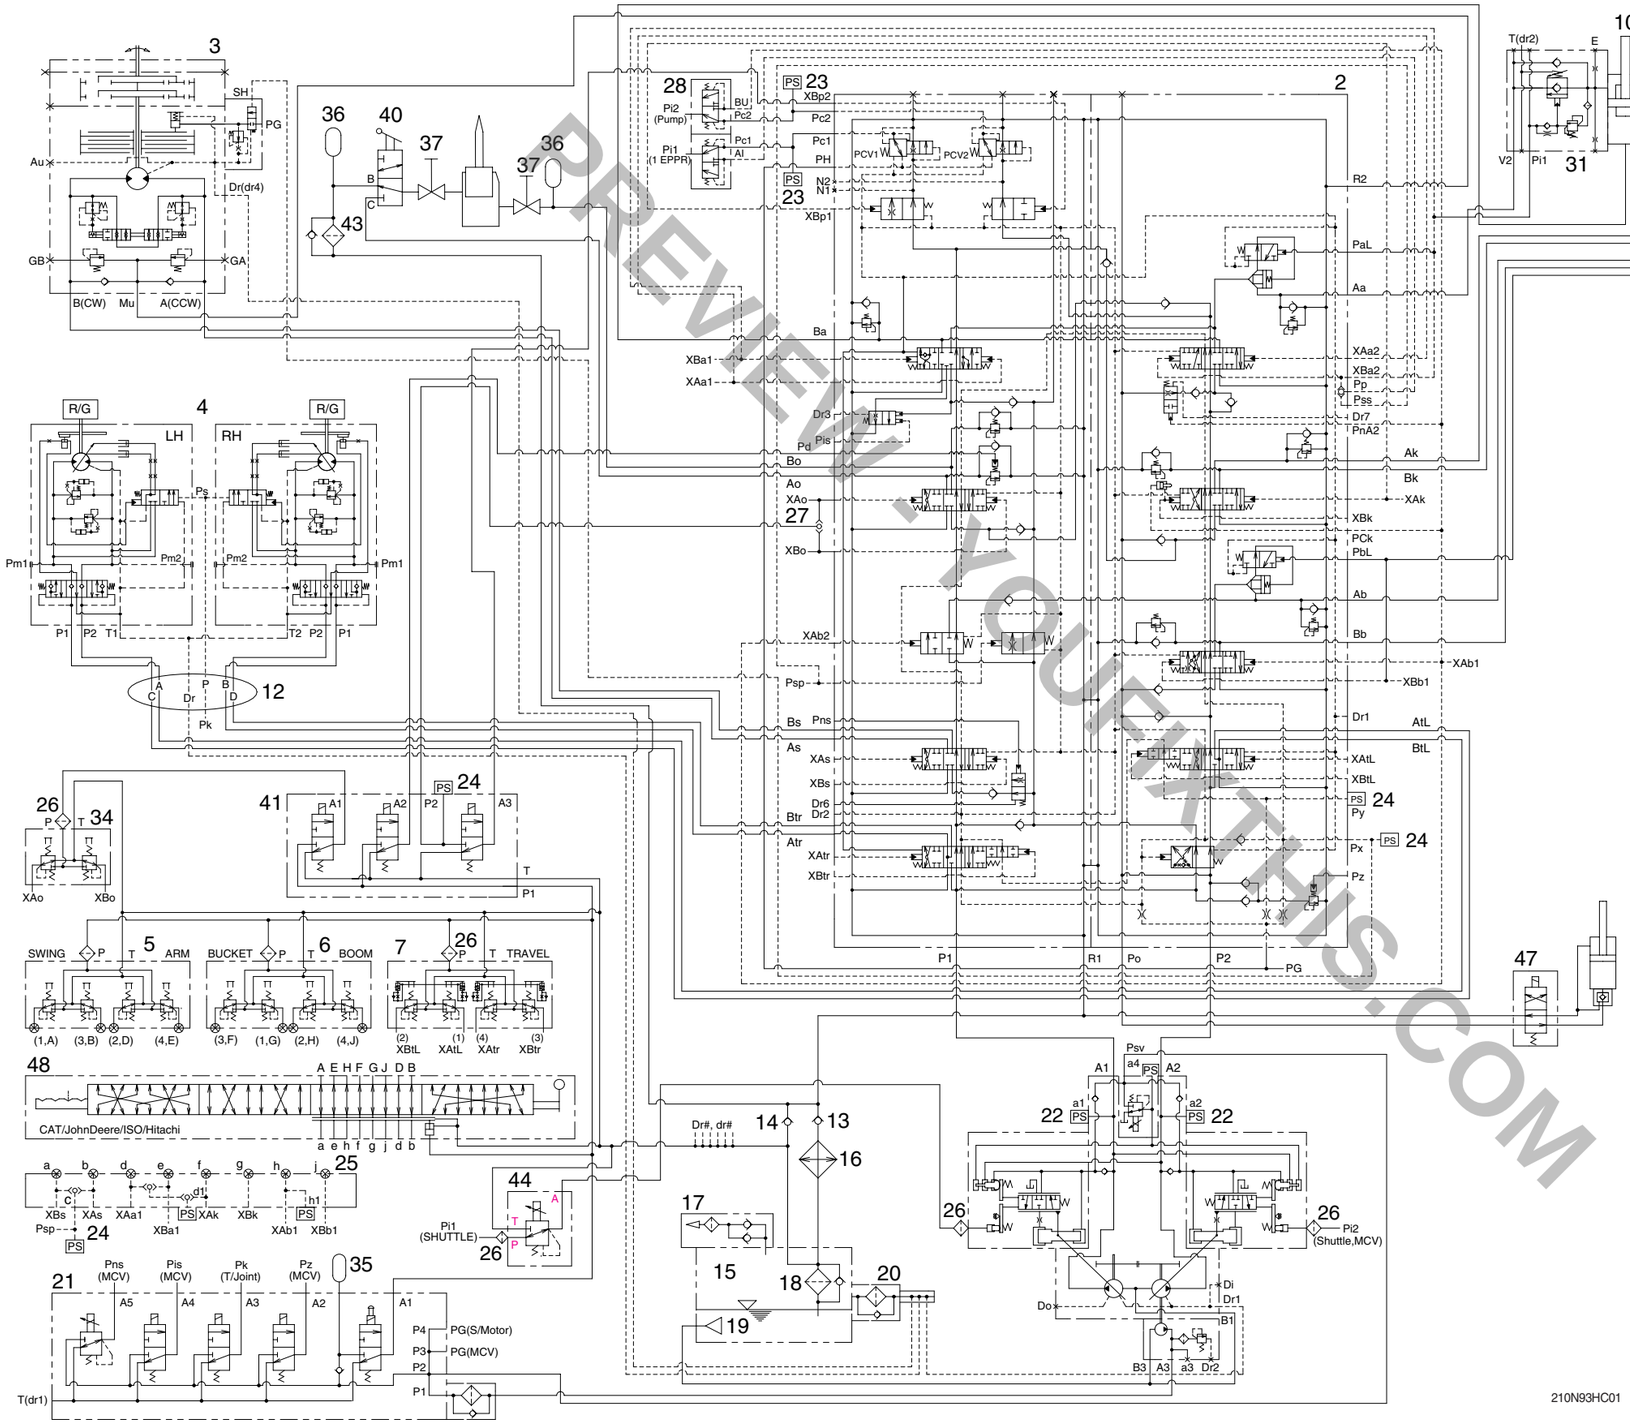


1 Main pump
2 Main control valve
3 Swing motor
4 Travel motor
5 RCV lever(LH)
6 RCV lever(RH)
7 RCV pedal
8 Boom cylinder(LH)
9 Boom cylinder(RH)
10 Arm cylinder
11 Bucket cylinder
12 Turning joint
13 Check valve
14 Check valve
15 Hydraulic tank
16 Oil cooler
17 Air breather
18 Bypass valve
19 Strainer
20 Drain filter
21 Solenoid valve
22 Pressure sensor
23 Posi-nega pressure sensor(Option)
24 Pressure sensor
25 Shuttle block
26 Last guard filter
27 Shuttle valve(Option)
28 Shuttle valve
30 Boom safety valve(Option)
31 Arm safety valve(Option)
34 Breaker pedal(Option)
35 Accumulator
36 Accumulator(Option)
37 Stop valve(Option)
40 Selector valve(Option)
41 Solenoid valve(Option)
43 Breaker return filter(Option)
44 EPPR valve(Option)
47 Quick clamp solenoid valve(Option)
48 Pattern change valve(Option)

210N93HC01

PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

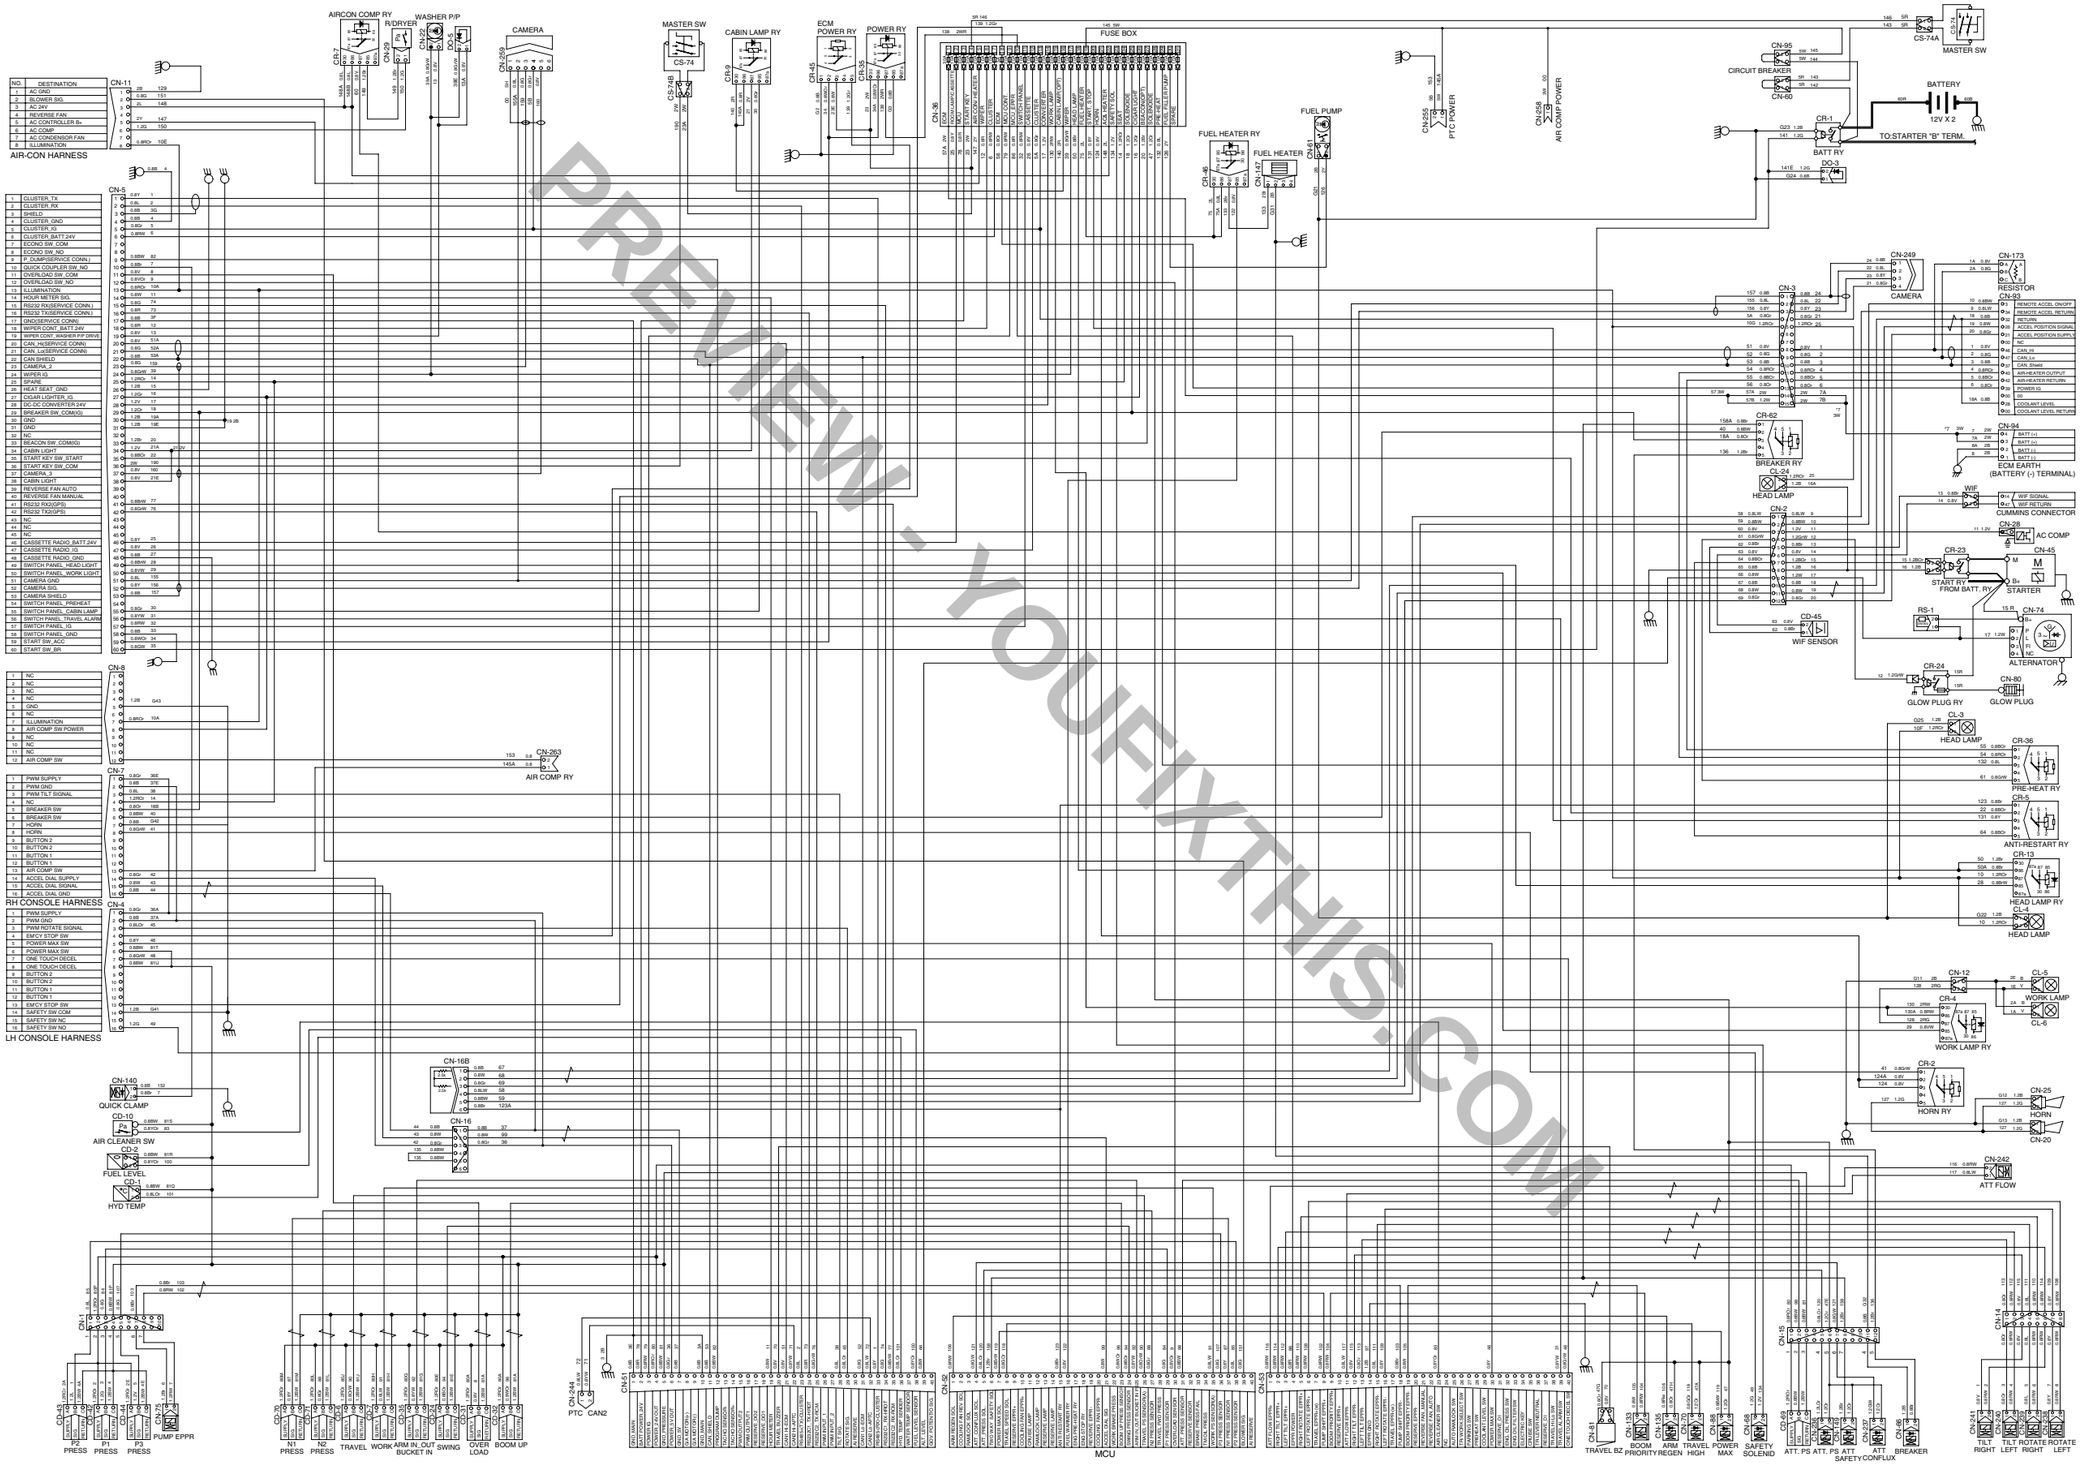

210N94EC01

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

1. REMOVAL AND INSTALL

1) REMOVAL

(1) Lower the work equipment to the ground and stop the engine.

(2) Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping.

(3) Loosen the breather slowly to release the pressure inside the hydraulic tank.

⚠ **Escaping fluid under pressure can penetrate the skin causing serious injury.**

(4) Loosen the drain plug under the hydraulic tank and drain the oil from the hydraulic tank.
· Hydraulic tank quantity : 165 ℓ
(43.6 U.S. gal)

(5) Remove socket bolts (13) and disconnect pipe (1,2).

(6) Disconnect pilot line hoses (4, 5, 6, 7, 8, 9, 10, 11).


(7) Remove socket bolts (12) and disconnect pump suction pipe (3).


※ When pump suction pipe is disconnected, the oil inside the piping will flow out, so catch it in oil pan.

(8) Sling the pump assembly and remove the pump mounting bolts.
· Weight : 170 kg (370 lb)

※ Pull out the pump assembly from housing. When removing the pump assembly, check that all the hoses have been disconnected.



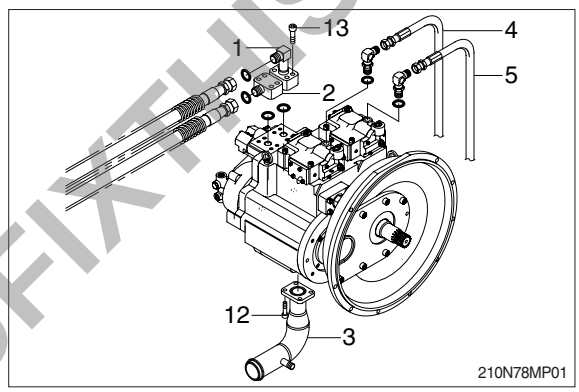

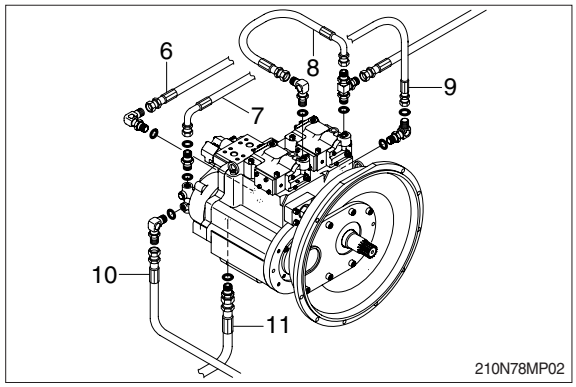

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


GROUP 1 BEFORE TROUBLESHOOTING

1. INTRODUCTION

When a trouble is occurred in the machine, this section will help an operator to maintain the machine with easy.

The trouble of machine is parted Hydraulic & Mechanical system, Electrical system and Mechatronics system. At each system part, an operator can check the machine according to the troubleshooting process diagram.

※ **Before carring out troubleshooting procedure, check monitoring menu in the cluster.**

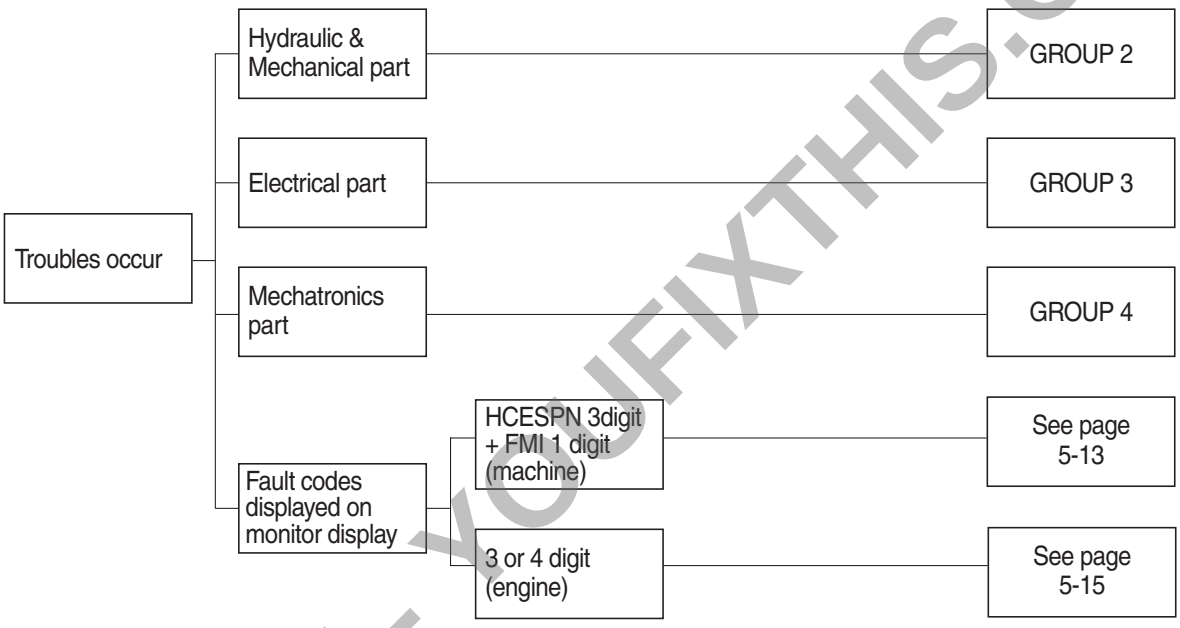

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

GROUP 2 TIGHTENING TORQUE

1. MAJOR COMPONENTS

No.	Descriptions		Bolt size	Torque	
				kgf · m	lbf · ft
1	Engine	Engine mounting bolt (engine-bracket)	M12 × 1.75	10.0 ± 1.0	72.3 ± 7.2
2		Engine mounting bolt (bracket-frame, FR)	M20 × 2.5	55 ± 3.5	398 ± 25
3		Engine mounting bolt (bracket-frame, RR)	M24 × 3.0	97 ± 7.0	702 ± 51
4		Radiator mounting bolt	M16 × 2.0	29.7 ± 4.5	215 ± 32.5
5		Coupling mounting socket bolt	M18 × 2.5	32 ±1.0	231 ±7.2
6		Fuel tank mounting bolt	M20 × 2.5	46 ± 5.1	333 ± 36.9
7	Hydraulic system	Main pump housing mounting bolt	M10 × 1.5	4.8 ± 0.3	34.7 ± 2.2
8		Main pump mounting socket bolt	M10 × 1.5	4.8 ± 0.3	34.7 ± 2.2
9		Main control valve mounting nut	M12 × 1.75	12.3 ± 1.3	89.0 ± 9.4
10		Hydraulic oil tank mounting bolt	M20 × 2.5	46 ± 5.1	333 ± 36.9
11		Turning joint mounting bolt, nut	M12 × 1.75	12 ± 1.3	86.8 ± 9.4
12	Power train system	Swing motor mounting bolt	M20 × 2.5	57.9 ± 5.8	419 ± 42
13		Swing bearing upper part mounting bolt	M20 × 2.5	57.9 ± 6.0	419 ± 43.4
14		Swing bearing lower part mounting bolt	M20 × 2.5	57.9 ± 6.0	419 ± 43.4
15		Travel motor mounting bolt	M16 × 2.0	23 ± 2.5	166 ± 18.1
16		Sprocket mounting bolt	M16 × 2.0	29.7 ± 3.0	215 ± 21.7
17	Under carriage	Carrier roller mounting bolt, nut	M16 × 2.0	29.7 ± 3.0	215 ± 21.7
18		Track roller mounting bolt	M16 × 2.0	29.7 ± 3.0	215 ± 21.7
19		Track tension cylinder mounting bolt	M16 × 2.0	29.7 ± 4.5	215 ± 32.5
20		Track shoe mounting bolt, nut	M20 × 1.5	78 ± 8.0	564 ± 57.9
21		Track guard mounting bolt	M20 × 2.5	57.9 ± 8.7	419 ± 62.9
22	Others	Counterweight mounting bolt	M36 × 3.0	340 ± 10	2460 ± 72.3
23		Cab mounting bolt	M12 × 1.75	12.8 ± 3.0	92.6 ± 21.7
24		Operator's seat mounting bolt	M 8 × 1.25	4.05 ± 0.8	29.3 ± 5.8

※ For tightening torque of engine and hydraulic components, see engine maintenance guide and service manual.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


GROUP 1 SAFETY

FOLLOW SAFE PROCEDURE

Unsafe work practices are dangerous. Understand service procedure before doing work; Do not attempt shortcuts.


WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

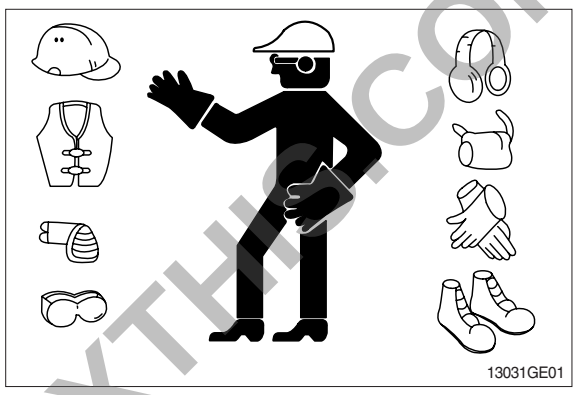


WARN OTHERS OF SERVICE WORK

Unexpected machine movement can cause serious injury.
Before performing any work on the excavator, attach a 「**Do Not Operate**」 tag on the right side control lever.

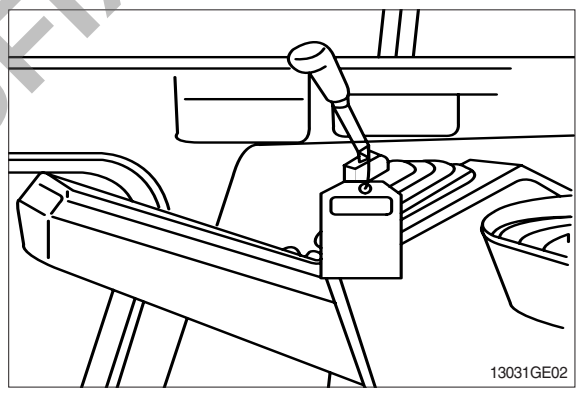

USE HANDHOLDS AND STEPS

Falling is one of the major causes of personal injury.
When you get on and off the machine, always maintain a three point contact with the steps and handrails and face the machine. Do not use any controls as handholds.
Never jump on or off the machine. Never mount or dismount a moving machine.
Be careful of slippery conditions on platforms, steps, and handrails when leaving the machine.

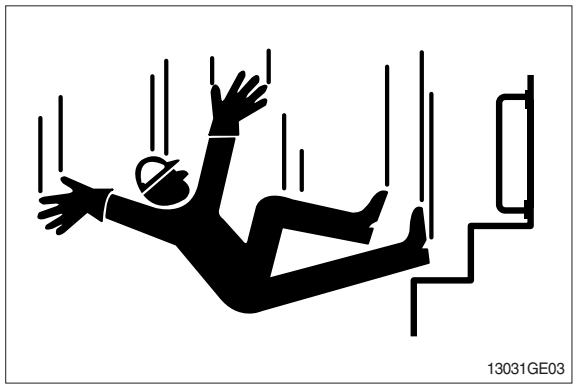

Download full manual at youfixthis.com

1. STRUCTURE

This service manual has been prepared as an aid to improve the quality of repairs by giving the serviceman an accurate understanding of the product and by showing him the correct way to perform repairs and make judgements. Make sure you understand the contents of this manual and use it to full effect at every opportunity.
This service manual mainly contains the necessary technical information for operations performed in a service workshop.
For ease of understanding, the manual is divided into the following sections.

SECTION 1 GENERAL
This section explains the safety hints and gives the specification of the machine and major components.

SECTION 2 STRUCTURE AND FUNCTION
This section explains the structure and function of each component. It serves not only to give an understanding of the structure, but also serves as reference material for troubleshooting.

SECTION 3 HYDRAULIC SYSTEM
This section explains the hydraulic circuit, single and combined operation.

SECTION 4 ELECTRICAL SYSTEM
This section explains the electrical circuit, monitoring system and each component. It serves not only to give an understanding electrical system, but also serves as reference material for trouble shooting.

SECTION 5 MECHATRONICS SYSTEM
This section explains the computer aided power optimization system and each component.

SECTION 6 TROUBLESHOOTING
This section explains the troubleshooting charts correlating **problems** to **causes**.

SECTION 7 MAINTENANCE STANDARD
This section gives the judgement standards when inspecting disassembled parts.

SECTION 8 DISASSEMBLY AND ASSEMBLY
This section explains the order to be followed when removing, installing, disassembling or assembling each component, as well as precautions to be taken for these operations.

SECTION 9 COMPONENT MOUNTING TORQUE
This section shows bolt specifications and standard torque values needed when mounting components to the machine.

The specifications contained in this shop manual are subject to change at any time and without any advance notice. Contact your HYUNDAI distributor for the latest information.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

2) REGULATOR


Regulator consists of the positive flow control, constant horse power control and variable horse power control function.

(1) Positive flow control

By changing the pilot pressure Pi, the pump tilting angle (delivery flow) is regulated arbitrarily, as shown in the figure.

This regulator is of the positive flow control in which the delivery flow Q increases as the pilot pressure Pi rises.

With this mechanism, when the pilot pressure corresponding to the flow required for the work is commanded, the pump discharges the required flow only, and so it does not consume the power uselessly.

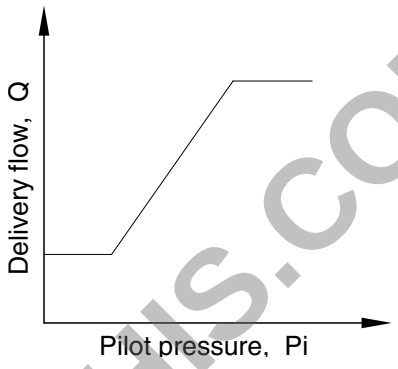


21092MP10

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

① Ports (P,R) at tank pressure.

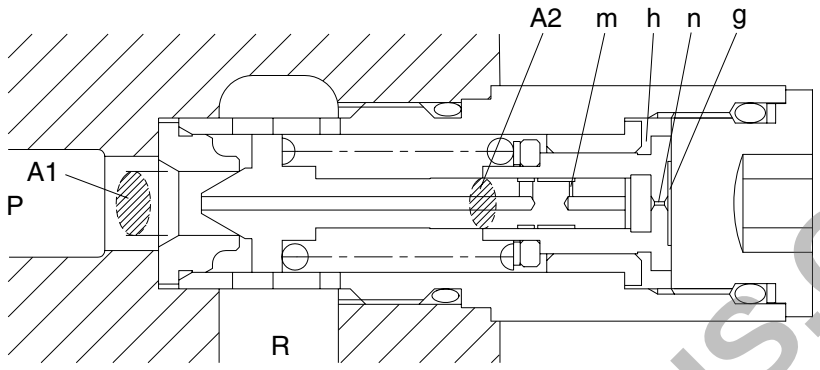


14007A2SM06

② When hydraulic oil pressure ($P \times A_1$) reaches the preset force (F_{SP}) of spring (4), the plunger (3) moves to the right as shown.

$P_1 \times A_1 = Fsp + Pg \times A_2$

$$P_1 = \frac{Fsp + Pg \times A_2}{A_1}$$

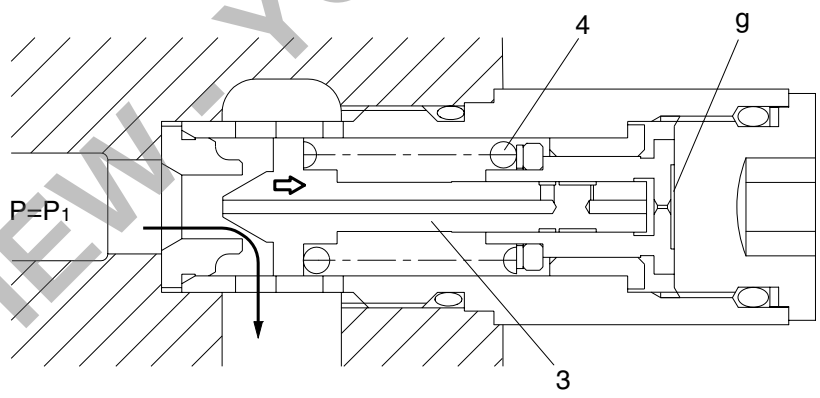


14007A2SM07

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

6. BUCKET OUT OPERATION

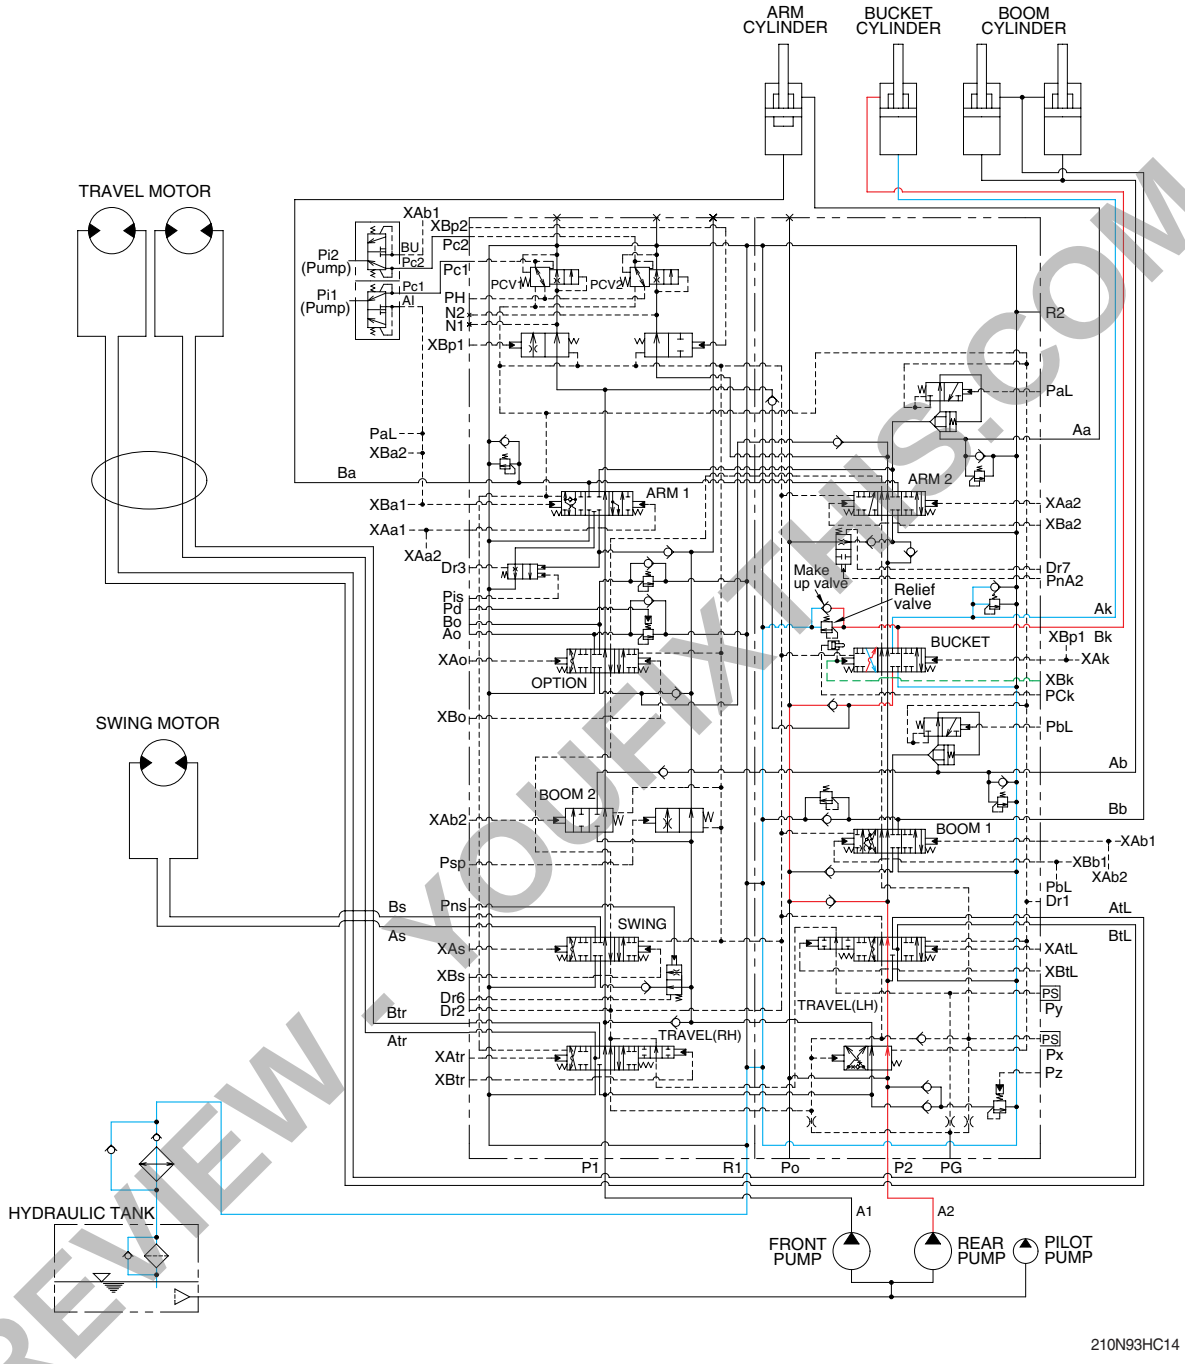

210N93HC14

When the right control lever is pushed right, the bucket spool in the main control valve is moved to the roll out position by the pilot oil pressure from the remote control valve.

The oil from the rear pump flows into the main control valve and then goes to the small chamber of bucket cylinder.

At the same time, the oil from the large chamber of bucket cylinder returns to the hydraulic oil tank through the bucket spool in the main control valve. When this happens, the bucket rolls out.

The excessive pressure in the bucket cylinder rod side is prevented by relief valve.

The cavitation which will happen to the rod side of the bucket cylinder is also prevented by the make-up valve in the main control valve.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Connector number	Type	No. of pin	Destination	Connector part No.	
				Female	Male
CN-74	KET	2	Alternator "I" terminal	MG640-188-4	-
CN-75	AMP	2	Pump EPPR	S816-002002	-
CN-80	RING-TERM	-	Glow plug	S820-306000	-
CN-81	DEUTSCH	2	Travel buzzer solenoid	DT06-2S-EP06	-
CN-88	DEUTSCH	2	Power max solenoid	DT06-2S-EP06	-
CN-93	DEUTSCH	50	ECM	DRC26-50S-04	-
CN-94	DEUTSCH	4	ECM earth	DTP06-4S-EP06	-
CN-95	YAZAKI	2	Fusible link	21N4-01311	7122-4125-50
CN-96	AMP	4	Fuel warmer	2-967325-3	-
CN-113	AMP	2	Siren buzzer	S816-002002	S816-102002
CN-116	AMP	12	Switch panel	176116	-
CN-125	Econoseal J	4	GPS connector	S816-004002	S816-104002
CN-126	AMP	10	Service tool	S816-010002	S816-110002
CN-133	DEUTSCH	2	Boom priority solenoid	DT06-2S-EP06	-
CN-135	DEUTSCH	2	Arm regeneration solenoid	DT06-2S-EP06	-
CN-138	FASTEN	3	DC/DC Converter	S810-003202	-
CN-139	FASTEN	2	12V socket	S810-002202	-
CN-140	DEUTSCH	2	Quick clamp solenoid	DT06-2S-EP06	DT04-2P-E005
CN-141	AMP	13	Wiper motor controller	172498-1	DT04-3P-EP10
CN-142	DEUTSCH	3	Accel dial	DT06-3S-EP06	-
CN-144	KET	20	Handsfree	MG610240	-
CN-147	AMP	4	Fuel heater	2-967325-3	-
CN-149	DEUTSCH	2	Attach safety solenoid	DT06-2S-EP06	-
CN-156	DEUTSCH	2	Air seat	DT04-2P-E005	-
CN-170	AMP	2	Heated seat	12052641	-
CN-173	DEUTSCH	3	Resistor	DT06-3S-EP06	DT04-3P-EP10
CN-236	DEUTSCH	2	Attach pressure solenoid	DT06-2S-EP06	-
CN-237	DEUTSCH	2	Attach conflux solenoid	DT06-2S-EP06	-
CN-242	DEUTSCH	2	Attach flow solenoid	DT06-2S-EP06	DT04-2P-E005
CN-244	AMP	2	CAN 2	-	S816-102002
CN-245	AMP	12	Remote controller assy	368542-1	-
CN-246	AMP	12	USB & Socket assy	174045-2	-
CN-247	DEUTSCH	8	PWM convert	DT06-08SA-EP06	DT04-8P
CN-249	DEUTSCH	4	Rear view camera	DT06-4S-EP06	DT04-4P-E005
CN-255	AMP	2	PTC Power	S813-030201	-
CN-256	AMP	8	Proportional	-	S816-108002
CN-258	KET	1	Aircon compressor power	MG640944-5	-
CN-263	DEUTSCH	2	Aircon compressor relay	DT06-2S-EP06	-
CN-279	AMP	2	Accel dial LED	S816-002002	S816-102002

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


Fault code J1939 SPN J1939 FMI	Reason	Effect (only when fault code is active)
331 652 5	Injector solenoid driver cylinder 2 circuit - Current below normal, or open circuit. High resistance detected on injector number 2 circuit or no current detected at number 2 injector driver or return pin when the voltage supply at the harness is on.	Engine can possibly misfire or run rough.
332 654 5	Injector solenoid driver cylinder 4 circuit - Current below normal, or open circuit. High resistance detected on injector number 4 circuit or no current detected at number 4 injector driver or return pin when the voltage supply at the harness is on.	Engine can possibly misfire or run rough.
334 110 2	Engine coolant temperature - Data erratic, intermittent, or incorrect. The engine coolant temperature reading is not changing with engine operating conditions.	The ECM will estimate engine coolant temperature.
342 630 13	Electronic calibration code incompatibility - Out of calibration. An incompatible calibration has been detected in the ECM.	Possible no noticeable performance effects, engine dying, or hard starting.
343 620 12	Engine control module warning internal hardware failure - Bad intelligent device or component. Internal ECM failure.	No performance effects or possible severe power derate.
351 627 12	Injector power supply - Bad intelligent device or component. The ECM measured injector boost voltage is low.	Possible smoke, low power, engine misfire, and/or engine will not start.
352 1079 4	Sensor supply 1 circuit - Voltage below normal, or shorted to low source. Low voltage detected at sensor supply number 1 circuit.	Engine power derate.
386 1079 3	Sensor supply 1 circuit - Voltage above normal, or shorted to high source. High voltage detected at sensor supply number 1 circuit.	Engine power derate.
415 100 1	Engine oil rifle pressure - Data valid but below normal operational range - Most severe level. Oil pressure signal indicates oil pressure below the engine protection critical limit.	Progressive power derate increasing in severity from time of alert. If engine protection shutdown feature is enabled, engine will shut down 30 seconds after red stop lamp starts flashing.
418 97 15	Water in fuel indicator - Data valid but above normal operational range - Least severe level. water has been detected in the fuel filter.	Possible white smoke, loss of power, or hard starting.
428 97 3	Water in fuel indicator sensor circuit - Voltage above normal, or shorted to high source. High voltage detected at the water in fuel circuit.	None on performance. No water in fuel warning available.
429 97 4	Water in fuel indicator sensor circuit - Voltage below normal, or shorted to low source. Low voltage detected at the water in fuel circuit.	None on performance. No water in fuel warning available.
431 558 2	Accelerator pedal or lever idle validation switch - Data erratic, intermittent, or incorrect. Voltage detected simultaneously on both idle validation and off-idle validation switches.	Engine will only idle.
432 558 13	Accelerator pedal or lever idle validation circuit - Out of calibration. Voltage at idle validation on-idle and off-idle circuit does not match accelerator pedal position.	Engine will only idle.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

4. SWING SYSTEM

1) BOTH LH AND RH SWING ACTIONS ARE IMPOSSIBLE

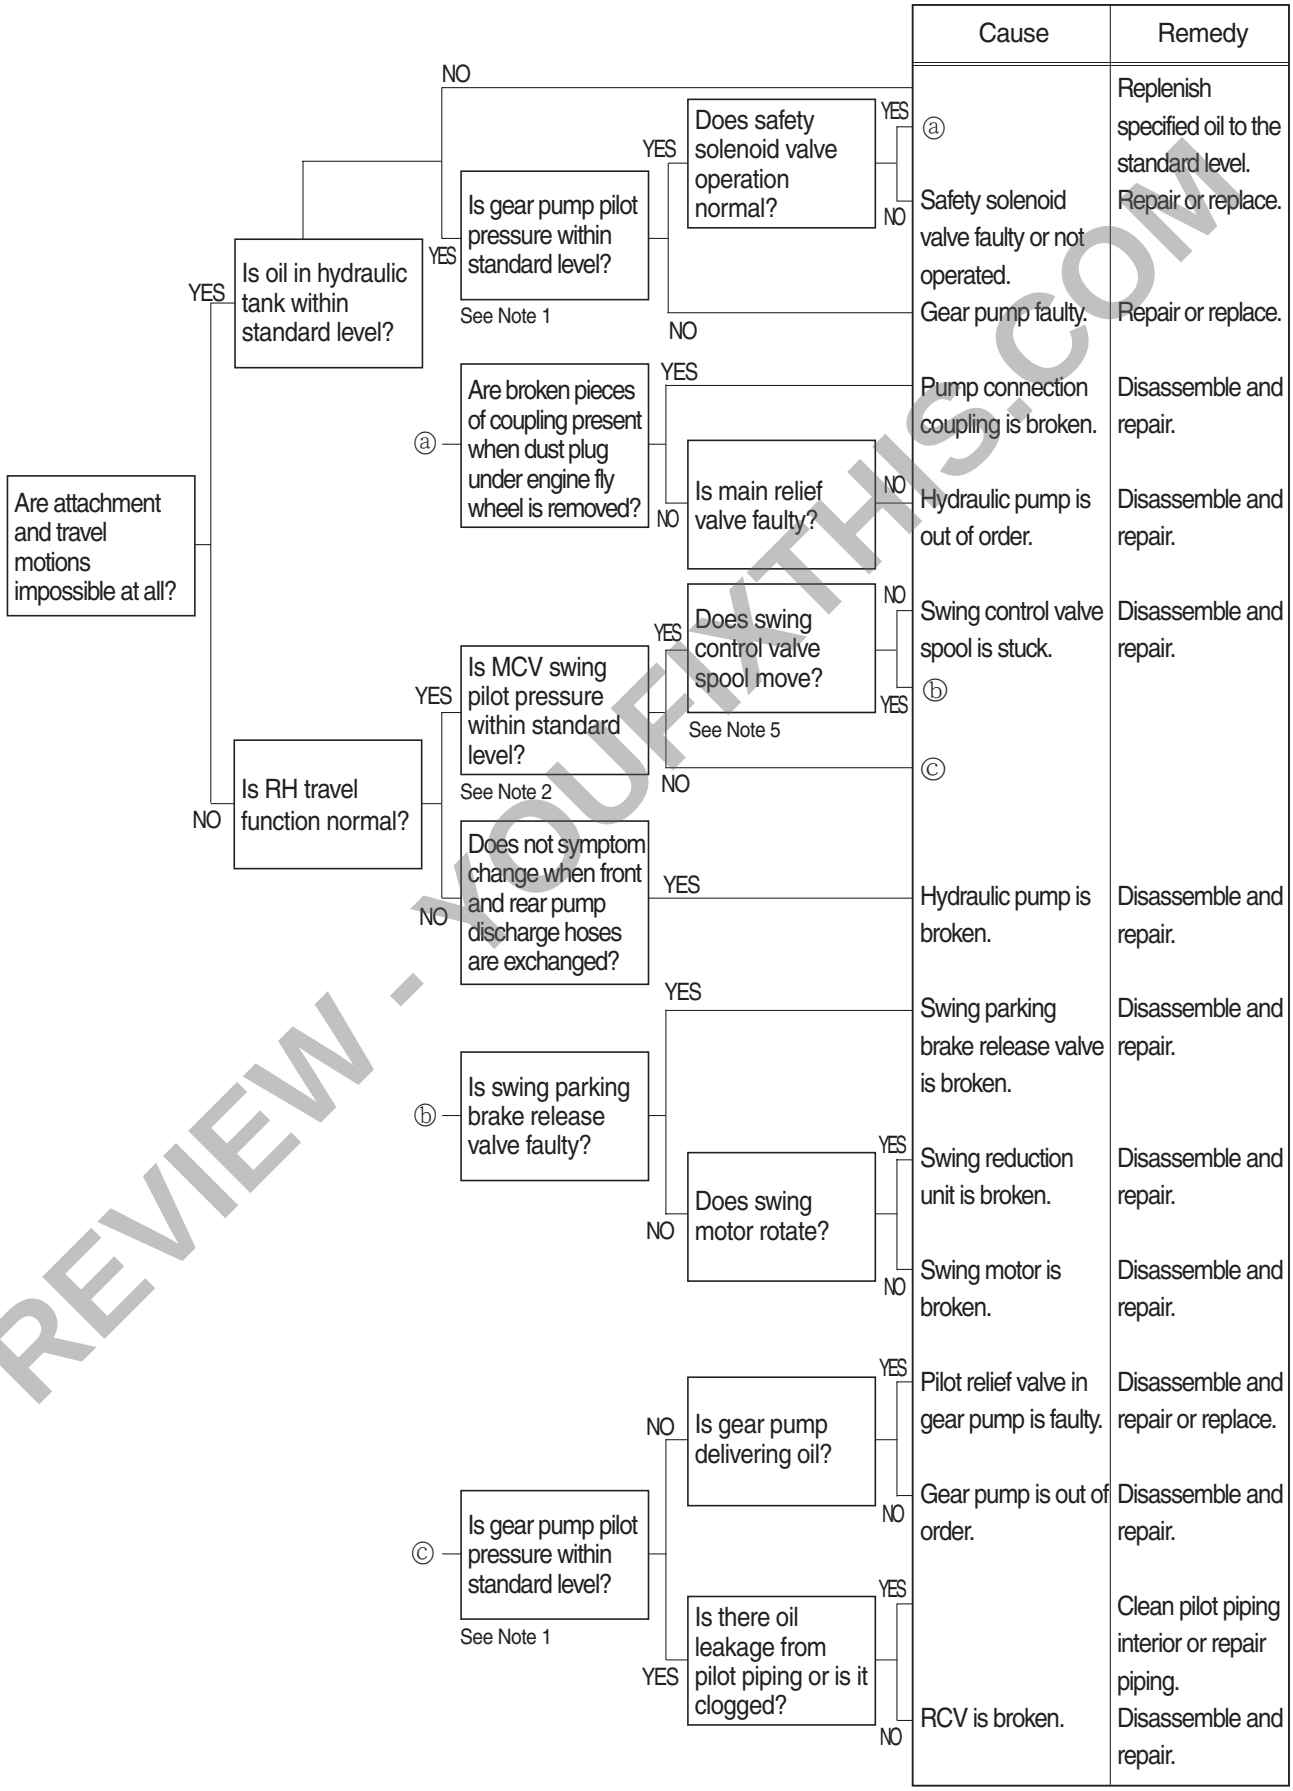

Cause	Remedy
ⓐ Safety solenoid valve faulty or not operated.	Replenish specified oil to the standard level. Repair or replace.
Gear pump faulty.	Repair or replace.
Pump connection coupling is broken.	Disassemble and repair.
Hydraulic pump is out of order.	Disassemble and repair.
Swing control valve spool is stuck.	Disassemble and repair.
ⓑ	
ⓒ	
Hydraulic pump is broken.	Disassemble and repair.
Swing parking brake release valve is broken.	Disassemble and repair.
Swing reduction unit is broken.	Disassemble and repair.
Swing motor is broken.	Disassemble and repair.
Pilot relief valve in gear pump is faulty.	Disassemble and repair or replace.
Gear pump is out of order.	Disassemble and repair.
	Clean pilot piping interior or repair piping.
RCV is broken.	Disassemble and repair.

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

8. MALFUNCTION OF PUMP 3 PRESSURE SENSOR


· Fault code : HCESPN 125, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

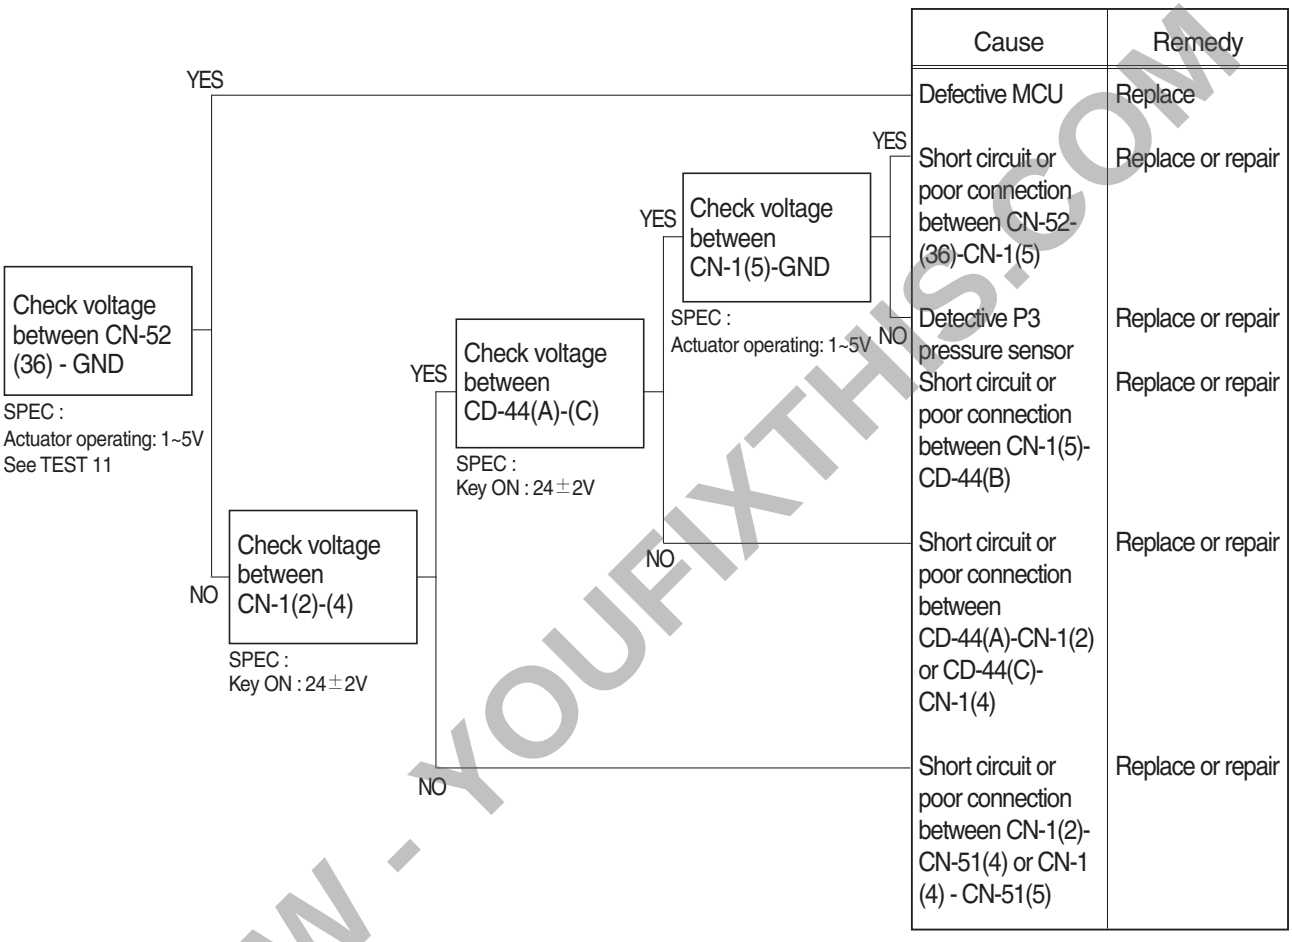




Wiring diagram

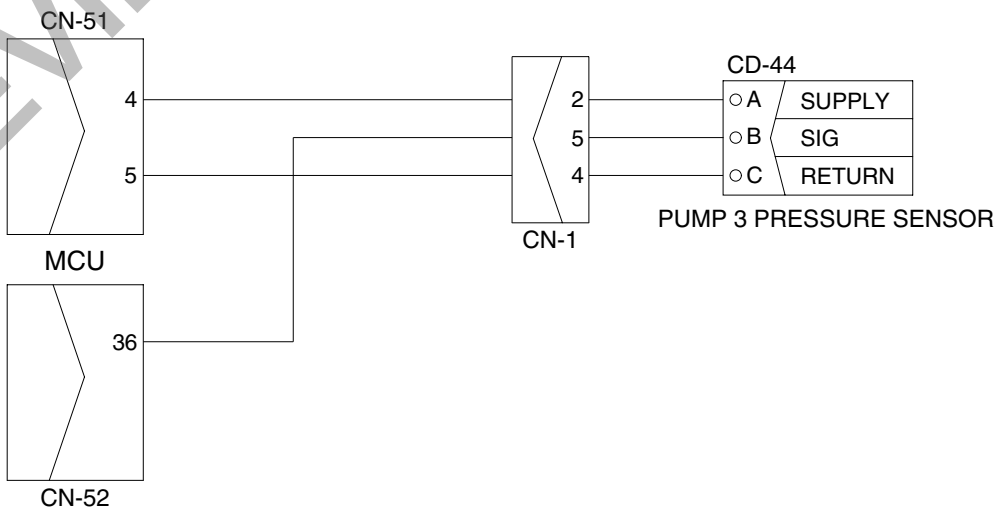

21096MS08

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

7. TURNING JOINT

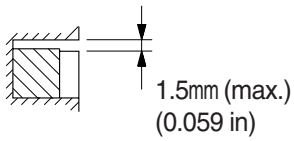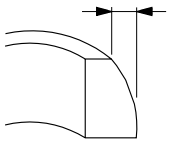Part name		Maintenance standards	Remedy
Body, Stem	Sliding surface with sealing sections.	Plating worn or peeled due to seizure or contamination.	Replace
	Sliding surface between body and stem other than sealing section.	· Worn abnormality or damaged more than 0.1 mm (0.0039 in) in depth due to seizure contamination.	Replace
		· Damaged more than 0.1 mm (0.0039 in) in depth.	Smooth with oilstone.
	Sliding surface with thrust plate.	· Worn more than 0.5 mm (0.02 in) or abnormality.	Replace
		· Worn less than 0.5 mm (0.02 in).	Smooth
		· Damage due to seizure or contamination remediable within wear limit (0.5 mm) (0.02 in).	Smooth
Cover	Sliding surface with thrust plate.	· Worn more than 0.5 mm (0.02 in) or abnormality.	Replace
		· Worn less than 0.5 mm (0.02 in).	Smooth
		· Damage due to seizure or contamination remediable within wear limit (0.5 mm) (0.02 in).	Replace
Seal set	-	· Extruded excessively from seal groove square ring.  	Replace
	-	· Slipper ring 1.5 mm (0.059 in) narrower than seal groove, or narrower than back ring.  	Replace
	-	· Worn more than 0.5 mm (0.02 in) ~ 1.5 mm (MAX.) (0.059 in) 	Replace

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

1. REMOVAL AND INSTALL OF MOTOR

1) REMOVAL

(1) Lower the work equipment to the ground and stop the engine.

(2) Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping.

(3) Loosen the breather slowly to release the pressure inside the hydraulic tank.

⚠ **Escaping fluid under pressure can penetrate the skin causing serious injury.**

※ When pipes and hoses are disconnected, the oil inside the piping will flow out, so catch it in oil pan.

(4) Disconnect hose assembly (2).


(5) Disconnect pilot line hoses (3, 4, 5, 6, 7, 8).


(6) Sling the swing motor assembly (1) and remove the swing motor mounting socket bolts (9).

· Motor device weight : 61 kg (135 lb)

(7) Remove the swing motor assembly.

※ When removing the swing motor assembly, check that all the piping have been disconnected.

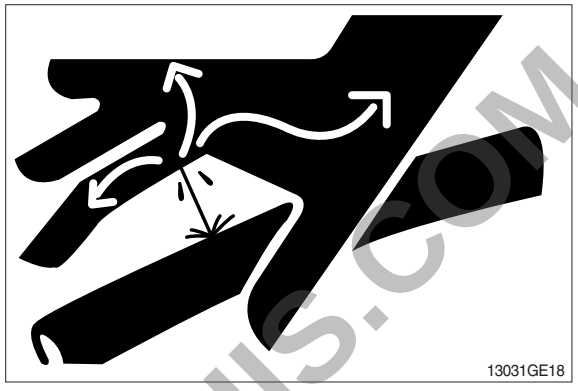

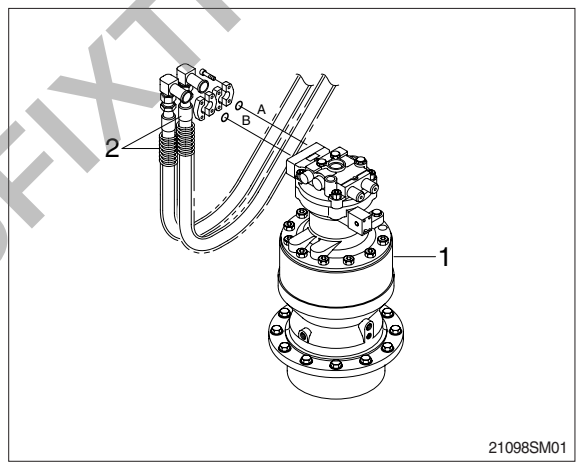

2) INSTALL

(1) Carry out installation in the reverse order to removal.

(2) Bleed the air from the swing motor.

① Remove the air vent plug.


② Pour in hydraulic oil until it overflows from the port.

③ Tighten plug lightly.

④ Start the engine, run at low idling and check oil come out from plug.

⑤ Tighten plug fully.

(3) Confirm the hydraulic oil level and check the hydraulic oil leak or not.

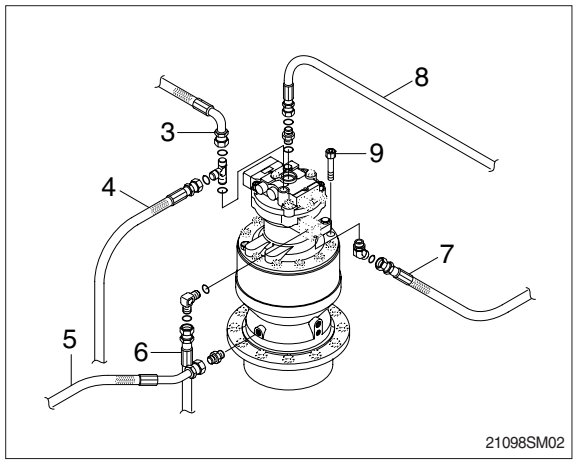

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

1. REMOVAL AND INSTALL

1) BUCKET CYLINDER

(1) Removal


※ Expand the arm and bucket fully, lower the work equipment to the ground and stop the engine.

※ Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping.


※ Loosen the breather slowly to release the pressure inside the hydraulic tank.

⚠ **Escaping fluid under pressure can penetrate the skin causing serious injury.**

※ Fit blind plugs in the hoses after disconnecting them, to prevent dirt or dust from entering.

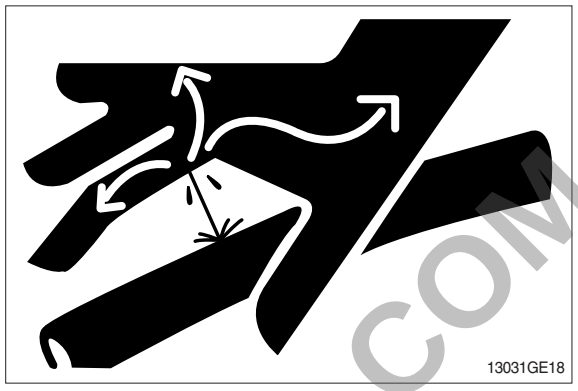


① Set block between bucket cylinder and arm.

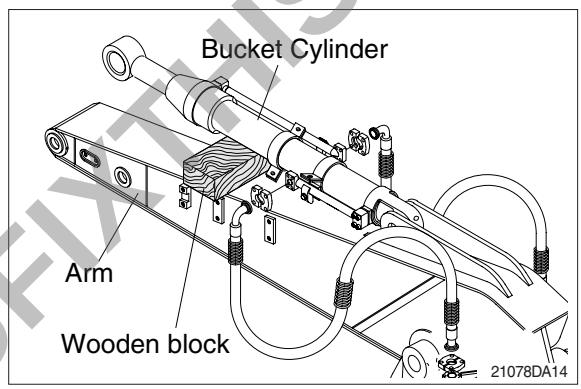


② Remove bolt (2), nut (3) and pull out pin (1).

※ Tie the rod with wire to prevent it from coming out.

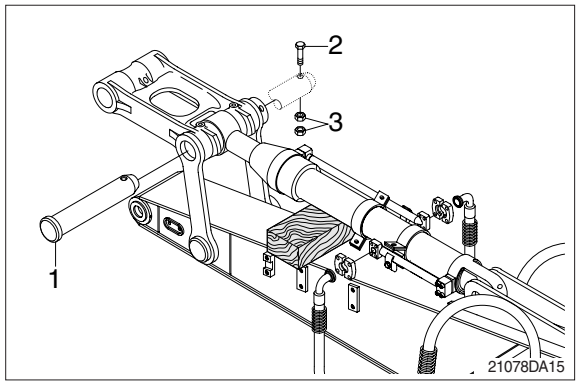

③ Disconnect bucket cylinder hoses (4) and put plugs (5) on cylinder pipe.

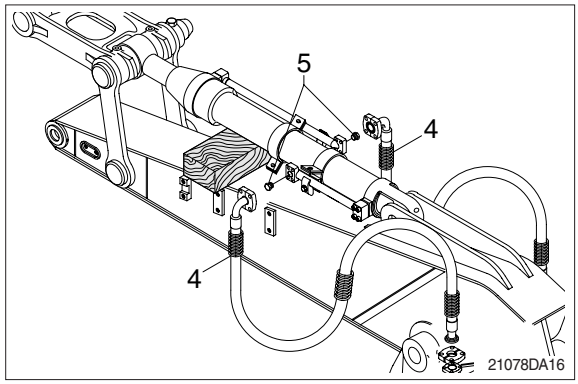

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 18 of 490 pages

The full manual includes:

- All 490 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Hyundai R210NLC-9 Service Manual

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual