
2. SPECIFICATIONS

1) 2.5m(8' 2") MONO BOOM, 1.3m(4' 3") ARM, WITH BOOM SWING POST

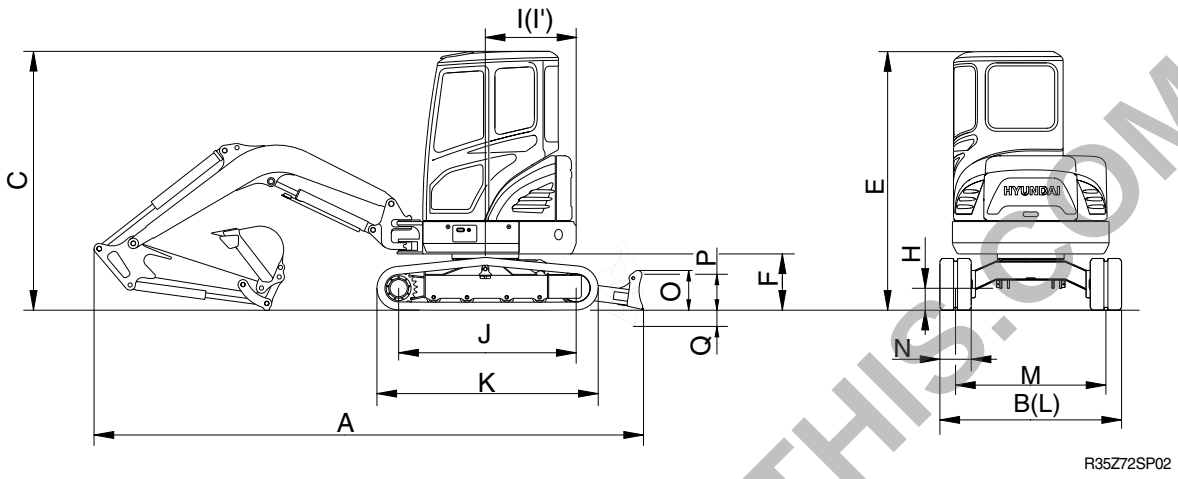


Description		Unit	Specification
Operating weight		kg(lb)	3650(8050)
Bucket capacity(SAE heaped), standard		$m^3(yd^3)$	0.11(0.14)
Overall length	A	mm(ft-in)	4790(15' 9")
Overall width, with 300mm shoe	B		1740(5' 9")
Overall height	C		2500(8' 2")
Overall height of cab	E		2500(8' 2")
Ground clearance of counterweight	F		540(1' 9")
Minimum ground clearance	H		290(0' 11")
Rear-end distance	I		870(2' 10")
Rear-end swing radius	I'		870(2' 10")
Distance between tumblers	J		1700(5' 7")
Undercarriage length	K		2130(7' 0")
Undercarriage width	L		1740(5' 9")
Track gauge	M		1440(4' 9")
Track shoe width, standard	N		300(1' 0")
Height of blade	O		370(1' 3")
Ground clearance of blade up	P		375(1' 3")
Depth of blade down	Q		390(1' 3")
Travel speed(Low/high)		km/hr(mph)	2.5/4.5(1.6/2.8)
Swing speed		rpm	9.5
Gradeability		Degree(%)	30(58)
Ground pressure(300mm shoe)		$kgf/cm^2(psi)$	0.34(4.83)

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


3. HYDRAULIC CIRCUIT

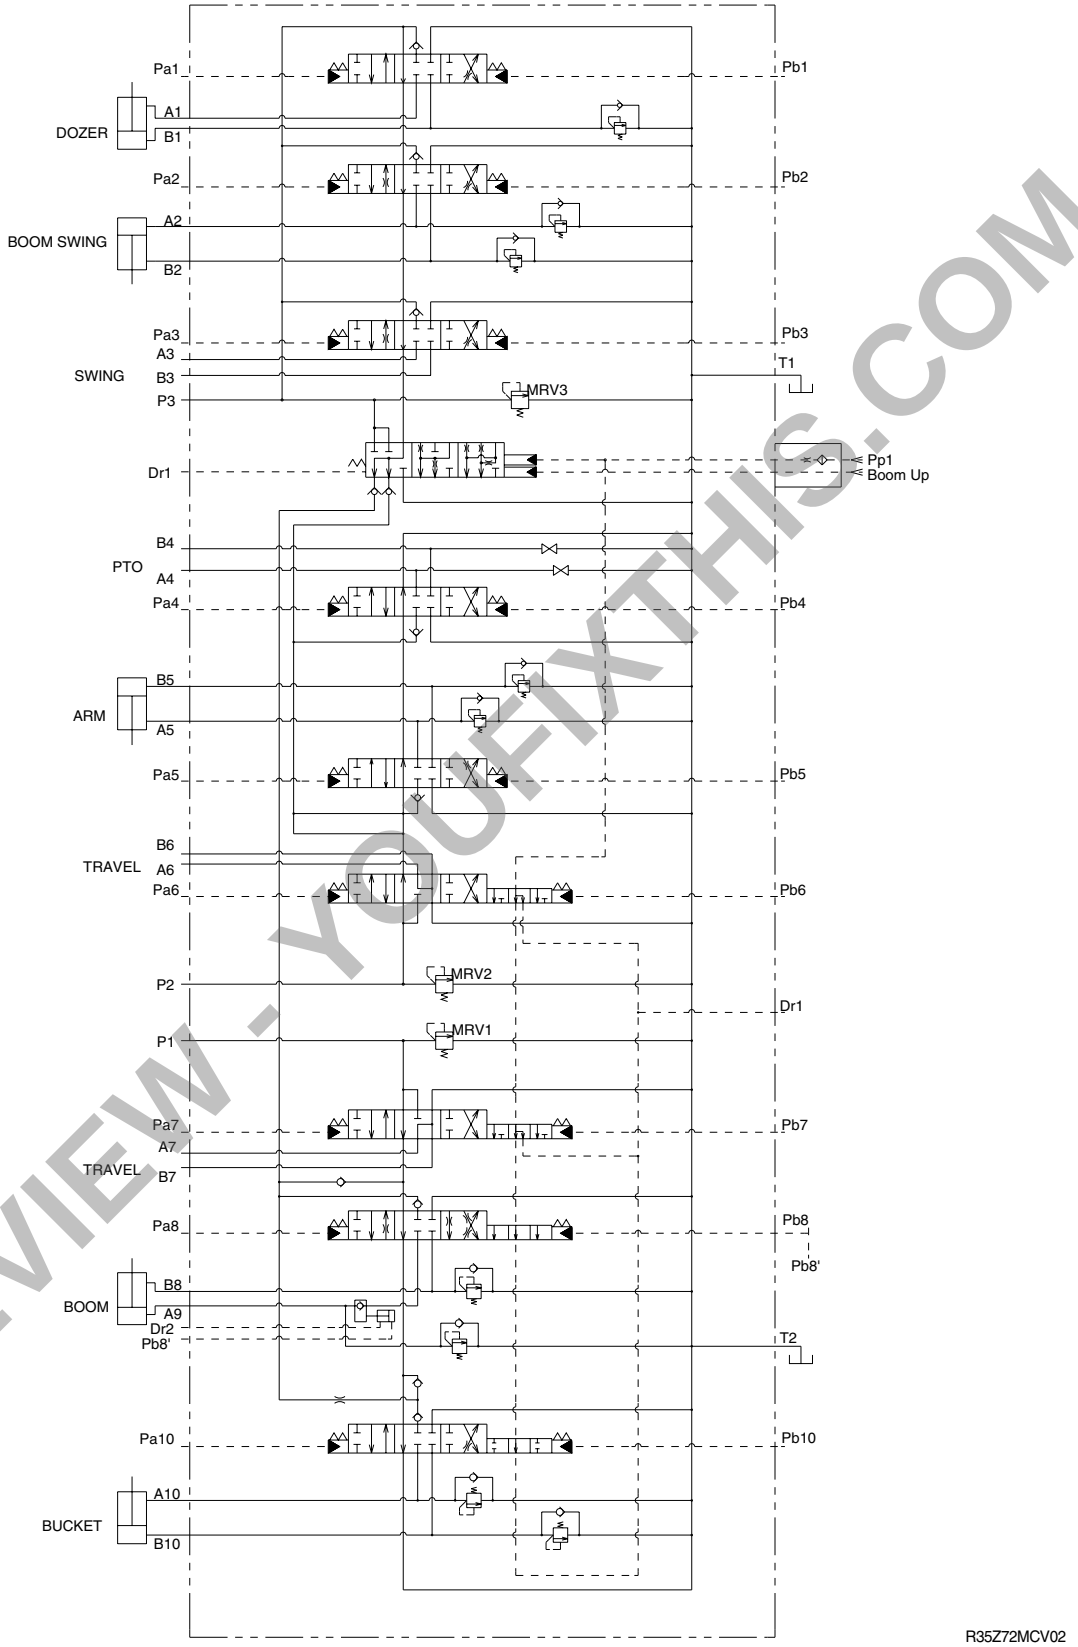

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

POWER CIRCUIT

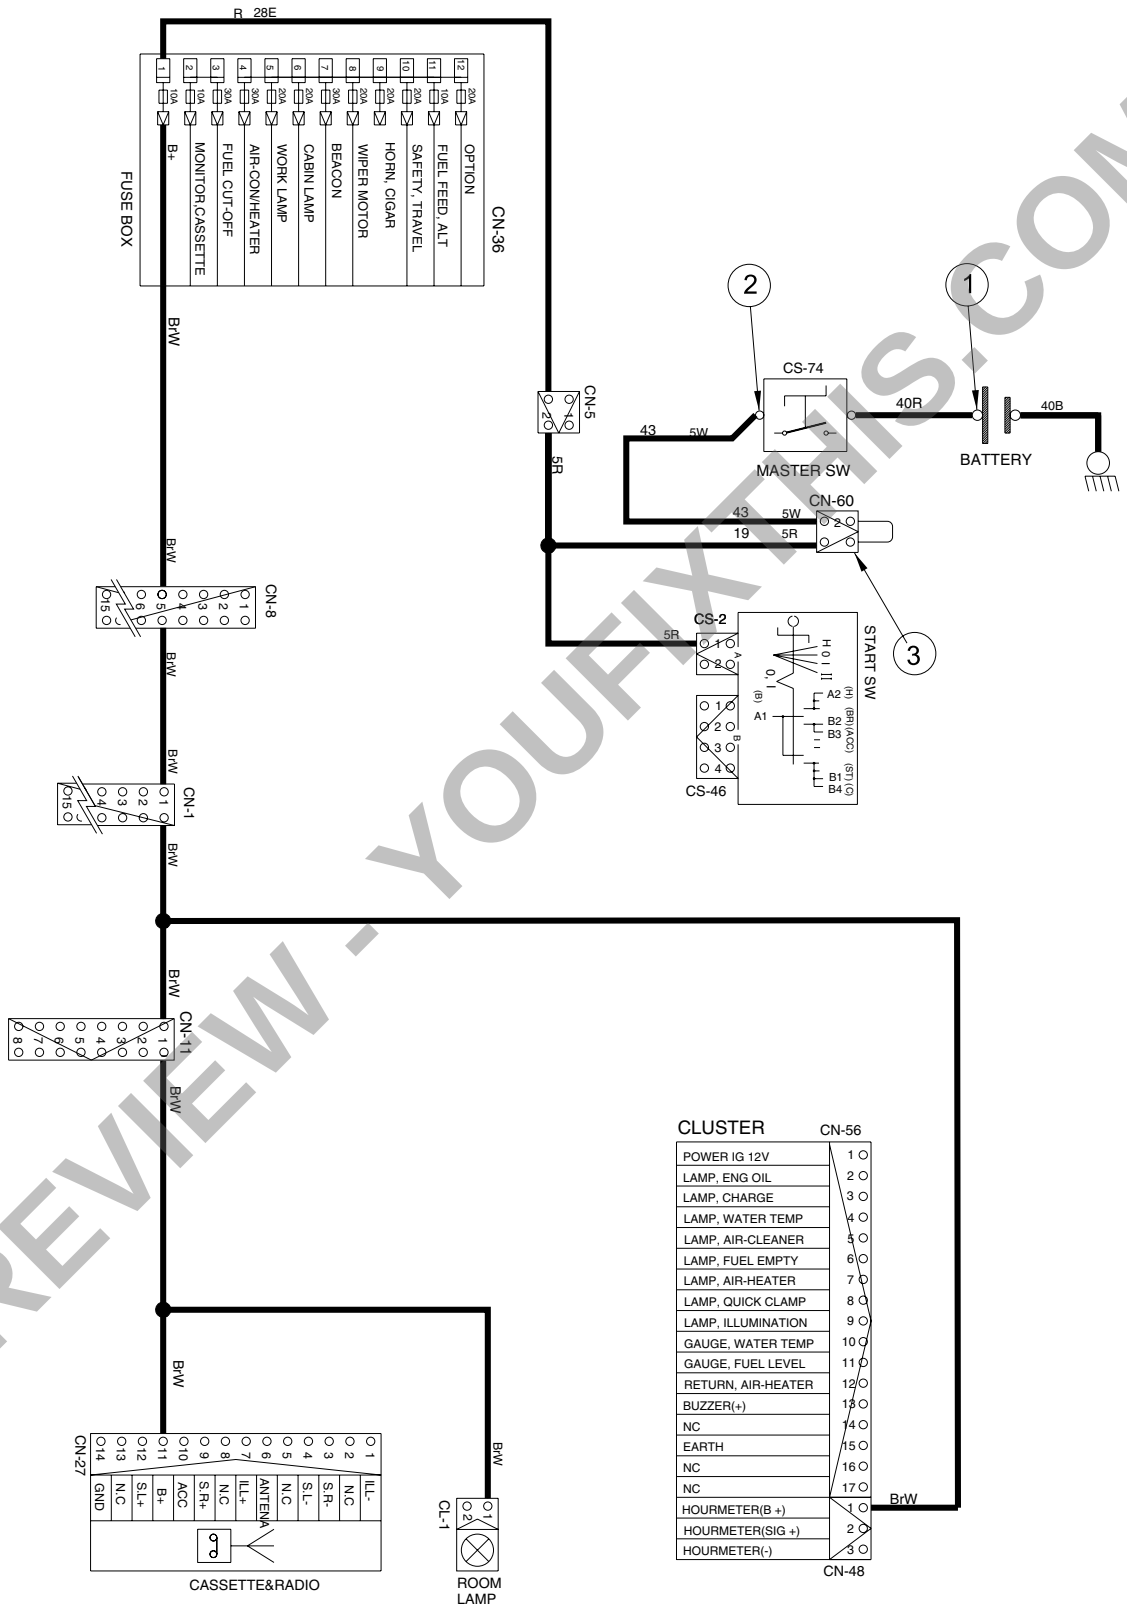

R35Z74EL04

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

1. REMOVAL AND INSTALL

1) REMOVAL

(1) Lower the work equipment to the ground and stop the engine.

(2) Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping

(3) Loosen the breather slowly to release the pressure inside the hydraulic tank.

⚠ Escaping fluid under pressure can penetrate the skin causing serious injury.

(4) Loosen the drain plug under the hydraulic tank and drain the oil from the hydraulic tank.

- Hydraulic tank quantity : 37 ℓ (9.8U.S.gal)

(5) Disconnect hoses(79, 80) and remove connectors(47, 48).

(6) Disconnect pilot line hoses(21, 90) and remove connectors(49, 54).

(7) Remove socket bolts(28) and disconnect pump suction tube(9).


※ When pump suction tube is disconnected, the oil inside the piping will flow out, so catch it in oil pan.

(8) Sling the pump assembly and remove the pump mounting bolts.

- Weight : 25kg(55lb)

※ Pull out the pump assembly from housing. When removing the pump assembly, check that all the hoses have been disconnected.



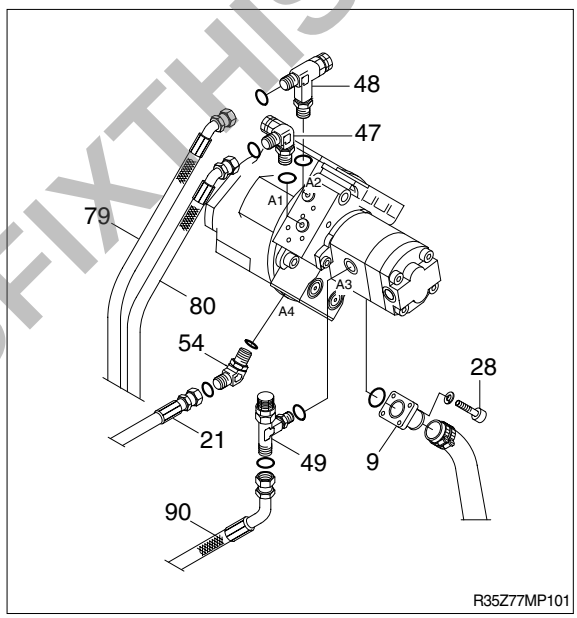

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

GROUP 2 TIGHTENING TORQUE

1. MAJOR COMPONENTS

No.	Descriptions		Bolt size	Torque	
				kgf · m	lbf · ft
1	Engine	Engine mounting bolt(Engine-Bracket)	M10 × 1.5	6.9±1.4	50±10.0
2		Engine mounting bolt(Bracket-Frame)	M12 × 1.75	25±2.5	181±18.1
3		Radiator mounting bolt, nut	M10 × 1.5	6.9±1.4	50±10.0
4		Coupling mounting bolt	M12 × 1.75	9.25±0.25	67±1.8
5	Hydraulic system	Main pump mounting bolt	M12 × 1.75	9.5±1.9	69±14.0
6		Main control valve mounting bolt	M10 × 1.5	6.9±1.4	50±10.0
7		Fuel tank mounting bolt	M12 × 1.75	12.8±3.0	93±22.0
8		Hydraulic oil tank mounting bolt	M12 × 1.75	12.8±3.0	93±22.0
9		Turning joint mounting bolt, nut	M10 × 1.5	6.9±1.4	50±10.0
10		Swing motor mounting bolt	M14 × 2.0	19.6±2.9	142±21.0
11	Power train system	Swing bearing upper mounting bolt	M12 × 1.75	12.8±3.0	93±22.0
12		Swing bearing lower mounting bolt	M12 × 1.75	12.8±3.0	93±22.0
13		Travel motor mounting bolt	M12 × 1.75	13.8±2.0	100±14.0
14		Sprocket mounting bolt	M12 × 1.75	12.8±3.0	93±22.0
15	Under carriage	Carrier roller mounting bolt, nut	M12 × 1.75	12.8±3.0	93±22.0
16		Track roller mounting bolt	M18 × 2.0	41.3±6.2	299±45.0
17	Others	Counter weight mounting bolt	M20 × 2.5	57.8±6.4	418±46.3
18		Cab mounting bolt, nut	M12 × 1.75	12.8±3.0	92±22.0
19		Operator's seat mounting bolt	M 8 × 1.25	1.17±0.1	8.5±0.7

※ For tightening torque of engine and hydraulic components, see each component disassembly and assembly.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

GROUP 1 BEFORE TROUBLESHOOTING

1. INTRODUCTION

When a trouble is occurred in the machine, this section will help an operator to maintain the machine with easy.

The trouble of machine is parted Hydraulic & Mechanical system and Electrical system system.

At each system part, an operator can check the machine according to the troubleshooting process diagram.



PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

CONTENTS

SECTION 1 GENERAL

Group 1 Safety Hints ····· 1-1
Group 2 Specifications ····· 1-9

SECTION 2 STRUCTURE AND FUNCTION

Group 1 Pump Device ····· 2-1
Group 2 Main Control Valve ····· 2-9
Group 3 Swing Device ····· 2-38
Group 4 Travel Device ····· 2-49
Group 5 RCV Lever ····· 2-68

SECTION 3 HYDRAULIC SYSTEM

Group 1 Hydraulic Circuit ····· 3-1
Group 2 Main Circuit ····· 3-2
Group 3 Pilot Circuit ····· 3-5
Group 4 Single Operation ····· 3-10
Group 5 Combined Operation ····· 3-22

SECTION 4 ELECTRICAL SYSTEM

Group 1 Component Location ····· 4-1
Group 2 Monitoring system ····· 4-3
Group 3 Electrical Circuit ····· 4-9
Group 4 Electrical Component Specification ····· 4-25
Group 5 Connectors ····· 4-32

SECTION 5 TROUBLESHOOTING

Group 1 Before Troubleshooting ····· 5-1
Group 2 Hydraulic and Mechanical System ····· 5-4
Group 3 Electrical System ····· 5-24

SECTION 6 MAINTENANCE STANDARD

Group 1 Operational Performance Test ····· 6-1
Group 2 Major Components ····· 6-21
Group 3 Track and Work Equipment ····· 6-31

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


GROUP 1 SAFETY

FOLLOW SAFE PROCEDURE

Unsafe work practices are dangerous. Understand service procedure before doing work; Do not attempt shortcuts.


WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

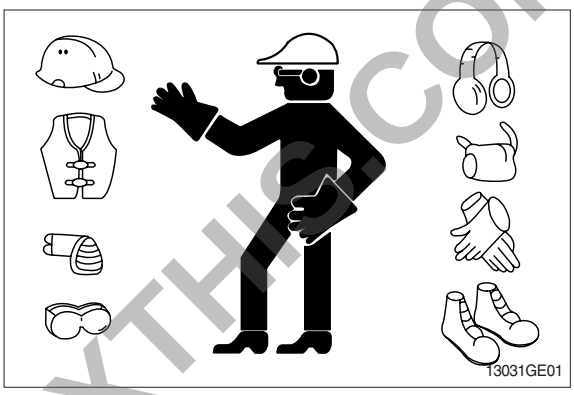


WARN OTHERS OF SERVICE WORK

Unexpected machine movement can cause serious injury.
Before performing any work on the excavator, attach a 「**Do Not Operate**」 tag on the right side control lever.

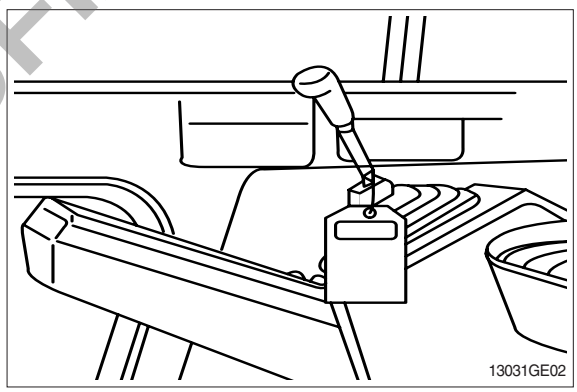

USE HANDHOLDS AND STEPS

Falling is one of the major causes of personal injury.
When you get on and off the machine, always maintain a three point contact with the steps and handrails and face the machine. Do not use any controls as handholds.
Never jump on or off the machine. Never mount or dismount a moving machine.
Be careful of slippery conditions on platforms, steps, and handrails when leaving the machine.

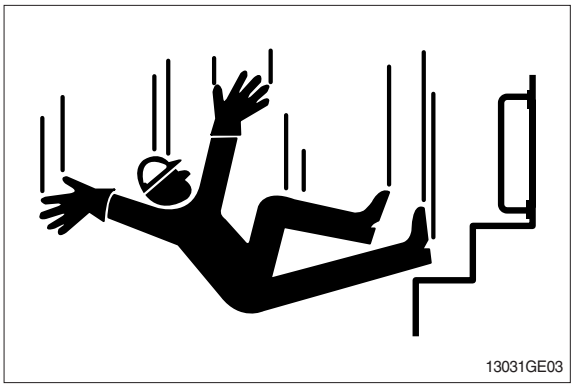

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

Millimeters to inches

1mm = 0.03937in

	0	1	2	3	4	5	6	7	8	9
0		0.039	0.079	0.118	0.157	0.197	0.236	0.276	0.315	0.354
10	0.394	0.433	0.472	0.512	0.551	0.591	0.630	0.669	0.709	0.748
20	0.787	0.827	0.866	0.906	0.945	0.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.536
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.244	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.032	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898

Kilogram to Pound

1kg = 2.2046lb

	0	1	2	3	4	5	6	7	8	9
0		2.20	4.41	6.61	8.82	11.02	13.23	15.43	17.64	19.84
10	22.05	24.25	26.46	28.66	30.86	33.07	35.27	37.48	39.68	41.89
20	44.09	46.30	48.50	50.71	51.91	55.12	57.32	59.5.	61.73	63.93
30	66.14	68.34	70.55	72.75	74.96	77.16	79.37	81.57	83.78	85.98
40	88.18	90.39	92.59	94.80	97.00	99.21	101.41	103.62	105.82	108.03
50	110.23	112.44	114.64	116.85	119.05	121.25	123.46	125.66	127.87	130.07
60	132.28	134.48	136.69	138.89	141.10	143.30	145.51	147.71	149.91	152.12
70	154.32	156.53	158.73	160.94	163.14	165.35	167.55	169.76	171.96	174.17
80	176.37	178.57	180.78	182.98	185.19	187.39	189.60	191.80	194.01	196.21
90	198.42	200.62	202.83	205.03	207.24	209.44	211.64	213.85	216.05	218.26

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

4. FUNCTION

1) IN NEUTRAL (When all spools are in neutral position)

P1 : The oil discharged from the hydraulic pump flows into control valve P1 port, and then flows through P1 and P2 supply body the P1 side travel spool. The oil flows through the bypass passage in the direction of travel → boom → bucket spool, and then flows from the bypass passage to the tank passage in the bucket section.

P2 : The oil discharged for the hydraulic pump flows into the control valve from P2 port, and then flows through P1 and P2 supply body to the P2 side travel spool. The oil flows through the bypass passage in the direction of travel → arm → PTO spool, and the flows from the bypass passage to the tank passage in the PTO section.

P3 : The oil discharged from the hydraulic pump flows into the control valve from P3 port, and then flows through the parallel passage of dozer, boom swing, and swing. The oil that has followed into the parallel passage flows through the bypass passage in the direction of dozer → Boom swing → swing spool, the connecting spool land, the P2 side parallel passage, the bypass passage from arm to PTO spool, the bypass passage in the PTO section, and then to the tank passage.

※ Since each line (P1, P2, P3) is supplied with oil from the pump, the section is operatable; therefore, do not operate the control valve except the working time.

- P1 line : Travel, boom, bucket
- P2 line : Travel, arm, PTO
- P3 line : Dozer, boom swing, arm, PTO, boom (up only)

P_P1 : When P_P1 port is applied with pilot pressure, the oil flows into the travel independent passage via an orifice.
With the spool in neutral, the oil flows into Dr1 port provided in the P1 and P2 supply body.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

4) AUTO TWO SPEED CHANGE MECHANISM

Auto two speed control mechanism consists of two spools and spring. This valve automatically changes motor displacement in portion to motor pressure. This valve works while the pilot port Ps is pressurized.

(1) Motor pressure is low

The motor displacement is small (high speed displacement) as shown in the figure.


When the two speed spool is on the right position, motor pressure PM1 and PM2 are connected to each side of chamber of two speed piston. So swash plate is moved to high speed position by two speed piston and motor displacement is kept on high speed position.

Pilot pressure is applied on the area Ap when Ps port is pressurized. Then the pressure of Ps pushes the spool to the right direction on the figure. At the same time, motor inlet pressure is applied on the area Am. So, the spool is also applied to the left direction by Am pressure. According to above, if the motor pressure is lower and keep the following condition, the spool stay on the right position.

$$Ps \times Dp > Am \times Pin + Kx$$

Kx : the force of spring

Motor pressure is low : $(Ap \times Ps) > (Am \times Pin + Kx)$

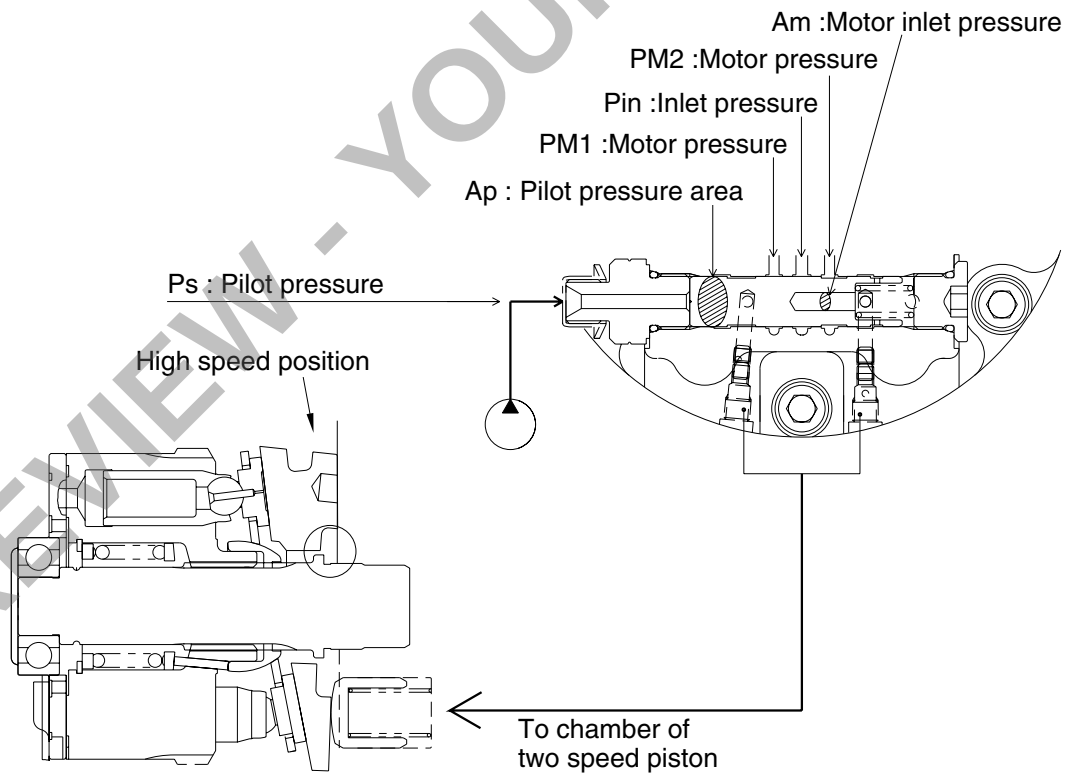


Automatic two speed (Motor pressure is low)

R35Z72TM11

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

5. COMBINED SWING, BOOM, ARM AND BUCKET OPERATION

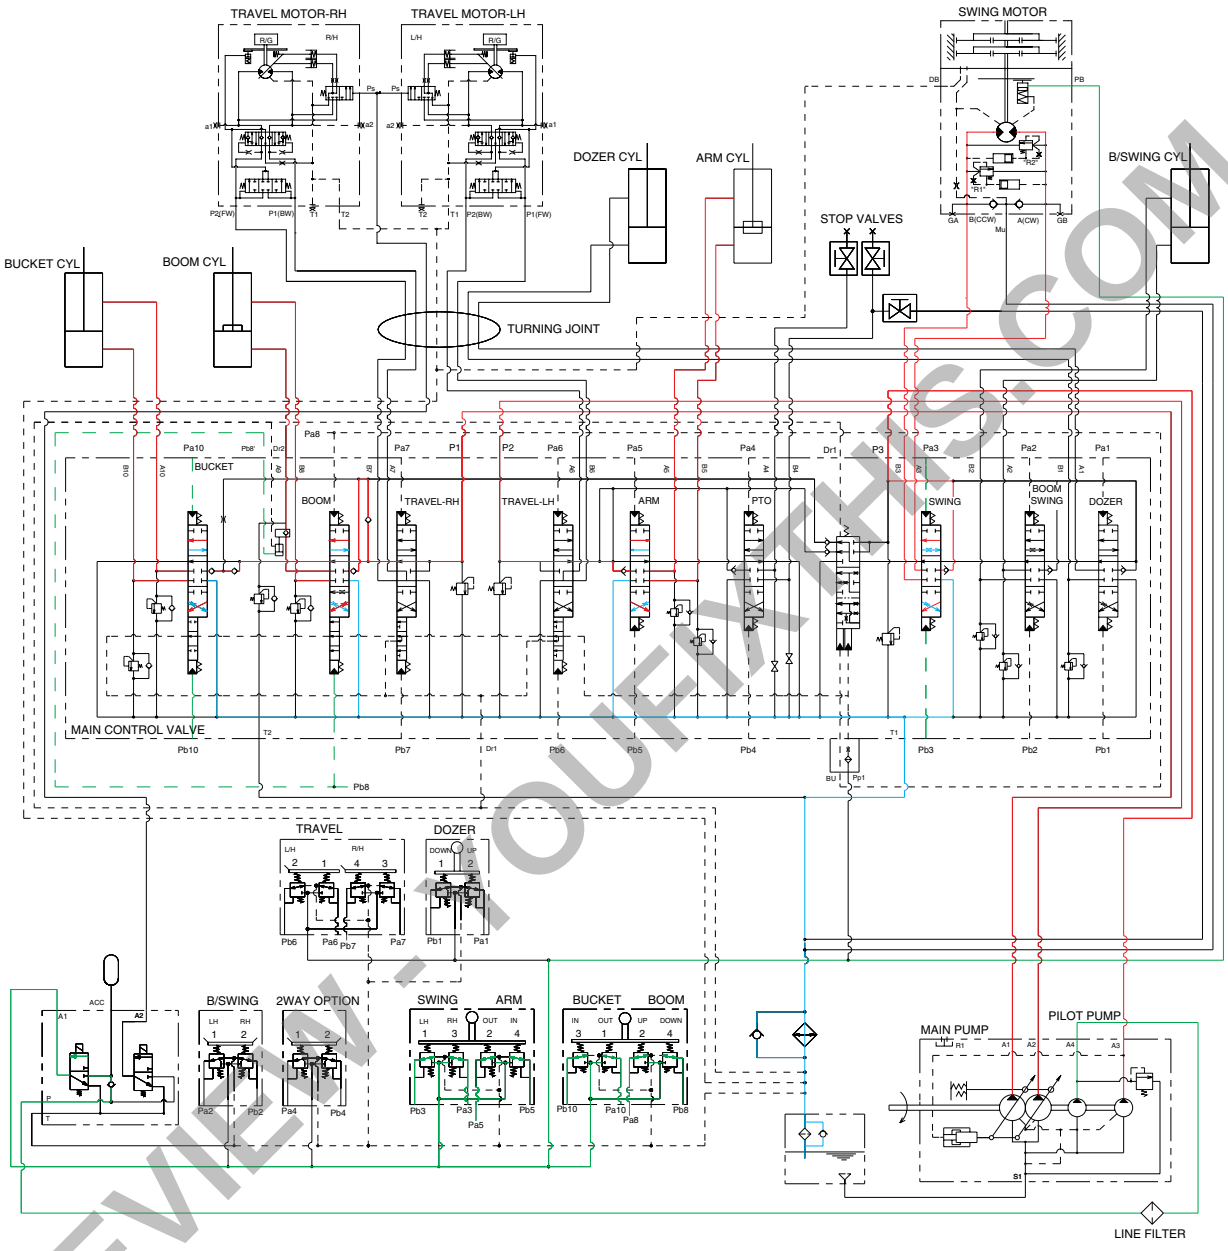

When the swing, boom, arm and bucket functions are operated, simultaneously each spool in the main control valve is moved to the functional position by the pilot oil pressure from the remote control valve.

The oil from the P2 pump flows into the arm cylinder through, arm spool.

The oil from the P1 pump flows into the boom cylinders and bucket cylinder through the boom spool, bucket spool.









The oil from the P3 pump flows into the swing motor through the swing spool.

The superstructure swings and the boom, arm and bucket are operated.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

2) J TYPE CONNECTOR

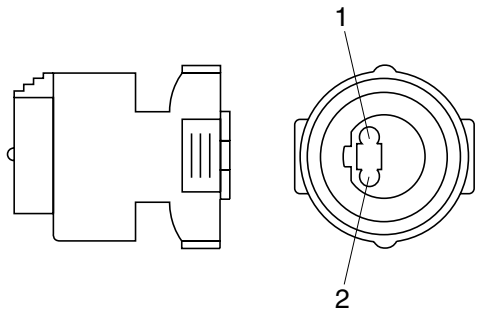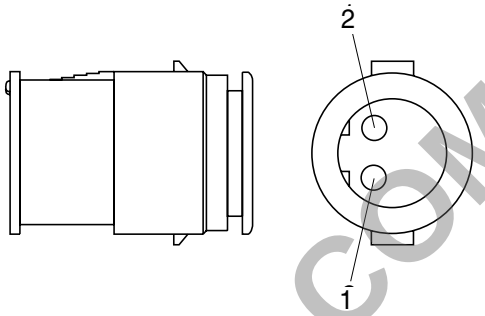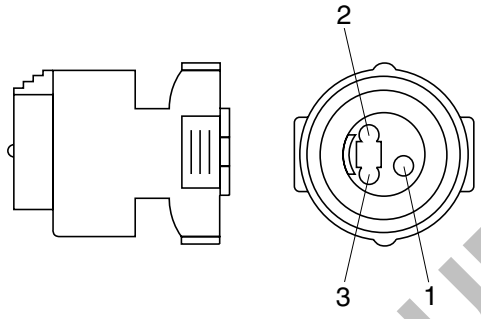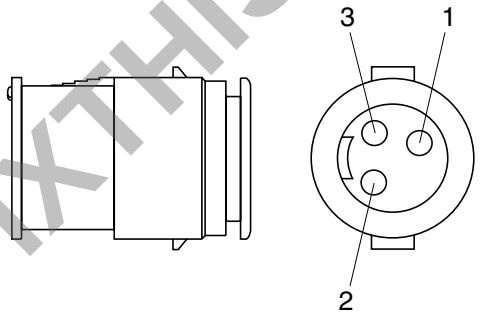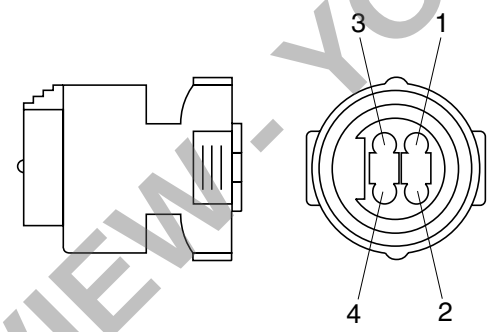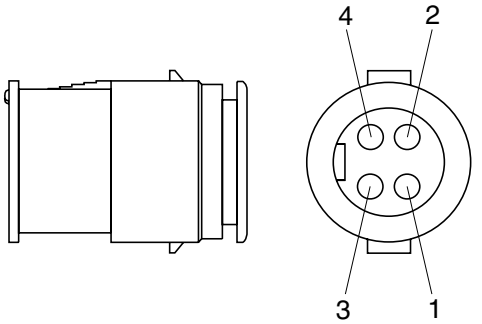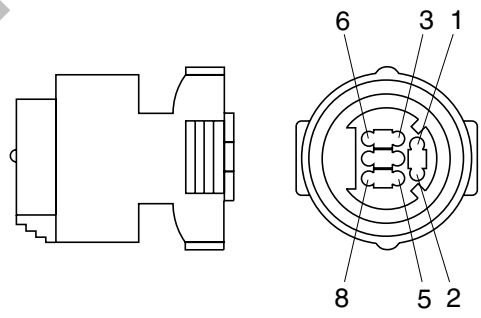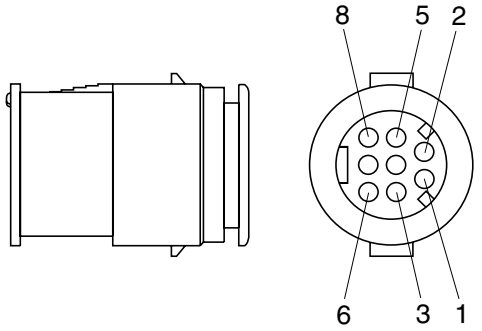
No. of pin	Receptacle connector(Female)	Plug connector(Male)
2	 S816-002001	 S816-102001
3	 S816-003001	 S816-103001
4	 S816-004001	 S816-104001
8	 S816-008001	 S816-108001


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

7. WHEN FUEL GAUGE DOES NOT OPERATE(Check warning lamp ON/OFF)


- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

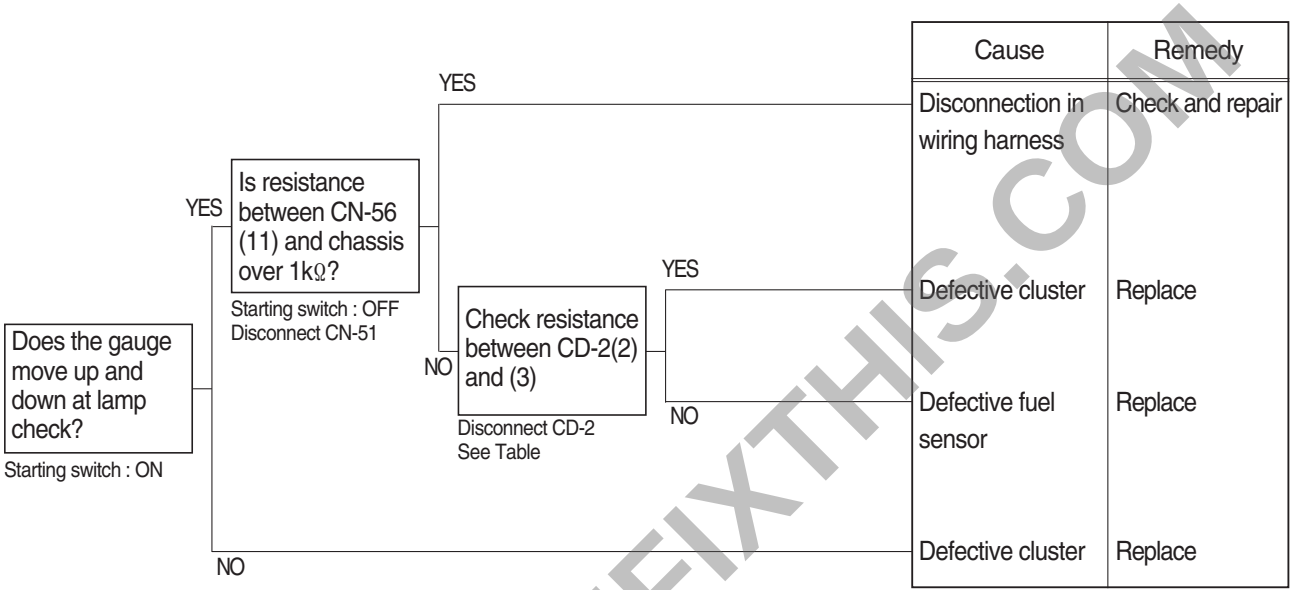

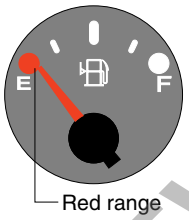

Check Table

Item \ Temperature	Empty	1/2	Full
Unit Resistance(Ω)	90	38	10

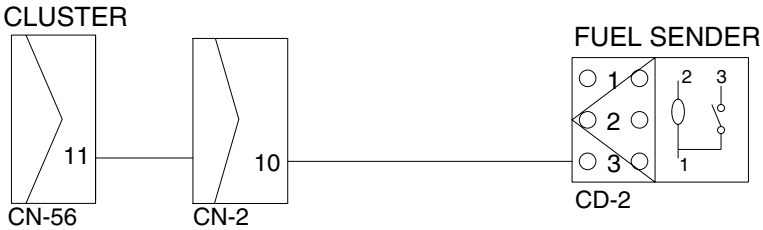


R35Z75TS16

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

2. IDLER

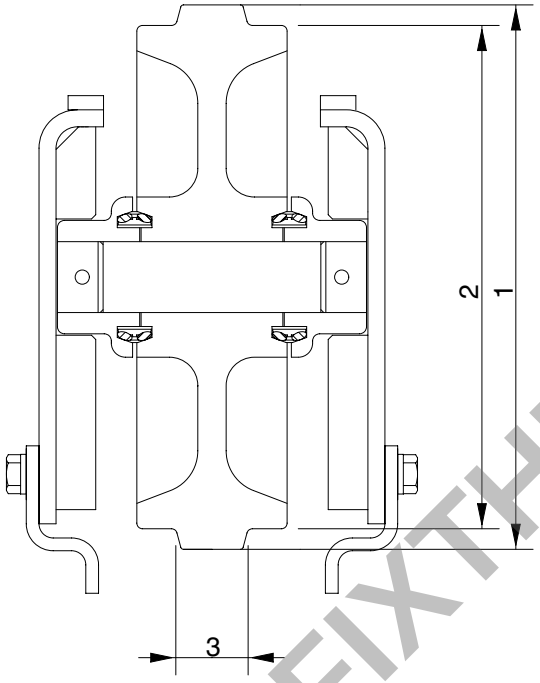

R5576MC18


Unit : mm

No	Check item		Criteria		Remedy
			Standard size	Repair limit	
1	Outside diameter of flange	Steel	293	-	Rebuild or replace
		Rubber	327	-	
2	Outside diameter of thread	Steel	269	263	
		Rubber	285	279	
3	Width of flange		26.2	20.2	

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

STRUCTURE(3/3)

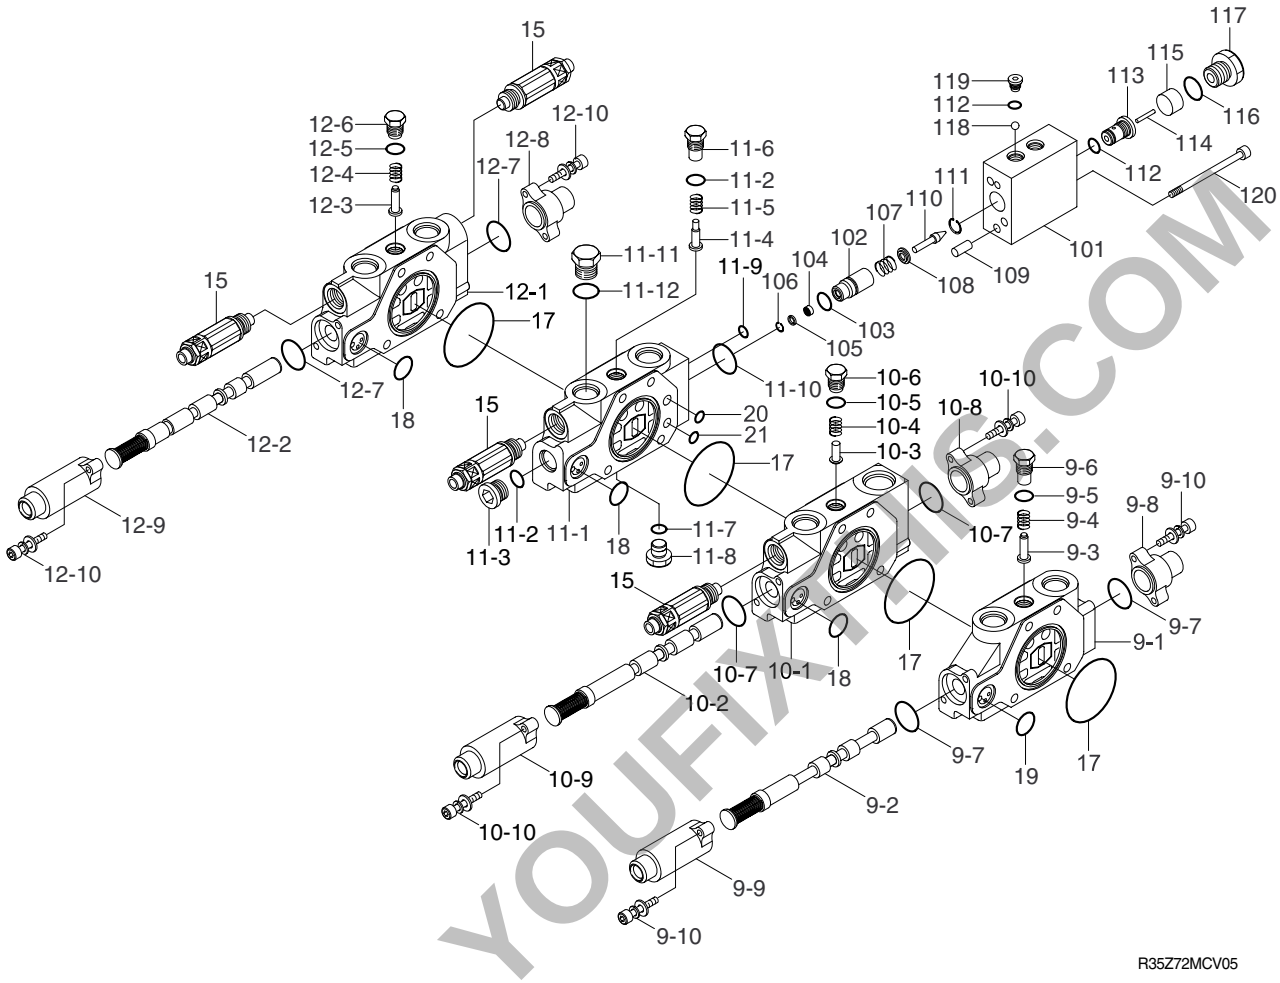

9	Travel work block	10-7	O-ring	12-1	Body-work	103	Seal
9-1	Body-work	10-8	Cover-pilot	12-2	Spool assy	104	Filter
9-2	Spool assy	10-9	Cover-pilot	12-3	Poppet	105	Spacer
9-3	Poppet	10-10	Bolt-soc head w/washer	12-4	Spring	106	Ring-retaining
9-4	Spring	11	Boom lock valve	12-5	O-ring	107	Spring A-lock valve
9-5	O-ring	11-1	Body-work	12-6	Plug	108	Spring seat
9-6	Plug	11-2	O-ring	12-7	O-ring	109	Pin
9-7	O-ring	11-3	Plug	12-8	Cover-pilot	110	Poppet
9-8	Cover-pilot	11-4	Poppet	12-9	Cover-pilot	111	Ring-retaining
9-9	Cover-pilot	11-5	Spring	12-10	Bolt-soc head w/washer	112	O-ring
9-10	Bolt-soc head w/washer	11-6	Plug	15	Overload relief valve	113	Guide-piston
10	Boom work block	11-7	O-ring	17	O-ring	114	Piston A1
10-1	Body-work	11-8	Plug	18	O-ring	115	Piston B
10-2	Spool assy	11-9	O-ring	19	O-ring	116	O-ring
10-3	Poppet	11-10	O-ring	20	O-ring	117	Connector
10-4	Spring	11-11	Plug	21	O-ring	118	Ball-steel
10-5	O-ring	11-12	O-ring	101	Cover-lock valve	119	Plug
10-6	Plug	12	Bucket work block	102	Lock valve	120	Bolt-hex. socket head


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

(31) Take out ball bearing (3) from shaft (2).

· Tools required :
Ball bearing disassembly jig (S-8)


(32) Completed.

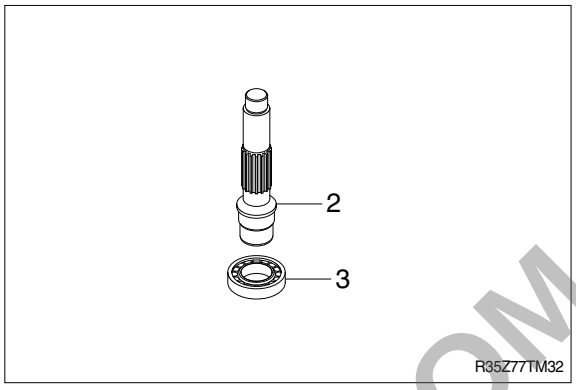

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

(4) Dozer cylinder

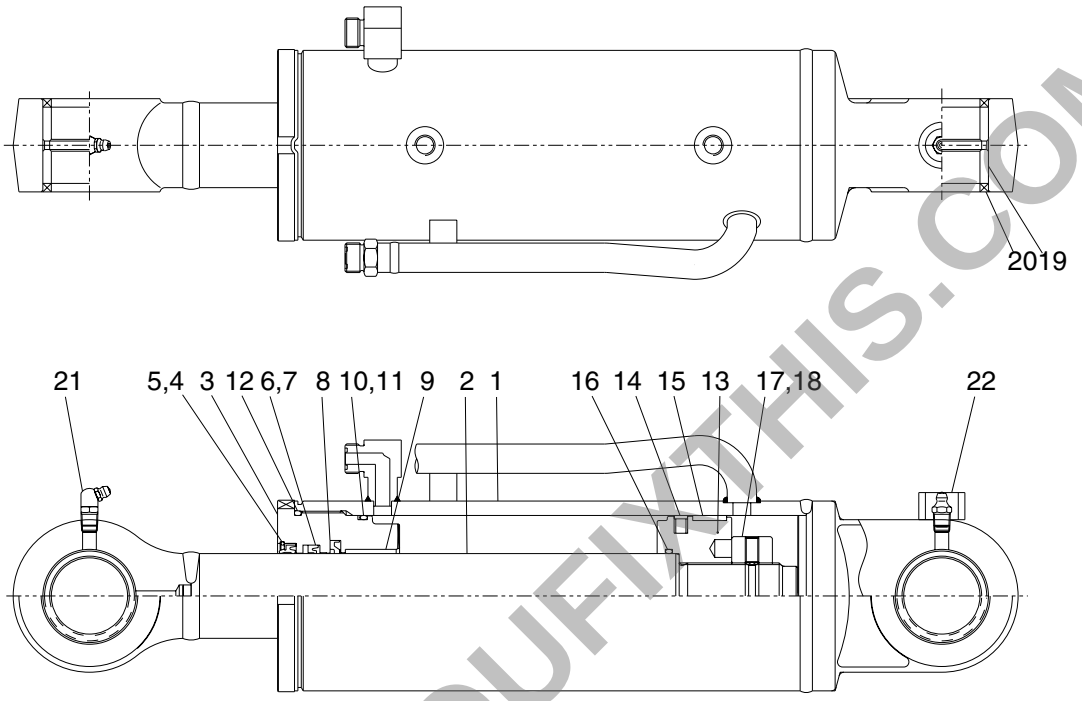

R35Z77CY18

1	Tube assembly	8	Buffer ring	15	Wear ring
2	Rod assembly	9	DU bush	17	Piston nut
3	Gland	10	O-ring	18	Set screw
4	Dust wiper	11	Back-up ring	19	Pin bush
5	Retaining ring	12	O-ring	20	Dust seal
6	Rod seal	13	Piston	21	Grease nipple
7	Back-up ring	14	Piston seal	22	Grease nipple

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 18 of 415 pages

The full manual includes:

- All 415 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Hyundai R35Z-7A Shop Manual

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual