
2. SPECIFICATIONS

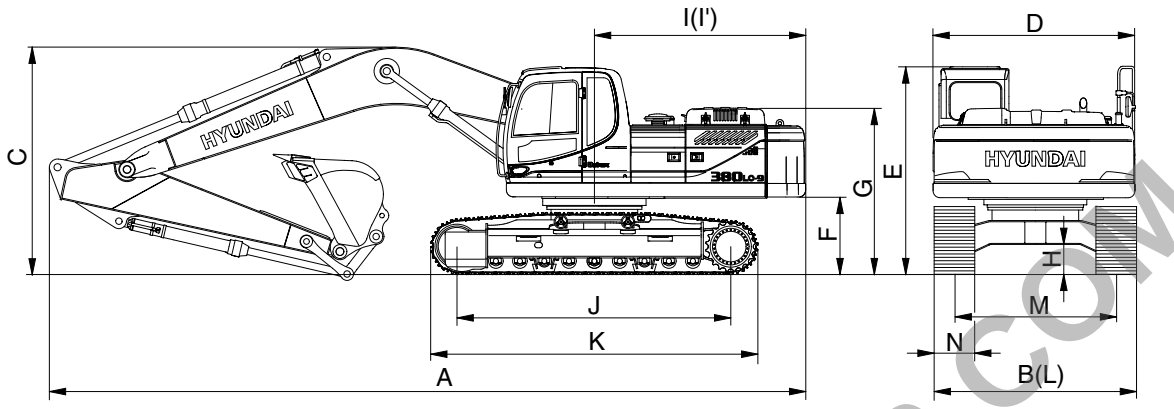

38092SP02

Description		Unit	Specification
Operating weight		kg (lb)	38200 (84220)
Bucket capacity (SAE heaped), standard		m^3 (yd^3)	1.62 (2.12)
Overall length	A	mm (ft-in)	11120 (36' 6")
Overall width, with 600 mm shoe	B		3340 (10'11")
Overall height	C		3450 (11' 4")
Superstructure width	D		2980 (9' 9")
Overall height of cab	E		3175 (10' 5")
Ground clearance of counterweight	F		1290 (4' 3")
Engine cover height	G		3190 (10' 6")
Minimum ground clearance	H		550 (1' 10")
Rear-end distance	I		3350 (11' 1")
Rear-end swing radius	I'		3415 (11' 2")
Distance between tumblers	J		4340 (14' 3")
Undercarriage length	K		5280 (17' 4")
Undercarriage width	L		3340 (11' 0")
Track gauge	M		2740 (9' 0")
Track shoe width, standard	N		600 (24")
Travel speed (low/high)		km/hr (mph)	3.0/4.8 (1.9/3.0)
Swing speed		rpm	9.3
Gradeability		Degree (%)	35 (70)
Ground pressure (600 mm shoe)		kgf/cm^2(psi)	0.68 (9.67)
Max traction force		kg (lb)	32000 (70550)


PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com


GROUP 1 PUMP DEVICE

1. STRUCTURE

The pump device consists of main pump, regulator and gear pump.

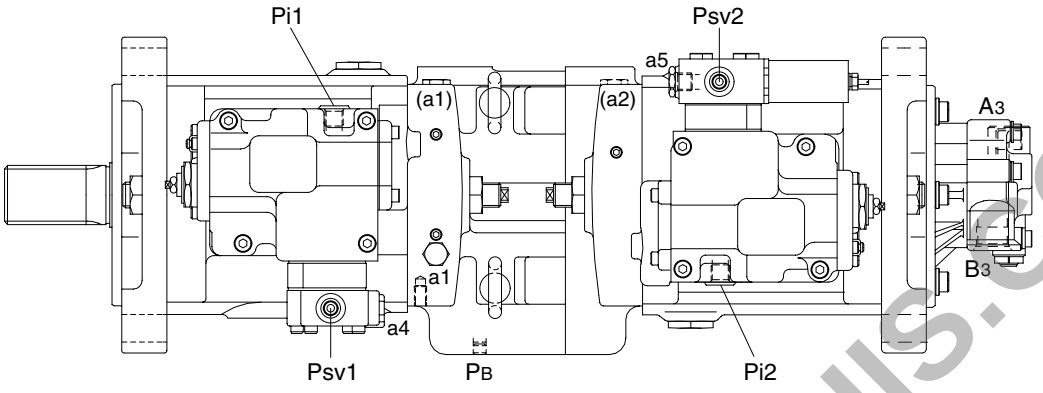

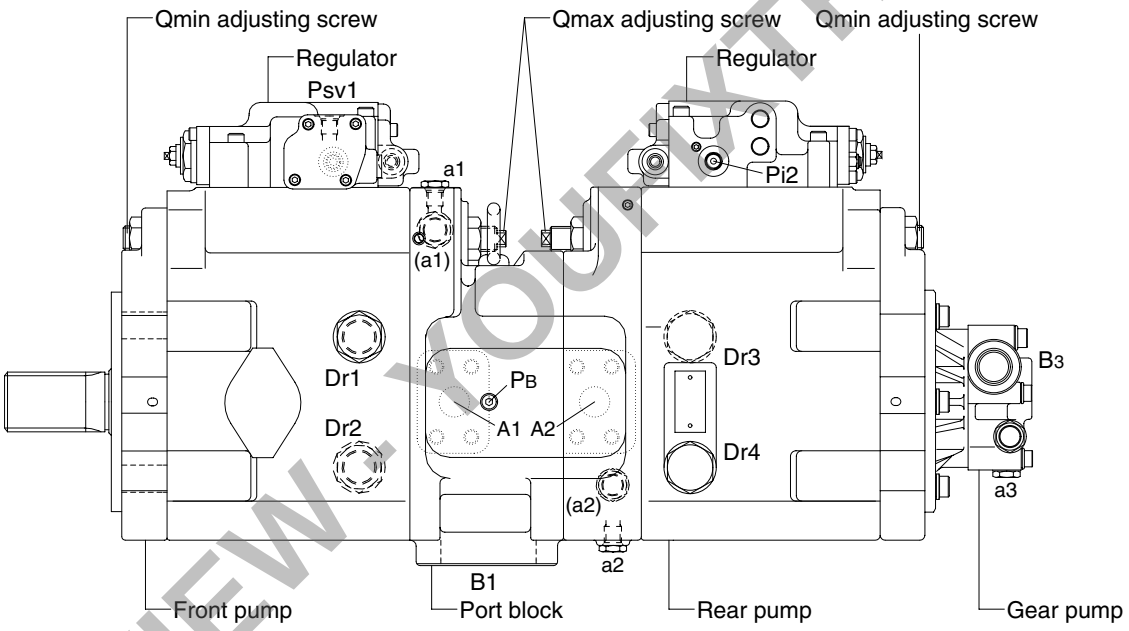

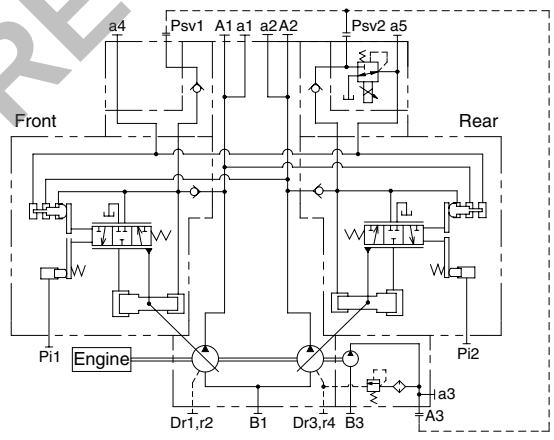

Hydraulic circuit 38092MP01


Port	Port name	Port size
A1, 2	Delivery port	SAE6000psi 1"
B1	Suction port	SAE2000psi 3"
Dr	Drain port	PF 3/4 - 23
Pi1, i2	Pilot port	PF 1/4 - 15
Pm1, m2	Qmax cut port	PF 1/4 - 15
Psv1, sv2	Servo assist port	PF 1/4 - 15
a1, 2, 4,5	Gauge port	PF 1/4 - 15
a3	Gauge port	PF 1/4 - 14
A3	Gear pump delivery port	PF 1/2 - 19
B3	Gear pump suction port	PF 3/4 - 20
PB	Gauge port	PT 1/8

Download full manual at youfixthis.com

PREVIEW - YOUFIXTHIS.COM

1) MAIN PUMP(1/2)

The main pump consists of two piston pumps (front & rear) and valve block.

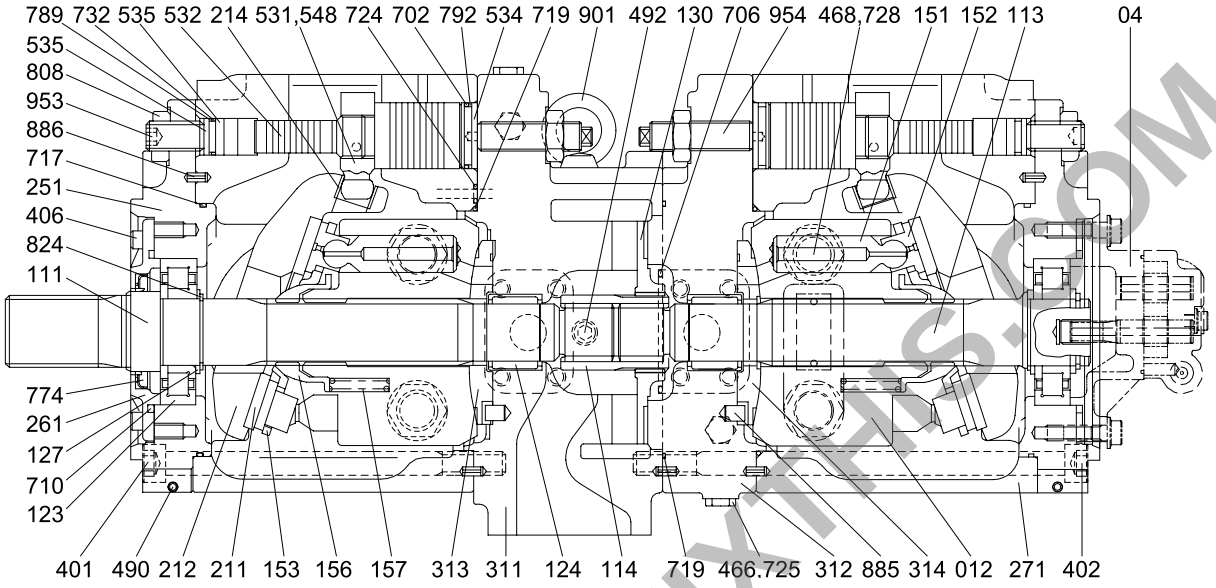

38092MP02

04	Gear pump	271	Pump casing	710	O-ring
111	Drive shaft (F)	311	Valve cove r(F)	717	O-ring
113	Drive shaft (R)	312	Valve cover (R)	719	O-ring
114	Spline coupling	313	Valve plate (R)	724	O-ring
123	Roller bearing	314	Valve plate (L)	725	O-ring
124	Needle bearing	401	Hexagon socket bolt	728	O-ring
127	Bearing spacer	402	Hexagon socket bolt	732	O-ring
130	Booster	406	Hexagon socket bolt	774	Oil seal
012	Cylinder block	466	VP Plug	789	Back up ring
151	Piston	468	VP Plug	792	Back up ring
152	Shoe	490	Plug	808	Hexagon head nut
153	Set plate	492	Plug	824	Snap ring
156	Bushing	531	Tilting pin	885	Pin
157	Cylinder spring	532	Servo piston	886	Spring pin
211	Shoe plate	534	Stopper (L)	901	Eye bolt
212	Swash plate	535	Stopper (S)	953	Set screw
214	Bushing	548	Feedback pin	954	Adjust screw
251	Support plate	702	O-ring		
261	Seal cover (F)	706	O-ring		

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

1. REMOVAL AND INSTALL

1) REMOVAL

(1) Lower the work equipment to the ground and stop the engine.

(2) Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping

(3) Loosen the breather slowly to release the pressure inside the hydraulic tank.

⚠ **Escaping fluid under pressure can penetrate the skin causing serious injury.**

(4) Loosen the drain plug under the hydraulic tank and drain the oil from the hydraulic tank.
· Hydraulic tank quantity : 230 ℓ

(5) Remove socket bolts (5) and disconnect pipes (1, 2).

(6) Disconnect pilot line hoses (6, 7, 8, 9, 10, 11, 12, 13).


(7) Remove socket bolts (4) and disconnect pump suction tube (3).

※ When pump suction tube is disconnected, the oil inside the piping will flow out, so catch it in oil pan.


(8) Sling the pump assembly and remove the pump mounting bolts.
· Weight : 190 kg (420 lb)

※ Pull out the pump assembly from housing. When removing the pump assembly, check that all the hoses have been disconnected.



13031GE18

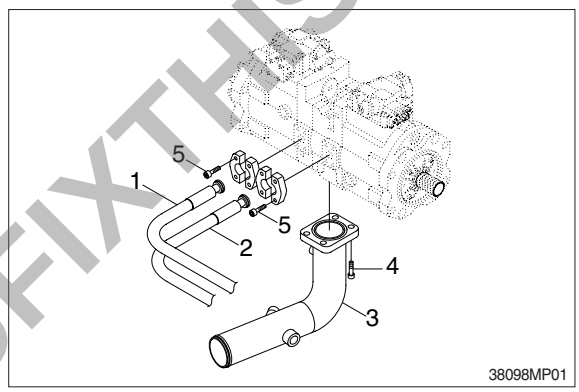

38098MP01

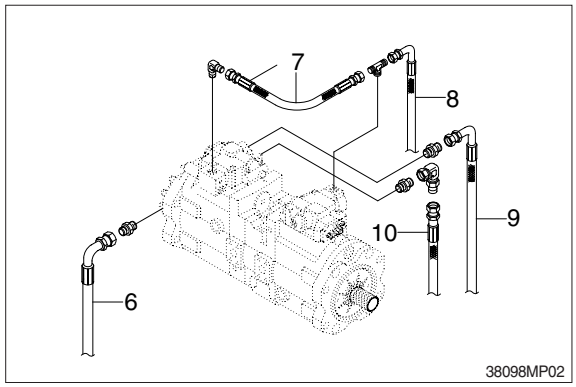

38098MP02

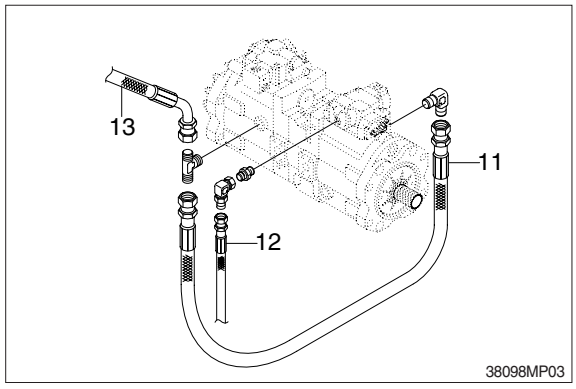

38098MP03

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

GROUP 2 TIGHTENING TORQUE

1. MAJOR COMPONENTS

No.	Descriptions		Bolt size	Torque	
				kgf · m	lbf · ft
1	Engine	Engine mounting bolt, nut	M24 × 3.0	90 ± 7.0	651 ± 51
2		Radiator mounting bolt	M16 × 2.0	22 ± 1.0	159 ± 7.2
3		Coupling mounting socket bolt	M20 × 2.5	46.5 ± 2.5	336 ± 18.1
4		Main pump housing mounting bolt	M10 × 1.5	2.81 ± 0.3	20.3 ± 2.2
5	Hydraulic system	Main pump mounting socket bolt	M20 × 2.5	42 ± 4.5	304 ± 32.5
6		Main control valve mounting bolt	M16 × 2.0	29.7 ± 4.5	215 ± 32.5
7		Fuel tank mounting bolt	M20 × 2.5	46 ± 5.0	333 ± 36
8		Hydraulic oil tank mounting bolt	M20 × 2.5	46 ± 5.0	333 ± 36
9		Turning joint mounting bolt, nut	M12 × 1.75	12.3 ± 1.3	88.9 ± 9.4
10	Power train system	Swing motor mounting bolt	M24 × 3.0	97.8 ± 15	707 ± 108
11		Swing bearing upper part mounting bolt	M24 × 3.0	97.8 ± 10	707 ± 72.3
12		Swing bearing lower part mounting bolt	M24 × 3.0	97.8 ± 10	707 ± 72.3
13		Travel motor mounting bolt	M20 × 2.5	43.8 ± 4.0	317 ± 29
14		Sprocket mounting bolt	M20 × 2.5	57 ± 3.0	412 ± 21.7
15	Under carriage	Carrier roller mounting bolt, nut	M16 × 2.0	29.7 ± 4.0	215 ± 28.9
16		Track roller mounting bolt	M22 × 2.5	77.4 ± 11	560 ± 79.6
17		Track tension cylinder mounting bolt	M16 × 2.0	29.6 ± 3.2	214 ± 23.1
18		Track shoe mounting bolt, nut	M24 × 1.5	140 ± 5.0	1010 ± 36.2
19		Track guard mounting bolt	M24 × 3.0	77.4 ± 11	560 ± 79.6
20	Others	Counterweight mounting bolt	M36 × 3.0	308 ± 46	2228 ± 333
21		Cab mounting bolt	M12 × 1.75	12.8 ± 3.0	92.6 ± 21.7
22		Operator's seat mounting bolt	M 8 × 1.25	4.05 ± 0.8	29.3 ± 5.8

※ For tightening torque of engine and hydraulic components, see each component disassembly and assembly.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

3. MACHINE ERROR CODES TABLE

Error code		Description
HCESPN	FMI	
101	3	Hydraulic oil temperature sensor circuit - Voltage above normal, or shorted to high source.
	4	Hydraulic oil temperature circuit - Voltage below normal, or shorted to low source.
105	0	Working pressure sensor data above normal range.
	1	Working pressure sensor data below normal range.
	2	Working pressure sensor data error.
	4	Working pressure sensor circuit - Voltage below normal, or shorted to Low source.
108	0	Travel oil pressure sensor data above normal range.
	1	Travel oil pressure sensor data below normal range.
	2	Travel oil pressure sensor data error.
	4	Travel oil pressure sensor circuit - Voltage below normal, or shorted to low source.
120	0	Main pump 1 (P1) pressure sensor data above normal range.
	1	Main pump 1 (P1) pressure sensor data below normal range.
	2	Main pump 1 (P1) pressure sensor data error.
	4	Main pump 1 (P1) pressure sensor circuit - Voltage below normal, or shorted to low source.
121	0	Main pump 2 (P2) pressure sensor data above normal range.
	1	Main pump 2 (P2) pressure sensor data below normal range.
	2	Main pump 2 (P2) pressure sensor data error.
	4	Main pump 2 (P2) pressure sensor circuit - Voltage below normal, or shorted to low source.
122	0	Overhead pressure sensor data above normal range.
	1	Overhead pressure sensor data below normal range.
	2	Overhead pressure sensor data error.
	4	Overhead pressure sensor circuit - Voltage below normal, or shorted to low source.
123	0	Negative 1 pressure sensor data above normal range.
	1	Negative 1 pressure sensor data below normal range.
	2	Negative 1 pressure sensor data error.
	4	Negative 1 pressure sensor circuit - Voltage below normal, or shorted to low source.
124	0	Negative 2 Pressure sensor data above normal range.
	1	Negative 2 Pressure sensor data below normal range.
	2	Negative 2 Pressure sensor data error.
	4	Negative 2 Pressure sensor circuit - Voltage below normal, or shorted to low source.
125	0	Pilot pump (P3) pressure sensor data above normal range.
	1	Pilot pump (P3) pressure sensor data below normal range.
	2	Pilot pump (P3) pressure sensor data error.
	4	Pilot pump (P3) pressure sensor circuit - Voltage below normal, or shorted to low source.
127	0	Boom up pilot pressure sensor data above normal range.
	1	Boom up pilot pressure sensor data below normal range.
	2	Boom up pilot pressure sensor data error.
	4	Boom up pilot pressure sensor circuit - Voltage below normal, or shorted to low source.
133	0	Arm in/out & bucket in pilot pressure sensor data above normal range.
	1	Arm in/out & bucket in pilot pressure sensor data below normal range.
	2	Arm in/out & bucket in pilot pressure sensor data error.
	4	Arm in/out & bucket in pilot pressure sensor circuit - Voltage below normal, or shorted to low source.

※ Some error codes are not applied to this machine.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


GROUP 1 BEFORE TROUBLESHOOTING

1. INTRODUCTION

When a trouble is occurred in the machine, this section will help an operator to maintain the machine with easy.

The trouble of machine is parted Hydraulic & Mechanical system, Electrical system and Mechatronics system. At each system part, an operator can check the machine according to the troubleshooting process diagram.

※ **Before carring out troubleshooting procedure, check monitoring menu in the cluster.**

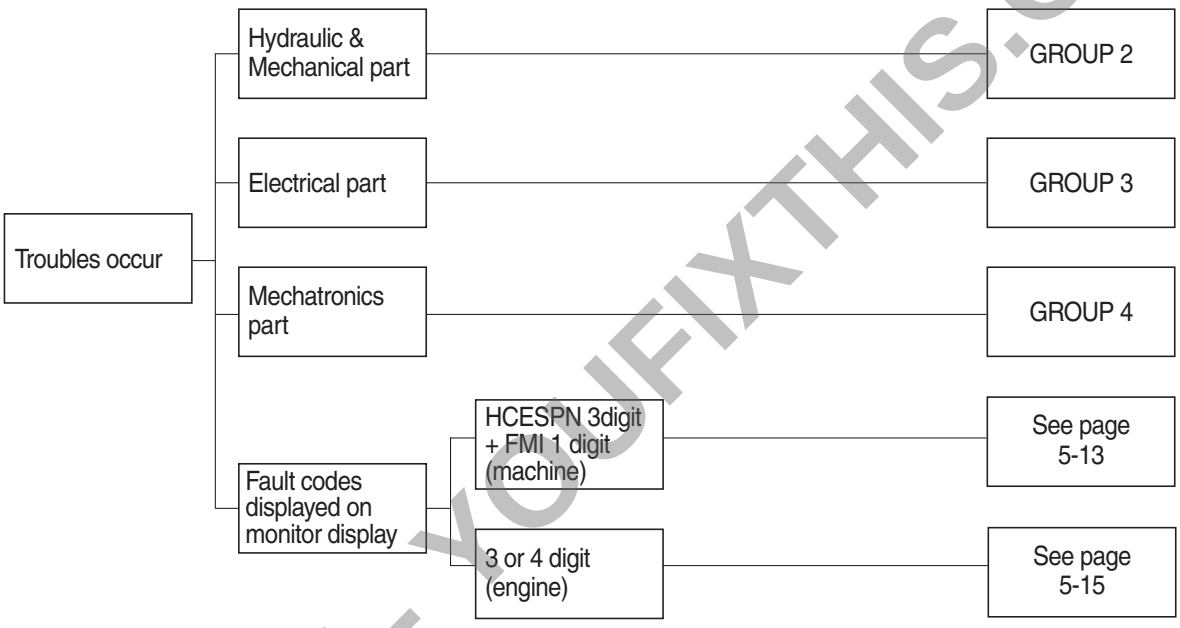

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

1. STRUCTURE

This service manual has been prepared as an aid to improve the quality of repairs by giving the serviceman an accurate understanding of the product and by showing him the correct way to perform repairs and make judgements. Make sure you understand the contents of this manual and use it to full effect at every opportunity.
This service manual mainly contains the necessary technical information for operations performed in a service workshop.
For ease of understanding, the manual is divided into the following sections.

SECTION 1 GENERAL
This section explains the safety hints and gives the specification of the machine and major components.

SECTION 2 STRUCTURE AND FUNCTION
This section explains the structure and function of each component. It serves not only to give an understanding of the structure, but also serves as reference material for troubleshooting.

SECTION 3 HYDRAULIC SYSTEM
This section explains the hydraulic circuit, single and combined operation.

SECTION 4 ELECTRICAL SYSTEM
This section explains the electrical circuit, monitoring system and each component. It serves not only to give an understanding electrical system, but also serves as reference material for trouble shooting.

SECTION 5 MECHATRONICS SYSTEM
This section explains the computer aided power optimization system and each component.

SECTION 6 TROUBLESHOOTING
This section explains the troubleshooting charts correlating **problems** to **causes**.

SECTION 7 MAINTENANCE STANDARD
This section gives the judgement standards when inspecting disassembled parts.

SECTION 8 DISASSEMBLY AND ASSEMBLY
This section explains the order to be followed when removing, installing, disassembling or assembling each component, as well as precautions to be taken for these operations.

SECTION 9 COMPONENT MOUNTING TORQUE
This section shows bolt specifications and standard torque values needed when mounting components to the machine.

The specifications contained in this shop manual are subject to change at any time and without any advance notice. Contact your HYUNDAI distributor for the latest information.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

CONTENTS

SECTION 1 GENERAL

Group 1 Safety Hints 1-1
Group 2 Specifications 1-10

SECTION 2 STRUCTURE AND FUNCTION

Group 1 Pump Device 2-1
Group 2 Main Control Valve 2-20
Group 3 Swing Device 2-46
Group 4 Travel Device 2-58
Group 5 RCV Lever 2-71
Group 6 RCV Pedal 2-78

SECTION 3 HYDRAULIC SYSTEM

Group 1 Hydraulic Circuit 3-1
Group 2 Main Circuit 3-2
Group 3 Pilot Circuit 3-5
Group 4 Single Operation 3-13
Group 5 Combined Operation 3-23

SECTION 4 ELECTRICAL SYSTEM

Group 1 Component Location 4-1
Group 2 Electric Circuit 4-3
Group 3 Electrical Component Specification 4-21
Group 4 Connectors 4-29

SECTION 5 MECHATRONICS SYSTEM

Group 1 Outline 5-1
Group 2 Mode selection System 5-3
Group 3 Automatic Deceleration System 5-6
Group 4 Power Boost System 5-7
Group 5 Travel Speed Control System 5-8
Group 6 Automatic Warming Up System 5-9
Group 7 Engine Overheat Prevention System 5-10
Group 8 Variable power Control System 5-11
Group 9 Attachment Flow Control System 5-12

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


GROUP 1 SAFETY

FOLLOW SAFE PROCEDURE

Unsafe work practices are dangerous. Understand service procedure before doing work; Do not attempt shortcuts.


WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

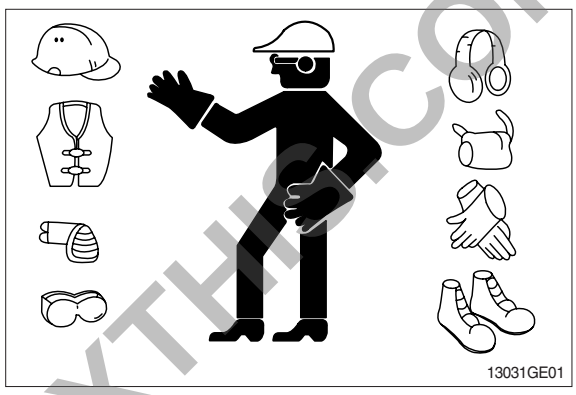


WARN OTHERS OF SERVICE WORK

Unexpected machine movement can cause serious injury.
Before performing any work on the excavator, attach a 「**Do Not Operate**」 tag on the right side control lever.

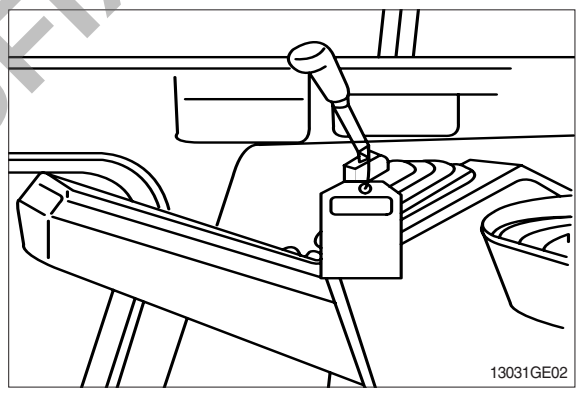

USE HANDHOLDS AND STEPS

Falling is one of the major causes of personal injury.
When you get on and off the machine, always maintain a three point contact with the steps and handrails and face the machine. Do not use any controls as handholds.
Never jump on or off the machine. Never mount or dismount a moving machine.
Be careful of slippery conditions on platforms, steps, and handrails when leaving the machine.

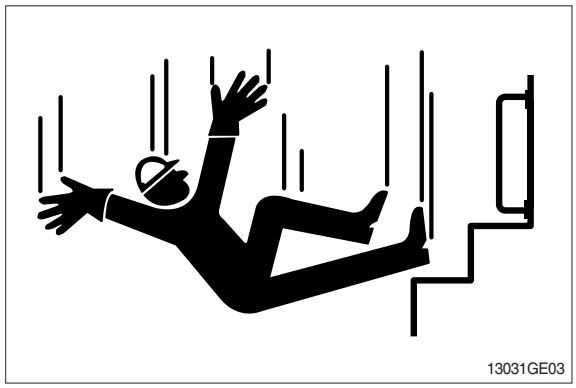

Download full manual at youfixthis.com

Millimeters to inches

1mm = 0.03937in

	0	1	2	3	4	5	6	7	8	9
0		0.039	0.079	0.118	0.157	0.197	0.236	0.276	0.315	0.354
10	0.394	0.433	0.472	0.512	0.551	0.591	0.630	0.669	0.709	0.748
20	0.787	0.827	0.866	0.906	0.945	0.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.536
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.244	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.032	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898

Kilogram to Pound

1kg = 2.2046lb

	0	1	2	3	4	5	6	7	8	9
0		2.20	4.41	6.61	8.82	11.02	13.23	15.43	17.64	19.84
10	22.05	24.25	26.46	28.66	30.86	33.07	35.27	37.48	39.68	41.89
20	44.09	46.30	48.50	50.71	51.91	55.12	57.32	59.5.	61.73	63.93
30	66.14	68.34	70.55	72.75	74.96	77.16	79.37	81.57	83.78	85.98
40	88.18	90.39	92.59	94.80	97.00	99.21	101.41	103.62	105.82	108.03
50	110.23	112.44	114.64	116.85	119.05	121.25	123.46	125.66	127.87	130.07
60	132.28	134.48	136.69	138.89	141.10	143.30	145.51	147.71	149.91	152.12
70	154.32	156.53	158.73	160.94	163.14	165.35	167.55	169.76	171.96	174.17
80	176.37	178.57	180.78	182.98	185.19	187.39	189.60	191.80	194.01	196.21
90	198.42	200.62	202.83	205.03	207.24	209.44	211.64	213.85	216.05	218.26

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

(8) Function of lock valve

The lock valve is fitted between the arm cylinder rod side (R) and the arm1 spool (302). It decreases the leakage by the pressure of the cylinder.

Another lock valve is similarly fitted between the boom cylinder head side (H) and the boom1 spool (303). It decreases the leakage by the pressure of the cylinder.


① Neutral positions of spools

The following is the case of the boom 1 spool.

(The case of the arm 1 spool is in the same way.)

During the boom 1 spool is in neutral position, the lock valve is kept in the position shown in figure. The spool (511) in lock valve is pushed to the seat of the bush (541) by the force of the spring (512).

In this position, pressurized oil from the boom cylinder head side (H) enters through hole (a), the periphery of the spool and hole (b), and it pushes the poppet to the casing seat, and the leakage is decreased.

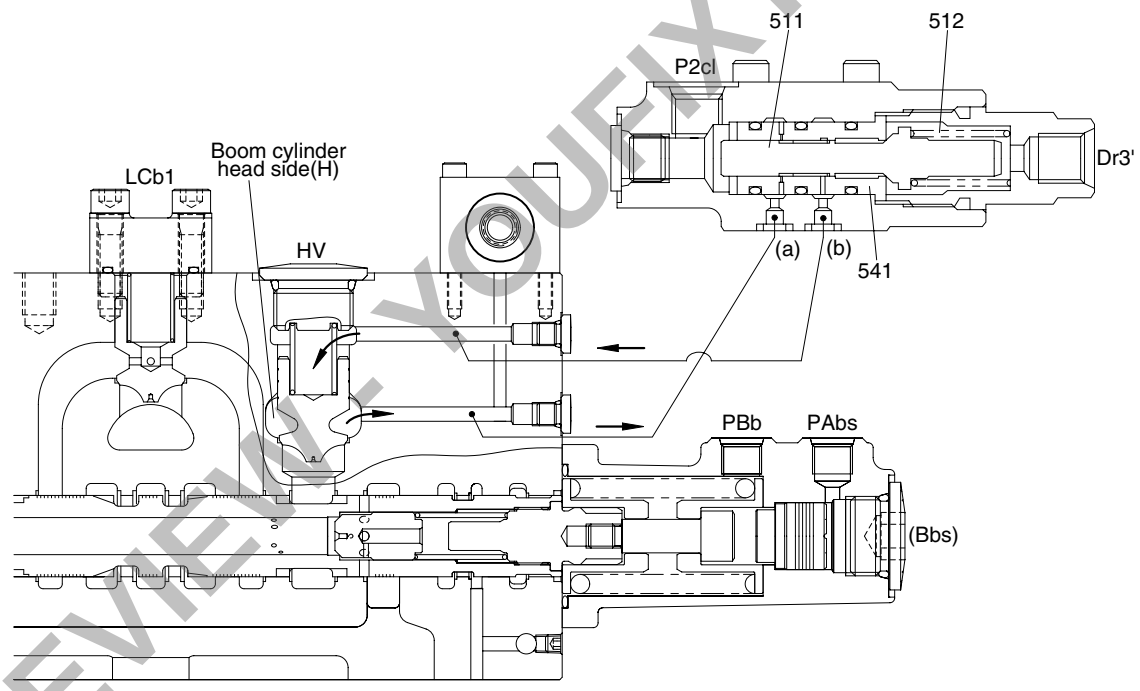


3607A2MC24

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

CROSS SECTION

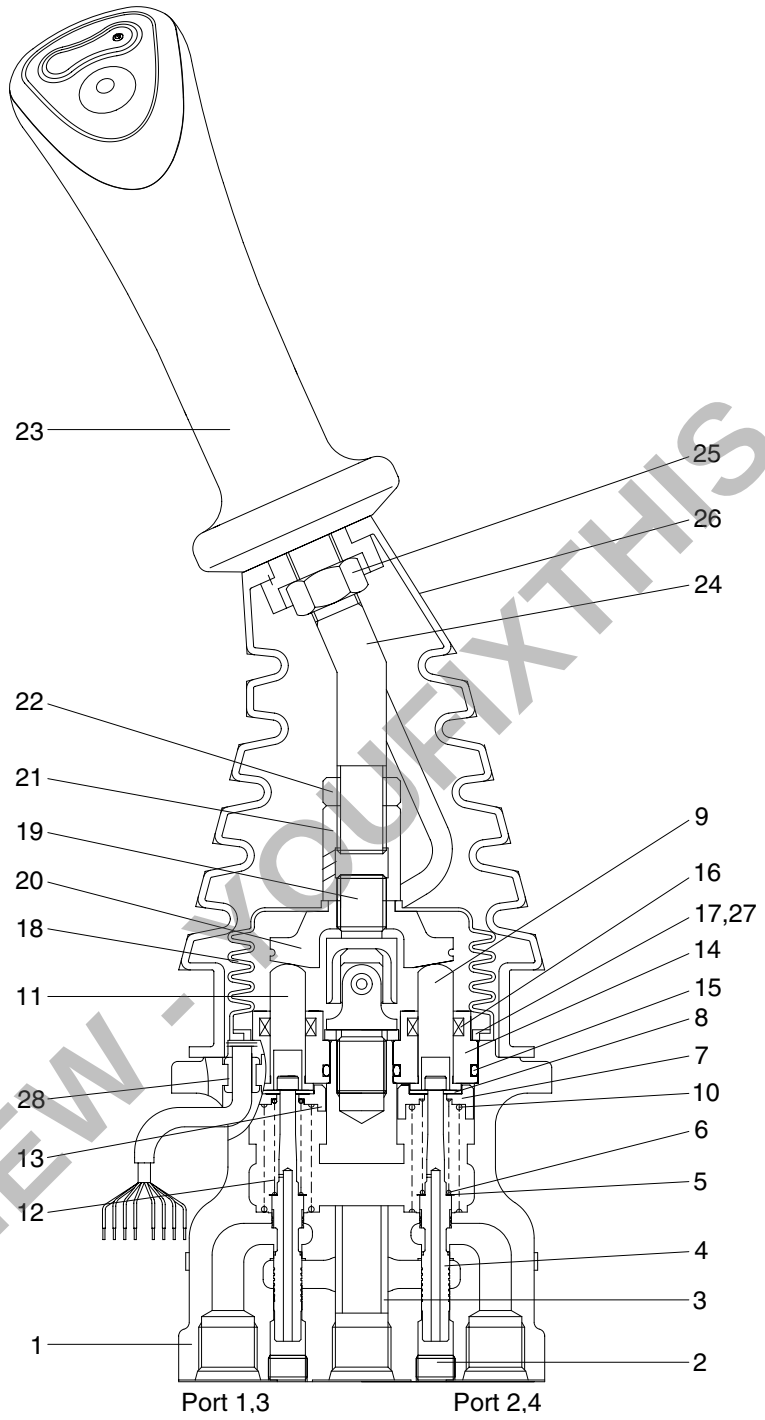


1	Case	8	Stopper	15	O-ring	22	Lock nut
2	Plug	9	Push rod	16	Rod seal	23	Handle assembly
3	Bushing	10	Spring	17	Plate	24	Handle bar
4	Spool	11	Push rod	18	Boot	25	Nut
5	Shim	12	Spring	19	Joint assembly	26	Boot
6	Spring	13	Spring seat	20	Swash plate	27	Spring pin
7	Spring seat	14	Plug	21	Adjusting nut	28	Bushing

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

2. COMBINED SWING AND BOOM UP OPERATION

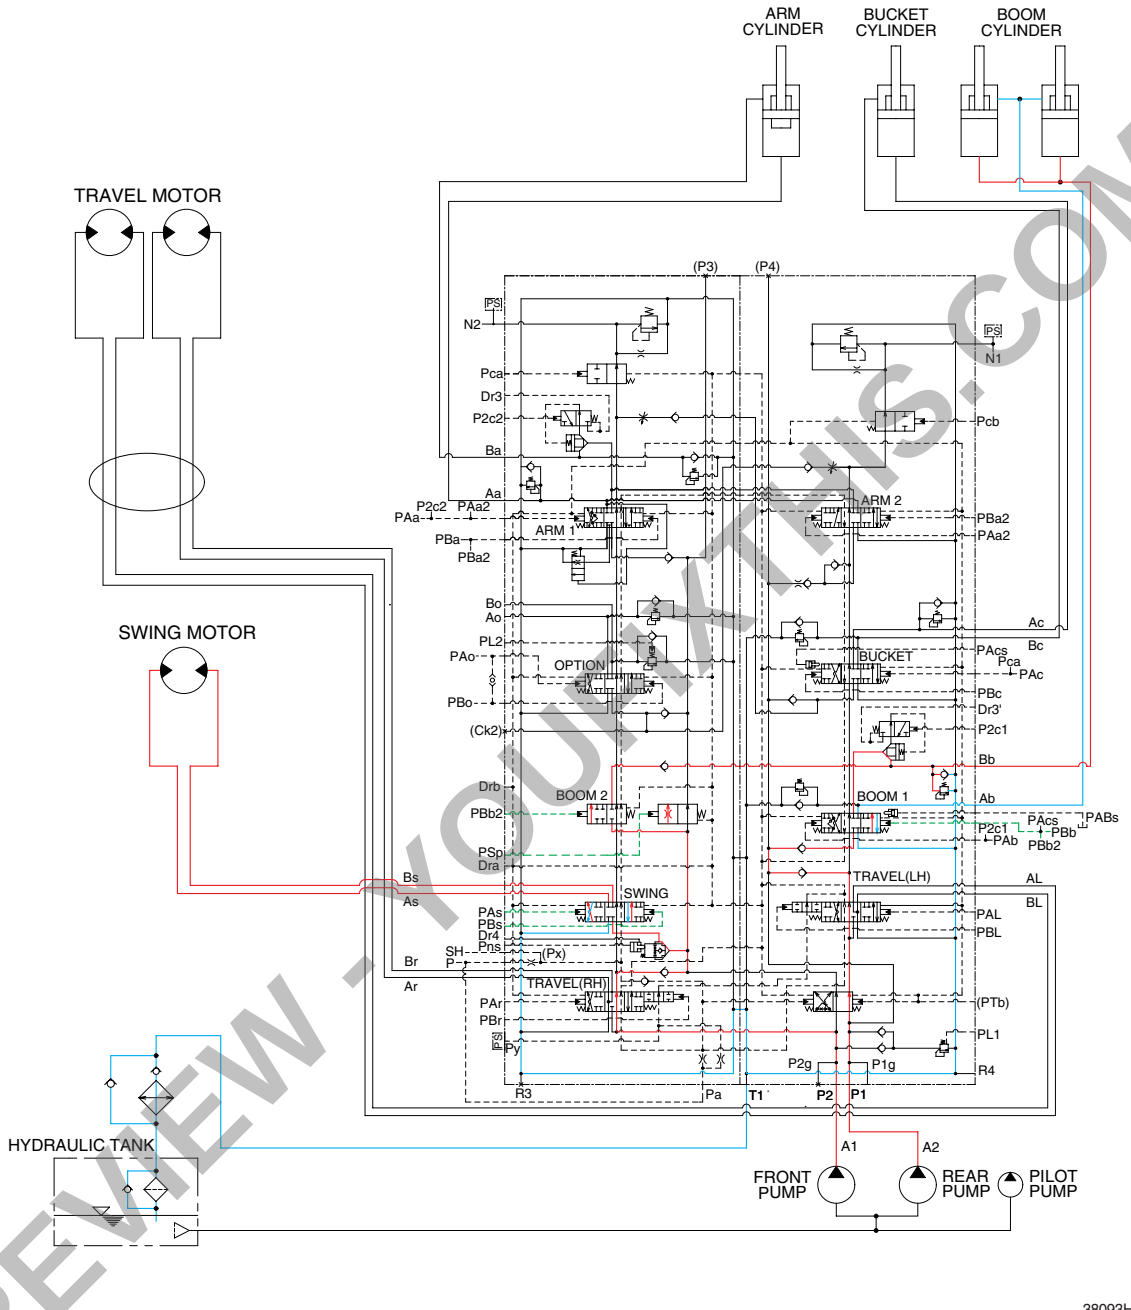







When the swing and boom up functions are operated, simultaneously the swing spool and boom spools in the main control valve are moved to the functional position by the pilot oil pressure from the remote control valve.

The oil from the front pump flows into the swing motor through swing spool and the boom cylinder through boom 2 spool.

The oil from the rear pump flows into the boom cylinders through the boom 1 spool in the right control valve. The upper structure swings and the boom is operated.

Refer to page 3-8 for the boom priority system.


Download full manual at youfixthis.com

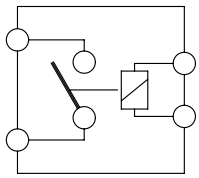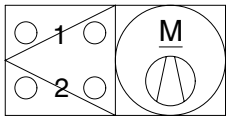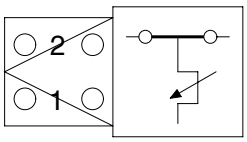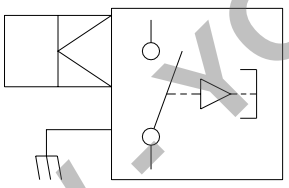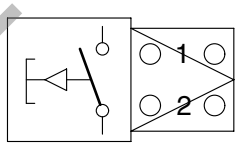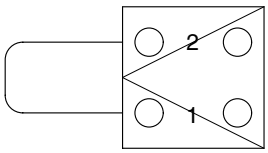Part name	Symbol	Specifications	Check
Start relay	 CR-23	24V 300A	※ Check contact Normal : 0.94 Ω (for terminal 1-2)
Blower motor		24V 9.5A	※ Check resistance Normal : 2.5 Ω (for terminal 1-2)
Duct sensor (switch)		1˚C OFF 4˚C ON	※ Check resistance Normal : 0 Ω (for terminal 1-2), the atmosphere temp : Over 4˚C
Door switch	 CS-1	24V 2W	※ Check resistance Normal : About 5M Ω
Switch (power max, one touch decel, horn, breaker)	 CS-5 CS-19 CS-26 CS-29	24V 6A	※ Check resistance Normal : ∞ Ω
Fusible link	 CN-60 CN-95	60A	※ Check disconnection Normal : 0 Ω (connect ring terminal and check resist between terminal 1 and 2)

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

GROUP 8 VARIABLE POWER CONTROL SYSTEM

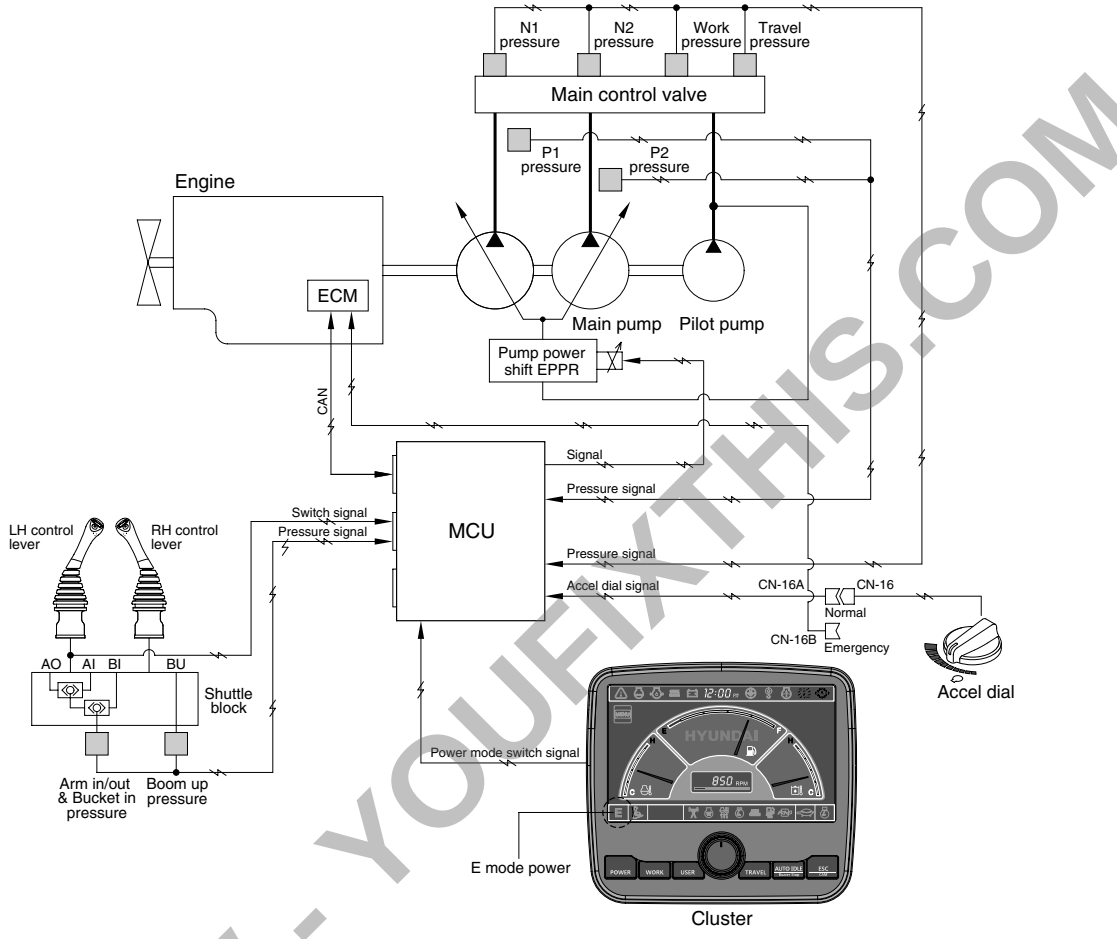

· The variable power control system controls the engine and pump mutual power according to RCV lever stroke and pump load.
It makes fuel saving and smooth control at precise work.


Description	Working condition
Power mode	E
Work mode	General (bucket)
Pressure sensor	Normal

※ The variable power control function can be activated when the power mode is set to E mode.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

④ Auto power boost

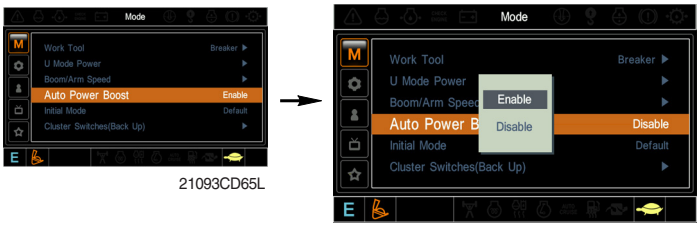


21093CD65L

21093CD65M

- The power boost function can be activated or cancelled.
- Enable - The digging power is automatically increased as working conditions by the MCU.
  It is operated max 8 seconds.
- Disable - Not operated.

⑤ Initial mode

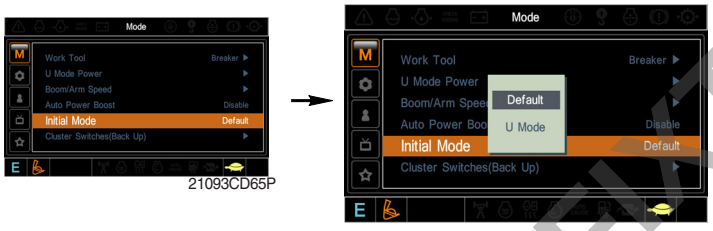


21093CD65P

21093CD65Q

- Default - The initial power mode is set E mode when the engine is started.
- U mode - The initial power mode is set U mode when the engine is started.

⑥ Cluster switch (back up)

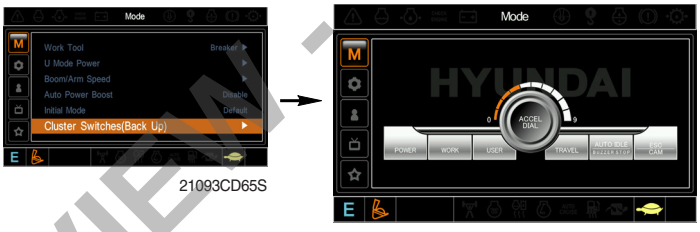

21093CD65S

21093CD65T


- The cluster switch can be selected and changed by this menu when the switches are abnormal on the cluster.
- In order to exit "Cluster switch" mode, please put the cursor on the ESC/CAM switch by turning the select switch and push the select switch.
- In "Cluster switch", other switches except "Select switch" do not work.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

1. WHEN STARTING SWITCH IS TURNED ON, MONITOR PANEL DISPLAY DOES NOT APPEAR


- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted and short of fuse No.7, 13.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

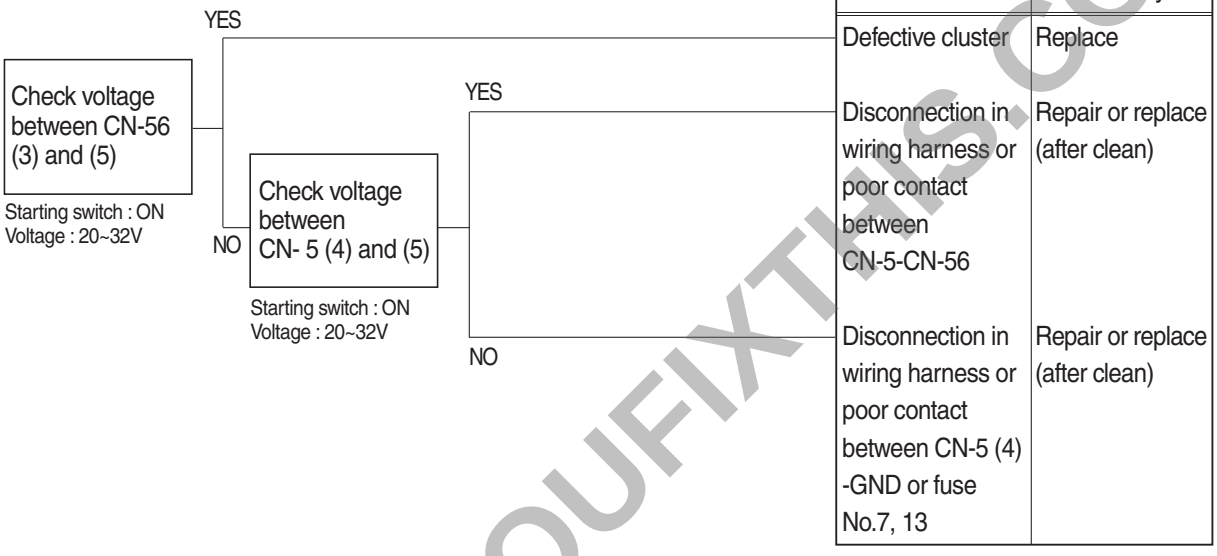

Cause	Remedy
Defective cluster	Replace
Disconnection in wiring harness or poor contact between CN-5-CN-56	Repair or replace (after clean)
Disconnection in wiring harness or poor contact between CN-5 (4) -GND or fuse No.7, 13	Repair or replace (after clean)

Check voltage

YES	20~32V
NO	0V

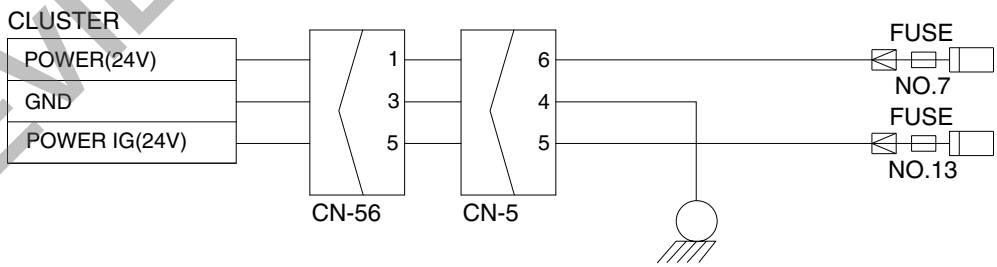

21096ES01

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

2) TEST PROCEDURE

(1) Test 14 : Check voltage at CN-52(24) and ground.


① Prepare 1 piece of thin sharp pin, steel or copper.

② Insert prepared pin to rear side of connectors : One pin to (24) of CN-52.

③ Starting key ON.

④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

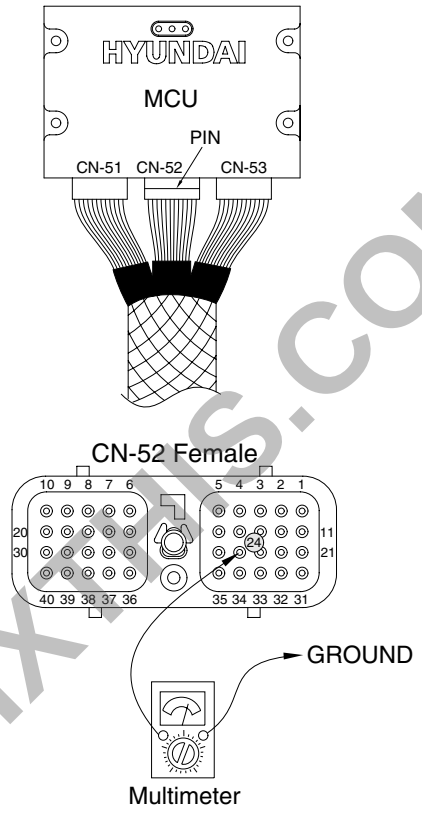

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Part name & inspection item	Standard dimension	Recommended value for replacement	Remedy
Radial clearance of needle bearing	0.01-0.04 mm	0.07 mm	Replacement of abnormal parts as a set.
Crack of spline contact part	-	-	Replacement if such damage as crack, crevice of chipping is found.
Backlash of spline contact part	0.1-0.3 mm	0.5 mm	Dimension check and replacement according to following standards.
Thrust ring (026)	7 mm thick	6.6 mm	Replacement if severe wear or seizure is found on sliding surface.
Thrust ring (027)	8 mm thick	7.6 mm	
Floating seal	-	-	Replacement of scratch or rust is found in sliding surface. Replacement if O-ring is deformed of damaged.
Gear oil	SAE 85W-140 (API GL-5)	-	1st time : 500hr 2nd time and later : Every 2000hr After disassembling, fill with new oil without fail. The above times are measured with engine hour meter.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

3) DISASSEMBLY

Since the regulator consists of small precision finished parts, disassembly and assembly are rather complicated.

For this reason, replacement of a regulator assembly is recommended, unless there is a special reason, but in case disassembly is necessary for an unavoidable reason, read through this manual to the end before starting disassembly.

(1) Choose a place for disassembly.


※ Choose a clean place.

※ Spread rubber sheet, cloth, or so on on top of work-bench to prevent parts from being damaged.

(2) Remove dust, rust, etc. from surfaces of regulator with clean oil.

(3) Remove hexagon socket head screw (412, 413) and remove regulator main body from pump main body.

※ Take care not to lose O-ring.

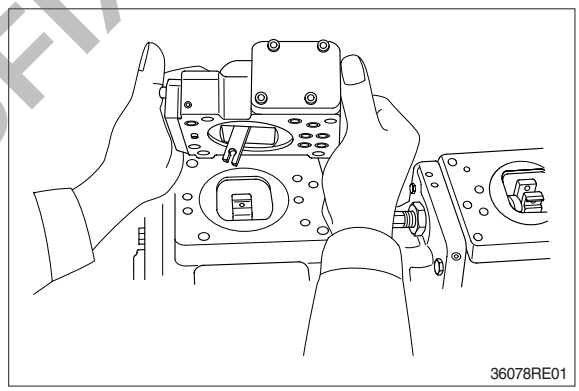


(4) Remove hexagon socket head screw (438) and remove cover (C,629)

※ Cover (C) is fitted with adjusting screw (C,QI) (628), adjusting stem (C, 627), lock nut (630), hexagon nut (801) and set screw (924).

Do not loosen these screws and nuts.

If they are loosened, adjusted pressure-flow setting will vary.

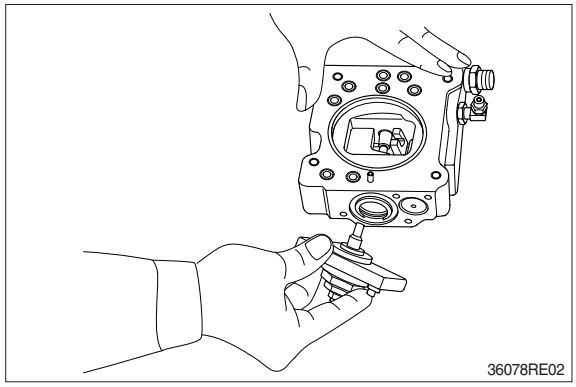

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

⑦ Assemble O-ring (18) into break piston (17).
- O-ring ×2EA



3607A8SM30


⑧ Insert break piston assy into body (1) and assemble spring (19) into break piston (17).
- Spring×19EA



3607A8SM31/31A


(3) Assemble the sub of rear cover assy sub

① After assembling needle bearing (22) into rear cover (23), with a hammer assemble pin (6, 21).

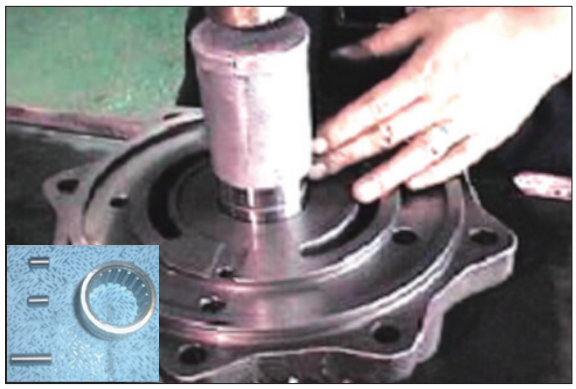

3607A8SM32/32A

② Assemble respectively make up check valve assy spring (27), poppet (26), plug (28) into rear cover (23) after then screw it torque wrench.
- Make up check sub ×2set
- Spring ×2EA
- Check ×3EA

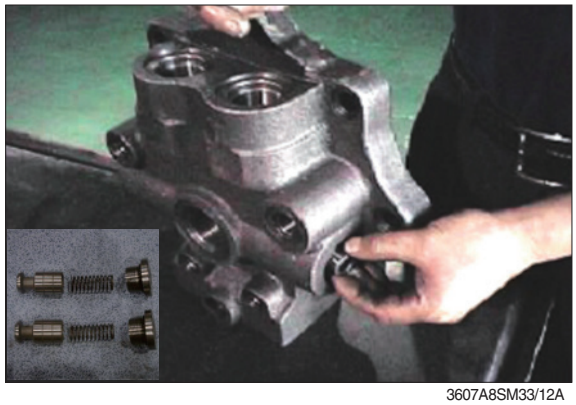

3607A8SM33/12A


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

(2) Fit O-ring to floating seal (34) without twisting it, and then to housing (2).

※ Apply grease to O-ring thinly.

※ Do not reuse the disassembling O-ring.

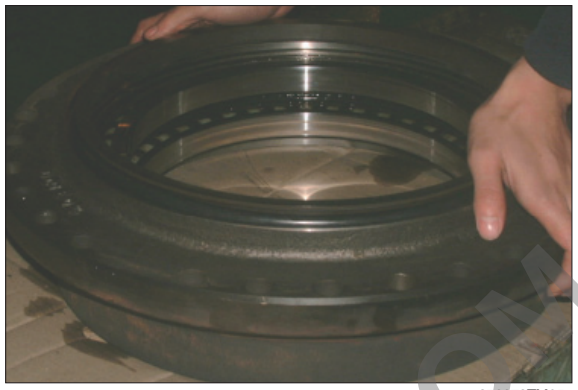

370078TM65

(3) Similarly, fit floating seal to shaft casing (272) of hydraulic motor.


※ Do not reuse the disassembling O-ring.



370078TM66

(4) Lift up housing sub-assembly with its floating seal side down, and put inner diameter of angular bearing on outer diameter of shaft casing.

※ Pay attention to not damaging sliding faces of floating seal.

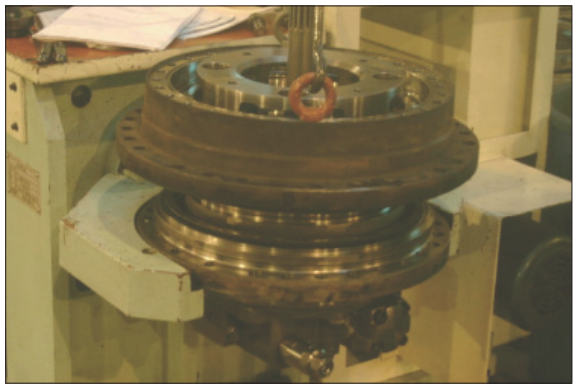

370078TM67

(5) Assemble shim (35) to nut ring (47).

※ Apply grease between shim and nut ring.




370078TM68

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

(3) Boom cylinder

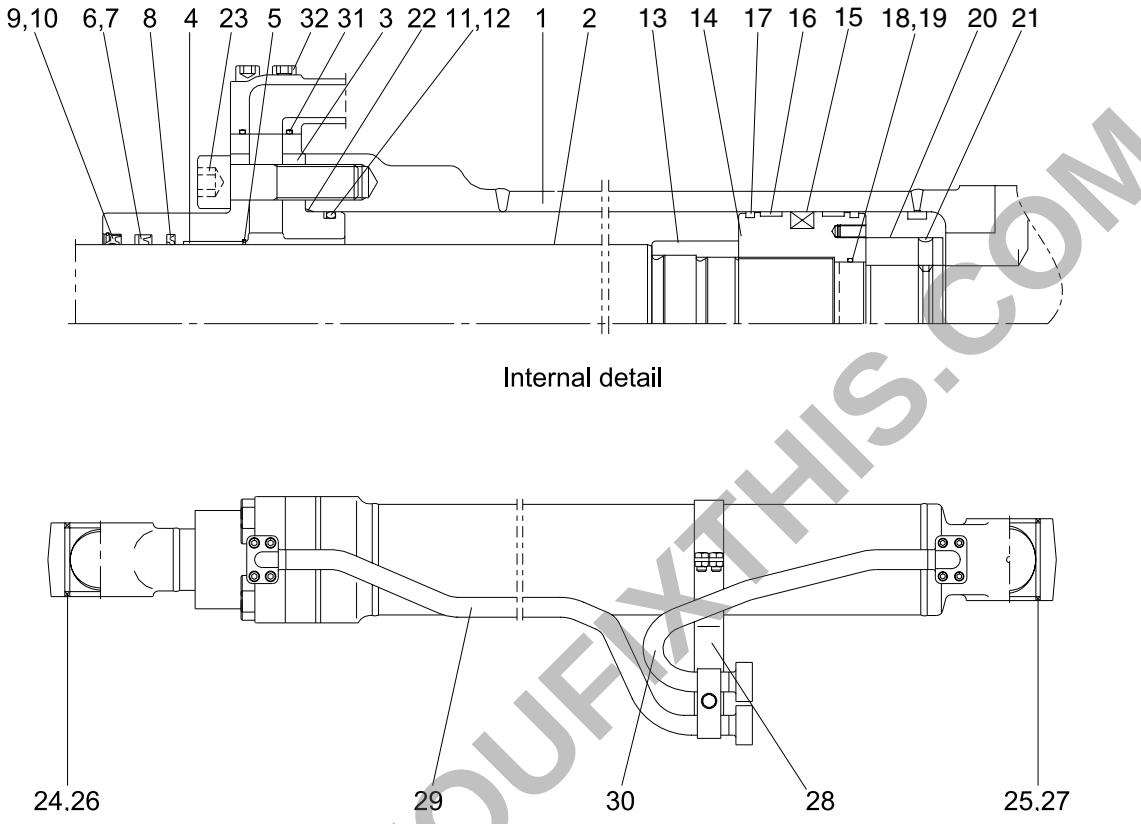

38098CY03

1	Tube assembly	12	Back up ring	23	Hexagon socket head bolt
2	Rod assembly	13	Cushion ring	24	Pin bushing (R)
3	Gland	14	Piston	25	Pin bushing (B)
4	Du bushing	15	Piston seal	26	Dust seal
5	Snap ring	16	Wear ring	27	Dust seal
6	Rod seal	17	Dust ring	28	Band assembly
7	Back up ring	18	O-ring	29	Pipe assembly (R)
8	Buffer ring	19	Back up ring	30	Pipe assembly (B)
9	Dust wiper	20	Lock washer	31	O-ring
10	Snap ring	21	Hexagon socket screw	32	Hexagon socket head bolt
11	O-ring	22	O-ring		

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 24 of 537 pages

The full manual includes:

- All 537 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Hyundai R380LC-9 Service Manual

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual