パーツカタログの見方

1. このパーツカタログに記載されている部品は、必ずしも標準装備部品ではありません。
2. 部品変更は、予告なく行うことがあります。
3. パーツカタログリスト様式

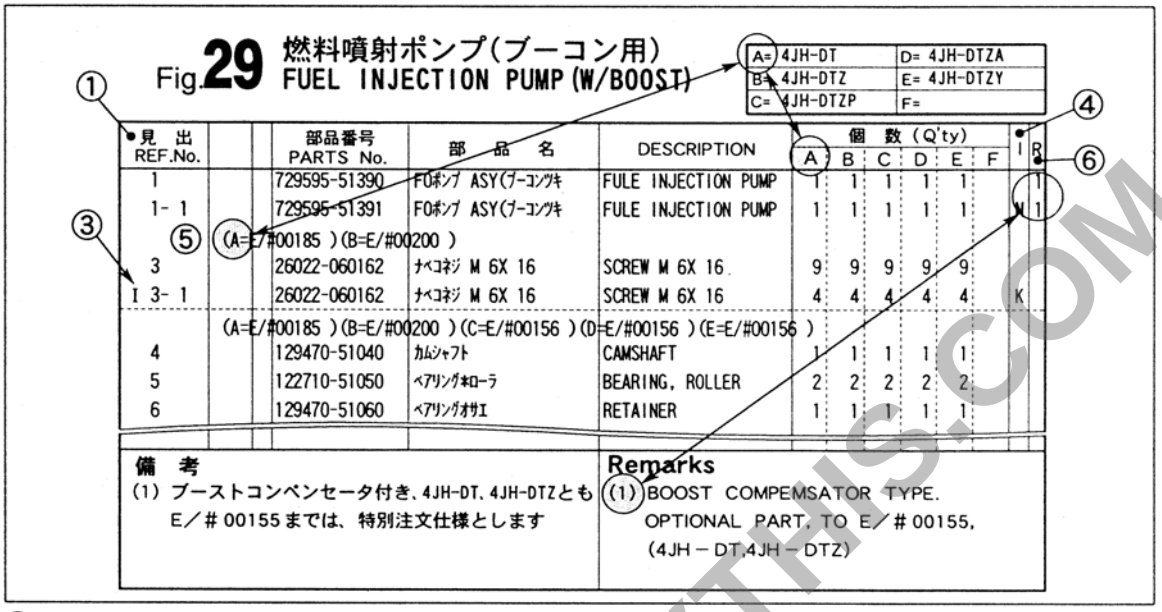


Fig.29 燃料噴射ポンプ(ブーコン用)
FUEL INJECTION PUMP (W/BOOST)

A=	4JH-DT	D=	4JH-DTZA
B=	4JH-DTZ	E=	4JH-DTZY
C=	4JH-DTZP	F=	

●見出 REF.No.		部品番号 PARTS No.	部品名	DESCRIPTION	個数 (Q'ty) A	B	C	D	E	F	I	R
1		729595-51390	FOポンプ ASY(ブーコンツキ	FULE INJECTION PUMP	1	1	1	1	1			1
1- 1		729595-51391	FOポンプ ASY(ブーコンツキ	FULE INJECTION PUMP	1	1	1	1	1		W	1
	(A=E/#00185)(B=E/#00200)											
3		26022-060162	ナベコネジ M 6X 16	SCREW M 6X 16	9	9	9	9	9			
I 3- 1		26022-060162	ナベコネジ M 6X 16	SCREW M 6X 16	4	4	4	4	4		K	
	(A=E/#00185)(B=E/#00200)(C=E/#00156)(D=E/#00156)(E=E/#00156)											
4		129470-51040	カムシャフト	CAMSHAFT	1	1	1	1	1			
5		122710-51050	ベアリングキローラ	BEARING, ROLLER	2	2	2	2	2			
6		129470-51060	ベアリングオサエ	RETAINER	1	1	1	1	1			

備考	Remarks
(1) ブーストコンペンセータ付き、4JH-DT、4JH-DTZとも E／#00155までは、特別注文仕様とします	(1) BOOST COMPEMSATOR TYPE. OPTIONAL PART, TO E／#00155, (4JH－DT,4JH－DTZ)

① 見出No.(REF.No.)

リスト頁の見出No.とイラスト図番の末尾が一致しない場合があります。

(例) イラスト図番 1 リスト頁の見出No. 1 (変更前) ⟶ 1 [－1] (変更後)

互換性記号N、R、Kの場合は新部品のイラストを省略している場合があります。

③ 変 更 マ ー ク

前回出版したパーツカタログには無く、今回新規に設計変更が発生した部品について"Ｉ"印が表示されます。

④ 互 換 性 区 分

部分変更が行われた場合、その部品に対して下記の互換性記号が表示されます。

記号	互換性	内容
N	旧 ⟶ 新	新部品は、旧部品に対して互換性有り、その逆は無し。
Q	旧 ⟶ 新	新部品は、旧部品に対して互換性無し、その逆は有り。
R	旧 ⟷ 新	新・旧部品双方に対して互換性有り。
S	旧 ⟷ 新	新・旧部品双方に対して互換性無し。
W		新規追加となった部品。
Z		廃止された部品。
F		単品では、互換性無し。但し関連部品セットにて互換性有り。
K		使用個数のみの変更。

⑤ 実 施 号 機

部品が変更された時には、適用される商品形式の実施号機が(A)～(F)欄毎に表示されます。

商品記号	商品 No.	商品記号	商品 No.
C	クラッチNo. コンプレッサNo.	M	本機No.
D	ドライブNo.	T	トラクタNo.
E	エンジンNo.	注1)※	西暦年月

注1) 記号の後の西暦年月を記載している事もあります。(例) ※1996. 01

注2) 実施号機が×××は、部品変更の予告又は、実施号機が確定できなかった部品です。

注3) (A＝E／#00185)は、A欄の商品形式(＝4JH－DT)の部品変更実施号機は、E／#(＝エンジンNo.)が00185号機以降であることを示します。

⑥ 備考(リマークス)区分

R …… 欄に数字又は、英字(記号)を表示してあります。

リスト下段に上記の記号と同一記号を表記して当該部品に対するコメント(備考)を表示しています。

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

TITLE	Fig.
ENGINE GASKET KIT (1/2)	Fig. 1
ENGINE GASKET KIT (2/2)	Fig. 2
CYLINDER HEAD COVER	Fig. 3
CYLINDER HEAD (1/2)	Fig. 4
CYLINDER HEAD (2/2)	Fig. 5
CYLINDER BLOCK (1/2)	Fig. 6
CYLINDER BLOCK (2/2)	Fig. 7
OIL PAN	Fig. 8
CAMSHAFT AND VALVE (1/2)	Fig. 9
CAMSHAFT AND VALVE (2/2)	Fig. 10
CRANKSHAFT, PISTON AND FLYWHEEL	Fig. 11
TIMING GEAR CASE AND FLYWHEEL HOUSING	Fig. 12
ENGINE MOUNTING	Fig. 13
INLET MANIFOLD	Fig. 14
EXHAUST MANIFOLD	Fig. 15
VENTILATION SYSTEM	Fig. 16
WATER PUMP AND CORROSION RESISTOR	Fig. 17
THERMOSTAT AND HOUSING	Fig. 18
WATER PIPING; ENGINE	Fig. 19
FAN AND FAN BELT	Fig. 20
TURBOCHARGER SYSTEM	Fig. 21
FUEL INJECTION SYSTEM (1/2)	Fig. 22
FUEL INJECTION SYSTEM (2/2)	Fig. 23
FUEL FILTER AND BRACKET	Fig. 24
OIL COOLER AND OIL FILTER	Fig. 25
OIL PUMP AND OIL STRAINER	Fig. 26
OIL AND VACUUM PIPING; ENGINE	Fig. 27
EMISSION PIPING	Fig. 28
ENGINE ELECTRICAL CONTROL PARTS (1/2)	Fig. 29
ENGINE ELECTRICAL CONTROL PARTS (2/2)	Fig. 30
STARTER	Fig. 31
GENERATOR	Fig. 32
WIRING HARNESS AND FUSE	Fig. 33
FIXING PARTS; WIRING HARNESS	Fig. 34
SWITCH AND RELAY; INSTRUMENT PANEL	Fig. 35
EXHAUST PIPE AND SILENCER	Fig. 36

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

NUMERICAL INDEX

Part number	Page	Item
I0-01804-1300	22	30(A)
I0-03559-3000	21	119(A)
I0-20800-6120	20	66
I0-28050-6120	18	85
	18	100
	34	150(A)
I0-28050-6160	6	401
	10	136
	12	124
	29	782(B)
I0-28050-6200	21	21(A)
I0-28050-8100	27	29(A)
I0-28050-8120	14	139(A)
	21	21(B)
	22	280
	34	150(B)
I0-28050-8160	12	36(A)
	17	63(A)
	21	21(C)
	26	49
I0-28050-8200	3	79
	5	13
	8	69
	12	36(B)
	16	295
I0-28050-8250	36	258(A)
I0-28050-8300	26	29(A)
I0-28050-8350	12	36(C)
I0-28050-8450	12	36(D)
	26	29(B)
I0-28050-8600	5	263(A)
	12	36(E)
	14	323
	17	36
I0-28050-8700	14	13(A)
	22	283(A)
	25	76(G)
I0-28050-8800	18	50
	20	28
	28	2(A)
I0-28050-8900	25	76(B)
I0-28051-0160	34	150(C)
I0-28051-0200	36	258(B)
I0-28051-0300	13	20(A)
I0-28051-0450	13	20(B)
I0-28051-0600	13	20(C)
I0-28051-0700	13	20(D)
I0-28055-8110	14	13(B)
I0-28056-0130	29	16
I0-28061-0600	10	114(A)
I0-28151-0450	28	271
I0-28161-2600	10	114(B)
I0-28161-2800	29	4
I0-28650-6200	27	414(A)
I0-28650-6300	3	26
	14	53
I0-28650-8200	20	96
I0-28650-8250	6	211
	8	345
	12	185
	18	114
	23	426
	28	2(B)
I0-28650-8300	12	36(F)
	17	63(B)
I0-28650-8350	5	263(B)
	20	73
	25	76(C)
I0-28650-8400	4	143
I0-28651-0300	12	211(A)
I0-28751-0250	5	15
I0-28751-2350	12	211(B)
I0-36220-5160	29	782(C)
I0-41010-6160	12	81(A)
I0-41010-6200	14	32
I0-41010-8200	25	374
I0-41010-8250	8	25
	28	15
I0-41010-8300	17	42
I0-41010-8400	8	30
I0-41010-8500	28	16
I0-44011-2700	29	9
I0-49140-8300	12	81(B)
I0-58330-6100	4	155
I0-58330-6160	10	166
I0-58330-8250	9	87(A)
I0-58330-8400	9	87(B)
I0-91110-5060	14	55
I0-91180-1060	22	110
I0-91180-1100	12	205
I0-91180-1120	29	7
I0-91180-2060	3	2
	12	80(A)
	19	69
I0-91180-2080	5	224
	8	24
	8	29
	12	98
	12	80(B)
	14	20
	17	40
	23	418
	25	362
	28	12
	28	681
I0-91180-2100	29	23
I0-91610-7060	30	737
I0-95235-0250	18	84
I0-95235-8560	34	483(A)
I0-95690-2260	18	190(A)
I0-95690-2710	23	429
I0-95690-3380	19	23
I1-09070-1201	10	200
I1-09600-0122	4	7(A)
I1-09605-0500	6	15
	7	15
I1-09623-0550	25	8
I1-09623-2460	27	583
I1-09623-5000	25	9(A)
I1-09623-5410	22	219
I1-09630-0830	22	175
I1-09630-0860	24	9
I1-09630-0900	8	3(A)
I1-09639-0340	5	230
I1-09675-0810	21	138
I1-09675-0951	24	69
I1-09700-1261	16	18(A)
I1-09700-6071	34	483(B)
I1-09700-8610	34	483(C)
I1-09700-8630	34	483(D)
I1-09701-0130	34	483(F)
I1-09701-0470	16	18(B)
I1-09701-1071	34	483(E)
I1-13642-0700	20	38(G)
I1-47475-8680	16	97
I1-81117-0100	31	21
I1-81129-6770	31	58
I1-81129-6980	31	27(A)
I1-82699-5880	14	685
I5-09000-2270	12	211(C)
I5-09500-0130	15	33
I5-09600-0130	7	21(C)
I5-09605-0050	18	112
I5-09707-0311	34	102(B)
I5-09800-0410	31	17(B)
I5-09800-0640	31	17(A)
I5-11129-0060	6	70
	7	70
I5-11219-0080	4	7(B)
	6	23(B)
	7	23(B)
I5-11219-0110	4	7(C)
I5-11219-0150	6	23(C)
I5-11219-0170	7	21(A)
I5-11219-0180	7	21(B)
	7	23(D)
I5-13311-1260	23	315(C)
I5-81118-0130	31	22
I5-81123-0180	31	46
I5-81129-0920	31	48
I5-81129-1190	31	47
I5-81129-1200	31	44
I5-81129-1210	31	43(A)
I5-81129-1260	31	114(A)
I5-81129-1270	31	43(B)
I5-81129-1280	31	18
I5-81129-1290	31	115
I5-81129-1300	31	41
I5-81129-1320	31	27(B)
I5-81129-1360	31	52
I5-82550-0290	30	10(B)
	35	424
I5-87816-6320	2	2
I5-87816-6330	2	2
I5-87816-6340	2	2
I5-87817-0560	1	1
I5-87817-0570	1	1
I5-87817-0580	1	1
I8-94107-7930	5	267
	18	193
I8-94121-1130	16	90
I8-94123-6231	3	5
I8-94125-8621	5	268
	18	147
	21	118(A)
I8-94126-7700	14	372
I8-94133-2075	3	4
I8-94142-1561	11	38
I8-94152-6130	7	448
I8-94176-8071	34	483(C)
I8-94201-6410	11	48
I8-94233-6530	32	24(A)
I8-94238-9240	23	279(A)
I8-94239-4230	4	4
I8-94239-5010	9	65
I8-94248-1610	30	10(C)
I8-94336-2920	6	51
I8-94343-2111	5	91
I8-94343-3622	14	724
I8-94367-9430	21	118(B)

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


ENGINE GASKET KIT (1/2)

REF NO.	PARTS NO.	Description	Q'ty	I	R	Remarks
1	**15-87817-0560**	GASKET SET; ENG OVERHAUL (HEAD GASKET T=1.05)	1			
'1	**15-87817-0570**	GASKET SET; ENG OVERHAUL (HEAD GASKET T=1.10)	1			
''1	**15-87817-0580**	GASKET SET; ENG OVERHAUL (HEAD GASKET T=1.15)	1			

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


CRANKSHAFT, PISTON AND FLYWHEEL

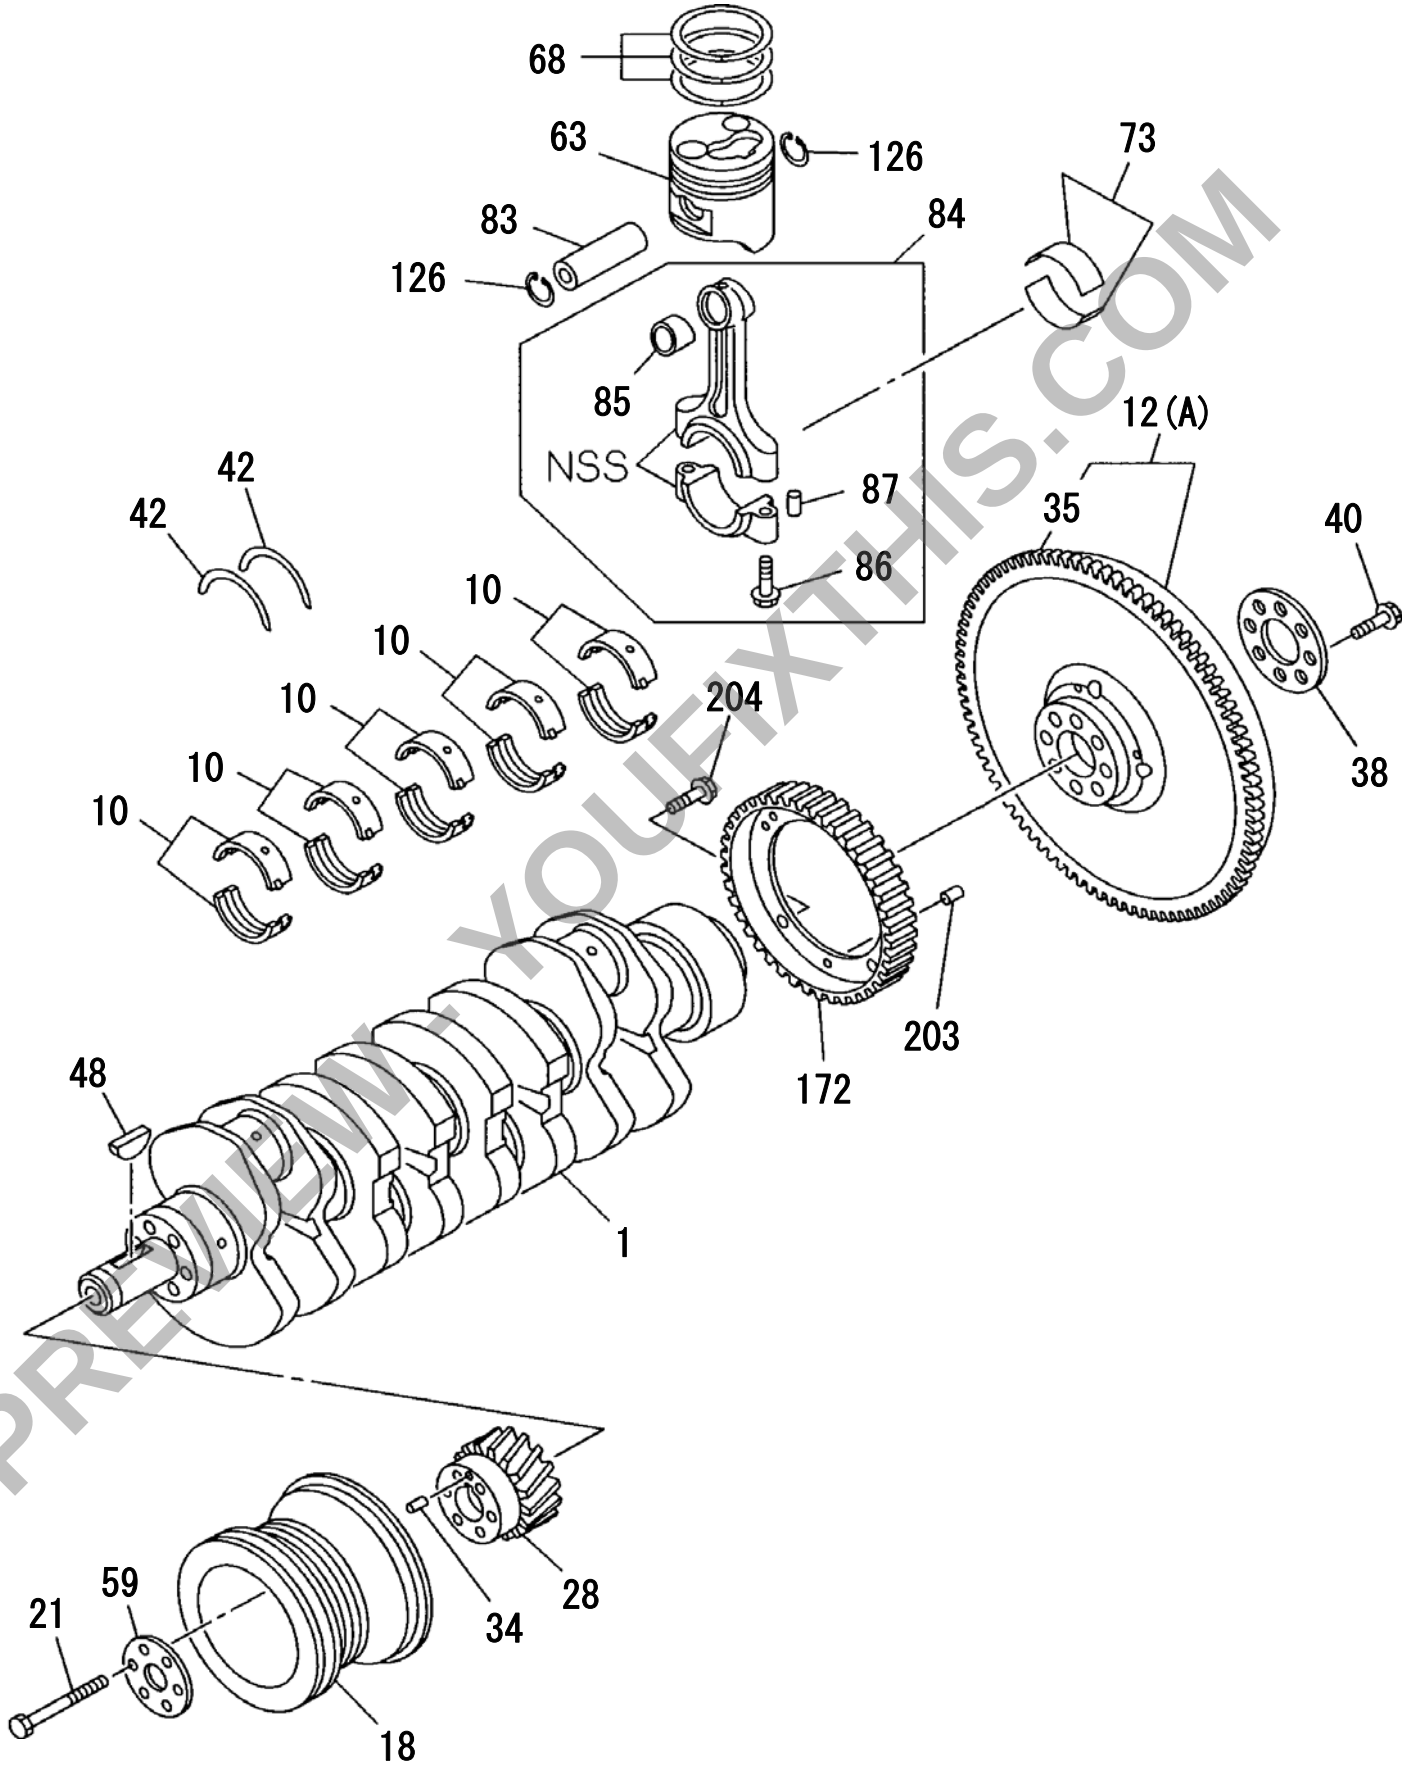

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

FUEL INJECTION SYSTEM (1/2)

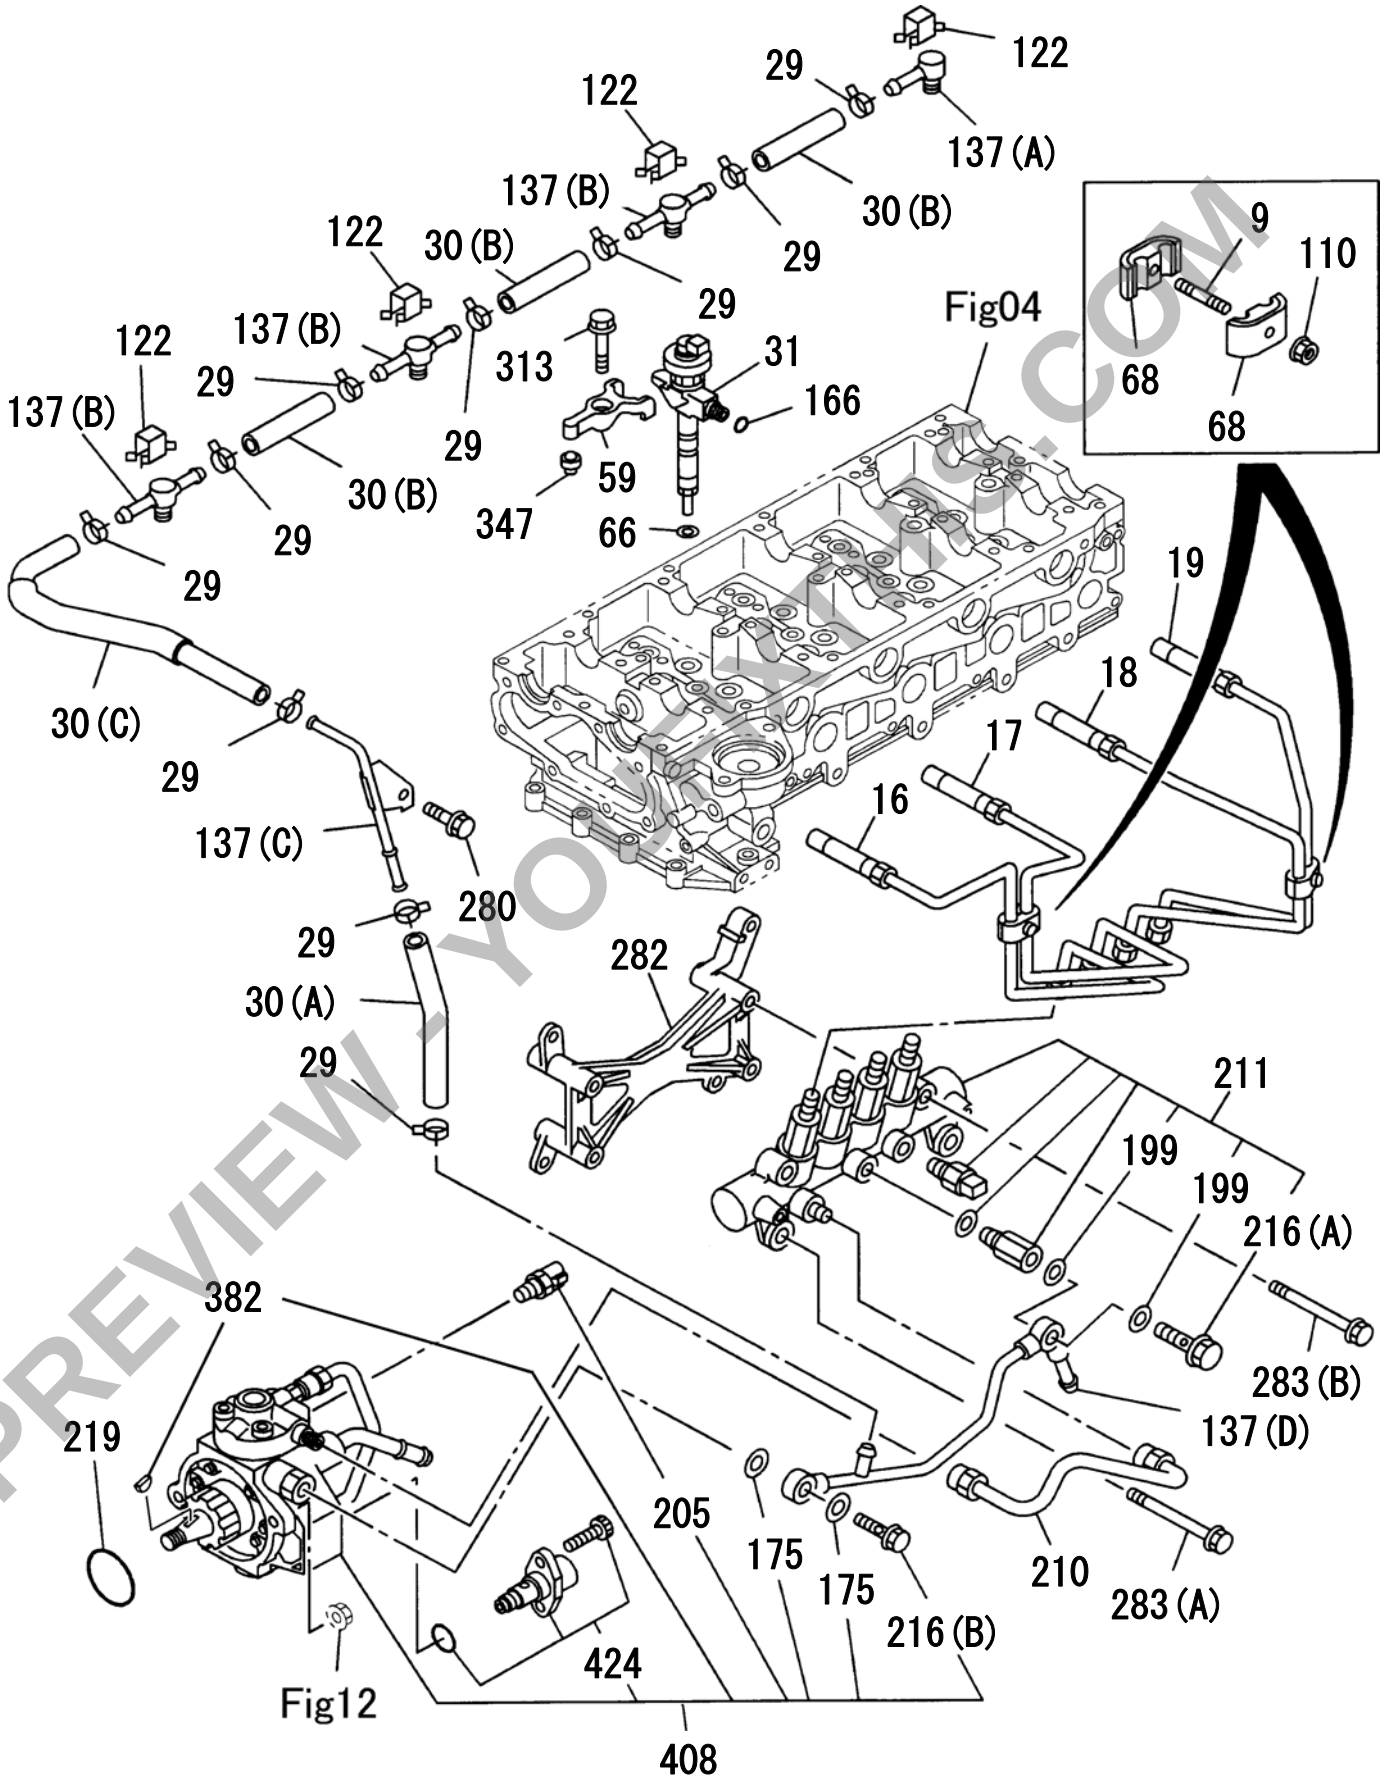


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


STARTER


ASM
8-98084-407-*

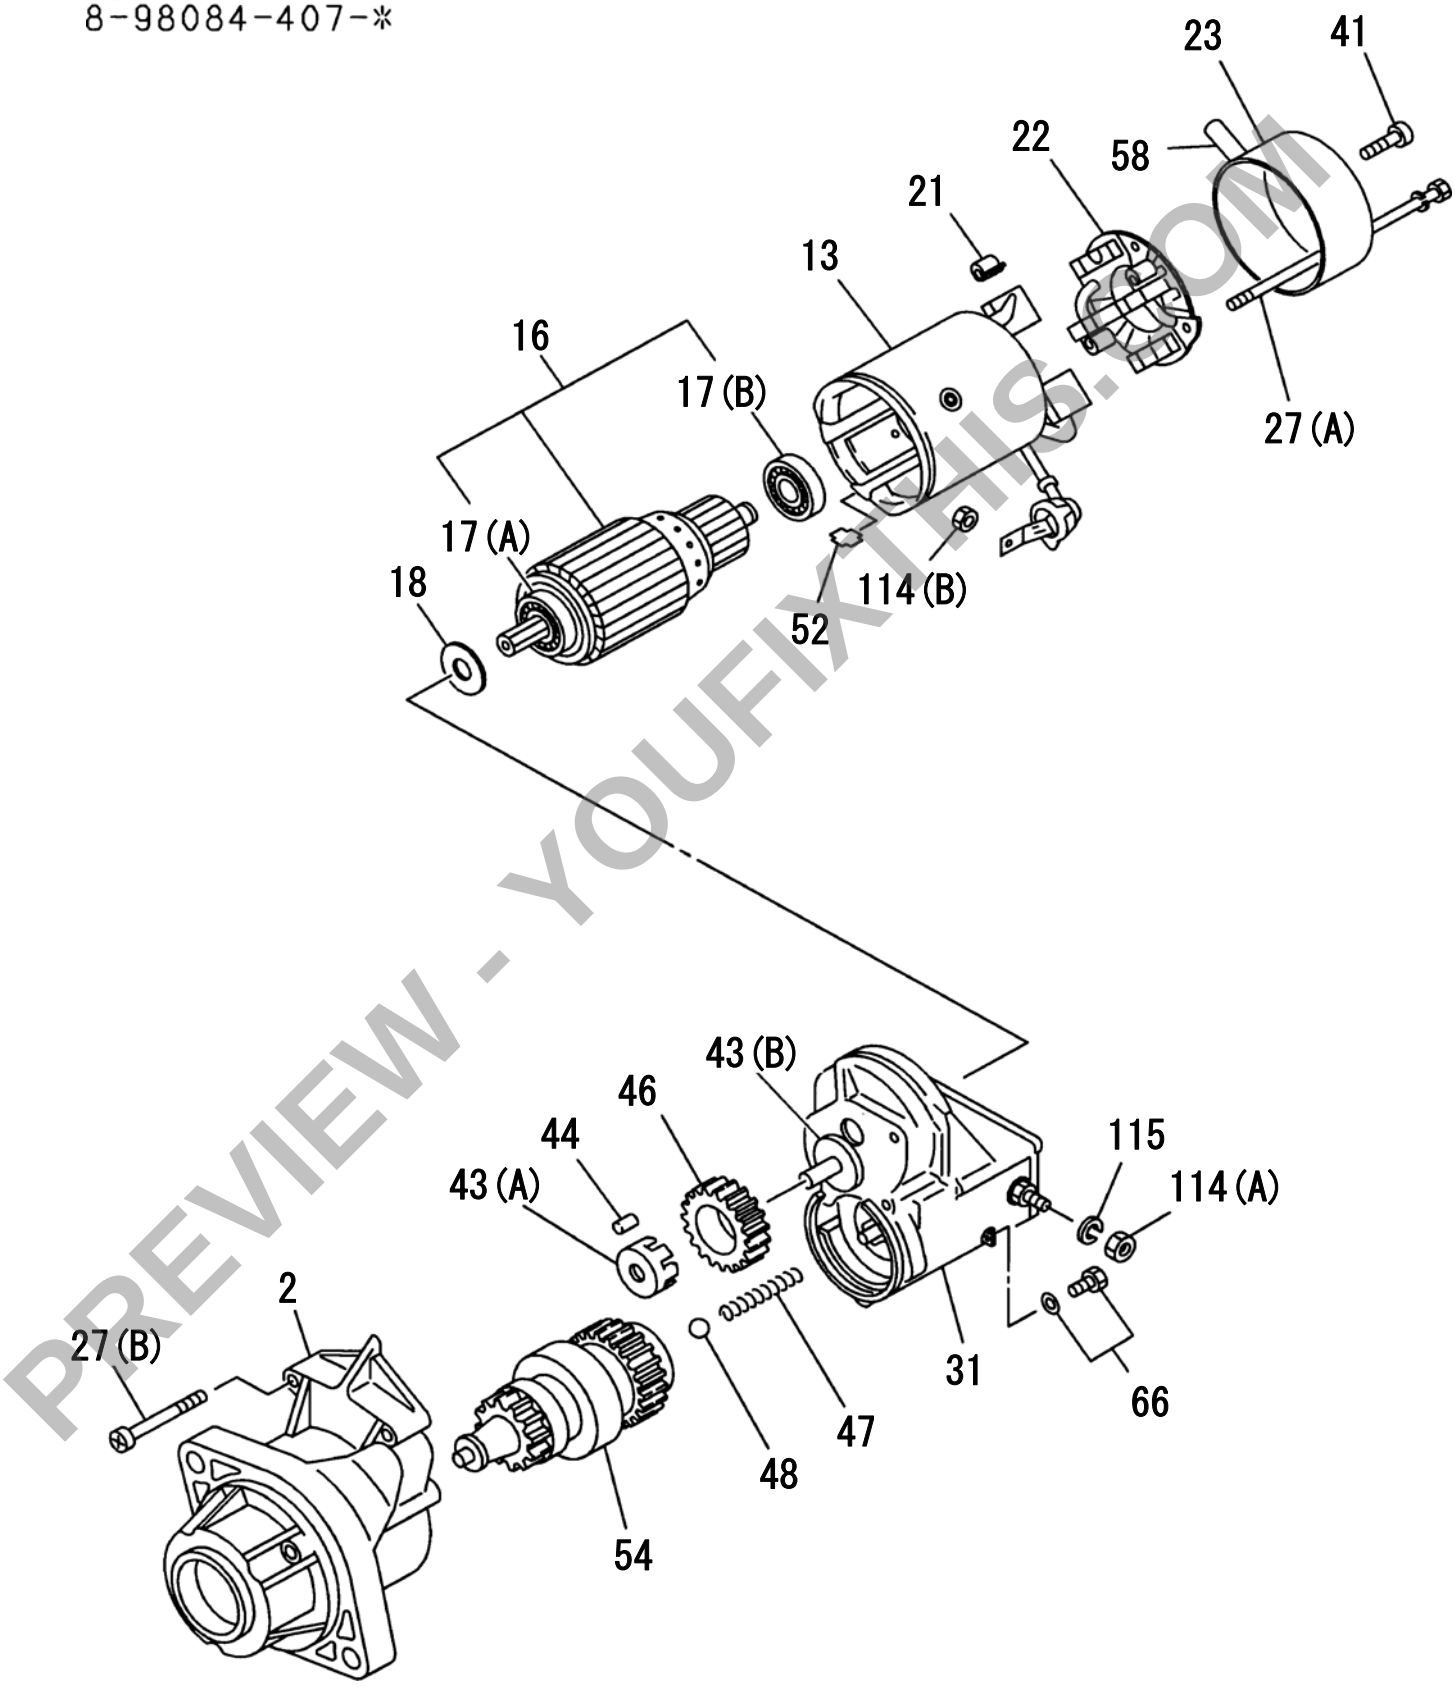

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

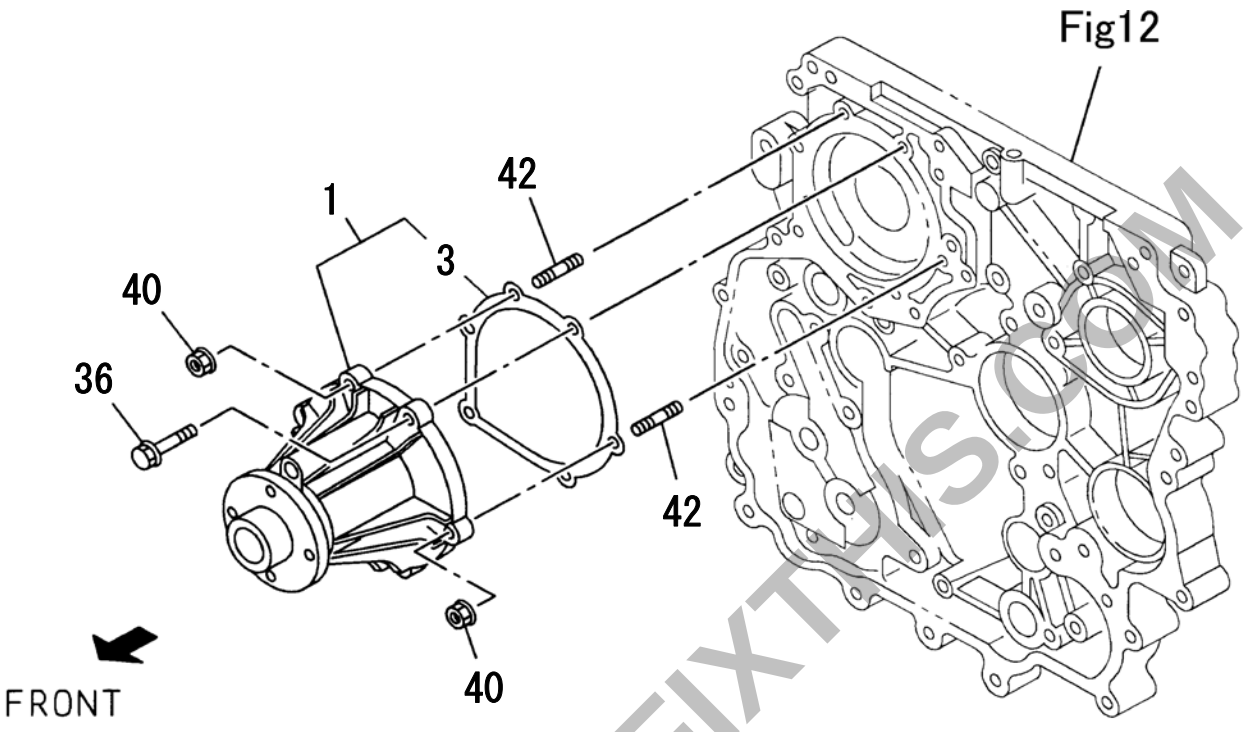

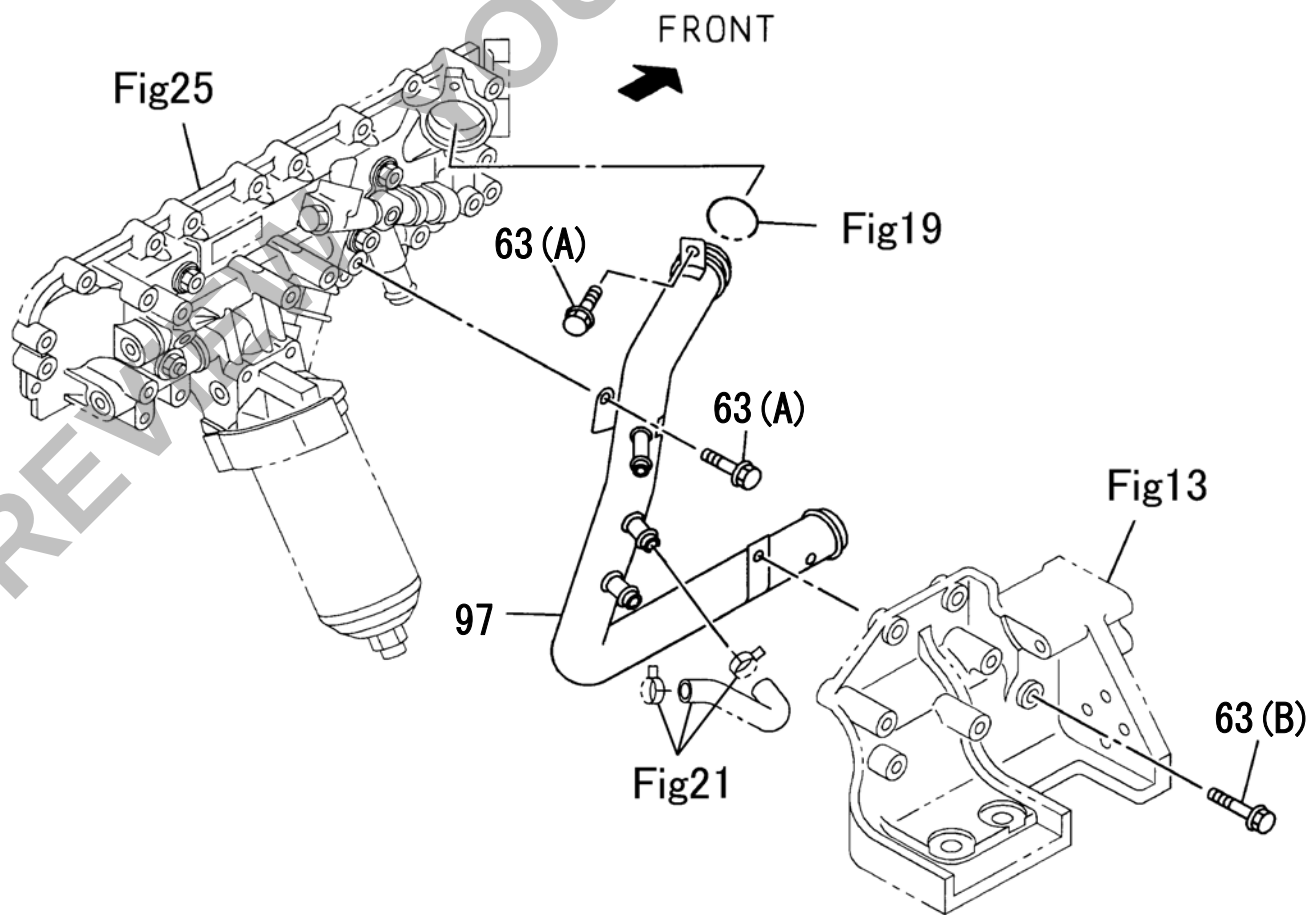

PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 8 of 84 pages

The full manual includes:

- All 84 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Isuzu 4JJ1TASB01 Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual