How to read this Parts Catalog.


REF NO. PARTS NO. Description Q'ty I R Remarks

ISUZU
4JJ1XYSB01
2012.4.12
P-T1140EBC

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

CRANKSHAFT, PISTON AND FLYWHEEL

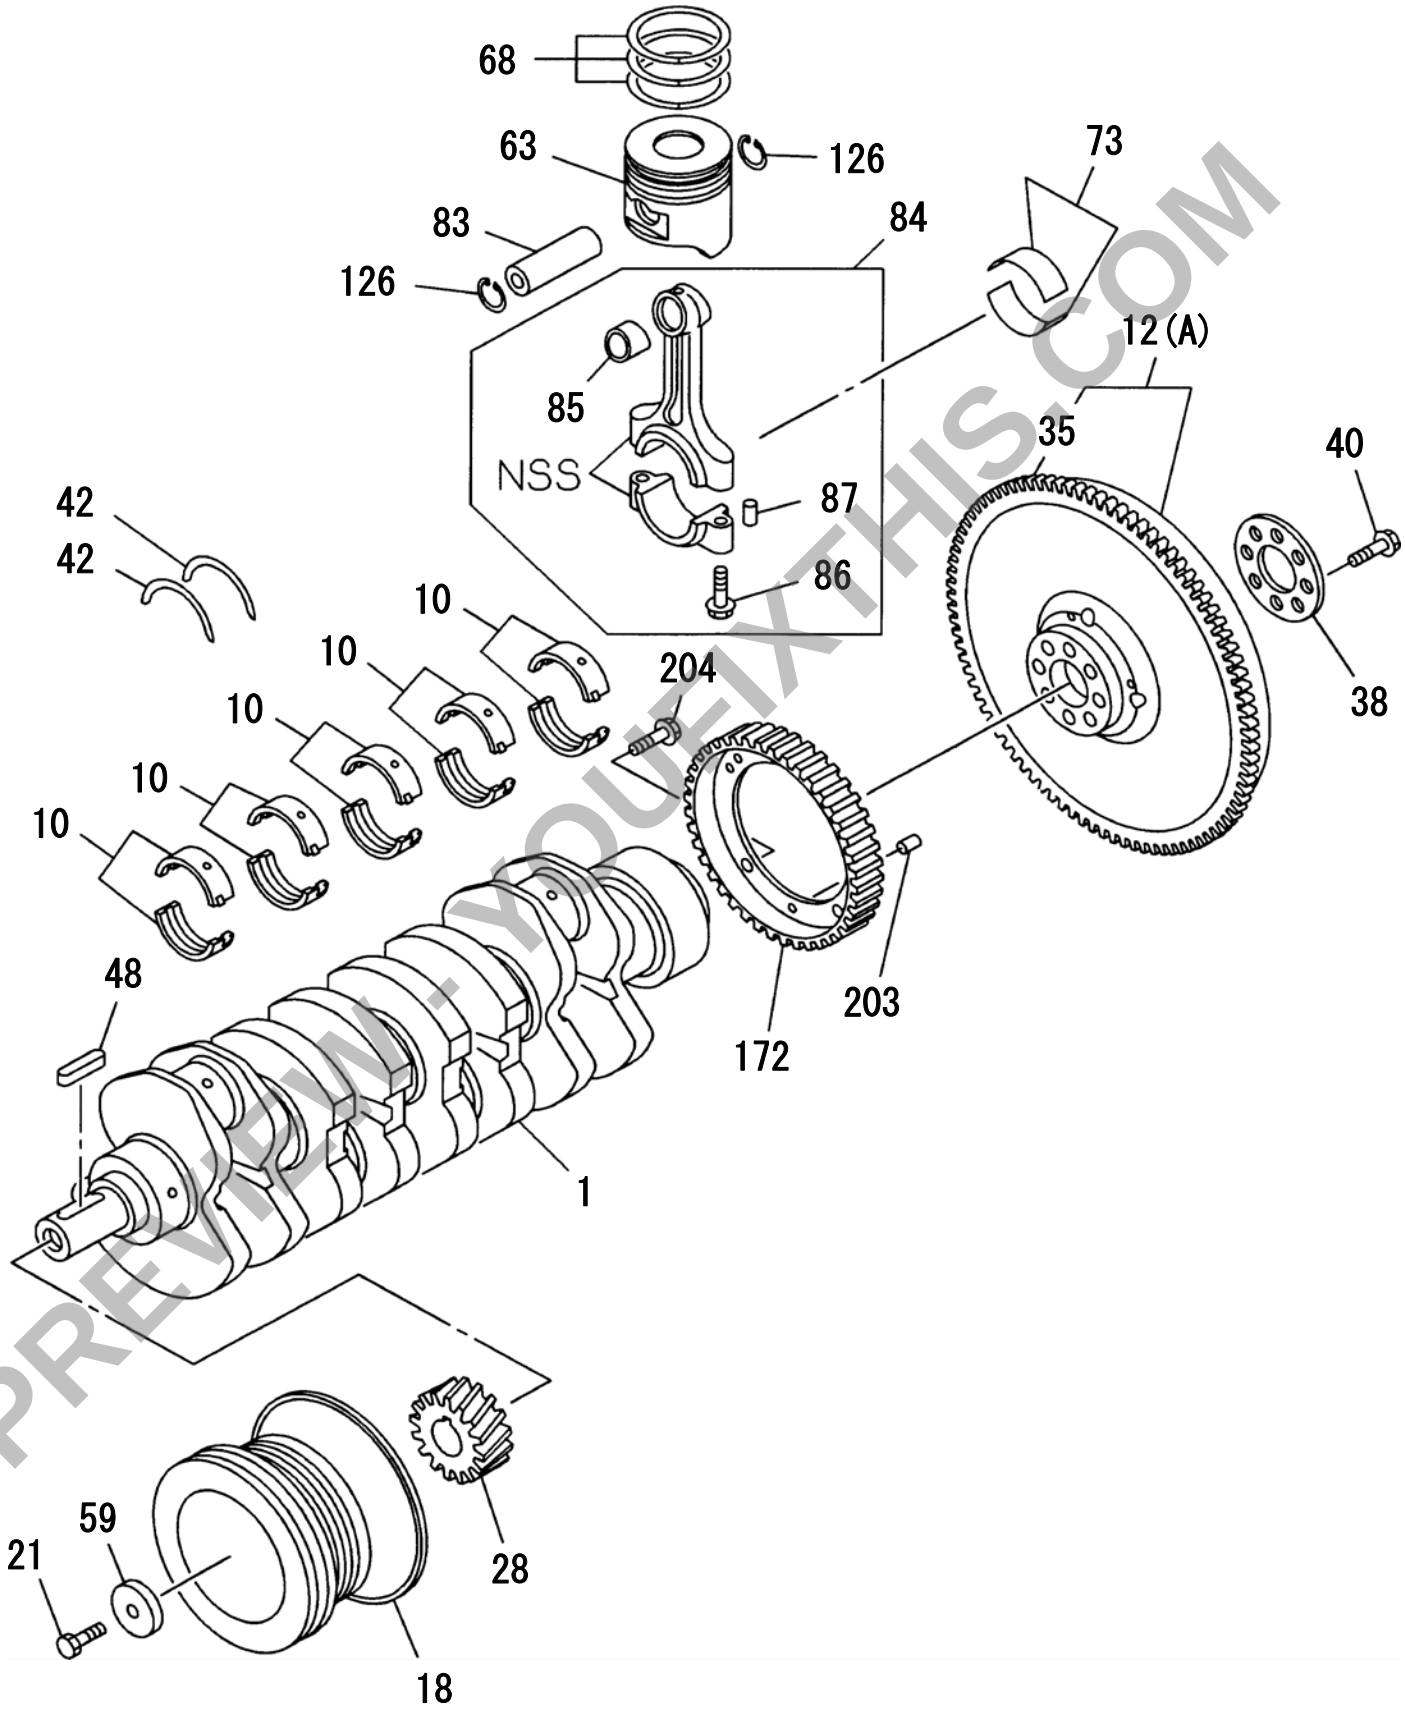

PREVIEW: YOUFIXTHIS.COM

Download full manual at youfixthis.com

CRANKSHAFT, PISTON AND FLYWHEEL

REF NO.	PARTS NO.	Description	Q'ty	I	R	Remarks
1	**I8-97388-8284**	CRANKSHAFT	1			
10	**I8-97387-9640**	METAL SET; CRANKSHAFT (GRADE=1)	5			
'10	**I8-97387-9650**	METAL SET; CRANKSHAFT (GRADE=2)	5			
''10	**I8-97387-9660**	METAL SET; CRANKSHAFT (GRADE=3)	5			
'''10	**I8-97387-9670**	METAL SET; CRANKSHAFT (GRADE=4)	5			
''''10	**I8-97387-9680**	METAL SET; CRANKSHAFT (GRADE=5)	5			
12(A)	**I8-98051-4471**	FLYWHEEL	1			
18	**I8-98038-8060**	PULLEY; CR/SHF	1			
21	**I5-09000-2732**	BOLT; PULLEY FIX (M16X43)	1			
28	**I8-97386-2321**	GEAR; CR/SHF (Z=44)	1			
35	**I9-12333-6061**	GEAR; RING (Z=122)	1			
38	**I8-94142-1561**	WASHER; FLYWHEEL	1			
40	**I8-94418-0500**	BOLT; FLYWHEEL (M13X45)	8			
42	**I8-97383-7400**	WASHER; THRUST, CR/SHF	2			
42-1	**I8-98040-7040** (A=E/11/08-)	WASHER; THRUST, CR/SHF	2		S	
48	**I8-94201-6410**	KEY; WOODRUFF, CR/SHF	1			
59	**I5-09503-1271**	WASHER; CR/SHF PULLEY (ID=16.5 OD=45)	1			
63	**I8-98041-6301**	PISTON (GRADE=A)	4			
63-1	**I8-98192-9260** (A=E/11/06-)	PISTON (GRADE=A)	4		S	
63	**I8-98041-6561**	PISTON (GRADE=B)	4			
63-1	**I8-98192-9270** (A=E/11/06-)	PISTON (GRADE=B)	4		S	
63	**I8-98041-6591**	PISTON (GRADE=C)	4			
63-1	**I8-98192-9280** (A=E/11/06-)	PISTON (GRADE=C)	4		S	
68	**I8-98057-2220**	RING SET; PISTON, STANDARD	4			
73	**I8-97358-2340**	METAL SET; CONN ROD, STANDARD	4			
83	**I8-98015-1931**	PIN; PISTON	4			
84	**I8-97388-9212**	ROD ASM; CONN	4			
85	**I8-97383-0660**	BUSHING; CONNROD	4			
86	**I8-98048-5380**	BOLT; CONNROD (M11X44.5)	8			
87	**I9-08160-5080**	PIN; CONNROD BIG END (OD=5 L=8)	8			
126	**I8-94460-6870**	RING; SNAP, PISTON PIN	8			
172	**I8-97312-3370**	ROTOR; CRANK SENSOR	1			
172-1	**I8-98163-6930** (A=E/11/02-)	ROTOR; CRANK SENSOR	1		S	
203	**I9-08160-5080**	PIN; ROTOR (OD=5 L=8)	1			
204	**I8-97213-3330**	BOLT; ROTOR	3			
204-1	**I8-98038-3430** (A=E/08/06-)	BOLT; ROTOR	3		N	

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

NUMERICAL INDEX

Part number	Page	Item
I0-01804-1300	22	30(A)
I0-03559-3000	21	119(A)
I0-03566-3000	21	488(A)
I0-20800-6120	20	66
I0-28050-6120	18	85
	18	100
	29	782(A)
	34	150(A)
I0-28050-6160	6	401
	10	136
	12	124
	29	782(B)
I0-28050-6200	21	21(A)
I0-28050-8100	27	29(A)
I0-28050-8120	21	21(B)
	22	280
	34	150(B)
I0-28050-8160	8	345
	12	36(A)
	17	63(A)
	21	21(C)
	26	49
	34	150(B)
I0-28050-8200	5	13
	12	36(B)
	16	295
I0-28050-8300	26	29(A)
I0-28050-8350	12	36(C)
I0-28050-8450	12	36(D)
	26	29(B)
I0-28050-8600	5	263(A)
	12	36(E)
	17	36
I0-28050-8700	14	13(A)
	22	283(A)
	25	76(A)
I0-28050-8800	18	50
	28	2(A)
I0-28050-8900	25	76(B)
I0-28051-0160	34	150(C)
I0-28051-0300	13	20(A)
I0-28051-0450	13	20(B)
I0-28051-0600	13	20(C)
I0-28051-0700	13	20(D)
I0-28055-8110	14	13(B)
I0-28055-8120	20	28(B)
I0-28056-0130	29	16
I0-28061-0600	10	114(A)
I0-28151-0450	28	271
I0-28161-2600	10	114(B)
I0-28650-6200	27	414(A)
I0-28650-6300	3	26
	14	53
I0-28650-8200	20	96
	27	414(B)
I0-28650-8250	6	211
	12	185
	18	114
	23	426
	28	2(B)
I0-28650-8300	12	36(F)
	17	63(B)
I0-28650-8350	5	263(B)
	25	76(C)
I0-28650-8400	4	143
I0-28651-0300	12	211(A)
I0-28751-0250	5	15
I0-28751-2350	12	211(B)
	29	4
I0-41010-6160	12	81(A)
I0-41010-6180	10	346
I0-41010-6200	14	32
I0-41010-8160	8	25
I0-41010-8180	25	374
I0-41010-8200	25	374-1
I0-41010-8300	17	42
I0-41010-8400	8	30
I0-41010-8500	28	16
I0-41010-8550	34	545
I0-49140-8300	12	81(B)
I0-58330-6100	4	155
I0-58330-6160	10	166
I0-58330-8250	9	87(A)
I0-58330-8400	9	87(B)
I0-91110-5060	14	55
I0-91180-1060	22	110
I0-91180-1100	12	205
I0-91180-2060	3	2
	10	190
	12	80(A)
	19	69
I0-91180-2080	5	224
	8	24
	8	29
	12	98
	12	80(B)
	14	20
	17	40
	20	82
	23	418
	25	362
	28	12
	28	681
	34	24
I0-91180-2100	29	23(A)
I0-91610-7060	30	737
I0-91614-7080	20	88
I0-95235-0250	18	84
I0-95235-8560	34	483(A)
I0-95690-2260	18	190(A)
I0-95690-2710	23	429
I0-95690-3380	19	23
I1-09070-1201	10	200
I1-09600-0122	4	7(A)
I1-09605-0500	7	15
I1-09623-5410	22	219
I1-09630-0830	22	175
I1-09630-0850	23	427
	27	572
I1-09630-0860	24	9
I1-09630-0900	8	3
I1-09639-0340	5	230
I1-09675-0810	21	138-1
I1-09675-0951	24	69
I1-09680-1060	8	6
I1-09700-1261	16	18
I1-09700-6071	34	483(B)
I1-09700-8600	34	483(C)
I1-09700-8620	34	483(C)
I1-09701-0011	34	483(D)
I1-09701-0130	34	483(D)
I1-13240-2322	25	2(A)
I1-13642-0610	20	38(B)
I1-81118-0110	32	62
I1-81229-3820	32	21
I1-81229-4740	32	18
I1-81229-4780	32	88
I1-81229-4790	32	87
I1-81229-7230	32	3(A)
I1-81229-7330	32	43
I1-81229-7580	32	3(B)
I1-81229-7601	32	15
I1-84132-0120	32	65
I5-09000-2270	12	211(C)
I5-09000-2732	11	21
I5-09500-0130	15	33
I5-09503-1271	11	59
I5-09600-0130	7	21(C)
I5-09605-0050	18	112
I5-09700-3500	34	102(A)
I5-09707-0311	34	102(B)
I5-11129-0030	8	383
I5-11129-0060	6	70
	7	70
I5-11219-0080	4	7(B)
	6	23(B)
	7	23(B)
I5-11219-0110	4	7(C)
I5-11219-0150	6	23(C)
I5-11219-0170	7	21(A)
I5-11219-0180	7	21(B)
	7	23(D)
I5-15411-2231	23	315(A)-1
I5-15419-0360	30	915
I5-87815-0450	1	1
I5-87815-0460	1	1
I5-87815-0470	1	1
I5-87815-0540	2	2
I5-87815-0550	2	2
I5-87815-0560	2	2
I5-87816-1230	1	1-1
I5-87816-1240	1	1-1
I5-87816-1250	1	1-1
I5-87816-1260	2	2-1
I5-87816-1270	2	2-1
I5-87816-1280	2	2-1
I8-09373-2691	29	796(A)
I8-12146-8300	29	797
	30	608
I8-28139-7750	29	796(A)-1
I8-94107-7930	5	267
	18	193
I8-94121-1130	16	90
I8-94123-6231	3	5
I8-94125-8621	5	268
	18	147
	21	118(A)
I8-94133-2075	3	4
I8-94142-1561	11	38
I8-94152-6130	7	448
I8-94152-9720	31	21
I8-94152-9780	31	73
I8-94201-6410	11	48
I8-94228-4360	31	17(A)
I8-94239-4230	4	4
I8-94239-5010	9	65
I8-94258-0140	30	10(B)
I8-94336-2920	6	51
I8-94343-2111	5	91
I8-94367-9430	21	118(B)

Download full manual at youfixthis.com

PREVIEW - YOUFIXTHIS.COM

How to read this Parts Catalog.

1. Parts mentioned in this Parts Catalog may not necessarily be standard equipping parts.
2. Parts change may be made without prior notice.
3. Form of this Parts Catalog.

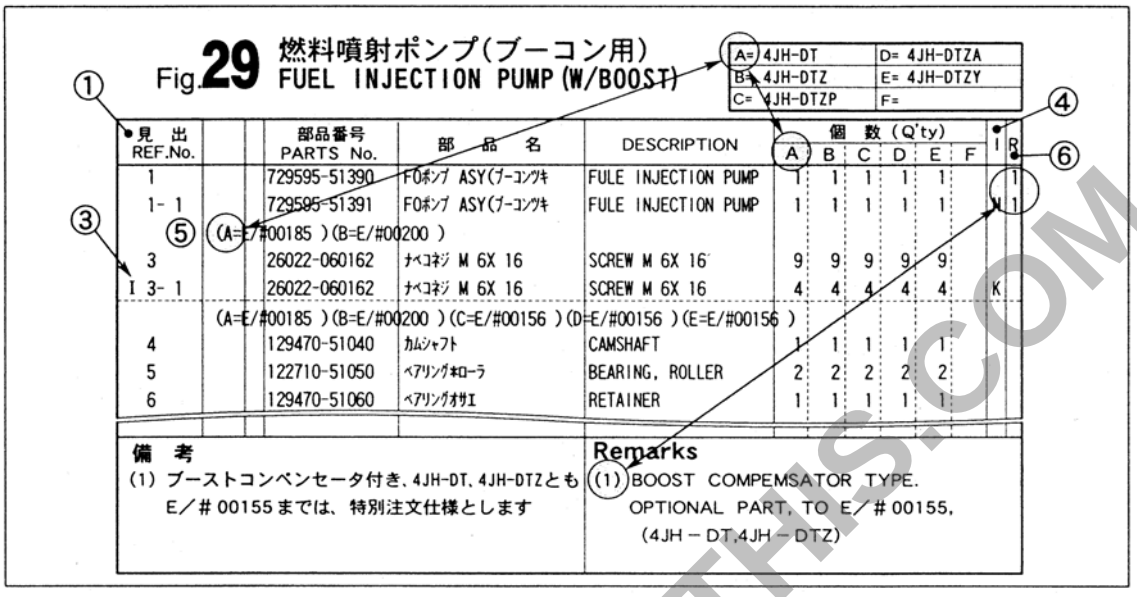


Fig.29 燃料噴射ポンプ(ブーコン用) FUEL INJECTION PUMP (W/BOOST)

A=	4JH-DT	D=	4JH-DTZA
B=	4JH-DTZ	E=	4JH-DTZY
C=	4JH-DTZP	F=	

見出 REF.No.		部品番号 PARTS No.	部品名	DESCRIPTION	個数 (Q'ty) A	B	C	D	E	F	I	R
1		729595-51390	FOポンプ ASY(ブーコンヅキ	FULE INJECTION PUMP	1	1	1	1	1			1
1- 1		729595-51391	FOポンプ ASY(ブーコンヅキ	FULE INJECTION PUMP	1	1	1	1	1		I	1
	⑤	(A=E/#00185)(B=E/#00200)										
3		26022-060162	ナベコネジ M 6X 16	SCREW M 6X 16	9	9	9	9	9			
I 3- 1		26022-060162	ナベコネジ M 6X 16	SCREW M 6X 16	4	4	4	4	4		K	
		(A=E/#00185)(B=E/#00200)(C=E/#00156)(D=E/#00156)(E=E/#00156)										
4		129470-51040	カムシャフト	CAMSHAFT	1	1	1	1	1			
5		122710-51050	ベアリングキローラ	BEARING, ROLLER	2	2	2	2	2			
6		129470-51060	ベアリングオサエ	RETAINER	1	1	1	1	1			

備考	Remarks
(1) ブーストコンペンセータ付き、4JH-DT、4JH-DTZとも E／# 00155までは、特別注文仕様とします	(1) BOOST COMPEMSATOR TYPE. OPTIONAL PART, TO E／# 00155, (4JH－DT,4JH－DTZ)

① Ref. No.

The Ref. No. in the list may not be accord with the Ref. No. on illustration.

(Ex.) Illustration No. 1 — List head No. 1 (Befor change) ⟶ 1 −1 (After change)

When interchangeable symbol N, R, and K, illustrations for new parts are sometimes omitted.

③ Change Mark

Change Mark "I" is given to the part for which a desigh change was made at this time.
The design change was not shown in the last published Parts Catalog.

④ Interchangeability Mark

In the case where a part change took place,one of the following interchangeability marks is indicated for that part.

Symbol	interchangeability	Contents note
N	Old ⟷ New	New Part is interchangeable for Old Part but not interchangeable conversely.
Q	Old ⟷ New	New Part is not interchangeable for Old Part but interchangeable conversely.
R	Old ⟷ New	New Part is interchangeable for Old Part and vice versa.
S	Old ⟷ New	New Part is not interchangeable for Old Part and vice versa.
W		Part newly added.
Z		Part discontinued.
F		Not interchangeable single part but interchangeable by set of the related parts.
K		Changed only in quantity used.

⑤ Effective Machine No.

When a part is changed,Effective Machine No. of a Model for which the part is applicable is indication in each column of (A)- (F).

Product Symbol	Product No.	Product Symbol	Product No.
C	Clutch No. Compressor No.	M	Machine No.
D	Drive No.	T	Tractor No.
E	Engine No.	Note1) ※	Date

Note1) Date may follow the symbol in some cases. (Ex.) ※ 1996.01
Note2) As far as engine models shown by "XXX" are concerned, the modification of the parts could not be predicted or the engine models themselves could not be identified.
Note3) (A=E/#00185) means that the design change on the part has been effective for the model at the column (A)(in this case, for 4JH- DT) on and from E/#(Engine Serial Number) 00185.


⑥ Remarks Mark

Figures or alphabets (Symbols) are entered in the remark column.
The comments(remarks)on the pertinent parts are indicated in the lower part of the list by the same symbols as those stated above.

PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com


OIL PAN AND LEVEL GAUGE

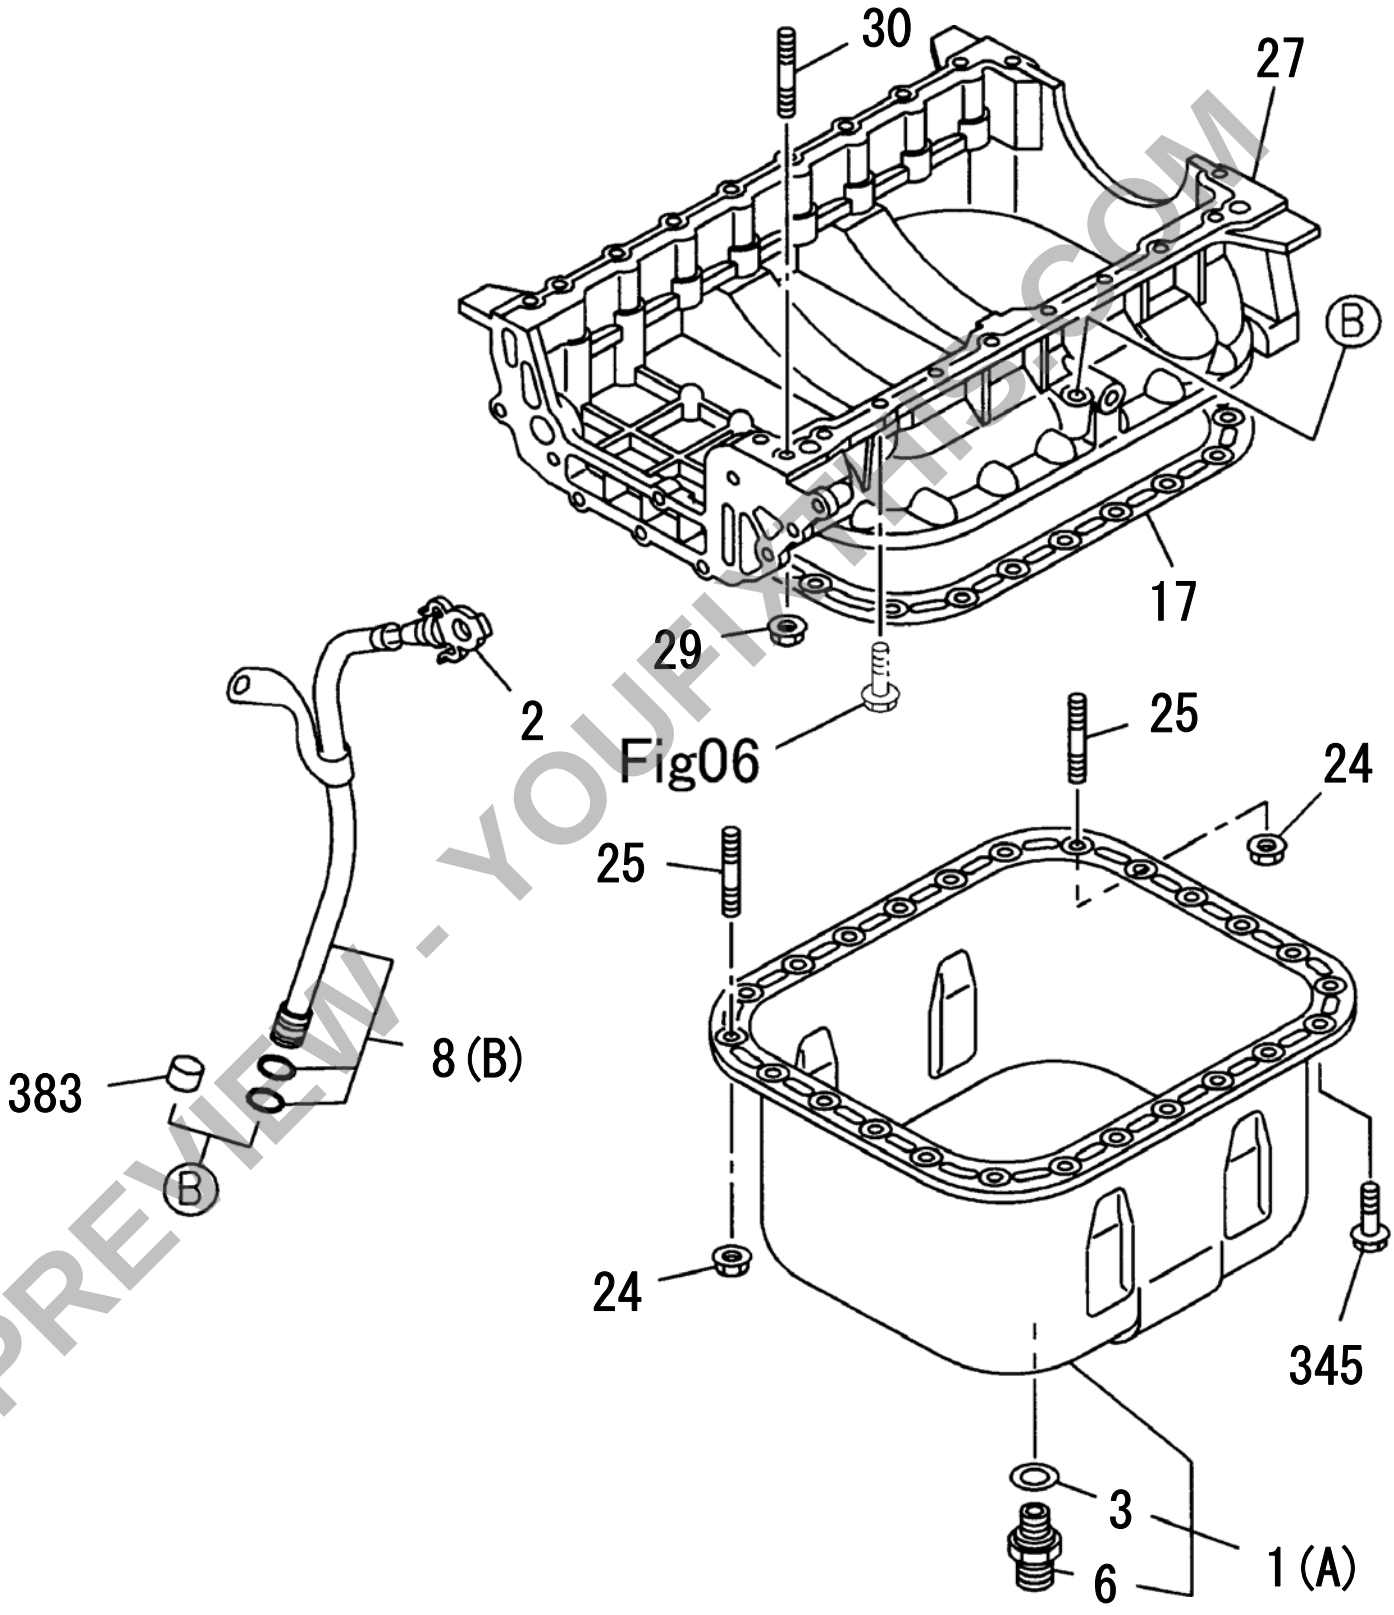


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

WATER PUMP AND CORROSION RESISTOR

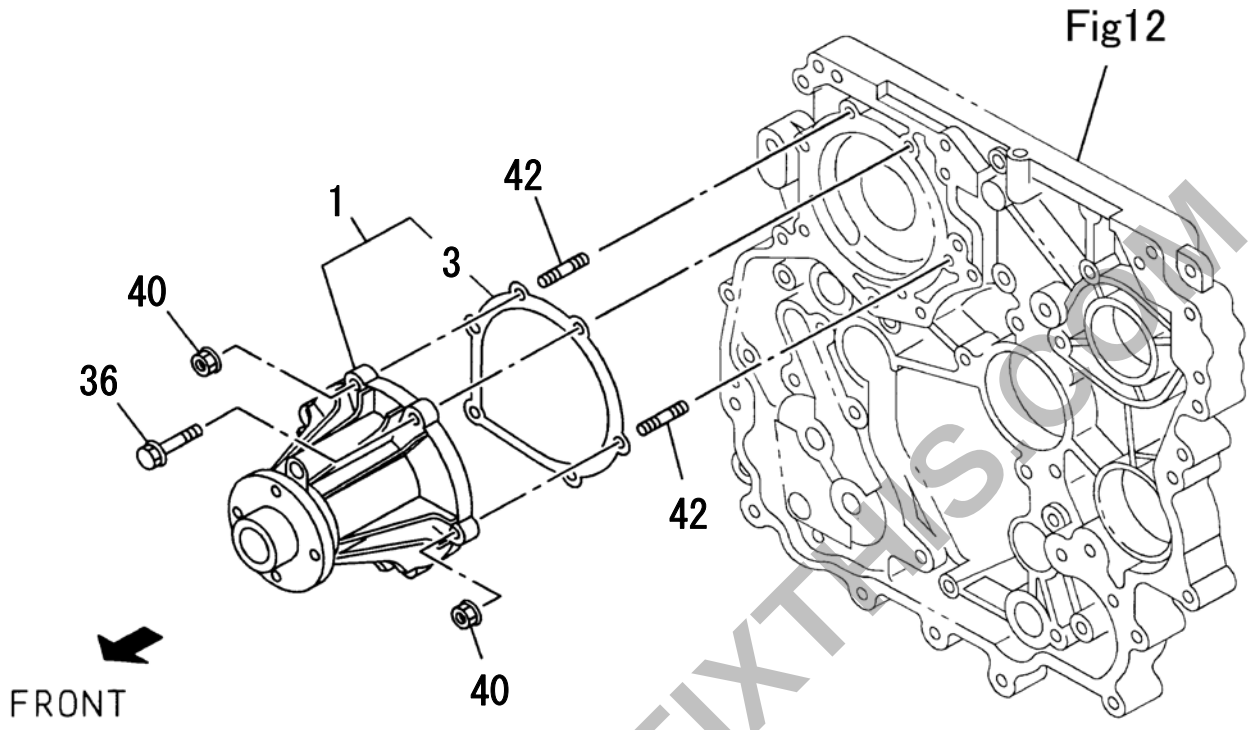


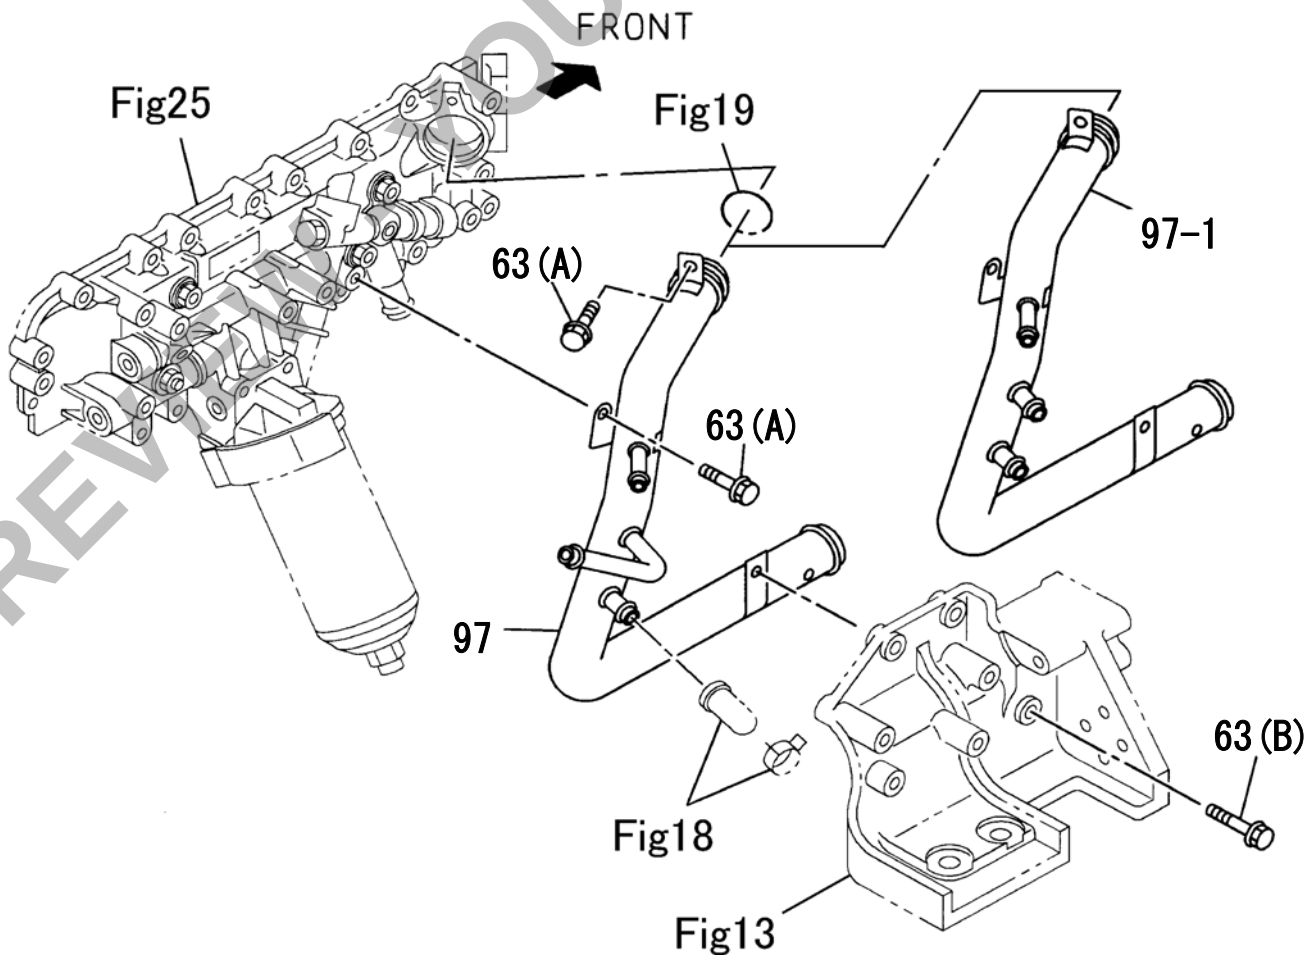


PREVIEW ONLY YOUFIXTHIS.COM

Download full manual at youfixthis.com

OIL PUMP AND OIL STRAINER

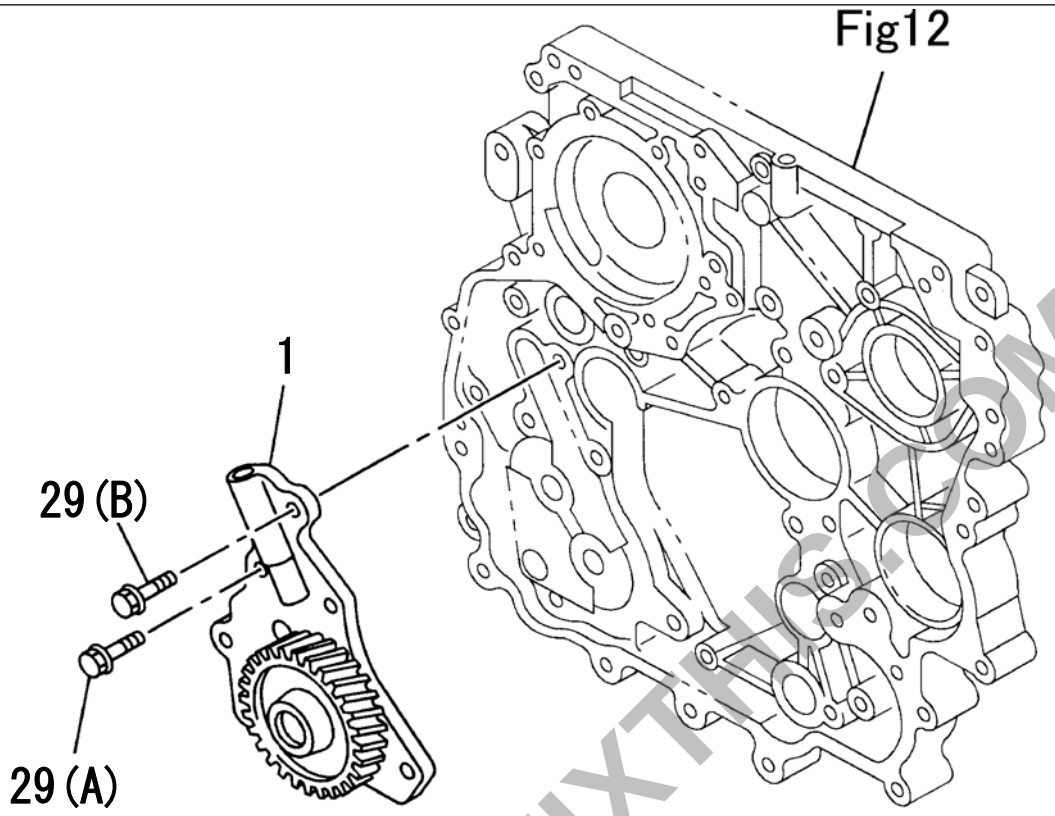

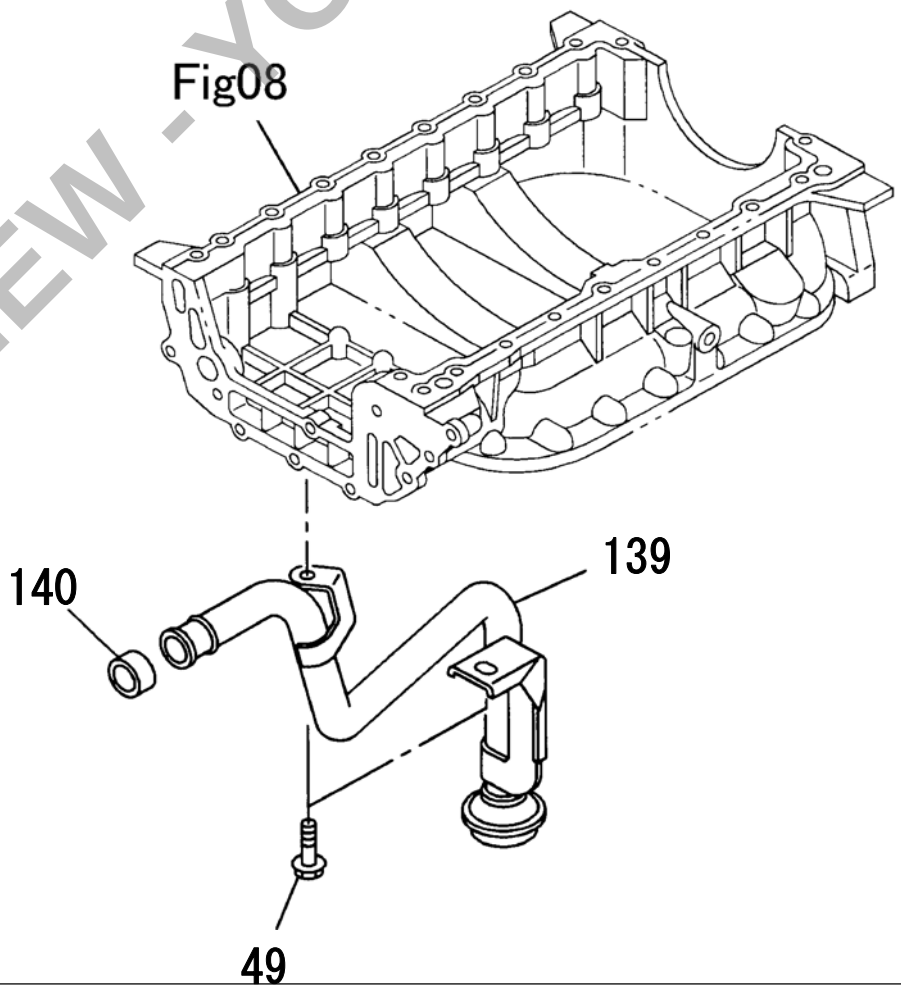

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 8 of 80 pages

The full manual includes:

- All 80 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Isuzu 4JJ1XYSB01 Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual