
NUMERICAL INDEX

Part number	Page	Item
I0-01804-1300	22	30(A)
I0-03559-3000	21	231
	21	119(A)
I0-20800-6120	20	66
I0-28050-6120	18	85
	18	100
	29	782(A)
	34	150(A)
I0-28050-6160	6	401
	10	136
	12	124
	29	782(B)
I0-28050-6200	21	21(A)
I0-28050-8100	27	29(A)
I0-28050-8120	21	21(B)
	22	280
	34	150(B)
I0-28050-8160	12	36(A)
	17	63(A)
	21	21(C)
	26	49
I0-28050-8200	3	79
	5	13
	8	69
	12	36(B)
I0-28050-8300	26	29(A)
I0-28050-8350	12	36(C)
I0-28050-8450	12	36(D)
	26	29(B)
I0-28050-8600	5	263(A)
	12	36(E)
	14	323
	17	36
I0-28050-8700	14	13(A)
	22	283(A)
	25	76(A)
I0-28050-8800	18	50
	20	28
	28	2(A)
I0-28050-8900	25	76(B)
I0-28051-0160	34	150(C)
I0-28051-0300	13	20(A)
I0-28051-0450	13	20(B)
I0-28051-0600	13	20(C)
I0-28051-0700	13	20(D)
I0-28055-8110	14	13(B)
I0-28056-0130	29	16
I0-28061-0600	10	114(A)
I0-28151-0450	28	271
I0-28161-2600	10	114(B)
I0-28161-2800	29	4
I0-28650-6200	27	414(A)
I0-28650-6300	3	26
	14	53
I0-28650-8200	20	96
I0-28650-8250	6	211
	8	345
	12	185
	18	114
	23	426
	28	2(B)
I0-28650-8300	12	36(F)
	17	63(B)
I0-28650-8350	5	263(B)
	20	73
	25	76(C)
I0-28650-8400	4	143
I0-28651-0300	12	211(A)
I0-28751-0250	5	15
I0-28751-2350	12	211(B)
I0-41010-6160	12	81(A)
I0-41010-6200	14	32
I0-41010-8200	25	374
I0-41010-8250	8	25
I0-41010-8300	17	42
I0-41010-8400	8	30
I0-41010-8500	28	16
I0-41010-8550	34	545
I0-44011-2700	29	9
I0-49140-8300	12	81(B)
I0-58330-6100	4	155
I0-58330-6160	10	166
I0-58330-8250	9	87(A)
I0-58330-8400	9	87(B)
I0-91110-5060	14	55
I0-91180-1060	22	110
I0-91180-1100	12	205
I0-91180-1120	29	7
I0-91180-2060	3	2
	12	80(A)
	19	69
I0-91180-2080	5	224
	8	24
	8	29
	12	98
	12	80(B)
	14	20
	17	40
	23	418
	25	362
	28	12
	28	681
	34	24
I0-91180-2100	29	23
I0-91610-7060	30	737
I0-95235-0250	18	84
I0-95235-8560	34	483(A)
I0-95690-2260	18	190(A)
I0-95690-2710	23	429
I0-95690-3380	19	23
I1-09070-1201	10	200
I1-09600-0122	4	7(A)
I1-09605-0500	7	15
I1-09623-0550	25	8
I1-09623-2460	27	583
I1-09623-5000	25	9(B)
I1-09623-5410	22	219
I1-09630-0830	22	175
I1-09630-0850	23	427
	27	572
I1-09630-0860	25	9
I1-09630-0900	8	3
I1-09639-0340	5	230
I1-09675-0810	21	138
I1-09675-0951	25	69
I1-09680-1060	8	6
I1-09700-6071	34	483(B)
I1-09700-8600	34	483(C)
I1-09700-8620	34	483(C)
I1-09701-0011	34	483(D)
I1-09701-0130	34	483(D)
I1-13642-0700	20	38(G)
I1-81117-0100	31	21
I1-81129-6770	31	58
I1-81129-6980	31	27(A)
I5-09000-2270	12	211(C)
I5-09000-2732	11	21
I5-09500-0130	15	33
I5-09503-1271	11	59
I5-09600-0130	7	21(C)
I5-09605-0050	18	112
I5-09707-0311	34	102(B)
I5-09800-0410	31	17(B)
I5-09800-0640	31	17(A)
I5-11129-0060	6	70
	7	70
I5-11219-0080	4	7(B)
	6	23(B)
	7	23(B)
I5-11219-0110	4	7(C)
I5-11219-0150	6	23(C)
I5-11219-0170	7	21(A)
I5-11219-0180	7	21(B)
	7	23(D)
I5-13311-1260	23	315(C)
I5-15419-0360	30	915
I5-81118-0130	31	22
I5-81123-0180	31	46
I5-81129-0920	31	48
I5-81129-1190	31	47
I5-81129-1200	31	44
I5-81129-1210	31	43(A)
I5-81129-1260	31	114(A)
I5-81129-1270	31	43(B)
I5-81129-1280	31	18
I5-81129-1290	31	115
I5-81129-1300	31	41
I5-81129-1320	31	27(B)
I5-81129-1360	31	52
I5-82550-0290	30	10(A)
	35	424
I5-87815-9271	1	1
I5-87815-9281	1	1
I5-87815-9291	1	1
I5-87815-9300	2	2
I5-87815-9310	2	2
I5-87815-9320	2	2
I5-87816-1230	1	1-1
I5-87816-1240	1	1-1
I5-87816-1250	1	1-1
I5-87816-1260	2	2-1
I5-87816-1270	2	2-1
I5-87816-1280	2	2-1
I8-12146-8300	29	797
	30	608
I8-28139-7750	29	796(A)
I8-94107-7930	5	267
	18	193
I8-94121-1130	16	90
I8-94123-6231	3	5
I8-94125-8621	5	268
	18	147
	21	118(A)
I8-94126-7700	14	372
I8-94133-2075	3	4
I8-94142-1561	11	38
I8-94152-6130	7	448
I8-94201-6410	11	48
I8-94233-6530	32	24(A)
I8-94238-9240	23	279(A)

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

CYLINDER HEAD (1/2)

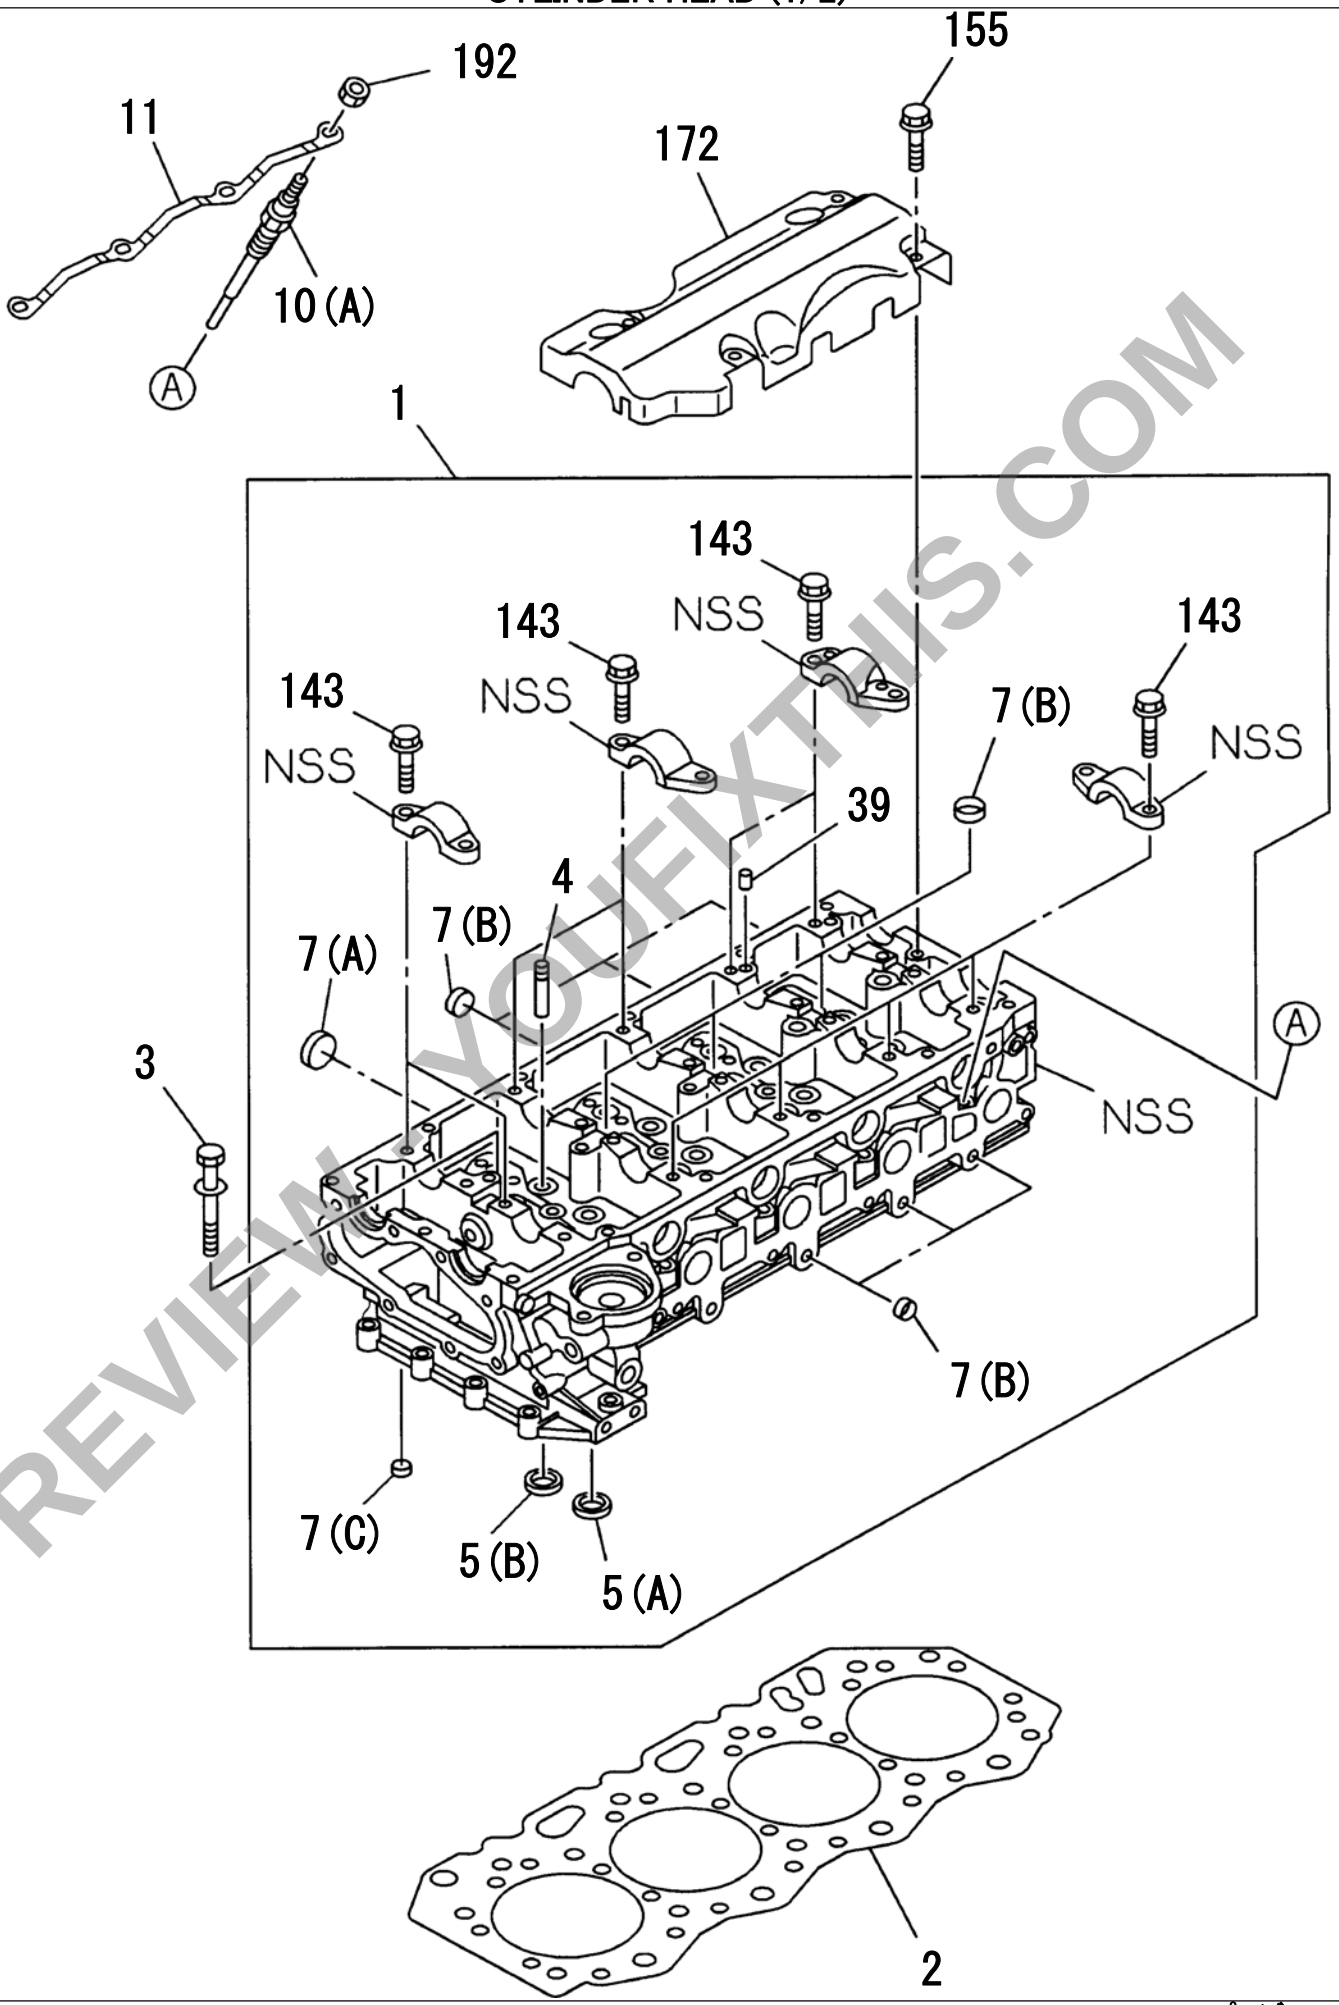

PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com


CYLINDER HEAD (1/2)

REF NO.	PARTS NO.	Description	Q'ty	I	R	Remarks
1	**I8-97355-9709**	HEAD ASM; CYL	1			
2	**I8-98135-9530**	GASKET; CYL HD (T=1.05 1-NOTCH)	1			
'2	**I8-98135-9540**	GASKET; CYL HD (T=1.10 2-NOTCH)	1			
''2	**I8-98135-9550**	GASKET; CYL HD (T=1.15 3-NOTCH)	1			
3	**I8-97144-5831**	BOLT; CYL HD BLOCK (M11X114)	18			
4	**I8-94239-4230**	GUIDE; VLV	16			
5(A)	**I8-97311-3780**	SEAT; VLV INSERT (INLET)	8			
5(B)	**I8-97311-3790**	SEAT; VLV INSERT (EXH)	8			
7(A)	**I1-09600-0122**	CUP; SEALING, CYL HEAD (OD=32)	2			
7(B)	**I5-11219-0080**	CUP; SEALING, CYL HEAD (OD=18)	13			
7(C)	**I5-11219-0110**	CUP; SEALING, CYL HEAD (OD=14)	7			
10(A)	**I8-98054-2560**	PLUG; GLOW (NGK 24V)	4			
11	**I8-98014-3350**	CONNECTOR; GLOW PLUG	1			
39	**I8-97329-1291**	DOWEL; CAP, CM/SHF	20			
143	**I0-28650-8400**	BOLT; FIX (M8X40 FLANGE)	20			
155	**I0-58330-6100**	BOLT; BAFFLE PLATE (M6X10 HEX SOCKET)	4			
172	**I8-98016-8650**	PLATE; BAFFLE, CYL HD	1			
192	**I8-97368-8530**	NUT; GLOW PLUG (M4 FLANGE)	4			

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


CRANKSHAFT, PISTON AND FLYWHEEL

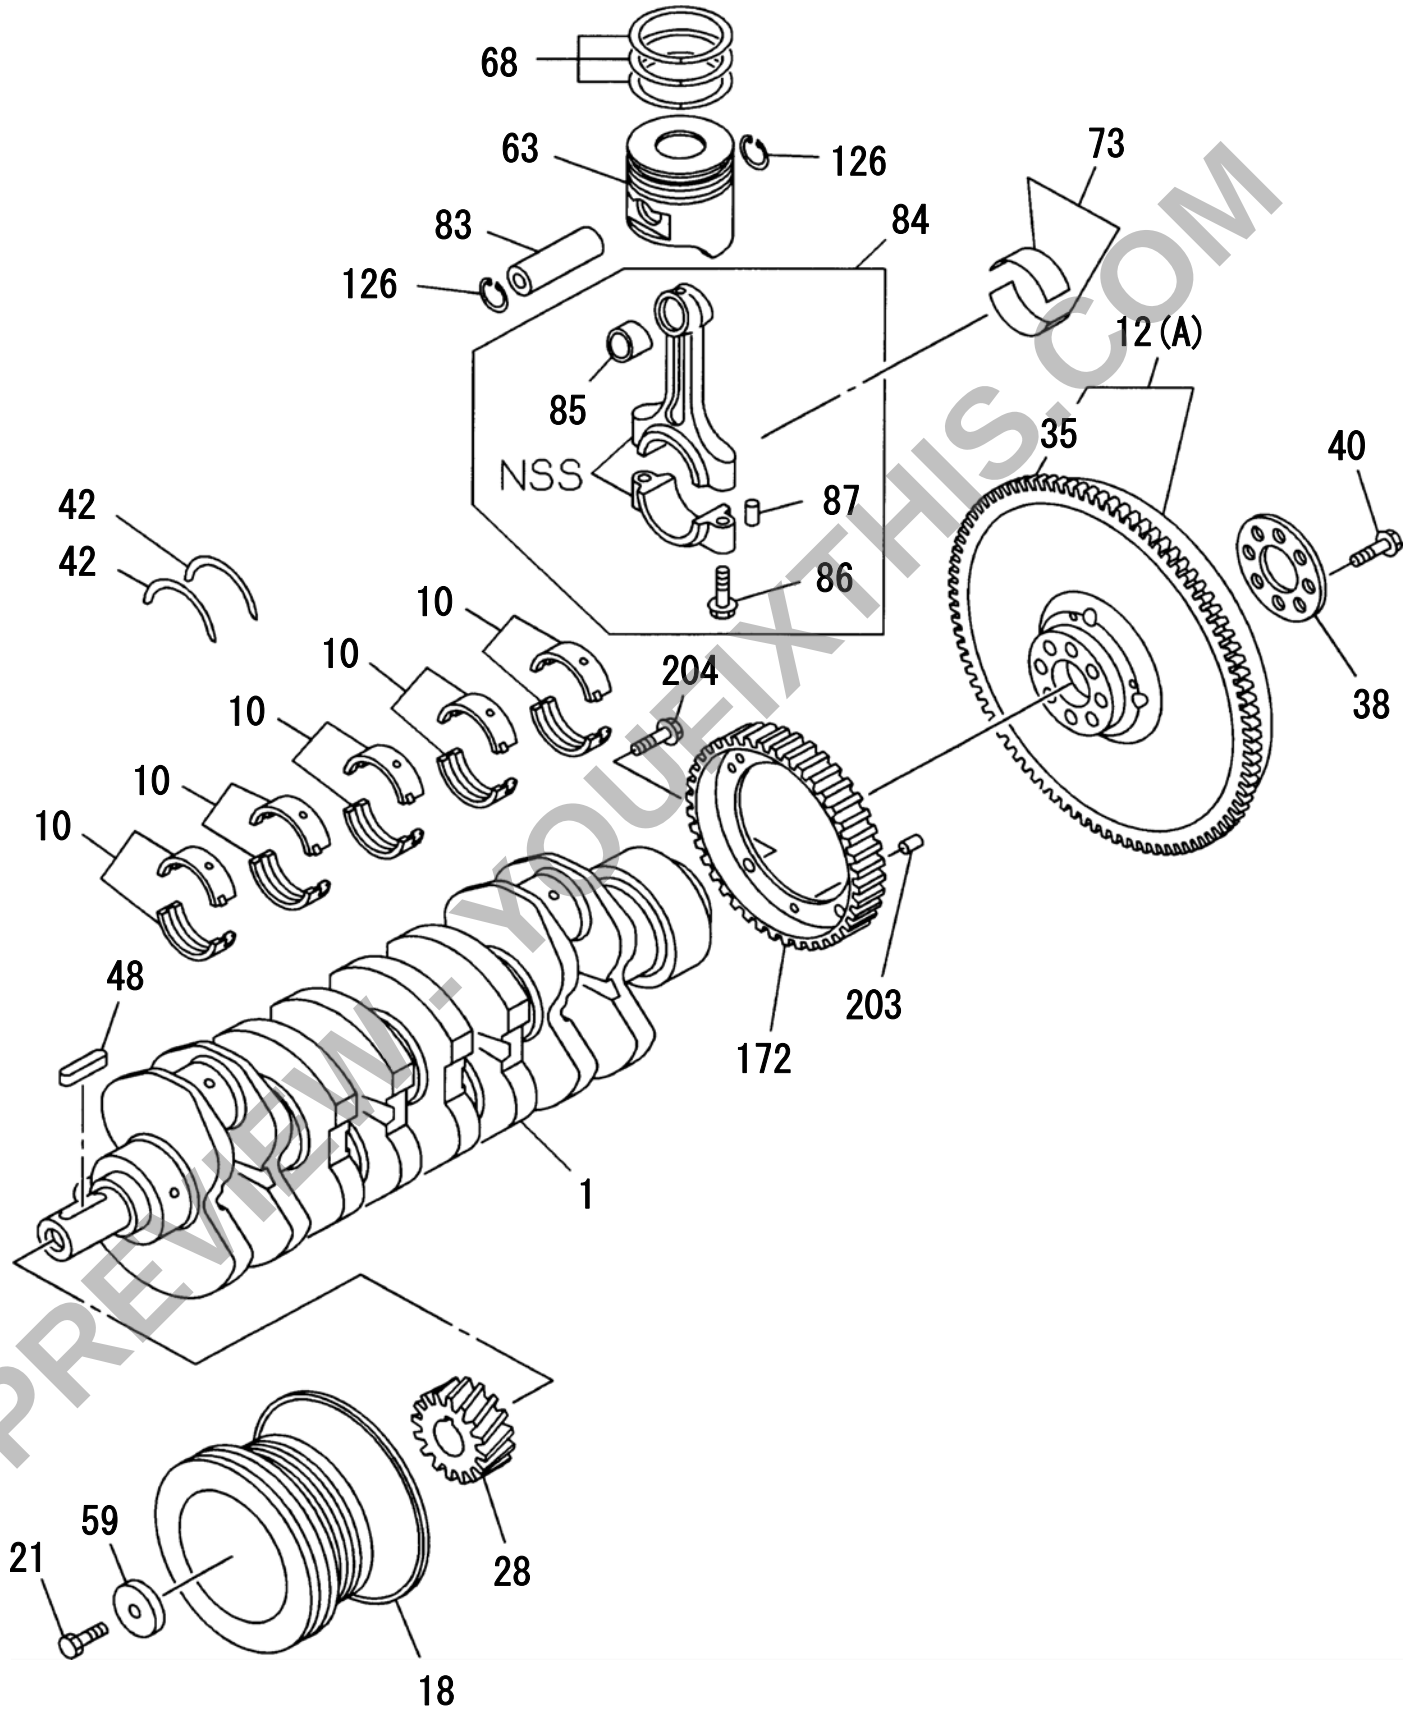

PREVIEW: YOUFIXTHIS.COM

Download full manual at youfixthis.com

FUEL INJECTION SYSTEM (1/2)

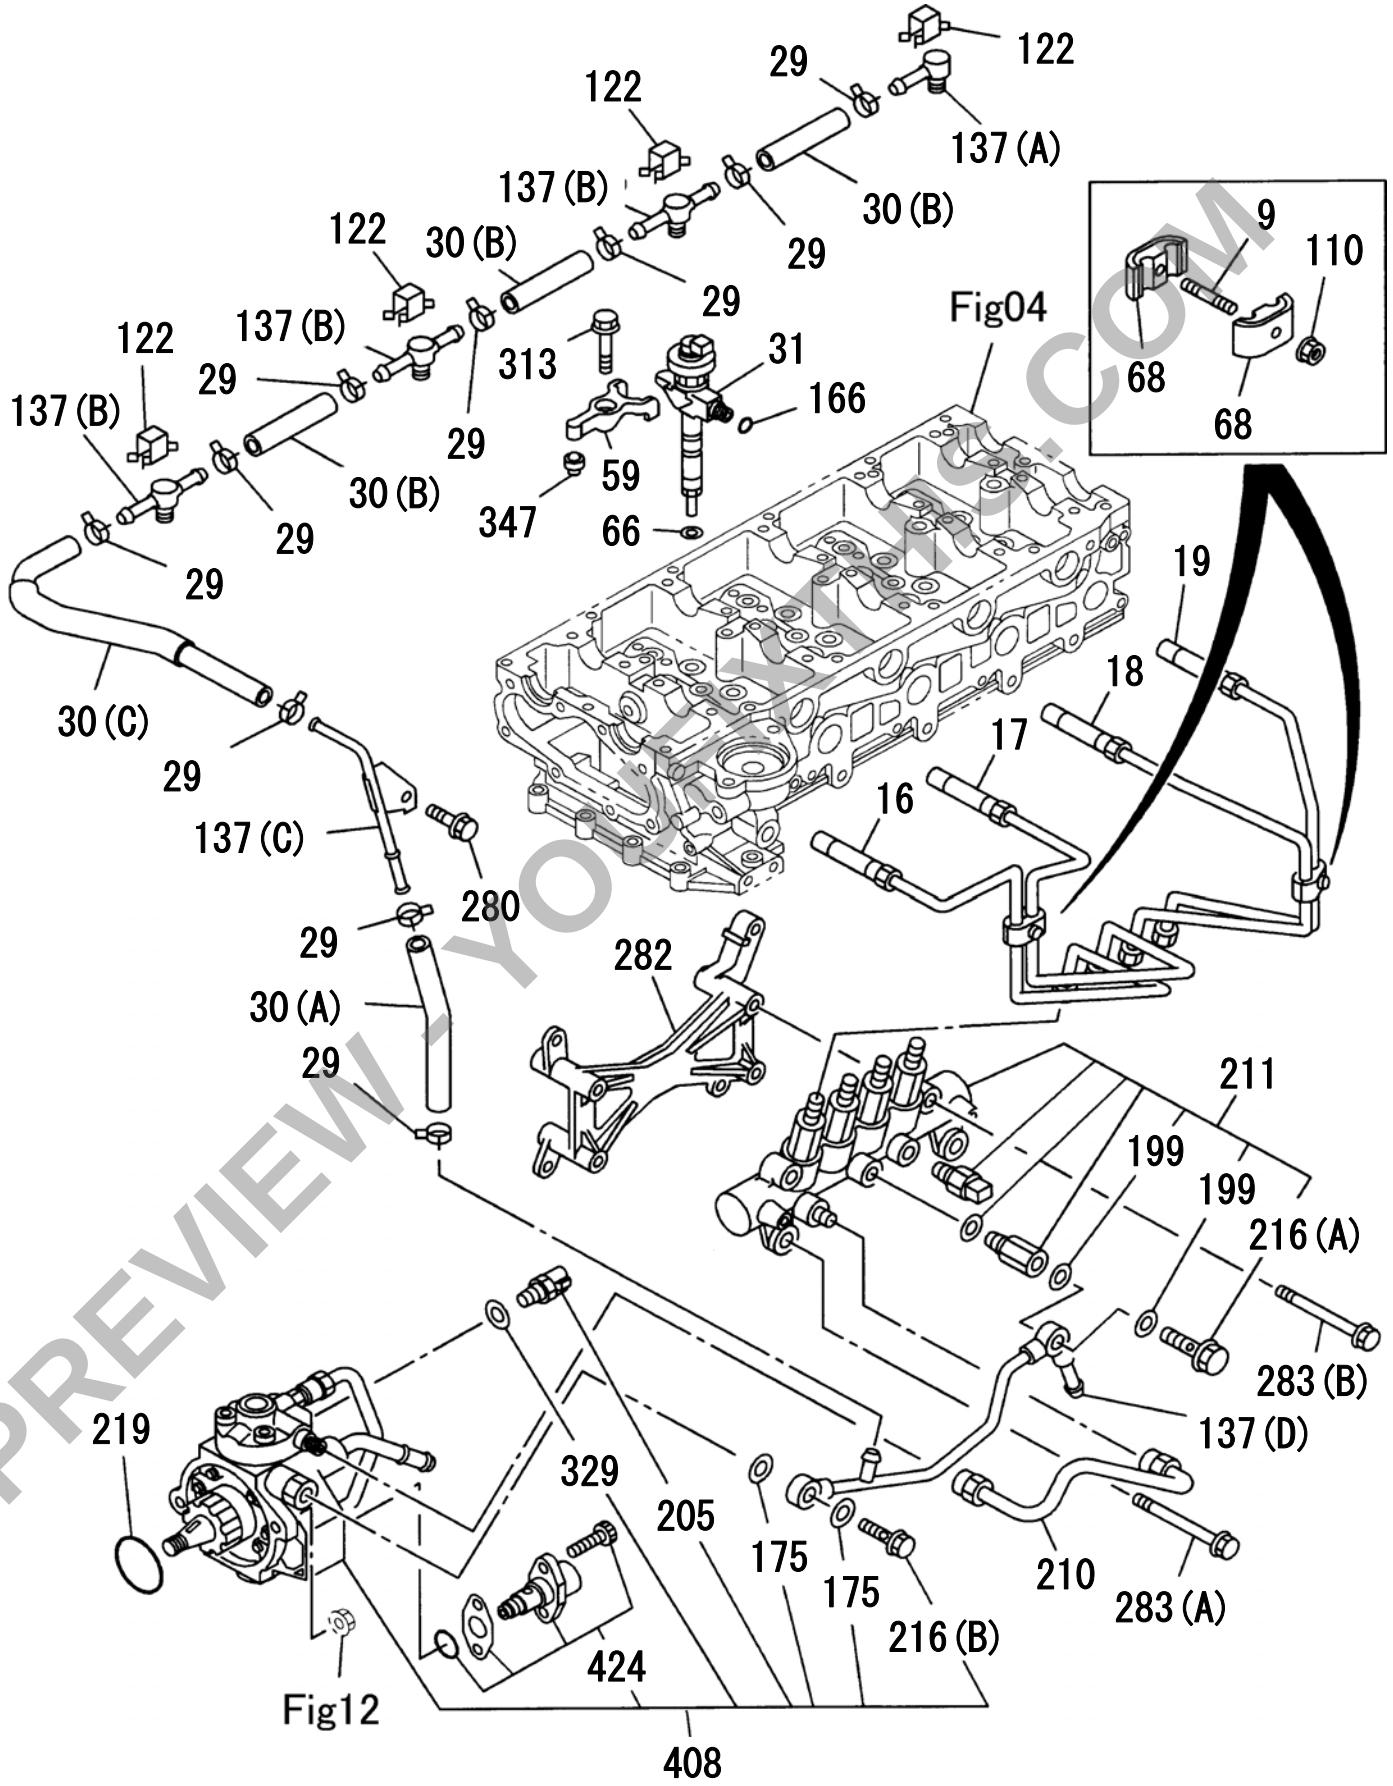

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

How to read this Parts Catalog.

1. Parts mentioned in this Parts Catalog may not necessarily be standard equipping parts.
2. Parts change may be made without prior notice.
3. Form of this Parts Catalog.

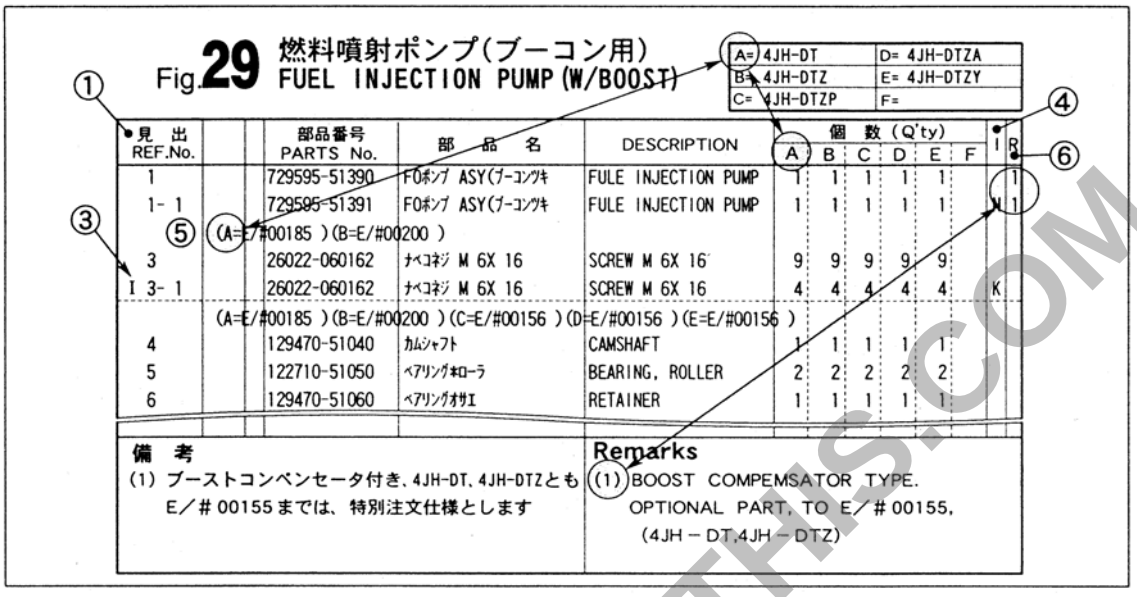


Fig.29 燃料噴射ポンプ(ブーコン用)
FUEL INJECTION PUMP (W/BOOST)

A=	4JH-DT	D=	4JH-DTZA
B=	4JH-DTZ	E=	4JH-DTZY
C=	4JH-DTZP	F=	

見出 REF.No.		部品番号 PARTS No.	部品名	DESCRIPTION	個数 (Q'ty) A	B	C	D	E	F	I	R
1		729595-51390	FOポンプ ASY(ブーコンツキ	FULE INJECTION PUMP	1	1	1	1	1			1
1- 1		729595-51391	FOポンプ ASY(ブーコンツキ	FULE INJECTION PUMP	1	1	1	1	1		I	1
	⑤	(A=E/#00185)(B=E/#00200)										
3		26022-060162	ナベコネジ M 6X 16	SCREW M 6X 16	9	9	9	9	9			
I 3- 1		26022-060162	ナベコネジ M 6X 16	SCREW M 6X 16	4	4	4	4	4		K	
		(A=E/#00185)(B=E/#00200)(C=E/#00156)(D=E/#00156)(E=E/#00156)										
4		129470-51040	カムシャフト	CAMSHAFT	1	1	1	1	1			
5		122710-51050	ベアリングキローラ	BEARING, ROLLER	2	2	2	2	2			
6		129470-51060	ベアリングオサエ	RETAINER	1	1	1	1	1			

備考	Remarks
(1) ブーストコンペンセータ付き、4JH-DT、4JH-DTZとも E／# 00155までは、特別注文仕様とします	(1) BOOST COMPEMSATOR TYPE. OPTIONAL PART, TO E／# 00155, (4JH－DT,4JH－DTZ)

① Ref. No.

The Ref. No. in the list may not be accord with the Ref. No. on illustration.

(Ex.) Illustration No. 1 — List head No. 1 (Befor change) ⟶ 1 [－1] (After change)

When interchangeable symbol N, R, and K, illustrations for new parts are sometimes omitted.

③ Change Mark

Change Mark "I" is given to the part for which a desigh change was made at this time.
The design change was not shown in the last published Parts Catalog.

④ Interchangeability Mark

In the case where a part change took place,one of the following interchangeability marks is indicated for that part.

Symbol	interchangeability	Contents note
N	Old ⟵⊘ ⟶ New	New Part is interchangeable for Old Part but not interchangeable conversely.
Q	Old ⟵ ⟶⊘ New	New Part is not interchangeable for Old Part but interchangeable conversely.
R	Old ⟵⊘ ⟶⊘ New	New Part is interchangeable for Old Part and vice versa.
S	Old ⟵ ⟶ New	New Part is not interchangeable for Old Part and vice versa.
W		Part newly added.
Z		Part discontinued.
F		Not interchangeable single part but interchangeable by set of the related parts.
K		Changed only in quantity used.

⑤ Effective Machine No.

When a part is changed,Effective Machine No. of a Model for which the part is applicable is indication in each column of (A)- (F).

Product Symbol	Product No.	Product Symbol	Product No.
C	Clutch No. Compressor No.	M	Machine No.
D	Drive No.	T	Tractor No.
E	Engine No.	Note1) ※	Date

Note1) Date may follow the symbol in some cases. (Ex.) ※ 1996.01
Note2) As far as engine models shown by "XXX" are concerned, the modification of the parts could not be predicted or the engine models themselves could not be identified.
Note3) (A=E/#00185) means that the design change on the part has been effective for the model at the column (A)(in this case, for 4JH- DT) on and from E/#(Engine Serial Number) 00185.


⑥ Remarks Mark


Figures or alphabets (Symbols) are entered in the remark column.
The comments(remarks)on the pertinent parts are indicated in the lower part of the list by the same symbols as those stated above.


PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

FUEL INJECTION SYSTEM (2/2)

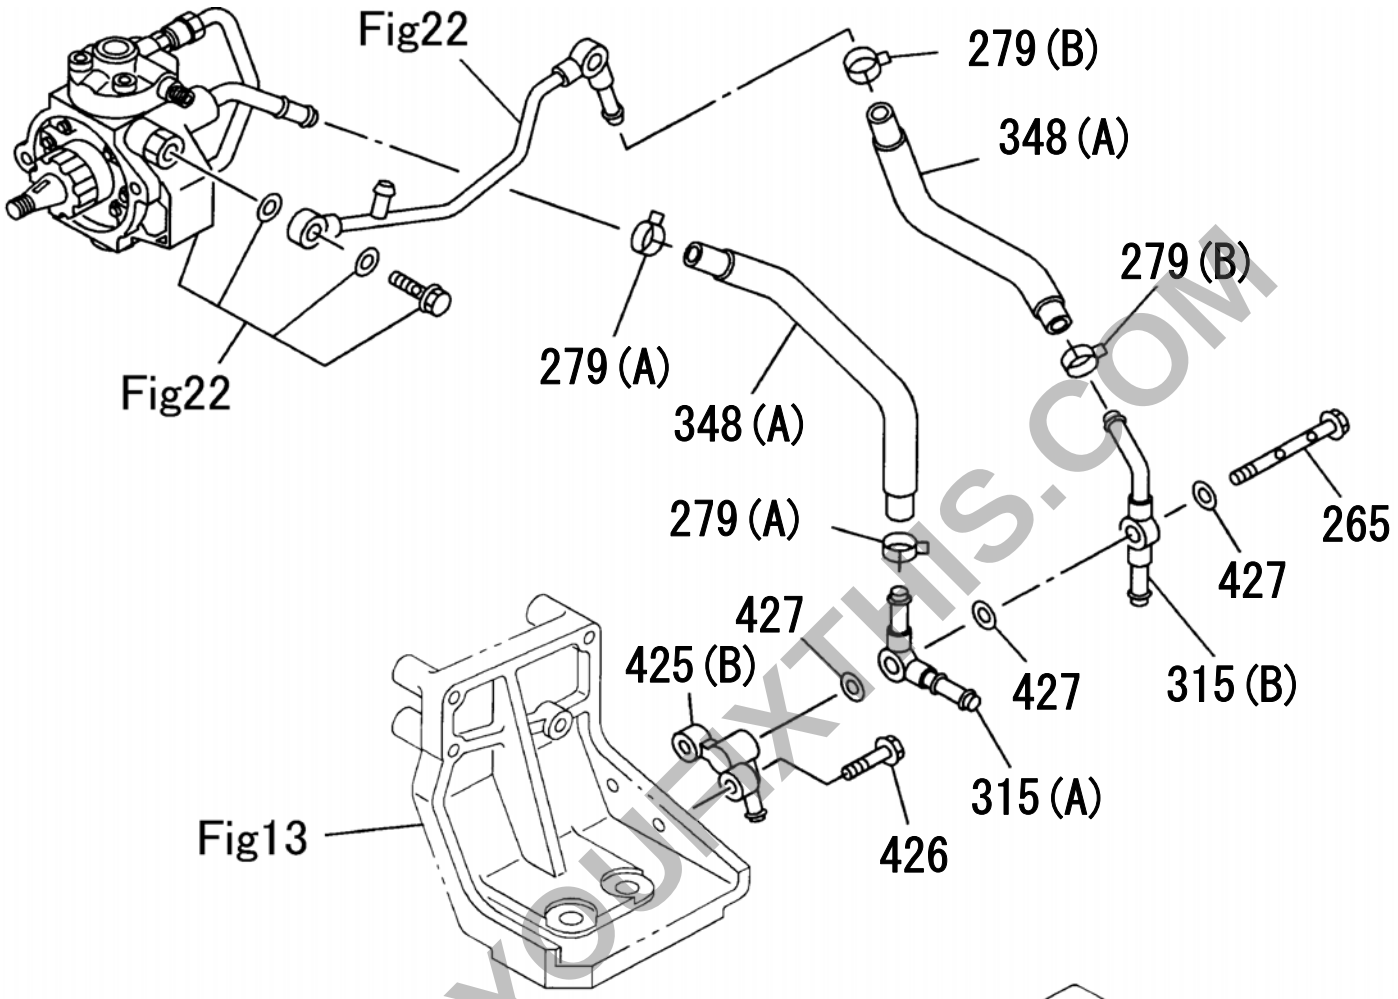

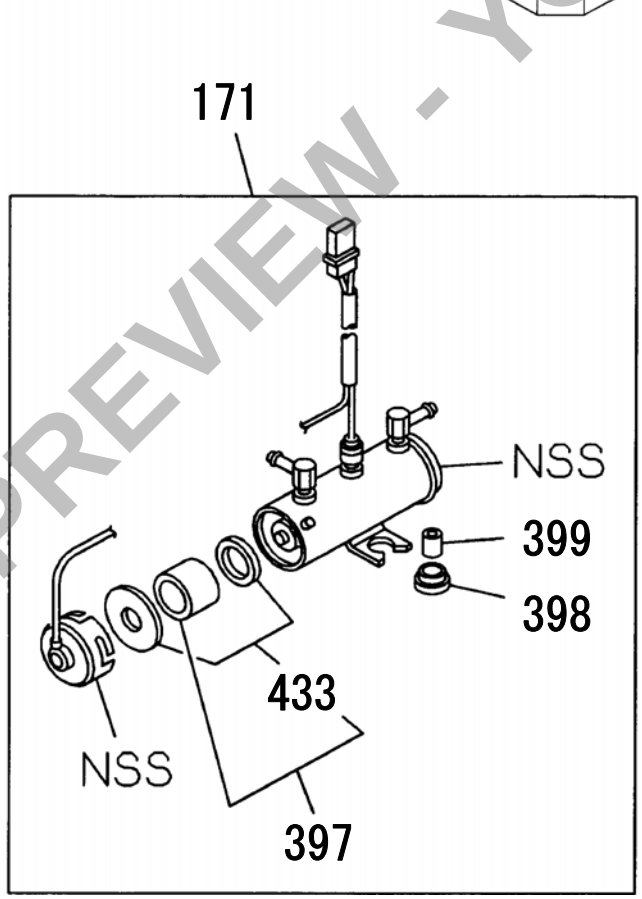

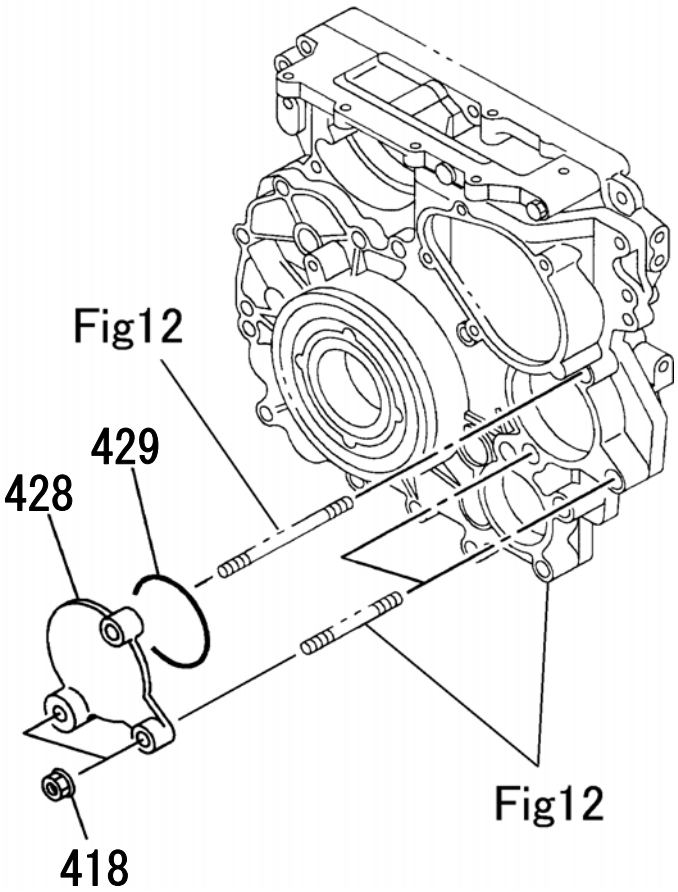

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 7 of 80 pages

The full manual includes:

- All 80 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Isuzu 4JJ1XYSB02 Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual