
Engine
Moteur
Motor

TX1006510 A.1

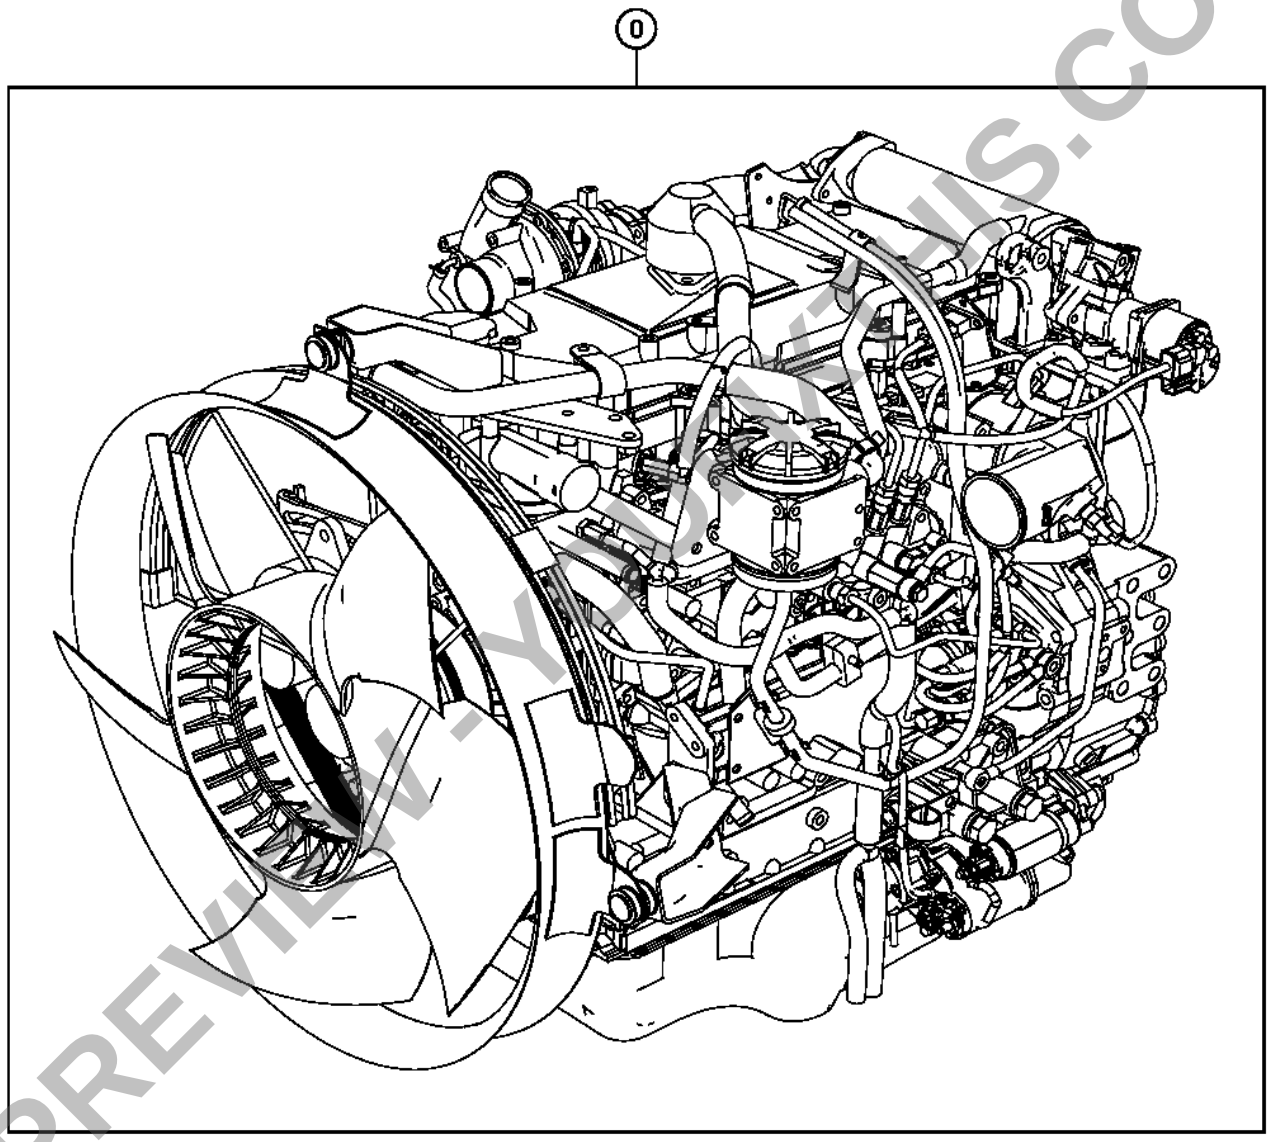


TX1006510

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Suction Lines
Conduites d'aspiration
Líneas de aspiración

TX1016500 A.1

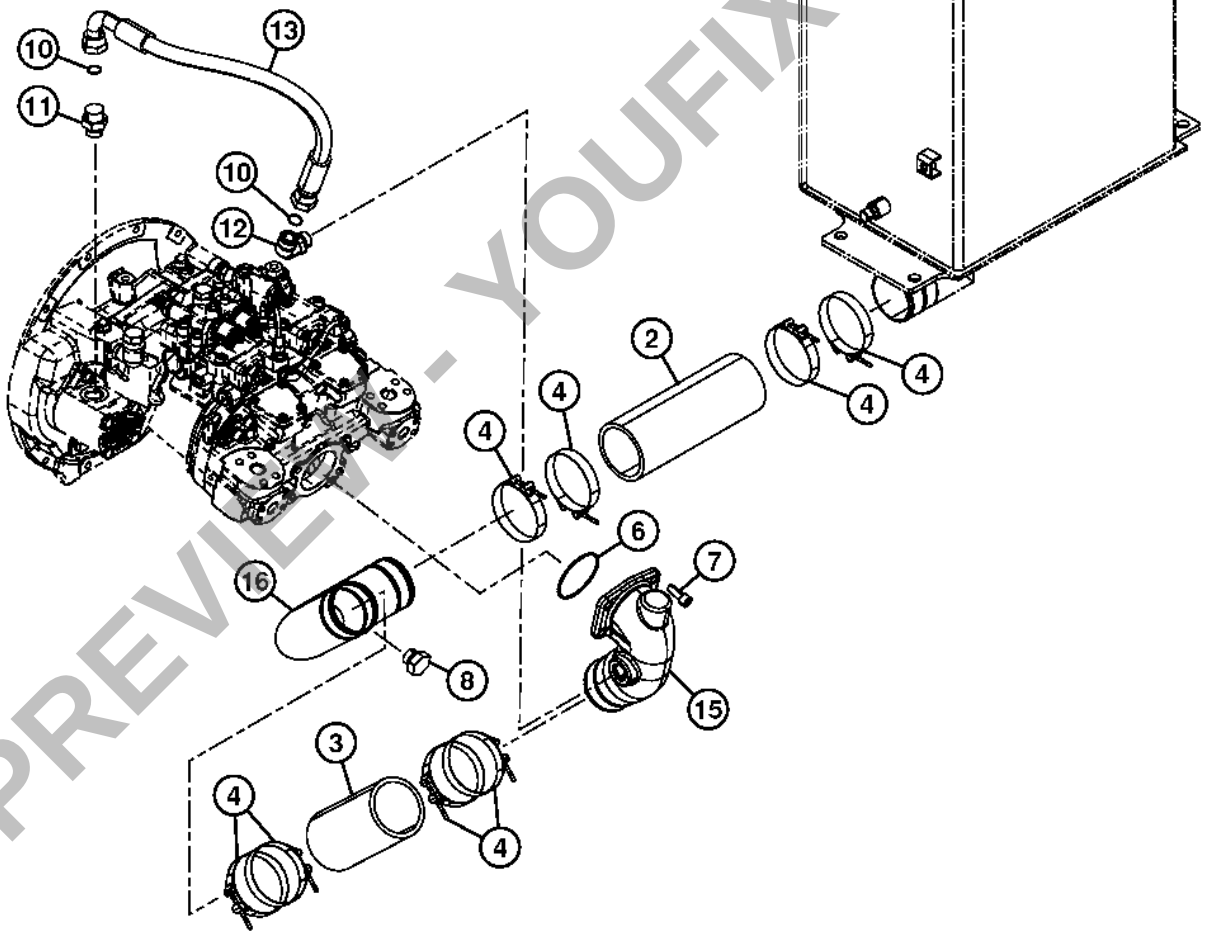


TX1016500

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Cab
Cabine
Cabina

TX1013335 A.1

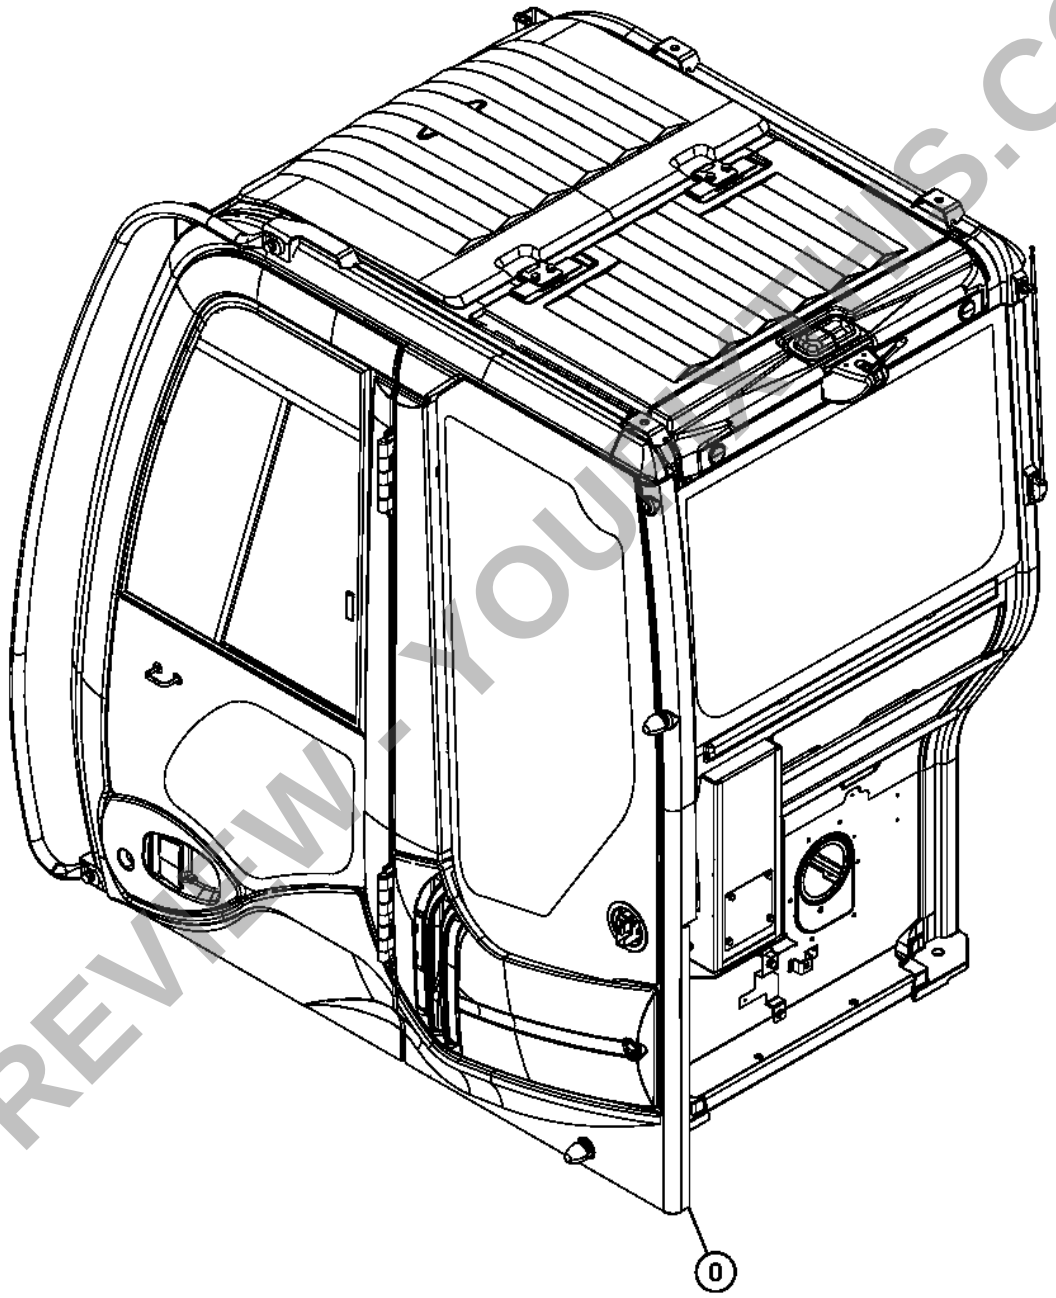


TX1013335

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Track Frame
Bâti de chenille
Bastidor de oruga

TX1031259 A.1

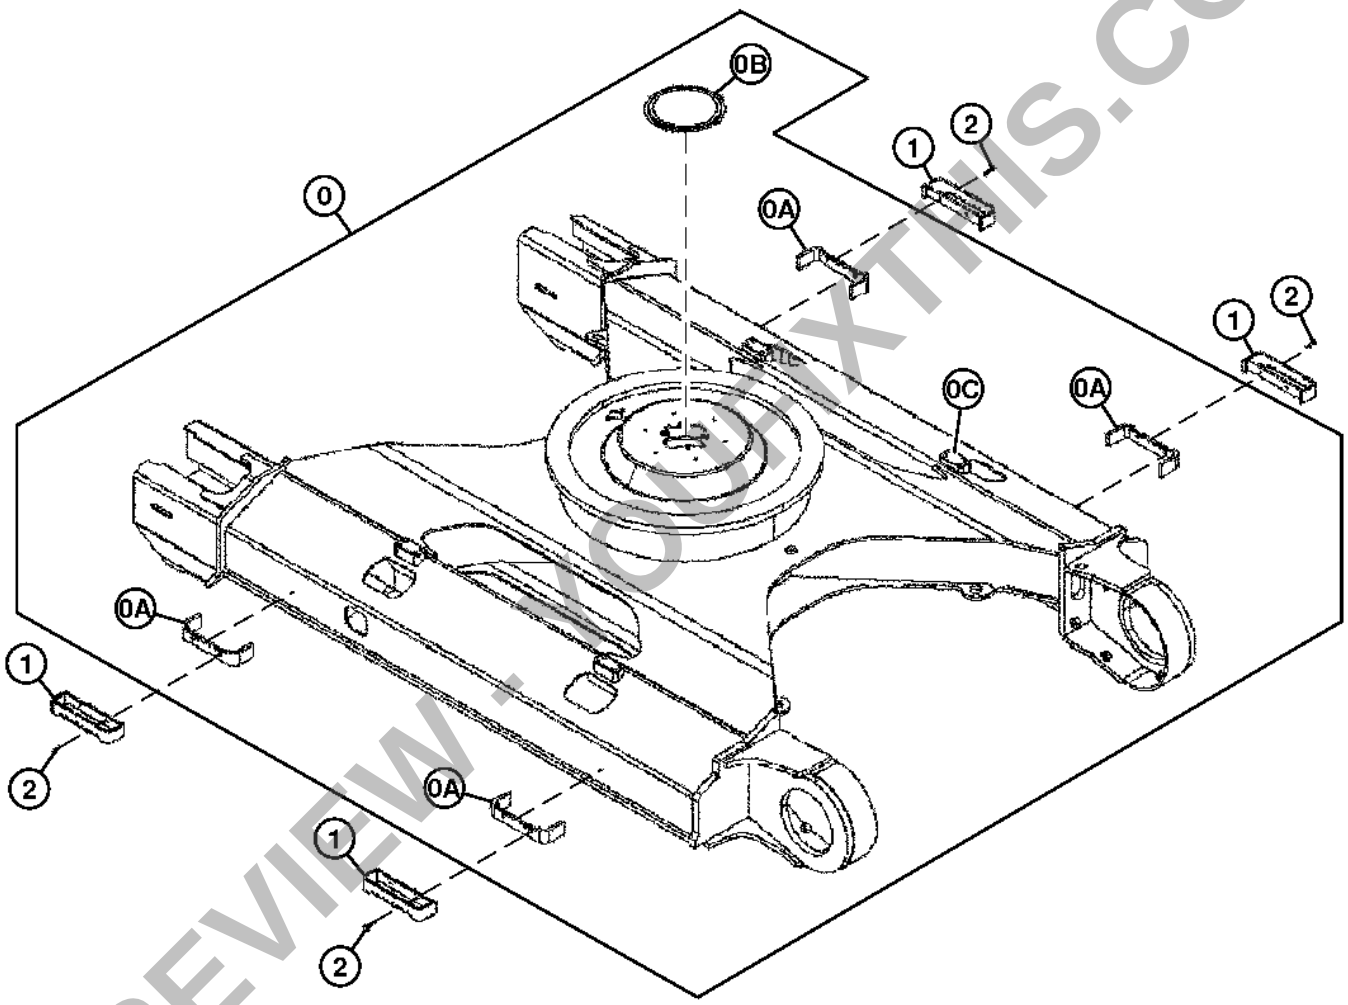


TX1031259

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Standard Arm 2.42m
Bras standard 2,42 m
Brazo estándar de 2,42 m

TX1013294 A.1

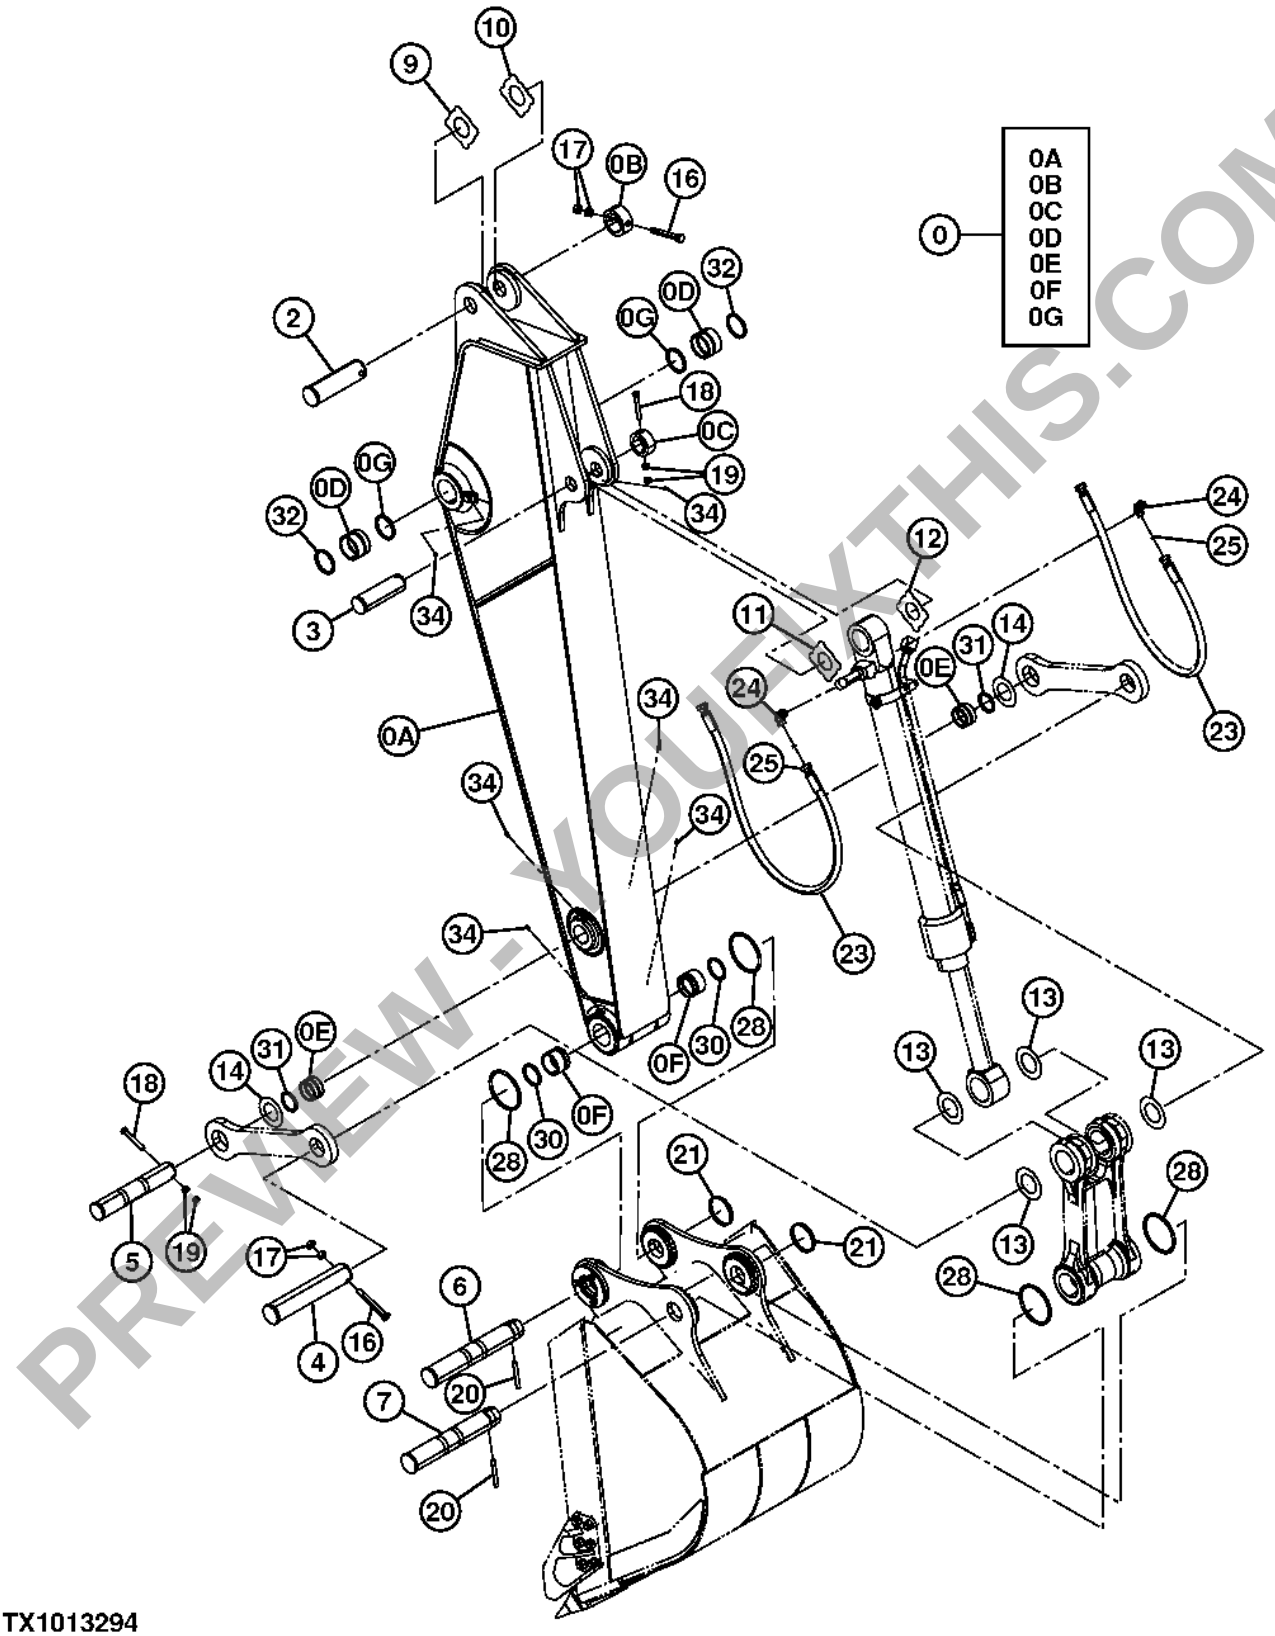

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Table of Contents

01 Wheels & Tires & Tracks
0130 Track Systems 50
02 Axles, Differentials & Suspension Systems
0260 Hydraulic System 68
04 Engine 10016
0400 ENGINE 10016 86
0401 Crankshaft And Main Bearing 10016 88
0402 Crankshaft And Valve Actuating Means 10016 90
0404 Cylinder Block 10016 94
0407 Engine Oiling System 10016 98
0408 Ventilating System 10016 106
0409 Cylinder Head, Valves And Exhaust Valve Brake 10016 110
0410 Exhaust Manifold 10016 116
0413 Fuel Injection System 10016 118
0414 Intake Manifold 10016 124
0416 Turbocharger 10016 126
0417 Water Pump 10016 128
0418 Thermostats, Housing & Water Piping 10016 130
0419 Engine Oil Cooler 10016 134
0420 Fuel Filter 10016 136
0423 Alternator And Generator Mounting 10016 142
0429 Fan Drive (Damper, Idler, Pulleys, & Belt) 10016 144
0432 Finish Assembly, Engine 10016 148
0433 Flywheel, Housing & Fastenings 10016 152
0452 Gasket Replacement Kits 10016 156
05 Engine Auxiliary System
0510 Engine Cooling Systems 160
0520 Intake System 172
0530 External Exhaust Systems 182
0540 Engine Mounting 184
0560 Fuel Supply System 186
13 Miscellaneous Vehicle
1320 Vehicle Finish & Trim 194
1369 Greases, Oils, Fuels & Coolants 200
16 Vehicle Electrical Systems
1671 Batteries, Support & Cables 202
1673 Vehicle Lighting System 204
1674 Wiring Harness And Switches 216
17 Frame Chassis Or Supporting Structure
1740 Frame Installation 234
18 Operator's Station
1810 Operator Enclosure 246
1821 Seat And Seat Belts 296
1830 Heating & Air Conditioning 312
19 Sheet Metal & Styling
1910 Hood Or Engine Enclosure 334
20 Safety, Convenience & Miscellaneous
2001 Radio 362
2002 Mirror 366
2004 Warning Devices 370
26 Global Vehicle Communication
2600 Global Positioning System 376

PREVIEW - YOUFIXTHIS.COM

 Download full manual at youfixthis.com

Alphabetical Index

Page

2 Pump Solenoid Hydraulic Valve ... 490
3.00 in. Seat Belt Kit ... 310

A

ACCESS COVER, ENGINE BOTTOM ... 358
ACCESS COVERS, MACHINE BOTTOM ... 358
ACCESS DOOR, ENGINE ... 356
ACCESS PANELS, KIT ... 360
ACTUATING VALVE COMPONENTS ... 90
Actuator, Air Conditioner / Heater ... 312
Adapter, Battery Post ... 202
Adapter, For Esco Ultralok™ (Hammerless) Teeth ... 400
Adapter, TK225 Series Tooth System ... 396
Adapter, TK350 Series Tooth System ... 398
ADJUSTER, TRACK CHAIN ... 58
AIR BOOST HOSE ... 124
AIR BREATHER, ENGINE VENTILATION SYSTEM ... 106
Air Cleaner ... 172
Air Cleaner Bracket ... 176
Air Cleaner Hoses ... 174
AIR CLEANER INTAKE LINES ... 174
AIR CLEANER SUPPORT ... 176
AIR CONDITIONER ... 312
Air Conditioner / Heater ... 312
Air Conditioner / Heater (Components) ... 314
Air Conditioner / Heater Duct ... 326
AIR CONDITIONER AND HEATER BLOWER MOTOR ... 314
AIR CONDITIONER AND HEATER ELECTRIC MOTOR ... 314
AIR CONDITIONER AND HEATER RELAY ... 314
AIR CONDITIONER AND HEATER SWITCH ... 314
AIR CONDITIONER AND HEATER TRANSISTOR ... 314
AIR CONDITIONER CASE ... 314
AIR CONDITIONER COMPRESSOR ... 320
AIR CONDITIONER COMPRESSOR AND CONDENSER HOSE ... 318
Air Conditioner Compressor and Condenser Hoses ... 318
AIR CONDITIONER COMPRESSOR BELT ... 316
Air Conditioner Compressor, Condenser and Receiver-Dryer ... 320
AIR CONDITIONER CONDENSER ... 320
AIR CONDITIONER EVAPORATOR ... 314
AIR CONDITIONER HOSE ... 316
AIR CONDITIONER RECEIVER-DRYER ... 320
Air Conditioner Refrigerant Hose and Compressor Belt ... 316
AIR CONDITIONER SYSTEM, ENGINE COMPARTMENT ... 316
AIR CONDITIONER/HEATER FILTER ... 326
AIR DUCT, AIR CONDITIONER/HEATER ... 312, 326
AIR DUCT, REAR TRAY ... 328
AIR DUCT, TURBOCHARGER TO AIR CLEANER ... 174
AIR FILTER ... 172
AIR FILTER ELEMENT ... 172
AIR FLOW TUBE, INTERCOOLER ... 164
AIR PRE-CLEANER ... 178
Air Pre-Cleaner Bracket ... 180
AIR SUSPENSION, SEAT ... 296
AIR-SUSPENSION SEAT STAND ... 302
AIRSPRING KIT, SEAT ... 296
ALARM, MOTION ... 372
ALARM, TRAVEL ... 372
ALARM, TRAVEL SWITCH ... 374
ALARM, TRAVEL WARNING ... 224
ALTERNATOR ... 142
Alternator, Alternator, Starting Motor, and Sensors ... 142
Alternator, Starting Motor, and Sensors ... 142
Antenna ... 382
ANTENNA, CAB ... 254
Antenna, Cab Components (Cab Light and Antenna) ... 254
Antenna, JDLink™ (Field Kit) ... 380
Antenna, JDLink™ Modular Telematics Gateway and Satellite Module Controller ... 382
Antenna, JDLink™ MTG Assembly (Field Kit) ... 380
Antenna, JDLink™ Select ... 376
Antenna, JDLink™ Select (GTT) ... 376
Antenna, JDLink™ Ultimate ... 378
Antenna, JDLink™ Ultimate (GTT / MIG) ... 378
ANTI-DRIFT KIT, ARM ... 582
ANTI-DRIFT KIT, BOOM ... 584
Anti-Drift Valve, Boom Components ... 586
ARM ANTI-DRIFT KIT ... 582
ARM AUXILIARY LINES (HIGH FLOW) (2.42M) ... 566, 596
ARM AUXILIARY LINES (HIGH FLOW) (2.91M) ... 568
ARM AUXILIARY LINES (LOW FLOW) (2.91 M) ... 572, 574
Arm Auxiliary Lines, Low Flow (2.42 M) ... 570
Arm Cylinder Components ... 606
Arm Hi-Flow Auxiliary Lines (2.42m) ... 566, 596
Arm Hi-Flow Auxiliary Lines (2.91m) ... 568
ARM IN PRESSURE SENSOR ... 530
Arm Link ... 438
Arm Low Flow Auxiliary Lines (2.42m) ... 570
Arm Low Flow Auxiliary Lines (2.91m) ... 572, 574
ARM REDUCED LEAKAGE VALVE ... 582
Arm Reduced Leakage Valve Kit ... 582
Arm, Camshaft and Valve Actuating Components ... 92
Arm, Locking; Hydraulic Coupler ... 404
Arm, Long Arm 2.91m ... 434
ARM, LONG, 2.91M ... 434
Arm, Rocker Arm Shaft, Camshaft and Valve Actuating Components ... 92
Arm, Rocker Arm, Camshaft and Valve Actuating Components ... 92
ARM, SHORT (2.42M) ... 432
Arm, Standard Arm 2.42m ... 432
ARM, WINDSHIELD WIPER ... 248
Arm, Wiper Arm, Cab Components (Windshield Assembly) ... 248
ARMREST, AIR-SUSPENSION SEAT ... 302
Armrest, Seat Stand (Air Suspension) ... 302
ARMS, ROCKER ... 92
ASHTRAY ... 278
Ashtray, Cab Inside Right Cover ... 278
ASSIST, AUXILIARY HYDRAULIC LINES KIT ... 564
Attaching Pins, Bucket Thumb ... 444
ATTACHING PINS, BUCKET THUMB ... 440, 442
ATTACHMENTS, SWING BEARING ... 244
ATTENUATOR LINES, HYDRAULIC PUMP ... 518
AUXILIARY CONTROL PILOT CONTROLLER GRIP ... 406
AUXILIARY CONTROL SWITCH ... 228
Auxiliary Equipment Hydraulic Hoses and Brackets ... 562
Auxiliary Equipment Hydraulic Hoses and Lines ... 560
AUXILIARY EQUIPMENT HYDRAULIC HOSES AND MOUNTING BRACKET ... 562
Auxiliary Foot Control Solenoid Valve Kit (1 Way) ... 594
AUXILIARY FOOT PEDAL CONTROL ... 418
Auxiliary Foot Pedal Control (Left) ... 420
AUXILIARY FOOT PEDAL CONTROL, LEFT ... 420
Auxiliary Hydraulic Lines On Boom To Cylinders ... 558
AUXILIARY HYDRAULIC LINES ON BOOM TO CYLINDERS ... 552
AUXILIARY LINES, ARM (HIGH FLOW) (2.42M) ... 566, 596
AUXILIARY LINES, ARM (HIGH FLOW) (2.91M) ... 568
AUXILIARY LINES, ARM (LOW FLOW) (2.91 M) ... 572, 574
Auxiliary Lines, Arm, Low Flow (2.42 M) ... 570
Auxiliary Low Flow Control Valve Hydraulic Lines ... 564
AUXILIARY LOW FLOW CONTROL VALVE HYDRAULIC LINES KIT ... 564
AUXILIARY LOW FLOW CONTROL VALVE TO BOOM HYDRAULIC LINES ... 564
AUXILIARY LOW FLOW CONTROL VALVE TO ROTARY MANIFOLD HYDRAULIC LINES ... 564
AUXILIARY LOW FLOW HYDRAULIC LINES KIT ... 574
AUXILIARY LOW FLOW HYDRAULICS CONTROL VALVE ... 564
Auxiliary Travel Pilot Control Valve and Pedals ... 418
AUXILIARY TRAVEL PILOT CONTROL VALVE COMPONENTS ... 422
Axle, Lower Track Chain Roller ... 62
Axle, Lower Track Chain Roller (Replacement) ... 64
Axle, Track Chain Idler ... 56

B

Bar, Cooling Package (- 501154) ... 160
Bar, Cooling Package (501155 -) ... 162
Bar, Open Center 3 Bar Shoe, Track Link Assembly ... 66
Batteries, Support and Cables ... 202
BATTERY ... 202
BATTERY COVER ... 202
Battery Post Adapter ... 202
BATTERY RELAY ... 150, 202
BATTERY RELAY COVER ... 202
BATTERY TERMINAL CLAMP ... 202
Battery, Battery Cable, Batteries, Support and Cables ... 202
Battery, Dry Charged Battery, Batteries, Support and Cables ... 202
Bearing, Carrier Track Roller ... 60
BEARING, LOWER TRACK ROLLER ... 62
BEARING, SWING, ATTACHMENTS ... 244
BEARING, TRACK IDLER ... 56
BEARING,SWING ... 242
BEARINGS, MAIN ... 88
BELT, AIR CONDITIONER COMPRESSOR ... 316
Belt, Belt Set, Seat Belt ... 308
BELT, COOLING FAN ... 144
Belt, Rubber Track Belt, Cab Components (Door Assembly) ... 252

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

To the Customer

The part numbers in this parts catalog were correct at the time your catalog was published. It is our policy to constantly improve our machines, and therefore, part numbers may change. When ordering parts, verify part numbers through your dealer.

SI Units of Measure

Metric dimensions are given, where applicable, throughout this parts catalog.

Bolt and Cap Screw Strength Identification

Bolts and cap screws required to have high-strength qualities equivalent to SAE grade 8 are identified throughout this catalog by the description HS SAE 8 (10.9 for metric). All standard bolts and cap screws are SAE grade 5 (metric 8.8) or lower.

Serial Number Listing Information

Serial number information is listed to show on which machines each part can be used; for example:

	–		**The part can be used on all products.**
000000	–		**The part can be used on products beginning with the serial number listed.**
	–	**000000**	**The part can be used on products up to and including the serial number listed.**
000000	–	**000000**	**The part can be used on products between and including the serial number listed.**

When XXXXXX's are listed in place of a serial number, a serial number change was made, but the exact serial number was not available when the catalog was produced.

If product identification numbers or serial numbers are required for warranty claims or correspondence pertaining to this product, it is extremely important that all characters be furnished. This point cannot be overemphasized.

Direction Arrow

Arrows are used with illustrations to indicate the front of the unit. “Right-Hand” and “Left-Hand” sides are determined by facing in direction of machine forward travel.

Box-enclosed Illustrations

A key number, shown in the parts list, is assigned to a box enclosing all parts sold as a service assembly. A box not keyed includes non-current parts.

Complete Goods Listings

Complete Goods are listed in bold face type. Order separately. Do not include on replacement part order.

Orientation of Engine

“Right Hand” and “Left Hand” sides are determined by standing at the flywheel and facing the engine.

John Deere Reman Components

The service parts listed in this catalog are intended for the repair of original equipment components. Although most service parts may be used to repair remanufactured components, the remanufacturing process may change parts sufficiently so that service parts are inadequate or not usable.

Bucket Teeth

Additional bucket replacement parts can be found in the bucket components catalog. PC 9555 bucket teeth

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Alphabetical Index - Continued

Page

Hydraulic Oil Sampling Decal ... 580
Hydraulic Oil Sampling Kit ... 580
HYDRAULIC OIL TANK AND FILTER ... 598
HYDRAULIC OIL TANK FILTER ... 598
HYDRAULIC OIL TANK SIGHT GAUGE ... 598
HYDRAULIC OIL TANK TO CONTROL VALVE PILOT HYDRAULIC LINES ... 544, 546
HYDRAULIC PILOT CONTROL VALVE ... 418
HYDRAULIC PILOT LINE (PILOT SIGNAL MANIFOLD TO SWING MOTOR) ... 528
HYDRAULIC PILOT LINE (SOLENOID VALVE TO ROTARY MANIFOLD) ... 526
HYDRAULIC PILOT LINES (CONTROL VALVE BOTTOM TO PILOT SIGNAL MANIFOLD) ... 534
HYDRAULIC PILOT PUMP ... 460
HYDRAULIC PUMP 1 REGULATOR ... 454
Hydraulic Pump and Engine Compartment Door Latch ... 354
HYDRAULIC PUMP AND ENGINE COMPARTMENT DOOR LATCH (COMPONENTS) ... 354
Hydraulic Pump Attenuator Hoses ... 518
HYDRAULIC PUMP ATTENUATOR LINES ... 518
Hydraulic Pump Compartment Door ... 352
HYDRAULIC PUMP COMPARTMENT DOOR LATCH ... 352
Hydraulic Pump Components ... 450
HYDRAULIC PUMP FLEX COUPLING ... 450
HYDRAULIC PUMP HOUSING ... 452
HYDRAULIC PUMP LINES TO CONTROL VALVE ... 502
HYDRAULIC PUMP LINES TO OIL FILTER ... 520
HYDRAULIC PUMP LINES TO OIL TANK ... 500
HYDRAULIC PUMP LINES TO PILOT FILTER ... 524
Hydraulic Pump Mounting ... 448
Hydraulic Pump Regulator (1) ... 454
Hydraulic Pump Regulator (2) ... 456
Hydraulic Pump Rotating Group ... 452
HYDRAULIC PUMP SEAL KIT ... 450
HYDRAULIC PUMP SENSOR ... 452
HYDRAULIC SHUTOFF VALVE, PILOT ... 496
Hydraulic Thumb Kit Cylinder Components (Kits Built 28 June 2010 -) ... 610
Hydraulic Thumb Kit, Direct ... 444
HYDRAULIC THUMB KIT, DIRECT ... 442
HYDRAULIC THUMB KIT, PROGRESSIVE ... 440
Hydraulic Thumb, Direct ... 444
HYDRAULIC/PILOT CONTROL VALVE COMPONENTS ... 414
HYDRAULIC/TRAVEL PILOT CONTROL VALVE COMPONENTS ... 416

I

IDLE GEAR ... 90
IDLE GEAR COVER ... 90
IDLER PULLEY ... 144
IDLER PULLEY, AIR CONDITIONER COMPRESSOR ... 316
IDLER, TRACK CHAIN ... 56
Idler, Track Chain Idler ... 56
Idler, Track Idler, Track Chain Idler ... 56
IGNITION KEY SWITCH DECAL ... 276
IGNITION SWITCH ... 222
Indicator, Air Cleaner ... 172
INDICATOR, HYDRAULIC FILTER RESTRICTION; KIT ... 600
INJECTION NOZZLE BRACKET ... 118
INJECTION PUMP ... 118
INJECTION PUMP DRIVESHAFT KEY ... 122
Injection Pump Fuel Temperature Sensor ... 122
INJECTION PUMP GEAR ... 122
Injection Pump Valve ... 122
INJECTION PUMP, FUEL ... 122
INJECTION SYSTEM, FUEL ... 122
INJECTION, FUEL ... 118
Injector Injection nozzle, Injection Nozzle, Fuel Injection System (1 of 3) ... 118
Injector Injection nozzle, Nozzle, Cab Components (Cab Light and Antenna) ... 254
INJECTOR, FUEL ... 118
INLET COVER ... 124
INLET VALVE ... 90
INLET VALVE INSERT, CYLINDER HEAD ... 114
INLET VALVES, ENGINE ... 92
INSERTS, VALVE SEAT, CYLINDER HEAD ... 114
Instrument panel Control Panel, Console, Console ... 274
Instrument panel Control Panel, Control Console, JDLink™ Select ... 376
Instrument panel Control Panel, Control Console, JDLink™ Ultimate ... 378

Page

Insulator, Air Conditioner / Heater (Components) ... 314
Intake Manifold ... 124
INTAKE MANIFOLD COMPONENTS ... 124
INTAKE VALVE INSERT, CYLINDER HEAD ... 114
Intercooler (- 501154) ... 160
INTERCOOLER (SN 501155-) (501155 -) ... 162
INTERCOOLER TUBE, TURBO ... 164
Intercooler Tubes ... 164
Intercooler, Cooling Package (- 501154) ... 160
Intercooler, Cooling Package (501155 -) ... 162
Isolator, Air Conditioner / Heater ... 312
Isolator, Air Conditioner / Heater (Components) ... 314
Isolator, Boom Cylinder Lines ... 510
Isolator, Bottom Access Covers ... 358
Isolator, Cab Components (Brackets, Bushings and Stoppers) ... 258
Isolator, Cab Components (Door Assembly) ... 252
Isolator, Cab Components (Glass and Door) ... 256
Isolator, Cab Components (Handrail, Guard Bars) ... 250
Isolator, Cab Components (Windshield Assembly) ... 248
Isolator, Cab Console Wiring Harness ... 222
Isolator, Cab Floor (Seat Base) ... 272
Isolator, Cab Mounts ... 264
Isolator, Cab Wiring Harness (Mounting) ... 226
Isolator, Control Valve Door (Units Built Before November 2006) ... 336
Isolator, Control Valve Door (Units Built November 2006 and After) ... 338
Isolator, Cooling Package (- 501154) ... 160
Isolator, Cooling Package (501155 -) ... 162
Isolator, Cooling Package Compartment Door ... 348
Isolator, Cooling Package Compartment Panels ... 344
Isolator, Counterweight ... 238
Isolator, Cover (Control Valve) ... 340
Isolator, Cylinder Head Covers and Gaskets ... 110
Isolator, Delivery Lines ... 502
Isolator, Engine Compartment Cover and Door ... 356
Isolator, Engine Mounting ... 184
Isolator, Fan Shroud ... 146
Isolator, Front Headlights Wiring Harness (2 Lights) ... 204
Isolator, Front Lines (Arm and Bucket Cylinder) ... 512
Isolator, Heavy Duty Bottom Covers Kit ... 360
Isolator, Hydraulic Pump Compartment Door ... 352
Isolator, Main Frame ... 234
Isolator, Pilot Control Lever Wiring Harnesses and Relays ... 228
Isolator, Pilot Shutoff Lever ... 412
Isolator, Radiator Cover ... 168
Isolator, Radiator Hoses and Fan Shroud ... 166
Isolator, Rear Headlights, Wiring Harness and Switch ... 212
Isolator, Seat Belt ... 308
Isolator, Seat Heater Components (1 of 2) ... 304
Isolator, Seat Heater Components (2 of 2) ... 306
Isolator, Seat Stand (Air Suspension) ... 302
ISOLATORS, CAB ... 264
ISOLATORS, COUNTERWEIGHT ... 238

J

JDLink™ Controller, Select (GTT) ... 376
JDLink™ Controller, Ultimate (GTT / MIG) ... 378
JDLink™ Modular Telematics Gateway ... 382
JDLink™ Modular Telematics Gateway and Satellite Module Controller ... 382
JDLink™ MTG Assembly (Field Kit) ... 380
JDLink™ Satellite Module ... 382
JDLink™ Select ... 376
JDLink™ Ultimate ... 378
JDLink™ Vehicle Integration (MTG) (Field Kit) ... 380
Jet, Cylinder Block (Components) ... 94
JETS, PISTON COOLING, CYLINDER BLOCK ... 94
JOYSTICK ... 406

K

Key, Cab Console Wiring Harness ... 222
KEY, CAB DOOR ... 252
Key, Cooling Package Compartment Latch ... 350
Key, Fuel Tank and Mounting ... 186
Key, Gear Pump Assembly Components ... 458
Key, Hydraulic Pump and Engine Compartment Door Latch ... 354
KEY, INJECTION PUMP DRIVE SHAFT ... 122
Key, Pilot Pump Components ... 460
Key, Shaft Key, Fuel Injection System (3 of 3) ... 122
KIT, 3.00 INCH SEAT BELT ... 310

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Key	Part No.	Part Name	Qty.	Serial No.	Remarks
0	9258325	Hydraulic Motor	1		NLA, ORDER PG200139
	PG200139	Hydraulic Motor Reman	1		REMAN FOR 9258325, SUB FOR 9257254
0A	.....	Housing	1		1031123 NLA
1	4613831	Seal	1		
3	4601724	Piston	1		
7	2049166	Universal Driveshaft	1		
8	40M7047	Snap Ring	1		SUB FOR 959499
9	4600108	Pin	2		
10	TH4600133	Roller	1		SUB FOR 4600133
14	8099321	Piston	9		
16	3081570	Retainer	1		
17	4397757	Bushing	1		
18	2050565	Swash Plate	1		
19	4396747	Spring	6		
21	2051451	Rotor	1		
22	FYB00002175	Plate	4		3081593 NLA, ALSO ORDER FYB00002174
23	FYB00002174	Plate	4		3081592 NLA, ALSO ORDER FYB00002175
25	3081595	Piston	1		
26	4396775	O-Ring	1		
28	4396774	O-Ring	1		
29	3081594	Spring	1		
30	4420958	O-Ring	1		
31	T111819	O-Ring	2		SUB FOR 4506415
32	9260003	Valve	1		Components On Another Page, SUB FOR 9247662
33	4631910	Needle Bearing	1		
37	4630921	Dowel Pin	2		
39	3106481	Plate	1		
40	M341850	Bolt	9		

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Key	Part No.	Part Name	Qty.	Engine Serial No.	Remarks
1	8973628422	Valve Cover	1		SUB FOR 8973628421
4	8943997230	Filler Cap	1		
5	8943996890	O-Ring	1		
43	8943956840	Isolator	11		
69	8973313591	Gasket	1		
72	8943926550	Plate	1		
79	0286808350	Bolt	2		M8 X 35, SUB FOR 0286508350
80	1090440721	Bolt	7		M8 X 65
82	8943996050	Plug	2		
94	9038004080	Screw	6		
95	0911801080	Nut	2		M8, SUB FOR 8940120390

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Key	Part No.	Part Name	Qty.	Engine Serial No.	Remarks
4	8983578410	Bracket	1		SUB FOR 8973716540
5	8973628212	Bracket	1		SUB FOR 8973628211
6	8980120093	Shield	1		SUB FOR 8980120092 OR 8980120091
17	1093370170	Isolator	6		
19	8973759110	Bracket	3		
20	1215594510	Bracket	1		
21	0286510200	Bolt	6		SUB FOR 0286810200
22	.....	Bolt	2		0280810200 NLA
23	4447334	Bolt	2		
35	0280510450	Bolt	3		SUB FOR 0280810450
36	8973711061	Shroud	1		SUB FOR 8973711060
74	0916147100	Washer	6		SUB FOR 9091647100
93	0280558110	Bolt	4		SUB FOR 0280858110
94	0280808600	Bolt	1		
95	0281560130	Bolt	1		SUB FOR 0281860130
97	8982266410	Spacer	3		SUB FOR 1225592260

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Key	Part No.	Part Name	Qty.	Serial No.	Remarks
0	4625214	Muffler	1		
2	4615544	Bolt	2		
3	14M7274	Nut	8		M10, (SUB FOR J950010)
4	7047254	Bracket	1		
6	4418329	Gasket	1		
7	8098300	Muffler Extension	1		
8	E64256	Lock Nut	4		M8, (SUB FOR 4252898)
9	4190587	Clamp	1		
9A	T130341	Gasket	1		(SUB FOR 4162835)
9B	H80440	Lock Nut	2		(SUB FOR 4162837)
9C	4162836	Bolt	2		
11	4297136	Tube	1		(SUB FOR 4435717 OR 4277931)
12	TY22462	Clamp	1		(SUB FOR 4396451 OR AR48236)
14	4652143	Bushing	1		
19	4190275	Clamp	1		(SUB FOR 4344303)
20	.....	Screw With Washer	1		(J271020 NLA)
	19M7938	Cap Screw	1		M10 X 20, (SUB FOR J901020)
	24M7346	Washer	1		11 X 20 X 2 mm, (SUB FOR J222010)

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


Key	Part No.	Part Name	Qty.	Serial No.	Remarks
1	0005565	Wiring Harness	1	-501136	
	0006004	Wiring Harness	1	501137-	
1A	4423418	Fuse	1		Fusible Link
1B	4315323	Fuse	1		Fusible Link
1C	4681838	Wiring Harness	1		
2	14M7274	Nut	4		M10, SUB FOR J950010
4	24M7028	Washer	4		10.500 X 20 X 2 mm, SUB FOR A590110
5	4055311	Clip	12	-501136	
	4055311	Clip	13	-501137	
6	4055312	Clip	4		
8	XCL-19	Hose Clamp	3		SUB FOR 4192035
9	4449250	Clip	6	-501136	
	4449250	Clip	5	501137-	
11	T78787	Clamp	3		SUB FOR 4450494
13	4190261	Clip	1		
14	4254600	Clip	7		
15	T28949	Clamp	1		SUB FOR 4190273
16	R72659	Clamp	3	-501136	SUB FOR 4190263
	4190263	Clip	4	501137-	
17	XCL-29	Hose Clamp	1		SUB FOR 4190264
18	1825530391	Relay	1		SUB FOR 4452158, Safety
19	4651943	Sensor	1		Air Temperature Sensor
20	4651944	Sensor	1		Air Pressure Sender
22	.....	Screw With Washer	2		J450520 NLA
	21M7022	Screw	2		M5 X 20
	12M7064	Lock Washer	2		5 mm
23	XCL-29	Hose Clamp	6		SUB FOR 4190291
24	.....	Screw With Washer	1		J260612 NLA
	19M7923	Cap Screw	1		M6 X 12, SUB FOR J900612
	24M7054	Washer	1		6.400 X 12 X 1.600 mm, SUB FOR A590106
25	.....	Screw With Washer	19		J271020 NLA
	19M7938	Cap Screw	19		M10 X 20, SUB FOR J901020
	24M7346	Washer	19		11 X 20 X 2 mm, SUB FOR J222010
26	4418301	Bracket	1		
27	4602634	Bracket	1		SUB FOR 4257159
29	.....	Screw With Washer	3		J260616 NLA
	19M8425	Cap Screw	3		M6 X 16, SUB FOR J900616
	24M7054	Washer	3		6.400 X 12 X 1.600 mm, SUB FOR A590106
30	T28949	Clamp	2		SUB FOR 4190274
31	.....	Screw With Washer	2		J260816 NLA
	19M7932	Cap Screw	2		M8 X 16, SUB FOR J900816
	24M7055	Washer	2		8.400 X 16 X 1.600 mm
32	8110130	Bracket	1		SUB FOR 3106886
34	.....	Screw With Washer	2		J271020 NLA
	19M7938	Cap Screw	2		M10 X 20, SUB FOR J901020
	24M7346	Washer	2		11 X 20 X 2 mm, SUB FOR J222010
36	4602634	Bracket	1		SUB FOR 4257159
37	.....	Screw With Washer	1		J271020 NLA
	19M7938	Cap Screw	1		M10 X 20, SUB FOR J901020
	24M7346	Washer	1		11 X 20 X 2 mm, SUB FOR J222010

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Cab Components (Cab Light and Antenna)
Composants de cabine (éclairage de cabine et antenne)
Componentes de cabina (luz de cabina y antena)

TX1013336 A.1

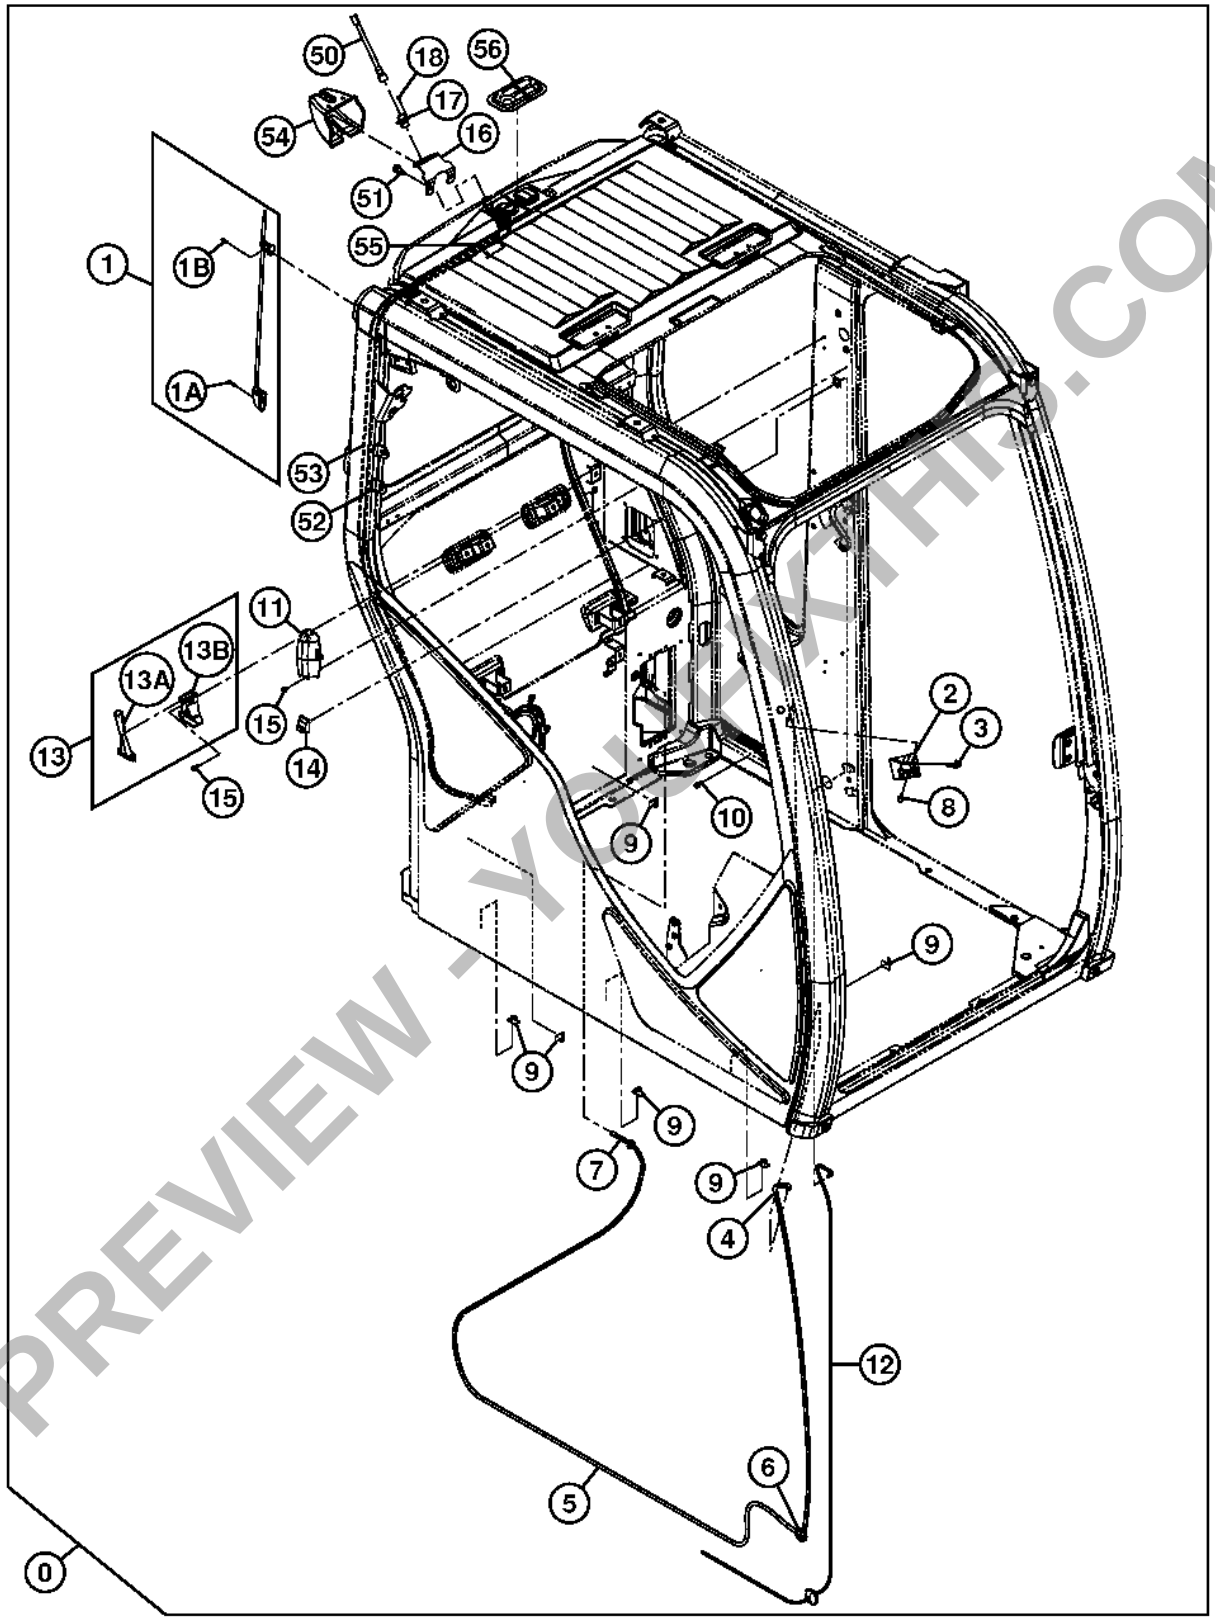

TX1013336

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


Key	Part No.	Part Name	Qty.	Serial No.	Remarks
6	4674436	Guard	1		
10	4655548	Bracket	2		
11	FYA00011364	Bracket	1		4655546 NLA; ALSO ORDER FYA00011365
12	FYA00011365	Bracket	1		4655547 NLA; ALSO ORDER FYA00011364
13	AT340291	Field Installation Kit	1		NLA; WHOLE GOODS, Furnish Components

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Air Conditioner / Heater Duct
Conduit de chauffage/climatiseur
Conducto de acondicionador de aire/calefactor

TX1015839 A.1

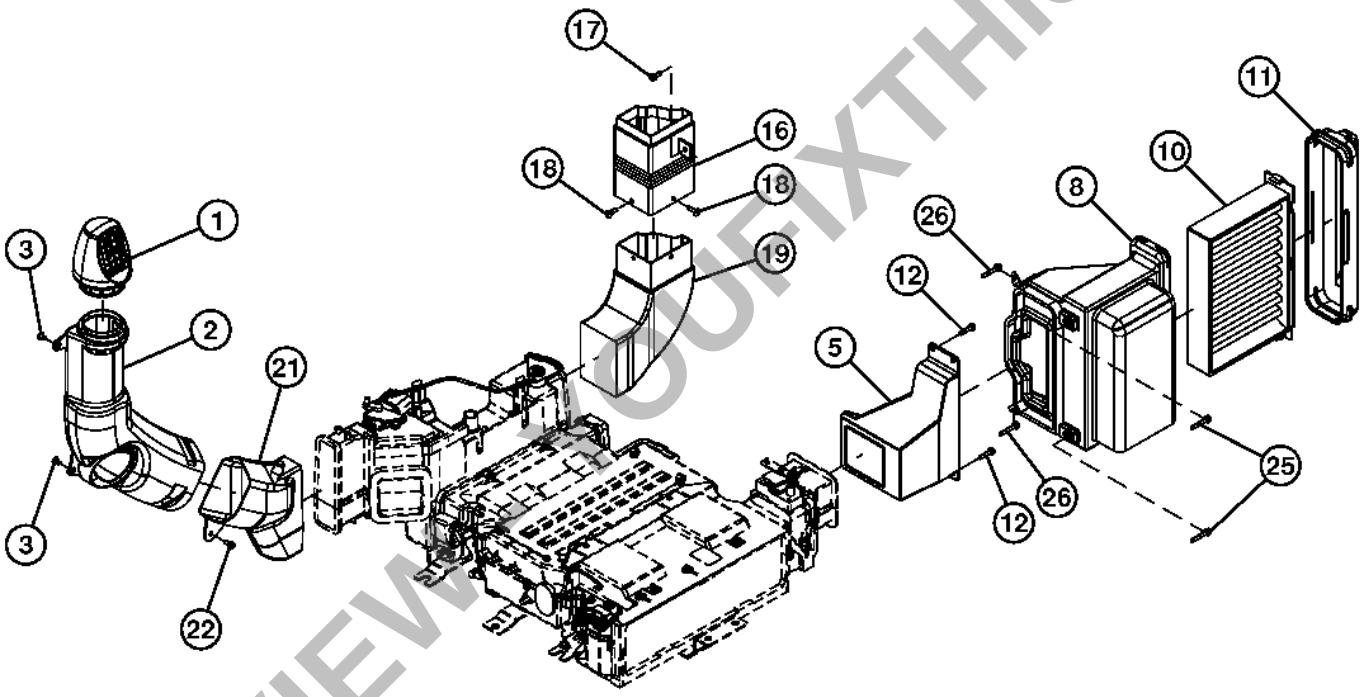


TX1015839

PREVIEW ONLY YOUFIXTHIS.COM

Download full manual at youfixthis.com

Radio
Radio
Radio

T216309 A.1

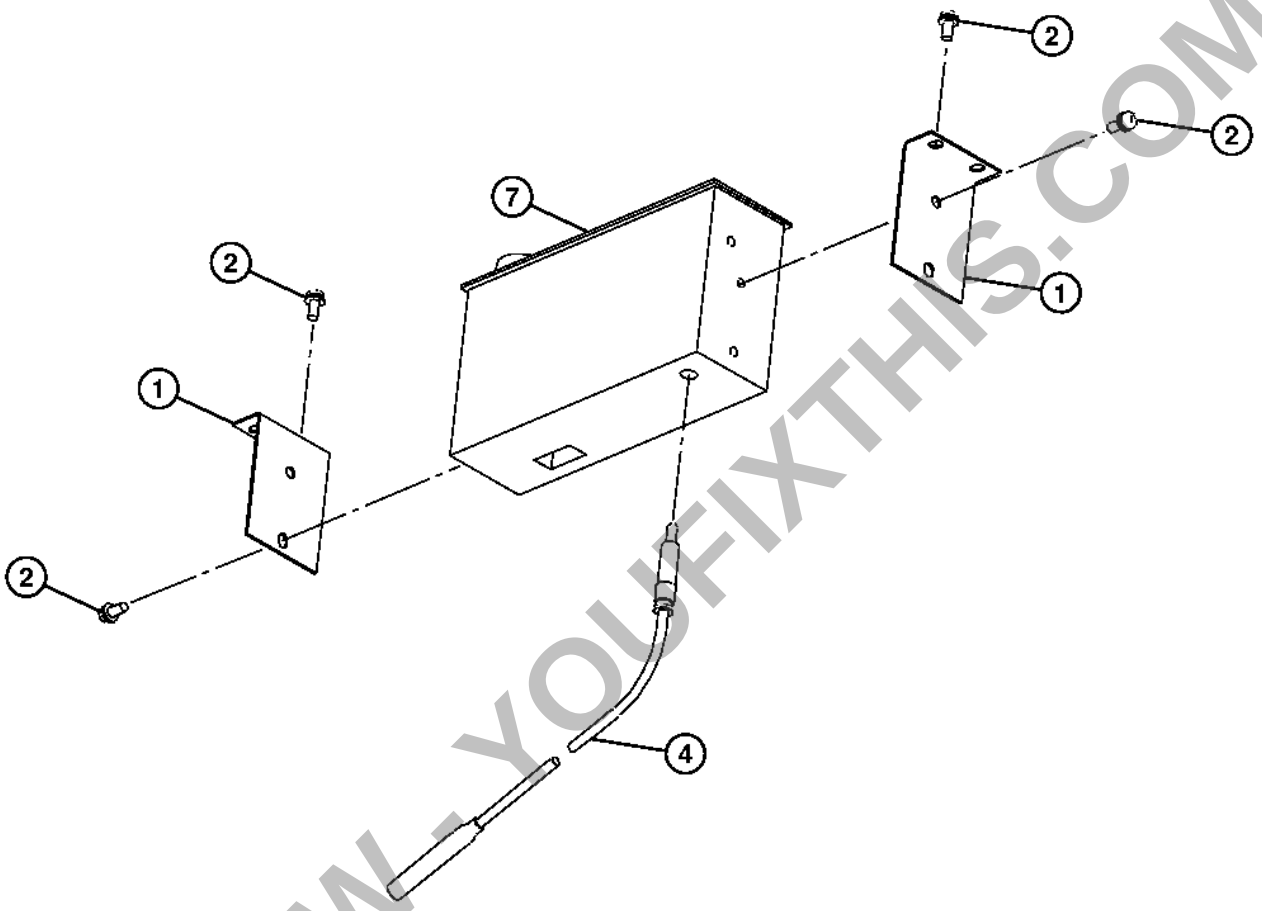


T216309

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

TK350 Series Bucket Tooth System
Système de dent de benne de série TK350
Sistema de dientes de cucharón serie TK350

TX1099539 A.1

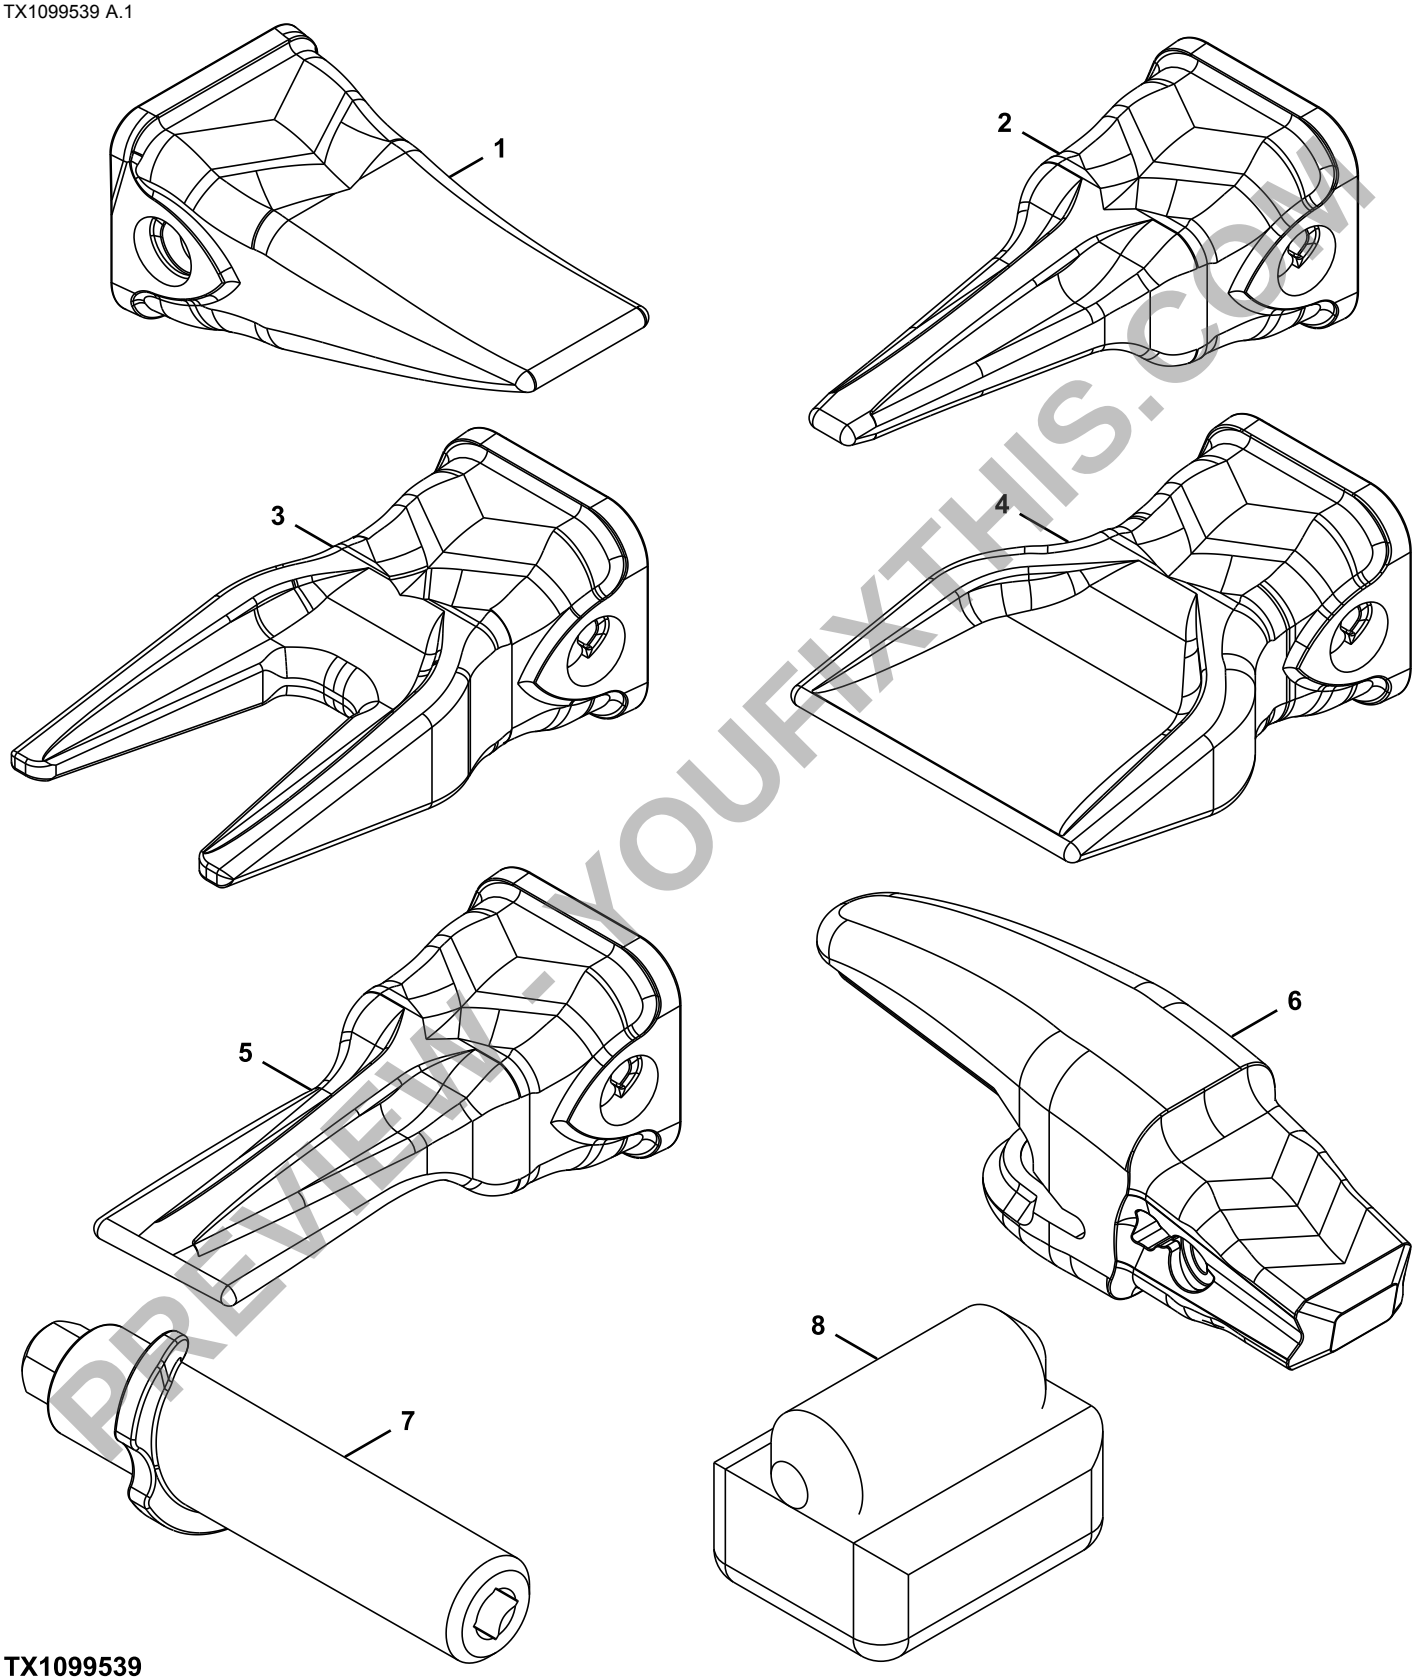


TX1099539

PREVIEW-YOUFIXTHIS.COM

Download full manual at youfixthis.com

Long Arm 2.91m
Bras long 2,91 m
Brazo largo de 2,91 m

TX1013295 A.1

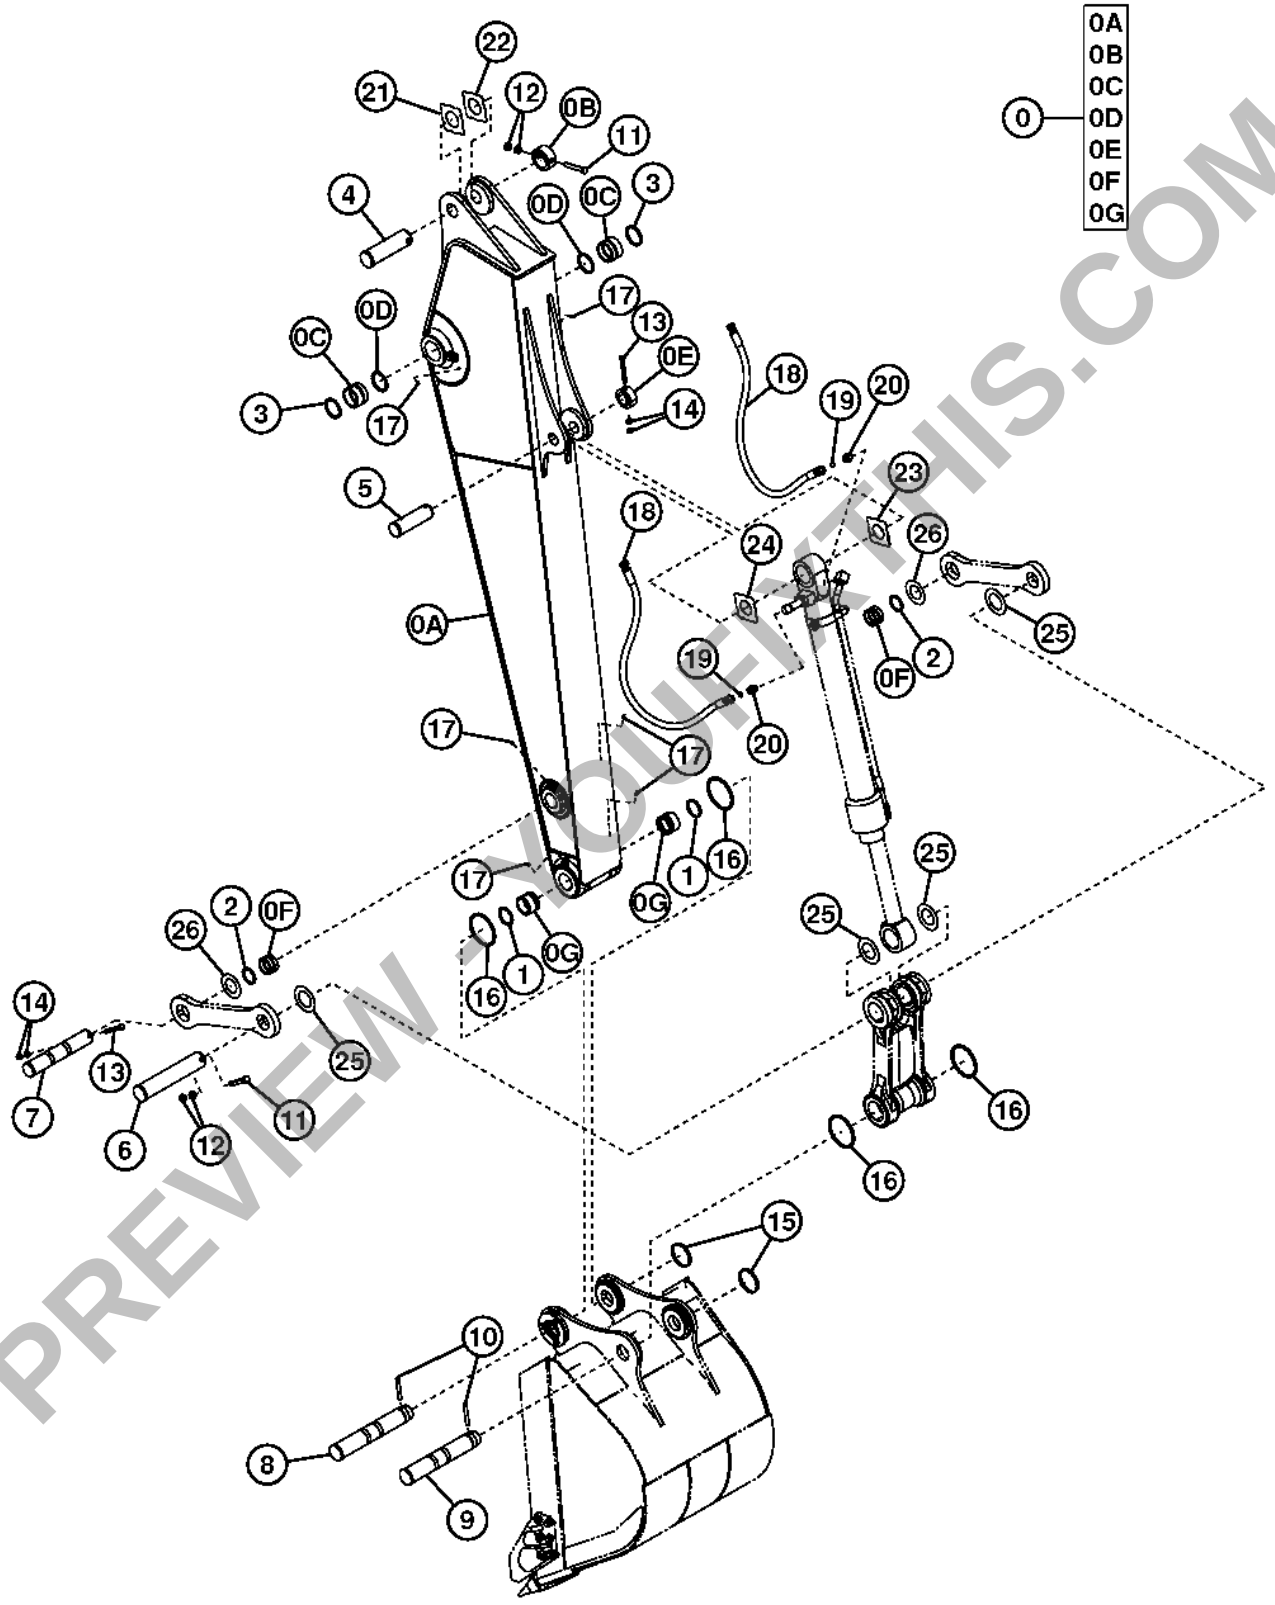

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Key	Part No.	Part Name	Qty.	Serial No.	Remarks
0	4652721	Control Valve	1		(A)
3	0791801	Cap	3		
4	0309731	Fitting Plug	1		
6	A811045R	O-Ring	4		(SUB FOR A811045)
7	CH17886	Packing	2		(SUB FOR 4226446)
14	CH17167	O-Ring	2		(SUB FOR 4506320)
15	.....	Valve Spool	1		
16	0332904	Retainer	2		
17	0735807	Spool	1		
18	0791902	Spring	1		
19	0791803	Cap	1		
21	0977201	Poppet	1		
28	0224422	O-Ring	1		
29	0791816	Cap	1		
30	.....	Valve Spool	1		
31	0976802	Spring	1		
32	0791702	Flange	1		
37	0791603	Poppet	1		
38	0791604	Spring	1		
40	985098	O-Ring	5		
41	4506406	O-Ring	6		
42	0976803	Poppet	1		
43	0791606	Spring	3		
44	0791607	Spacer	1		
47	0976804	Housing	1		
49	0791619	Poppet	1		
50	0791620	Spring	1		
58	0976805	Poppet	1		
59	0977205	Housing	1		
62	0976807	Housing	1		
78	4372039	Pressure Relief Valve	2		
79	0791622	Bolt	12		
80	0695007	Fitting Plug	3		INCLUDES CH11570
	CH11570	O-Ring	3		
82	19M8337	Screw	8		M10 X 30, (SUB FOR 0459541)
83	0413909	Bolt	6		
93	19M8447	Screw	4		M10 X 35, (SUB FOR 0413619)
95	.....	Screw With Washer	2		(0455002 NLA)
	12M7006	Lock Washer	2		6 mm
	19M7603	Screw	2		M6 X 20
	24M7105	Washer	2		6 X 12 X 1.600 mm
97	0413712	Cap	1		

(A) ADDITIONAL COMPONENTS ON SEPARATE PAGES.
AUTRES COMPOSANTS FIGURANT SUR PAGES SEPAREES
COMPONENTES ADICIONALES ENUMERADOS EN PAGINAS ADICIONALES

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Key	Part No.	Part Name	Qty.	Serial No.	Remarks
0	.....	Bracket	1	-501142	8099420 NLA, SUB 4689575, ALSO ORDER (2) 19M7662, (2) 24M7346
	8112941	Pipe	1	501143-	
1	7047794	Pipe	1	-501142	
	7054258	Pipe	1	501143-	
2	8099419	Pipe	1		
3	40M1861	Snap Ring	1		SUB FOR 991718
4	4276584	Flow Control Hyd. Valve	1		
6	A811040	O-Ring	1		
7	19M8338	Screw	2		M10 X 40, SUB FOR J781040
8	4069801	Coupling	3		SUB FOR 4712341 AND 4196259
	4196259	Seal	6		NLA, ORDER 4069801
9	4067834	Coupling	1		
	4196260	Seal	2		NLA, ORDER 4067834
10	4689574	Bracket	2	-501142	SUB FOR 4633014
	4689574	Bracket	1	501143-	SUB FOR 4633014
11	9757273	Clamp	3	-501142	
	9757273	Clamp	2	501143-	
12	.....	Screw With Washer	3	-501142	J271275 NLA
	19M8767	Screw	3	-501142	M12 X 75
	24M7047	Washer	3	-501142	13 X 24 X 2.500 mm
	.....	Screw With Washer	2	501143-	J271275 NLA
	19M8767	Screw	2	501143-	M12 X 75
	24M7047	Washer	2	501143-	13 X 24 X 2.500 mm
13	.....	Screw With Washer	6	-501142	J271025 NLA
	19M7402	Cap Screw	6	-501142	M10 X 25, SUB FOR J901025
	24M7346	Washer	6	-501142	11 X 20 X 2 mm, SUB FOR J222010
	.....	Screw With Washer	4	501143-	J271030 NLA
	19M7662	Cap Screw	4	501143-	M10 X 30, SUB FOR J901030
	24M7346	Washer	4	501143-	11 X 20 X 2 mm, SUB FOR J222010
14	.....	Bracket	1	-501142	4633015 NLA, SUB 4689575, ALSO ORDER 19M7662, 24M7346
	4689575	Bracket	1	501143-	
15	A885003	Pipe Plug	1		
	4297380	O-Ring	1		SUB FOR 4622346, 4509180 AND 4674883
16	4174541	Fitting	1		SUB FOR A885004
	4506418	O-Ring	1		
17	A885008	Pipe Plug	1		
	TH101926	O-Ring	1		SUB FOR 4506429
18	4656988	Valve	1		
21	FYA40005900	Bracket	1		SUB FOR 8098385
22	.....	Screw With Washer	2		J271030 NLA
	19M7662	Cap Screw	2		M10 X 30, SUB FOR J901030
	24M7346	Washer	2		11 X 20 X 2 mm, SUB FOR J222010
23	4053698	Clamp	1		
24	.....	Screw With Washer	1		J271270 NLA
	19M7753	Cap Screw	1		M12 X 70, SUB FOR J901270
	24M7345	Washer	1		13.500 X 24 X 2.500 mm, SUB FOR J222012

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Key	Part No.	Part Name	Qty.	Serial No.	Remarks
7	3079728	Bushing	1		
8	A852223	Elbow Fitting	6		
	M800650	Packing	6		SUB FOR 957366
9	4629782	Guard	1		
10	4351774	Clamp	1		
11	2046296	Bushing	1		
13	A852333	Elbow Fitting	1		
	4297380	O-Ring	1		SUB FOR 4509180, 4674883 OR 4622346
14	4190244	Elbow Fitting	1	-XXXXXX	Units Built Before June 15, 2009, SUB FOR A852233
	4297380	O-Ring	1	-XXXXXX	Units Built Before June 15, 2009, SUB FOR 4509180, 4674883 OR 4622346
	4712294	Filter	1	XXXXXX-	Units Built June 15 2009 and After
15	M45242	Clip	1		SUB FOR 4190292
16	.....	Screw With Washer	4		J271025 NLA
	19M7402	Cap Screw	4		M10 X 25, SUB FOR J271025
	24M7346	Washer	4		11 X 20 X 2 mm, SUB FOR J222010
17	XCL-29	Hose Clamp	1		SUB FOR 4190291
18	N198631	Clamp	2		SUB FOR 4190265
19	H77698	Tie Band	2		SUB FOR 4055312
20	H77698	Tie Band	2		SUB FOR 4121859
21	4448087	Hose	1		
24	4643915	Hydraulic Hose	1		
27	.....	Hydraulic Hose	1		9282819 NLA
	4661827	Hydraulic Hose	1		
	4327315	Hose Guard	3		4327293 NLA
28	.....	Hydraulic Hose	1		9282820 NLA
	4661826	Hydraulic Hose	1		
	4327315	Hose Guard	3		4327293 NLA
29	.....	Hydraulic Hose	1		9282821 NLA
	4661825	Hydraulic Hose	1		
	4327315	Hose Guard	3		4327293 NLA
30	.....	Hydraulic Hose	1		9278523 NLA
	4436315	Hose	1		SUB FOR 4661823
	4327315	Hose Guard	3		4327293 NLA
31	4681207	Hose	1		SUB FOR 4662080 OR 4651131

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


Key	Part No.	Part Name	Qty.	Serial No.	Remarks
1	**.....**	**Field Installation Kit**	**1**		**AT342526 NLA, WHOLE GOODS, Solenoid Valve**
2	R27212	Fitting	5		
3	AT180585	Solenoid Valve	1		
4	AE24616	Elbow Fitting	1		
5	R26448	O-Ring	4		
6	AT131445	Adapter Fitting	2		
9	AT331104	Wiring Harness	1		INCLUDES (2) AR94101
	AR94101	Diode	2		Not Illustrated
10	14M7272	Nut	4		M6
11	19M7529	Cap Screw	4		M6 X 55
12	24M7139	Washer	8		6.400 X 18 X 1.600 mm
13	AT331768	Hydraulic Hose	3		
14	T202379	Strap	4		
20	AT78124	Hydraulic Hose	1		
21	AT35121	Elbow Fitting	1		
25	AT186623	Hydraulic Pressure Valve	1		
28	AT36921	Tee Fitting	3		
29	AT108783	Hydraulic Hose	1		
37	AE52955	Adapter Fitting	1		
38	CH11570	O-Ring	2		

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Swing Motor and Oil Fill
Moteur de pivotement et remplissage d'huile
Motor de giro y llenado de aceite

TX1016405 A.1

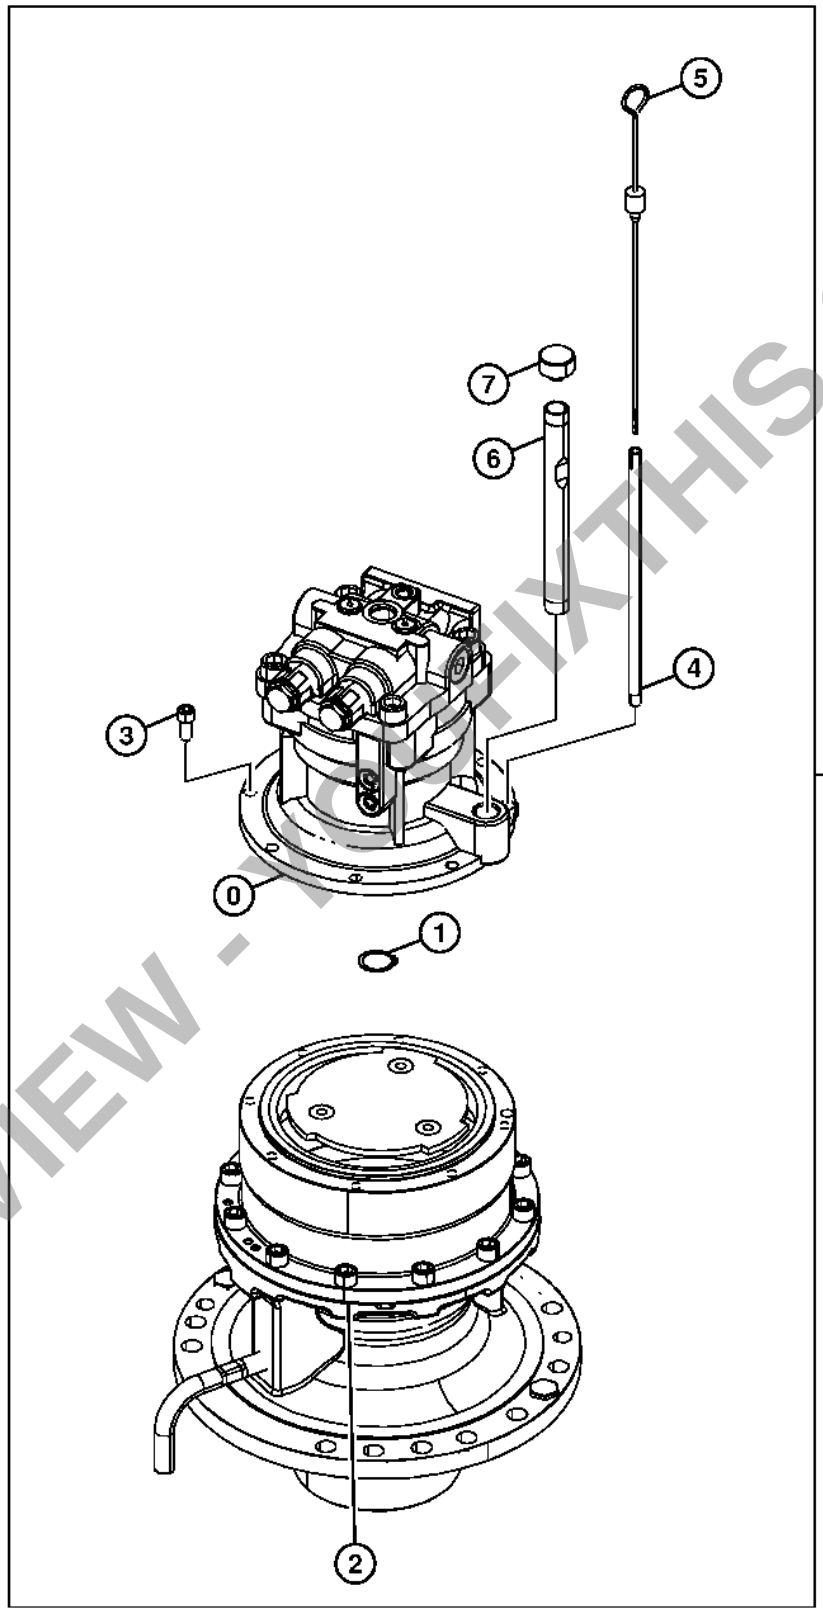

TX1016405

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 25 of 652 pages

The full manual includes:

- All 652 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

John Deere 225DLC Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual