


輸 出 用
FOR EUROPE

エンジン アッセン・ENGINE ASSY

PV06201-07928

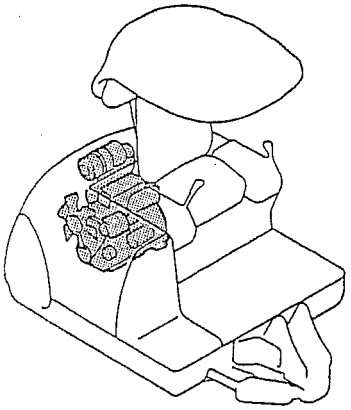

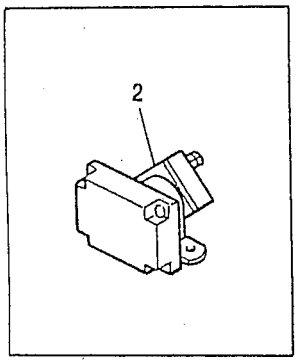

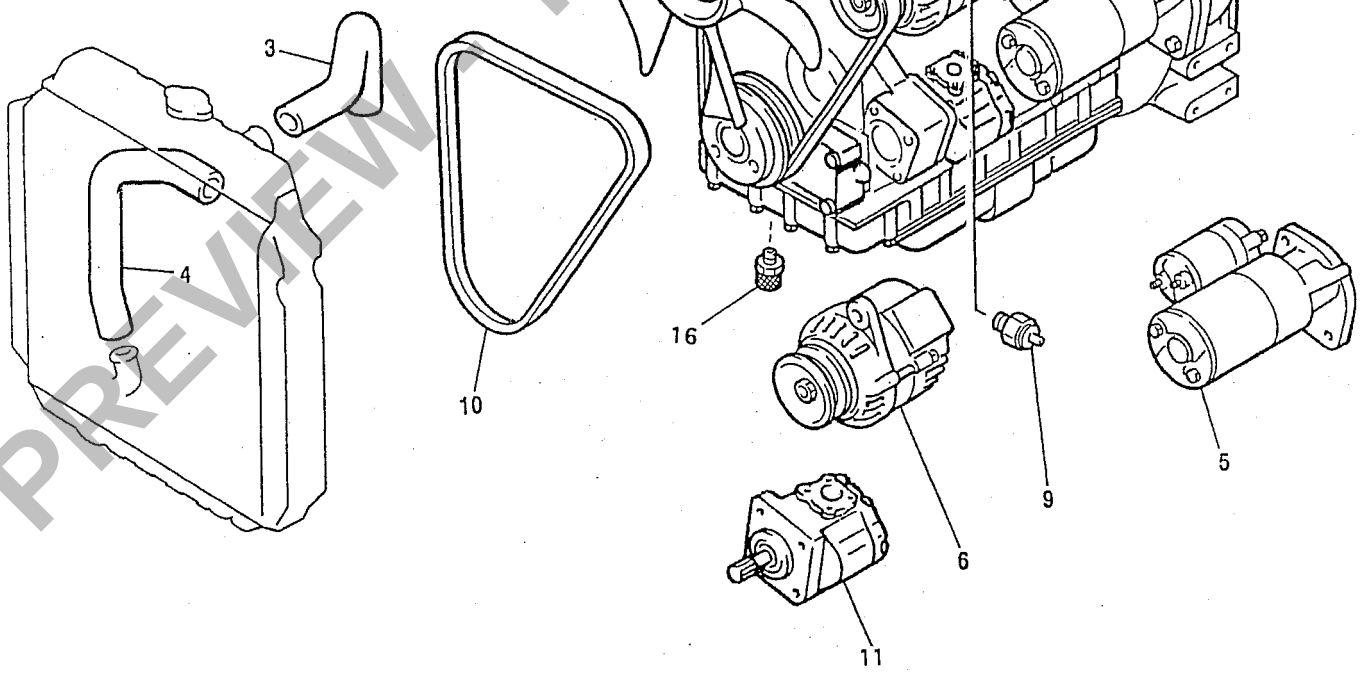


PREVIEW - YOUFIXTHIS.COM

FIG 024-01-1①

Download full manual at youfixthis.com

ユアツ ハイカン, アッパ・HYD LINES, UPP

PV 06201～07928

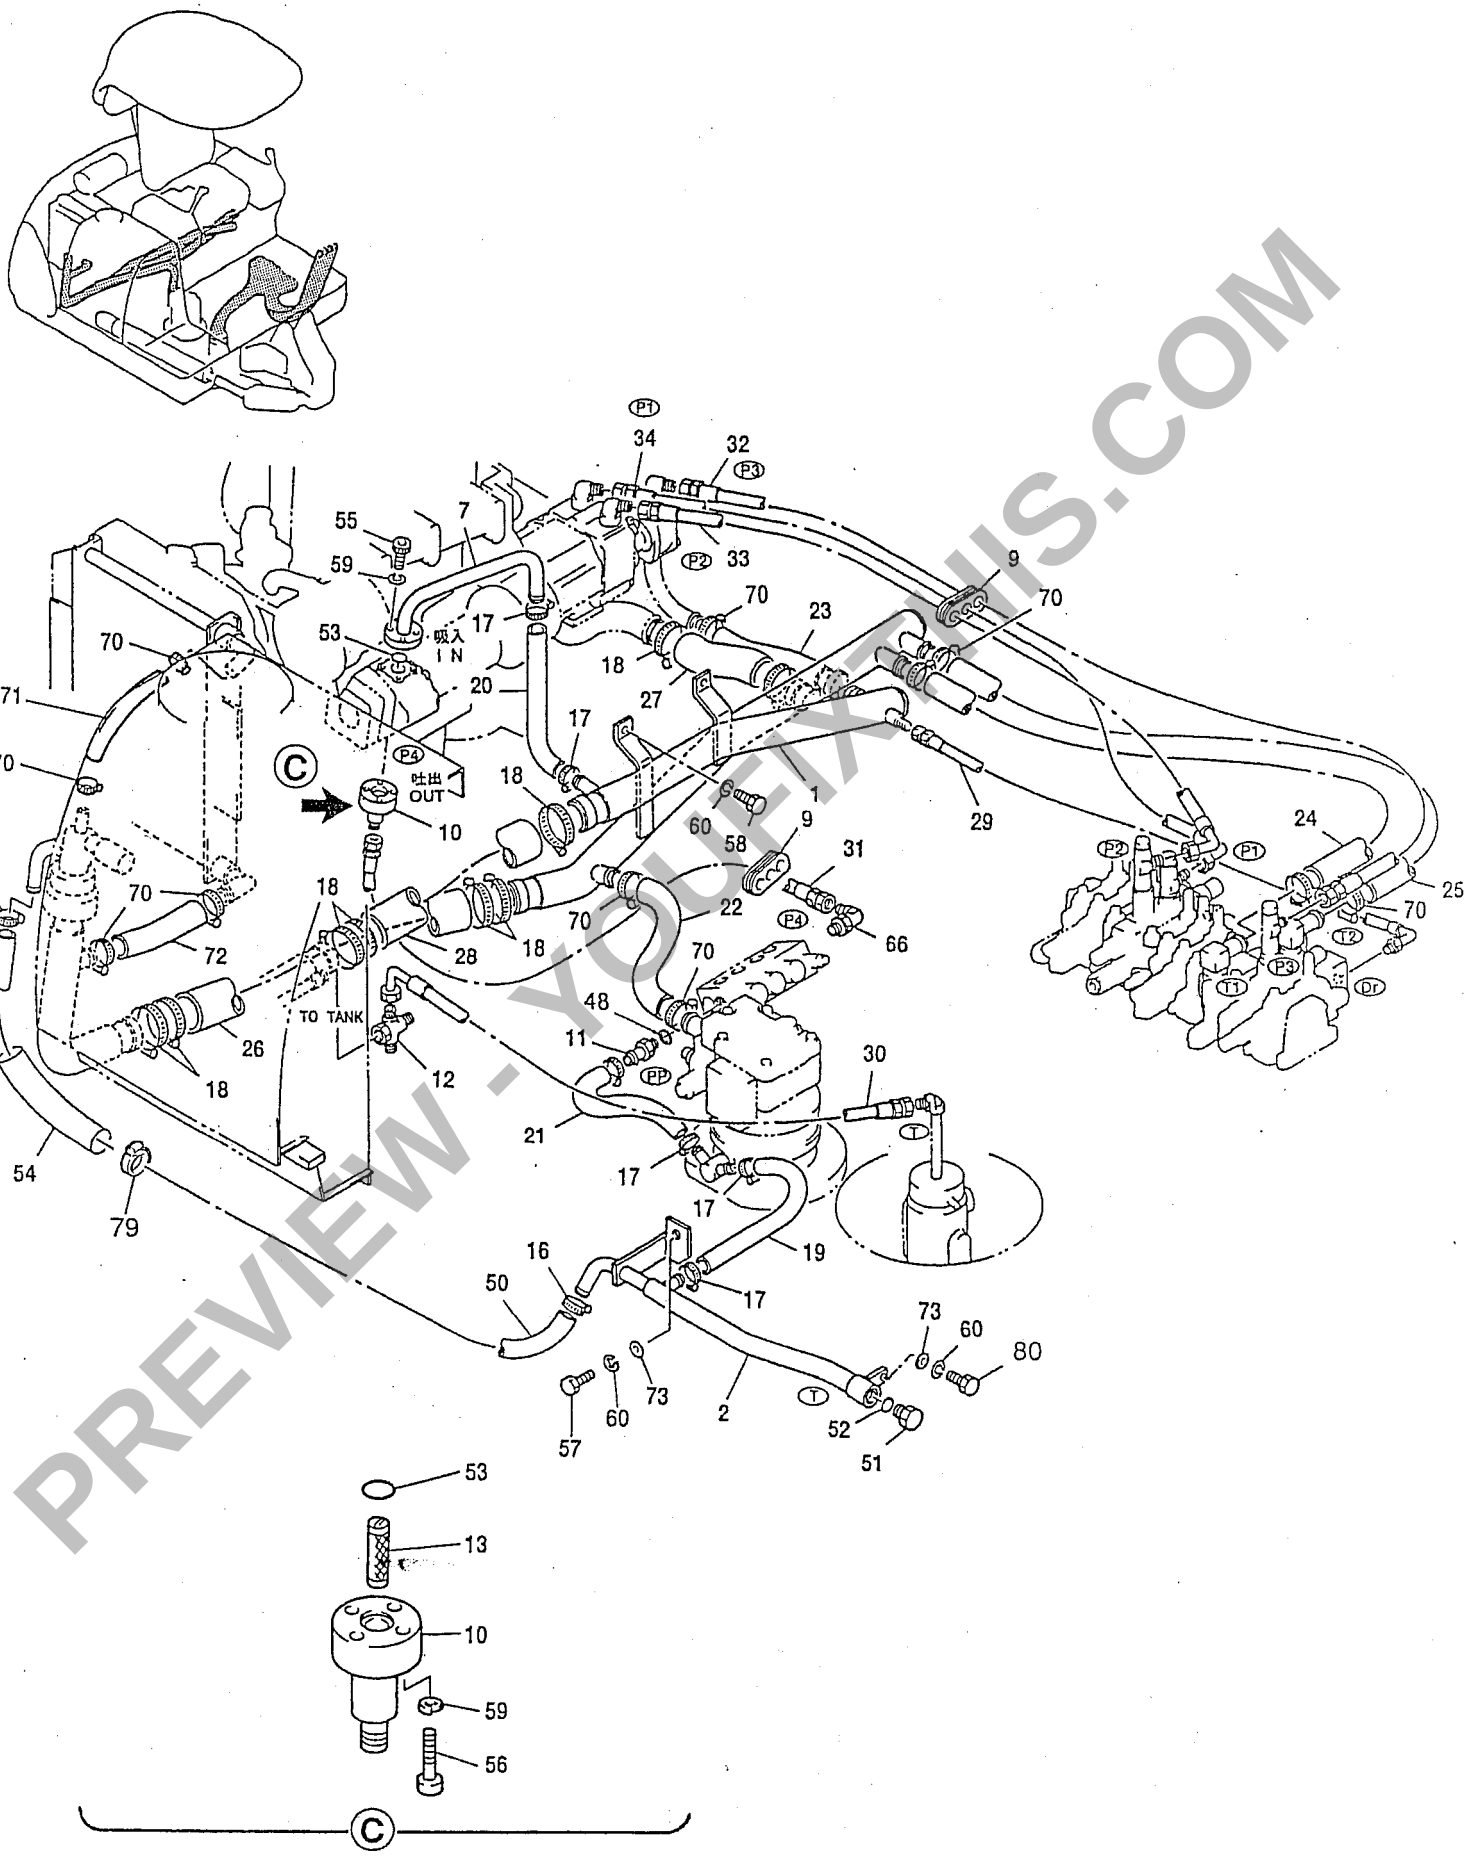

PREVIEW - YOUFIXTHIS.COM


FIG. 087-01-1①

Download full manual at youfixthis.com


輸 出 用
FOR EUROPE


ブーム アッセン・BOOM ASSY


PV06201-07928

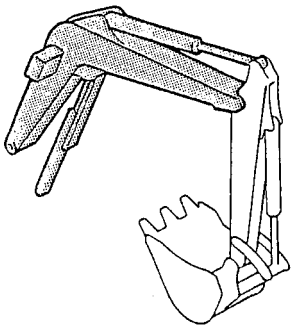



キャブ・CAB

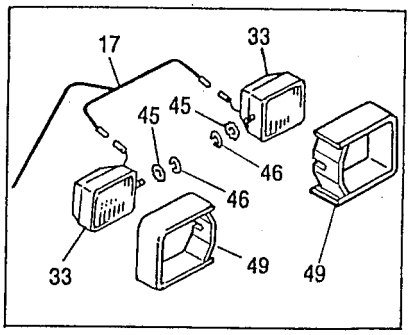

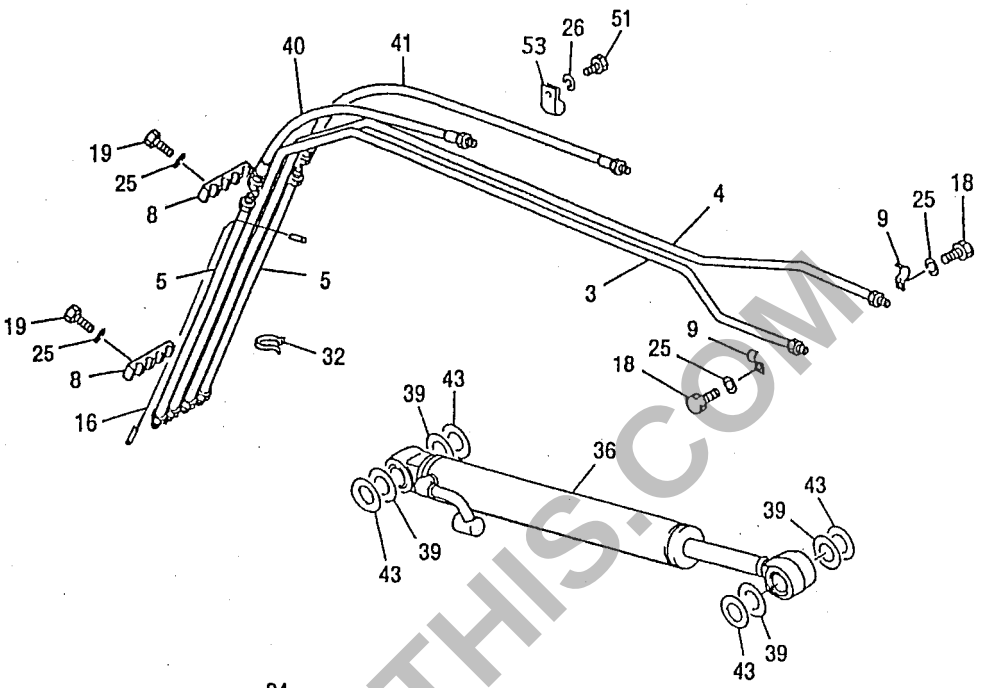

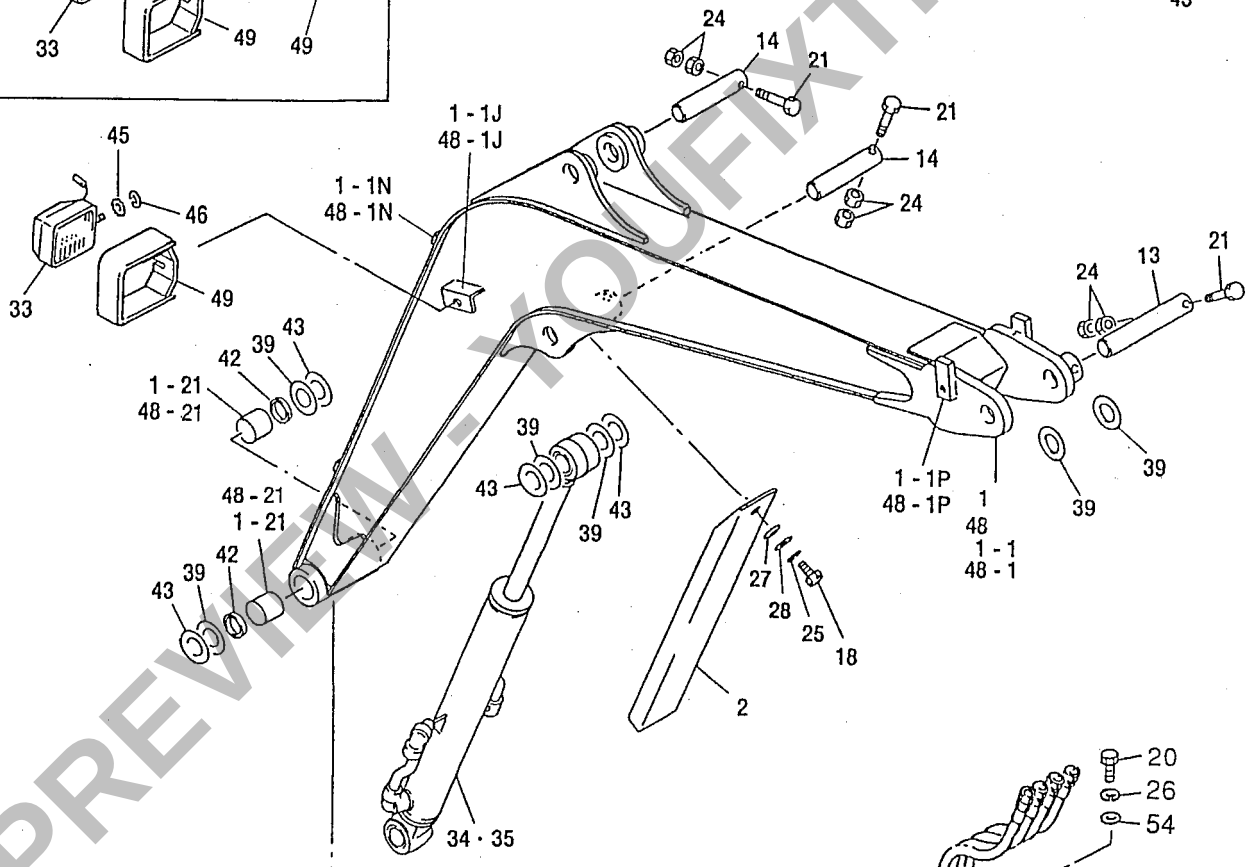

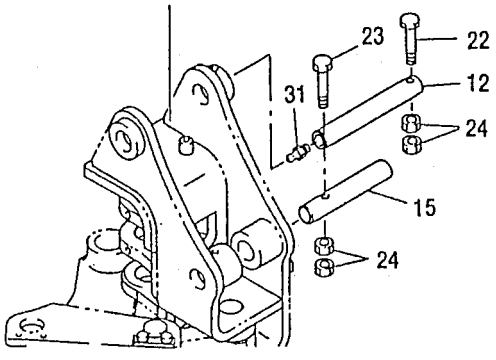

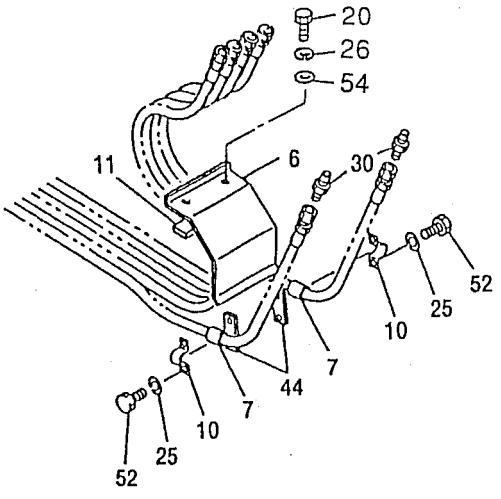


PREVIEW - YOUFIXTHIS.COM


FIG 390-20-1①


Download full manual at youfixthis.com

ハーネス アッセン・HARNESS ASSY

PV 06201～07928

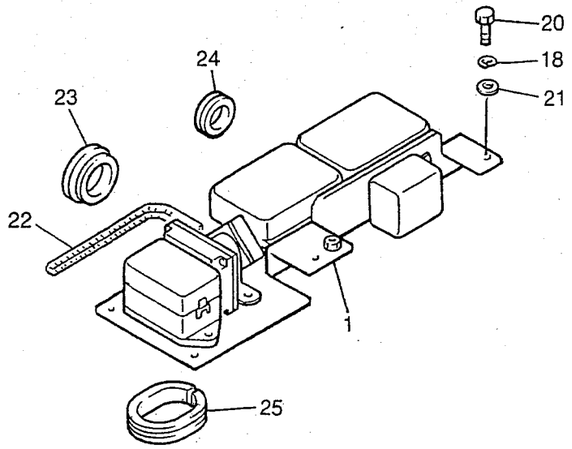

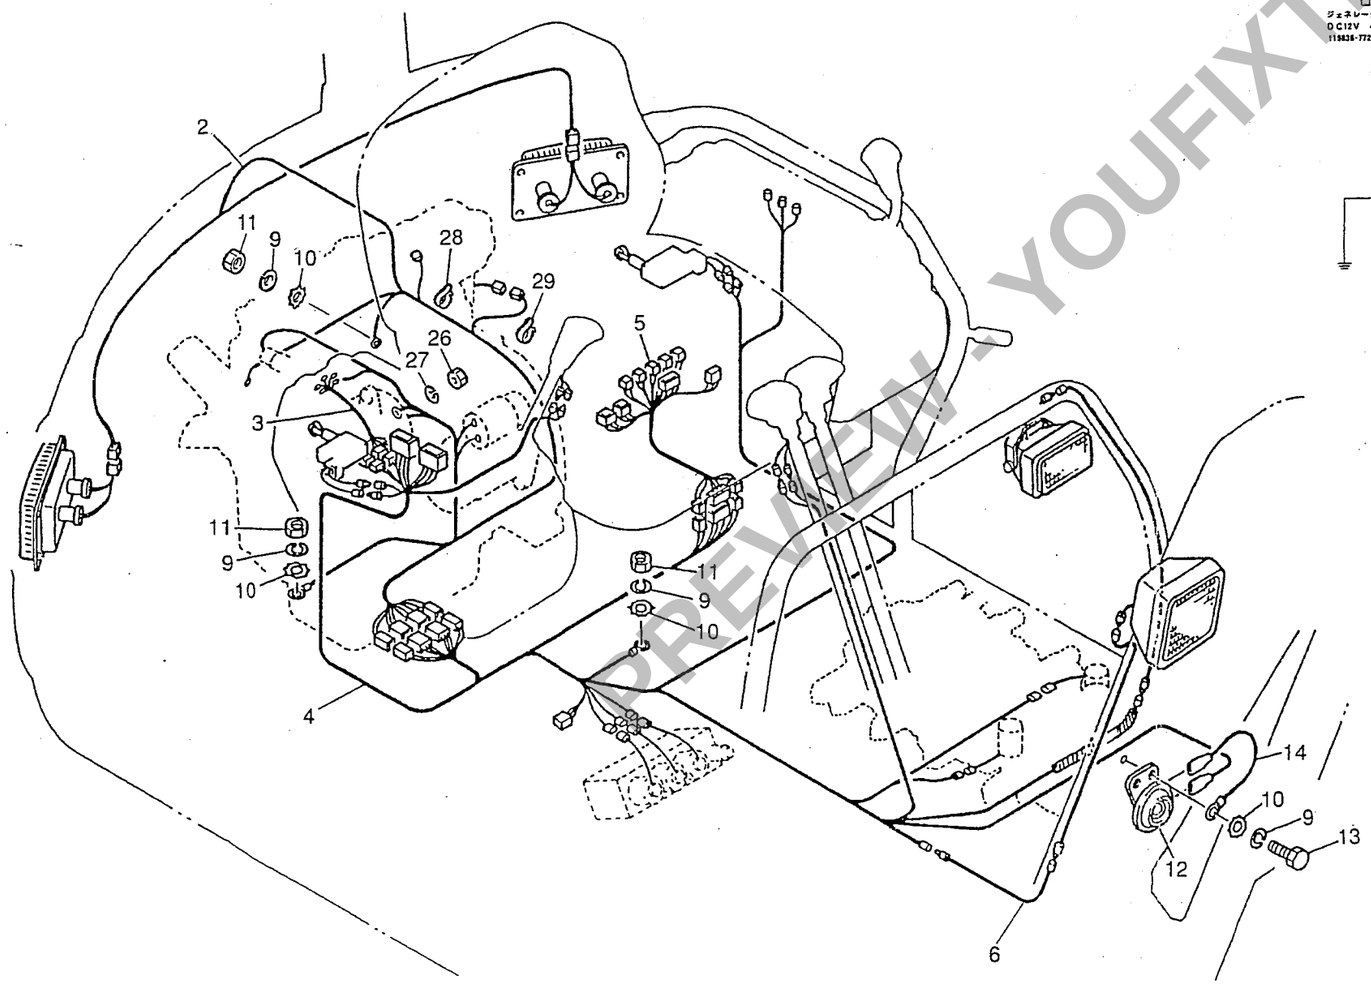

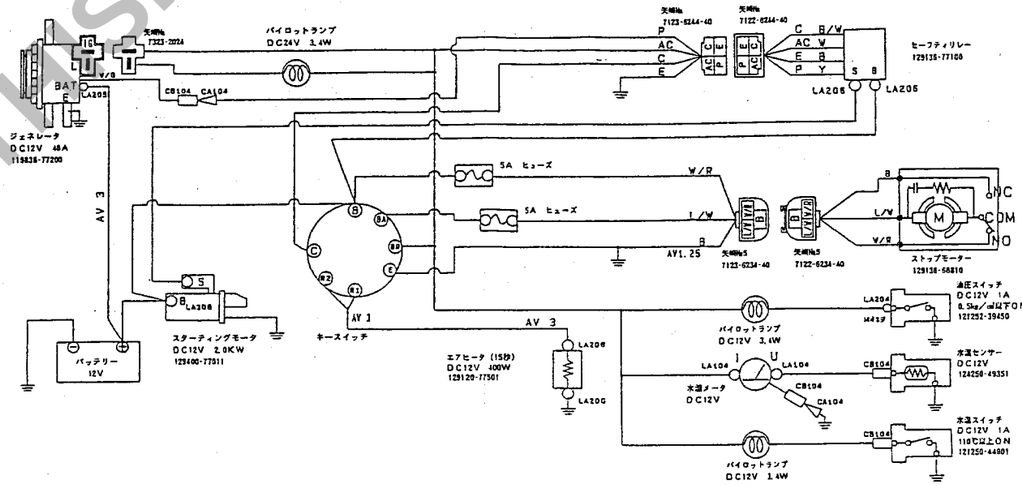


PREVIEW - YOUFIXTHIS.COM


FIG 265-01-1①

Download full manual at youfixthis.com


目　次
CONTENTS

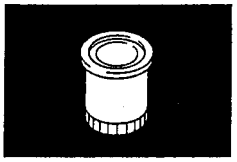


1 一　般　整　備　品
GENERAL MAINTENANCE ITEMS

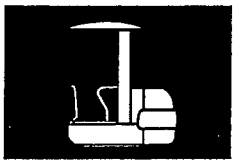

2 上　部　旋　回　体
SUPERSTRUCTURE

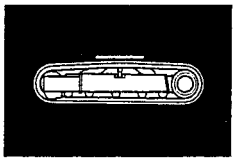

3 下　部　走　行　体
UNDERCARRIAGE

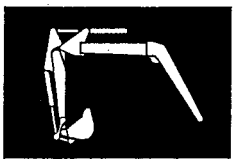


4 アタッチメント
ATTACHMENTS




5 工　具　及　び　予　備　品
TOOLS AND SPARE PARTS




6 オプショナルパーツ
OPTIONAL PARTS

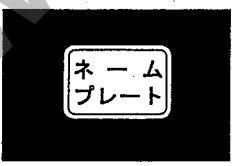

7 ネームプレート
NAME - PLATE

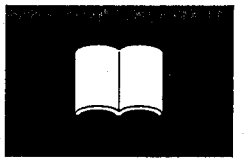

8 索　引
PARTS INDEX

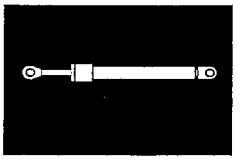

9 油　圧　機　器
HYDRAULIC COMPONENTS



10 エ　ン　ジ　ン　機　器
ENGINE COMPONENTS

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

INDEX FOR PART NO. SK025-2 プヒン カタログ

PART NO.	PAGE
	104-32A-1
(PY25M00003F1)	178-20-1
119836-77200	024-32-1①
119836-77201	024-32-1①
121250-44901	024-32-1①
121252-39450	024-32-1①
121262-12800	024-32-1①
124001-42290	024-32-1①
124250-49351	024-32-1①
129120-77501	024-32-1①
129136-66810	024-32-1①
129136-77100	024-32-1①
129155-49800	024-32-1①
129698-77010	024-32-1①
171008-77010	024-32-1①
198011-41110	024-32-1①
2405U104D012015	026-01-1①
2405U104D014012	102-01-1①
	104-32-1①
	104-32A-1
2405U104D020015	102-01-1①
	104-32-1①
	104-32A-1
2406R252D3	102-01-1①
	104-32-1①
2406R259D3	102-01-1①
	104-32-1①
2406R479D1	526-37-1
	526-37-3
2406R479D2	526-37-1
2406Z321	026-01-1①
24100U1269F2	066-01-1①
24100U1269S1	066-01-1①
24100U1335	526-37-1
2410R1089D3	561-01-1①
2411U19	254-32-1①
2414R281	526-37-3
2414R284	254-32-1①
2414Z270D1	102-01-1①
	104-32-1①
	104-32A-1
	190-01-1①
2414Z306	102-01-1①
	104-32A-1
2416Z646	029-01-1①
2418R323D10	265-01-1①
2418R323D11	029-01-1①
	254-32-1①
2418R323D12	192-32-1
	390-20-2①
	570-63-2①
2418R323D8	192-32-1
	550-01-1①
2418R565	102-01-1①
	104-32-1①
	104-32A-1
2418T12753	190-01-1①
	390-20-1①
	570-63-1①
2418T22739D1	150-01-1①
	520-01-1
2418T23070	190-01-1①
2418T8245	056-32-1①
2418Z726D5	150-01-1①
	520-01-1
2419R62	526-37-1
2419R9D2	102-01-1①
	104-32-1①
	104-32A-1
	182-32-1
	198-01-2①
2419R9D4	102-01-1①
	104-32-1①
	104-32A-1
241R9D2	526-37-3
2420N458D06020	087-01-2①
2420N458D06025	102-01-1①
	104-32-1①
2420N458D06030	087-01-2①
2420N458D08016	182-32-1
2420N458D10025	066-01-1①
2420N458D12040	066-01-1①
2420R1088D2	235-01-1
	561-01-1①
2420R1090D1	198-01-2①
2420R1090D5	526-37-1
2420R1091D2	526-37-2
2420R349D110	072-01-1
2420R372D104	526-37-2
2420R372D114	029-01-1①
2420R429D13	265-01-1①
2420R594D1	526-37-3
2420R594D2	526-37-3
2420R594D3	526-37-3
2420R600D2	182-32-1
	230-01-1①
2420R603D8	010-32-1①
2420R608D1	198-01-2①
2420R608D2	230-01-1①
2420R608D3	230-01-1①
2420T2948D2	029-01-1①
2420T2948D3	056-32-2①
2420T7826D1	150-01-1①
	520-01-1
2420Z1218	550-01-1①
2420Z1232	102-01-1①
	104-32-1①
2420Z1318D2	190-01-1①
2420Z1364	354-01-1
2420Z1400	010-32-1①
2420Z1415	526-37-2
2420Z699	114-32-1
2421R145F1	484-32-1
2421T222	182-32-1
	198-01-1①
2421U82	526-37-2
2421Z183	484-32-1
2427R1109	524-37-1
2427R1347	526-37-2
2427R1351D1	526-37-1
2427R1352D2	526-37-1
2427R1352D3	526-37-1
2427R1352D4	526-37-1
2427R1352D6	526-37-1
2427R1352D7	526-37-1
2427Z1594D008	114-32-1
	182-32-1
2427Z1594D049	182-32-1
2432R225D9	390-20-2①
	570-63-2①
2432R243	526-37-2
	526-37-3
2432T5119	610-32-1①
	620-32-1①
2432T5301	610-32-1①
	620-32-1①
2432T5617	610-32-1①
	620-32-1①

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com


① Item : Index number given to every part in the part descriptive list.
Part organizing A1 are described as A1-1, A1-2, A1-3, ... And parts organizing A1-1 are A1-1A, A1-1B, A1-1C, ...

②Part Number : Proper number given to parts. In case ★ mark is put in the part number space, the parts are not in supply individually. Those parts should be ordered as assembly parts.


③Part Name : Name of the parts.

④Quantity required : "Number of parts necessary for One(1) unit" is shown. However, for component parts for assembly, it shows the "Number of parts for One(1) set" of assembly.

⑤Remarks : Marks shown in the "Remark" space means the following.

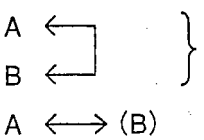

Two(2) parts connected by the arrow are interchangeable.
In addition, where sign is put in ( ), the parts are interchangeable with the relevant parts in part list, both parts are available.

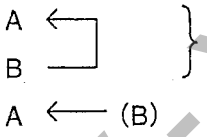

Two(2) parts connected by the arrow are interchangeable.
Part B can take the place of Part A, but part A is not available.

＊1
＊2

Notes which can not be put in the "Remarks" space, are described in the last space on the Parts List.


⑥Applicable Machine : The machine type using the parts is indicated. Parts for which the machine type is not indicated are common for all the machines which are listed in this catalog.
And, where the machine type can not be described in the "Applicable" space, put marks such as (A),(B), ... , and describe it at the last space on the Parts List.
〔Note〕 When the interchangeable marks are put in the "Remarks" space for part number to be used to place an order, the interchangeable parts could be supplied automatically.

⑦SEE(HC143) : Refer to the hydraulic components parts

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

コントロール アッセン, エンジン・CONTROL ASSY, ENGINE

PV 06201～07928

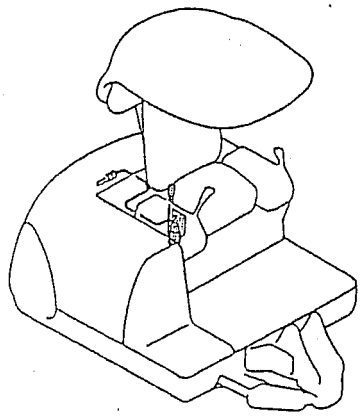

PREVIEW - YOUFIXTHIS.COM

FIG 026-01-1①

Download full manual at youfixthis.com

符号 ITEM	部品番号 PART NO.	部品名称 PART NAME	部品名称 PART NAME	個数 QTY	備考 REMARKS	適用号機 APPLICABLE
		コントロール アッセン, リモート	CONTROL ASSY, REMOTE			
	PV03M00006F5	コントロール アッセン, リモート	CONTROL ASSY, REMOTE			
1	PU03M01004F1	ブラケット アッセン	BRACKET ASSY	1		
1-1	PU03M01004P1	ブラケット	BRACKET	1		
1-10	2405U104D020015	ブッシュ	BUSHING	2		
2	PU03M01006F1	ブラケット アッセン	BRACKET ASSY	1		
2-1	PU03M01006P1	ブラケット	BRACKET	1		
2-9	2405U104D020015	ブッシュ	BUSHING	2		
3	PU03M01007P1	プレート	PLATE	1		
4	PU03M01008P1	プレート	PLATE	1		
5	PU03M01009P1	プレート	PLATE	2		
6	PU03M01010P1	ピン	PIN	2		
7	PU03M01011P1	シャフト	SHAFT	2		
9	PU03M01013P1	レバー	LEVER	1		
10	PU03M01014P1	シャフト	SHAFT	2		
11	PU03M01015P1	スプリング	SPRING	2		
13	PY03M01018P1	ブーツ	BOOT	2		(PV06201-06922)
	PY03M01152P1	ブーツ	BOOT	2		(PV06923-)
15	PV03M01057F1	コントロール ボックス アッセン	CONTROL BOX ASSY	1		
15-1	PV03M01057P1	コントロール ボックス	CONTROL BOX	1		
15-8	2405U104D014012	ブッシュ	BUSHING	2		
16	PV03M01053F1	コントロール ボックス アッセン	CONTROL BOX ASSY	1		
16-1	PV03M01053P1	コントロール ボックス	CONTROL BOX	1		
16-10	2405U104D014012	ブッシュ	BUSHING	2		
17	PU30V00002F1	バルブ アッセン, パイロット	VALVE ASSY, PILOT	2	SEE (HC141)	
20	PU03M01032P1	レバー	LEVER	2		(PV06201-06908)
	PU03M01091P1	レバー	LEVER	2		(PV06909-)
23	2414Z270D1	キャップ	CAP	2		
24	2479Z2398	スイッチ, リミット	SWITCH, LIMIT	2		
25	PV03M01069P1	ダンパ	DUMPER	2		
26	PV03M01042P1	キャップ	CAP	1		
27	ZW16X08000	ワッシャ (M8)	WASHER (M8)	2		
28	2419R9D2	ピン	PIN	2		
29	2418R565	ストッパ	STOPPER	2		
30	ZP26D05025	ピン, スプリング	PIN, SPRING	6		(PV06201-06923)
31	2419R9D4	ピン	PIN	2		
32	PY03M01058P1	グロメット	GROMMET	1		
33	ZN18C14011	ナット (M14)	NUT (M14)	2		
34	2420Z1232	ナット (M12)	NUT (M12)	2		(PV06201-06908)
35	ZN17C12007	ナット (M12)	NUT (M12)	2		
37	PN03H01012D1	エルボ, 45	ELBOW, 45	5		
39	ZS18C08016	キャップ スクリュ (M8×16)	CAPSCREW (M8×16)	6		
40	ZW26X08000	ワッシャ (M8)	WASHER (M8)	8		
42	2420N458D06025	キャップ スクリュ (M6×25)	CAPSCREW (M6×25)	8		
43	ZW26K06000	ワッシャ (M6)	WASHER (M6)	8		
45	2406R259D3	グリップ	GRIP	1		(PV06201-06908)
	YN03M01246P1	グリップ	GRIP	1		(PV06909-)
46	2406R252D3	グリップ	GRIP	1		(PV06201-06908)
	YW03M01011P1	グリップ	GRIP	1		(PV06909-)
62	PU03H01007P1	アダプタ	ADAPTER	1		

(13)

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PV06201-07928

符 号 ITEM	部品番号 PART NO.	部品名称 PART NAME	部品名称 PART NAME	個数 QTY	備 考 REMARKS	適用号機 APPLICABLE
B4	ZS18C14040	ｷｬｯﾌﾟｽｸﾘｭ (M14×40)	CAPSCREW (M14×40)	2	(F1 ONLY)	
B5	HS18F14055G1	ｷｬｯﾌﾟｽｸﾘｭ (M14×55)	CAPSCREW (M14×55)	1	(F1 ONLY)	
	HS18F14055G1	ｷｬｯﾌﾟｽｸﾘｭ (M14×55)	CAPSCREW (M14×55)	4	(F2 ONLY)	
B6	HS18F14035G1	ｷｬｯﾌﾟｽｸﾘｭ (M14×35)	CAPSCREW (M14×35)	1	(F1 ONLY)	
B7	ZW16H14000	ﾜｯｼｬ (M14)	WASHER (M14)	8	(F1 ONLY)	
	ZW16H14000	ﾜｯｼｬ (M14)	WASHER (M14)	6	(F2 ONLY)	
B8	ZW26X14000	ﾛｯｸﾜｯｼｬ (M14)	LOCK WASHER (M14)	8	(F1 ONLY)	
	ZW26X14000	ﾛｯｸﾜｯｼｬ (M14)	LOCK WASHER (M14)	6	(F2 ONLY)	
B9	PV21C01092P2	ｻﾎﾟｰﾄ	SUPPORT	1		
B10	PV21C01072P2	ﾌﾞﾗｹｯﾄ	BRACKET	1		
B11	HS18F16075G1	ｷｬｯﾌﾟｽｸﾘｭ	CAPSCREW	3		
B12	ZW16H16000	ﾜｯｼｬ	WASHER	3		
B13	ZW26X16000	ﾛｯｸﾜｯｼｬ	LOCK WASHER	3		
B14	ZN18F16013	ﾅｯﾄ	NUT	3		
B15	HS18F14070G1	ｷｬｯﾌﾟｽｸﾘｭ	CAPSCREW	1		
B16	HS18F14050G1	ｷｬｯﾌﾟｽｸﾘｭ	CAPSCREW	1		
	PV21C00007F1	ｻﾎﾟｰﾄ ｱｯｾﾝ (ｷｬﾌﾞ, A-Bｼﾌﾀｰ)	SUPPORT ASSY (For CAB, A-B SHIFTER)			
	PV21C00007F2	ｻﾎﾟｰﾄ ｱｯｾﾝ (ｷｬﾌﾞ, ISO. ﾏﾙﾁ)	SUPPORT ASSY (For CAB, ISO. MULTI)			
C1	PV21C01089P1	ｻﾎﾟｰﾄ	SUPPORT	1		
C2	PV21C01062P1	ﾌﾞﾗｹｯﾄ	BRACKET	1	(F2 ONLY)	
C6	HS18F14040G1	ｷｬｯﾌﾟｽｸﾘｭ (M14×40)	CAPSCREW (M14×40)	1	(F1 ONLY)	
	HS18F14040G1	ｷｬｯﾌﾟｽｸﾘｭ (M14×40)	CAPSCREW (M14×40)	3	(F2 ONLY)	
C7	ZW16H14000	ﾜｯｼｬ (M14)	WASHER (M14)	2	(F1 ONLY)	
	ZW16H14000	ﾜｯｼｬ (M14)	WASHER (M14)	4	(F2 ONLY)	
C8	ZW26X14000	ﾛｯｸﾜｯｼｬ (M14)	LOCK WASHER (M14)	2	(F1 ONLY)	
	ZW26X14000	ﾛｯｸﾜｯｼｬ (M14)	LOCK WASHER (M14)	4	(F2 ONLY)	
C9	HS18F14035G1	ｷｬｯﾌﾟｽｸﾘｭ (M14×35)	CAPSCREW (M14×35)	1		


(16)
(06)
(04)

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

ローラ アッセン, アッパー・ROLLER ASSY, UPP

PV 06201～07928

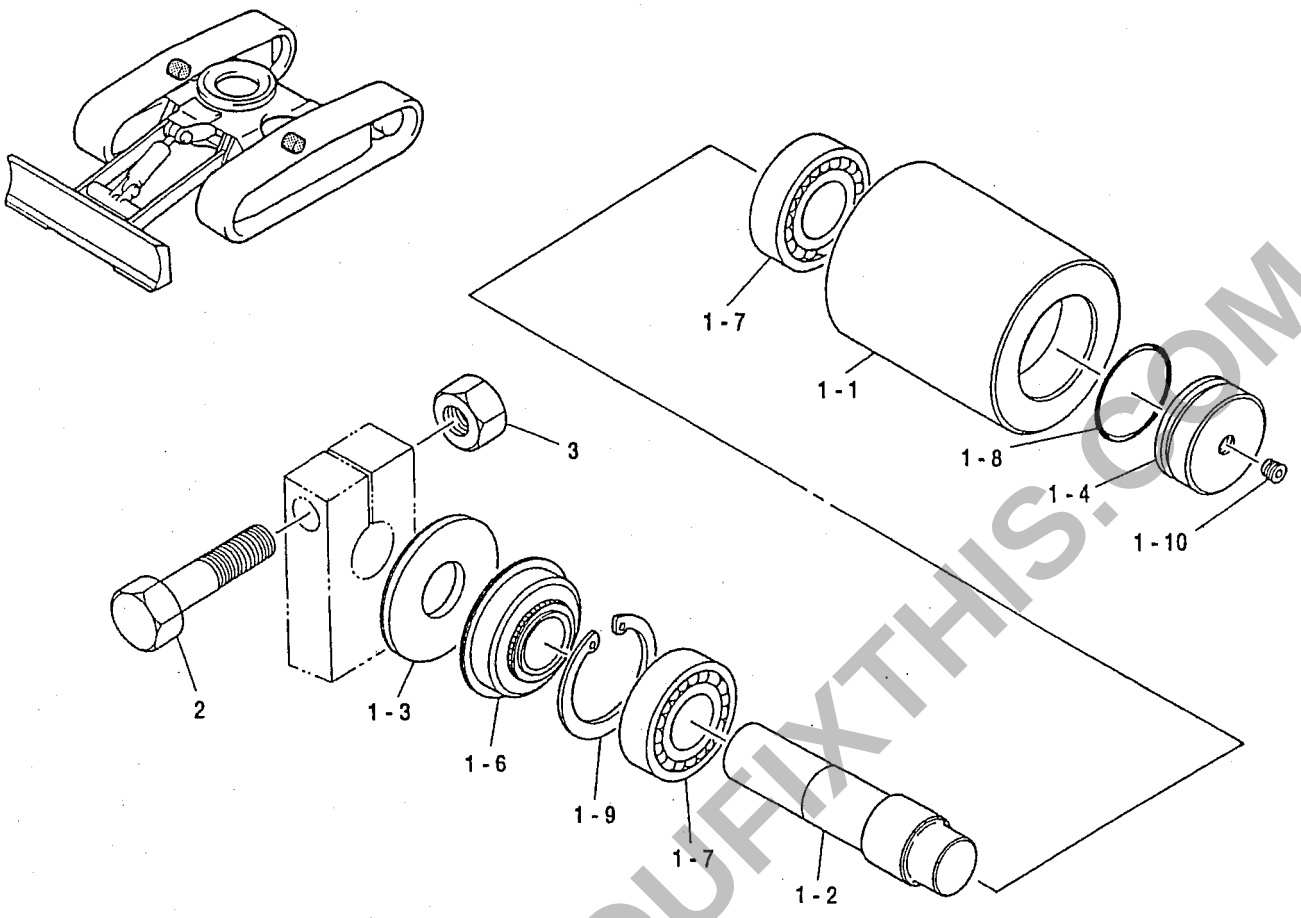

符号 ITEM	部品番号 PART NO.	部品名称 PART NAME	部品名称 PART NAME	個数 QTY	備考 REMARKS	適用号機 APPLICABLE
	PV64D00002F1	ローラ トリツケ, トラック	ROLLER INSTAL, TRACK			
1	PV64D00001F1	ローラ トラック, アッパ゛	ROLLER TRACK, UPP	2		
1-1	PV64D01009P1	ローラ	ROLLER	1		
1-2	PV64D01004P1	シャフト	SHAFT	1		
1-3	PV64D01001P1	カバ゛ー	COVER	1		
1-4	PV64D01002P1	カバ゛ー	COVER	1		
1-6	2445Z1503	シール	SEAL	1		
1-7	PU64D01004P1	ベアリング゛	BEARING	2		
1-8	ZD11G04000	O-リング゛ (G40 1A)	O-RING (G40 1A)	1		
1-9	ZR26X05200	リング゛	RING	1		
1-10	PV52D01007P1	プラグ゛	PLUG	1		
2	ZS18C10060	キャップ゛スクリュ (M10×60)	CAPSCREW (M10×60)	2		
3	ZN18C10008	ナット (M10)	NUT (M10)	2		

(03)

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

符 号 ITEM	部 品 番 号 PART NO.	部 品 名 称 PART NAME	部 品 名 称 PART NAME	個数 QTY	備 考 REMARKS	適 用 号 機 APPLICABLE
22	PY02C01083P1	カバー	COVER	1		
23	2420R1091D2	セムスボルト	SEMS-BOLT	4		
24	PY02C01035P1	カバー	COVER	1		
25	PY02C01084P1	ブッシュ	BUSHING	1		
26	PY02C01039P1	グロメット	GROMMET	2		
27	PY02C01085P1	ストッパ	STOPPER	2		
28	PY02C01067P1	ストッパ	STOPPER	1		
29	ZN17C12007	ナット	NUT	1		
30	PY02C01032P1	スペーサ	SPACER	7		
31	ZN18C10008	ナット	NUT	2		
32	2456U114	ルームランプ	ROOM LAMP	1		
33	ZS31C04010	マシンスクリュ	MACHIN SCREW	2		
34	ZW26X04000	ロックワッシャ	LOCK WASHER	2		
35	PY02C01042P1	フック	HOOK	1		
36	2427R1347	アッシュトレイ	TRAY, ASH	1		
37	ZS32T40008	クロスタッピングスクリュ	CROSS TAPPING SCREW	3		
38	PY02C01005P1	プレート	PLATE	1		
39	PY02C01004P1	シール	SEAL	1		
40	ZN18C08007	ナット	NUT	4		
42	2432Z616D1	クリップ	CLIP	13		
43	PY02C01030P1	ストッパー	STOPPER	2		
44	PY02C01086P1	プレート	PLATE	1		
45	PY02C01009P1	インシュレーション	INSULATION	1		
46	PY02C01010P1	インシュレーション	INSULATION	1		
47	PY02C01011P1	インシュレーション	INSULATION	1		
48	PY02C01013P1	ラバー	RUBBER	1		
49	PY02C01014P1	ラバー	RUBBER	1		
50	2421U82	ストライカー	STRIKER	1		
51	2420Z1415	スクリュ	SCREW	2		
52	PY02C01043P1	ワッシャ	RUBBER	1		
53	2445R387D3	シール	SEAL	1		
54	2445R387D2	シール	SEAL	1		
57	PY02C01087P1	ストッパー	STOPPER	2		
58	PY02C01088P1	ストッパー	STOPPER	2		
59	PY02C01060P1	プレート	PLATE	1		
60	PY02C01089P1	グロメット	GROMMET	2		
61	PY02C01090P1	グロメット	GROMMET	2		
62	PY02C01073P1	クリップ	CLIP	2		
63	PY02C01091P1	プレート	PLATE	2		
64	ZS18C08016	キャップスクリュ	CAPSCREW	14		
65	PY02C01092P1	ブラケット	BRACKET	1		
66	PY02C01093P1	ブラケット	BRACKET	1		
67	YN22M01005D1	キャップスクリュ	CAPSCREW	4		
68	PY14E01005P1	ハーネス	HARNESS	1		
69	PY14E01003P1	ハーネス	HARNESS	1		
70	PY02C01111P1	ハーネス	HARNESS	1		
71	2432R243	クリップ	CLIP	4		
72	2420R372D104	グロメット	GROMMET	1		
73	PY02C01108P1	クリップ	CLIP	7		
74	PY14E01006P1	タンク,ワォッシャ,ウィンド	TANK, WASHER, WINDO	1		
75	2444R1161D2	ホース	HOSE	1		
76	2483R286	ノズル	NOZZLE	1		
(07) 77	PY02C01110P1	ワッシャ	WASHER	1		

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

輸 出 用
FOR EXPORT

ネーム プレート トリツケ・NAME PLATE INSTAL

（キャノピ・CANOPY）

PV06201-07928

4

SK025-2 HYDRAULIC EXCAVATOR

SPECIFICATION / ITEM	CANOPY		CABIN	
	RUBBER SHOE	STEEL SHOE	RUBBER SHOE	STEEL SHOE
MACHINE GROSS WEIGHT (kgf)	2830	2870	2950	2990
MAX LOADING WEIGHT (kgf)	125	125	125	125
GROUND CONTACT PRESSURE (kgf/cm²)	0.33	0.34	0.34	0.36
WEIGHT AT TRANSPORTATION (kgf)	2650	2690	2770	2810
MACHINE WEIGHT RATED OUTPUT (PS)	1930	1970	2050	2090
MAX TRAVEL SPEED (km/h)	5.0/3.0	4.7/2.7	5.0/3.0	4.7/2.7
	22.5			

KOBE STEEL, LTD.

5

CONTAMINATION AND DETERIORATION OF HYDRAULIC OIL MAY CAUSE MALFUNCTIONING OF A HYDRAULIC COMPONENT.
ALWAYS REPLACE HYDRAULIC OIL AT REGULAR INTERVALS, AS SHOWN BELOW

LOCATION	INSPECTION/ SERVICE ITEM	REPLACEMENT INTERVALS	
		INITIAL REPLACEMENT	REGULAR REPLACEMENT
HYDRAULIC OIL TANK	HYDRAULIC OIL	2nd REPLACEMENT	EVERY
RETURN FILTER	CARTRIDGE	250 H	1000 H

8

LUBRICATION CHART

9

⚠ CAUTION

ONLY OPERATE HAMMER WITH MACHINE UPPER AND BOOM IN A STRAIGHT PARALLEL POSITION TO THE CRAWLERS IDLER SIDE OR SPROCKET SIDE!
DO NOT OPERATE HAMMER WITH MACHINE UPPER OR BOOM IN AN OFFSET OR SWUNG POSITION.

11

⚠ CAUTION

1. PLEASE READ THOROUGHLY THE OPERATOR'S MANUAL BEFORE OPERATING OR PERFORMING MAINTENANCE ON THIS MACHINE.
2. ENSURE THE SAFETY LEVER IS ACTIVATED AND BUCKET IS ON THE GROUND BEFORE STARTING OR LEAVING THE MACHINE.
3. STARTING INSPECTION AND PERIODIC INSPECTION SHOULD BE FOLLOWED ACCORDING TO THE OPERATION'S MANUAL.
4. BEFORE STARTING OPERATION, SOUND HORN AND BE SURE BYSTANDERS ARE CLEAR OF MACHINE.
5. PARK ON A LEVEL SURFACE AND LOWER THE BUCKET TO THE GROUND IF NECESSARY TO PARK ON A SLOPE, CHOCK THE CRAWLERS.
6. DO NOT EXERT ABNORMAL SHOCK LOADS OR TORSIONAL FORCES ON THE ATTACHMENTS SUCH AS
— LEVELING OR BACKFILLING WHILE SWINGING
— DROPPING THE BUCKET TO BREAK CONCRETE OR STONE
— DOZING WITH THE BUCKET INSTEAD OF THE DOZER BLADE

12

⚠ CAUTION

WHEN REFILLING HYDRAULIC OIL OR REPLACING RETURN FILTER LOOSEN THE AIR BREATHER GRADUALLY IN ORDER TO RELEASE RESIDUAL PRESSURE IN TANK.

IMPORTANT

CHECK HYDRAULIC OIL LEVEL BEFORE STARTING OPERATION.
1. PARK MACHINE ON LEVEL SURFACE.
2. POSITION MACHINE WITH ARM CYLINDER FULLY RETRACTED AND BUCKET CYLINDER FULLY EXTENDED.
3. LOWER BUCKET TO GROUND.
4. CHECK OIL LEVEL WHICH MUST BE BETWEEN MARKS ON SIDE SIGHT. DO NOT OPERATE WITH HYDRAULIC OIL LEVEL OUTSIDE THE GAUGE MARKS.
5. IF NECESSARY, ADD OIL. USE HYDRAULIC OIL SHOWN IN LUBRICATION CHART.

LEVEL WHEN REFILLING
LEVEL GAUGE
(CENTER BETWEEN UPPER AND LOWER GRADUATIONS)

13

14

OK

KOBELCO
KOBE STEEL, LTD.

17

CONTROL LOCKOUT
CONTROL UNLOCK

19

24

⚠ CAUTION

DO NOT OPEN WITH ENGINE RUNNING

25

⚠ WARNING

DO NOT LOWER THE CANOPY WITH THE ENGINE RUNNING. THE ENGINE MUST BE STOPPED BEFORE LOWERING THE CANOPY TO AVOID ANY ACCIDENTAL ACTUATION OF THE CONTROL LEVERS.
FAILURE TO FOLLOW THIS PRECAUTION MAY RESULT IN INJURY TO PERSONNEL OR DAMAGE TO PROPERTY.
1. SUPPORT THE CANOPY WITH YOUR HAND AND UNLATCH THE LOCK LEVER.
2. SLOWLY LOWER THE CANOPY TO ITS RETRACTED POSITION.
3. SECURELY LATCH THE LOCK LEVER AFTER THE CANOPY IS LOWERED TO ITS RETRACTED POSITION.
FAILURE TO LATCH THE LOCK LEVER SECURELY MAY RESULT IN DAMAGE TO THE MACHINE.

28

SOLENOID VALVE CHECK

NORMAL VALUE ; 70-90Ω

LEVEL LOCK
SLOW SLEW
SECOND SPEED TRAVEL
EARTH

⚠ CAUTION

STOP THE ENGINE WITHOUT FAIL AT THE TIME OF INSPECTION

29

FILLED WITH ANTIFREEZE

32

37

Pb Pb

31

⚠ WARNING

LEVER STOP PLATE

35

36

38,40

39

KOBELCO

Model :
Serial Number :
Manufacturing Year :

16

41

⚠ WARNING

IMPROPER OPERATION OF SAFETY LOCK LEVER CAN RESULT IN INJURY TO HAND AND FINGERS.
GRIP THE SAFETY LOCK LEVER BY THE RED END WHEN OPERATING.

FIG 610-32-2 ①

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

INDEX FOR PART NO. SK025-2 プヒン カタログ


PART NO.	PAGE
	198-01-2①
	356-01-1①
ZS18C0802D	570-63-2①
ZS18C08030	029-01-1①
	087-01-1①
	087-01-2①
	190-01-1①
ZS18C08035	029-01-1①
	087-01-1①
	087-01-2①
	190-01-1①
	390-20-1①
	570-63-1①
ZS18C08040	198-01-1①
ZS18C08060	362-01-1①
ZS18C08065	056-32-1①
ZS18C10014	390-20-2①
	570-63-2①
ZS18C10016	029-01-1①
	056-32-1①
	114-32-1
	198-01-2①
	278-01-1
	278-32-1
ZS18C10020	013-01-1①
	198-01-1①
ZS18c10020	526-37-3
ZS18C10020	575-63-1①
ZS18C10025	029-01-1①
	056-32-1①
	066-01-1①
	079-01-1①
	198-01-1①
	390-20-1①
	436-01-1
	524-37-1
	570-63-1①
	592-01-1①
	594-01-1①
	596-01-1①
ZS18C10030	056-32-1①
	182-32-1
ZS18C10035	029-01-1①
ZS18C10050	575-63-1①
ZS18C10060	330-01-1
ZS18C10070	198-01-1①
ZS18C10075	414-01-1①
	580-01-1①
	585-01-1①
ZS18C10080	362-01-1①
	390-20-1①
	414-01-1①
	570-63-1①
	580-01-1①
	585-01-1①
ZS18C10085	362-01-1①
ZS18C10090	390-20-1①
	570-63-1①
ZS18C10095	390-20-1①
	570-63-1①
ZS18C12025	029-01-1①
ZS18C12030	278-01-1
	278-32-1
ZS18C14035	190-01-1①
ZS18C14040	198-01-3①
ZS18C16035	436-01-1
	592-01-1①
	594-01-1①
	596-01-1①
ZS18C16060	150-01-1①
ZS18C16065	198-01-1①
ZS18C16090	520-01-1
ZS18C20050	010-32-1①
ZS18C20080	010-32-1①
ZS28C06025	104-32A-1
ZS31C04010	524-37-1
	526-37-2
	526-37-3
ZS31C04016	524-37-1
ZS31C04030	104-32A-2
ZS31C05010	056-32-1①
	526-37-1
ZS31C05015	530-32-1
ZS31C05016	026-01-1①
ZS31C05120	526-37-3
ZS31C06012	526-37-1
ZS31C5012	526-37-1
ZS32T40008	526-37-2
ZS32T40010	526-37-3
ZS41C04008	198-01-2①
ZT12A13000	484-32-1
ZT12B19022	484-32-1
ZT12D25000	484-32-1
ZT51A20000	484-32-1
ZW16H08000	056-32-2①
	190-01-1①
	198-01-2①
ZW16H10000	056-32-1①
	198-01-1①
ZW16H12000	029-01-1①
	070-01-1①
	282-01-1①
ZW16H14000	190-01-1①
	198-01-3①
	322-01-1
ZW16H16000	198-01-2①
ZW16H20000	320-01-1
ZW16K05000	271-01-1
ZW16P04000	104-32A-2
ZW16P08000	026-01-1①
ZW16P10000	182-32-1
ZW16P12000	390-20-2①
	570-63-2①
ZW16X04000	524-37-1
ZW16X06000	192-32-1
	230-01-1①
	254-32-1①
	265-01-1①
ZW16X08000	026-01-1①
	029-01-1①
	056-32-2①
	087-01-2①
	102-01-1①
	104-32-1①
	104-32A-1
	178-20-1
	182-32-1
	190-01-1①
	198-01-2①
	356-01-1①
ZW16X10000	056-32-2①
	190-01-1①
	198-01-2①
	278-01-1
	278-32-1
	390-20-2①
	524-37-1
	526-37-1
	526-37-3
	570-63-2①
ZW25X04000	526-37-3


PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

モータ アッセン・MOTOR ASSY（SWING）

PV15V00001F1

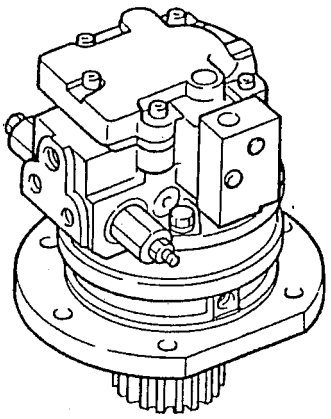


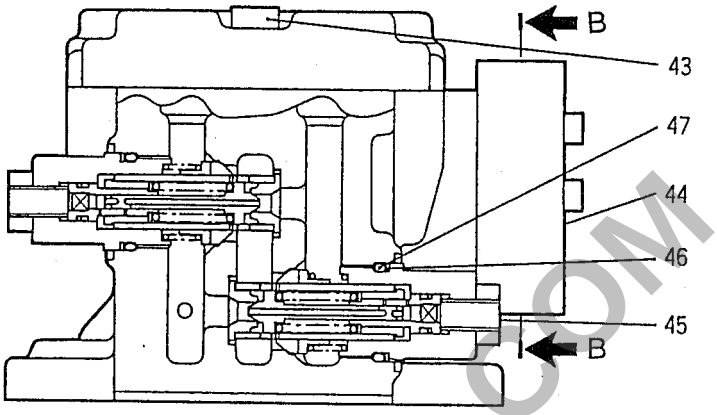

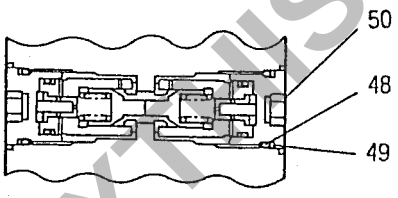

SECTION A-A

バイパス バルブ

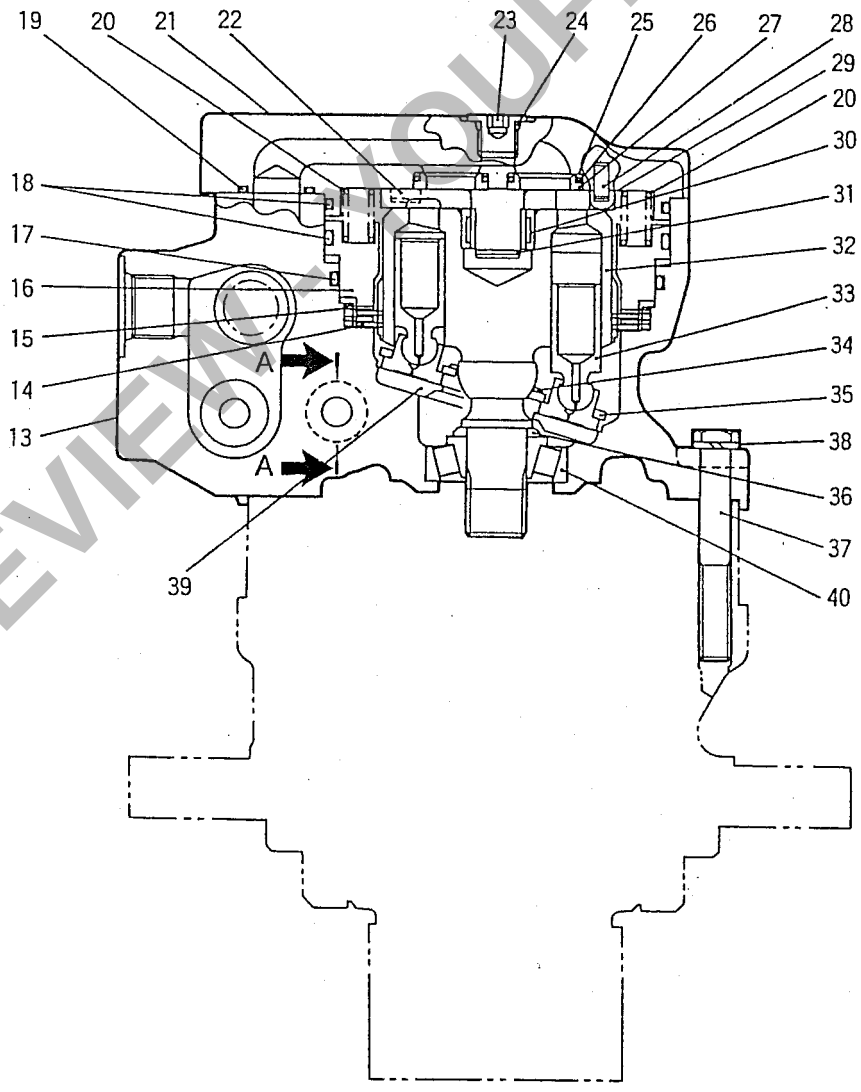


PREVIEW.YOUFIXTHIS.COM

Download full manual at youfixthis.com

シリンダ アッセン，バケット・CYLINDER ASSY, BACKET

PV01V00012F1

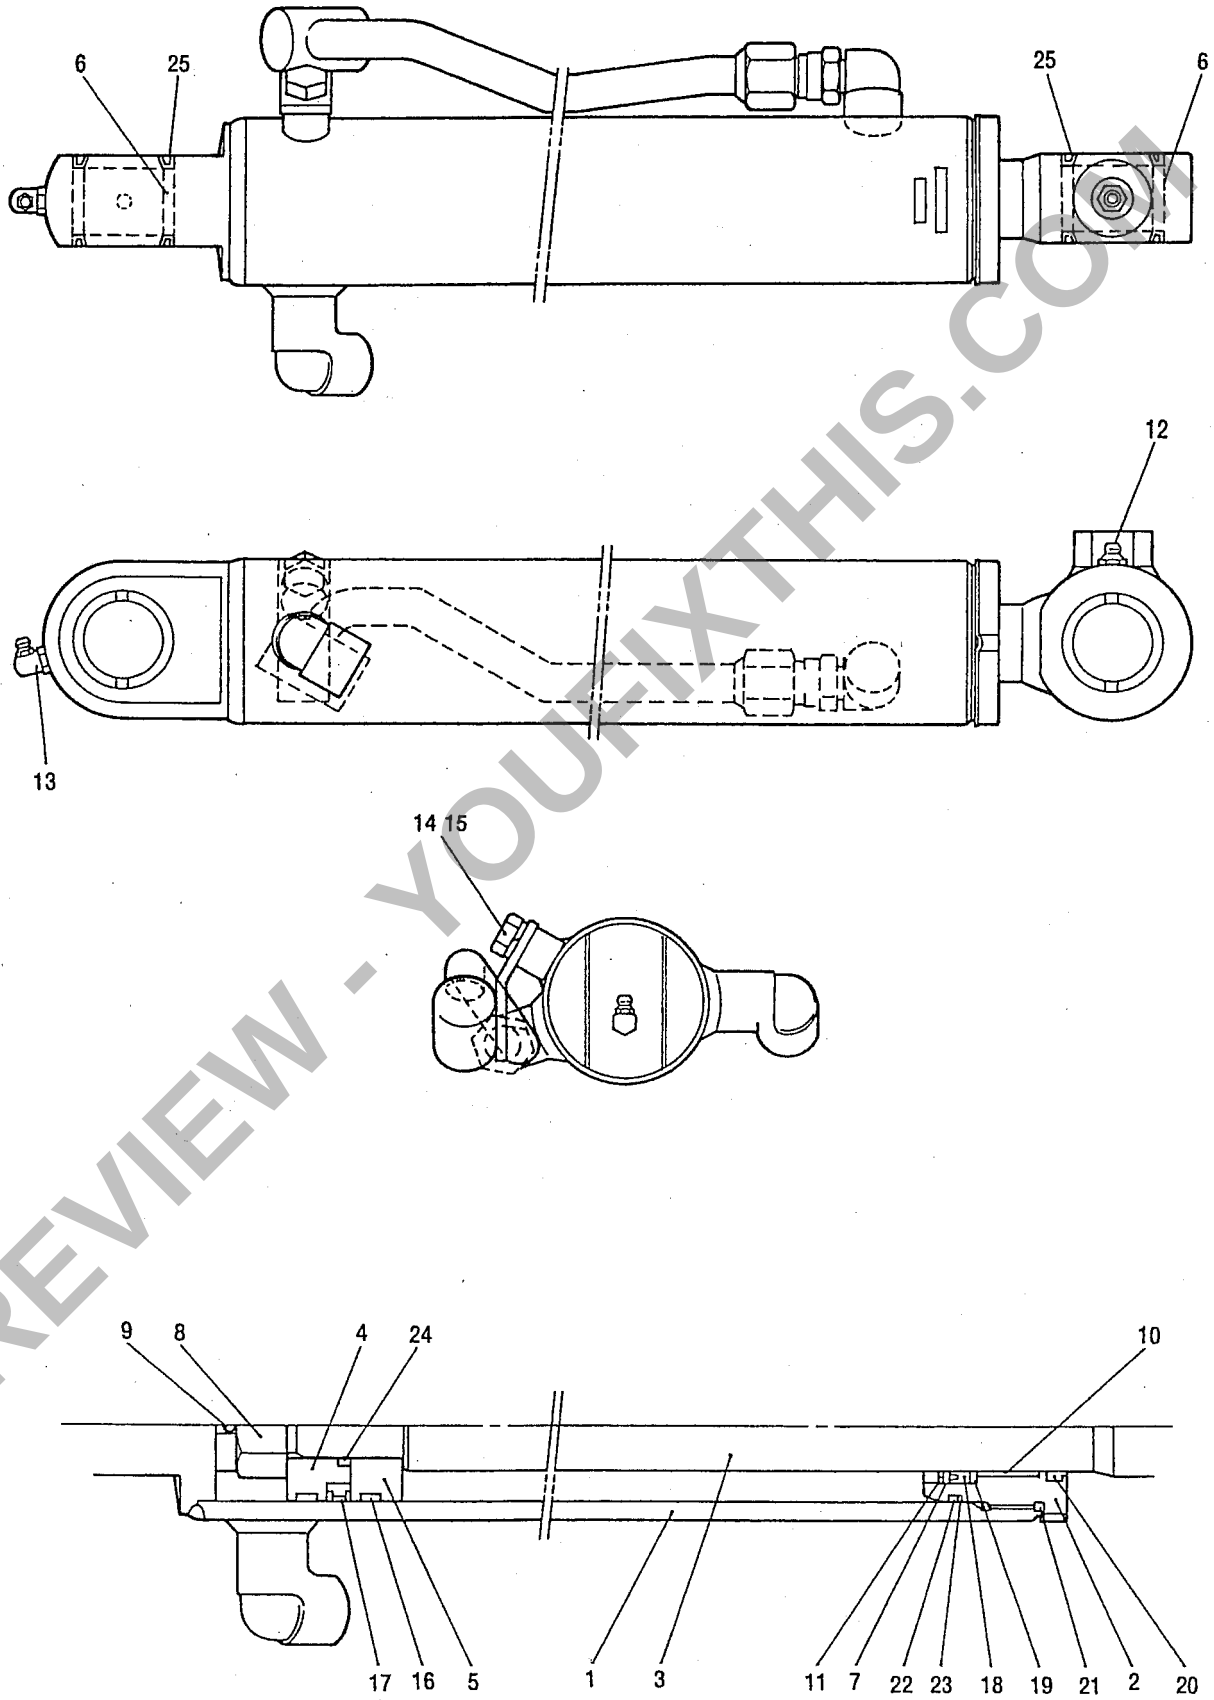

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

INDEX FOR PART NO.SK025-2 プヒンカタログ（油圧機器）

PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE
ZD12P00700	HC70-01-3	ZD75G08500	HC110-01-2		HC95-01-2
	HC74-01-2	ZD85G09500	HC70-01-3		
ZD12P01000	HC20-01-1	ZD85G10500	HC70-01-3		
	HC21-01-1	ZD85P00500	HC74-01-2		
	HC22-01-1	ZD85P01200	HC74-01-2		
	HC70-01-3	ZD85P01400	HC58-01-1		
ZD12P01100	HC11-01-1	ZD85P01600	HC162-01-1		
	HC164-01-1	ZD85P02000	HC162-01-1		
	HC50-01-3	ZD85P02100	HC50-01-3		
	HC70-01-4		HC58-01-1		
	HC82-01-2	ZD85P02600	HC50-01-3		
ZD12P01200	HC05-01-1		HC56-01-1		
	HC07-01-1	ZD91S02000	HC115-01-2		
	HC08-01-1	ZE82T02000	HC72-01-2		
	HC13-01-1		HC74-01-2		
	HC14-01-1	ZE82T04000	HC11-01-1		
	HC74-01-2		HC70-01-4		
ZD12P01400	HC58-01-1	ZE82T06000	HC72-01-2		
	HC70-01-3	ZG91S02000	HC100-01-2		
ZD12P01500	HC151-01-1		HC110-01-2		
ZD12P01600	HC162-01-1		HC90-01-2		
	HC74-01-2		HC91-01-2		
ZD12P01800	HC74-01-2	ZG91U02000	HC100-01-2		
ZD12P02000	HC14-01-1		HC95-01-2		
	HC141-01-2	ZG91V02000	HC110-01-2		
	HC143-01-2		HC90-01-2		
	HC162-01-1		HC91-01-2		
ZD12P02100	HC50-01-3	ZP26D05010	HC141-01-2		
	HC58-01-1		HC143-01-2		
ZD12P02400	HC100-01-2	ZR16X02000	HC162-01-1		
ZD12P02600	HC50-01-3	ZR16X02500	HC82-01-2		
	HC56-01-1	ZR26X03400	HC82-01-2		
ZD12P02800	HC110-01-2	ZR26X05200	HC82-01-2		
	HC115-01-2	ZS18C10016	HC100-01-2		
	HC90-01-2		HC95-01-2		
	HC91-01-2	ZS23C04010	HC151-01-1		
	HC95-01-2	ZS23C08018	HC74-01-2		
ZD12P02900	HC70-01-3	ZS23C08030	HC14-01-1		
ZD12P03200	HC82-01-2		HC143-01-2		
ZD75G05500	HC100-01-2	ZS23C08035	HC74-01-2		
ZD75G06500	HC115-01-2	ZS23C10025	HC70-01-3		
	HC90-01-2	ZS23C10050	HC82-01-2		
	HC91-01-2	ZS73C04010	HC115-01-2		
	HC95-01-2	ZW26X10000	HC100-01-2		

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

+------+
| 1B11 |
|(1B01)|
+------+
Y00D4980

(10) LOシステム
LUB.OIL SYSTEM

(A)=3TNE78A-YB (D)=
(B)= (E)=
(C)= (F)=

ミダシ REF.	レベル LEV.	ブヒンバンゴウ PART NO.	ブヒン メイ	DESCRIPTION	----Q'TY(コスウ)---- (A)(B)(C)(D)(E)(F)	I P/U	A	R
1	.	119810-32000	LO-P CMP	PUMP ASSY, LUB. OIL	1			
11	.	129150-32020	PK(LO-P	GASKET, L.O. PUMP	1			(G)
12	.	26450-060252	6カクアナボルト 6X 25	BOLT M 6X 25	4			
13	.	119640-34800	ケンユボウ	DIPSTIC	1			
14	.	121520-34810	ガイド(ケンユボウ	GUIDE, DIPSTICK	1			
15	.	129150-35041	PK(キュウニュウカン)(ノンアス)	GASKET, (NON-ASB.)	1			(G)
16	.	119810-35400	LOキュウニュウカン CMP	PIPE ASSY, OIL INLET	1			
20	.	26106-080352	ツバボルト 8X 35	BOLT M 8X 35 PLATED	2			
21	.	129150-35101	ブラケット	BRACKET, STRAINER	1			
22	.	129150-35111	PK(フイルタブラケット)(ノンアス)	GASKET, (NON-ASB.)	1			(G)
23	.	129150-35151	フイルタ 80X80L	FILTER 80X80L	1			
24	.	119865-35300	LOチョウアツベン CMP	VALVE ASSY,OIL PRESS	1			
31	.	129150-35350	ナット(ベンホンタイ	NUT	1			
32	.	24311-000160	Oリング 1A P 16.0	O-RING 1A P-16.0	1			(G)
33	.	26106-080202	ツバボルト 8X 20	BOLT M 8X 20 PLATED	3			
34	.	124160-39140	カンツキテボルト 10	BOLT 10, PIPE JOINT	1			
35	.	119810-39200	LOパイプ CMP	PIPE ASSY, LUB. OIL	1			
39	.	124550-59820	カンツキテボルト 8	BOLT 8, PIPE JOINT	1			
40	.	22190-080002	シールワッシャ(コマル.ニトリル) 8	SEAL WASHER 8S	2			
41	.	23414-100000	パッキン(マル 10	GASKET 10, ROUND	2			(G)
42	.	121252-39450	ユアッスイッチ(0.5キロ)	SENDER, OIL PRESSURE	1			

------- REMARKS (ビコウ) ----------

(G) コウモク NO.19 ノ ミダシ NO.1 ニテ セットハン バイ シマス.

I(G) THESE PARTS ARE SOLD BY FIG.19, REF.NO.1.

Y097267

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 18 of 315 pages

The full manual includes:

- All 315 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kobelco SK025-2 Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual