Implement		Remarks		B1410 - B1610
Mower	Mid-mount	Max cutting width Max weight	(cm) (kg)	122 140
	Rotary-cutter (1-blade)	Max cutting width Max weight	(cm) (kg)	107 140
	Rear-mount (2 or 3 blade)	Max cutting width Max weight	(cm) (kg)	122 140
	Flail-mower	Max cutting width	(cm)	170
	Sickle bar	Max cutting width	(cm)	122
Rotary tiller		Max tilling width Max weight	(cm) (kg)	107 170
Bottom plough		Max size	(cm)	30 x 1
Disc plough		Max size	(cm)	56 x 1
Cultivator		Max size	(cm)	122 1 Row
Disc harrow		Max harrowing width Max weight	(cm) (kg)	122 120
Sprayer		Max tank capacity	(L)	150
Front blade		Max cutting width Sub frame	(cm)	122 Necessary
Rear blade		Max cutting width Max weight	(cm) (kg)	152 160
Front loader		Max lifting capacity Max width Sub frame	(kg) (cm)	200 110 Necessary
Box blade		Max cutting width Max weight	(cm) (kg)	107 170
Back hoe		Max digging depth Max weight Sub frame	(cm) (kg)	183 270 Necessary
Snow blower		Max working width Max weight Sub frame	(cm) (kg)	107 160 Necessary
Trailer		Max load capacity	(kg)	1000

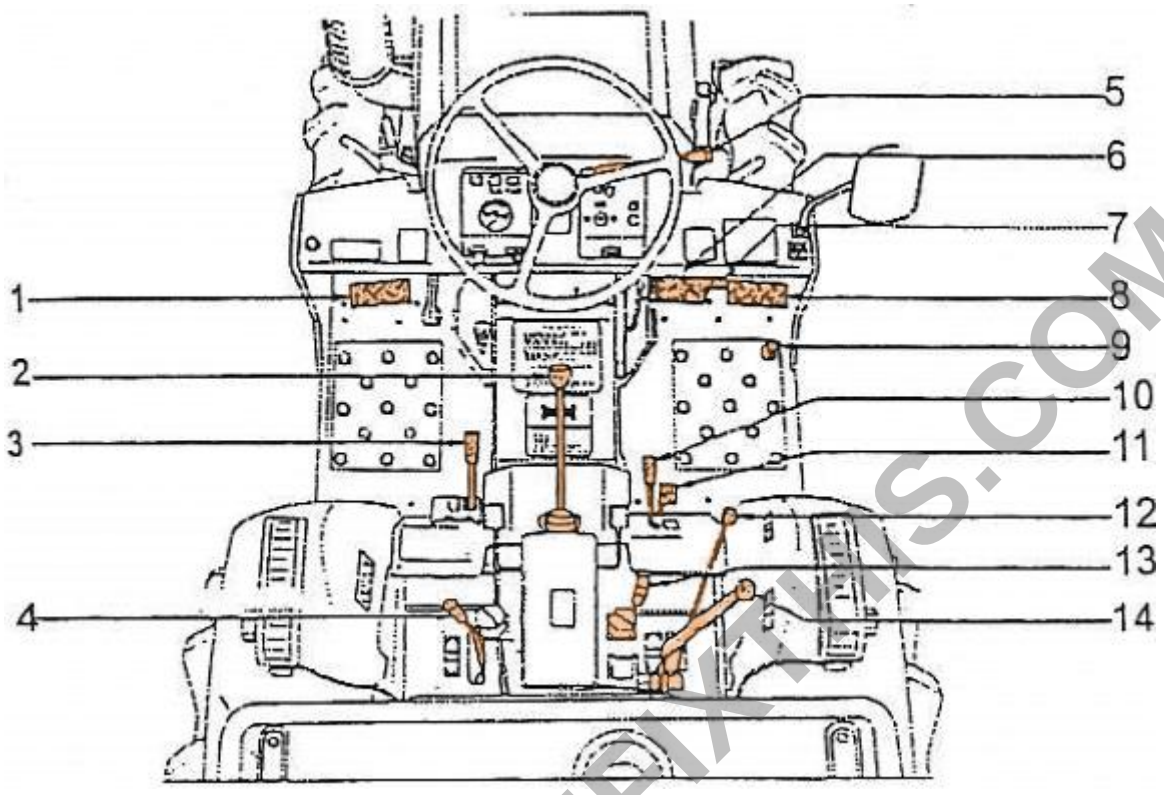
Note:

- **Implement size may vary depending on soil operating conditions**

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

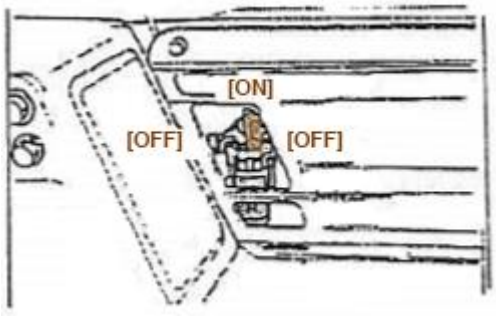
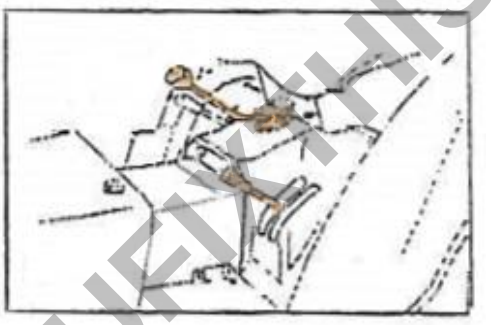
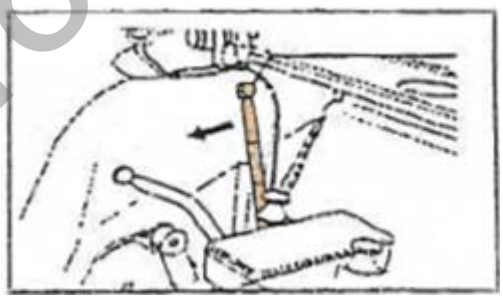
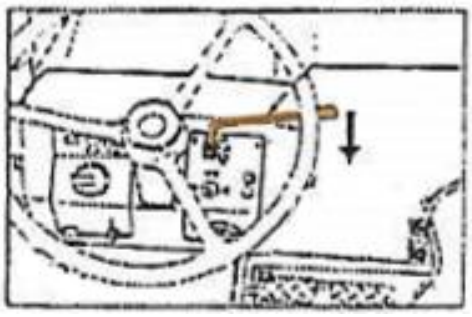
1.2. Controls



1. Clutch pedal
2. Main transmission gear lever
3. PTO transmission gear lever
4. 2WD or 4WD gear lever (under seat)
5. Hand accelerator lever
6. Right brake pedal
7. Brake pedal connection plate
8. Left brake pedal
9. Foot accelerator pedal
10. Intermediate transmission gear lever (low/high ratio)
11. Differential lock pedal
12. Attachment raise/lowering lever (via hydraulic connections at rear of the tractor)
13. Crawler gear lever (under seat)
14. Hydraulic lift-arm control lever

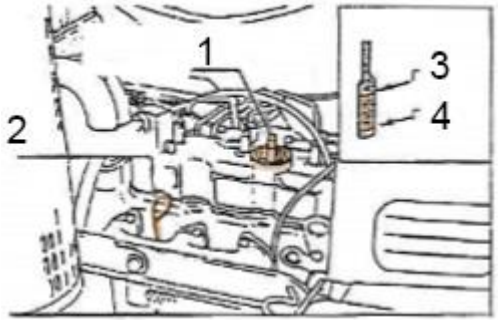
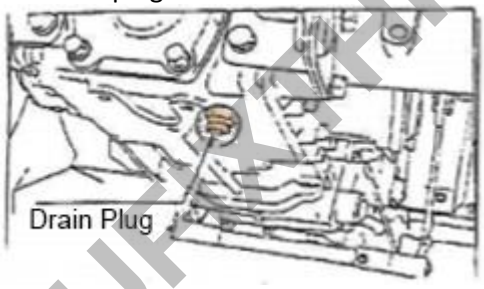
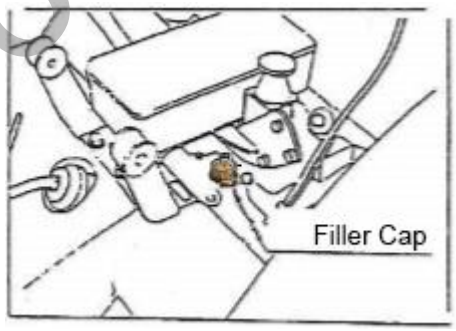
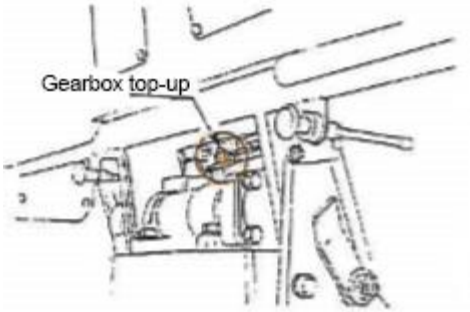
PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Pre-start Checks	Before starting the engine make sure that: 1. The diesel tap is on:  2. Gear and PTO levers are in neutral:  3. The hydraulic lift control lever is down: 
Starting the Engine	1. Pull the hand accelerator towards you to increase the revs:  2. Pre-heating – turn the ignition key to the left to the **TS** position to heat the glow plugs. In cold weather turn the key for 15 to 30 seconds until the glow plug indicator glows red.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

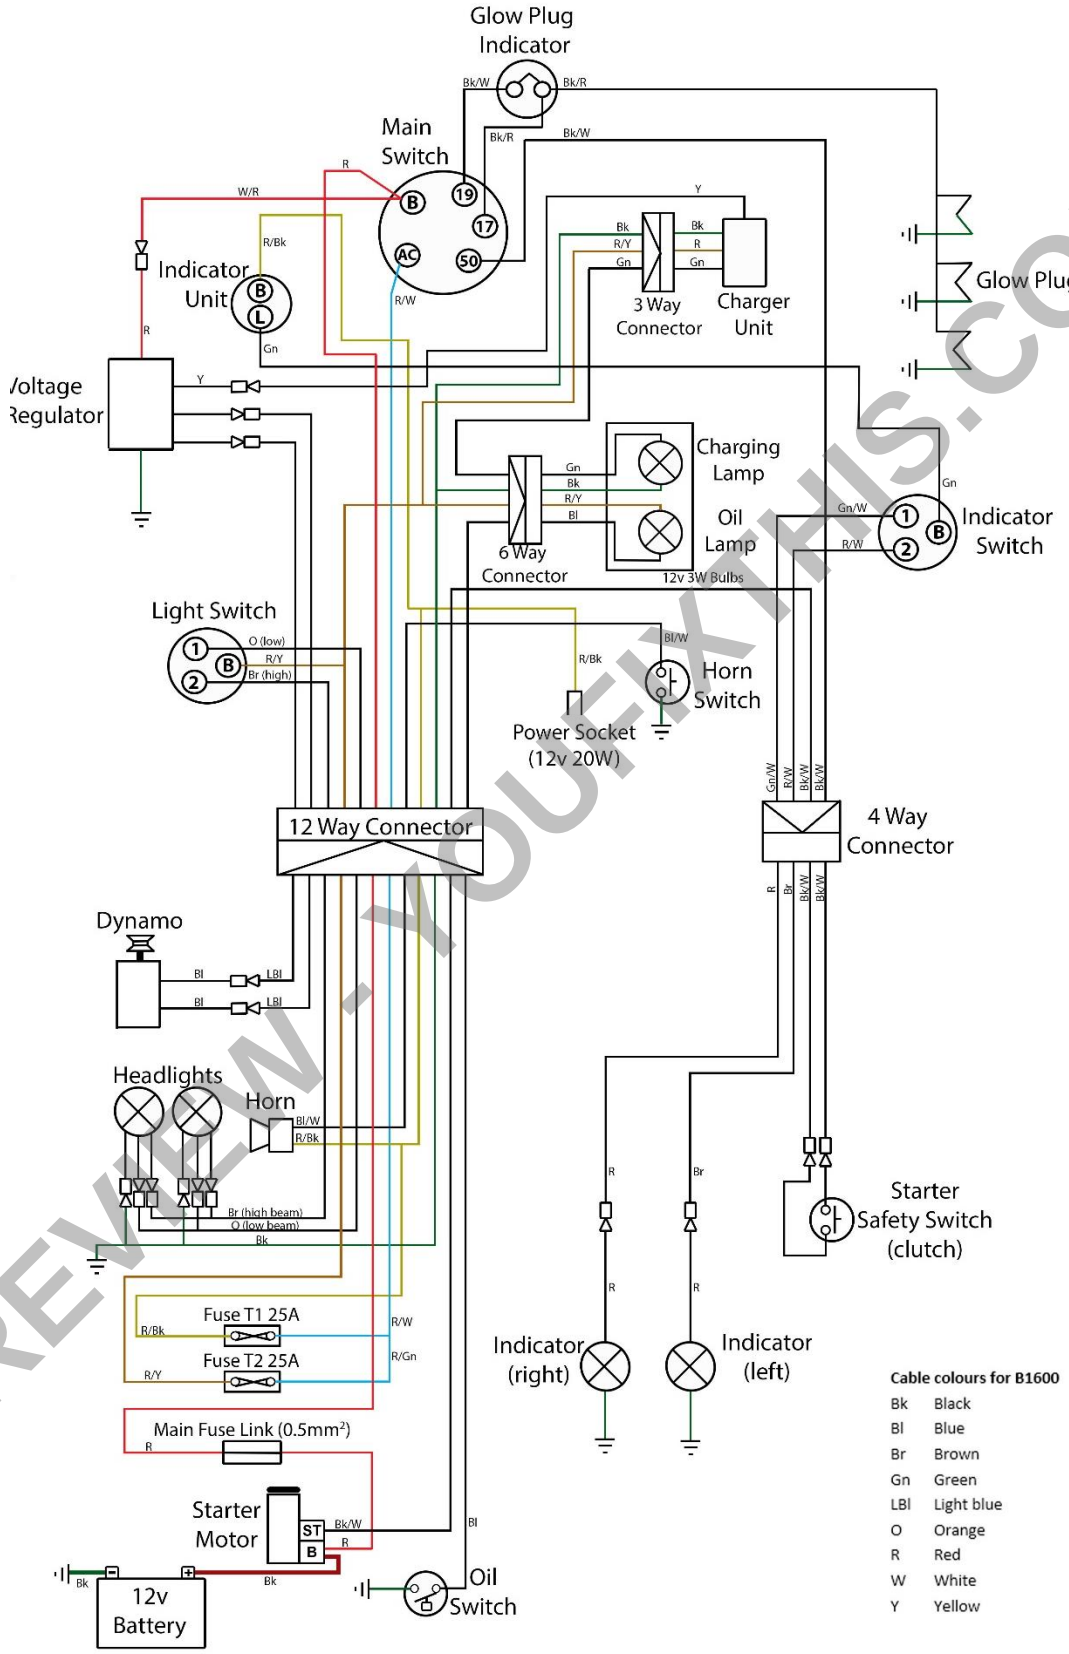
	Refit the sump plug after draining, then refill the engine with new oil to the maximum limit (3.4 litres):  1. Oil filler cap 2. Oil gauge 3. Maximum oil level 4. Minimum oil level
Transmission Oil Change	Remove the rear axle drain plug and drain the transmission oil:  Replace the drain plug and refill to the maximum limit (17 litres): 
Gearbox Oil Checks	Top-up the gearbox oil as necessary: 
Front Axle Oil Change	Unscrew the front axle drain plug and drain the oil (+/- 1.5 litres). Refit the drain plug and refill with new SAE90 oil up to the maximum limit (+/- 1.5 litres).

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

5. ELECTRICAL

Kubota B1400 Wiring Diagram



PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 5 of 25 pages

The full manual includes:

- All 25 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota B1200, B1400, B1500, B1600, B1702, B1902, B1410, B1610, B1200DT, B1400DT, B1600DT Operator Manual

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual