
Item	Part No.	Description	Book
ENGINE	01T001	CRANKCASE	100K0194
	01T002	OIL PAN	100K0194
	01T003	PISTON/CRANKSHAFT	100K0194
	01T004	MAIN BEARING CASE	100K0194
	01T005	FLYWHEEL	100K0194
	01T006	CYLINDER HEAD	100K0194
	01T007	VALVE/ROCKER ARM	100K0194
	01T008	NOZZLE HOLDER	100K0194
	01T009	NOZZLE HOLDER [COMPONENT PARTS]	100K0194
	01T010	CYLINDER HEAD COVER	100K0194
	01T011	INLET MANIFOLD	100K0194
	01T013	EXHAUST MANIFOLD	100K0194
	01T015	CAMSHAFT	100K0194
	01T016	GEAR CASE	100K0194
	01T017	WATER PUMP	100K0194
	01T018	TENSION PULLEY [CA]	100K0194
	01T019	WATER FLANGE	100K0194
	01T020	FUEL PUMP	100K0194
	01T021	INJECTION PUMP	100K0194
	01T022	INJECTION PUMP [COMPONENT PARTS]	100K0194
	01T023	ENGINE STOP LEVER	100K0194
	01T024	SPEED CONTROL PLATE	100K0194
	01T025	GOVERNOR	100K0194
	01T026	UPPER GASKET KIT	100K0194
	01T027	LOWER GASKET KIT	100K0194
ELECTRICAL SYSTEM	01T03501	DYNAMO [A AU]	100K0194
	01T03502	ALTERNATOR [CA]	100K0194
	01T03601	DYNAMO [A AU] [COMPONENT PARTS]	100K0194
	01T03602	ALTERNATOR [CA] [COMPONENT PARTS]	100K0194
CLUTCH	01T045	CLUTCH	100K0194
HYDRAULIC SYSTEM	01T094	HYDRAULIC GEAR PUMP	100K0194
	01T095	HYDRAULIC GEAR PUMP [COMPONENT PARTS]	100K0194
ENGINE	02T012	AIR CLEANER	100K0194
	02T01401	MUFFLER	100K0194
	02T01402	HORIZONTAL MUFFLER [OPTION]	100K0194
	02T028	ENGINE STOP ROD	100K0194
	02T029	ACCELERATOR LEVER	100K0194
FUEL SYSTEM	02T030	FUEL TANK	100K0194
	02T031	FUEL PIPE	100K0194
	02T032	FUEL FILTER [COMPONENT PARTS]	100K0194
COOLING WATER SYSTEM	02T03301	WATER PIPE	100K0194
	02T03401	RADIATOR	100K0194
ELECTRICAL SYSTEM	02T037	STARTER	100K0194
	02T038	STARTER [COMPONENT PARTS]	100K0194
	02T039	BATTERY	100K0194
	02T040	LIGHT	100K0194
	02T041	WORKING LIGHT [OPTION]	100K0194
	02T04201	PANEL / SWITCH [A AU]	100K0194
	02T043	PANEL BOARD [COMPONENT PARTS]	100K0194
	02T04401	WIRE HARNESS [A AU]	100K0194
CLUTCH	02T046	CLUTCH ROD	100K0194
	02T047	CLUTCH PEDAL	100K0194
	02T048	CLUTCH HOUSING	100K0194
TRANSMISSION	02T049	TRANSMISSION CASE	100K0194
	02T050	TRANSMISSION CASE COVER	100K0194


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

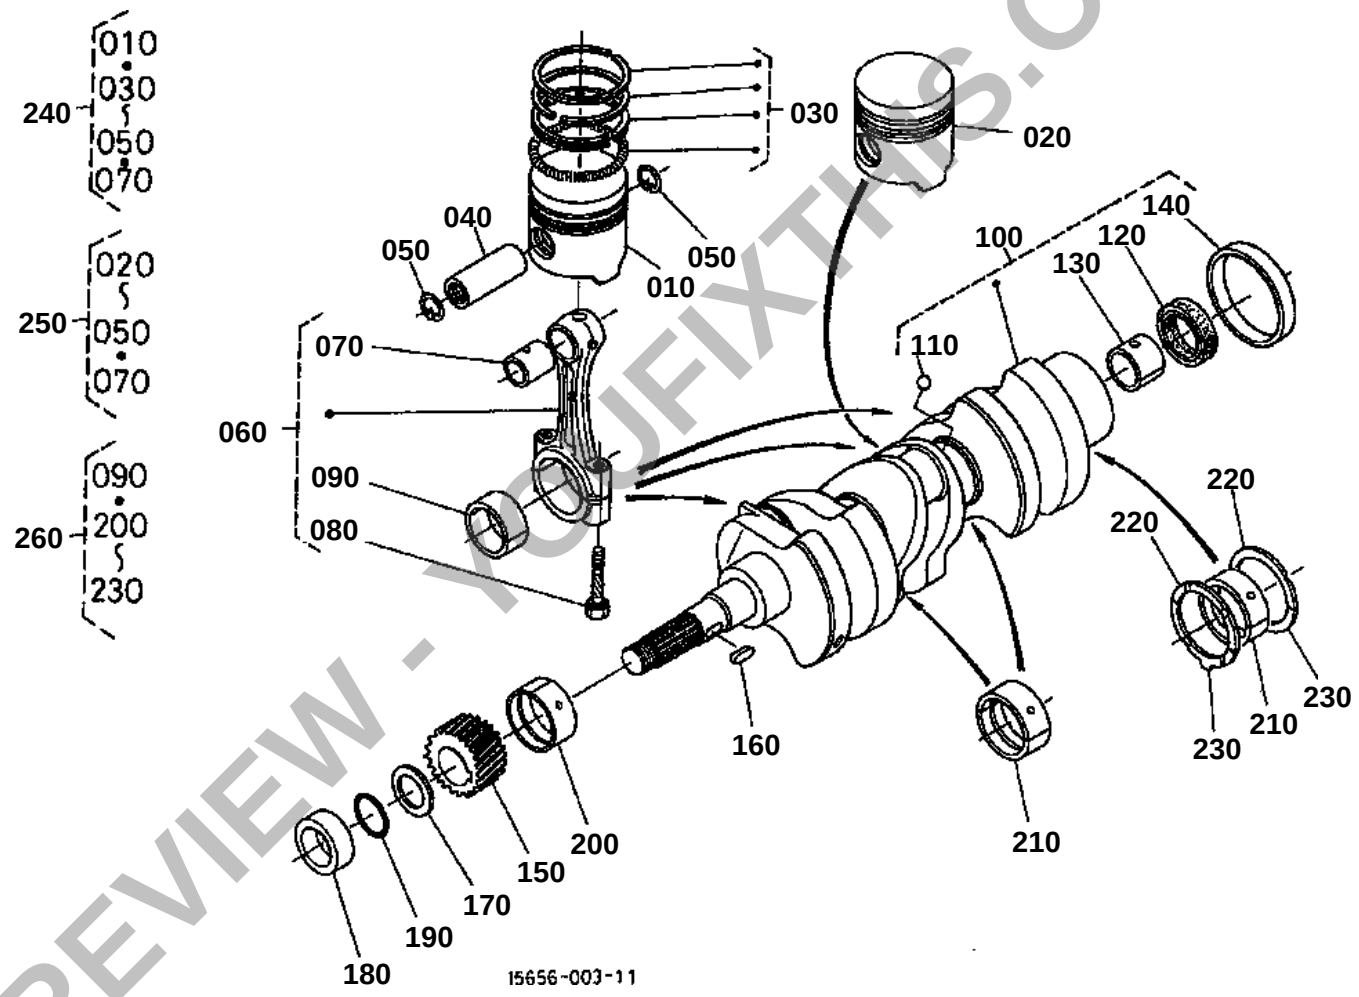


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

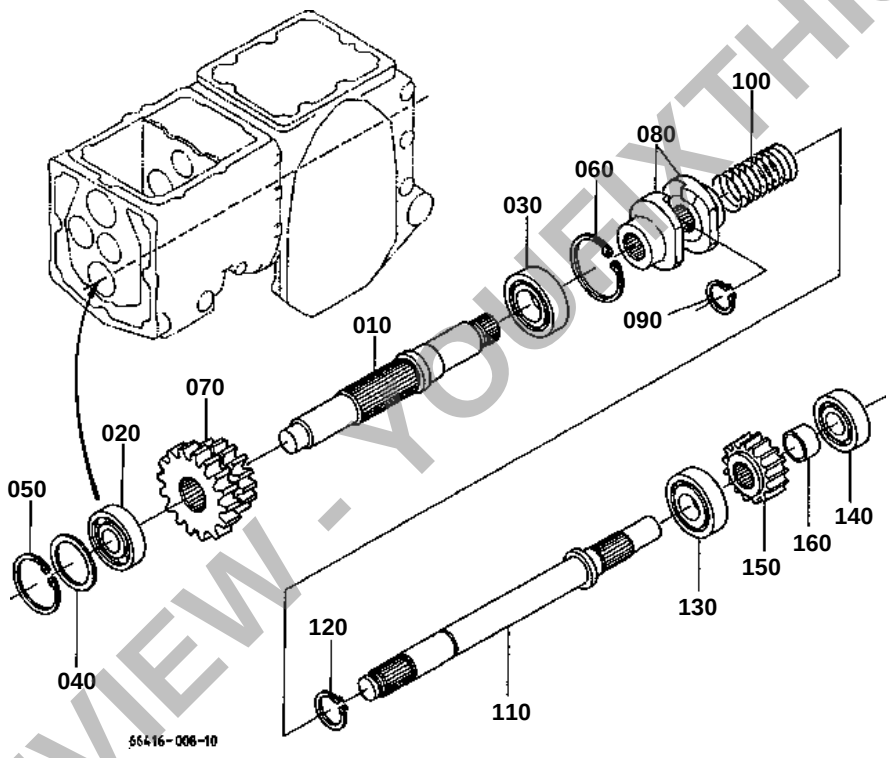


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

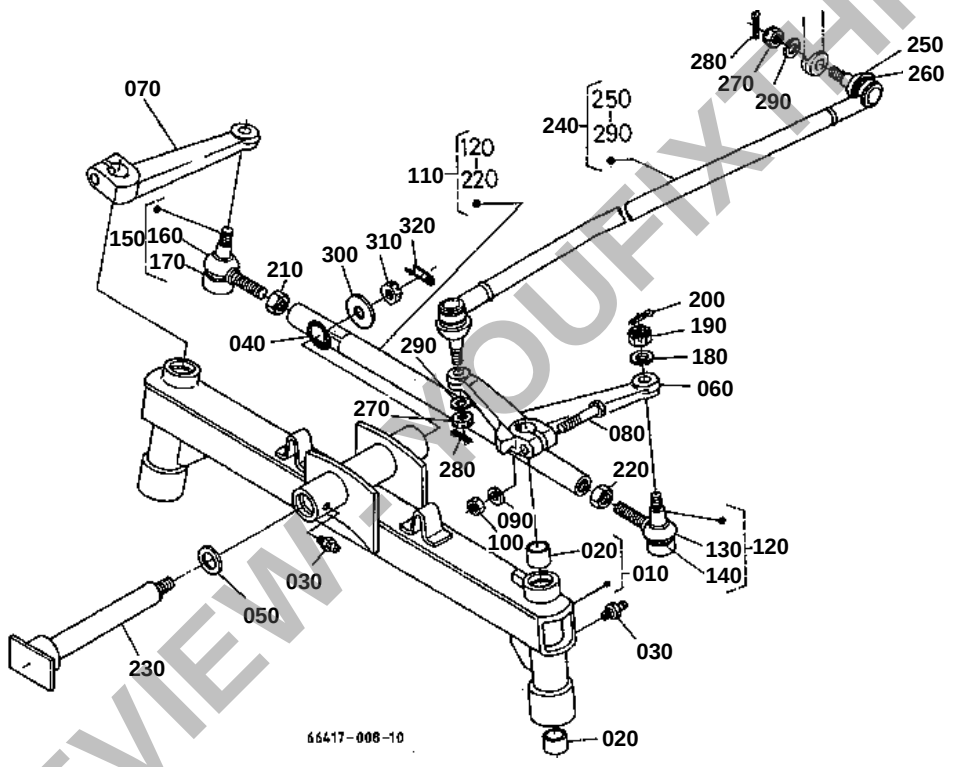

PREVIEW ONLY YOUFIXTHIS.COM

Download full manual at youfixthis.com

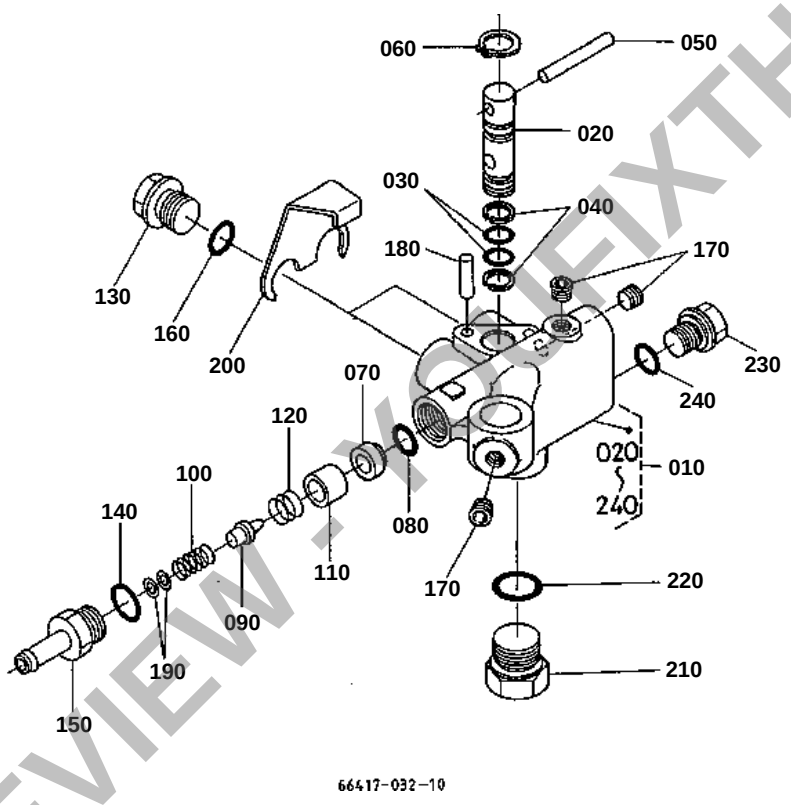

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

CRANKCASE

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	15655-01010	COMP.CRANKCASE	1				28.5	62.7
020	15261-96170	PLUG	3				0.005	0.011
030	15261-96160	PLUG	1				0.02	0.044
040	15321-96260	CAP SEALING	5				0.014	0.0308
050	15221-03490	CAP SEALING	1				0.02	0.044
060	15261-96010	PLUG	6				0.002	0.0044
070	15521-96020	PLUG	3				0.003	0.0066
080	15521-96030	PLUG	1				0.007	0.0154
090	05012-00609	PIN STRAIGHT	2				0.003	0.0066
100	05012-00814	PIN STRAIGHT	2				0.006	0.0132
110	15221-33650	PIN PIPE	1				0.004	0.0088
120	15231-33960	PIN PIPE	2				0.001	0.0022
130	15901-02310	LINER CYLINDER	3	<=755814			0.398	0.8756
140	15221-33700	O RING	1				0.001	0.0022
150	15261-73910	COVER WATER	1				0.13	0.286
160	15261-73920	GASKET WATER COVER	1	<=945299			0	0
160	15263-73920	GASKET WATER COVER	1	>=945300	↔		0.002	0.0044
170	01023-50618	BOLT	2				0.006	0.0132
180	15531-73170	JOINT DRAIN PIPE	1				0.145	0.319
190	15261-35010	ASSY PUMP OIL	1				0.32	0.704
200	15261-35150	GASKET OIL PUMP	1	<=945299			0	0
200	15263-35150	GASKET OIL PUMP	1	>=945300	↔		0.001	0.0022
210	15261-91022	BOLT	4				0.012	0.0264
220	15954-35662	GEAR OIL PUMP DRIVE	1				0.14	0.308
230	05712-00410	KEY FEATHER	1				0.001	0.0022
240	02771-60100	NUT FLANGE	1				0.01	0.022
250	15531-39010	SWITCH OIL	1				0.032	0.0704


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Part No.	Description	Book
TRANSMISSION	02T051	PROPELLER SHAFT	100K0194
	02T052	1ST SHAFT	100K0194
	02T053	2ND SHAFT	100K0194
	02T054	3RD SHAFT/5TH SHAFT	100K0194
	02T055	4TH SHAFT	100K0194
	02T056	PINION SHAFT GEAR	100K0194
	02T057	REVERSE SHAFT	100K0194
	02T058	REAR PTO	100K0194
	02T059	MID PTO	100K0194
	02T060	FRONT PTO [OPTION]	100K0194
SPEED CHANGE LEVER	02T061	MAIN GEAR SHIFT LEVER	100K0194
	02T062	MAIN GEAR SHIFT FORK	100K0194
	02T063	RANGE GEAR SHIFT LEVER	100K0194
	02T064	PTO GEAR SHIFT LEVER	100K0194
REAR AXLE/REAR WHEEL	02T065	REAR DIFFERENTIAL	100K0194
	02T066	DIFF.LOCK PEDAL	100K0194
	02T067	REAR AXLE	100K0194
	02T068	REAR AXLE CASE	100K0194
	02T06901	REAR WHEEL (7-16)	100K0194
	02T06902	REAR WHEEL (8-16)	100K0194
	02T06904	REAR WHEEL (29 X 12.00-15)	100K0194
	02T06906	REAR WHEEL (31 X 13.5-15 BAR) [A]	100K0194
BRAKE	02T070	BRAKE	100K0194
	02T071	BRAKE ROD	100K0194
	02T072	BRAKE PEDAL	100K0194
FRONT AXLE/FRONT WHEEL	02T073	FRONT AXLE/KNUCKLE ARM	100K0194
	02T074	FRONT WHEEL HUB	100K0194
	02T07501	FRONT WHEEL (4.50-10)	100K0194
	02T07502	FRONT WHEEL (5.00-10)	100K0194
	02T07503	FRONT WHEEL (18 X 9.50-8)	100K0194
	02T084	FRONT DRIVE LEVER	100K0194
	02T090	FRONT AXEL FRAME	100K0194
STEERING	02T09201	MANUAL STEERING	100K0194
	02T09202	POWER STEERING	100K0194
	02T09301	MANUAL STEERING [COMPONENT PARTS]	100K0194
	02T09302	POWER STEERING [COMPONENT PARTS]	100K0194
HYDRAULIC SYSTEM	02T096	HYDRAULIC PIPE (PS)	100K0194
	02T097	HYDRAULIC PIPE (FRONT)	100K0194
	02T098	HYDRAULIC PIPE (REAR)	100K0194
	02T09901	HYDRAULIC BLOCK (MS) [COMPONENT PARTS]	100K0194
	02T09902	HYDRAULIC BLOCK (PS) [COMPONENT PARTS]	100K0194
	02T100	LIFT ARM	100K0194
	02T10101	HYD.CYLINDER CAP [COMPONENT PARTS]	100K0194
	02T10102	HYD.CYLINDER CAP [COMPONENT PARTS]	100K0194
	02T10103	HYD.CYLINDER CAP [COMPONENT PARTS]	100K0194
	02T102	CONTROL VALVE	100K0194
	02T103	CONTROL VALVE [COMPONENT PARTS]	100K0194
	02T104	TOP LINK	100K0194
	02T105	LOWER LINK	100K0194
	02T106	LIFTING ROD	100K0194
HOOD(BONNET)/CHASSIS	02T107	HOOD (BONNET)	100K0194
	02T108	LACE	100K0194
	02T109	HOOD COVER REAR	100K0194
	02T110	SKIRT (FRONT)	100K0194
	02T111	SKIRT (SIDE)	100K0194


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

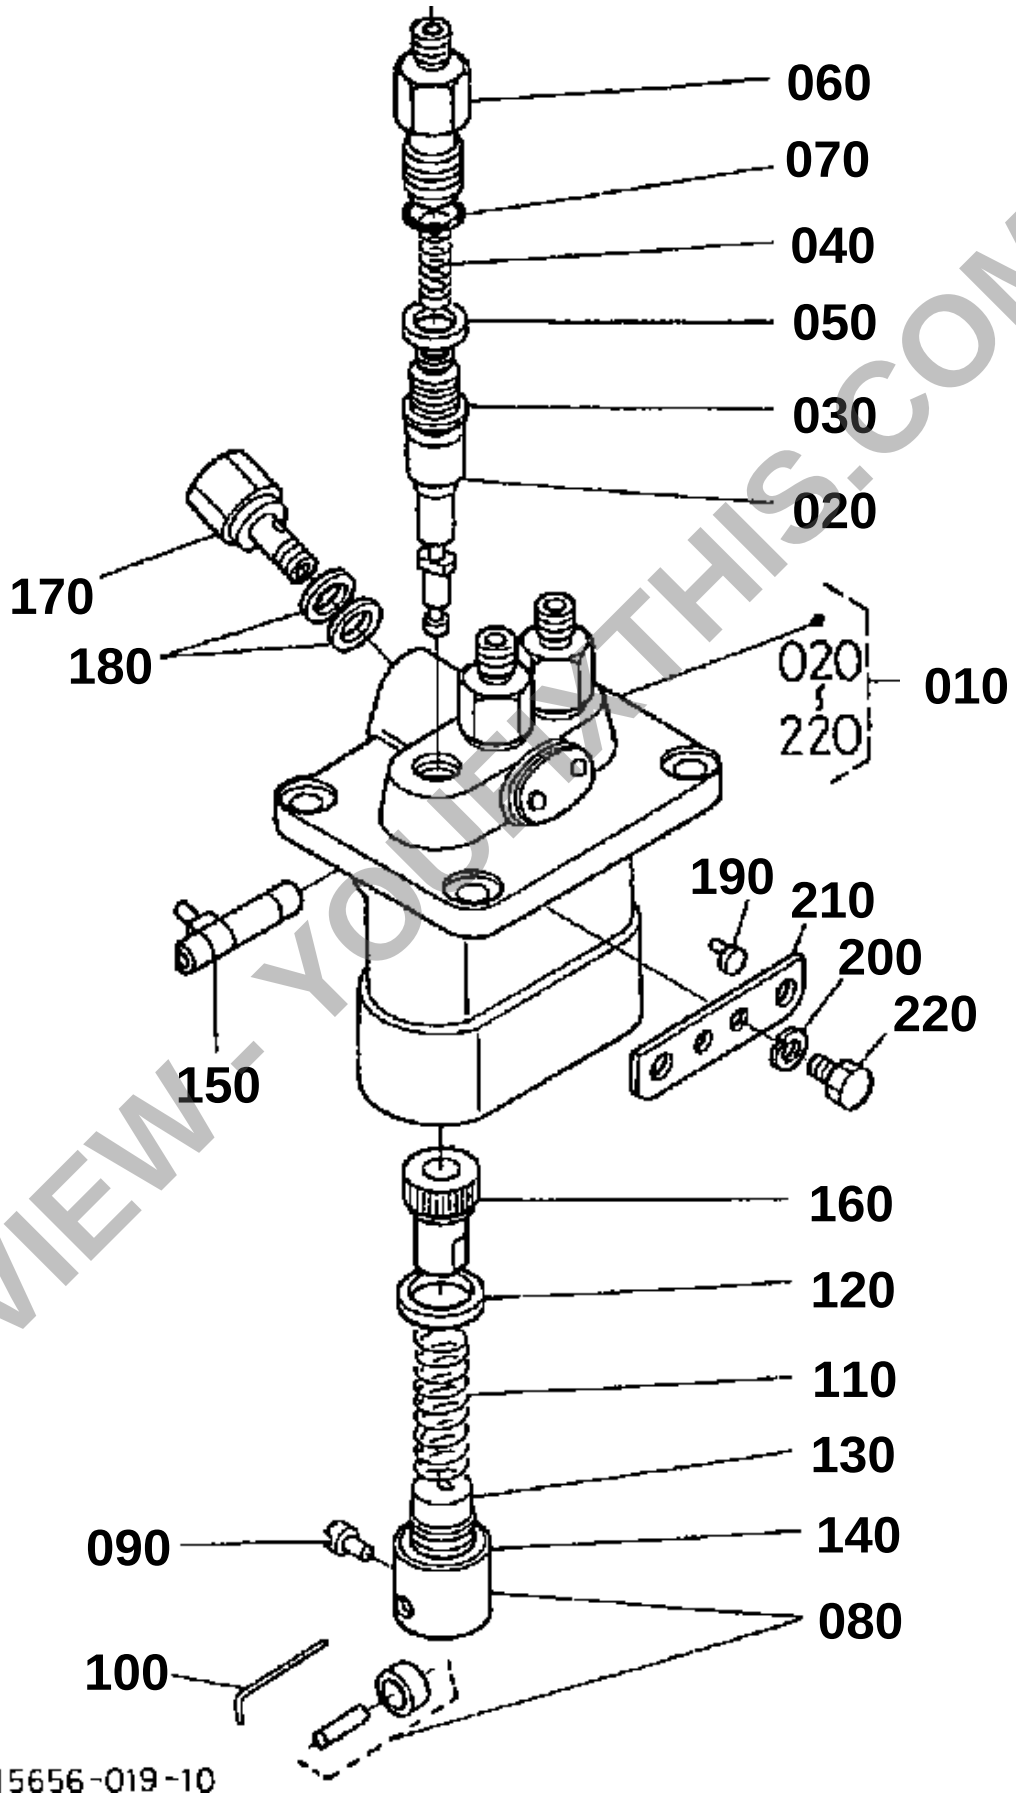

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

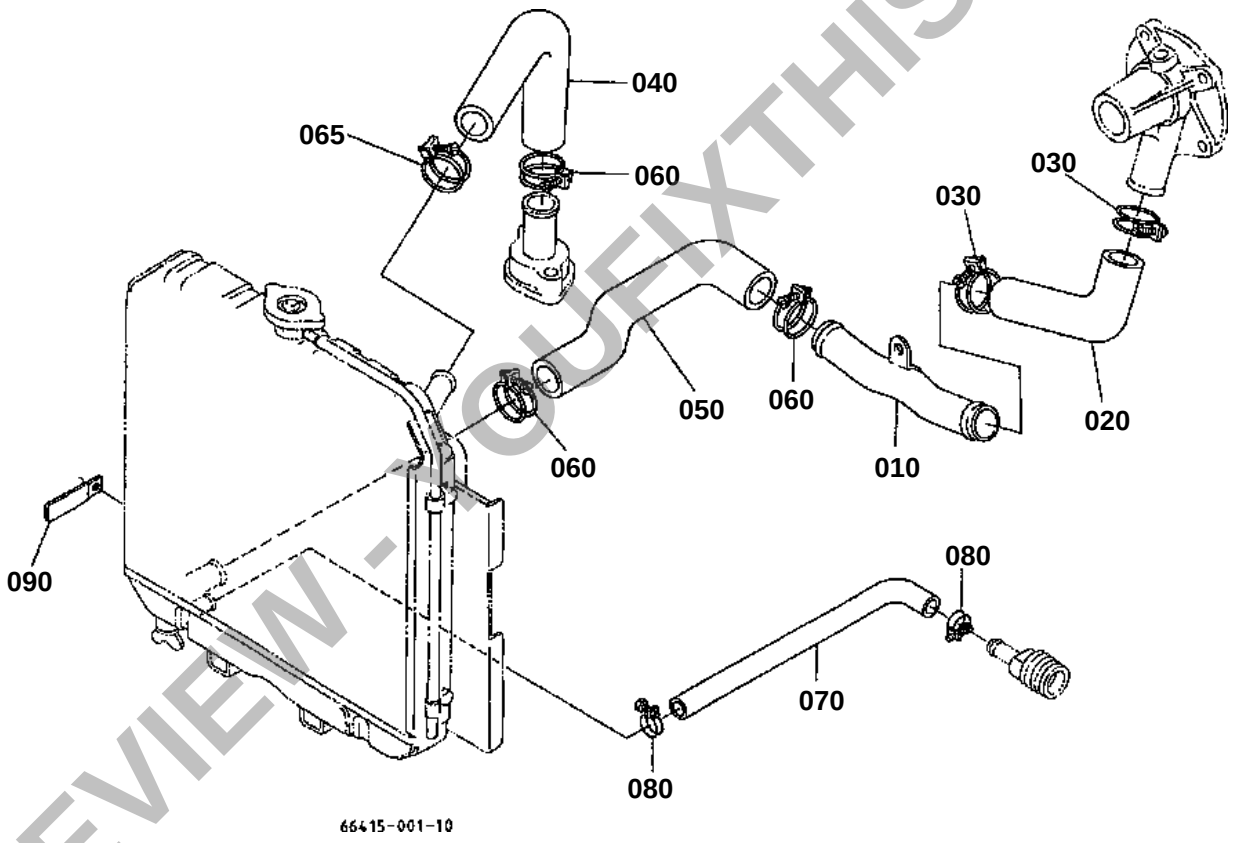

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	66416-14310	SHAFT THIRD	1				0.63	1.386
020	08101-06303	BEARING BALL	1				0.112	0.2464
030	67311-14520	BEARING BALL	1	<=10462			0.125	0.275
030	66415-39340	BEARING BALL	1	>=10463	↔		0.05	0.11
040	62131-14170	SHIM	1			0.5MM	0.002	0.0044
050	04611-00470	CIR CLIP INTERNAL	1				0.006	0.0132
060	04611-00520	CIR CLIP INTERNAL	1				0.009	0.0198
070	66416-14322	GEAR	1			13-17T	0.44	0.968
080	67001-14380	CAM ONE WAY CLUTCH	2				0.13	0.286
090	04612-00190	CIRCLIP EXTERNAL	1				0.001	0.0022
100	67001-14390	SPRING ONE-WAY	1				0.022	0.0484
110	66416-14510	SHAFT FIFTH	1				0.67	1.474
120	04612-00200	CIRCLIP EXTERNAL	1				0.001	0.0022
130	08101-06304	BEARING BALL	1				0.146	0.3212
140	67311-14530	BEARING BALL	1				0.11	0.242
150	66416-14530	GEAR	1			13T	0.21	0.462
160	66416-14540	COLLAR SHAFT	1				0.014	0.0308

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

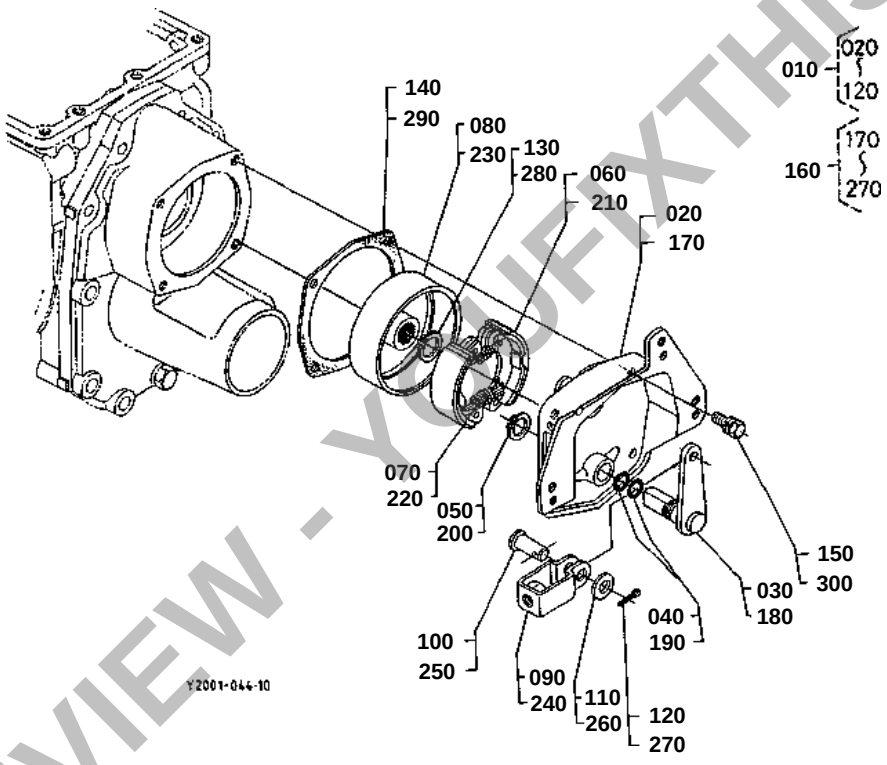

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	66416-36400	ASSY CAP CYLINDER	1				1.66	3.652
020	66416-36410	CAP CYLINDER	1	<=10250			1.5	3.3
020	66416-36413	CAP CYLINDER	1	>=10251	≠		1.44	3.168
030	66416-36810	ROTOR	1	<=10250			0.09	0.198
030	66416-36813	ROTOR	1	>=10251	≠		0.07	0.154
040	66416-36820	PLATE	1				0.05	0.11
050	01123-50814	BOLT	2				0	0
060	66416-36830	SEAT CHECK VALVE	1				0.003	0.0066
070	66416-36840	POPPET	1				0.01	0.022
080	66416-36850	SPRING	1				0.005	0.011
090	04724-00160	GASKET	1				0.003	0.0066
100	06331-35016	PLUG	1				0.04	0.088
110	04811-06100	O RING	1	<=10250			0.001	0.0022
110	04811-06100	O RING	2	>=10251			0.001	0.0022
120	66416-36860	PLUG SCREW	3				0.001	0.0022
130	02116-50100	NUT	2				0.004	0.0088
140	04013-50080	WASHER PLAIN	2				0	0
150	66416-36870	SPRING PLATE	2				0.001	0.0022
160	66416-36880	COVER	1				0.02	0.044
170	04810-00120	RING	1				0.001	0.0022
180	66416-36890	RING	1				0.001	0.0022

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 12 of 269 pages

The full manual includes:

- All 269 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota B1550E Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual