

Item	Part No.	Description	Book
ENGINE	01T001	CRANKCASE	100K0183
	01T002	OIL PAN	100K0183
	01T003	PISTON/CRANKSHAFT	100K0183
	01T004	MAIN BEARING CASE	100K0183
	01T005	FLYWHEEL	100K0183
	01T006	CYLINDER HEAD	100K0183
	01T007	VALVE/ROCKER ARM	100K0183
	01T008	NOZZLE HOLDER	100K0183
	01T009	NOZZLE HOLDER [COMPONENT PARTS]	100K0183
	01T010	CYLINDER HEAD COVER	100K0183
	01T011	INLET MANIFOLD	100K0183
	01T013	EXHAUST MANIFOLD	100K0183
	01T015	CAMSHAFT	100K0183
	01T016	GEAR CASE	100K0183
	01T017	WATER PUMP	100K0183
	01T018	TENSION PULLEY [CA]	100K0183
	01T019	WATER FLANGE	100K0183
	01T020	FUEL PUMP	100K0183
	01T021	INJECTION PUMP	100K0183
	01T022	INJECTION PUMP [COMPONENT PARTS]	100K0183
	01T023	ENGINE STOP LEVER	100K0183
	01T024	SPEED CONTROL PLATE	100K0183
	01T025	GOVERNOR	100K0183
	01T026	UPPER GASKET KIT	100K0183
	01T027	LOWER GASKET KIT	100K0183
ELECTRICAL SYSTEM	01T03501	DYNAMO [A] [AU] [NZ]	100K0183
	01T03502	ALTERNATOR [CA]	100K0183
	01T03601	DYNAMO [A] [AU] [NZ] [COMPONENT PARTS]	100K0183
	01T03602	ALTERNATOR [CA] [COMPONENT PARTS]	100K0183
CLUTCH	01T045	CLUTCH	100K0183
HYDRAULIC SYSTEM	01T096	HYDRAULIC GEAR PUMP	100K0183
	01T097	HYDRAULIC GEAR PUMP [COMPONENT PARTS]	100K0183
ENGINE	02T012	AIR CLEANER	100K0183
	02T01401	MUFFLER	100K0183
	02T01402	HORIZONTAL MUFFLER [OPTION]	100K0183
	02T028	ENGINE STOP ROD	100K0183
	02T029	ACCELERATOR LEVER	100K0183
FUEL SYSTEM	02T030	FUEL TANK	100K0183
	02T031	FUEL PIPE	100K0183
	02T032	FUEL FILTER [COMPONENT PARTS]	100K0183
COOLING WATER SYSTEM	02T03301	WATER PIPE	100K0183
	02T03401	RADIATOR	100K0183
ELECTRICAL SYSTEM	02T037	STARTER	100K0183
	02T038	STARTER [COMPONENT PARTS]	100K0183
	02T039	BATTERY	100K0183
	02T040	LIGHT	100K0183
	02T041	WORKING LIGHT [OPTION]	100K0183
	02T04201	PANEL/SWITCH [A] [AU] [NZ]	100K0183
	02T04202	PANEL/SWITCH [CA]	100K0183
	02T043	PANEL BOARD [COMPONENT PARTS]	100K0183
	02T04401	WIRE HARNESS [A] [AU] [NZ]	100K0183
	02T04402	WIRE HARNESS [CA]	100K0183
CLUTCH	02T046	CLUTCH ROD	100K0183
	02T047	CLUTCH PEDAL	100K0183
	02T048	CLUTCH HOUSING	100K0183
TRANSMISSION	02T049	TRANSMISSION CASE	100K0183
	02T050	TRANSMISSION CASE COVER	100K0183
	02T051	HST	100K0183
	02T05201	HST [COMPONENT PARTS]	100K0183
	02T05202	HST [COMPONENT PARTS]	100K0183

PREVIEW YOUFIXTHIS.COM
Download full manual at youfixthis.com

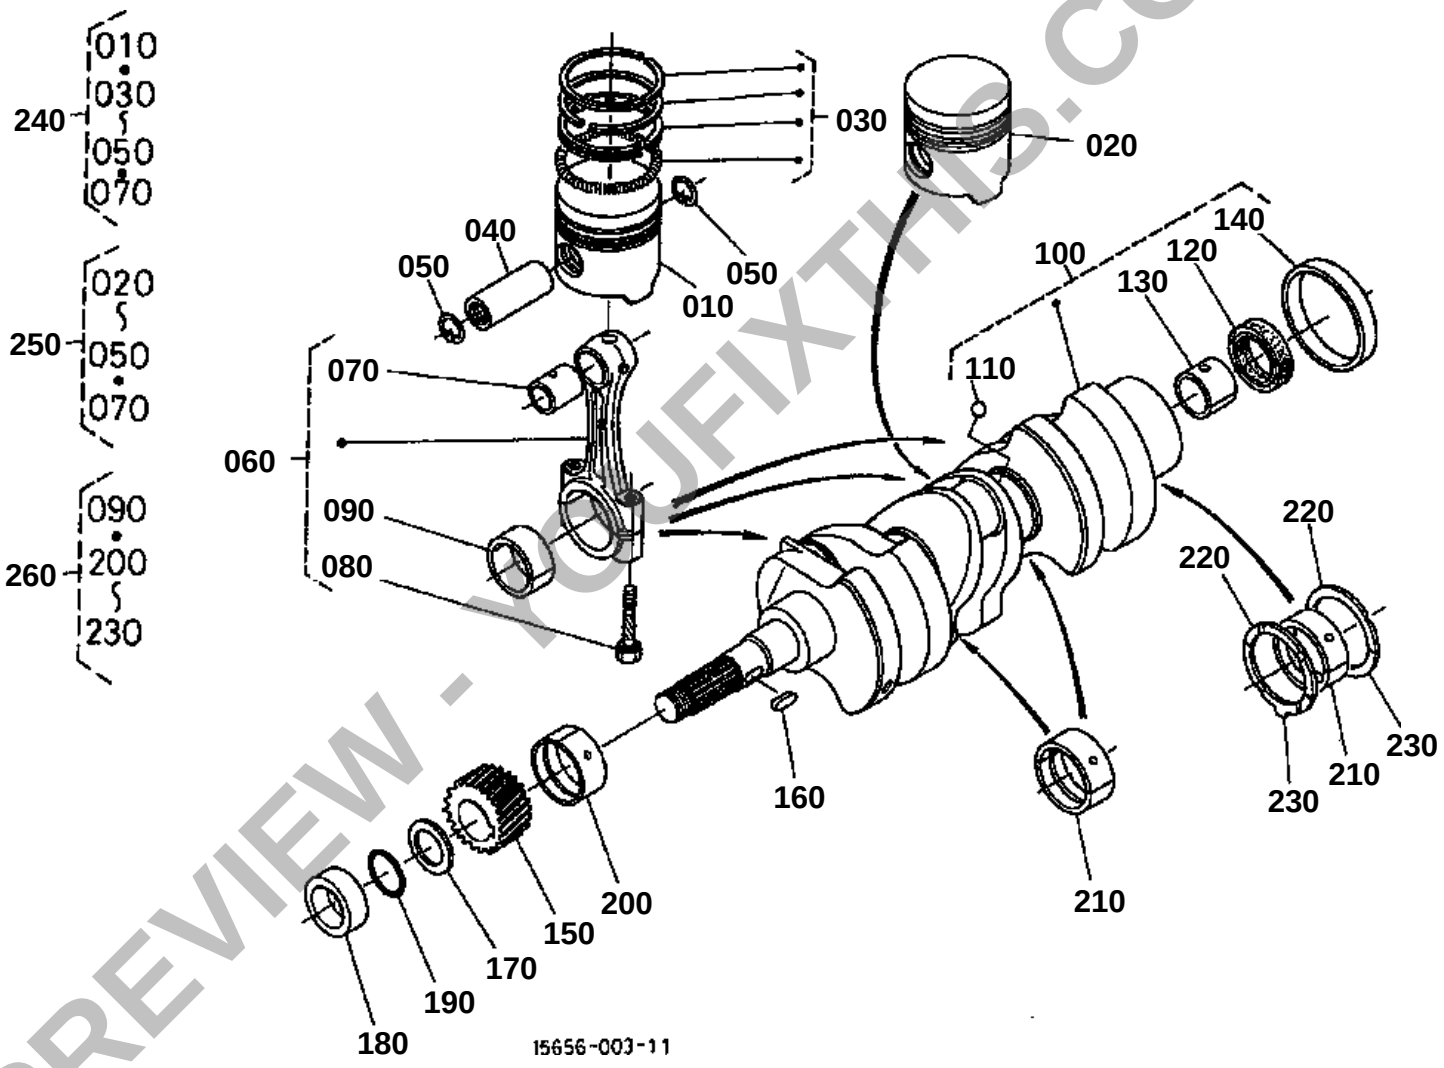


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

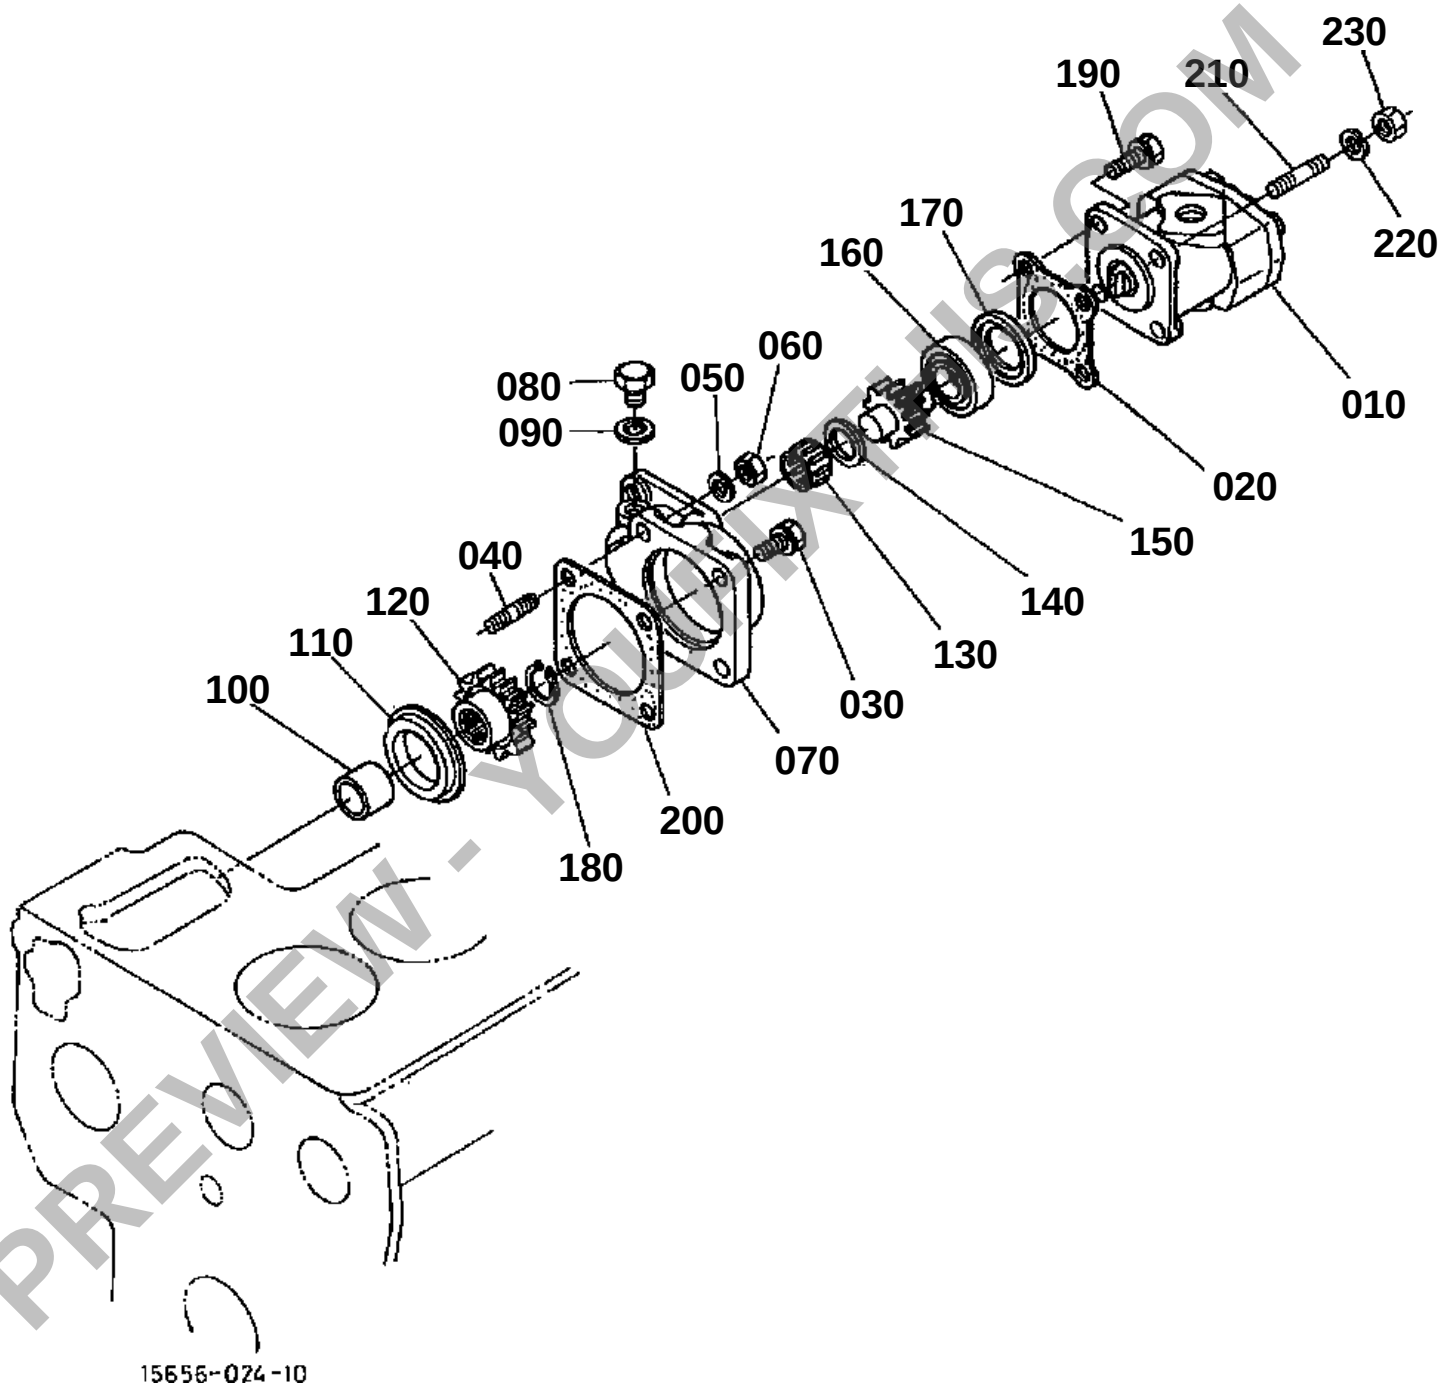


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

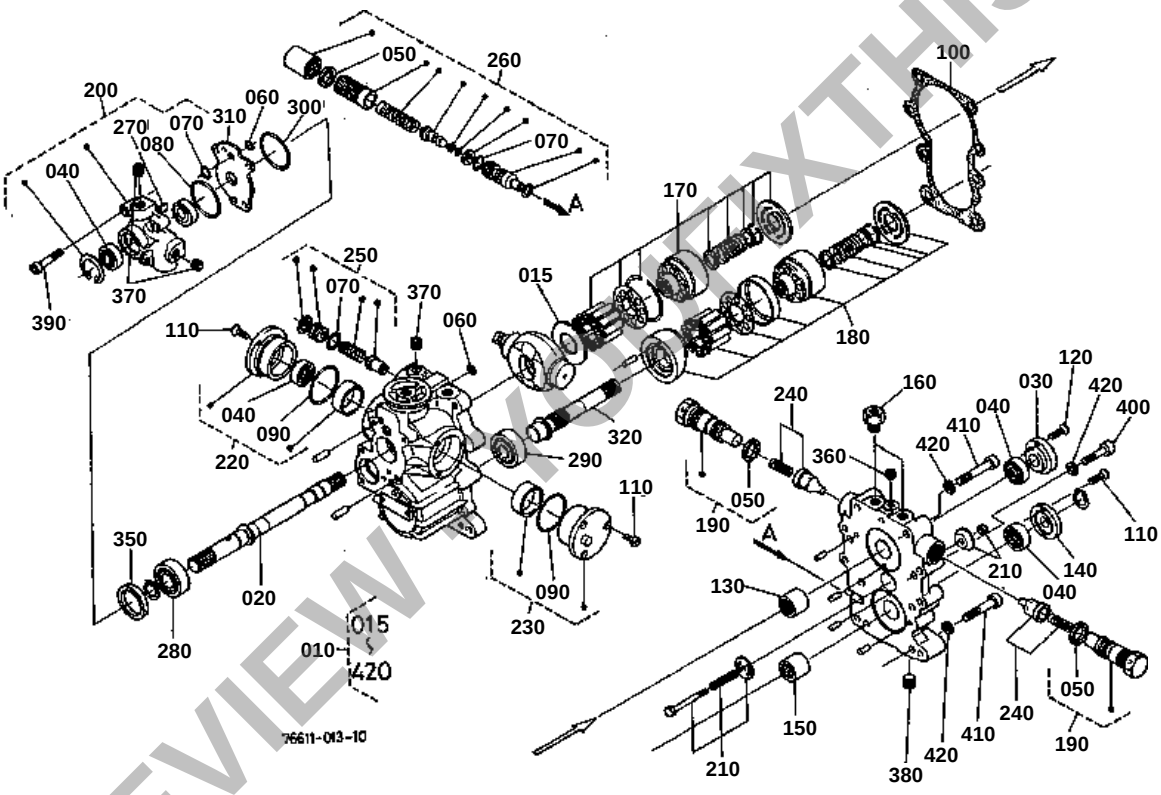

PREVIEW ONLY

Download full manual at youfixthis.com

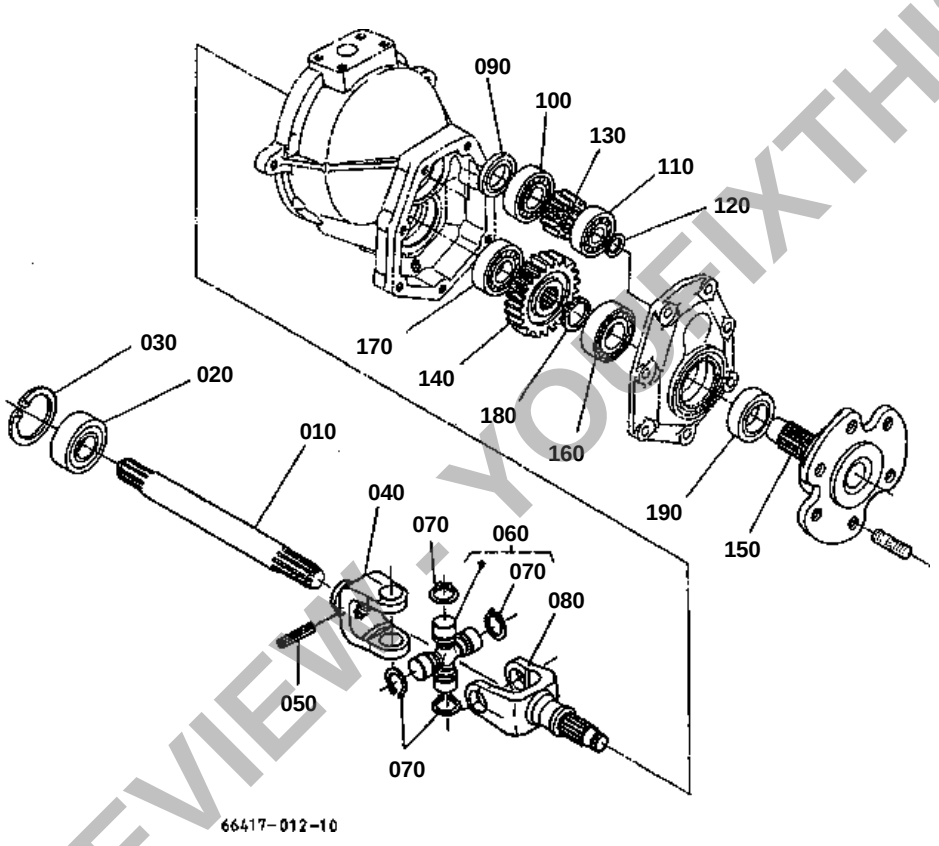

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new


REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	15956-21110	PISTON	3			STD	0.32	0.704
010	15956-21910	PISTON	3			+0.5MM	0.33	0.726
030	15901-21050	ASSY PISTON RING	3			STD	0.03	0.066
030	15901-21090	ASSY PISTON RING	3			+0.5MM	0.033	0.0726
040	15261-21310	PIN PISTON	3				0.102	0.2244
050	15261-21330	CIRCLIP PISTON PIN	6				0.001	0.0022
060	15381-22010	ASSY CONNECTING ROD	3	<=755815			0	0
060	15694-22010	ASSY CONNECTING ROD	3	>=755816	↔		0.5	1.1
070	15261-21980	BUSH PISTON PIN	3				0.012	0.0264
080	15381-22140	BOLT CONNECTING ROD	6				0.02	0.044
090	15531-22310	METAL CRANKPIN	3	<=755815		STD SET	0	0
090	15694-22310	METAL CRANKPIN	3	>=755816	↔	STD SET	0.02	0.044
090	15694-22970	METAL CRANKPIN	3	<=755815		-0.2MM SET	0.025	0.055
090	15694-22970	METAL CRANKPIN	3	>=755816	↔	-0.2MM SET	0.025	0.055
090	15531-22980	METAL CRANKPIN	3	<=755815		-0.4MM SET	0	0
090	15694-22980	METAL CRANKPIN	3	>=755816	↔	-0.4MM SET	0.02	0.044
100	15752-23010	COMP.CRANKSHAFT	1				8	17.6
110	07715-00401	BALL	3				0.001	0.0022
120	09400-14247	SEAL OIL	1				0.004	0.0088
130	66621-14120	BEARING DRY	1				0.006	0.0132
140	19215-23280	SLEEVE CRANKSHAFT	1				0.05	0.11
150	15752-24110	GEAR CRANKSHAFT	1				0.046	0.1012
160	05712-00515	KEY FEATHER	1				0.003	0.0066
170	15752-23310	SLINGER OIL	1				0.002	0.0044
180	15752-23250	COLLAR CRANKSHAFT	1				0.043	0.0946
190	04811-05230	RING	1				0.001	0.0022
200	15261-23470	METAL CRANKSHAFT	1	<=755815		STD	0	0
200	15694-23470	METAL CRANKSHAFT	1	>=755816	↔	STD	0.035	0.077
200	15261-23910	METAL CRANKSHAFT	1	<=755815		-0.2MM	0	0
200	15694-23910	METAL CRANKSHAFT	1	>=755816	↔	-0.2MM	0.04	0.088
200	15261-23920	METAL CRANKSHAFT	1	<=755815		-0.4MM	0	0
200	15694-23920	METAL CRANKSHAFT	1	>=755816	↔	-0.4MM	0.045	0.099
210	15261-23480	METAL CRANKSHAFT	3	<=755815		STD SET	0	0
210	15694-23480	METAL CRANKSHAFT	3	>=755816	↔	STD SET	0.04	0.088
210	15261-23930	METAL CRANKSHAFT	3	<=755815		-0.2MM SET	0	0
210	15694-23930	METAL CRANKSHAFT	3	>=755816	↔	-0.2MM SET	0.05	0.11
210	15261-23940	METAL CRANKSHAFT	3	<=755815		-0.4MM SET	0	0
210	15694-23940	METAL CRANKSHAFT	3	>=755816	↔	-0.4MM SET	0.046	0.1012
220	15261-23530	METAL SIDE	2			STD	0.006	0.0132
220	15261-23950	METAL SIDE	2			+0.2MM	0.006	0.0132
220	15261-23960	METAL SIDE	2			+0.4MM	0.007	0.0154
230	15261-23540	METAL SIDE	2			STD	0.007	0.0154
230	15261-23970	METAL SIDE	2			+0.2MM	0.006	0.0132
230	15261-23980	METAL SIDE	2			+0.4MM	0.007	0.0154
240	07916-28260	KIT PISTON AND RING	3			STD	0.2	0.44
240	07916-28480	KIT PISTON AND RING	3			+0.5MM	0.11	0.242
260	07916-28090	KIT METAL ENGINE	1			STD	0.25	0.55

PREVIEW-YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Part No.	Description	Book
TRANSMISSION	02T053	PROPELLER SHAFT	100K0183
	02T054	2ND SHAFT	100K0183
	02T055	3RD SHAFT/5TH SHAFT	100K0183
	02T056	4TH SHAFT	100K0183
	02T057	FRONT WHEEL DRIVE SHAFT	100K0183
	02T058	REAR PTO	100K0183
	02T059	MID PTO	100K0183
	02T060	FRONT PTO [OPTION]	100K0183
SPEED CHANGE LEVER	02T061	NEUTRAL HOLDER	100K0183
	02T062	SPEED CONTROL PEDAL	100K0183
	02T063	SPEED CHANGE PLATE	100K0183
	02T065	RANGE GEAR SHIFT LEVER	100K0183
	02T066	PTO GEAR SHIFT LEVER	100K0183
REAR AXLE/REAR WHEEL	02T067	REAR DIFFERENTIAL	100K0183
	02T068	DIFF. LOCK PEDAL	100K0183
	02T069	REAR AXLE	100K0183
	02T070	REAR AXLE CASE	100K0183
	02T07102	REAR WHEEL (8-16)	100K0183
	02T07104	REAR WHEEL (29 X 12.00-15)	100K0183
	02T07106	REAR WHEEL (31 X 13.5-15 BAR) [A]	100K0183
BRAKE	02T072	BRAKE	100K0183
	02T073	BRAKE ROD	100K0183
	02T074	BRAKE PEDAL	100K0183
FRONT AXLE/FRONT WHEEL	02T07801	FRONT WHEEL HUB [WITHOUT BI-SPEED TURN]	100K0183
	02T07802	FRONT WHEEL HUB	100K0183
	02T07901	FRONT GEAR CASE [WITHOUT BI-SPEED TURN]	100K0183
	02T07902	FRONT GEAR CASE	100K0183
	02T080	BEVEL GEAR CASE	100K0183
	02T08101	FRONT AXLE CASE [WITHOUT BI-SPEED TURN]	100K0183
	02T08103	FRONT AXLE CASE [WITH BI-SPEED TURN]	100K0183
	02T08201	FRONT DIFFERENTIAL [WITHOUT BI-SPEED TURN]	100K0183
	02T08203	FRONT DIFFERENTIAL [WITH BI-SPEED TURN]	100K0183
	02T083	BEVEL GEAR [WITH BI-SPEED TURN]	100K0183
	02T084	CLUTCH DISK [WITH BI-SPEED TURN]	100K0183
	02T085	FRONT DRIVE SHAFT	100K0183
	02T086	FRONT DRIVE LEVER	100K0183
	02T087	SHIFT FORK [WITH BI-SPEED TURN]	100K0183
	02T088	SHIFT LEVER [WITH BI-SPEED TURN]	100K0183
	02T089	BI-SPEED TURN ROD [WITH BI-SPEED TURN]	100K0183
	02T090	BI-SPEED TURN LEVER [WITH BI-SPEED TURN]	100K0183
	02T09101	FRONT WHEEL (6-12B)	100K0183
	02T09103	FRONT WHEEL (20.5 X 8.00-10)	100K0183
	02T092	FRONT AXEL FRAME	100K0183
	02T09301	KNUCKLE ARM [WITHOUT BI-SPEED TURN]	100K0183
	02T09303	KNUCKLE ARM [WITH BI-SPEED TURN]	100K0183
STEERING	02T09401	MANUAL STEERING	100K0183
	02T09402	POWER STEERING	100K0183
	02T09501	MANUAL STEERING [COMPONENT PARTS]	100K0183
	02T09502	POWER STEERING [COMPONENT PARTS]	100K0183
HYDRAULIC SYSTEM	02T098	HYDRAULIC PIPE (PS)	100K0183
	02T099	HYDRAULIC PIPE (FRONT)	100K0183
	02T100	HYDRAULIC PIPE (REAR)	100K0183
	02T10101	HYDRAULIC BLOCK (MS) [COMPONENT PARTS]	100K0183
	02T10102	HYDRAULIC BLOCK (PS) [COMPONENT PARTS]	100K0183
	02T102	HYDRAULIC PIPE (HST)	100K0183
	02T103	OIL COOLER	100K0183
	02T104	LIFT ARM	100K0183
	02T10501	HYD.CYLINDER CAP [COMPONENT PARTS]	100K0183
	02T10502	HYD.CYLINDER CAP [COMPONENT PARTS]	100K0183
	02T10503	HYD.CYLINDER CAP [COMPONENT PARTS]	100K0183

PREVIEW YOUFIXTHIS.COM
Download full manual at youfixthis.com

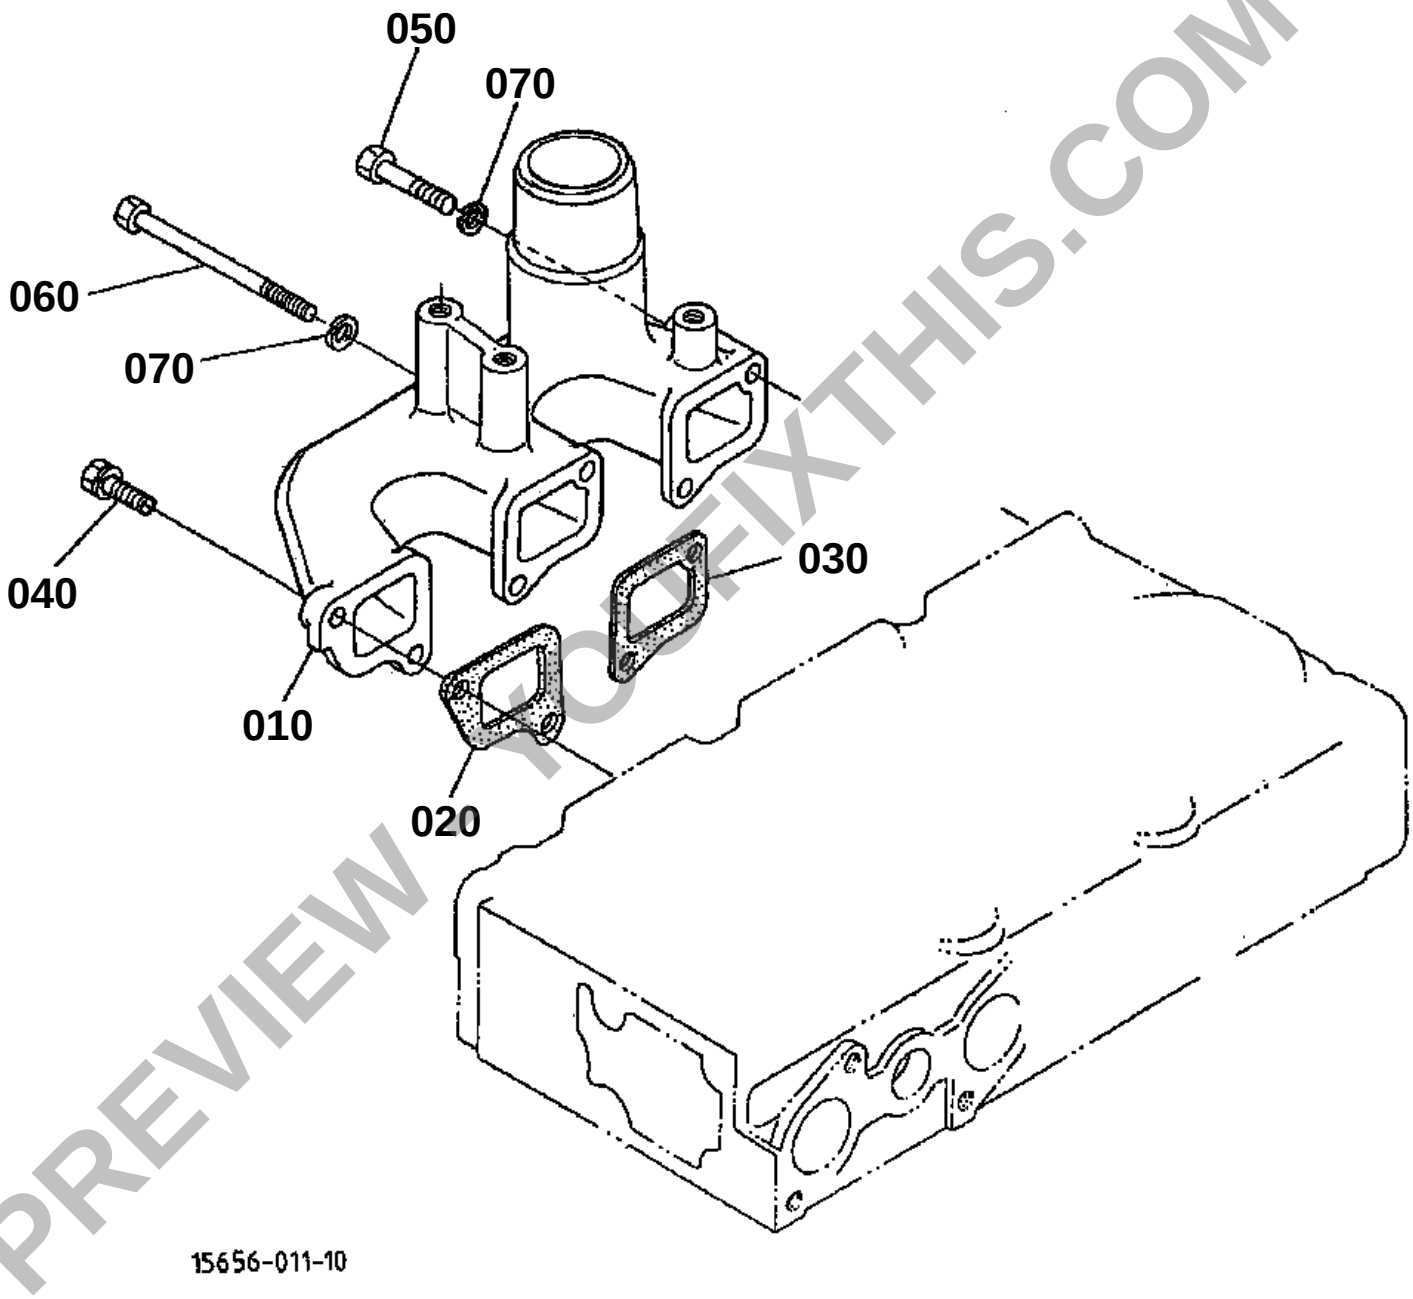

PREVIEW YOUFIXTHIS.COM


Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	15531-56020	COMP.LEVER GOVERNOR	1	<=633345			0.026	0.0572
010	15531-56022	COMP.LEVER GOVERNOR	1	>=633346	≠		0.02	0.044
020	15694-56050	ASSY LEVER FORK	1				0.3	0.66
030	15694-56040	COMP.LEVER FORK	1				0.16	0.352
040	15531-56130	LEVER FORK	1				0.075	0.165
050	15261-56150	SHAFT FORK LEVER	1				0.032	0.0704
060	01053-50516	BOLT	1				0.003	0.0066
070	04512-50050	WASHER SPRING	2				0	0
080	15261-56230	HOLDER FORK LEVER	1				0.038	0.0836
090	15261-66410	BOLT	1				0.003	0.0066
100	01023-50628	BOLT	2				0.015	0.033
110	15221-56480	SPRING START	1				0.008	0.0176
120	15531-56410	SPRING GOVERNOR	1				0.007	0.0154
130	15531-56420	SPRING GOVERNOR	1				0.003	0.0066

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

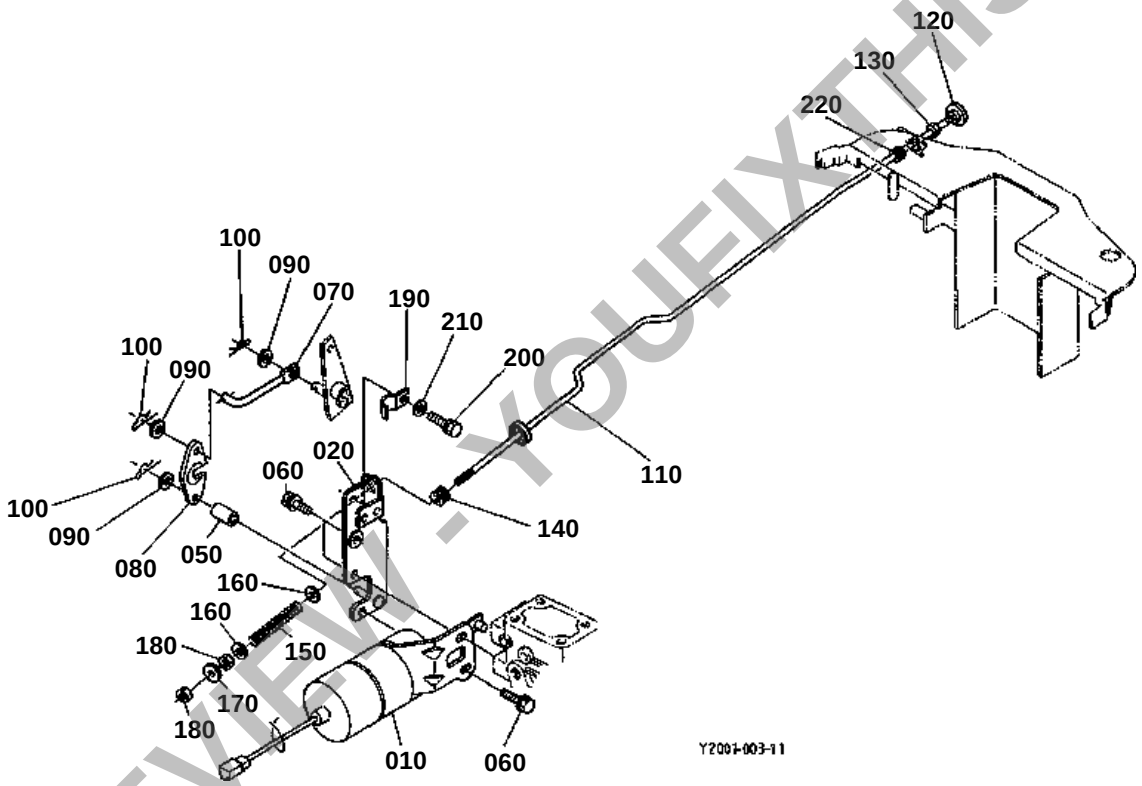

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


110 35450-7501-0
120 35450-7511-0
121 35450-7505-0
122 35450-7506-0
123 35450-7507-0
124 35450-7509-0
130 35450-7508-0
140 35450-7502-2

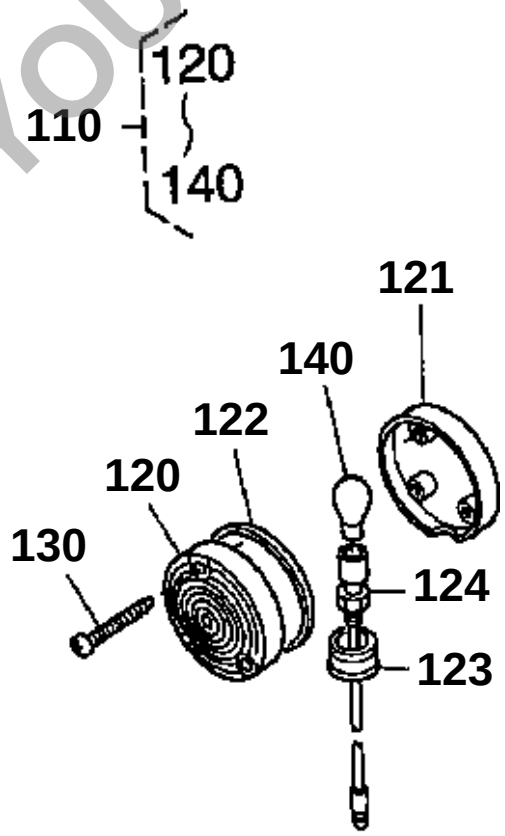

66417-802-10

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

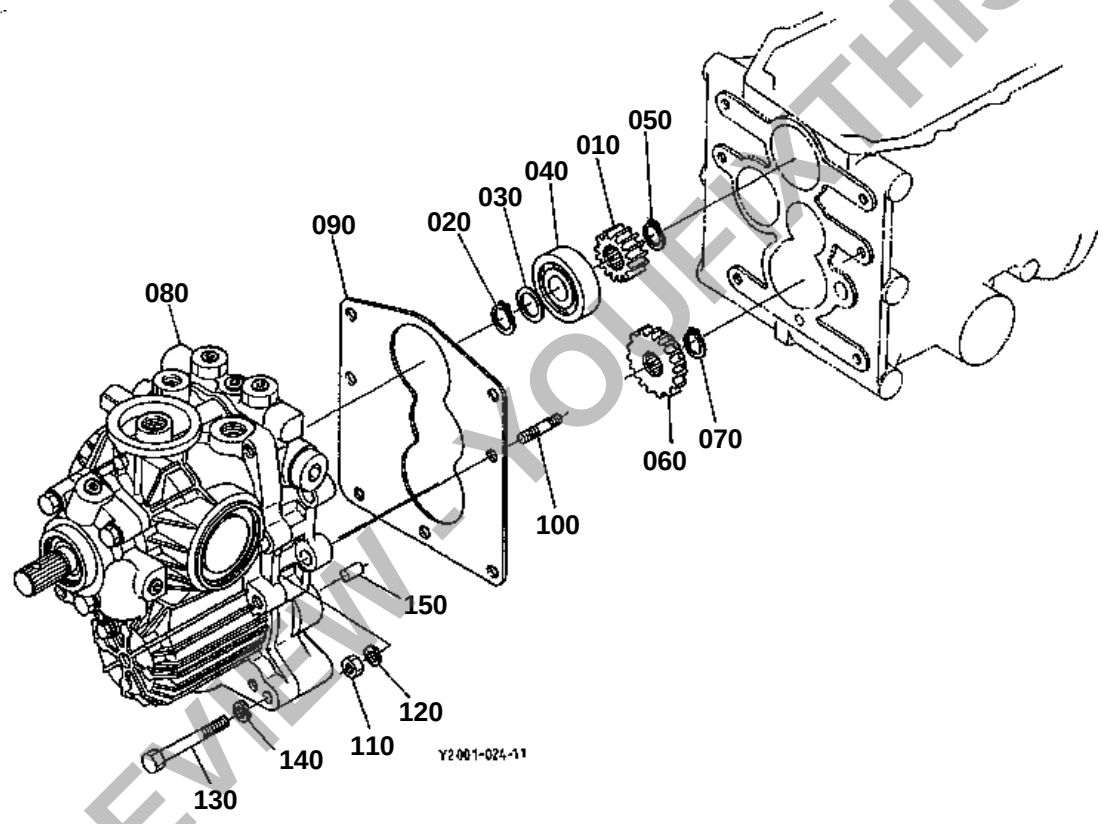

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	76521-31550	SHAFT COUPLING	1				0.35	0.77
030	76521-31510	PLATE COUPLING	2				0.02	0.044
040	76521-31570	BOLT	2				0.02	0.044
050	01133-51022	BOLT	2				0.025	0.055
060	02118-50100	NUT	2				0.005	0.011
070	04013-50100	WASHER PLAIN	6				0	0
080	04512-60100	WASHER SPRING	2				0.002	0.0044
090	67401-88512	MANUAL INSTRUCTION	1				0.006	0.0132

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	66414-17700	ASSY REAR WHEEL	1				0	0
020	66414-17710	ASSY REAR WHEEL LH	1				0	0
030	66414-17720	WHEEL	1				13	28.6
040	96016-61130	TIRE	1				14.4	31.68
050	34159-11850	VALVE TIRE	1				0.013	0.0286
060	38240-11690	CAP VALVE	1				0.001	0.0022
070	32150-27740	CORE VALVE	1				0.003	0.0066
080	66414-17730	LABEL TIRE LH	1				0.001	0.0022
090	66414-17740	ASSY REAR WHEEL RH	1				0	0
100	66414-17720	WHEEL	1				13	28.6
110	96016-61130	TIRE	1				14.4	31.68
120	34159-11850	VALVE TIRE	1				0.013	0.0286
130	38240-11690	CAP VALVE	1				0.001	0.0022
140	32150-27740	CORE VALVE	1				0.003	0.0066
150	66414-17750	LABEL TIRE RH	1				0.001	0.0022
160	66416-17300	ASSY HUB WHEEL	2	<=61424		[A]	0	0
160	66426-17300	ASSY HUB WHEEL	2	>=61425	←	[A]	0	0
160	66426-17303	ASSY HUB WHEEL	2	>=63246	↔	[A]	4.06	8.932
160	66416-17300	ASSY HUB WHEEL	2	<=63245		[CA] [AU] [NZ]	0	0
160	66416-17303	ASSY HUB WHEEL	2	>=63246	↔	[CA] [AU] [NZ]	4.2	9.24
170	67401-17450	HUB WHEEL	2	<=63245			0	0
170	67401-17453	HUB WHEEL	2	>=63246	↔		2.78	6.116
180	66704-17313	BOLT	12				0.049	0.1078
190	02074-50140	NUT	12	<=61424		[A]	0.021	0.0462
190	35340-11390	NUT	12	>=61425	←	[A]	0.03	0.066
190	02074-50140	NUT	12			[CA] [AU] [NZ]	0.021	0.0462
200	04512-50140	WASHER SPRING	12				0	0
210	04013-60140	WASHER PLAIN	12				0.01	0.022
220	67401-17460	SHOE	2	<=63245			0.256	0.5632
220	67401-17462	SHOE	2	>=63246	≠		0.22	0.484
230	67401-17470	SHOE	2	<=63245			0.476	1.0472
230	67401-17472	SHOE	2	>=63246	≠		0.21	0.462
235	01173-51604	BOLT	2	>=63246			0.195	0.429
240	02174-50160	NUT	2				0.022	0.0484
250	04512-50160	WASHER SPRING	2				0	0
260	63733-17270	PIN WHEEL TUBE	2				0.05	0.11
270	62131-17290	PIN	2				0.004	0.0088
280	66416-87400	KIT COTTER	2			SERVICE PARTS	0.62	1.364

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

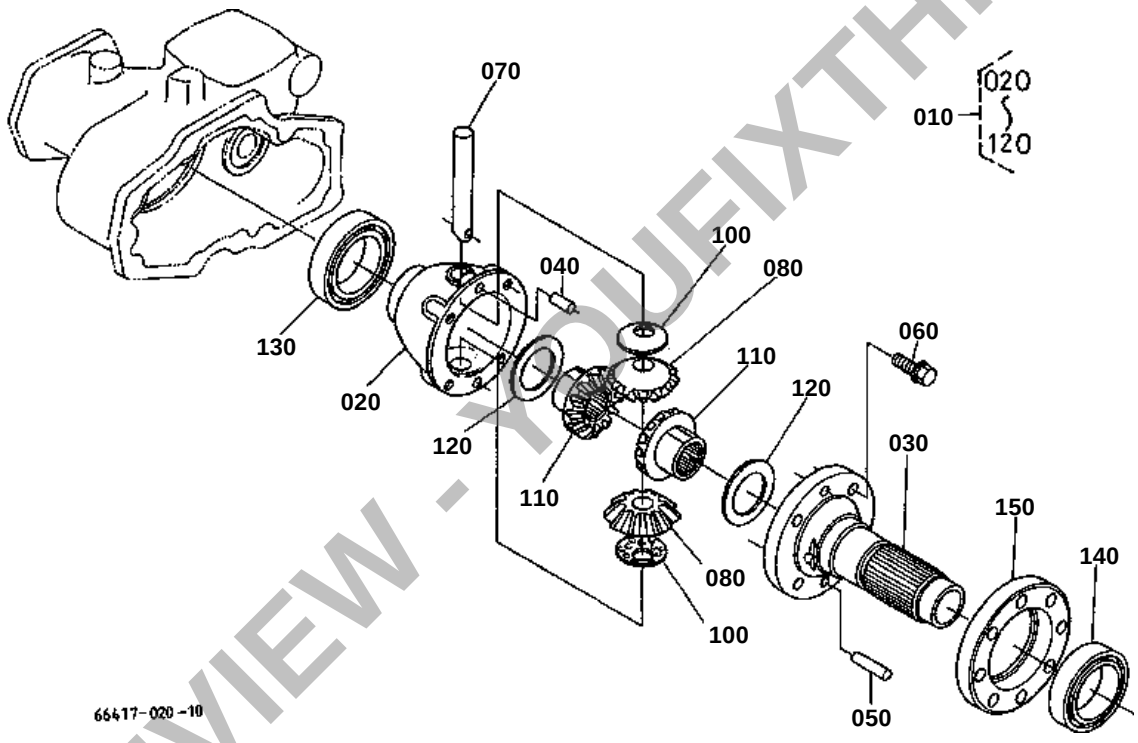


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

100 67401-5122-0

110 01123-50825

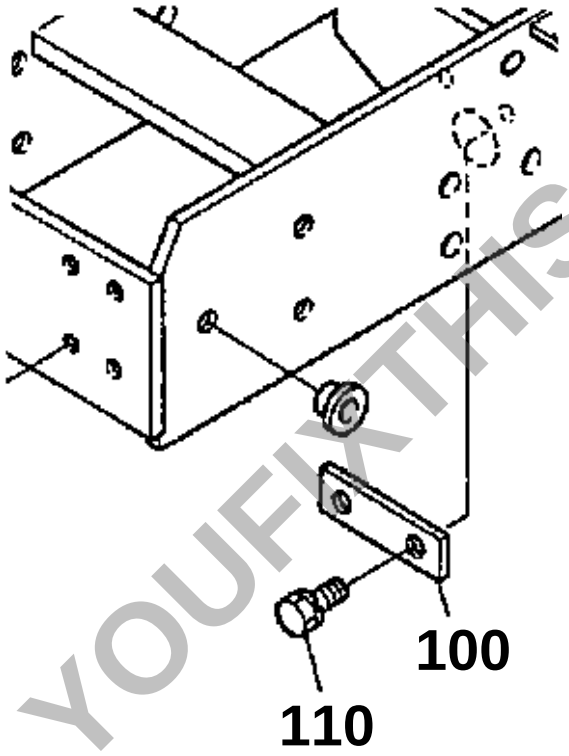

PREVIEW - YOUFIXTHIS.COM

66417-812-10


Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	66204-36150	JOINT INLET	1				0.07	0.154
020	04811-00180	RING	1				0.001	0.0022
030	66021-36060	CARTRIDGE OIL FILTER	1				0.34	0.748
040	66204-36170	JOINT FILTER	1				0.018	0.0396
050	66204-36192	PIPE INLET	1				0.34	0.748
060	04811-06400	RING	2				0.001	0.0022
070	66204-36210	FILTER OIL	1				0.367	0.8074
080	66204-36220	HOSE	1				0.07	0.154
090	66204-36230	BAND PIPE	2	<=63342			0.02	0.044
090	67955-36230	CLAMP	2	>=63343	↔		0.023	0.0506
100	66204-36240	PIPE SUCTION	1				0.35	0.77
110	66591-36250	JOINT	1				0.08	0.176
120	67111-37180	GASKET	2				0.003	0.0066

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

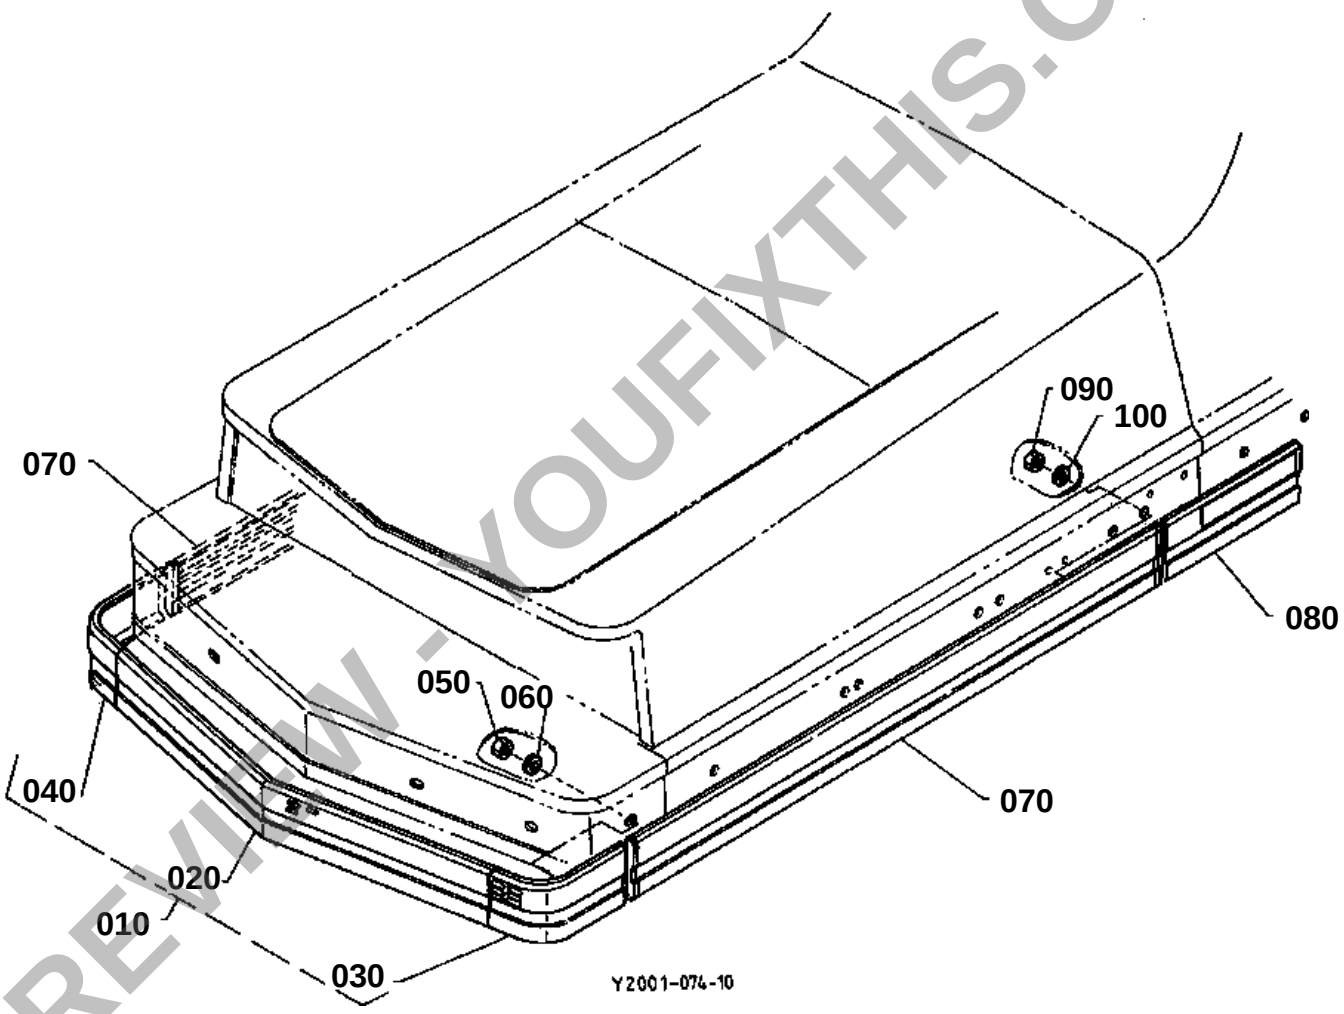

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 18 of 312 pages

The full manual includes:

- All 312 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota B1550HST-D Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual