
Item	Part No.	Description	Book
ENGINE	010001	CRANKCASE	100K0614
	010002	OIL PAN	100K0614
	010003	CYLINDER HEAD	100K0614
	010004	GEAR CASE	100K0614
	010005	HEAD COVER	100K0614
	010100	MAIN BEARING CASE	100K0614
	010101	CAMSHAFT AND IDLE GEAR SHAFT	100K0614
	010102	PISTON AND CRANK SHAFT	100K0614
	010103	FLYWHEEL	100K0614
	010105	FUEL CAMSHAFT AND GOVERNOR SHAFT	100K0614
	010201	STOP SOLENOID	100K0614
	010202	INJECTION PUMP	100K0614
	010203	INJECTION PUMP [COMPONENT PARTS]	100K0614
	010204	GOVERNOR	100K0614
	010205	SPEED CONTROL PLATE	100K0614
	010206	NOZZLE HOLDER AND GLOW PLUG	100K0614
	010207	NOZZLE HOLDER [COMPONENT PARTS]	100K0614
	010500	WATER FLANGE AND THERMOSTAT	100K0614
	010501	WATER PUMP	100K0614
	010600	VALVE AND ROCKER ARM	100K0614
	010601	INLET MANIFOLD	100K0614
	010602	EXHAUST MANIFOLD	100K0614
	01090001	UPPER GASKET KIT	100K0614
	01090002	LOWER GASKET KIT	100K0614
ELECTRICAL SYSTEM	01A521	DYNAMO	100K0614
	01A523	DYNAMO [COMPONENT PARTS]	100K0614
CLUTCH	01C101	CLUTCH	100K0614
HYDRAULIC SYSTEM	01J120	HYDRAULIC PUMP	100K0614
	01J125	HYDRAULIC PUMP [COMPONENT PARTS]	100K0614
ENGINE	02060301	AIR CLEANER	100K0614
	02060302	AIR CLEANER	100K0614
	02060303	AIR CLEANER(DOUBLE) [OPTION]	100K0614
	020605	MUFFLER	100K0614
FUEL SYSTEM	02A001	ACCELERATOR LEVER	100K0614
	02A101	FUEL TANK	100K0614
	02A110	FUEL PIPE	100K0614
	02A11001	FUEL PIPE	100K0614
	02A130	FUEL FILTER [COMPONENT PARTS]	100K0614
COOLING WATER SYSTEM	02A401	FAN	100K0614
	02A410	WATER PIPE	100K0614
	02A420	RADIATOR	100K0614
ELECTRICAL SYSTEM	02A525	STARTER	100K0614
	02A530	STARTER [COMPONENT PARTS]	100K0614
	02A535	BATTERY	100K0614
	02B115	PANEL BOARD	100K0614
	02B120	PANEL BOARD [COMPONENT PARTS]	100K0614
	02B301	HEAD LIGHT	100K0614
	02B302	TAIL LIGHT/HAZARD LIGHT/WORKING LIGHT	100K0614
	02B50101	ELECTRICAL WIRING	100K0614
CLUTCH	02C110	CLUTCH ROD	100K0614
	02C301	CLUTCH PEDAL	100K0614
	02C401	CLUTCH HOUSING	100K0614
FRAME	02C415	FRAME	100K0614
TRANSMISSION	02C420	TRANSMISSION CASE	100K0614
	02C425	DIFFERENTIAL GEAR CASE	100K0614
	02C427	REAR AXLE CASE	100K0614
	02D001	CLUTCH SHAFT/PROPELLER SHAFT	100K0614
	02D105	2ND SHAFT/3RD SHAFT/4TH SHAFT	100K0614
	02D135	5HT SHAFT/PTO SHAFT	100K0614
	02D137	MID PTO	100K0614

PREVIEW YOUFIXTHIS.COM
Download full manual at youfixthis.com

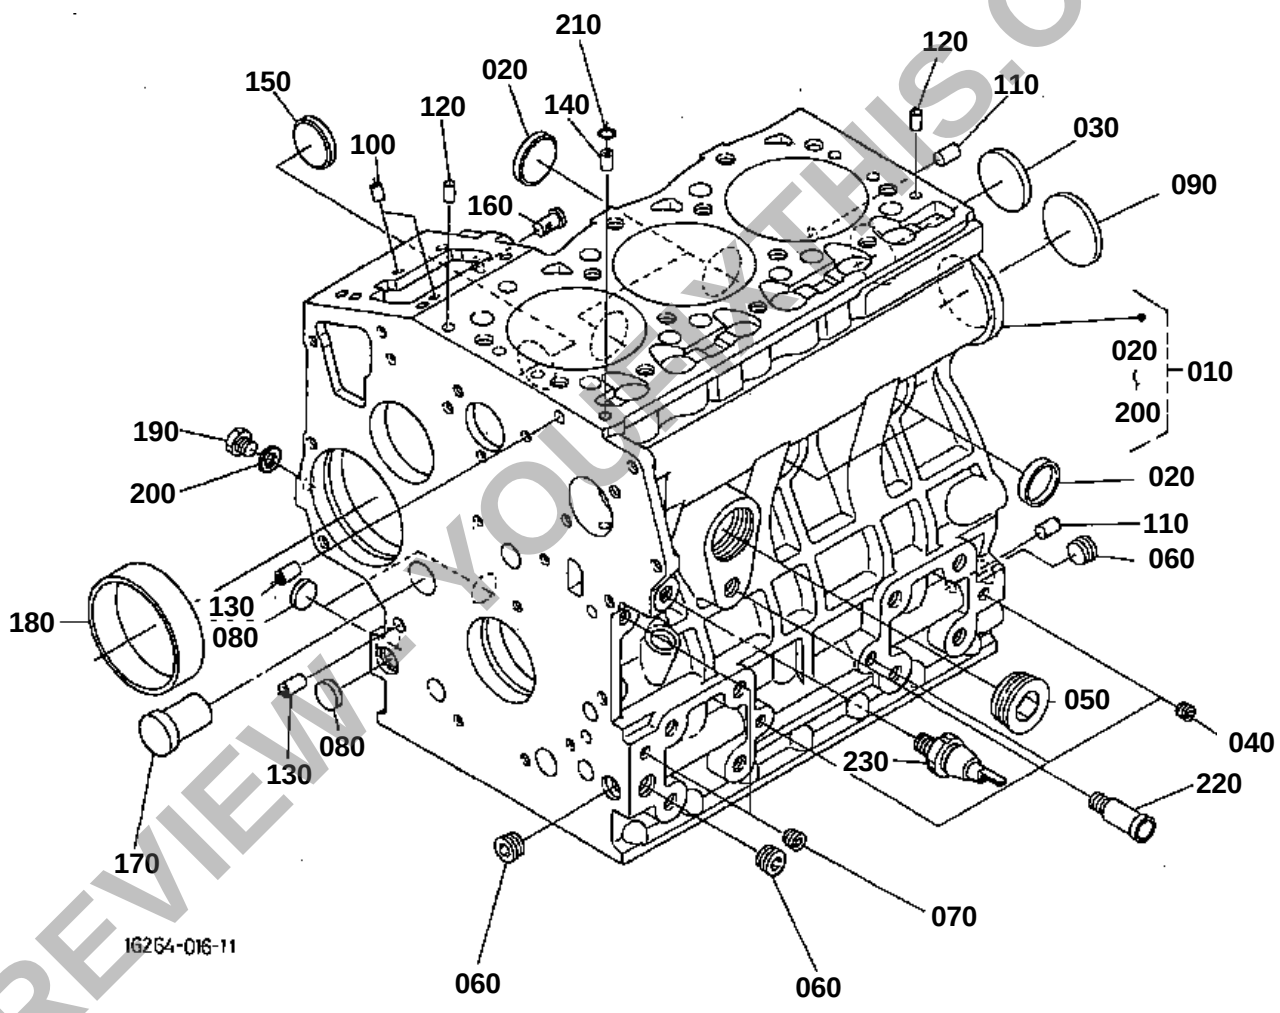

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


CRANKCASE

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	16611-01010	COMP.CRANKCASE	1	<=YB0607			0	0
010	16611-01013	COMP.CRANKCASE	1	>=YC0001	←		32	70.4
010	16611-01014	COMP.CRANKCASE	1	>=YL0001	←		32.5	71.5
010	16611-01015	COMP.CRANKCASE	1	>=1G0001	←		0	0
020	15451-96270	CAP SEALING	4				0.012	0.0264
030	15221-03490	CAP SEALING	1				0.02	0.044
040	15261-96010	PLUG	3				0.002	0.0044
050	16683-96020	PLUG	1				0.47	1.034
060	16241-96010	PLUG	3				0.007	0.0154
070	15521-96020	PLUG	2				0.003	0.0066
080	17391-96160	PLUG EXPANSION	3				0.003	0.0066
090	16271-96160	PLUG EXPANSION	1				0.025	0.055
100	05012-00508	PIN STRAIGHT	2	<=WT2678			0.001	0.0022
100	16225-94510	PIN STRAIGHT	2	>=WU0001	↔		0.001	0.0022
110	05012-00814	PIN STRAIGHT	2	<=WT2678			0.006	0.0132
110	16221-94530	PIN STRAIGHT	2	>=WU0001	↔		0.006	0.0132
120	05012-00610	PIN STRAIGHT	2	<=WT2678			0.003	0.0066
120	16221-94520	PIN STRAIGHT	2	>=WU0001	↔		0.005	0.011
130	15231-33960	PIN PIPE	2				0.001	0.0022
140	16241-33650	PIN PIPE	1				0.002	0.0044
150	16241-96260	PLUG	1	<=781870			0	0
150	16241-96260	PLUG	1	>=10001			0	0
150	16241-96262	PLUG FUEL CAMSHAFT	1	>=49890	←		0.007	0.0154
160	16261-56280	PIN START SPRING	1				0.004	0.0088
170	16282-96010	PLUG	1				0.09	0.198
180	16271-55350	BUSH GOVERNOR GEAR	1				0.06	0.132
190	15221-33610	PLUG	1				0.009	0.0198
200	15021-33660	GASKET	1				0.001	0.0022
210	15221-33700	O RING	1				0.001	0.0022
220	15321-73340	PIPE WATER RETURN	1				0.016	0.0352
230	15531-39010	SWITCH OIL	1				0.032	0.0704


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

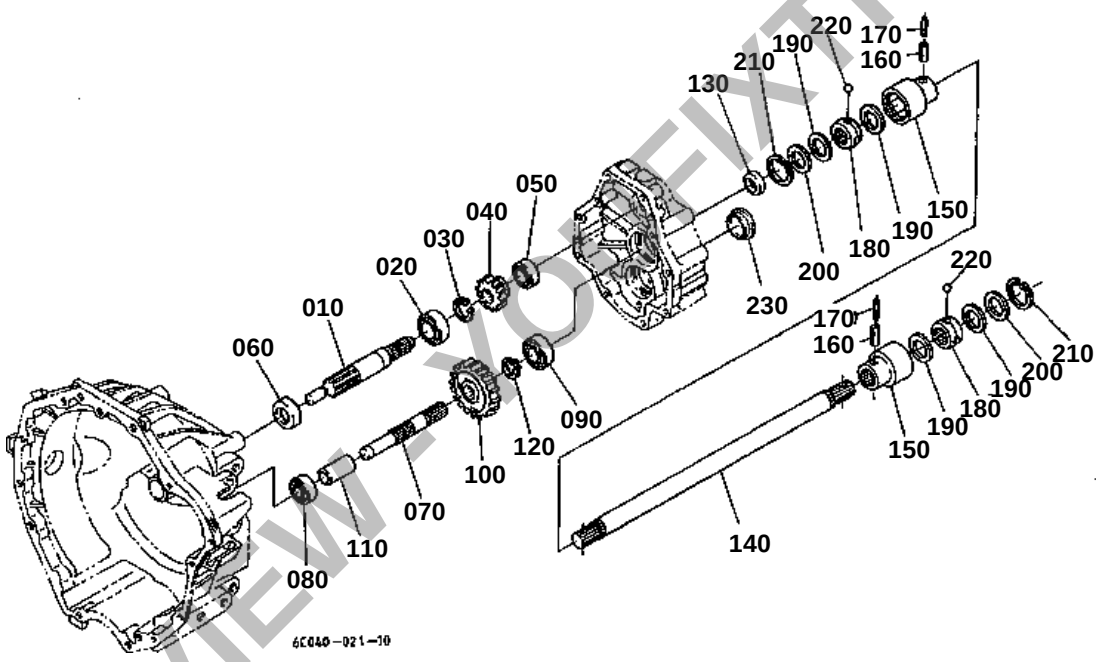


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

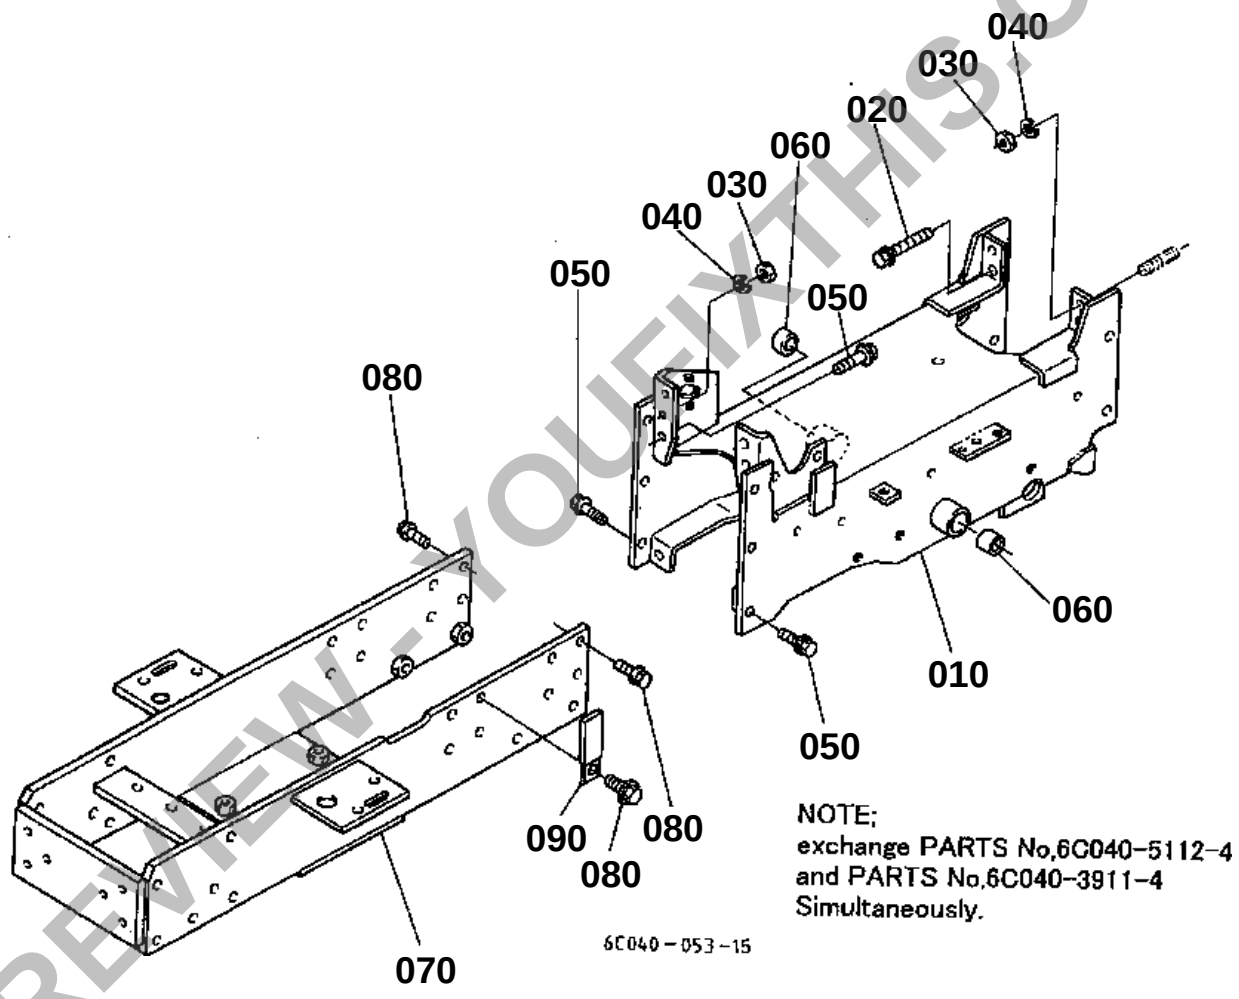

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

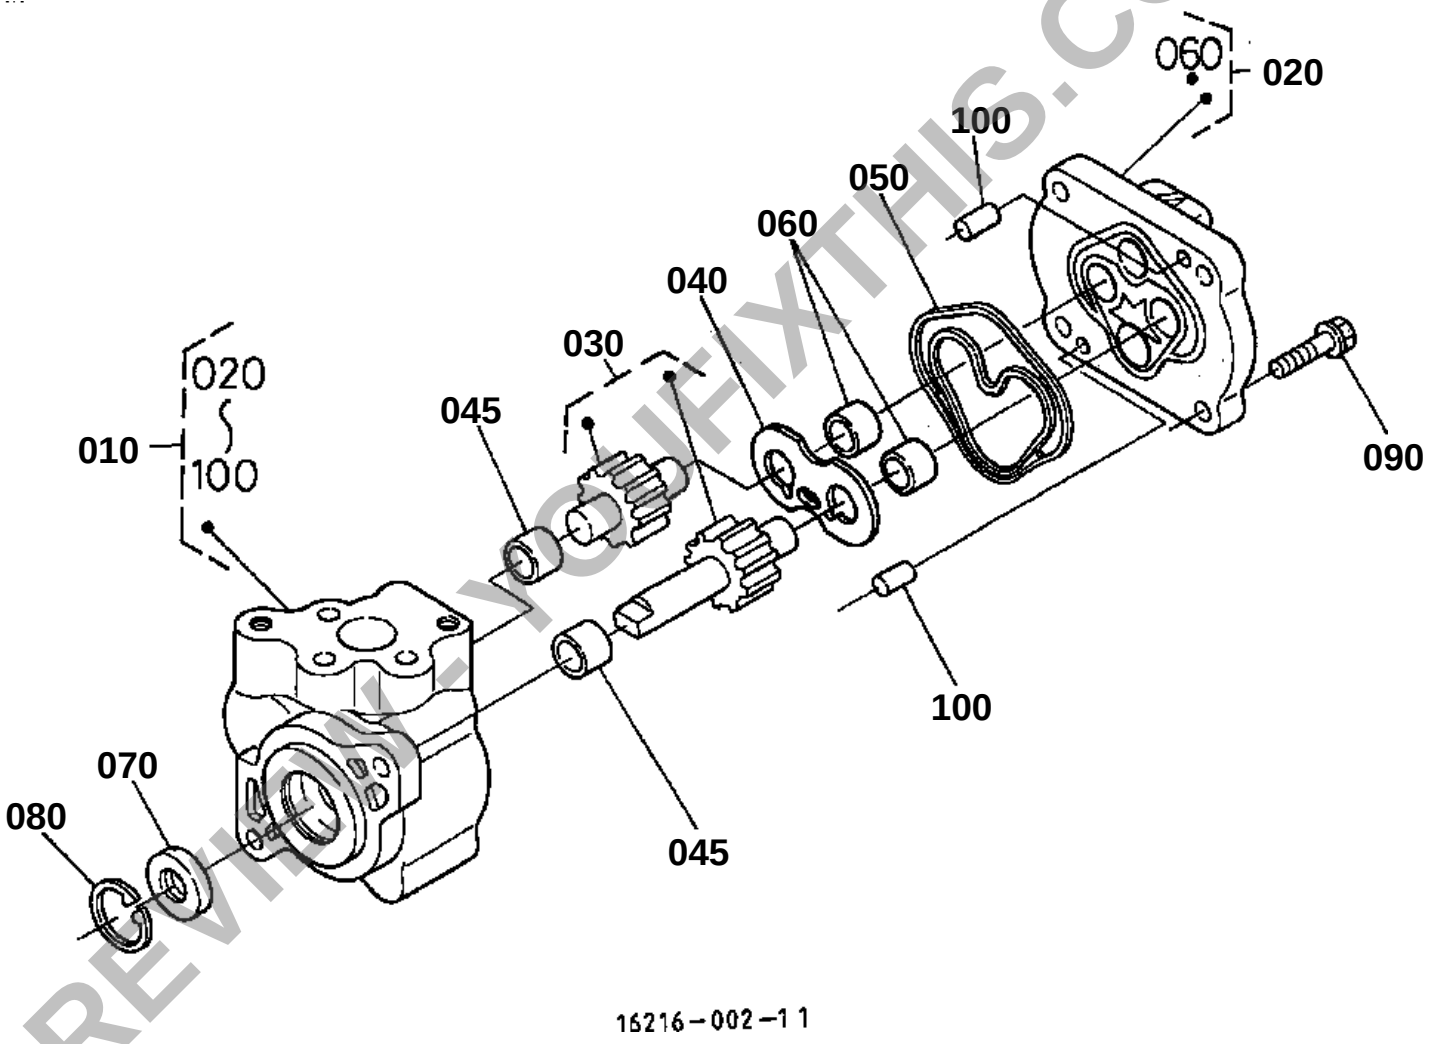

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Part No.	Description	Book
REAR AXLE	02D140	REAR DIFFERENTIAL	100K0614
	02D143	FRONT WHEEL PROPELLER SHAFT	100K0614
	02D201	MAIN GEAR SHIFT FORK	100K0614
	02D301	REAR AXLE	100K0614
BRAKE	02E001	BRAKE	100K0614
	02E015	PARKING BRAKE LEVER	100K0614
SPEED CHANGE LEVER	02F101	MAIN GEAR SHIFT LEVER	100K0614
	02F110	RANGE GEAR SHIFT LEVER	100K0614
	02F113	FRONT WHEEL DRIVE LEVER	100K0614
	02F125	PTO GEAR SHIFT LEVER	100K0614
	02F140	POSITON CONTROL LEVER	100K0614
	02F201	BRAKE PEDAL	100K0614
	02F205	DIFFERENTIAL LOCK PEDAL	100K0614
FRONT AXLE	02G115	FRONT DIFFERENTIAL	100K0614
	02G123	BEVEL GEAR CASE	100K0614
	02G125	FRONT AXLE CASE	100K0614
	02G130	FRONT AXLE	100K0614
	02G135	FRONT DRIVE SHAFT	100K0614
STEERING	02H003	DRAG LINK	100K0614
	02H005	TIE ROD	100K0614
	02H101	STEERING HANDLE	100K0614
	02H110	STEERING CONTROLLER	100K0614
	02H11501	STEERING CONTROLLER [COMPONENT PARTS]	100K0614
	02H11502	STEERING CONTROLLER [COMPONENT PARTS]	100K0614
	02H11503	STEERING CONTROLLER [COMPONENT PARTS]	100K0614
HYDRAULIC SYSTEM	02J20101	HYDRAULIC OIL LINE(SUCTION)	100K0614
	02J20102	HYDRAULIC OIL LINE(SUCTION)	100K0614
	02J203	FLOW DIVIDER VALVE [COMPONENT PARTS]	100K0614
	02J215	HYDRAULIC OIL LINE(STEERING)	100K0614
	02J301	HYDRAULIC CYLINDER CASE	100K0614
	02J405	CONTROL VALVE	100K0614
	02J41001	CONTROL VALVE [COMPONENT PARTS]	100K0614
	02J41002	CONTROL VALVE [COMPONENT PARTS]	100K0614
	02K101	LIFT ROD	100K0614
	02K115	LOWER LINK	100K0614
	02K120	TOP LINK	100K0614
HOOD(BONNET)/ROPS	02M101	FRONT GRILLE	100K0614
	02M105	HOOD(BONNET)	100K0614
	02M120	SIDE COVER	100K0614
	02M210	FENDER	100K0614
	02M217	SEAT SUPPORT	100K0614
	02M220	SEAT	100K0614
	02M225	STEP	100K0614
	02M301	ROPS	100K0614
WHEEL	02R10101	FRONT WHEEL (6-12)	100K0614
	02R10103	FRONT WHEEL (23*8.50-12)	100K0614
	02R10104	FRONT WHEEL (21*8.00-10)	100K0614
	02R11001	REAR WHEEL (8.3-16)	100K0614
	02R11004	REAR WHEEL (33*12.5-15)	100K0614
	02R11005	REAR WHEEL (31*15.5-15)	100K0614
LABELS	02S101	LABEL	100K0614
ACCESSORIES	02T105	ACCESSORIES AND SERVICE PARTS	100K0614
OPTION	02U803	STATER RELAY KIT [OPTION]	100K0614

PREVIEW YOUFIXTHIS.COM
Download full manual at youfixthis.com


WATER FLANGE AND THERMOSTAT

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	16241-72704	COMP FLANGE WATER	1	<=658105		[A]	0	0
010	16241-72705	COMP FLANGE WATER	1	>=658106	←	[A]	0	0
010	16241-72705	COMP FLANGE WATER	1	<=741870		[A]	0	0
010	16241-72705	COMP FLANGE WATER	1	>=10001		[A]	0	0
010	16203-72700	COMP FLANGE WATER	1	>=110327	≠	[A]	0.284	0.6248
020	16241-73370	PIPE WATER RETURN	1				0.007	0.0154
030	16264-72920	GASKET WATER FLANGE	1				0.001	0.0022
040	01023-50616	BOLT	3				0.005	0.011
050	01023-50655	BOLT	1				0.012	0.0264
060	16241-73350	PIPE WATER RETURN	1				0.015	0.033
070	16241-73360	BAND PIPE	2				0.003	0.0066
080	15531-73010	ASSY THERMOSTAT	1	<=741870			0.07	0.154
080	15531-73010	ASSY THERMOSTAT	1	>=10001			0.07	0.154
080	15321-73014	ASSY THERMOSTAT	1	>=110327	≠		0	0
090	16271-73260	COVER THERMOSTAT	1	<=741870			0.06	0.132
090	16271-73260	COVER THERMOSTAT	1	>=10001			0.06	0.132
090	16219-73260	COVER THERMOSTAT	1	>=110327	≠		0.094	0.2068
100	15676-73270	GASKET	1	<=741870			0.005	0.011
100	15676-73270	GASKET	1	>=10001			0.005	0.011
100	15313-73270	GASKET THERMOSTAT	1	>=110327	≠		0	0
100	16221-73270	GASKET THERMOSTAT	1	>=WY0001	↔		0.003	0.0066
110	01023-50632	BOLT	2	<=741870			0.01	0.022
110	01023-50632	BOLT	2	>=10001			0.01	0.022
110	01123-50835	BOLT	2	>=110327	≠		0.02	0.044

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

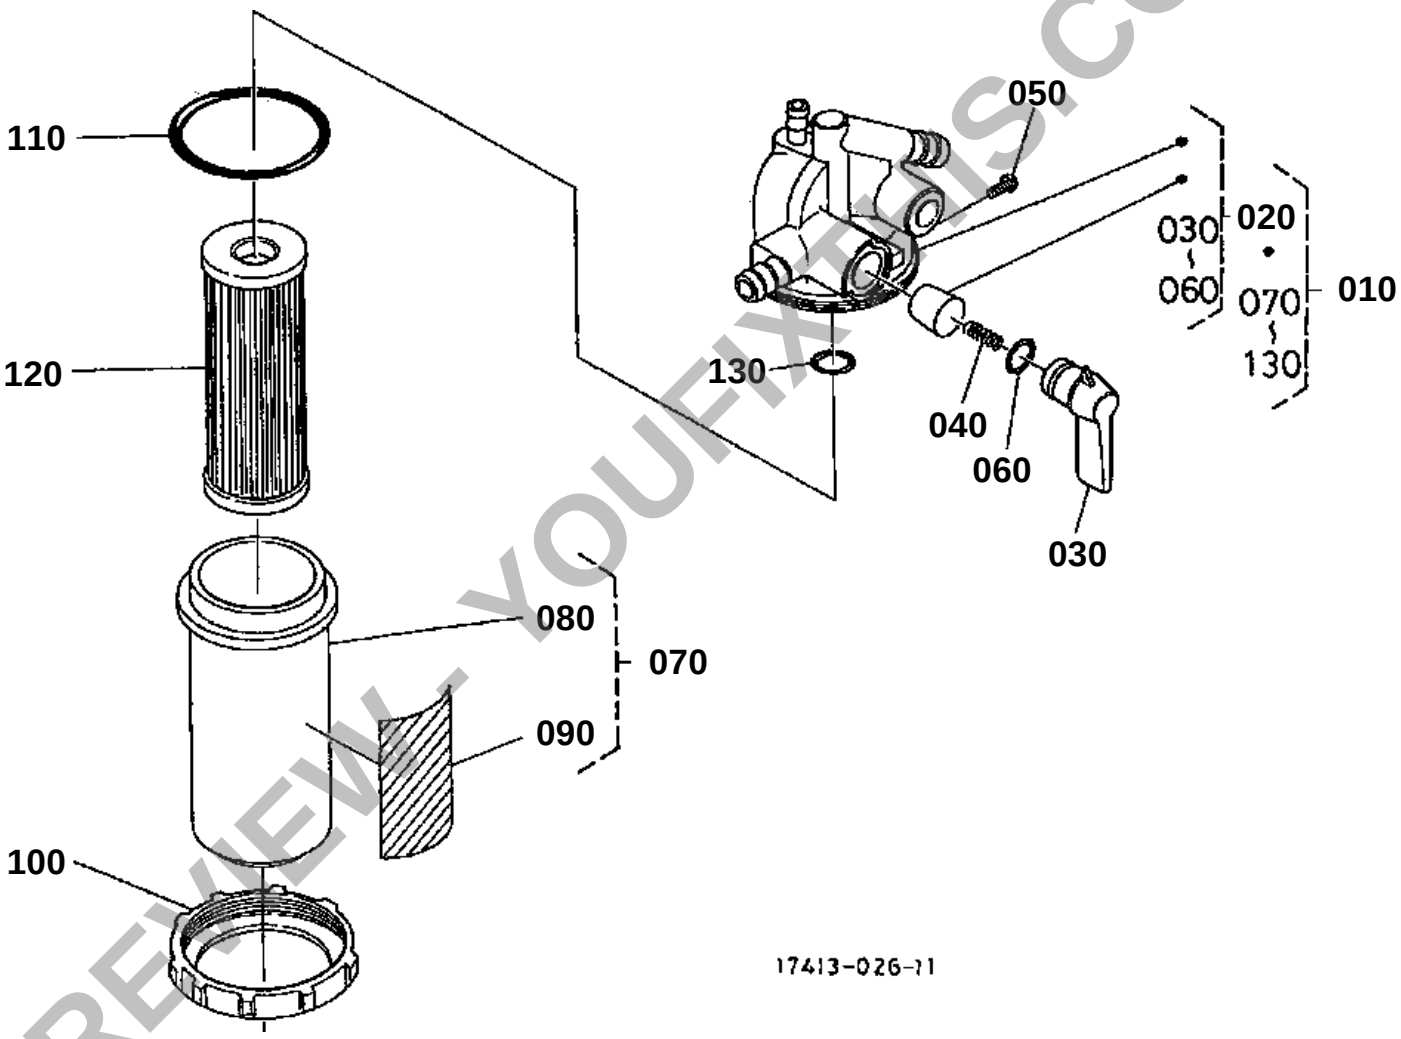

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	6C040-12613	CASE AXLE LH	1	<=50716			2.3	5.06
010	K3511-12620	CASE AXLE RH	1	>=50717	←	DESCRIPTION RH BUT FOR LH	2.32	5.104
020	6C040-12623	CASE AXLE RH	1	<=50716			0	0
020	K3511-12610	CASE AXLE LH	1	>=50717	←	DESCRIPTION LH BUT FOR RH	2.42	5.324
030	05012-00614	PIN STRAIGHT	4				0.004	0.0088
035	01123-51035	BOLT	3				0.025	0.055
040	01123-51035	BOLT	3				0.025	0.055
045	01123-51035	BOLT	2				0.025	0.055
050	01123-51050	BOLT	9				0.035	0.077
055	01123-51050	BOLT	1				0.035	0.077
060	01173-51080	BOLT	2				0.049	0.1078
070	04512-60100	WASHER SPRING	2				0.002	0.0044
080	06331-35012	PLUG	2	<=51024			0.022	0.0484
080	01774-51212	BOLT FLANGE	2	>=51025	≠		0.028	0.0616
090	04717-01200	WASHER WITH RUBBER	2				0.002	0.0044

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


190 01156-50855
200 04512-60080

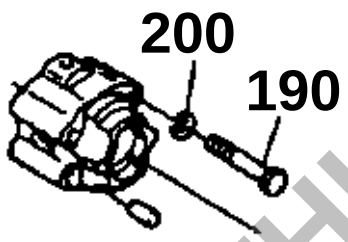

PREVIEW - YOUFIXTHIS.COM

6C040-838-10

Download full manual at youfixthis.com

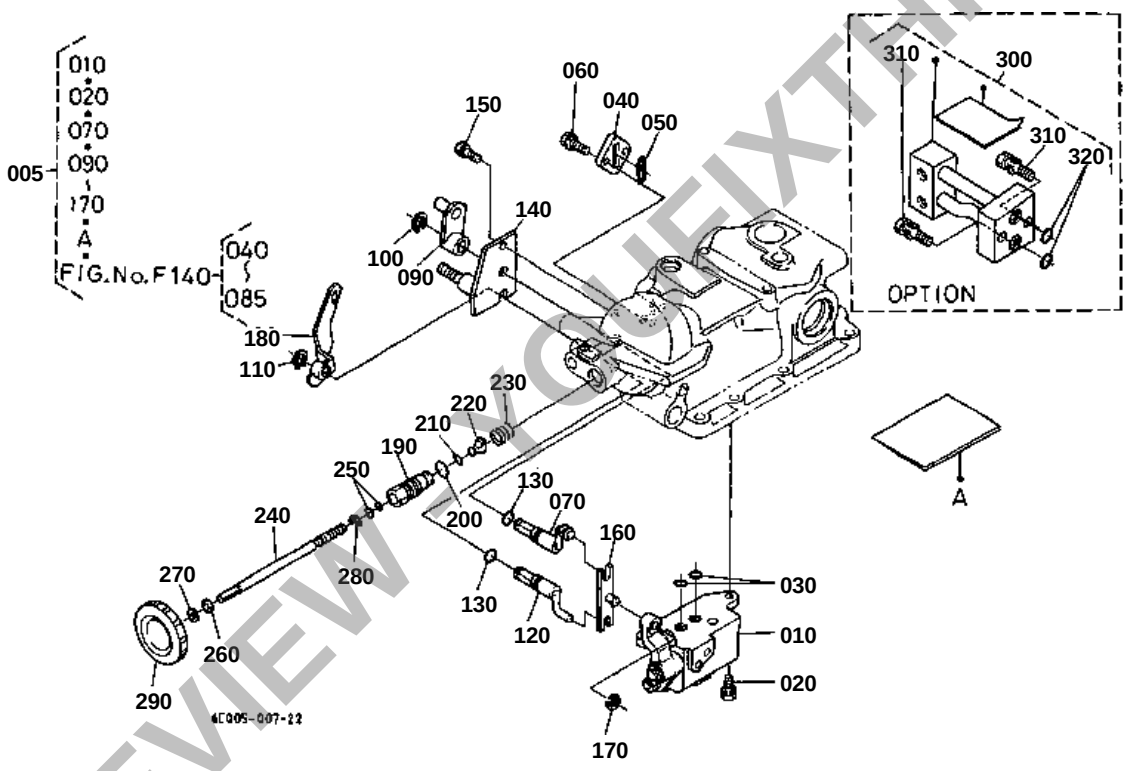

PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 12 of 261 pages

The full manual includes:

- All 261 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota B1700D, B2100D, B2400D Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual