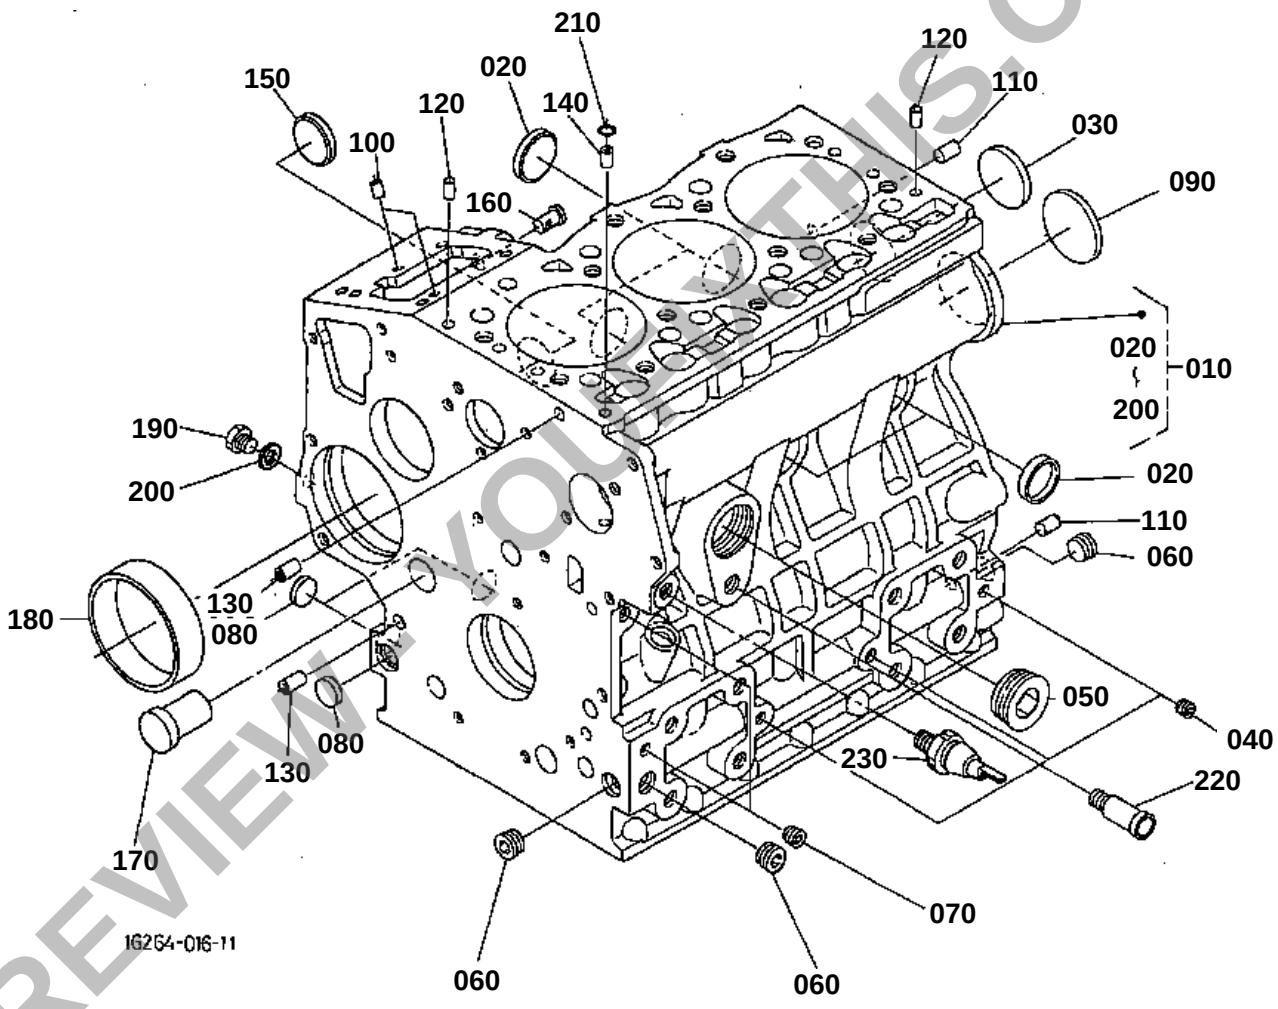


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


CRANKCASE

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	16611-01010	COMP.CRANKCASE	1	<=YB0607			0	0
010	16611-01016	COMP.CRANKCASE	1	>=YL0001	←		32	70.4
010	16611-01016	COMP.CRANKCASE	1	>=1G0001	←		32	70.4
020	15451-96270	CAP SEALING	4				0.012	0.0264
030	15221-03490	CAP SEALING	1				0.02	0.044
040	15261-96010	PLUG	3				0.002	0.0044
050	16683-96020	PLUG	1				0.47	1.034
060	16241-96010	PLUG	3				0.007	0.0154
070	15521-96020	PLUG	2				0.003	0.0066
080	17391-96160	PLUG EXPANSION	3				0.003	0.0066
090	16271-96160	PLUG EXPANSION	1				0.025	0.055
100	05012-00508	PIN STRAIGHT	2	<=WT2678			0.001	0.0022
100	16225-94510	PIN STRAIGHT	2	>=WU0001	↔		0.001	0.0022
110	05012-00814	PIN STRAIGHT	2	<=WT2678			0.006	0.0132
110	16221-94530	PIN STRAIGHT	2	>=WU0001	↔		0.006	0.0132
120	05012-00610	PIN STRAIGHT	2	<=WT2678			0.003	0.0066
120	16221-94520	PIN STRAIGHT	2	>=WU0001	↔		0.005	0.011
130	15231-33960	PIN PIPE	2				0.001	0.0022
140	16241-33650	PIN PIPE	1				0.002	0.0044
150	16241-96260	PLUG	1	<=781870			0	0
150	16241-96260	PLUG	1	>=10001			0	0
150	16241-96262	PLUG FUEL CAMSHAFT	1	>=49890	←		0.007	0.0154
160	16261-56280	PIN START SPRING	1				0.004	0.0088
170	16282-96010	PLUG	1				0.09	0.198
180	16271-55350	BUSH GOVERNOR GEAR	1				0.06	0.132
190	15221-33610	PLUG	1				0.009	0.0198
200	15021-33660	GASKET	1				0.001	0.0022
210	15221-33700	O RING	1				0.001	0.0022
220	15321-73340	PIPE WATER RETURN	1				0.016	0.0352
230	15531-39010	SWITCH OIL	1				0.032	0.0704


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

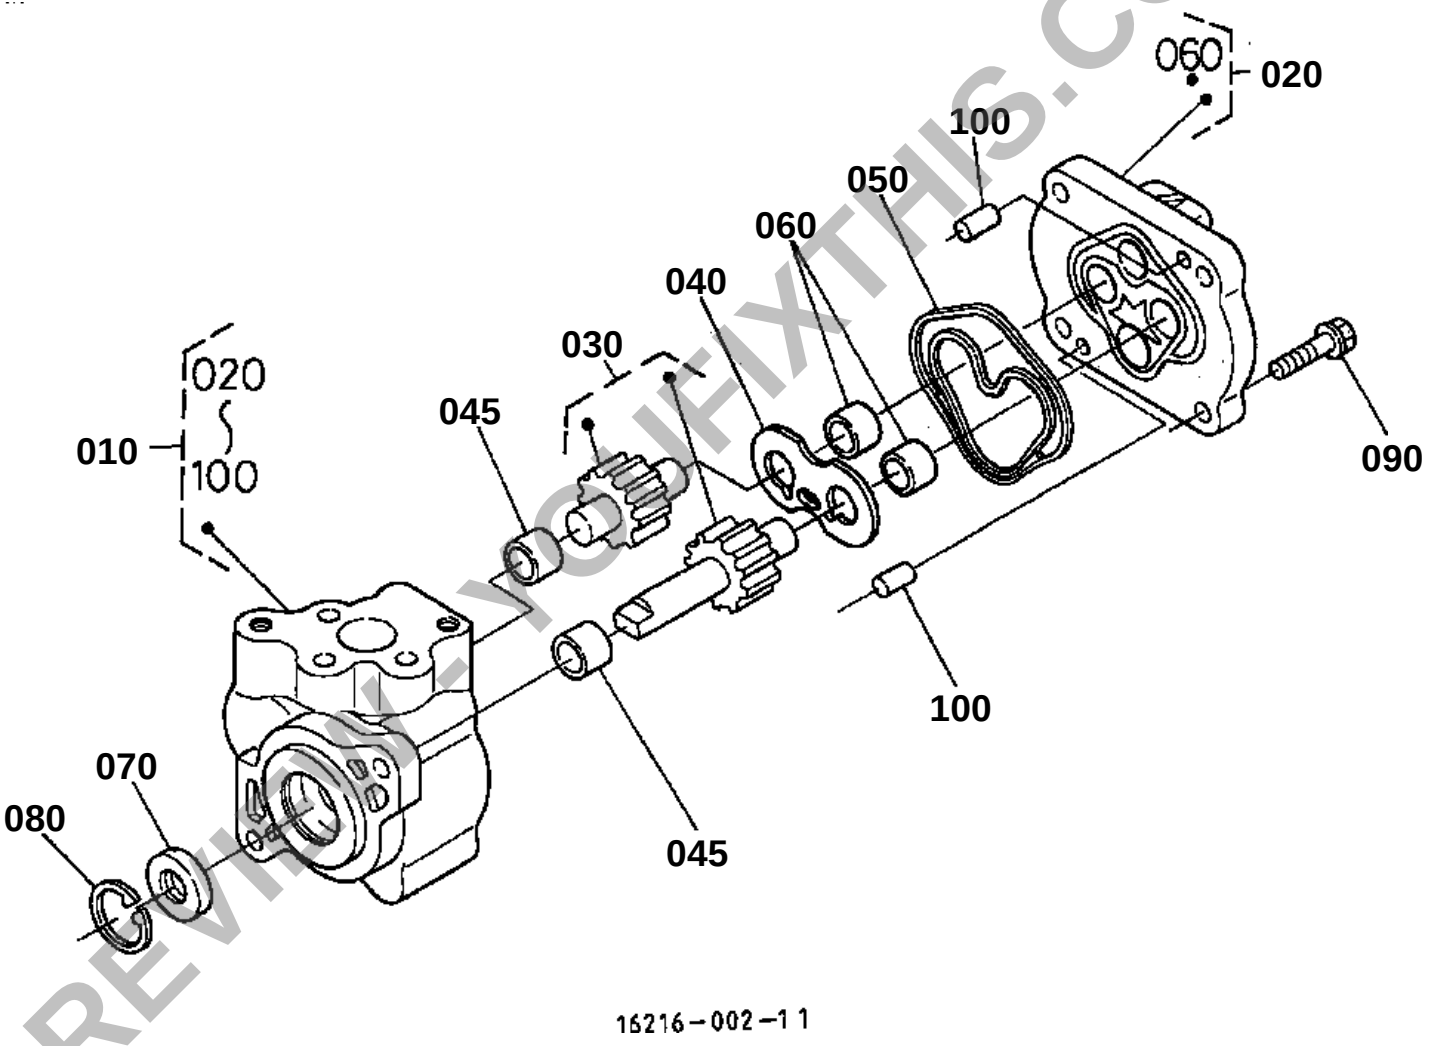


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

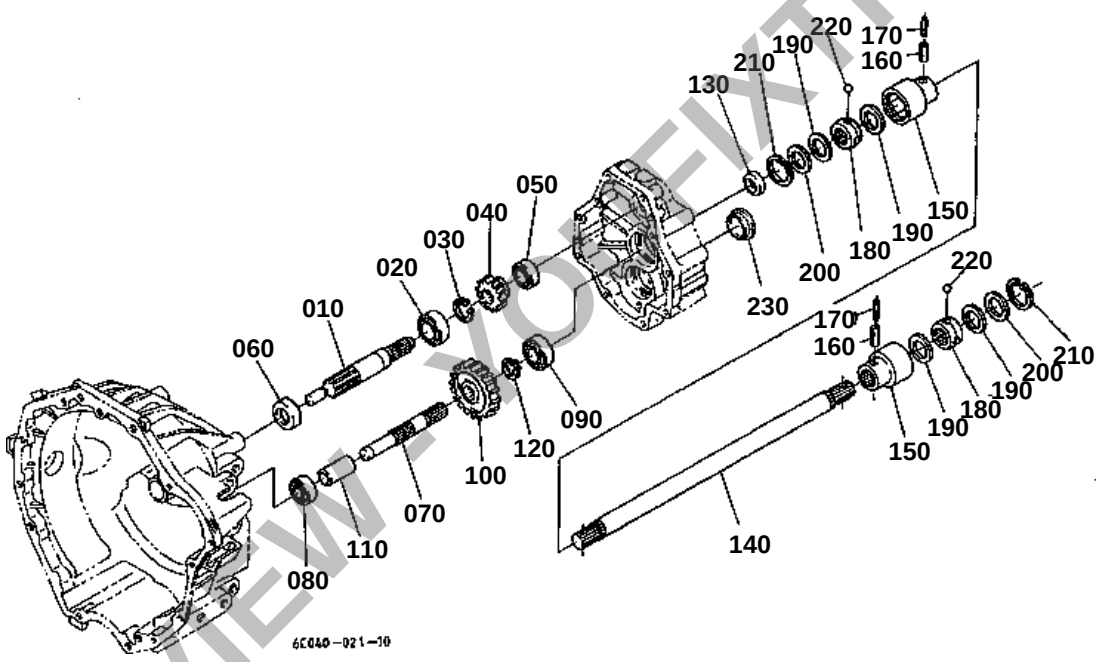

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

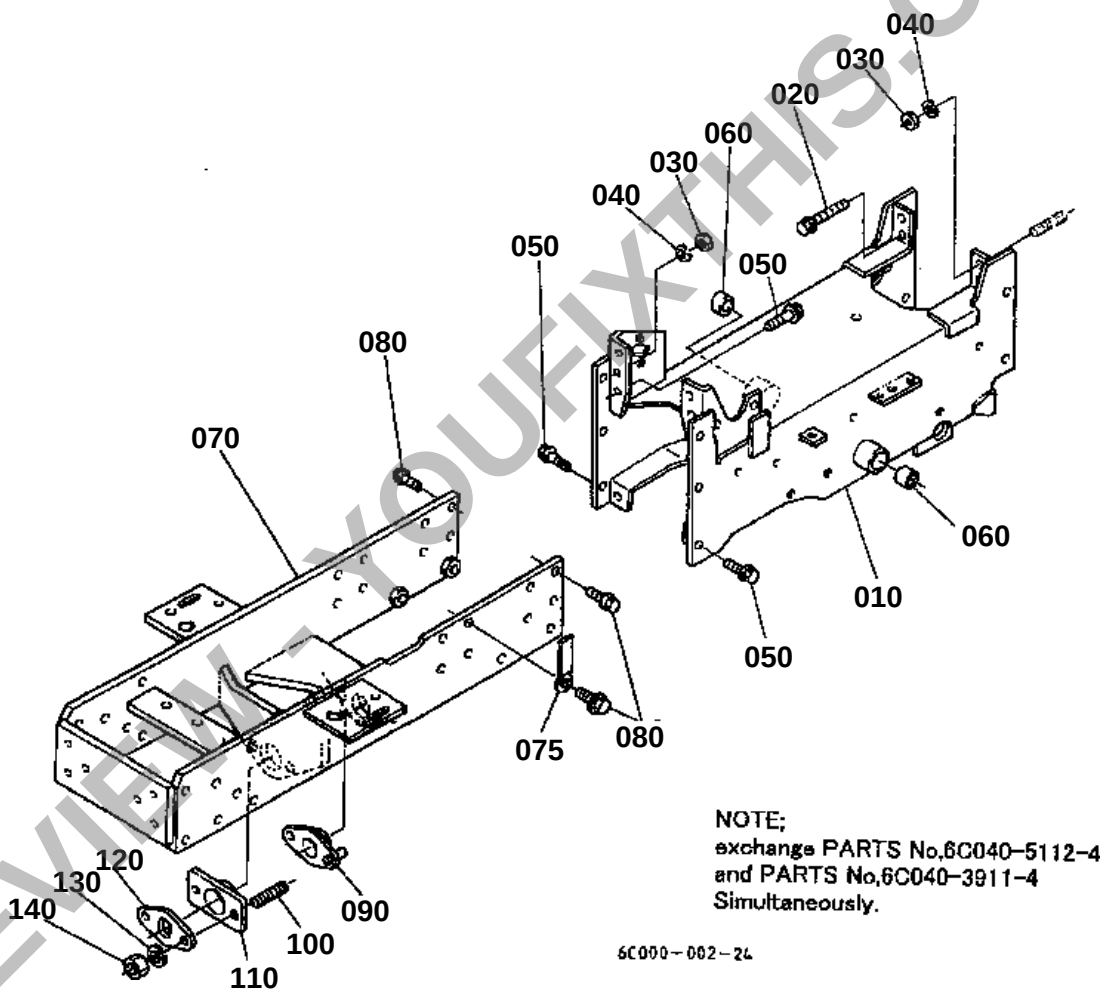


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Part No.	Description	Book
TRANSMISSION	02D137	MID PTO	100K0617
REAR AXLE	02D140	REAR DIFFERENTIAL	100K0617
	02D143	FRONT WHEEL PROPELLER SHAFT	100K0617
	02D201	MAIN GEAR SHIFT FORK	100K0617
	02D301	REAR AXLE	100K0617
BRAKE	02E001	BRAKE	100K0617
	02E015	PARKING BRAKE LEVER	100K0617
SPEED CHANGE LEVER	02F101	MAIN GEAR SHIFT LEVER	100K0617
	02F110	RANGE GEAR SHIFT LEVER	100K0617
	02F113	FRONT WHEEL DRIVE LEVER	100K0617
	02F125	PTO GEAR SHIFT LEVER	100K0617
	02F140	POSITON CONTROL LEVER	100K0617
	02F201	BRAKE PEDAL	100K0617
	02F205	DIFFERENTIAL LOCK PEDAL	100K0617
FRONT AXLE	02G101	FRONT AXLE FRAME	100K0617
	02G103	FRONT WHEEL HUB	100K0617
STEERING	02H001	KNUCKLE ARM	100K0617
	02H101	STEERING HANDLE	100K0617
	02H110	STEERING CONTROLLER	100K0617
	02H11501	STEERING CONTROLLER [COMPONENT PARTS]	100K0617
	02H11502	STEERING CONTROLLER [COMPONENT PARTS]	100K0617
	02H11503	STEERING CONTROLLER [COMPONENT PARTS]	100K0617
HYDRAULIC SYSTEM	02J201	HYDRAULIC OIL LINE(SUCTION)	100K0617
	02J203	FLOW DIVIDER VALVE [COMPONENT PARTS]	100K0617
	02J215	HYDRAULIC OIL LINE(STEERING)	100K0617
	02J301	HYDRAULIC CYLINDER CASE	100K0617
	02J405	CONTROL VALVE	100K0617
	02J41001	CONTROL VALVE [COMPONENT PARTS]	100K0617
	02J41002	CONTROL VALVE [COMPONENT PARTS]	100K0617
	02K101	LIFT ROD	100K0617
	02K115	LOWER LINK	100K0617
	02K120	TOP LINK	100K0617
HOOD(BONNET)/ROPS	02M101	FRONT GRILLE	100K0617
	02M105	HOOD(BONNET)	100K0617
	02M120	SIDE COVER	100K0617
	02M210	FENDER	100K0617
	02M217	SEAT SUPPORT	100K0617
	02M220	SEAT	100K0617
	02M225	STEP	100K0617
	02M301	ROPS	100K0617
WHEEL	02R10101	FRONT WHEEL (5.00-10)	100K0617
	02R11001	REAR WHEEL (8.3-16)	100K0617
	02R11004	REAR WHEEL (33*12.5-15)	100K0617
	02R11005	REAR WHEEL (31*15.5-15)	100K0617
LABELS	02S101	LABEL	100K0617
ACCESSORIES	02T105	ACCESSORIES AND SERVICE PARTS	100K0617
OPTION	02U803	STATER RELAY KIT [OPTION]	100K0617


PREVIEW: YOUFIXTHIS.COM

Download full manual at youfixthis.com

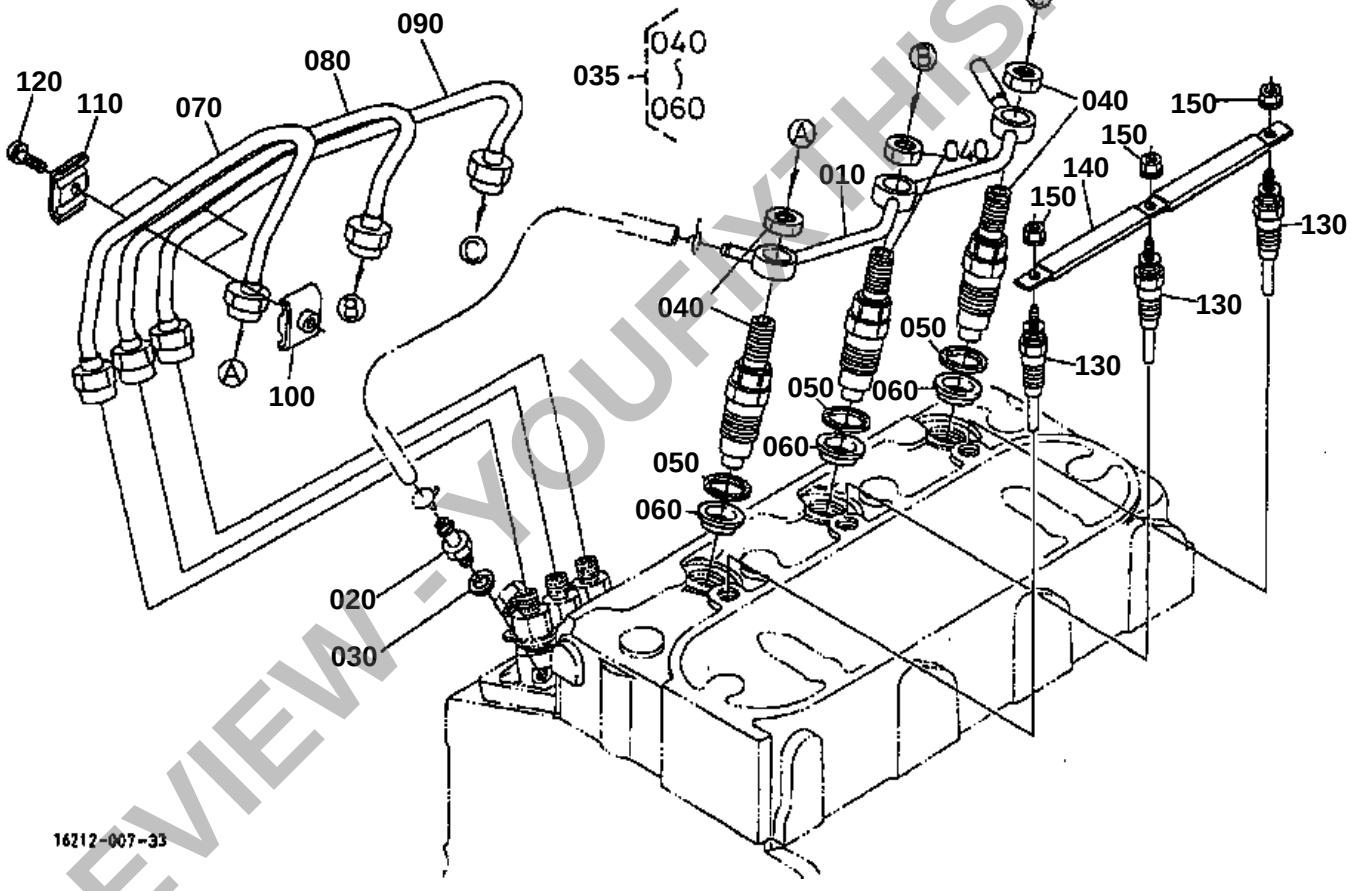

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

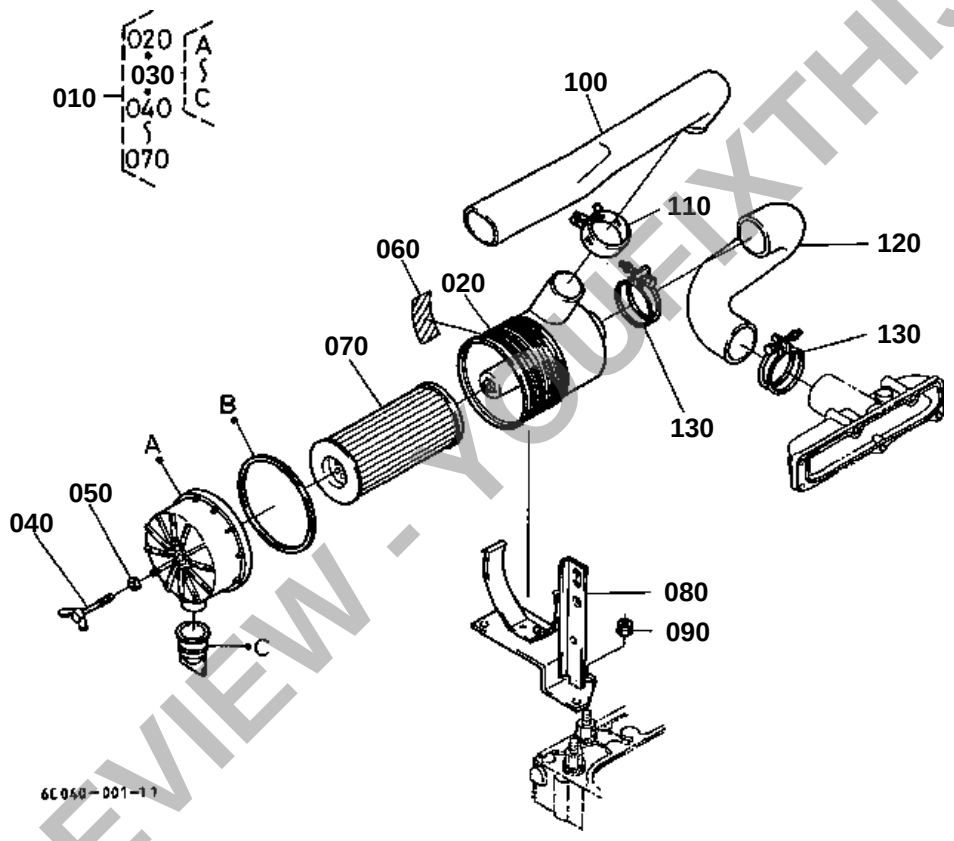

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	6C040-55100	ASSY METER	1				1.2	2.64
020	03514-50420	SCREW TAPPING	6				0.002	0.0044
030	6C040-55410	SWITCH STARTER	1	<=10140			0	0
030	6C040-55412	SWITCH STARTER	1	>=10141	←		0.198	0.4356
030	6C040-55450	SWITCH STARTER	1	>=10396	≠		0	0
030	6C040-55452	SWITCH STARTER	1	>=10524	≠		0.22	0.484
040	6C040-55420	SWITCH COMBINATION	1	<=10140			0	0
040	6C040-55423	SWITCH COMBINATION	1	>=10141	←		0	0
040	6C040-55424	SWITCH COMBINATION	1	>=10267	←		0.09	0.198
050	6C040-55520	UNIT HAZARD	1				0.036	0.0792
060	19267-64602	ASSY REGULATOR	1	<=10076		[A]	0	0
060	RP201-53710	ASSY REGULATOR	1	>=10077	↔	[A]	0.182	0.4004
070	01205-50625	BOLT	1			[A]	0.007	0.0154
080	6C040-55440	CABLE HOUR METER	1				0.2	0.44
090	6C040-55850	ASSY SWITCH SAFETY	1	<=10551			0	0
090	6C040-55852	ASSY SWITCH SAFETY	1	>=10552	←		0.124	0.2728
100	99999-99999	BLANK	0				0	0
110	67111-55830	NUT SAFETY SWITCH	2				0.035	0.077
120	67111-55840	CAP SAFETY SWITCH	1				0.002	0.0044
130	6C040-55860	WASHER	1	<=10551			0	0
130	6C040-55862	WASHER TOOTHED	1	>=10552	←		0.004	0.0088
140	52320-42900	SWITCH SAFETY	2				0.1	0.22
150	99999-99999	BLANK	0				0	0
160	67111-55830	NUT SAFETY SWITCH	4				0.035	0.077
170	67111-55840	CAP SAFETY SWITCH	2				0.002	0.0044
180	6C040-55432	KEY STARTER	2				0.012	0.0264

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	6C040-14510	GEAR-SHAFT	1			11T	0.5	1.1
020	67121-56770	BEARING BALL	1				0.127	0.2794
030	67955-14170	BEARING BALL	1				0.114	0.2508
040	04612-00190	CIR CLIP EXTERNAL	1				0.001	0.0022
050	08221-07303	BEARING BALL	1				0.116	0.2552
060	38430-21590	BEARING BALL	1				0.25	0.55
070	64441-22170	BEARING BALL	1				0.24	0.528
080	15471-95360	CIR CLIP EXTERNAL	1				0.004	0.0088
090	6C040-14650	GEAR 4WD	1			13T	0.093	0.2046
100	04612-00250	CIR CLIP EXTERNAL	1				0.002	0.0044
110	6C040-14620	GEAR	1			13-32T	0.452	0.9944
120	66591-14720	SPACER	1				0.002	0.0044
130	66611-14670	SHIM	1			1.4MM	0.008	0.0176
130	66611-14680	SHIM	1			1.8MM	0.01	0.022
130	66611-14690	SHIM	1			0.2MM	0.001	0.0022
140	37410-16510	SHAFT PTO	1				0.79	1.738
150	67121-56770	BEARING BALL	1				0.127	0.2794
160	6C040-14730	BEARING BALL	1				0.15	0.33
170	6C040-14720	GEAR	1			24T	0.68	1.496
180	37410-16550	SEAL OIL	1				0.03	0.066
190	37410-63110	CAP PTO SHAFT	1	<=10140			0	0
190	37410-63112	CAP PTO SHAFT	1	>=10141	←		0.055	0.121


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

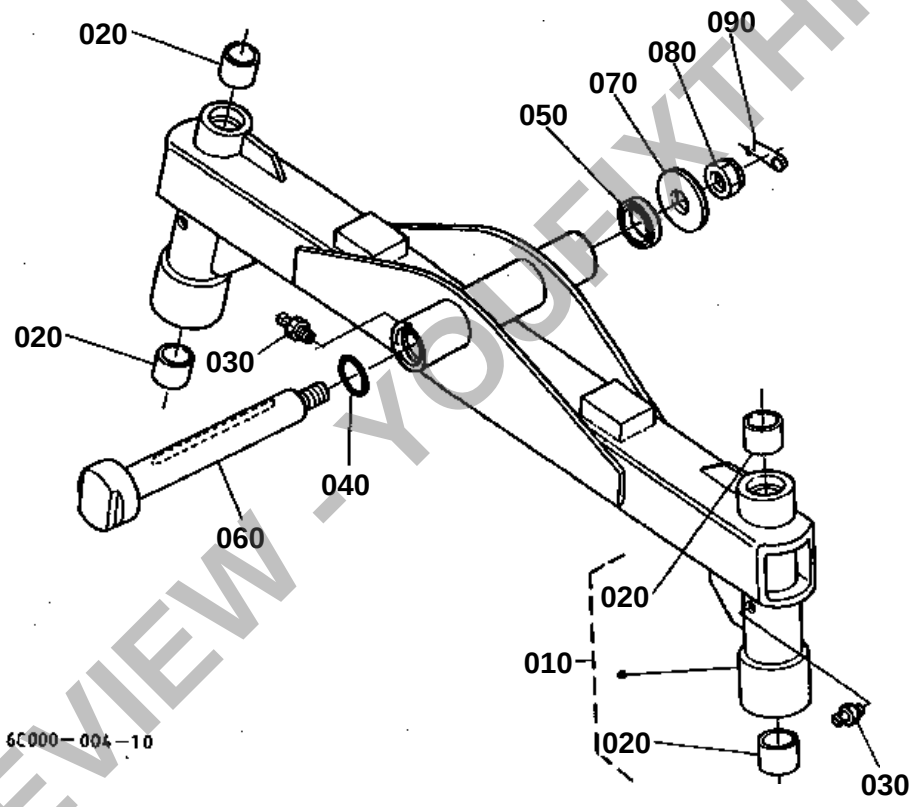

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

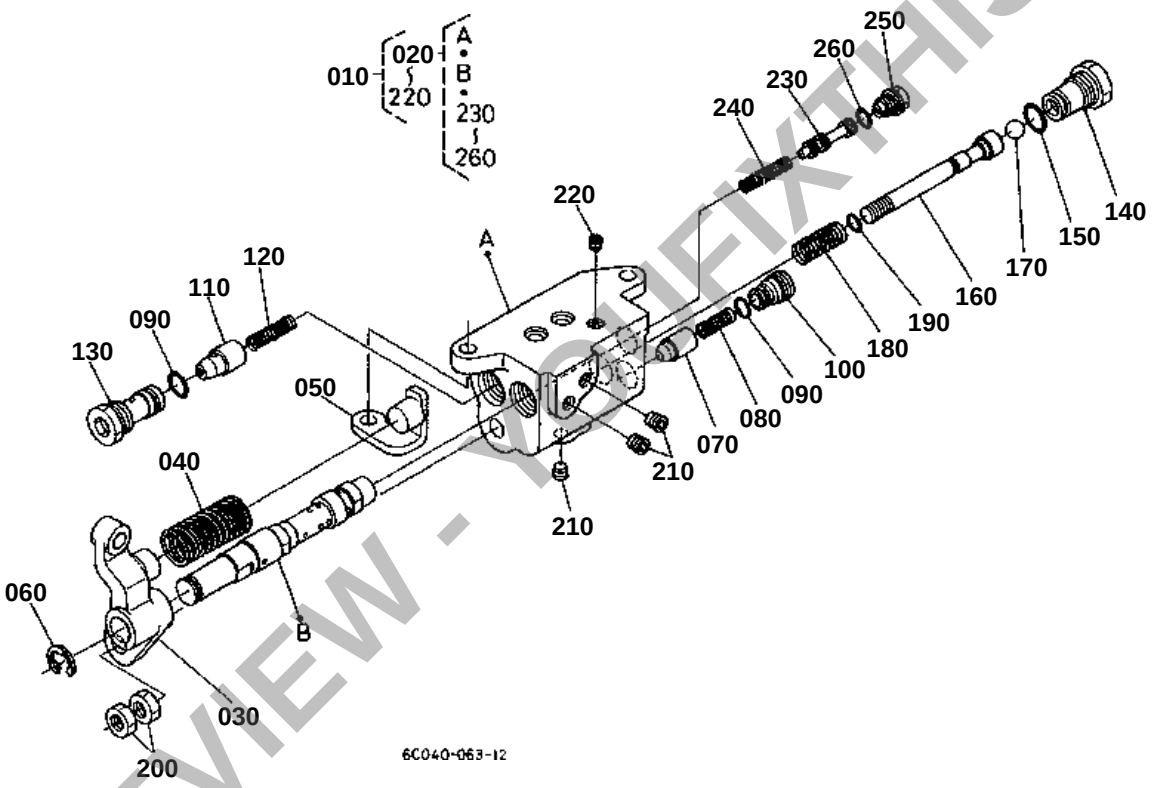

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 12 of 242 pages

The full manual includes:

- All 242 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota B1700E, B2100E, B2400E Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual