
Item	Part No.	Description	Book
ENGINE	01T001	CRANKCASE	100K0199
	01T002	OIL PAN	100K0199
	01T003	PISTON/CRANKSHAFT	100K0199
	01T004	MAIN BEARING CASE	100K0199
	01T00501	FLYWHEEL	100K0199
	01T006	CYLINDER HEAD	100K0199
	01T007	VALVE/ROCKER ARM	100K0199
	01T008	NOZZLE HOLDER	100K0199
	01T009	NOZZLE HOLDER [COMPONENT PARTS]	100K0199
	01T010	CYLINDER HEAD COVER	100K0199
	01T011	INLET MANIFOLD	100K0199
	02T012	AIR CLEANER	100K0199
	02T013	AIR CLEANER [COMPONENT PARTS]	100K0199
	01T014	EXHAUST MANIFOLD	100K0199
	02T015	MUFFLER	100K0199
	01T016	CAMSHAFT	100K0199
	01T017	GEAR CASE	100K0199
	01T018	WATER PUMP	100K0199
	01T019	WATER FLANGE/THERMOSTAT	100K0199
	01T020	FUEL CAMSHAFT	100K0199
	01T021	INJECTION PUMP	100K0199
	01T022	INJECTION PUMP [COMPONENT PARTS]	100K0199
	01T023	ENGINE STOP LEVER	100K0199
	01T024	SPEED CONTROL PLATE	100K0199
	01T025	GOVERNOR	100K0199
	01T026	UPPER GASKET KIT	100K0199
	01T027	LOWER GASKET KIT	100K0199
	02T028	ENGINE STOP ROD	100K0199
FUEL SYSTEM	02T029	ACCELERATOR LEVER	100K0199
	02T030	FUEL TANK	100K0199
	02T031	FUEL PIPE 1	100K0199
	02T032	FUEL FILTER	100K0199
	02T033	FUEL PIPE 2	100K0199
COOLING WATER SYSTEM	02T034	WATER PIPE	100K0199
	02T035	RADIATOR	100K0199
	01T036	FAN	100K0199
ELECTRICAL SYSTEM	01T037	TENSION PULLEY [CA]	100K0199
	01T03801	DYNAMO [A][AU][NZ]	100K0199
	01T03802	ALTERNATOR [CA]	100K0199
	01T03901	DYNAMO [A][AU][NZ] [COMPONENT PARTS]	100K0199
	01T03902	ALTERNATOR [CA] [COMPONENT PARTS]	100K0199
	02T040	STARTER	100K0199
	02T041	STARTER [COMPONENT PARTS]	100K0199
	02T042	BATTERY	100K0199
	02T043	LIGHT	100K0199
	02T044	WORKING LIGHT [OPTION]	100K0199
	02T045	PANEL/SWITCH	100K0199
	02T046	PANEL BOARD [COMPONENT PARTS]	100K0199
	02T04701	WIRE HARNESS [A][AU][NZ]	100K0199
CLUTCH	01T04801	CLUTCH	100K0199
	02T04901	CLUTCH ROD	100K0199
	02T050	CLUTCH PEDAL	100K0199
	02T05101	CLUTCH HOUSING	100K0199
TRANSMISSION	02T052	TRANSMISSION CASE	100K0199
	02T05301	TRANSMISSION CASE COVER	100K0199
	02T05601	PROPELLER SHAFT	100K0199
	02T05701	1ST SHAFT/2ND SHAFT	100K0199
	02T058	3RD SHAFT	100K0199
	02T059	4TH SHAFT	100K0199

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

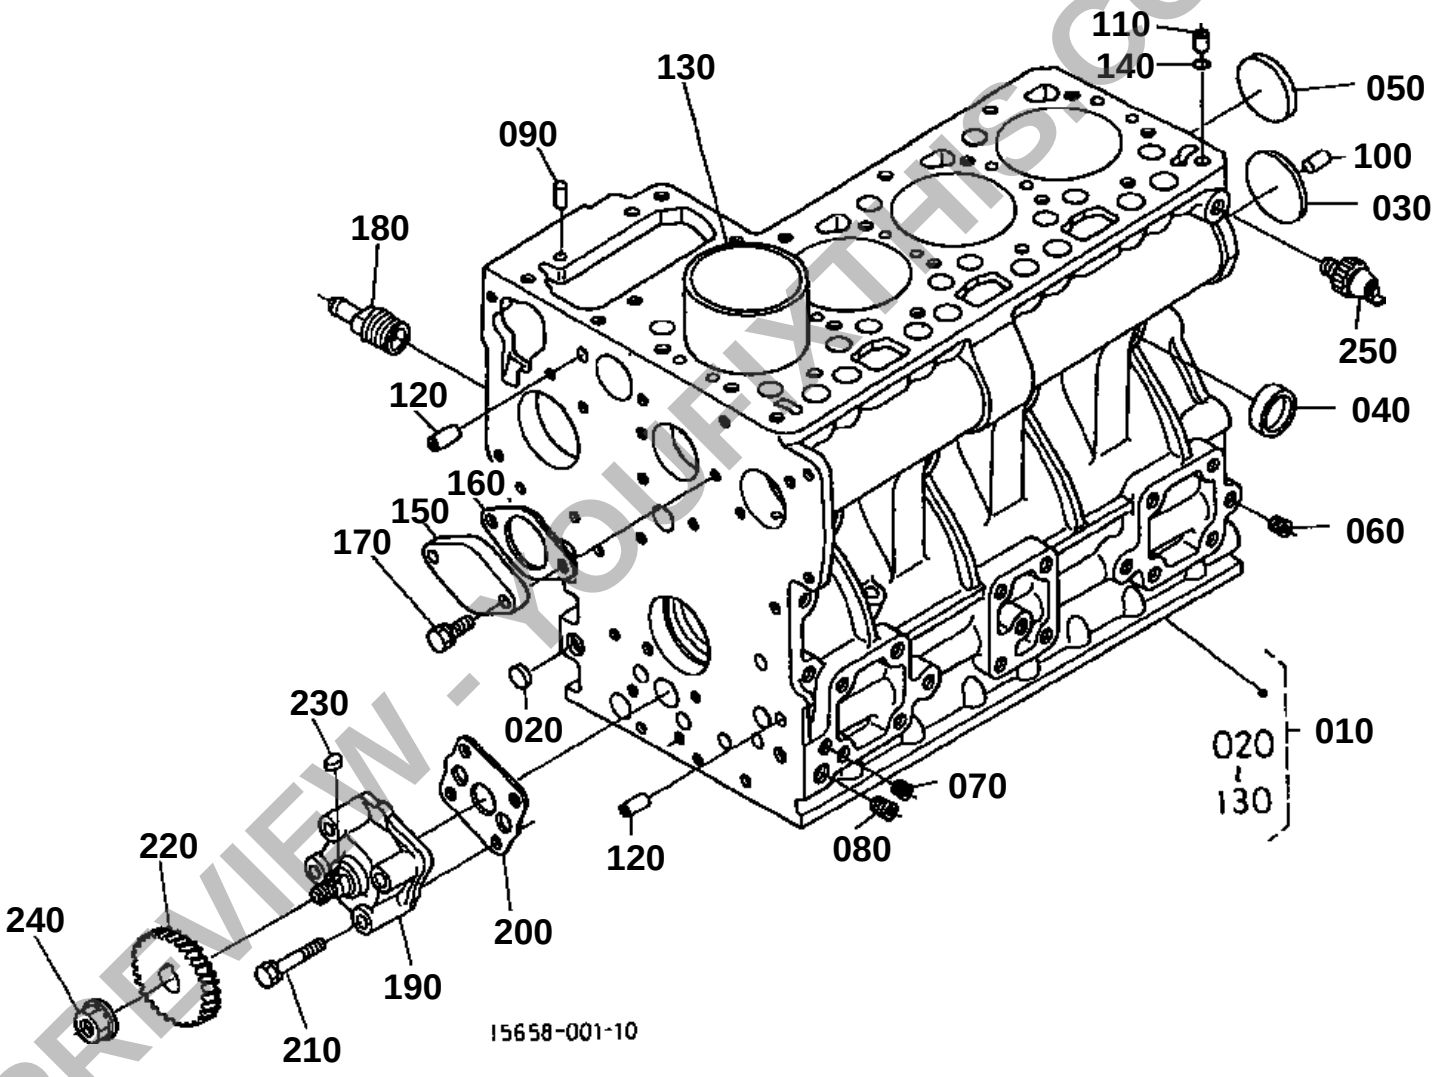

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


CRANKCASE

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	15657-01010	COMP.CRANKCASE	1				34	74.8
020	15261-96170	PLUG	3				0.005	0.011
030	15261-96160	PLUG	1				0.02	0.044
040	15321-96260	CAP SEALING	6				0.001	0.0022
050	15221-03490	CAP SEALING	1				0.02	0.044
060	15261-96010	PLUG	7				0.002	0.0044
070	15521-96020	PLUG	3				0.003	0.0066
080	15521-96030	PLUG	1				0.007	0.0154
090	05012-00609	PIN STRAIGHT	2				0.003	0.0066
100	05012-00814	PIN STRAIGHT	2				0.006	0.0132
110	15221-33650	PIN PIPE	1				0.004	0.0088
120	15231-33960	PIN PIPE	2				0.001	0.0022
130	15531-02310	LINER CYLINDER	4				0.42	0.924
140	15221-33700	O RING	1				0.001	0.0022
150	15261-73910	COVER WATER	1				0.13	0.286
160	15263-73920	GASKET WATER COVER	1				0.002	0.0044
170	01023-50618	BOLT	2				0.006	0.0132
180	15531-73170	JOINT DRAIN PIPE	1				0.145	0.319
190	15261-35010	ASSY PUMP OIL	1				0.32	0.704
200	15263-35150	GASKET OIL PUMP NA	1				0.001	0.0022
210	15261-91022	BOLT	4				0.012	0.0264
220	15954-35662	GEAR OIL PUMP DRIVE	1				0.14	0.308
230	05712-00410	KEY FEATHER	1				0.001	0.0022
240	02771-60100	NUT FLANGE	1				0.01	0.022
250	15531-39010	SWITCH OIL	1				0.032	0.0704


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

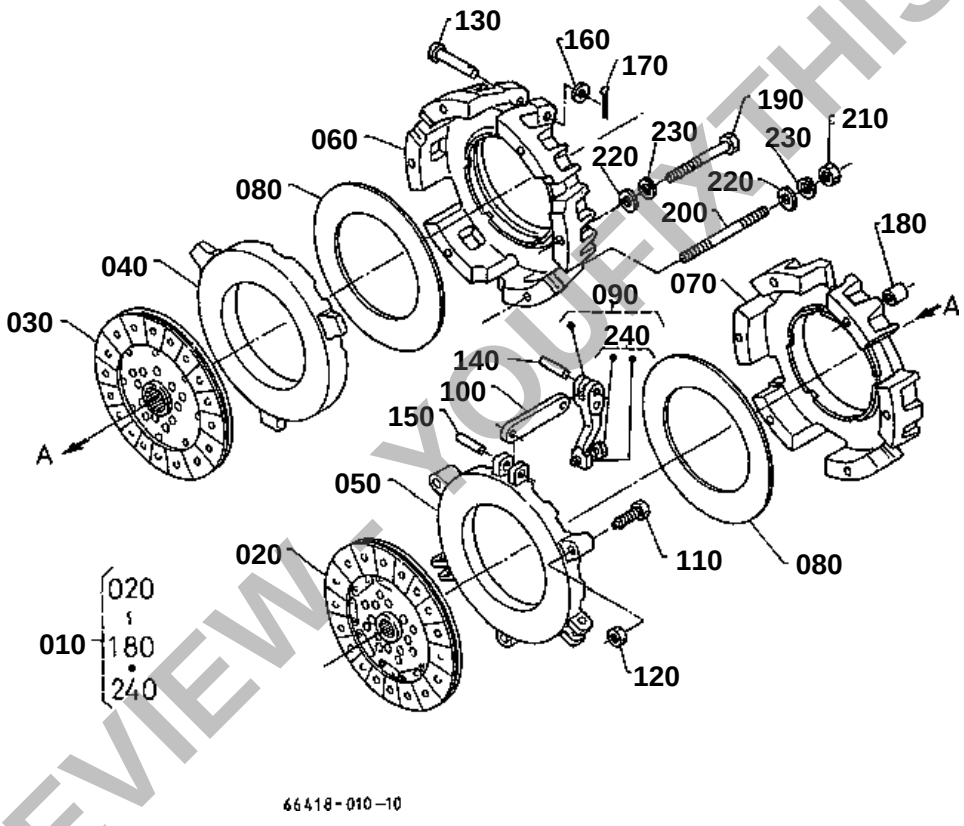


PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

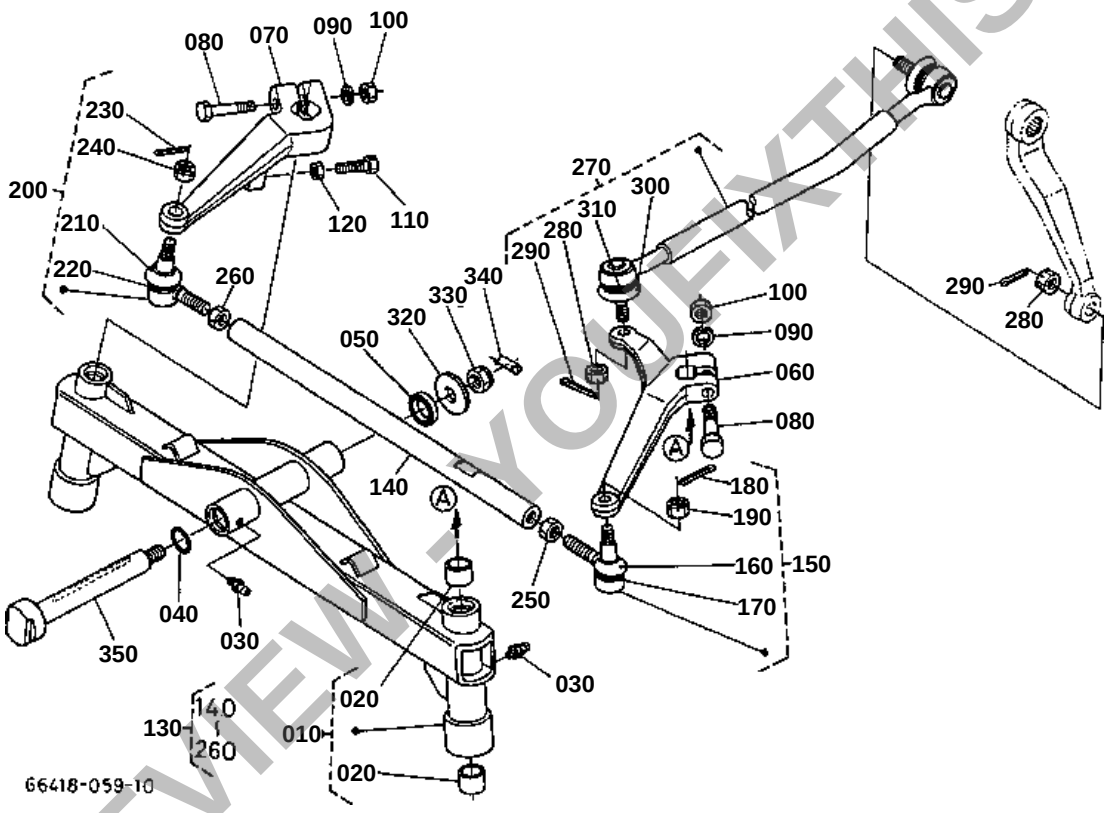

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

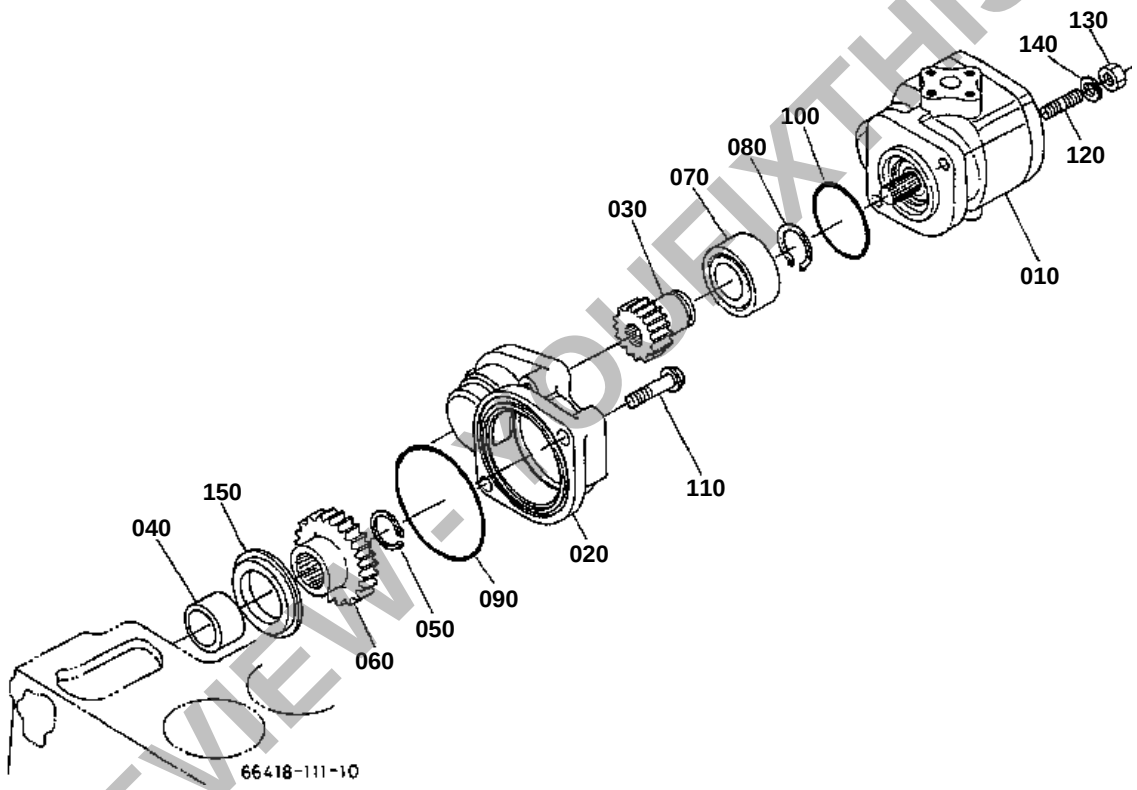


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


Item	Part No.	Description	Book
TRANSMISSION	02T06001	FRONT DRIVE SHAFT/6TH SHAFT	100K0199
	02T06101	7TH SHAFT	100K0199
	02T062	REVERSE SHAFT	100K0199
	02T06301	PTO SHAFT	100K0199
	02T06302	MID PTO	100K0199
	02T06303	FRONT PTO [OPTION]	100K0199
SPEED CHANGE LEVER	02T064	MAIN GEAR SHAFT LEVER	100K0199
	02T065	MAIN GEAR SHAFT FORK	100K0199
	02T070	RANGE GEAR SHIFT LEVER	100K0199
	02T071	RANGE GEAR SHIFT FORK	100K0199
	02T07201	FRONT WHEEL DRIVE LEVER/PTO LEVER	100K0199
	02T073	FRONT DRIVE FORK	100K0199
	02T074	PTO FORK SHAFT	100K0199
REAR AXLE/REAR WHEEL	02T075	REAR DIFFERENTIAL	100K0199
	02T07601	DIFF.LOCK PEDAL	100K0199
	02T077	REAR AXLE	100K0199
	02T078	REAR AXLE CASE	100K0199
	02T07901	REAR WHEEL (8.3-24)	100K0199
	02T07902	REAR WHEEL (12.4-16)	100K0199
	02T07903	REAR WHEEL (12.4-16)	100K0199
	02T07904	REAR WHEEL (13.6-16)	100K0199
	02T07905	REAR WHEEL (13.6-16)	100K0199
BRAKE	02T080	BRAKE	100K0199
	02T081	BRAKE ROD	100K0199
	02T082	BRAKE PEDAL	100K0199
FRONT AXLE/FRONT WHEEL	02T084	FRONT AXLE/KNUCKLE ARM	100K0199
	02T085	FRONT WHEEL HUB	100K0199
	02T08601	FRONT WHEEL (4.00-12)	100K0199
	02T08602	FRONT WHEEL (6.50-12)	100K0199
	02T08603	FRONT WHEEL (23 X 8.50-12)	100K0199
	02T08604	FRONT WHEEL (23 X 8.50-12)	100K0199
	02T098	FRONT AXEL FRAME	100K0199
	02T099	FRONT WEIGHT BRACKET [OPTION]	100K0199
STEERING	02T10101	MANUAL STEERING	100K0199
	02T10102	POWER STEERING	100K0199
	02T10201	MANUAL STEERING [COMPONENT PARTS]	100K0199
	02T10202	POWER STEERING [COMPONENT PARTS]	100K0199
HYDRAULIC SYSTEM	01T103	HYDRAULIC GEAR PUMP	100K0199
	01T104	HYDRAULIC GEAR PUMP [COMPONENT PARTS]	100K0199
	02T105	HYDRAULIC PIPE (PS)	100K0199
	02T10601	HYDRAULIC PIPE (SUCTION)	100K0199
	02T10701	HYDRAULIC PIPE (DELIVERY/RETURN)	100K0199
	02T108	HYDRAULIC BLOCK [COMPONENT PARTS]	100K0199
	02T110	LIFT ARM	100K0199
	02T111	HYD.CYLINDER CAP	100K0199
	02T112	CONTROL VALVE	100K0199
	02T113	CONTROL VALVE1 [COMPONENT PARTS]	100K0199
	02T114	CONTROL VALVE2 [COMPONENT PARTS]	100K0199
	02T115	CONTROL VALVE3 [COMPONENT PARTS]	100K0199
	02T116	TOP LINK	100K0199
	02T117	LOWER LINK/LIFT ROD	100K0199
	02T118	CHECK CHAIN	100K0199
	02T119	HITCH	100K0199
HOOD(BONNET)/CHASSIS	02T121	HOOD (BONNET)	100K0199
	02T122	LACE	100K0199
	02T123	HOOD (BONNET) COVER REAR	100K0199
	02T124	HOOD (BONNET) FRONT	100K0199
	02T125	HOOD (BONNET) SIDE	100K0199
	02T126	DUST COVER	100K0199

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

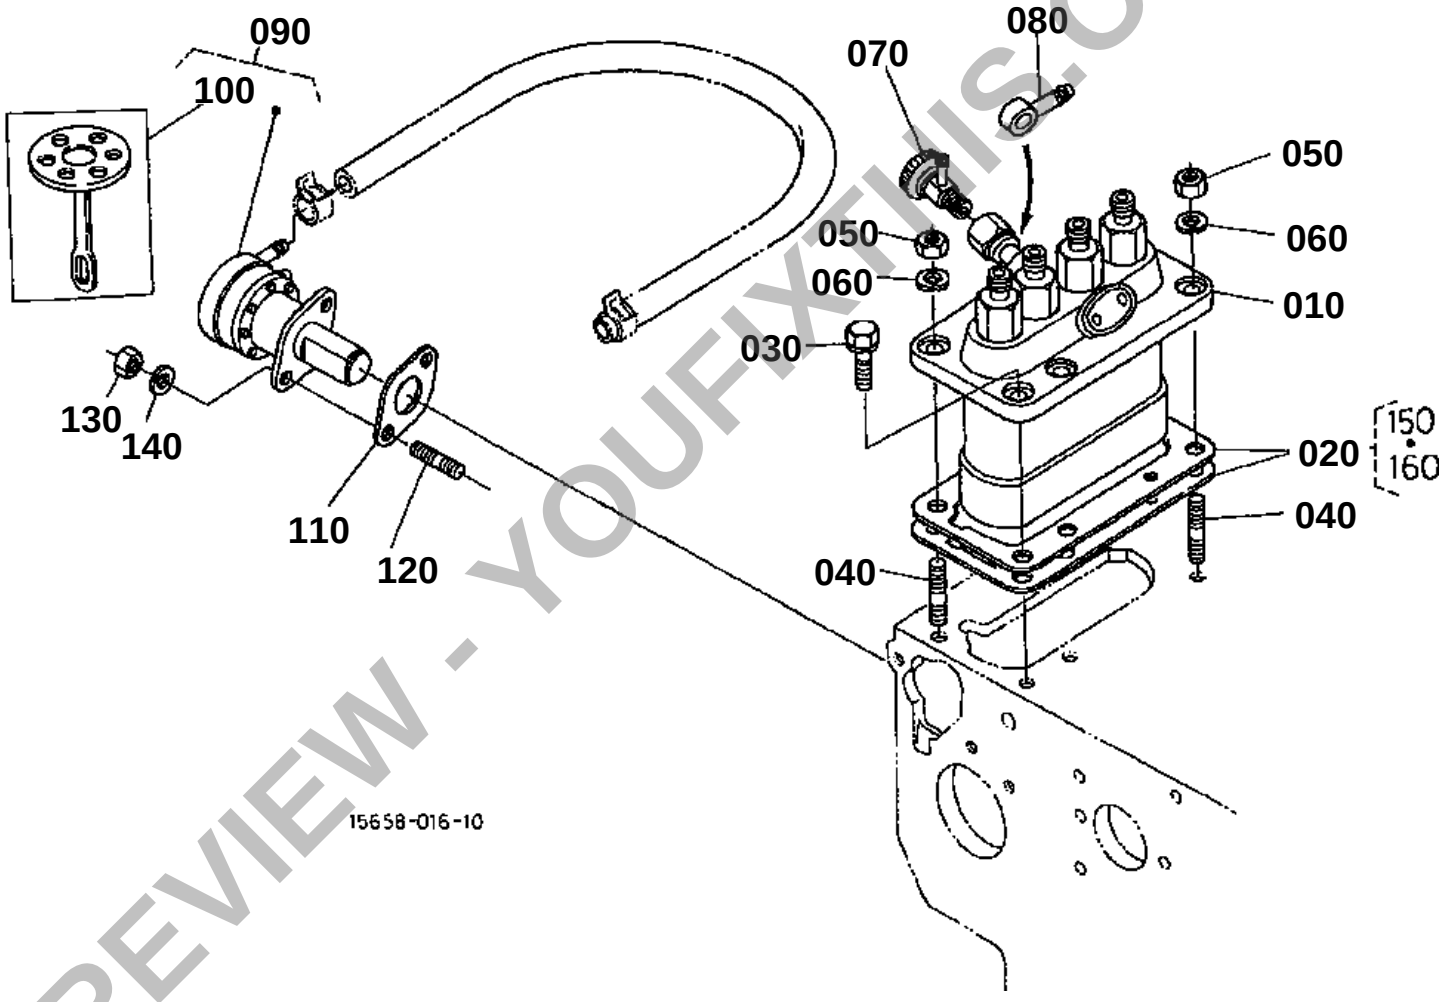

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

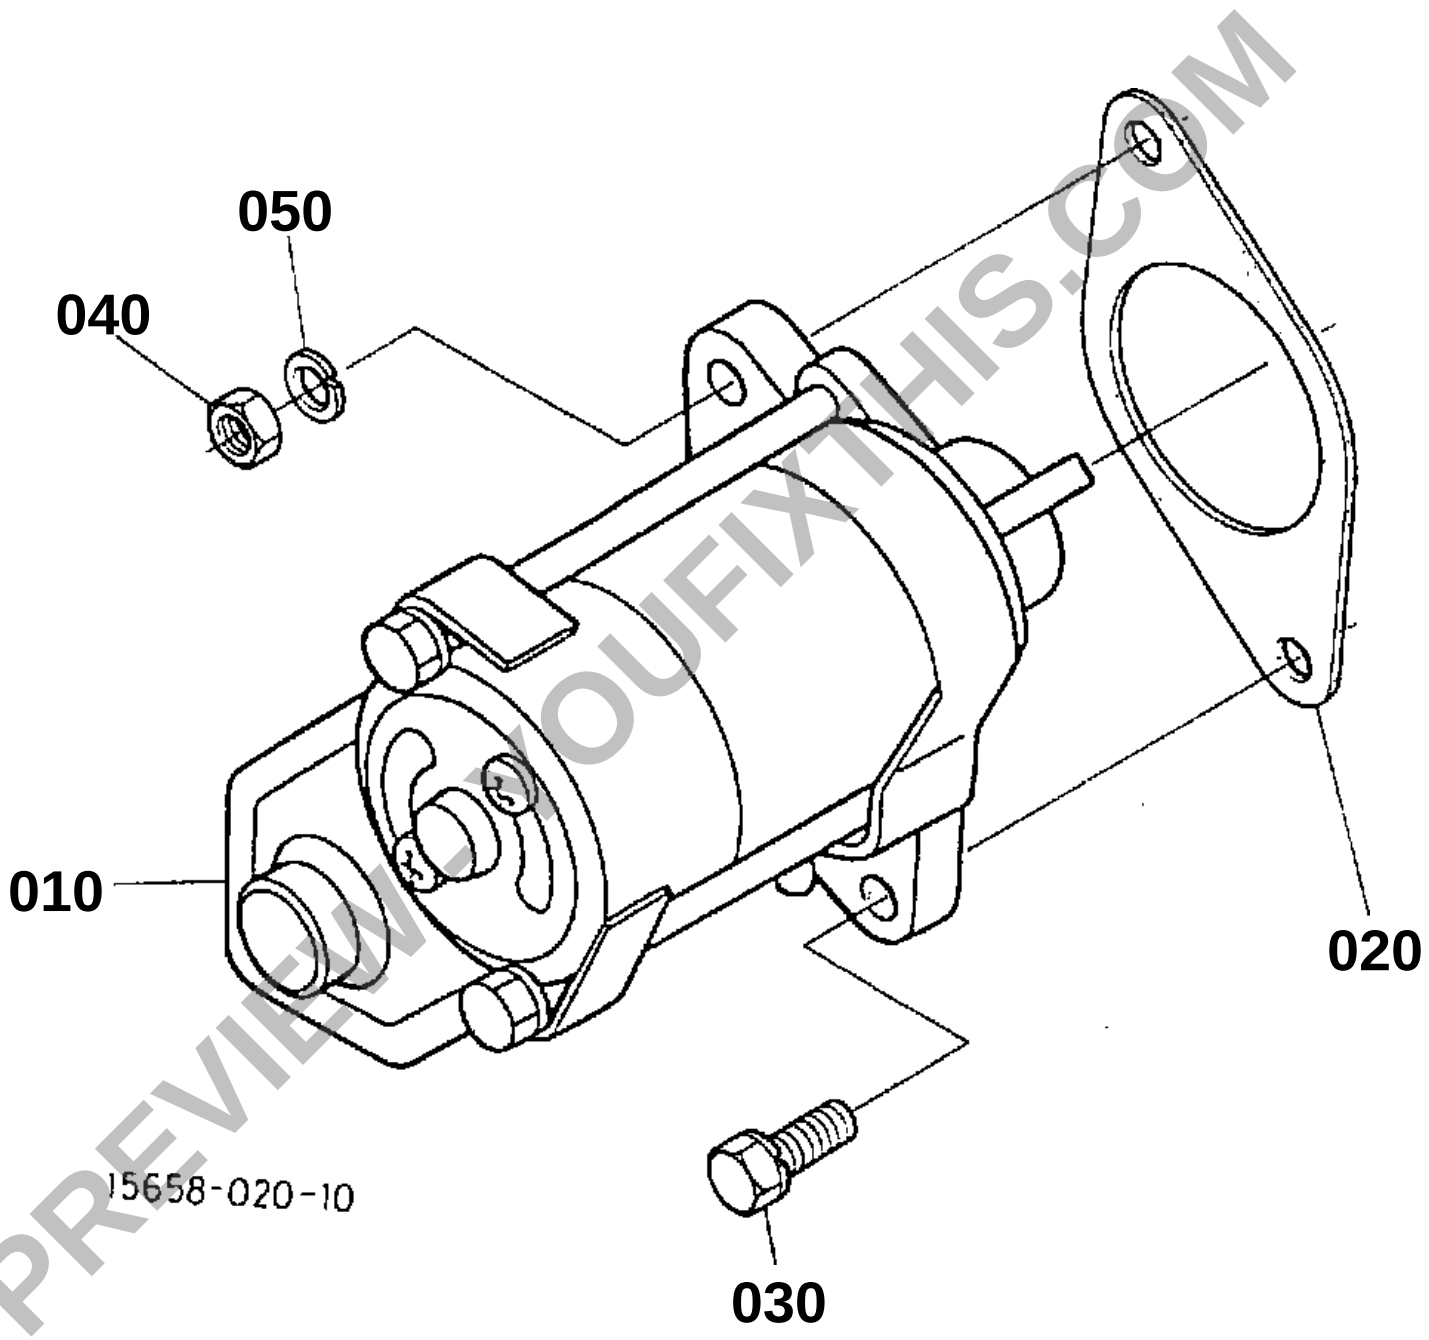

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	67800-15512	SHAFT REVERSE	1				0.62	1.364
020	04811-00160	O RING	1				0	0
030	67817-15520	COLLAR	1				0.04	0.088
040	67817-15530	GEAR	1			16-16T	0.43	0.946
050	08822-53017	BEARING NEEDLE	2				0.022	0.0484
060	67817-15540	COLLAR	1				0.02	0.044
070	67111-14450	COLLAR	2				0.01	0.022
080	67817-15550	SEAL OIL	1				0.015	0.033
090	67817-15610	SHAFT GEAR	1			15T	0.525	1.155
100	67817-15620	BUSH	1				0.03	0.066
110	04611-00620	CIR CLIP INTERNAL	1				0.011	0.0242
120	67817-15630	SEAL OIL	1				0.005	0.011
130	08822-02617	BEARING NEEDLE	2				0.02	0.044
140	67817-15640	CIR-CLIP	3				0.001	0.0022
150	67800-14890	COLLAR	1				0.005	0.011

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

BRAKE ROD

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	67800-44510	ROD BRAKE	2				0.21	0.462
020	67311-42830	U-JOINT	1	<=10227			0.05	0.11
030	67111-44530	U-JOINT	2				0.048	0.1056
040	02112-50080	NUT	2				0.003	0.0066
050	05122-50822	PIN JOINT	4	<=10227			0.01	0.022
050	05122-50822	PIN JOINT	2	>=10228			0.01	0.022
060	04012-50080	WASHER PLAIN	4	<=10227			0.001	0.0022
060	04012-50080	WASHER PLAIN	2	>=10228			0.001	0.0022
070	05511-50215	PIN SPLIT	4	<=10227			0.001	0.0022
070	05511-50215	PIN SPLIT	2	>=10228			0.001	0.0022
080	67800-44555	LEVER BRAKE LOCK	1				0.15	0.33
090	67800-44560	SPRING BRAKE LOCK	1				0.015	0.033
100	05122-51235	PIN JOINT	1				0.034	0.0748
110	04011-50120	WASHER PLAIN	1				0.005	0.011
120	05511-50425	PIN SPLIT	1				0.003	0.0066

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	67511-36300	COMP COVER UPPER R.	1				13.7	30.14
020	67111-36320	BUSH	1				0.065	0.143
030	67111-36330	BUSH	1				0.075	0.165
040	67211-51120	PLUG	1				0.001	0.0022
050	67800-36350	PIPE BREATHER	1				0.03	0.066
060	02114-50080	NUT	1				0.005	0.011
080	67111-36752	ARM HYDRAULIC	1				1.3	2.86
090	04612-00380	CIRCLIP EXTERNAL	1				0.005	0.011
100	34150-37340	PIN SET	1				0.18	0.396
110	01153-51018	BOLT	1	<=10227			0.015	0.033
110	01123-51018	BOLT	1	>=10228	←		0.02	0.044
120	04512-60100	WASHER SPRING	1	<=10227			0.002	0.0044
130	67800-36810	SHAFT HYD.ARM	1				2.1	4.62
140	09230-35525	SEAL OIL	2				0.008	0.0176
150	67800-36830	ARM LIFT LH	1				2.45	5.39
160	67800-36840	ARM LIFT RH	1				2.45	5.39
170	04612-00350	CIRCLIP EXTERNAL	2				0.01	0.022
180	04810-00120	O RING	2				0	0

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 12 of 272 pages

The full manual includes:

- All 272 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota B2150E Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual