
CRANKCASE

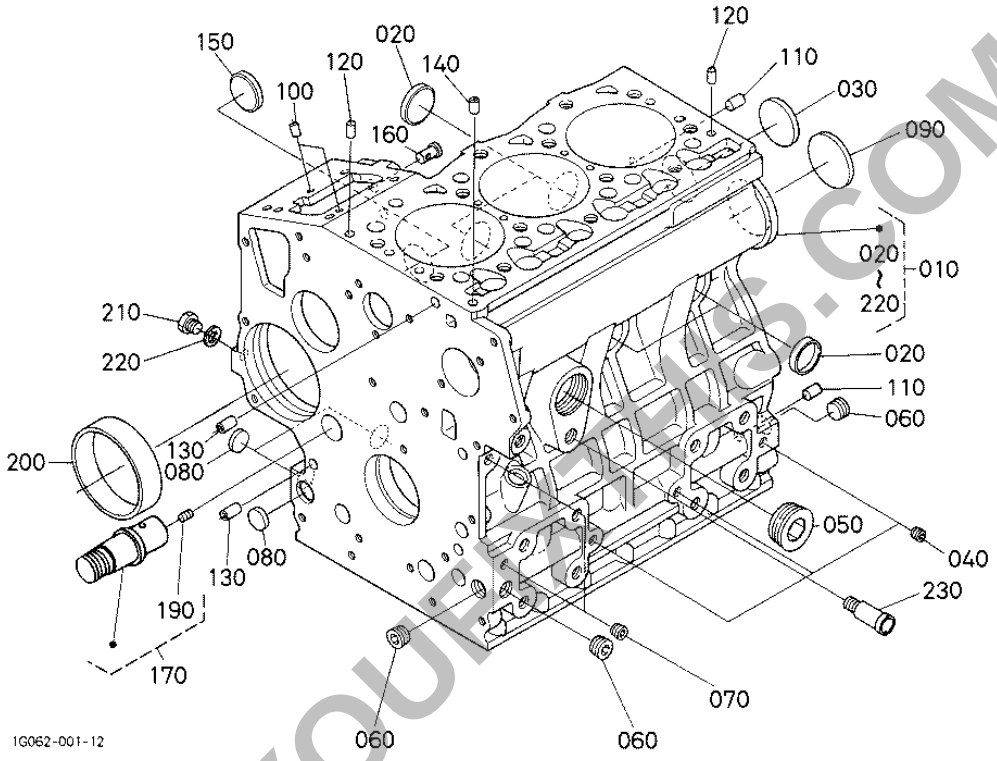


PREVIEW - YOUFIXTHIS.COM

CRANKCASE

Ref	Part Number	Part Name	Qty	IC	S/N	Lbs	Remarks
010	1G062-01013	COMP.CRANKCASE	1			66	
020	15451-96270	CAP SEALING	4			0.002	
030	15221-03490	CAP SEALING	1			0.044	
040	15261-96010	PLUG	3			0.004	
050	16683-96020	PLUG	1			0.154	
060	16241-96010	PLUG	3			0.015	
070	15521-96020	PLUG	2			0.006	

Download full manual at youfixthis.com

HYDRAULIC PISTON/LIFT ARM

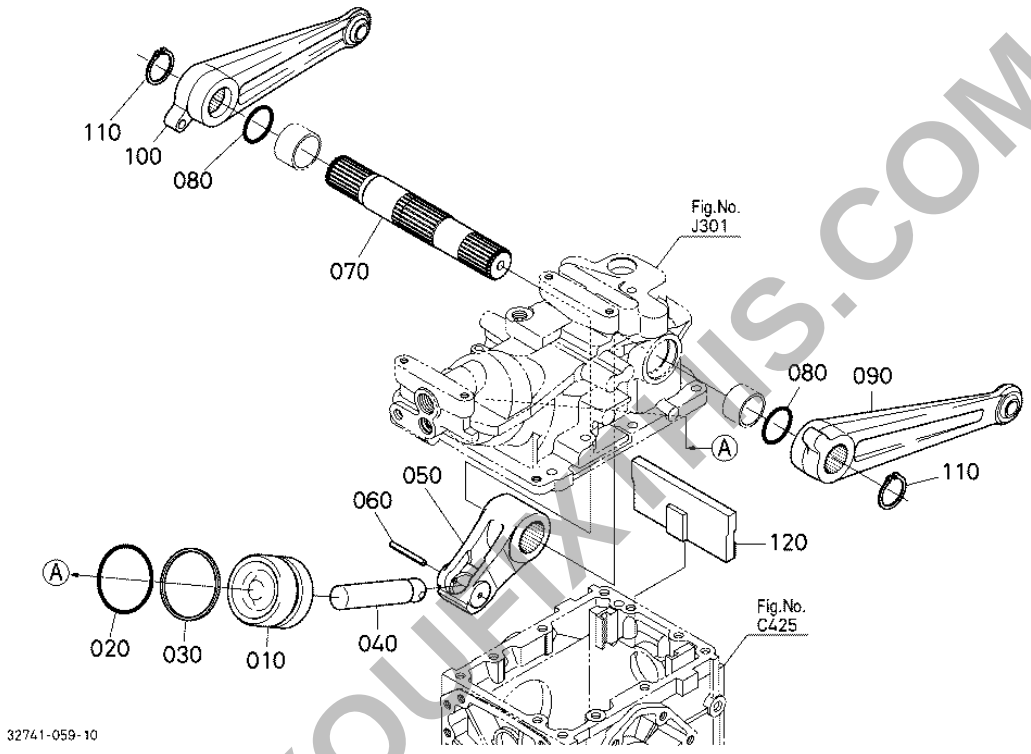


HYDRAULIC PISTON/LIFT ARM

Ref	Part Number	Part Name	Qty	IC	S/N	Lbs	Remarks
010	31321-37310	PISTON HYD.	1			2.376	
020	04811-00650	O RING	1			0.015	
030	6A671-36250	RING BACK UP	1			0.008	
040	6A700-36430	ROD HYD.PISTON	1			1.056	
050	6A700-36454	ARM HYDRAULIC	1			2.772	
060	05411-00650	PIN SPRING	1			0.013	
070	6C200-36470	SHAFT HYD.ARM	1			4.07	

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

SEAT SUPPORT

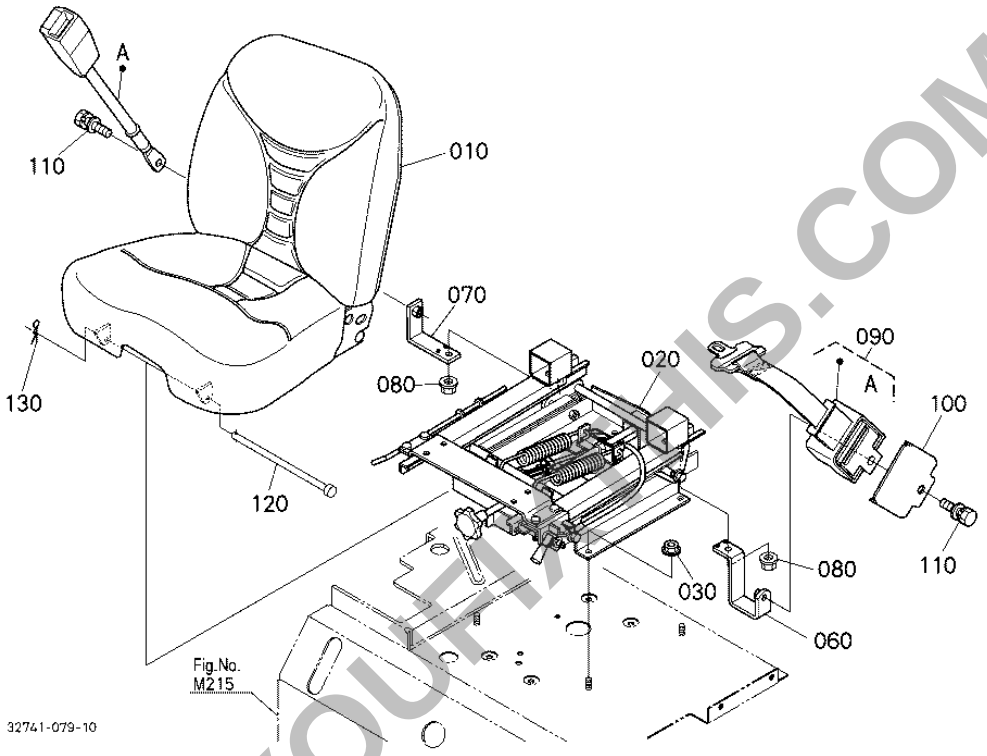


SEAT SUPPORT

Ref	Part Number	Part Name	Qty	IC	S/N	Lbs	Remarks
010	32781-47700	ASSY SEAT	1			0	
020	32741-47853	ASSY SUSPENSION SEAT	1			0	
030	02763-50080	NUT FLANGE	4			0.013	
060	32781-47784	STAY	1			0.484	
070	32781-47773	STAY SEAT BELT RH	1			0.33	
080	02763-50080	NUT FLANGE	2			0.013	
090	K2561-56850	ASSY BELT SEAT	1			1.782	

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

TRANSMISSION CASE

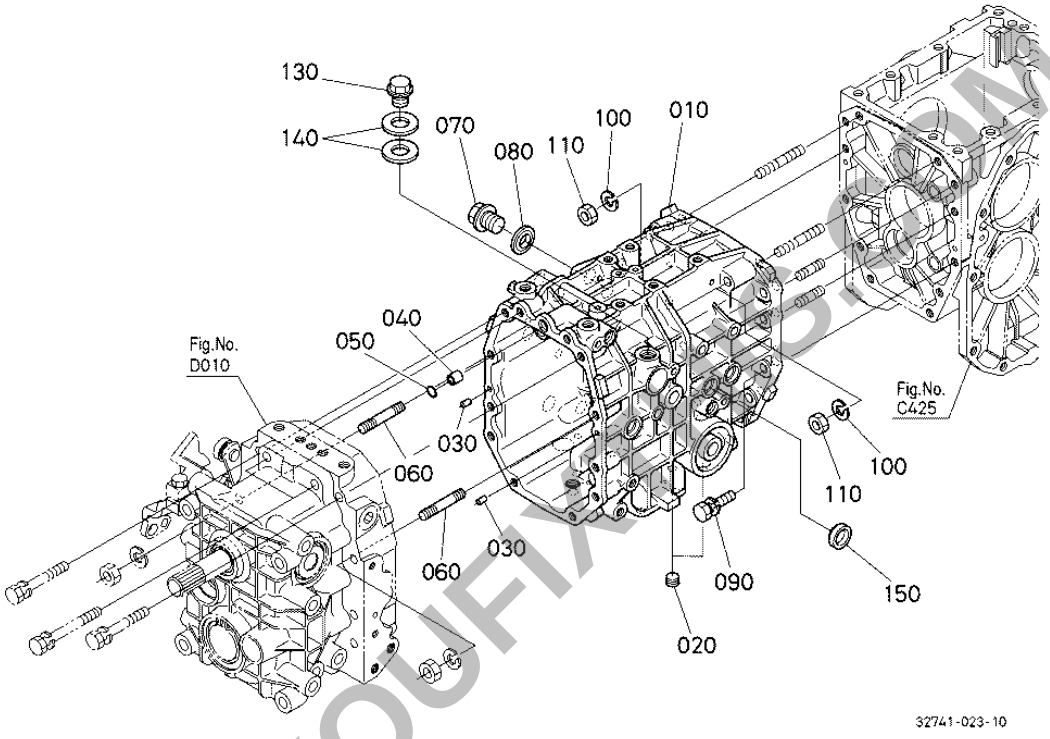


PREVIEW - YOUFIXTHIS.COM

TRANSMISSION CASE

Ref	Part Number	Part Name	Qty	IC	S/N	Lbs	Remarks
010	6C200-11113	CASE TRANSMISSION	1			13.2	
020	RA111-62470	PLUG	2			0.006	
030	05012-00614	PIN STRAIGHT	2			0.008	
040	11420-94940	PIPE KNOCK	1			0.002	
050	04811-10100	O RING	1			0.002	
060	01555-51070	STUD	2			0.107	
070	06311-55030	PLUG	1			0.11	

Download full manual at youfixthis.com

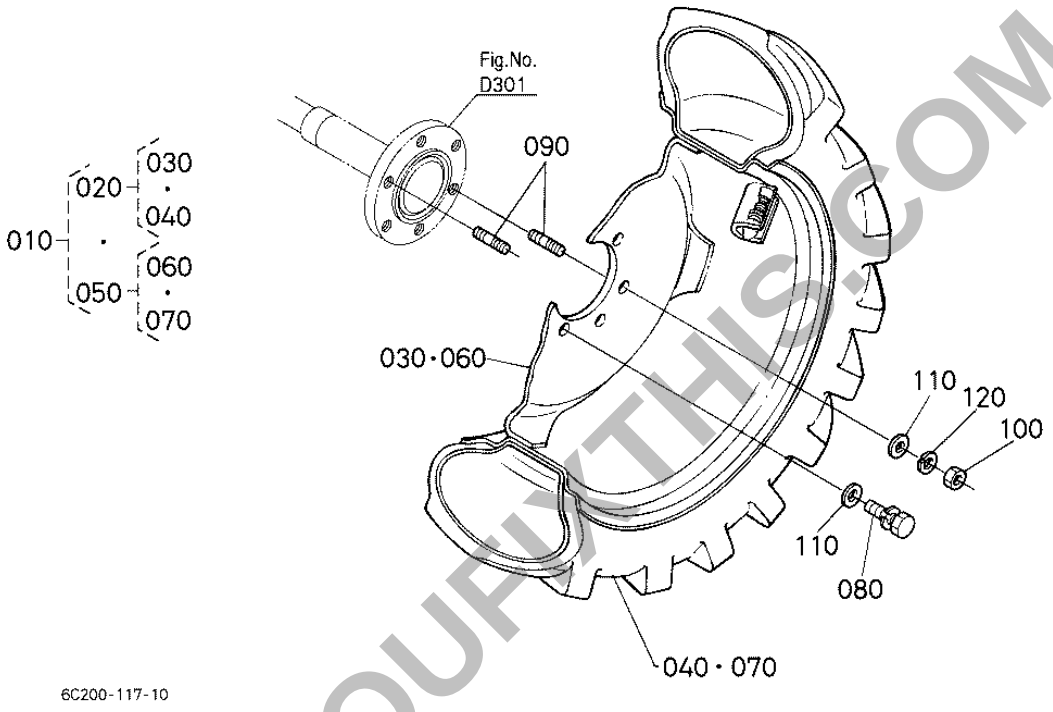

PREVIEW - YOUFIXTHIS.COM

REAR WHEEL (12.4-16R4)

Ref	Part Number	Part Name	Qty	IC	S/N	Lbs	Remarks
010	32701-50010	ASSY REAR WHEEL	1			0	
020	32701-50110	ASSY TIRE LH	1			0	
030	32701-27950	WHEEL	1			0	
040	32701-50130	TIRE	1			33	
050	32701-50210	ASSY TIRE RH	1			0	
060	32701-27950	WHEEL	1			0	
070	32701-50130	TIRE	1			33	

Download full manual at youfixthis.com

CRANKCASE

Ref	Part Number	Part Name	Qty	IC	S/N	Lbs	Remarks
080	17391-96160	PLUG EXPANSION	3			0.006	
090	16271-96160	PLUG EXPANSION	1			0.055	
100	05012-00508	PIN STRAIGHT	2			0.002	
110	05012-00814	PIN STRAIGHT	2			0.013	
120	05012-00610	PIN STRAIGHT	2			0.006	
130	15231-33960	PIN PIPE	2			0.002	
140	16241-33650	PIN PIPE	1			0.004	
150	16241-96262	PLUG	1			0.015	
160	16261-56280	PIN START SPRING	1			0.008	
170	16251-24060	COMP SHAFT IDLE	1			0.396	
190	15521-93610	SCREW SET	1			0.004	
200	16271-55350	BUSH GOVERNOR GEAR	1			0.132	
210	15221-33610	PLUG	1			0.019	
220	15021-33660	GASKET	1			0.002	
230	15321-73340	PIPE WATER RETURN	1			0.035	

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

UPPER GASKET KIT

Ref	Part Number	Part Name	Qty	IC	S/N	Lbs	Remarks
080	16221-73270	GASKET THERMOSTAT	1			0.002	
090	04814-50300	O RING	1			0.002	
100	15951-96660	GASKET	3			0.002	
110	1C010-13150	SEAL VALVE STEM	6			0.004	

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

DIFFERENTIAL GEAR CASE

Ref	Part Number	Part Name	Qty	IC	S/N	Lbs	Remarks
080	01123-51030	BOLT	7			0.055	
090	01123-51050	BOLT	1			0.077	
100	6C200-11150	PIPE OIL GAUGE	1			0.088	
110	6C040-11160	GAUGE OIL	1			0.022	
120	04816-00120	O RING	2			0.002	
130	04816-00060	O RING	2			0.002	
140	6C200-11160	PIPE OIL GAUGE	1			0.11	
150	6C200-11190	HOSE	1			0.033	
160	09318-88155	CLAMP HOSE	2			0.011	

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PARKING BRAKE LEVER

Ref	Part Number	Part Name	Qty	IC	S/N	Lbs	Remarks
070	6C040-41360	GRIP LEVER	1			0.026	
080	6C040-41380	SPRING RETURN	1			0.017	

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

FRONT DIFFERENTIAL

Ref	Part Number	Part Name	Qty	IC	S/N	Lbs	Remarks
020	37410-56680	COLLAR	2			0.033	4.4mm
020	37410-56660	COLLAR	2			0.024	4.6mm
030	37410-56690	COLLAR	1			0.088	
040	37410-56710	NUT	1			0.066	
050	09500-20408	SEAL OIL	1			0.026	
060	04611-00520	CIR CLIP INTERNAL	1			0.019	
070	6C040-56820	CIR CLIP EXTERNAL	1			0.006	
080	6A600-56900	ASSY DIFF.FRONT	1			6.908	
090	6A600-56830	CASE DIFF.FRONT	1			1.606	
100	6A320-56860	PINION BEVEL GEAR	2			0.154	10T
110	6A320-56910	GEAR BEVEL	2			0.242	14T
120	61361-14330	COLLAR	2			0.015	
130	08101-06010	BEARING BALL	2			0.576	
140	6A600-56880	SHAFT YOKE LH	1			1.232	
150	6A600-56890	SHAFT YOKE RH	1			2.09	
160	05411-00520	PIN SPRING	2			0.004	
170	32741-97960	ASSY GEAR BEVEL	1			0	11-20T

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

SEAT SUPPORT

Ref	Part Number	Part Name	Qty	IC	S/N	Lbs	Remarks
100	TC050-18472	COVER BELT SEAT	1			0.198	
110	01135-61025	BOLT	2			0.088	
120	56811-35462	PIN	1			0.22	
130	05525-50800	PIN SNAP	1			0.002	

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 11 of 299 pages

The full manual includes:

- All 299 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota B26 Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual