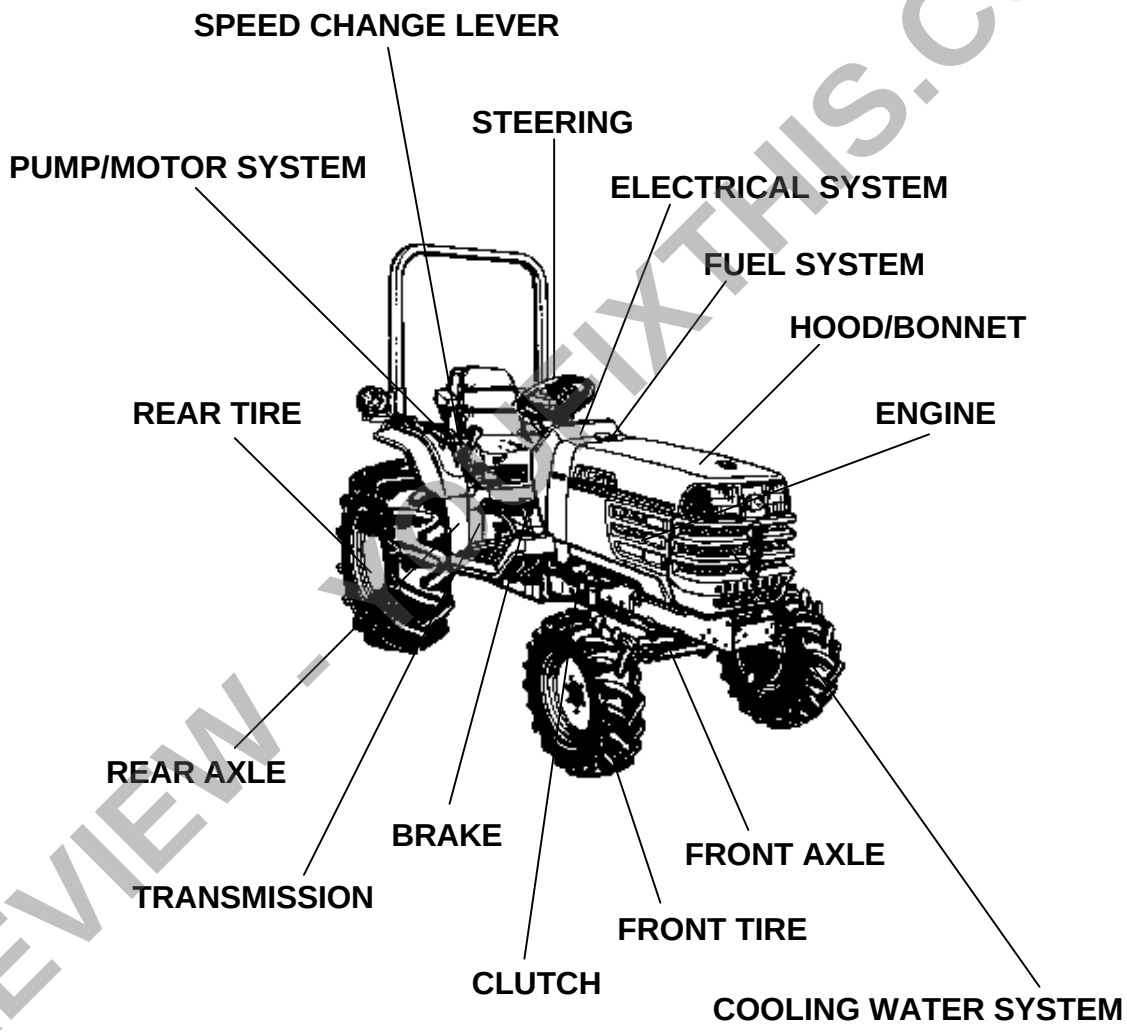


TOP LINK/TOP LINK BRACKET/PTO PROTECTOR

LABELS

ACCESSORIES AND SERVICE PARTS


OPTION

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


Item	Part No.	Description	Book
ENGINE	01000101	CRANKCASE	100K0799
	01000102	CRANKCASE	100K0799
	010002	OIL PAN	100K0799
	010003	CYLINDER HEAD	100K0799
	010004	GEAR CASE	100K0799
	01000501	HEAD COVER	100K0799
	01000502	HEAD COVER	100K0799
	010006	OIL FILTER	100K0799
	010007	DIPSTICK AND GUIDE	100K0799
	010100	MAIN BEARING CASE	100K0799
	010101	CAMSHAFT AND IDLE GEAR SHAFT	100K0799
	010102	PISTON AND CRANKSHAFT	100K0799
	010103	FLYWHEEL	100K0799
	010105	FUEL CAMSHAFT AND GOVERNOR SHAFT	100K0799
	010200	IDLE APPARATUS	100K0799
	010202	INJECTION PUMP	100K0799
	01020403	GOVERNOR	100K0799
	01020404	GOVERNOR	100K0799
	010205	SPEED CONTROL PLATE	100K0799
	01020601	NOZZLE HOLDER AND GLOW PLUG	100K0799
	01020602	NOZZLE HOLDER AND GLOW PLUG	100K0799
	01020701	NOZZLE HOLDER [COMPONENT PARTS]	100K0799
	01020702	NOZZLE HOLDER [COMPONENT PARTS]	100K0799
	010301	FUEL PUMP(MECHANICAL)	100K0799
	010500	WATER FLANGE AND THERMOSTAT	100K0799
	010501	WATER PUMP	100K0799
	010600	VALVE AND ROCKER ARM	100K0799
	01060101	INLET MANIFOLD	100K0799
	01060102	INLET MANIFOLD	100K0799
	010602	EXHAUST MANIFOLD	100K0799
	010603	AIR CLEANER	100K0799
	010605	MUFFLER	100K0799
	010900	UPPER GASKET KIT	100K0799
	01090001	UPPER GASKET KIT	100K0799
	010901	LOWER GASKET KIT	100K0799
	01090101	LOWER GASKET KIT	100K0799
	01A00102	ACCELERATOR LEVER	100K0799
FUEL SYSTEM	01A101	FUEL TANK	100K0799
	01A11002	FUEL PIPE	100K0799
	01A11003	FUEL PIPE	100K0799
	01A13002	FUEL FILTER [COMPONENT PARTS]	100K0799
COOLING WATER SYSTEM	01A40102	FAN	100K0799
	01A410	WATER PIPE	100K0799
	01A42001	RADIATOR [EXCEPT [AU]]	100K0799
	01A42002	RADIATOR [AU]	100K0799
	01A430	RESERVE TANK	100K0799
ELECTRICAL SYSTEM	01A51001	STOP SOLENOID	100K0799
	01A51002	STOP SOLENOID	100K0799
	01A521	DYNAMO	100K0799
	01A523	DYNAMO [COMPONENT PARTS]	100K0799
	01A525	STARTER	100K0799
	01A530	STARTER [COMPONENT PARTS]	100K0799
	01A535	BATTERY	100K0799
	01B10102	SWITCH	100K0799

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

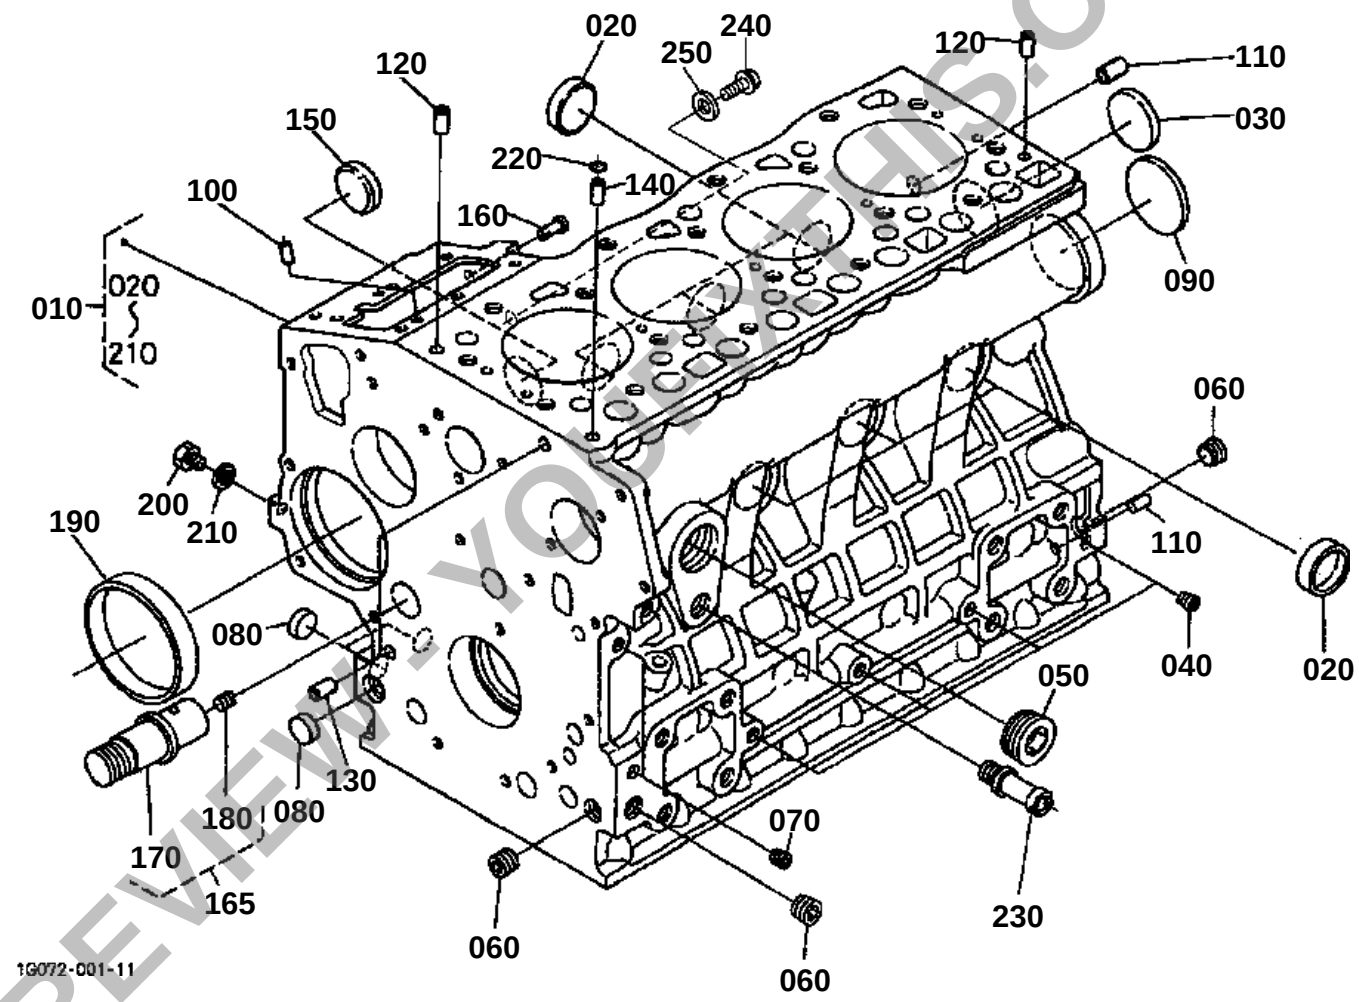


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

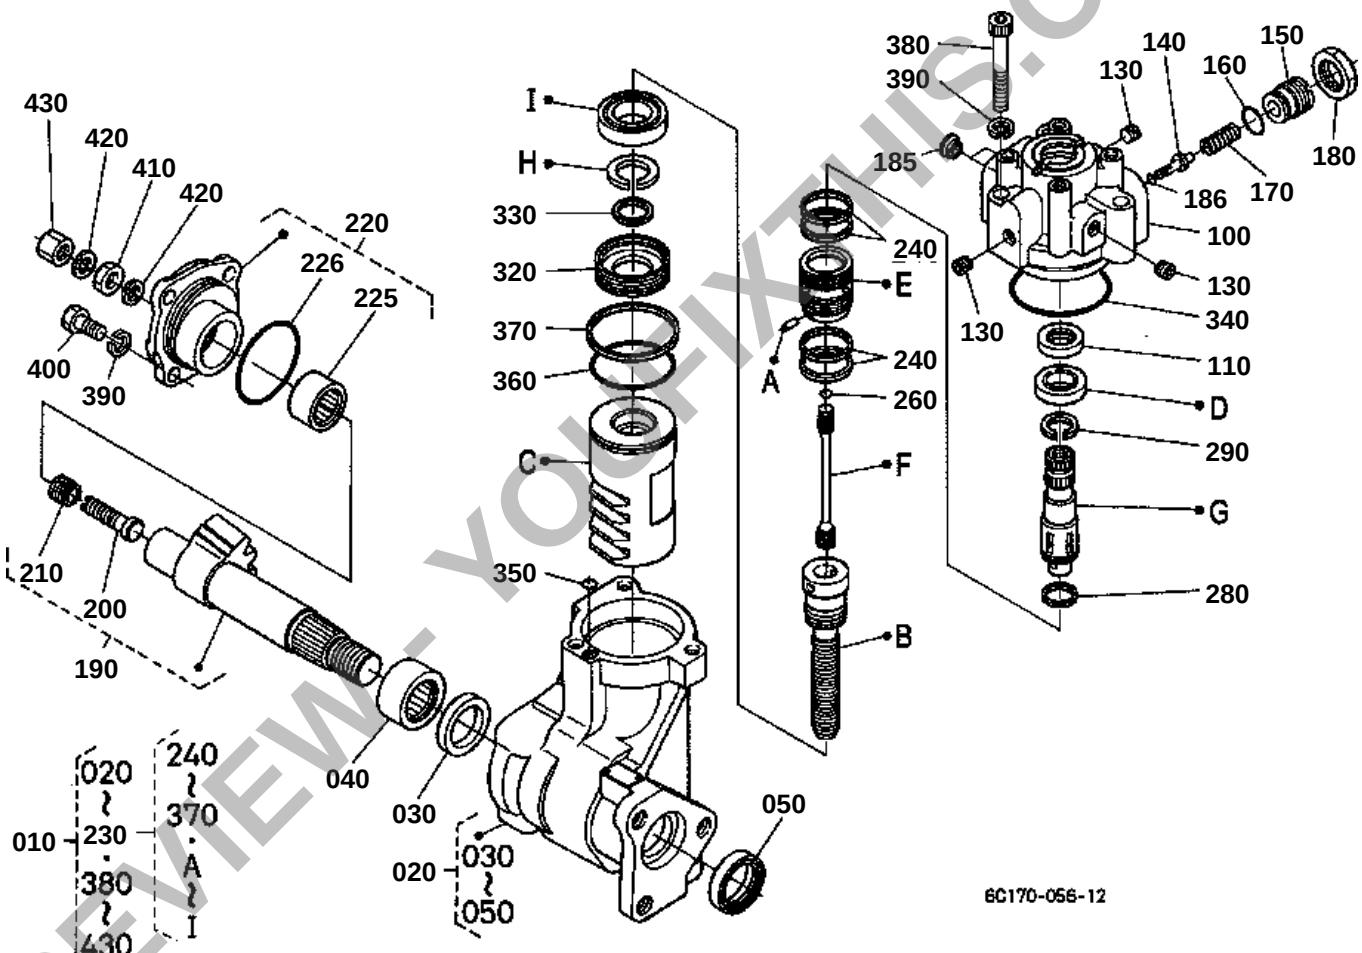


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

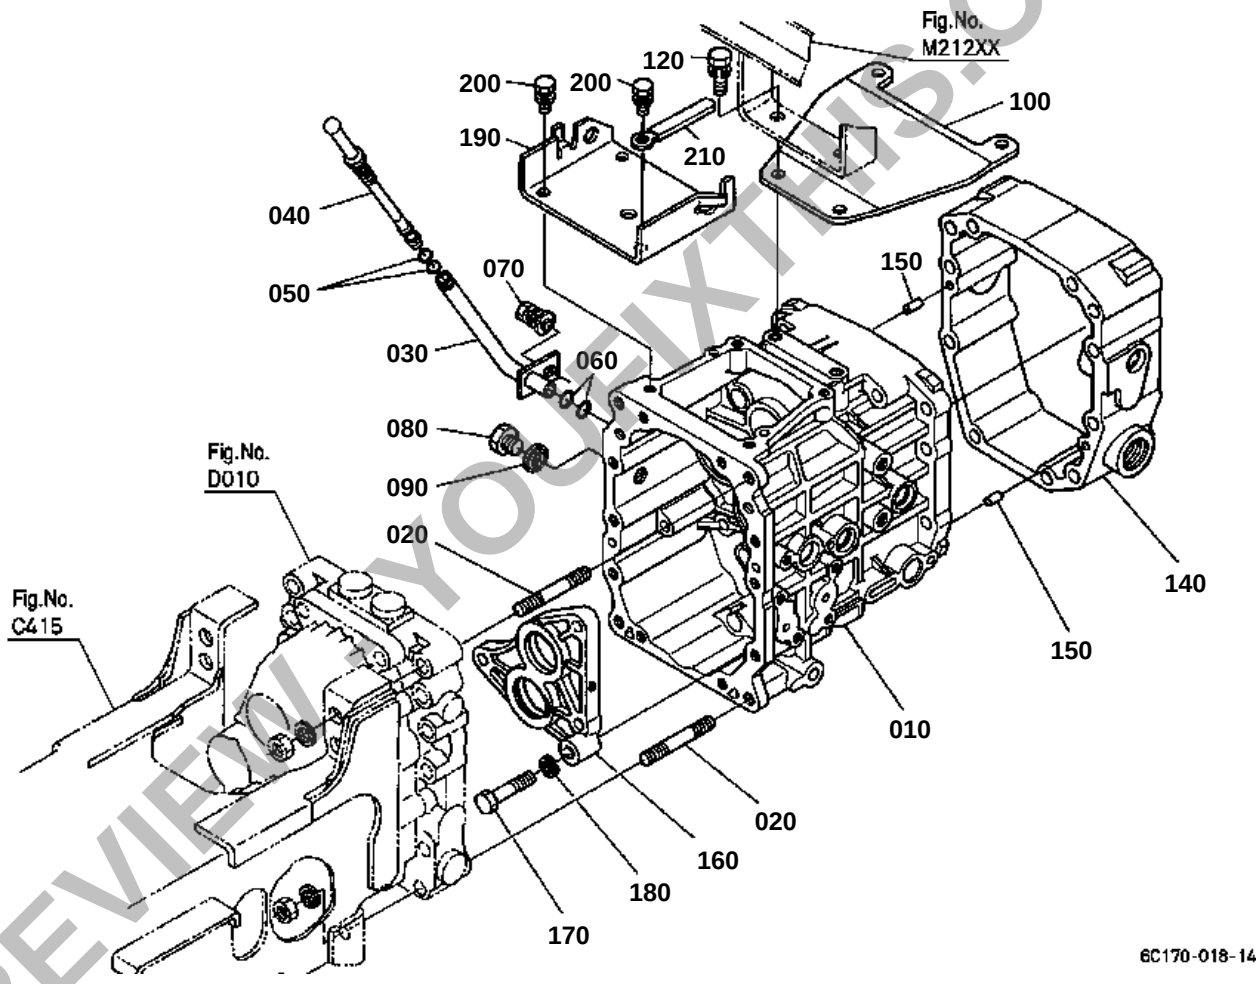


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

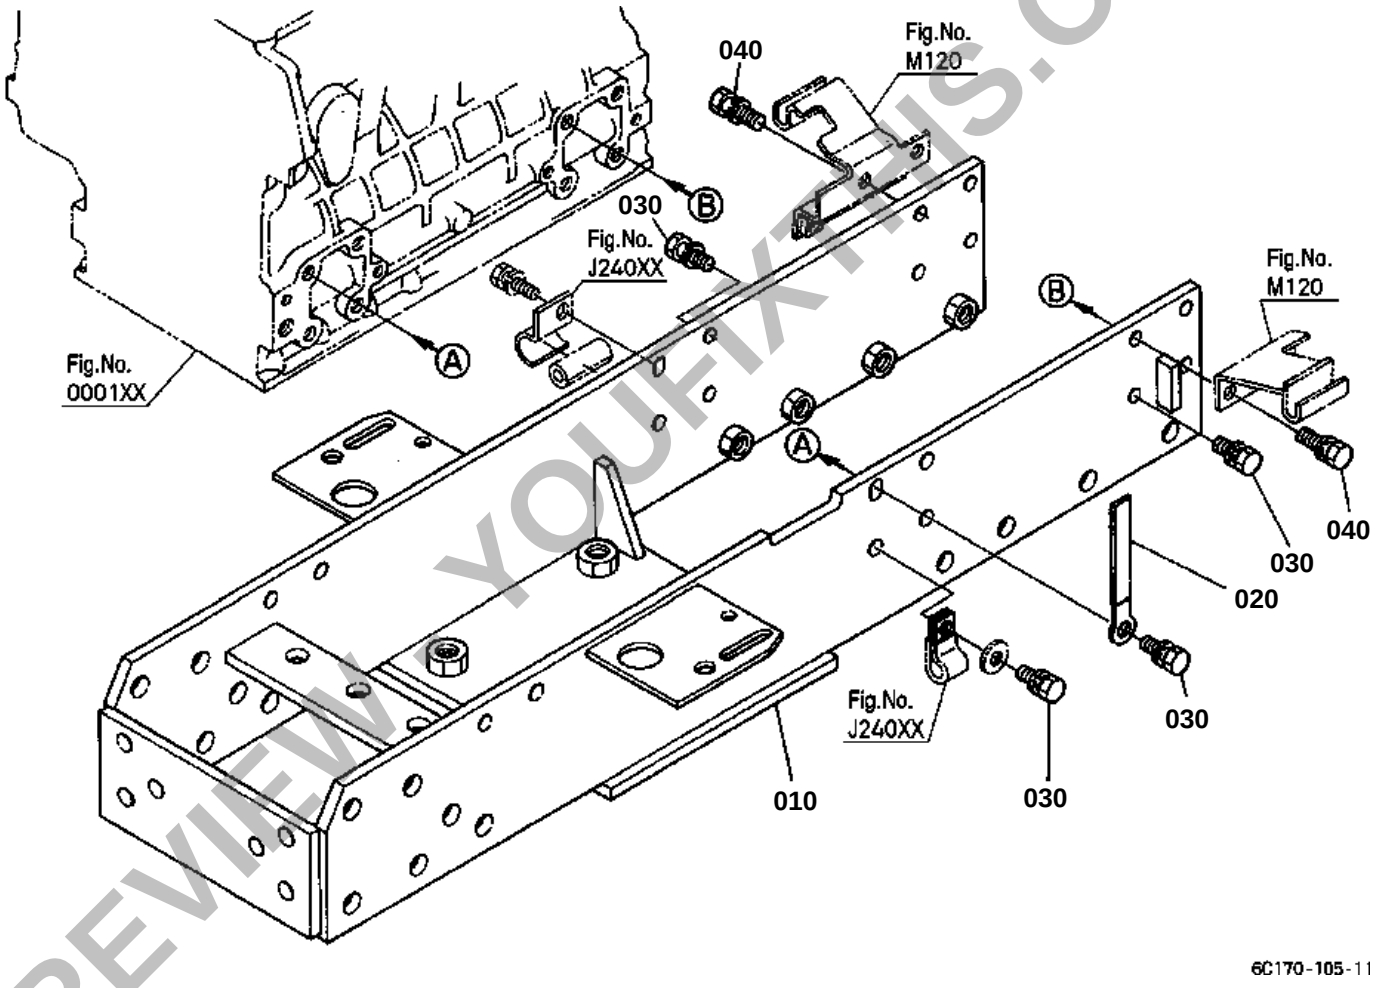

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

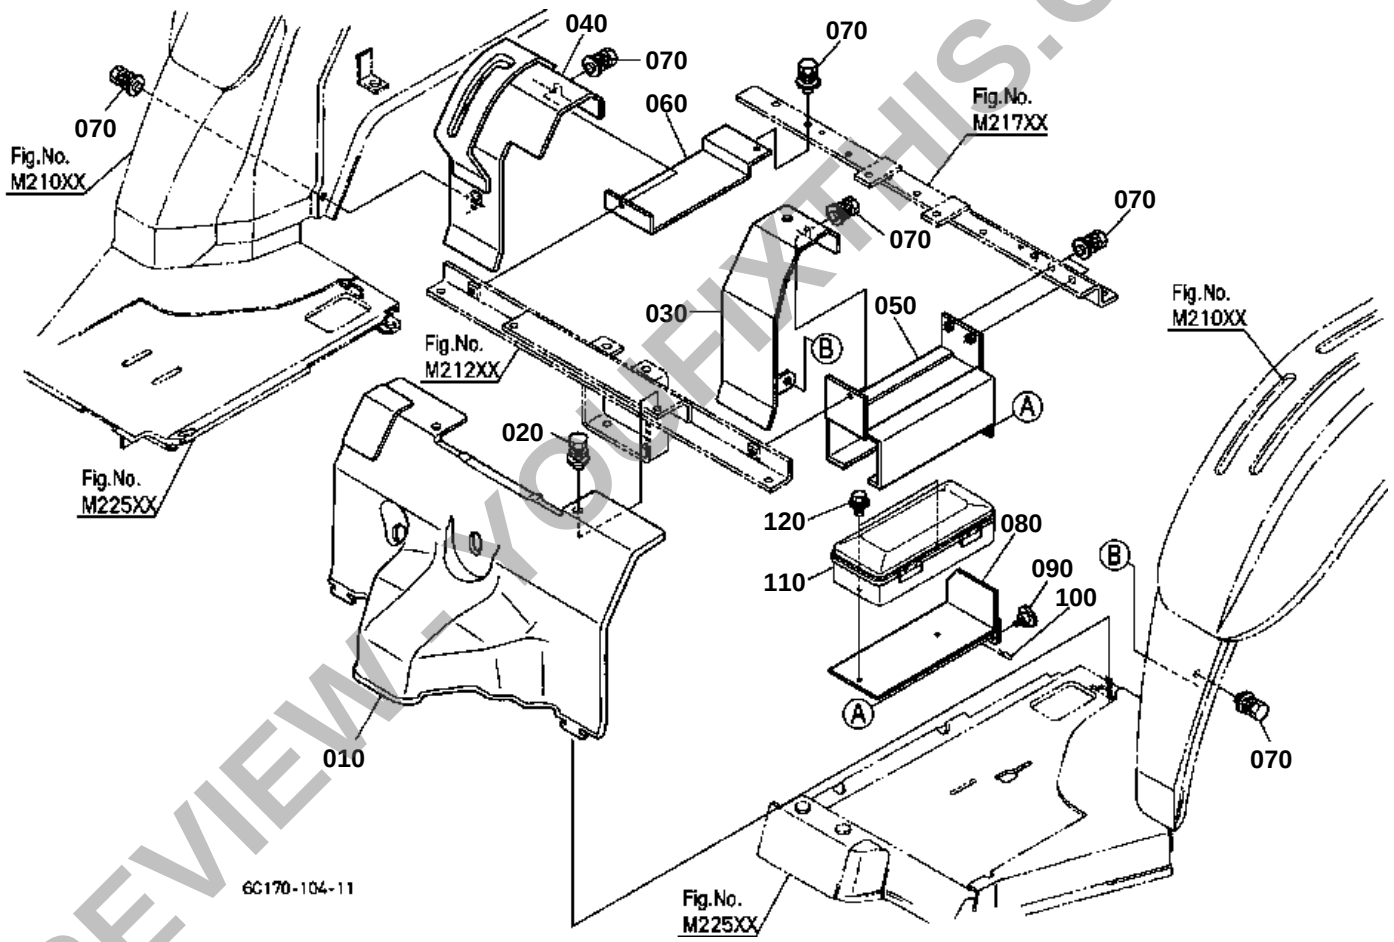

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Part No.	Description	Book
ELECTRICAL SYSTEM	01B10103	SWITCH	100K0799
	01B115	PANEL BOARD	100K0799
	01B12002	PANEL BOARD [COMPONENT PARTS]	100K0799
	01B301	HEAD RIGHT	100K0799
	01B30202	HAZARD LIGHT	100K0799
	01B30203	HAZARD LIGHT	100K0799
	01B304	TAIL LIGHT	100K0799
	01B310	WINKER LAMP	100K0799
	01B50102	ELECTRICAL WIRING	100K0799
	01B50103	ELECTRICAL WIRING	100K0799
CLUTCH	01C101	CLUTCH	100K0799
	01C110	CLUTCH ROD	100K0799
	01C301	CLUTCH PEDAL	100K0799
	01C40102	CLUTCH HOUSING	100K0799
	01C415	CENTER FRAME	100K0799
	01C417	SUB FRAME	100K0799
TRANSMISSION	01C42002	TRANSMISSION CASE	100K0799
	01C425	DIFFERENTIAL GEAR CASE	100K0799
	01C427	REAR AXLE CASE	100K0799
	01D00102	CLUTCH SHAFT	100K0799
	01D005	PROPELLER SHAFT	100K0799
	01D010	HST	100K0799
	01D01501	HST [COMPONENT PARTS]	100K0799
	01D01502	HST [COMPONENT PARTS]	100K0799
	01D01503	HST [COMPONENT PARTS]	100K0799
	01D10302	FRONT SHAFT	100K0799
	01D135	PTO SHAFT	100K0799
	01D137	MID PTO	100K0799
	01D140	REAR DIFFERENTIAL	100K0799
	01D143	FRONT WHEEL PROPELLER SHAFT	100K0799
	01D149	2ND SHAFT	100K0799
	01D152	3RD SHAFT	100K0799
	01D155	4TH SHAFT	100K0799
REAR AXLE	01D301	REAR AXLE	100K0799
BRAKE	01E00102	BRAKE	100K0799
	01E00502	BRAKE ROD	100K0799
	01E01503	PARKING BRAKE LEVER [EXCEPT [AU]]	100K0799
	01E01504	PARKING BRAKE LEVER [AU]	100K0799
SPEED CHANGE LEVER	01F104	CRUISE CONTROL LEVER	100K0799
	01F105	CRUISE CONTROL BASE	100K0799
	01F106	CRUISE CONTROL CLUTCH	100K0799
	01F10702	NEUTRAL HOLDER LINK	100K0799
	01F10802	SPEED CONTROL PEDAL	100K0799
	01F109	HST RELEASE ARM	100K0799
	01F11002	RANGE GEAR SHIFT LEVER	100K0799
	01F113	FRONT WHEEL DRIVE LEVER	100K0799
	01F12502	PTO GEAR SHIFT LEVER	100K0799
PUMP/MOTOR SYSTEM	01F143	HYDRAULIC CONTROL LEVER	100K0799
BRAKE	01F201	BRAKE PEDAL	100K0799
REAR AXLE	01F205	DIFFERENTIAL LOCK PEDAL	100K0799
FRONT AXLE	01G101	FRONT AXLE FRAME	100K0799
	01G105	FRONT AXLE CASE	100K0799
	01G115	FRONT DIFFERENTIAL	100K0799
	01G120	DIFFERENTIAL GEAR SHAFT	100K0799
	01G123	BEVEL GEAR CASE	100K0799
	01G125	FRONT AXLE CASE	100K0799
	01G130	FRONT AXLE	100K0799

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	16271-95690	JOINT EYE	1				0.046	0.1012
020	16062-51010	ASSY PUMP INJECTION	1				1.38	3.036
030	16040-52092	SHIM INJECTION PUMP	1			0.20mm	0.004	0.0088
030	16040-52112	SHIM INJECTION PUMP	1			0.25mm	0.005	0.011
040	16040-52122	SHIM INJECTION PUMP	1			0.30mm	0.006	0.0132
050	01311-10620	BOLT HEX-SOC-HD	3				0.012	0.0264
060	15841-91500	STUD	3				0.02	0.044
070	15841-92320	NUT	3				0.01	0.022
080	04512-60060	WASHER SPRING	6				0.001	0.0022
090	16271-51320	SCREW HOLLOW	1				0.031	0.0682
100	15841-96650	GASKET	2				0.001	0.0022

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	07916-27305	KIT GASKET UPPER	1				0.28	0.616
020	16292-03310	GASKET CYLINDER HEAD	1				0.09	0.198
030	16241-11820	GASKET IN-MANIFOLD	1				0.01	0.022
040	16241-14520	GASKET HEAD COVER	1				0.012	0.0264
050	16299-12360	GASKET EX-MANIFOLD	1				0.02	0.044
060	1C010-13150	SEAL VALVE STEM	8				0.002	0.0044
070	16264-72920	GASKET WATER FLANGE	1				0.001	0.0022
080	16221-73270	GASKET THERMOSTAT	1				0.01	0.022
090	15601-96650	GASKET	1				0.001	0.0022
100	15841-53622	GASKET	4				0.002	0.0044
110	15951-96660	GASKET	4				0.001	0.0022
120	15221-33700	O RING	1				0.001	0.0022
130	04814-50300	O RING	1				0.001	0.0022
140	16261-96710	GASKET	1				0.002	0.0044
150	15841-96650	GASKET	2				0.001	0.0022
160	15313-12370	GASKET NA	1			OUT OF USE	0.008	0.0176
170	15263-12370	GASKET MUFFLER NA	1				0.015	0.033
180	19077-53650	SEAL HEAT	4				0.005	0.011

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

OLD PARTS

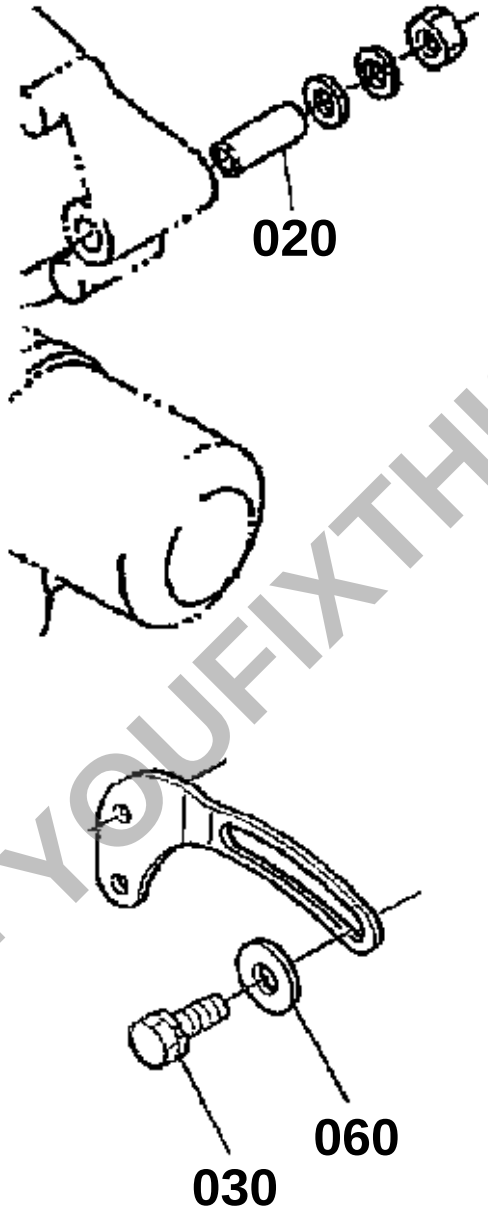

1G072-804-10

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	6C040-13402	COMP.DISK CLUTCH	1				0.88	1.936
020	6C040-13300	COMP.PLATE PRESSURE	1				4.01	8.822
030	01123-60816	BOLT	6				0.01	0.022
040	05012-00814	PIN STRAIGHT	3				0.006	0.0132

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	6C050-21210	CASE MID PTO	1				0.48	1.056
020	6C050-21230	SHAFT MID PTO	1				0.37	0.814
030	08101-06205	BEARING BALL	1				0.14	0.308
040	08101-06303	BEARING BALL	1				0.112	0.2464
050	32430-25540	SEAL OIL MID PTO	1				0.04	0.088
060	04611-00520	CIR CLIP INTERNAL	1				0.009	0.0198
070	6C050-21242	GEAR MID PTO	1			11T	0.152	0.3344
080	01774-51212	BOLT FLANGE	1				0.028	0.0616
090	04717-01200	WASHER WITH RUBBER	1				0.002	0.0044
100	6C050-21282	ARM MID PTO	1				0.33	0.726
110	6C050-21292	SHOE	1				0.01	0.022
120	04811-07220	O RING	1				0	0
120	04816-07220	O RING	1		←		0.001	0.0022
130	05012-00625	PIN STRAIGHT	1				0.006	0.0132
140	05012-00614	PIN STRAIGHT	1				0.004	0.0088
150	66116-11190	PIPE KNOCK	1				0.002	0.0044
160	01123-51035	BOLT	4				0.025	0.055
170	07715-01605	BALL	1				0.003	0.0066
180	62061-18260	SPRING STOPPER	1				0.002	0.0044
190	6C090-21250	SHAFT IDLE	1				0.22	0.484
200	05411-00616	PIN SPRING	1				0.002	0.0044
210	6C040-21220	GEAR M-PTO	1			19T	0.22	0.484
220	04611-00400	CIR CLIP INTERNAL	1				0.005	0.011
230	08101-06203	BEARING BALL	2				0.063	0.1386


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

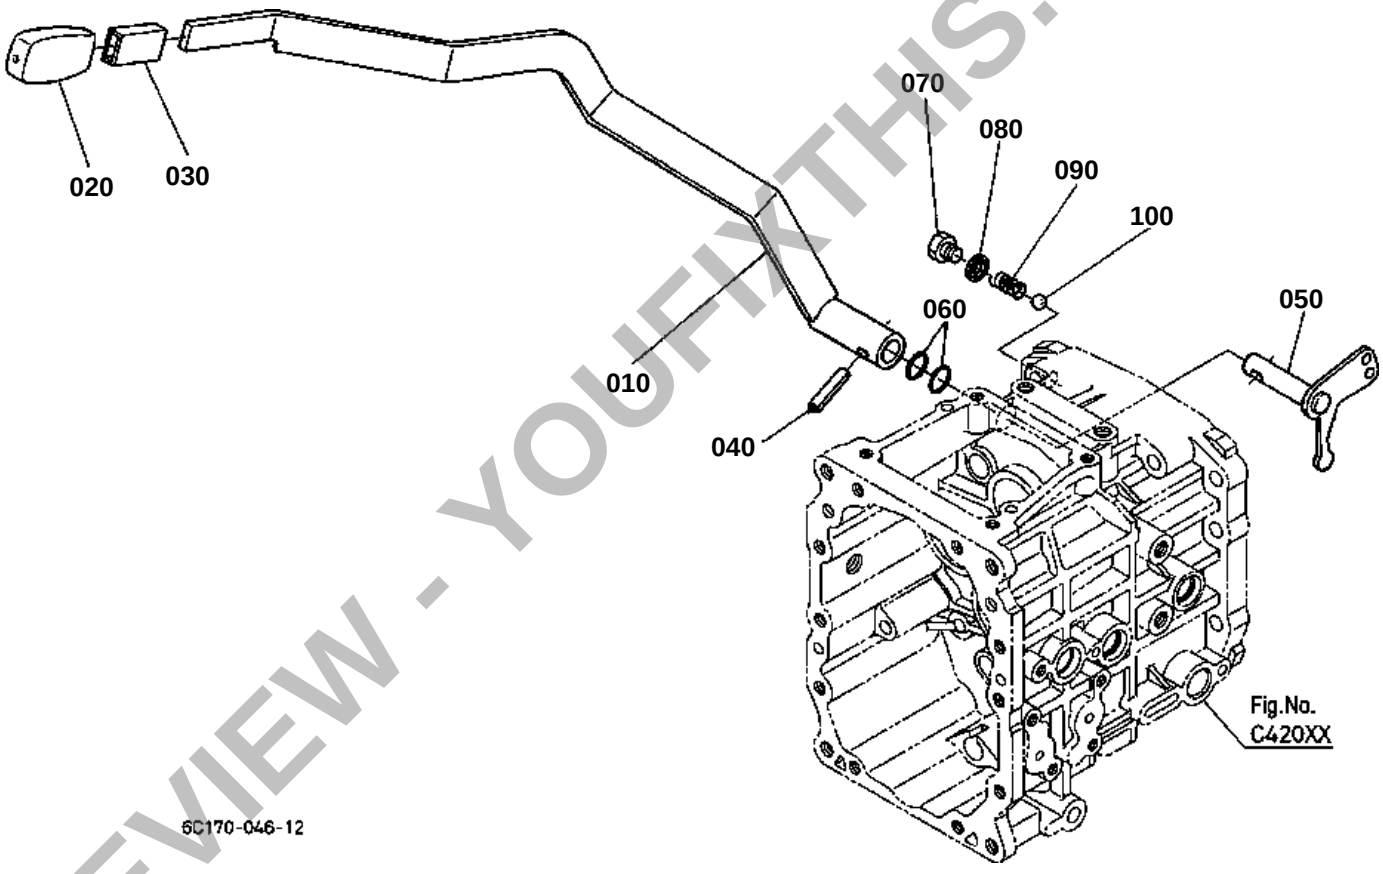

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

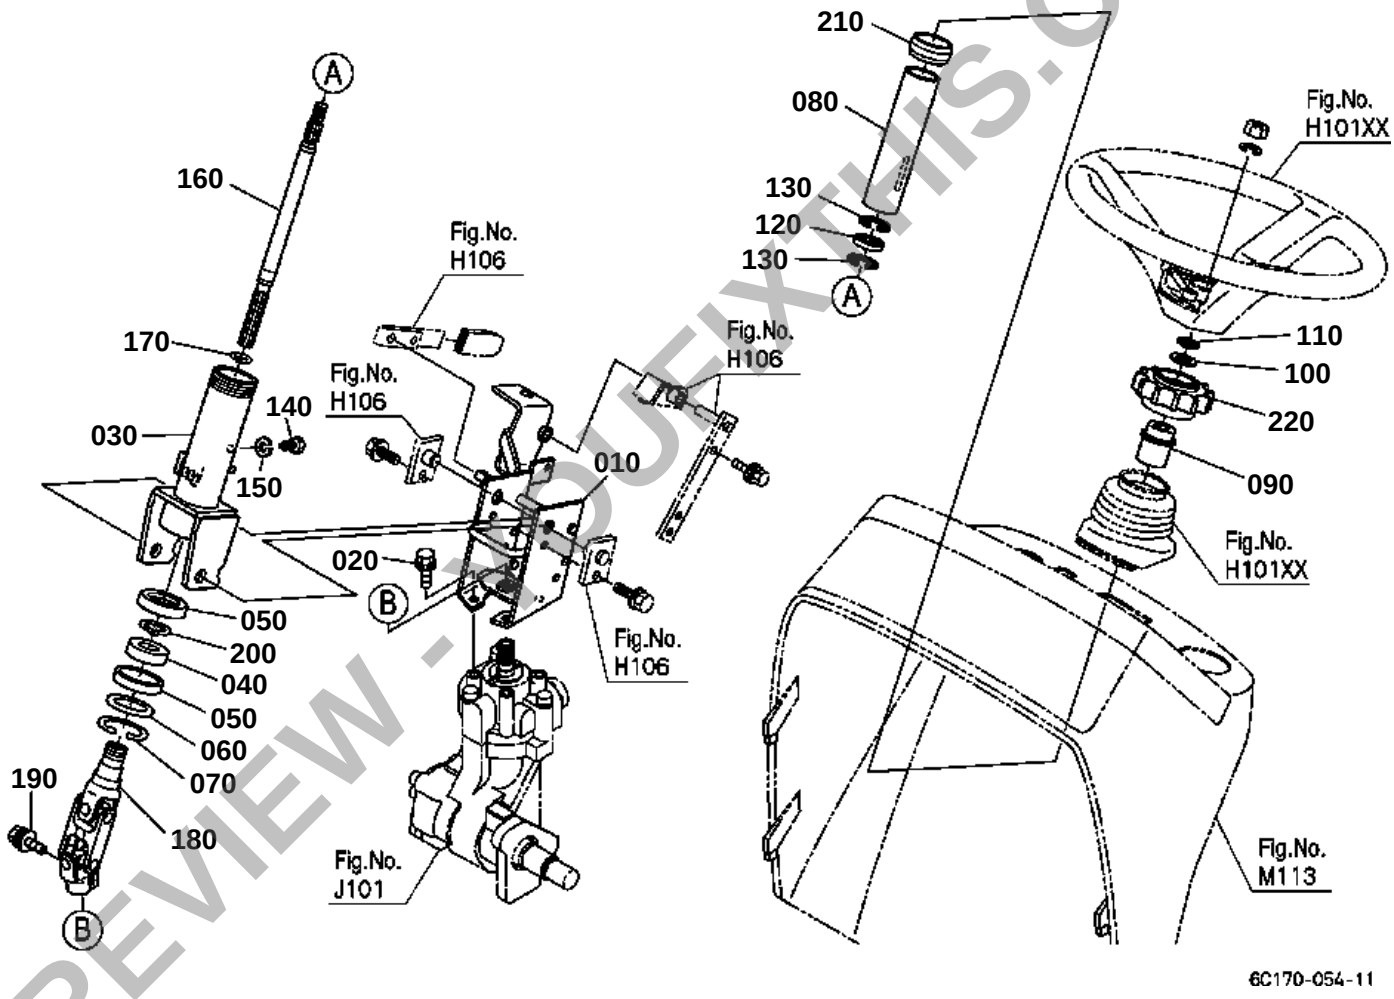

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	6C070-36470	SHAFT HYD.ARM	1				1.67	3.674
020	6C040-36450	ARM HYDRAULIC	1				0.99	2.178
030	6C040-36430	ROD HYD.PISTON	1				0.36	0.792
040	05411-00640	PIN SPRING	1				0.006	0.0132
050	6C040-36410	PISTON HYD.	1				0.78	1.716
060	67111-36720	RING BACK UP	1				0.005	0.011
060	6A600-36460	RING BACK UP	1		↔		0.005	0.011
070	04811-00600	O RING	1				0.006	0.0132
080	6C040-36510	ARM LIFT LH	1				1.88	4.136
090	6C040-36524	ARM LIFT RH	1				1.86	4.092
100	6C040-36550	O RING	2				0.003	0.0066
110	04612-00320	CIR CLIP EXTERNAL	2				0.004	0.0088
120	6C040-36750	STOPPER	1				0.222	0.4884

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

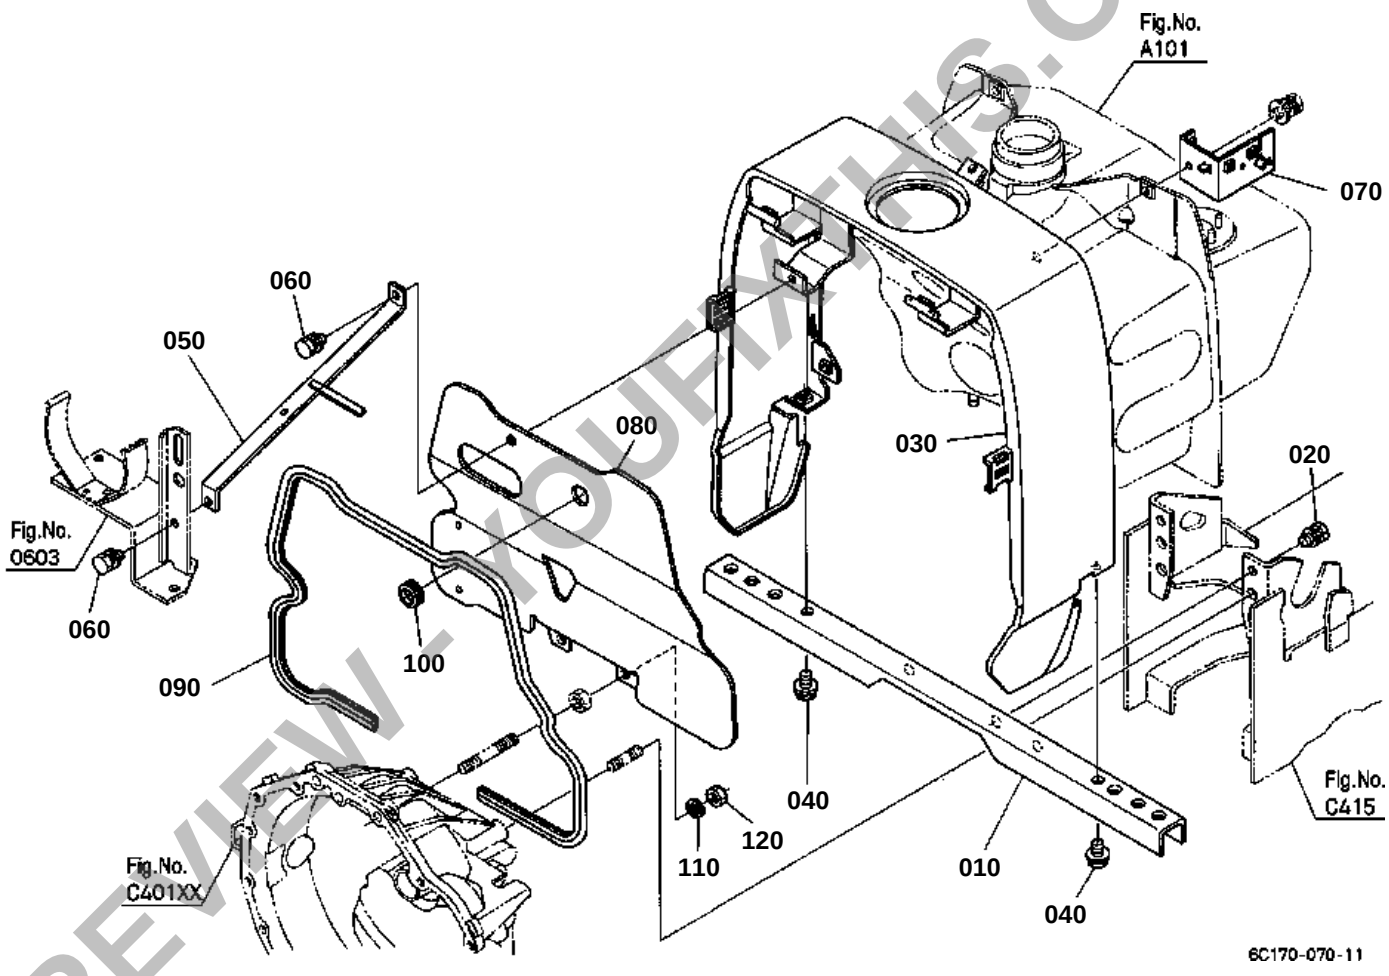

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	6C070-50220	TIRE ASSY	2				0	0
020	6C070-50230	WHEEL	2				0	0
030	6C070-50240	TIRE	2				0	0
040	04013-60120	WASHER PLAIN	12				0.01	0.022
050	04512-60120	WASHER SPRING	12				0.005	0.011
060	02176-50120	NUT	12				0.01	0.022

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 18 of 404 pages

The full manual includes:

- All 404 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota B2910HSD Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual