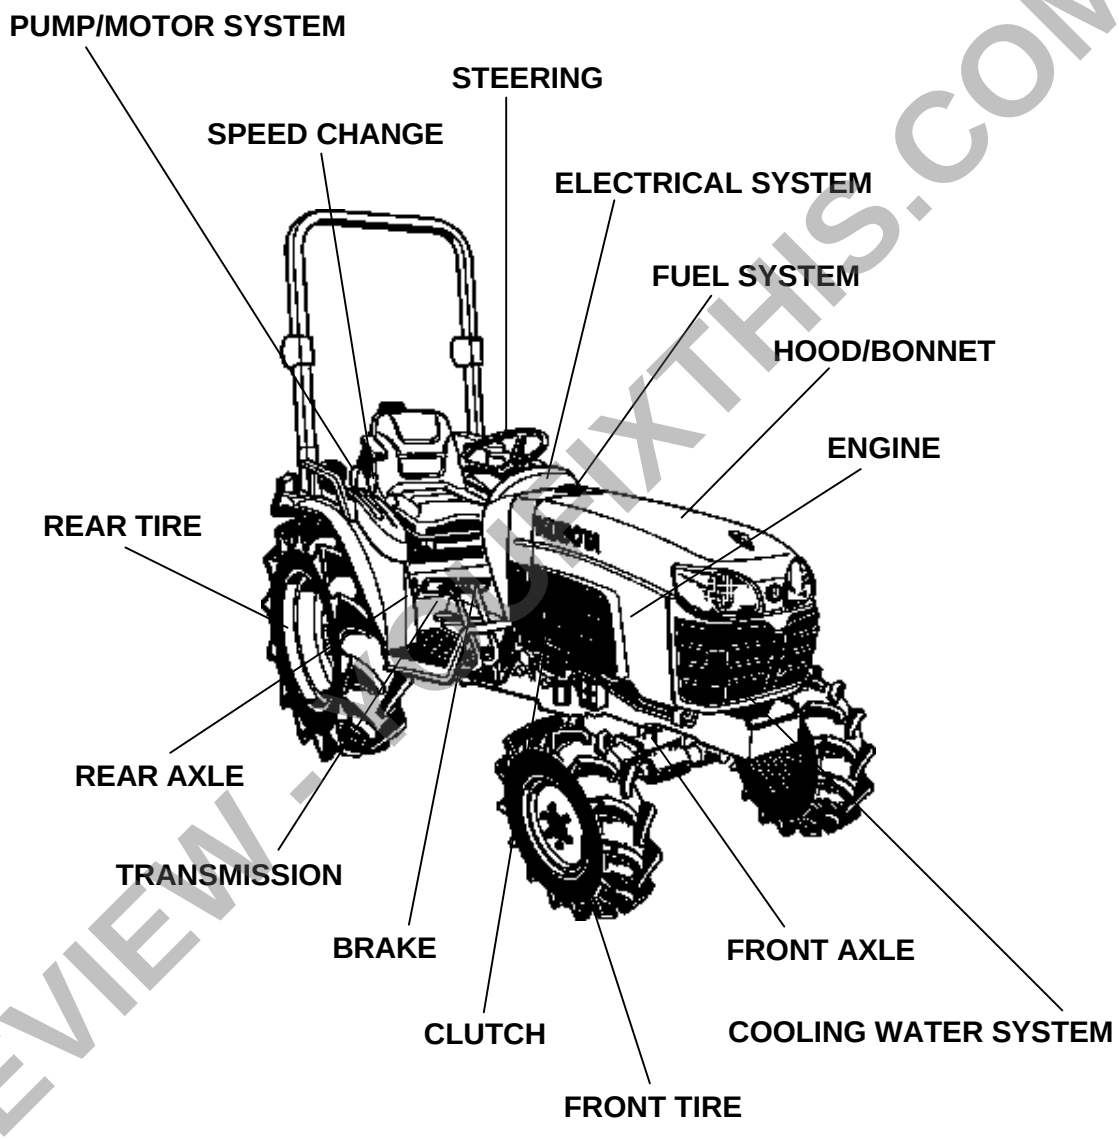


PREVIEW - YOUFIXTHIS.COM

TOP LINK/TOP LINK BRACKET/PTO PROTECTOR

LABELS


ACCESSORIES AND SERVICE PARTS

OPTION

Download full manual at youfixthis.com


Item	Part No.	Description	Book
ENGINE	011001	CRANKCASE	100K0828
	011002	OIL PAN	100K0828
	011003	CYLINDER HEAD	100K0828
	011004	GEAR CASE	100K0828
	011005	HEAD COVER	100K0828
	011006	OIL FILTER	100K0828
	011007	DIPSTICK AND GUIDE	100K0828
	011100	MAIN BEARING CASE	100K0828
	011101	CAMSHAFT AND IDLE GEAR SHAFT	100K0828
	011102	PISTON AND CRANKSHAFT	100K0828
	011103	FLYWHEEL	100K0828
	011105	FUEL CAMSHAFT AND GOVERNOR SHAFT	100K0828
	011200	IDLE APPARATUS	100K0828
	011202	INJECTION PUMP	100K0828
	011204	GOVERNOR	100K0828
	011205	SPEED CONTROL PLATE	100K0828
	011206	NOZZLE HOLDER AND GLOW PLUG	100K0828
	011207	NOZZLE HOLDER [COMPONENT PARTS]	100K0828
	011301	FUEL PUMP(MECHANICAL)	100K0828
	011400	DYNAMO	100K0828
	011401	DYNAMO [COMPONENT PARTS]	100K0828
	011500	WATER FLANGE AND THERMOSTAT	100K0828
	011501	WATER PUMP	100K0828
	011600	VALVE AND ROCKER ARM	100K0828
	011601	INLET MANIFOLD	100K0828
	011602	EXHAUST MANIFOLD	100K0828
	011603	AIR CLEANER	100K0828
	011605	MUFFLER	100K0828
	011700	HYDRAULIC PUMP	100K0828
	011701	HYDRAULIC PUMP [COMPONENT PARTS]	100K0828
	011900	UPPER GASKET KIT	100K0828
	011901	LOWER GASKET KIT	100K0828
	01A001	ACCELERATOR LEVER	100K0828
	01A030	ACCELERAOTR ROD	100K0828
FUEL SYSTEM	01A101	FUEL TANK	100K0828
	01A11002	FUEL PIPE	100K0828
	01A130	FUEL FILTER [COMPONENT PARTS]	100K0828
COOLING WATER SYSTEM	01A40102	FAN	100K0828
	01A41002	WATER PIPE	100K0828
	01A42002	RADIATOR	100K0828
	01A430	RESERVE TANK	100K0828
ELECTRICAL SYSTEM	01A510	STOP SOLENOID	100K0828
	01A525	STARTER	100K0828
	01A530	STARTER [COMPONENT PARTS]	100K0828
	01A535	BATTERY	100K0828
	01B101	SWITCH	100K0828
	01B115	PANEL BOARD	100K0828
	01B120	PANEL BOARD [COMPONENT PARTS]	100K0828
	01B301	HEAD LIGHT	100K0828
	01B302	HAZARD LIGHT	100K0828
	01B304	TAIL LIGHT	100K0828
	01B310	WINKER LAMP	100K0828
	01B50102	ELECTRICAL WIRING	100K0828

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

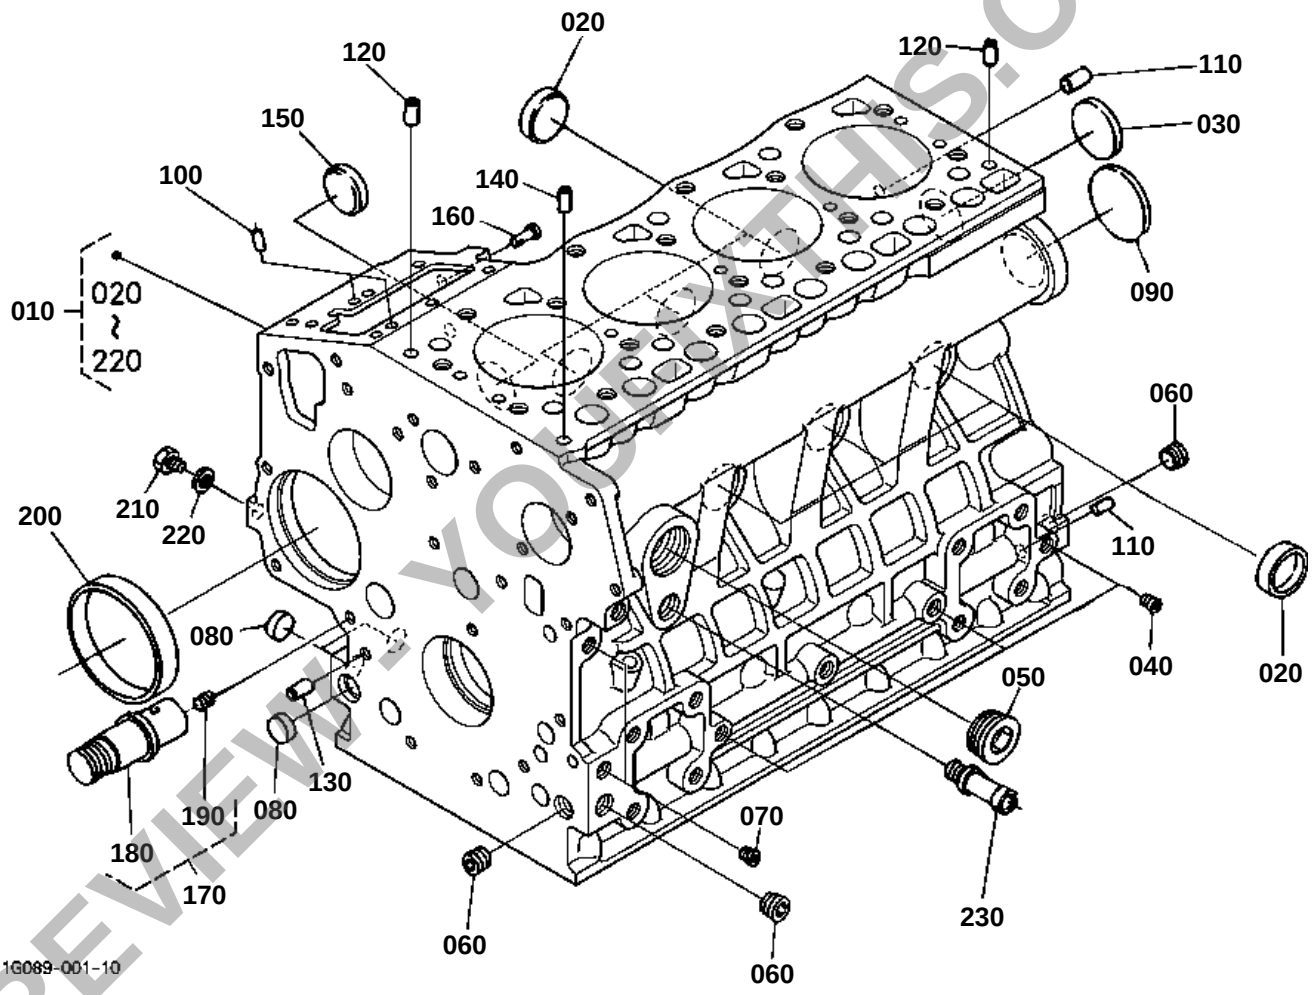


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

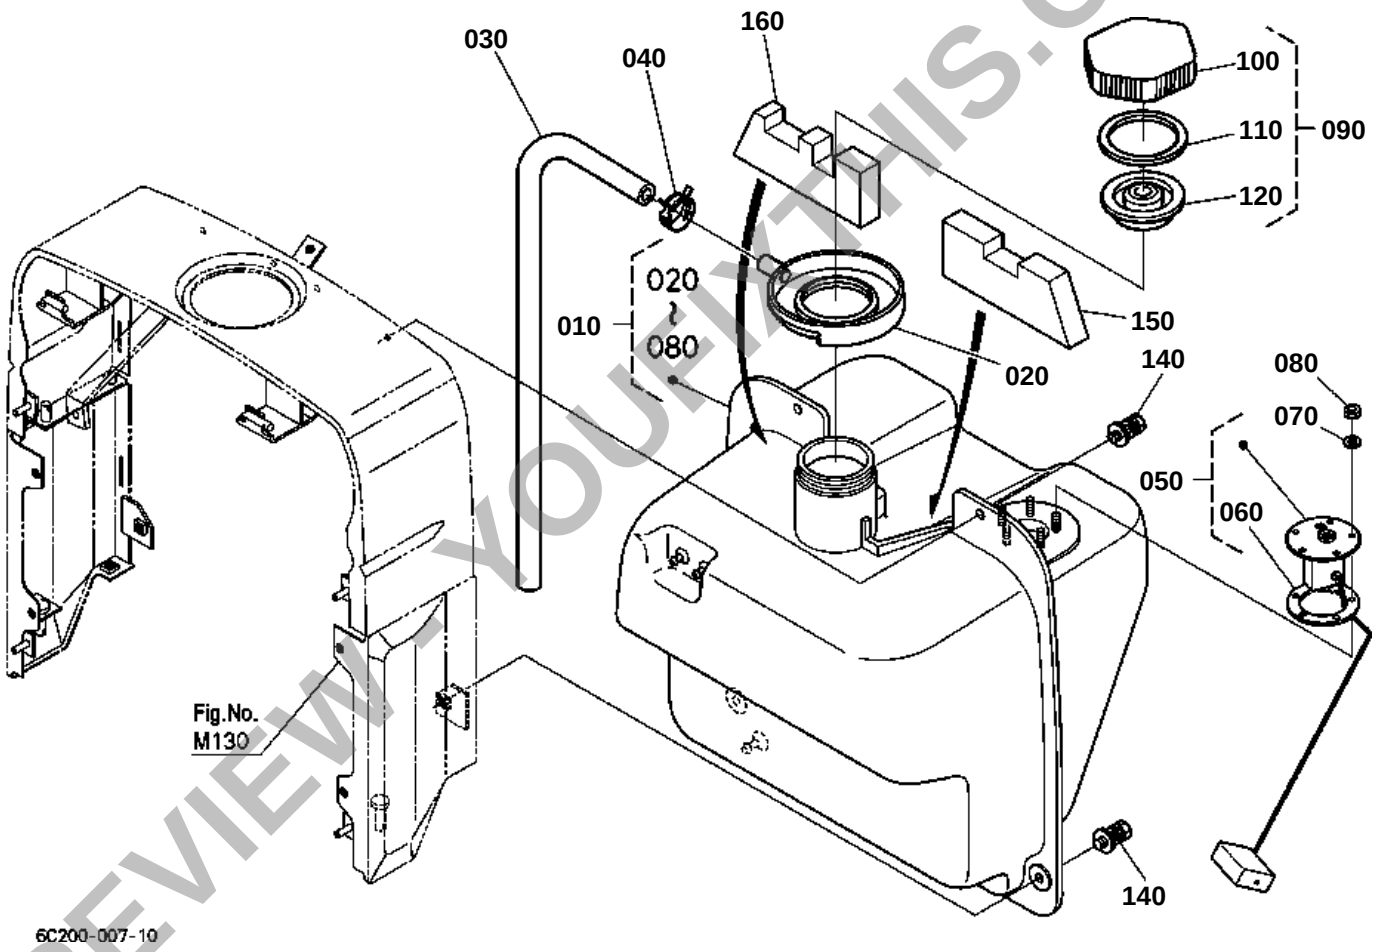

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

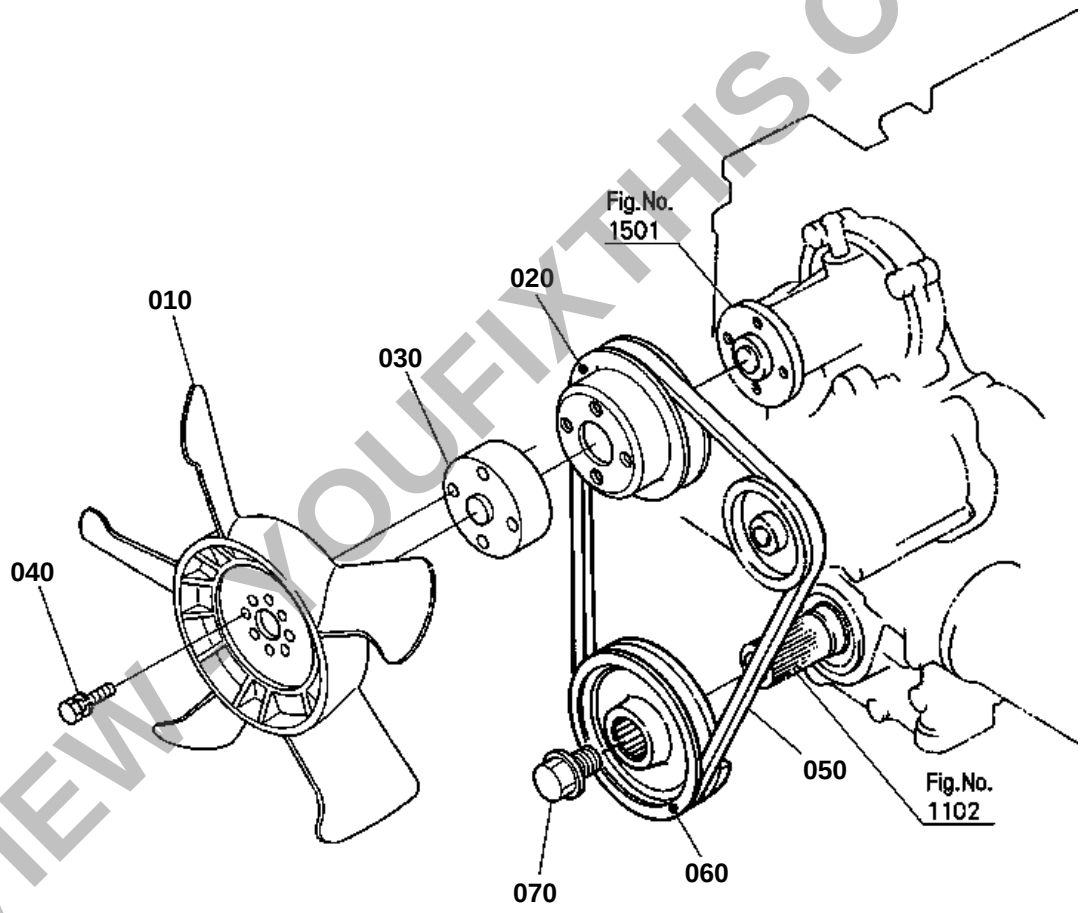

60200-010-10


PREVIEW.YOUFIXTHIS.COM

Download full manual at youfixthis.com

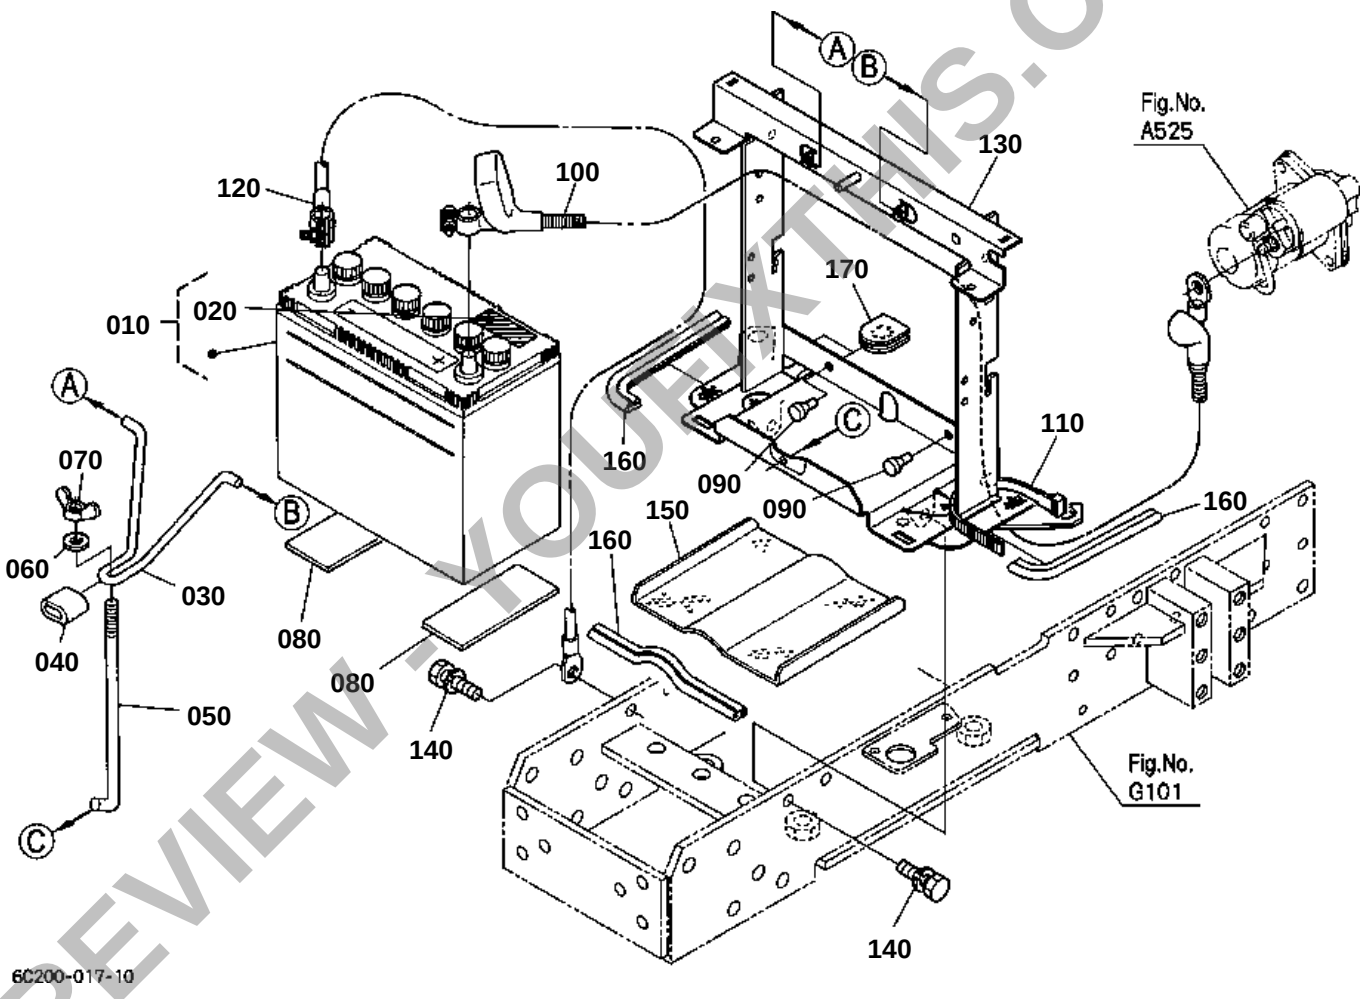


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

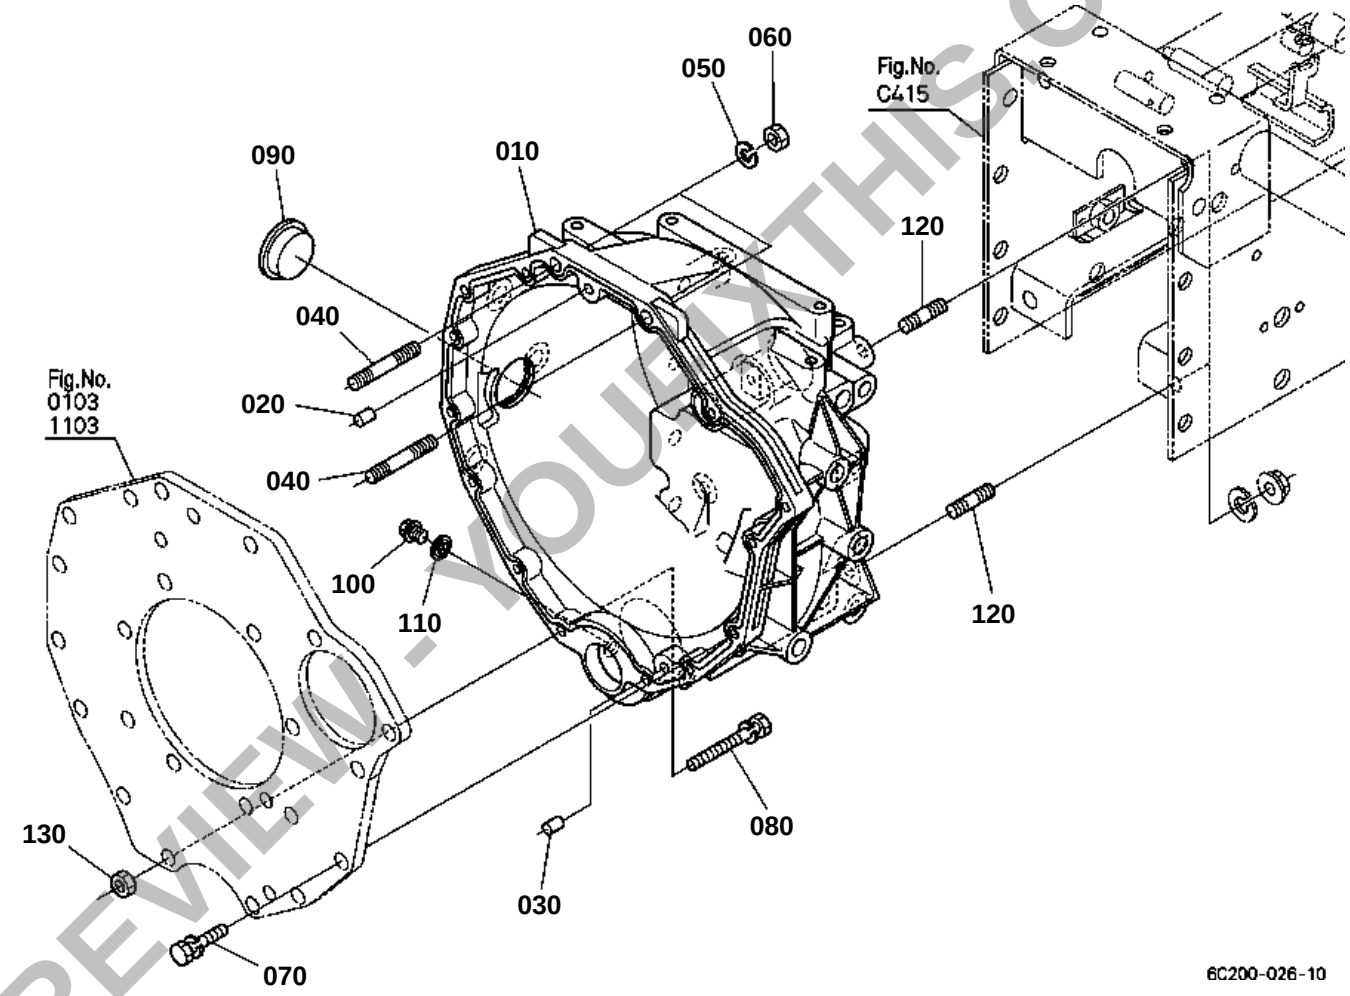


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

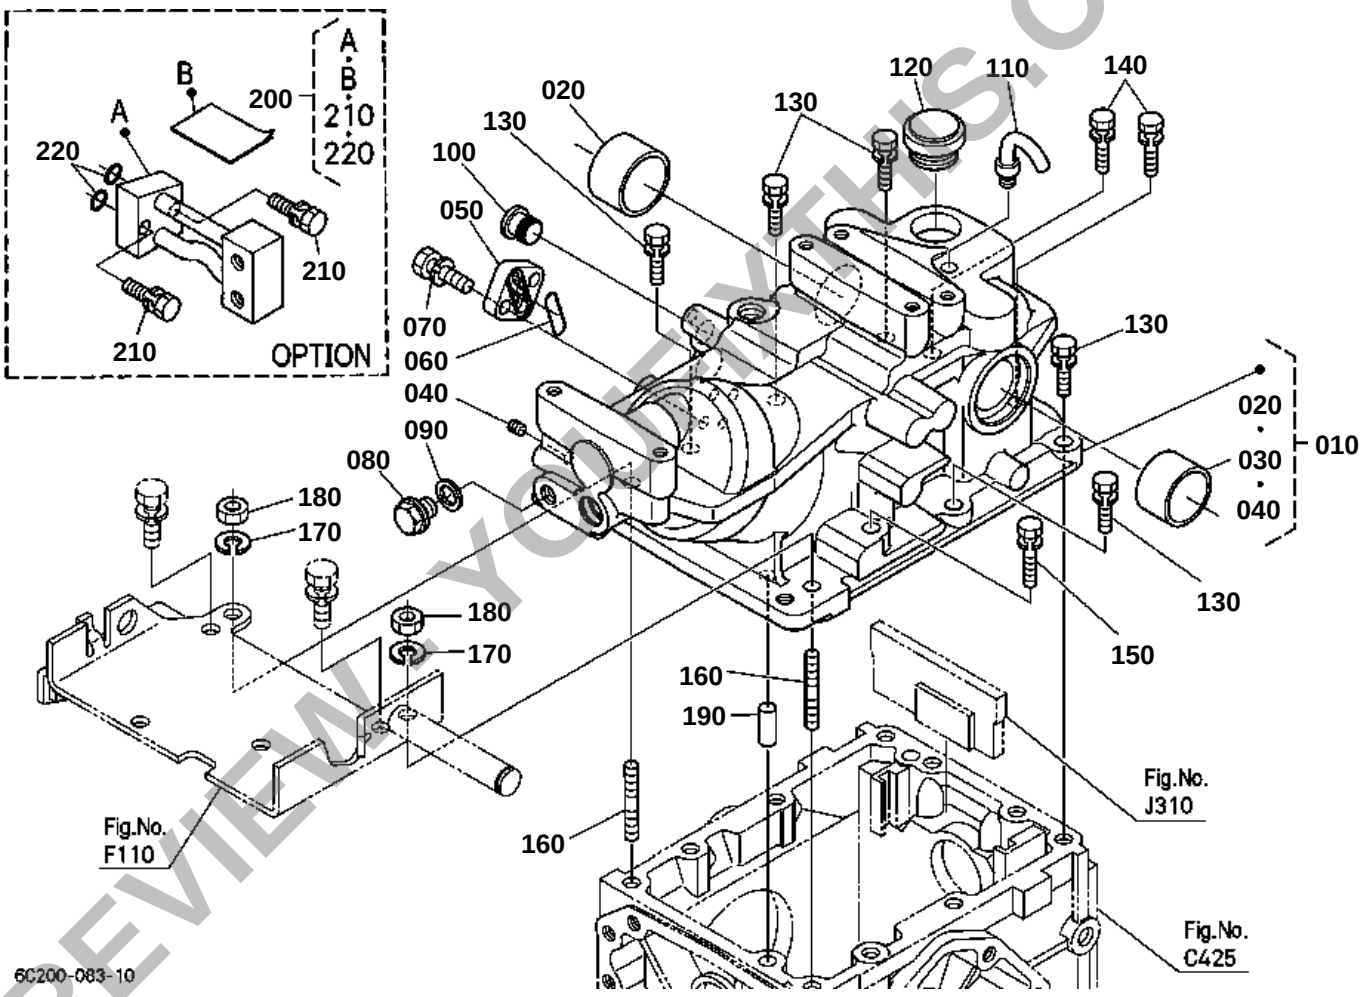


PREVIEW ONLY. YOUFIXTHIS.COM

Download full manual at youfixthis.com

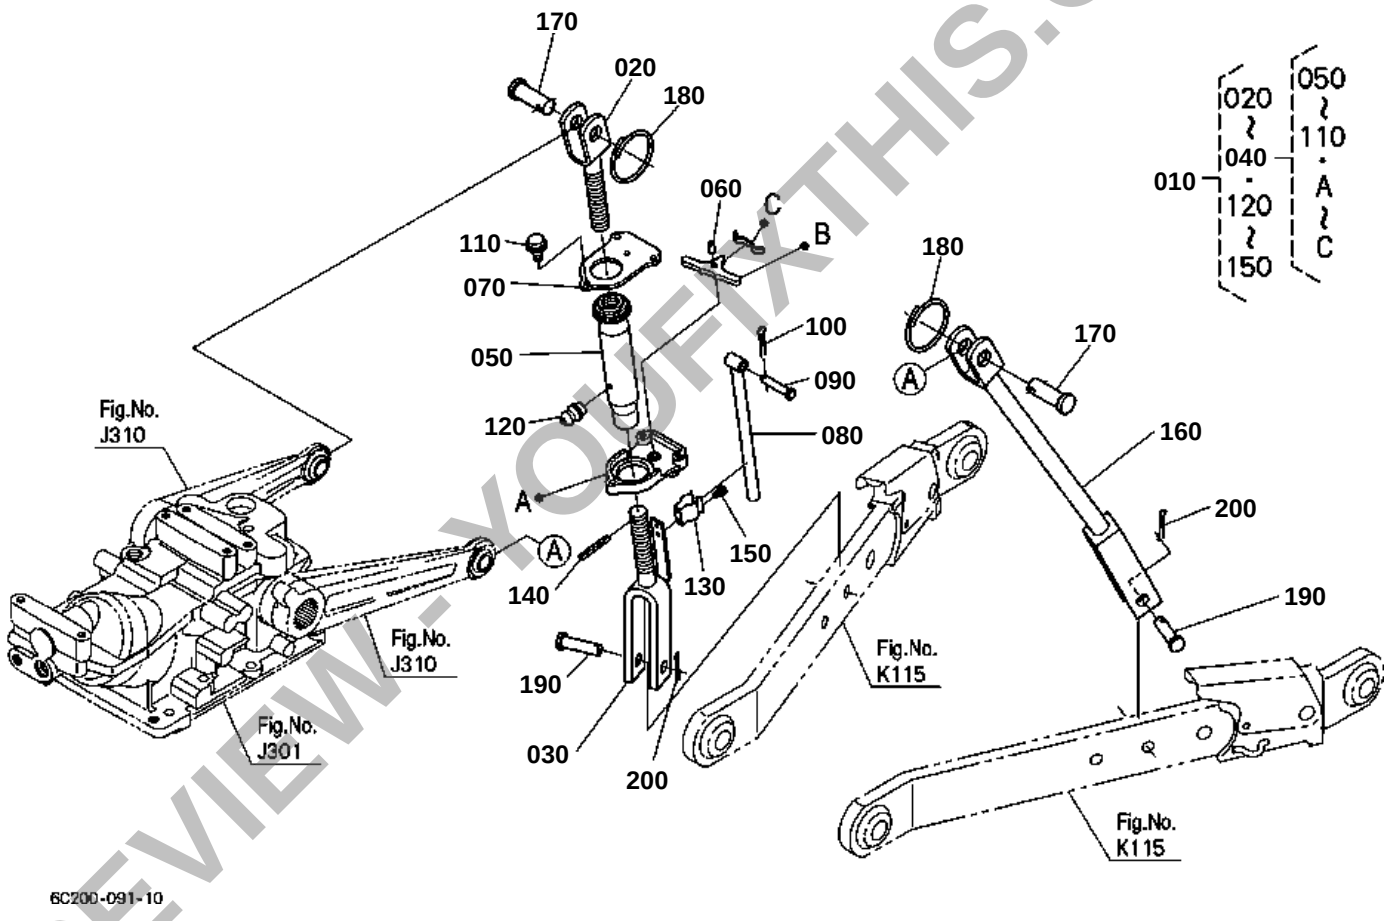


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

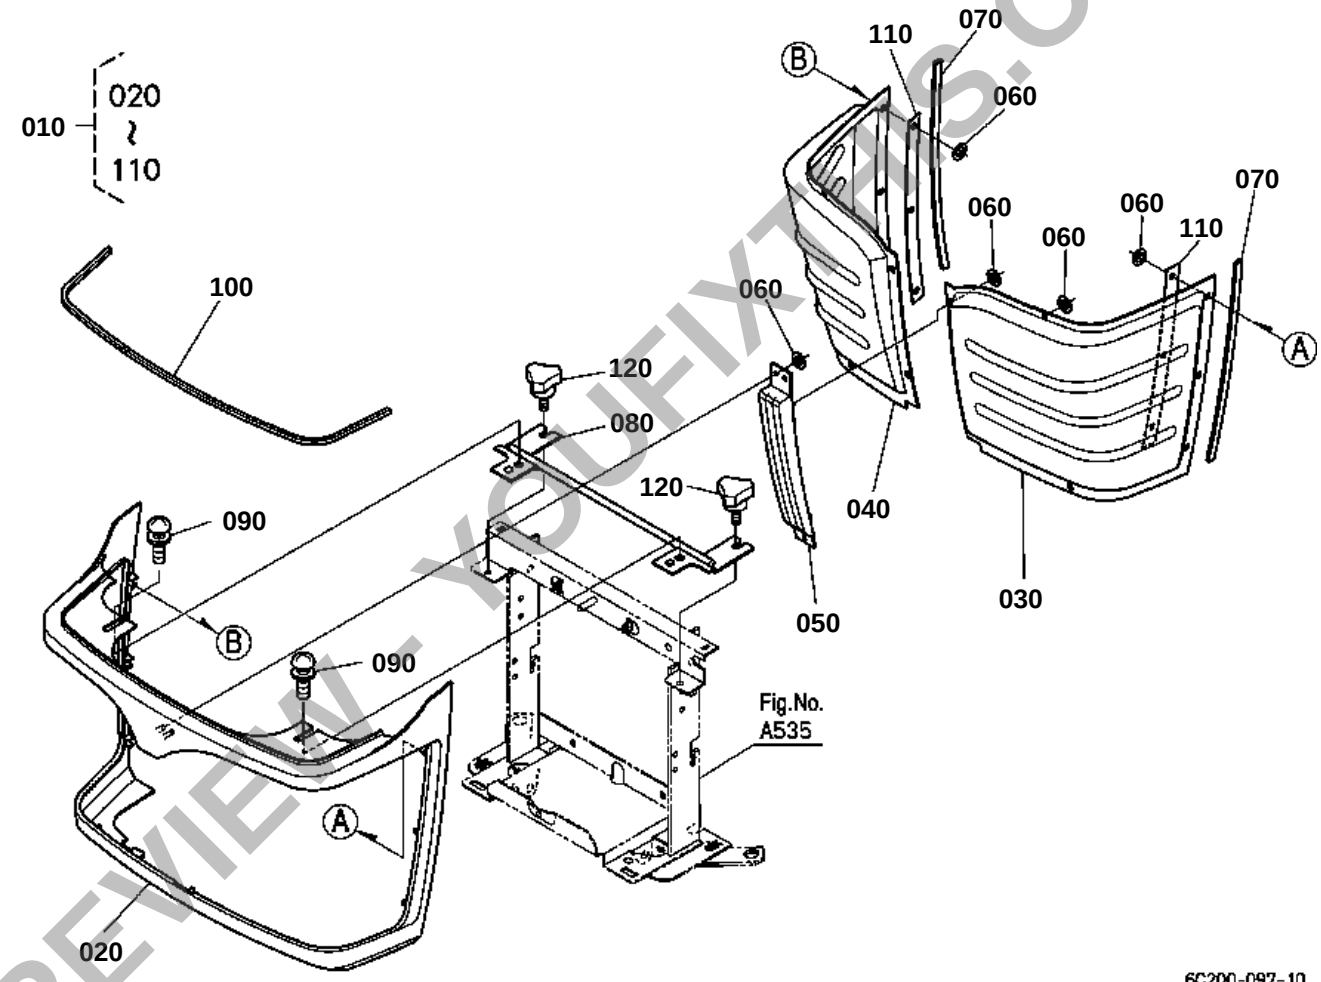

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

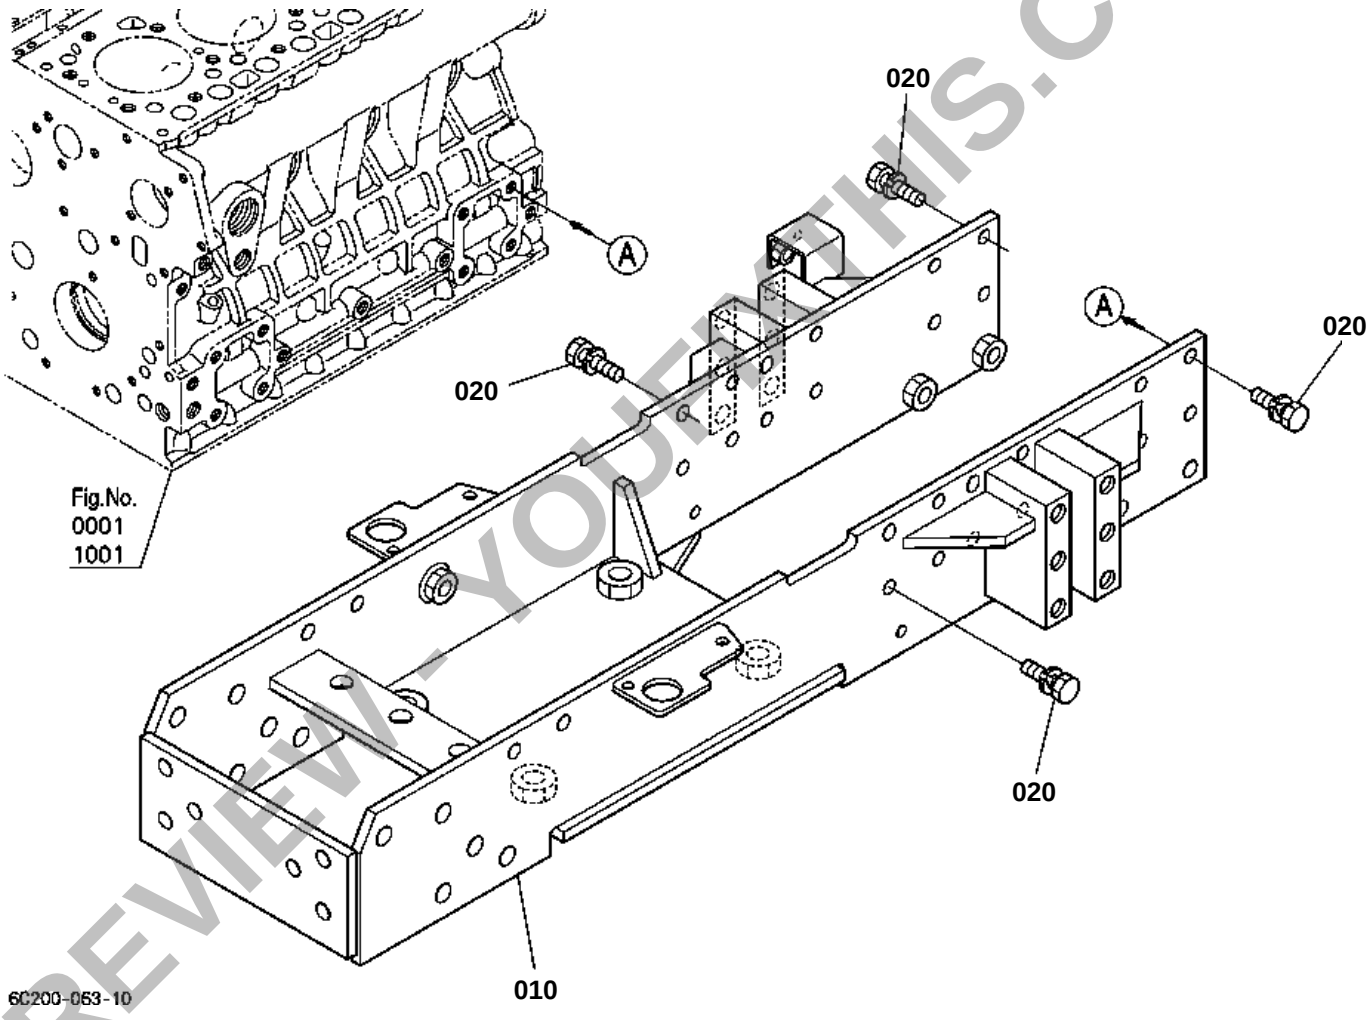

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Part No.	Description	Book
CLUTCH	01C401	CLUTCH HOUSING	100K0828
	01C415	CENTER FRAME	100K0828
	01C417	SUB FRAME	100K0828
TRANSMISSION	01C420	TRANSMISSION CASE	100K0828
	01C425	DIFFERENTIAL GEAR CASE	100K0828
	01C428	REAR AXLE CASE LH	100K0828
	01C429	REAR AXLE CASE RH	100K0828
	01D001	CLUTCH SHAFT	100K0828
	01D005	PROPELLER SHAFT	100K0828
	01D010	HST	100K0828
	01D016	HST [COMPONENT PARTS] 1	100K0828
	01D017	HST [COMPONENT PARTS] 2	100K0828
	01D018	HST [COMPONENT PARTS] 3	100K0828
	01D019	HST [COMPONENT PARTS] 4	100K0828
	01D108	RANGE GEAR SHAFT	100K0828
	01D110	REVERSE SHAFT	100K0828
	01D13202	PTO DRIVE SHAFT	100K0828
	01D133	PTO CLUTCH SHAFT	100K0828
	01D136	PTO CLUTCH	100K0828
	01D137	MID PTO	100K0828
	01D139	BEVEL GEAR SHAFT/RANGE GEAR	100K0828
	01D140	REAR DIFFERENTIAL	100K0828
SPEED CHANGE	01D217	RANGE GEAR SHIFT FORK	100K0828
	01D222	PTO GEAR SHIFT ARM	100K0828
	01D225	DIFFERENTIAL LOCK SHIFT FORK	100K0828
REAR AXLE	01D301	REAR AXLE	100K0828
BRAKE	01E001	BRAKE	100K0828
	01E005	BRAKE ROD	100K0828
	01E015	PARKING BRAKE LEVER	100K0828
SPEED CHANGE	01F104	CRUISE CONTROL LEVER	100K0828
	01F105	CRUISE CONTROL BASE	100K0828
	01F106	CRUISE CONTROL CLUTCH	100K0828
	01F108	SPEED CONTROL PEDAL	100K0828
	01F109	HST RELEASE ROD	100K0828
	01F110	RANGE GEAR SHIFT LEVER	100K0828
	01F113	FRONT WHEEL DRIVE LEVER	100K0828
	01F125	PTO GEAR SHIFT LEVER	100K0828
PUMP/MOTOR SYSTEM	01F140	POSITON CONTROL LEVER	100K0828
BRAKE	01F201	BRAKE PEDAL	100K0828
REAR AXLE	01F205	DIFFERENTIAL LOCK PEDAL	100K0828
FRONT AXLE	01G101	FRONT AXLE FRAME	100K0828
	01G105	FRONT AXLE CASE	100K0828
	01G115	FRONT DIFFERENTIAL	100K0828
	01G120	DIFFERENTIAL GEAR SHAFT	100K0828
	01G123	BEVEL GEAR CASE	100K0828
	01G125	FRONT AXLE CASE	100K0828
	01G130	FRONT AXLE	100K0828
	01G135	FRONT DRIVE SHAFT	100K0828
STEERING	01H101	STEERING HANDLE	100K0828
	01H105	STEERING POST	100K0828
	01H108	TILT PEDAL	100K0828
	01H110	STEERING CONTROLLER	100K0828
	01H120	STEERING LINKAGE	100K0828
	01H122	STEERING CYLINDER [COMPONENT PARTS]	100K0828
PUMP/MOTOR SYSTEM	01J20102	HYDRAULIC OIL LINE(SUCTION)	100K0828
	01J21002	HYDRAULIC OIL LINE(DELIVERY)	100K0828
	01J21502	HYDRAULIC OIL LINE(STEERING)	100K0828
	01J235	HYDRAULIC OIL LINE (HST)	100K0828

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

WATER FLANGE AND THERMOSTAT

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	16180-72700	COMP.FLANGE WATER	1				0.265	0.583
020	16241-73370	PIPE WATER RETURN	1				0.007	0.0154
030	06311-55030	PLUG	1				0.05	0.11
040	16261-96710	GASKET	1				0.002	0.0044
050	16264-72920	GASKET WATER FLANGE	1				0.001	0.0022
060	01023-50616	BOLT	3				0.005	0.011
070	01023-50655	BOLT	1				0.012	0.0264
080	16241-73350	PIPE WATER RETURN	1				0.015	0.033
090	16241-73360	BAND PIPE	2				0.003	0.0066
100	15321-73014	ASSY THERMOSTAT	1				0.07	0.154
110	16219-73260	COVER THERMOSTAT	1				0.094	0.2068
120	16221-73270	GASKET THERMOSTAT	1				0.01	0.022
130	01123-50835	BOLT	2				0.02	0.044

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	6C200-11603	ASSY HST	1				0	0
020	6C200-18110	HOLDER NEUTRAL	1				0	0
030	01123-50835	BOLT	1				0.02	0.044
040	6C200-18152	ARM NEUTRAL	1				0	0
050	66204-43572	BUSH	1				0.002	0.0044
060	66204-43352	SHAFT HOLDER	1				0.072	0.1584
070	01125-50835	BOLT	1				0.017	0.0374
080	08121-06000	BEARING BALL	1				0.02	0.044
090	04612-00100	CIR CLIP EXTERNAL	1				0.001	0.0022
095	6C200-18160	ASSY SPRING	1				0	0
100	6C050-43470	SPRING	1				0.047	0.1034
105	6C200-18180	TUBE	1				0	0
110	6C200-18340	STAY NEUTRAL SWITCH	1				0	0
120	01123-50820	BOLT	1				0.011	0.0242

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

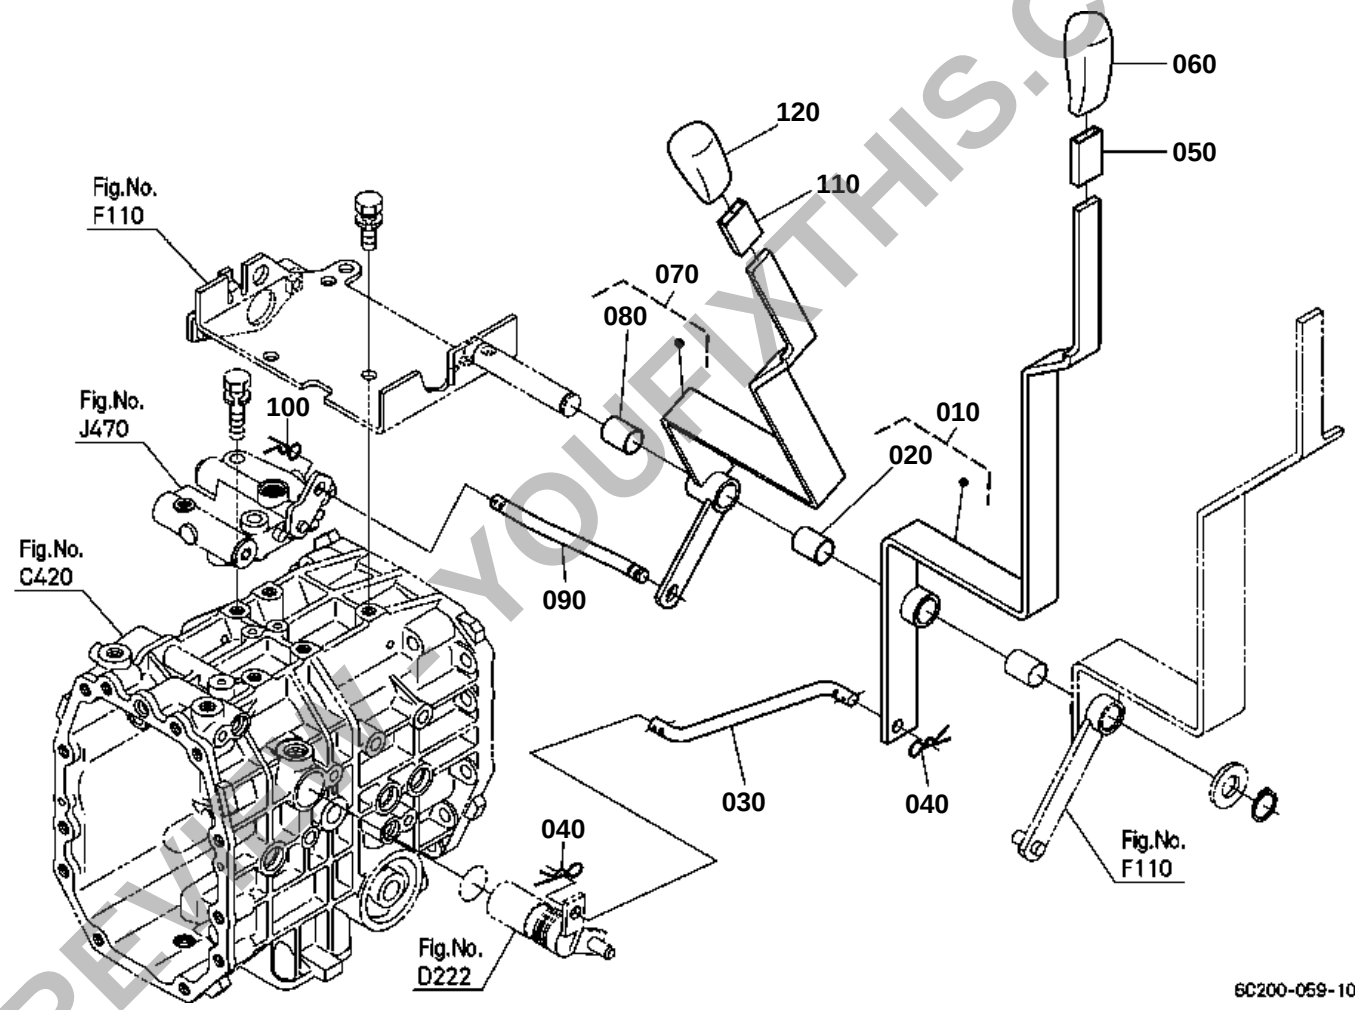

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


HYDRAULIC OIL LINE (OIL COOLER)

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	6A710-39610	PIPE OIL COOLER	1				1.7	3.74
020	01123-60816	BOLT	2				0.01	0.022
030	04816-00120	O RING	2				0.001	0.0022
040	6A710-39660	SUPRING PLATE	2				0.01	0.022
050	6C200-39622	PIPE	1				0	0
060	04816-00120	O RING	1				0.001	0.0022
070	6A710-39670	STOPPER	1				0.02	0.044
080	01123-60816	BOLT	1				0.01	0.022
090	6C140-39250	CUSHION	1				0.014	0.0308
100	6C200-39630	PIPE	1				0	0
110	04816-00120	O RING	2				0.001	0.0022
120	6A710-39670	STOPPER	2				0.02	0.044
130	01123-60816	BOLT	2				0.01	0.022

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

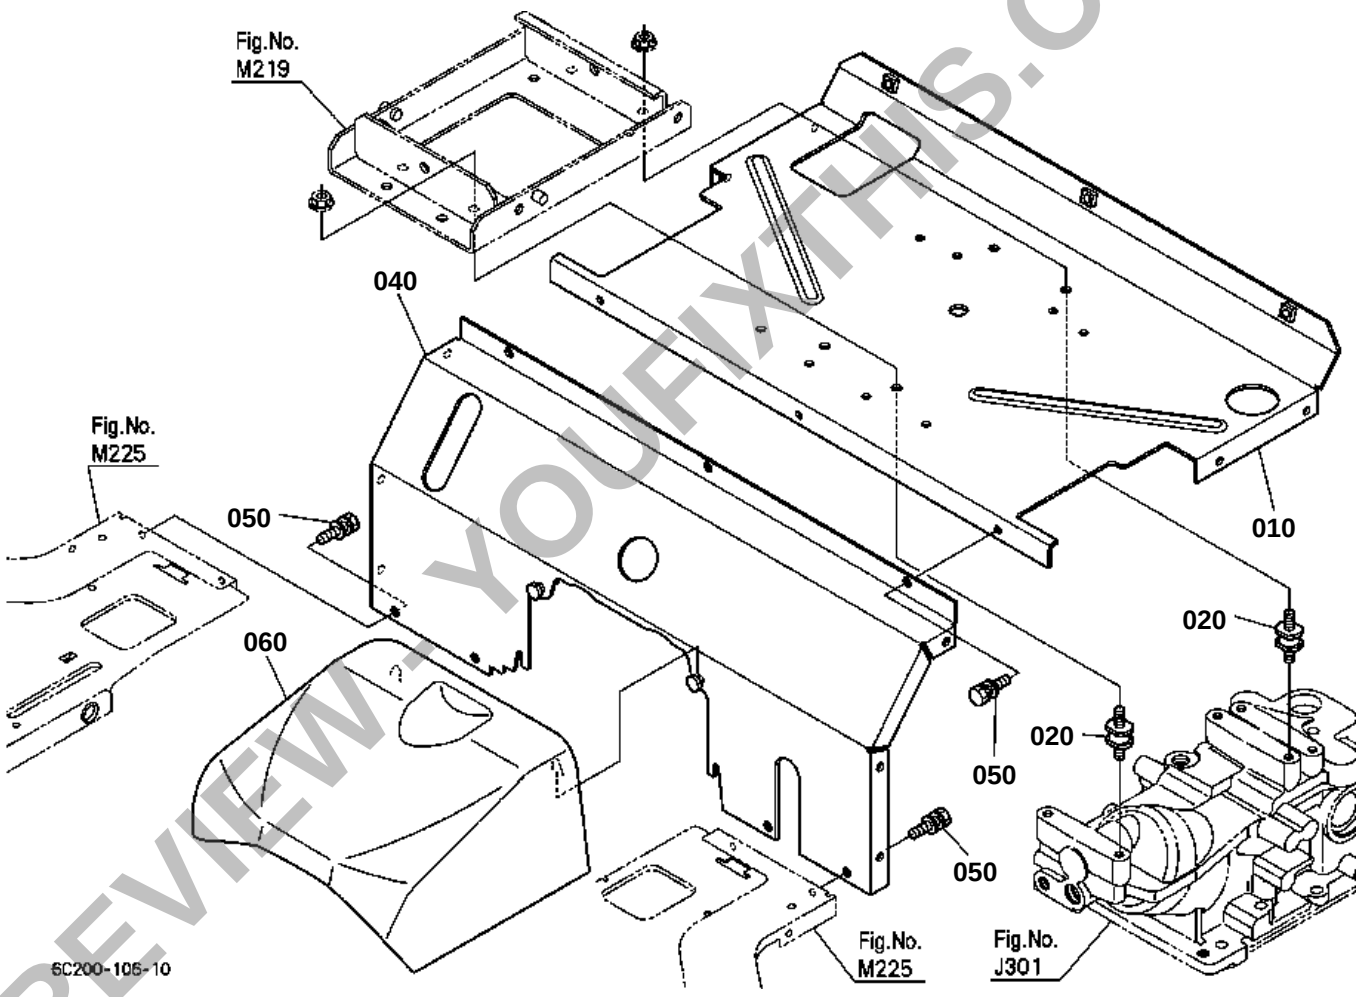

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 17 of 323 pages

The full manual includes:

- All 323 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota B3030HSD Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual