# Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts at it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number refering to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quanity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.
>= Your serial number should be greater than or equal to the number shown.
<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.
←→ The part shown will work for the older and later serial number.
# The part shown is not interchangable with the other serial number.
← new for old
→ old for new

Remarks → Notes about this particulart part. Sometimes this may say except [FR] or [CA]

## Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

| Symbol | Country |
|---|---|
| A | United States of America |
| CA | Canada |
| FR | France |
| GR | Greece |
| PO | Portugal |
| AU | Australia |

If the remarks column says for example EXCEPT [FR] this part works in all countries except France.
That means it will work here in the USA.


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

| Item | Part No. | Description | Book |
|---|---|---|---|
| ENGINE | 01T001 | CRANKCASE | 100K0315 |
| | 01T002 | OIL PAN | 100K0315 |
| | 01T003 | PISTON/CRANKSHAFT | 100K0315 |
| | 01T004 | MAIN BEARING CASE | 100K0315 |
| | 01T005 | FLYWHEEL | 100K0315 |
| | 01T006 | CYLINDER HEAD | 100K0315 |
| | 01T007 | VALVE/ROCKER ARM | 100K0315 |
| | 01T008 | NOZZLE HOLDER [A] [CA] [FR] [AU] | 100K0315 |
| | 01T010 | NOZZLE HOLDER (COMPONENT PARTS) | 100K0315 |
| | 01T011 | CYLINDER HEAD COVER | 100K0315 |
| | 01T012 | INLET MANIFOLD | 100K0315 |
| | 01T014 | EXHAUST MANIFOLD | 100K0315 |
| | 01T016 | CAMSHAFT | 100K0315 |
| | 01T017 | GEAR CASE | 100K0315 |
| | 01T018 | HYDRAULIC GEAR PUMP | 100K0315 |
| | 01T019 | HYDRAULIC GEAR PUMP (COMPONENT PARTS) | 100K0315 |
| | 01T020 | FUEL PUMP | 100K0315 |
| | 01T021 | INJECTION PUMP | 100K0315 |
| | 01T022 | INJECTION PUMP (COMPONENT PARTS) | 100K0315 |
| | 01T023 | SPEED CONTROL PLATE | 100K0315 |
| | 01T024 | GOVERNOR | 100K0315 |
| ELECTRICAL SYSTEM | 01T029 | DYNAMO/FAN [A] [CA] [FR] [AU] [WG] | 100K0315 |
| | 01T030 | DYNAMO (COMPONENT PARTS) [A] [CA] [FR] [AU] [WG] | 100K0315 |
| CLUTCH | 01T048 | CLUTCH | 100K0315 |
| LABELS | 01T096 | LABEL | 100K0315 |
| ENGINE | 01T013 | AIR CLEANER | 100K0315 |
| | 01T015 | MUFFLER | 100K0315 |
| | 01T025 | ACCELERATOR | 100K0315 |
| FUEL SYSTEM | 01T026 | FUEL TANK | 100K0315 |
| | 01T027 | FUEL FILTER | 100K0315 |
| COOLING WATER SYSTEM | 01T028 | RADIATOR | 100K0315 |
| ELECTRICAL SYSTEM | 01T035 | STARTER | 100K0315 |
| | 01T036 | STARTER (COMPONENT PARTS) | 100K0315 |
| | 01T037 | BATTERY | 100K0315 |
| | 01T038 | PANEL WIRING [A] [CA] | 100K0315 |
| | 01T041 | LIGHT/HORN [A] [CA] [U] | 100K0315 |
| | 01T047 | SWITCH | 100K0315 |
| CLUTCH | 01T049 | CLUTCH PEDAL/PROPELLER SHAFT | 100K0315 |
| | 01T050 | CLUTCH HOUSING | 100K0315 |
| TRANSMISSION | 01T051 | TRANSMISSION CASE | 100K0315 |
| | 01T052 | CASE COVER | 100K0315 |
| | 01T053 | 1ST SHAFT 4TH SHAFT | 100K0315 |
| | 01T054 | 2ND SHAFT REVERSE SHAFT | 100K0315 |
| | 01T055 | 3RD SHAFT 5TH SHAFT PTO SHAFT [A] [CA] [U] | 100K0315 |
| | 01T057 | MID P.T.O. | 100K0315 |
| SPEED CHANGE LEVER | 01T058 | MAIN GEAR SHIFT LEVER | 100K0315 |
| | 01T059 | HI-LO GEAR SHIFT LEVER | 100K0315 |
| REAR AXLE/REAR WHEEL | 01T060 | DIFFERENTIAL REAR | 100K0315 |
| | 01T061 | AXLE CASE | 100K0315 |
| | 01T062 | REAR WHEEL (7-16) | 100K0315 |
| | 01T063 | REAR WHEEL (212/80D-15) [A] [CA] | 100K0315 |
| BRAKE | 01T065 | BRAKE | 100K0315 |
| | 01T066 | BRAKE PEDAL [A] [CA] [FR] [U] [AU] | 100K0315 |
| FRONT AXLE/FRONT WHEEL | 01T069 | DRIVE SHAFT | 100K0315 |
| | 01T070 | FRONT AXLE CASE | 100K0315 |
| | 01T071 | FRONT WHEEL GEAR CASE | 100K0315 |
| | 01T072 | DIFFERENTIAL FRONT | 100K0315 |
| | 01T073 | FRONT AXLE JOINT | 100K0315 |
| | 01T074 | FRONT WHEEL DRIVE LEVER | 100K0315 |
| | 01T075 | FRONT WHEEL (4.50-10) | 100K0315 |



PREVIEW YOUFIXTHIS.COM
Download full manual at youfixthis.com

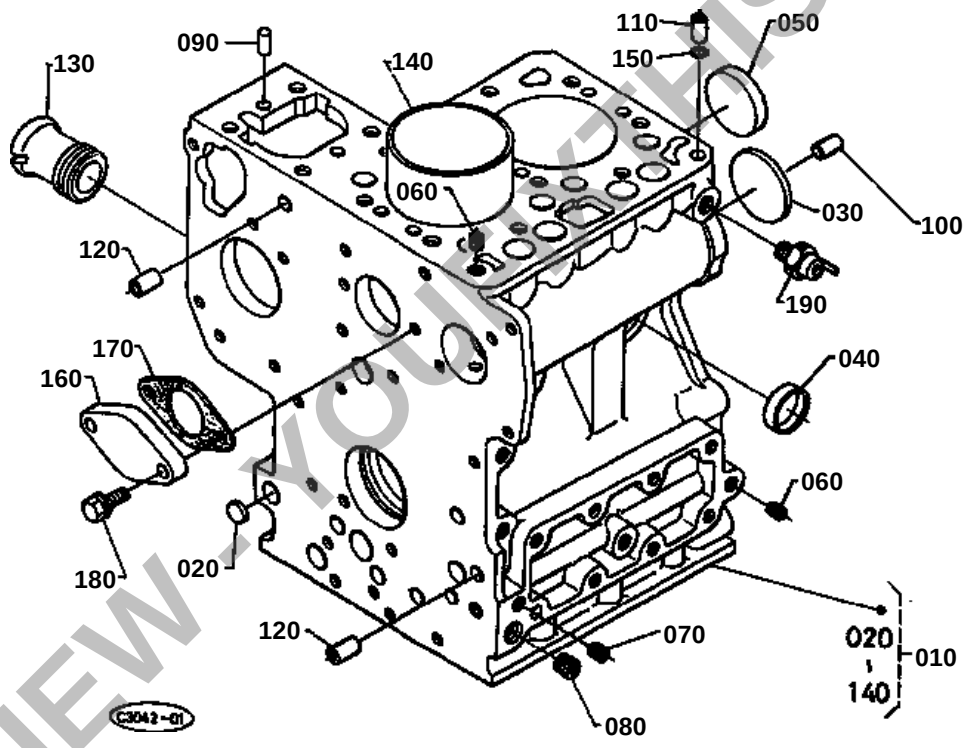


PREVIEW - YOUFIXTHIS.COM



Download full manual at youfixthis.com


↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

| REF.No | Part No. | Description | Q'ty | S.No. | I/C | REMARKS | Weight (kgf) | Weight (lb) |
|---|---|---|---|---|---|---|---|---|
| | 15951-01010 | | | | | | | |
| | 15261-96170 | | | | | | 0.005 | |
| | 15261-96160 | | | | | | 0.02 | |
| | 15321-96260 | | | | | | 0.014 | |
| | 15221-03490 | | | | | | 0.02 | |
| | 15261-96010 | | | | | | 0.002 | |
| | 15521-96020 | | | | | | 0.003 | |
| | 15521-96030 | | | | | | 0.007 | |
| | 05012-00609 | | | | | | 0.003 | |
| | 05012-00814 | | | | | | 0.006 | |
| | 15221-33650 | | | | | | 0.004 | |
| | 15231-33960 | | | | | | 0.001 | |
| | 15261-72880 | | | | | | 0.07 | |
| | 15901-02310 | | | | | | 0.398 | |
| | 15221-33700 | | | | | | 0.001 | |
| | 15261-73910 | | | | | | 0.13 | |
| | 15261-73920 | | | | | | | |
| | 01023-50618 | | | | | | 0.006 | |
| | 15531-39010 | | | | | | 0.032 | |

PREVIEW - YOUFIXTHIS.COM




Download full manual at youfixthis.com

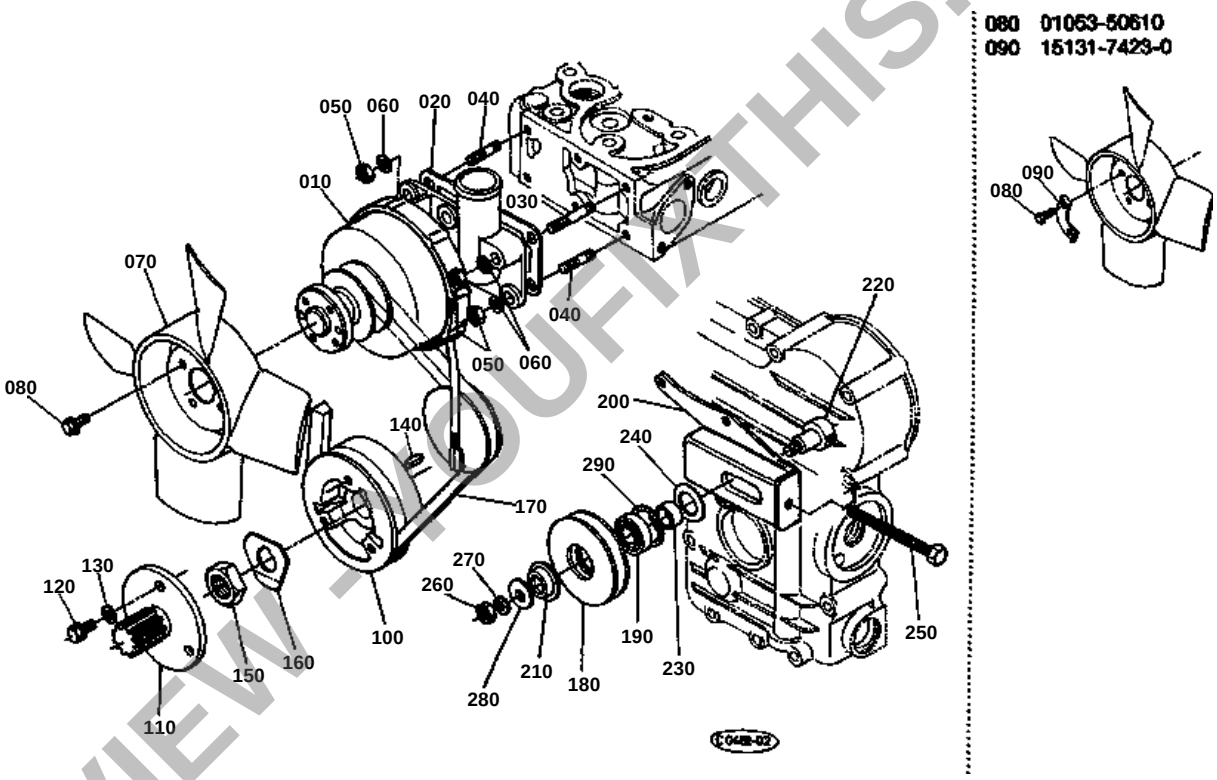


PREVIEW - YOUFIXTHIS.COM




Download full manual at youfixthis.com

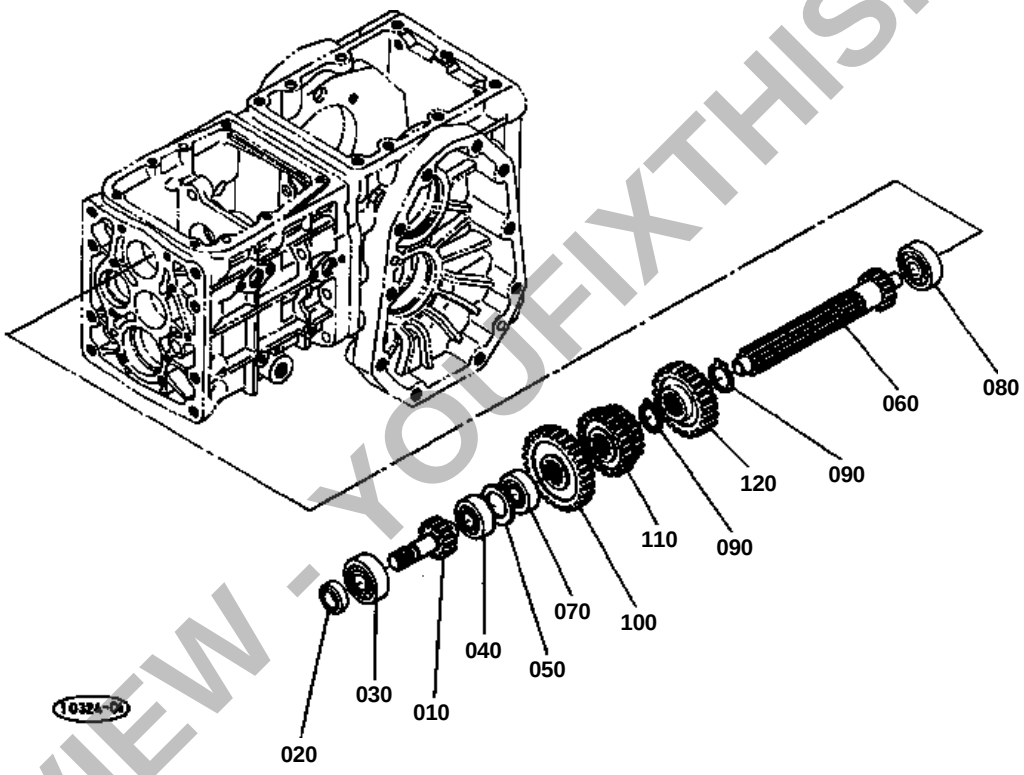


PREVIEW - YOUFIXTHIS.COM




Download full manual at youfixthis.com

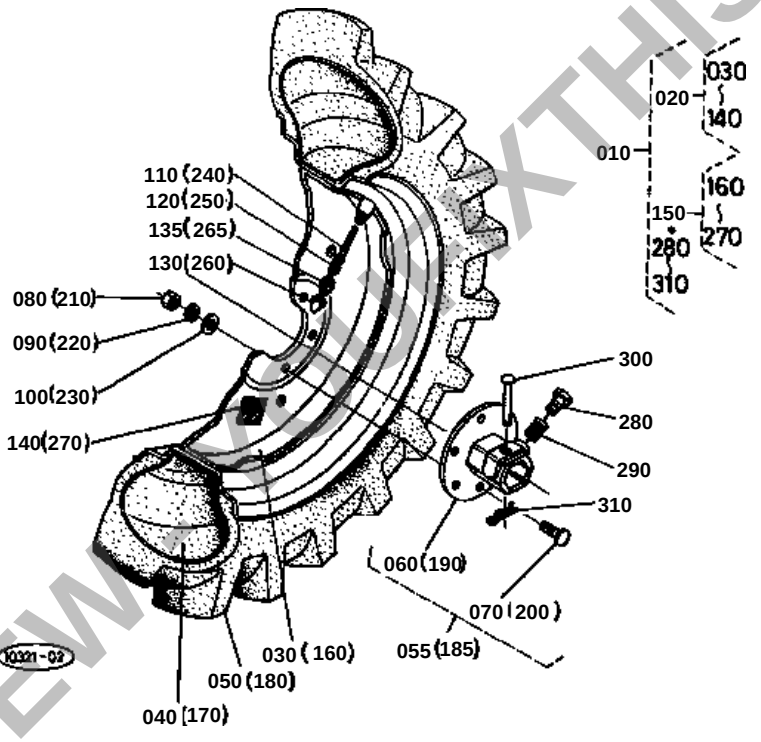


PREVIEW ONLY FIXTHIS.COM



Download full manual at youfixthis.com

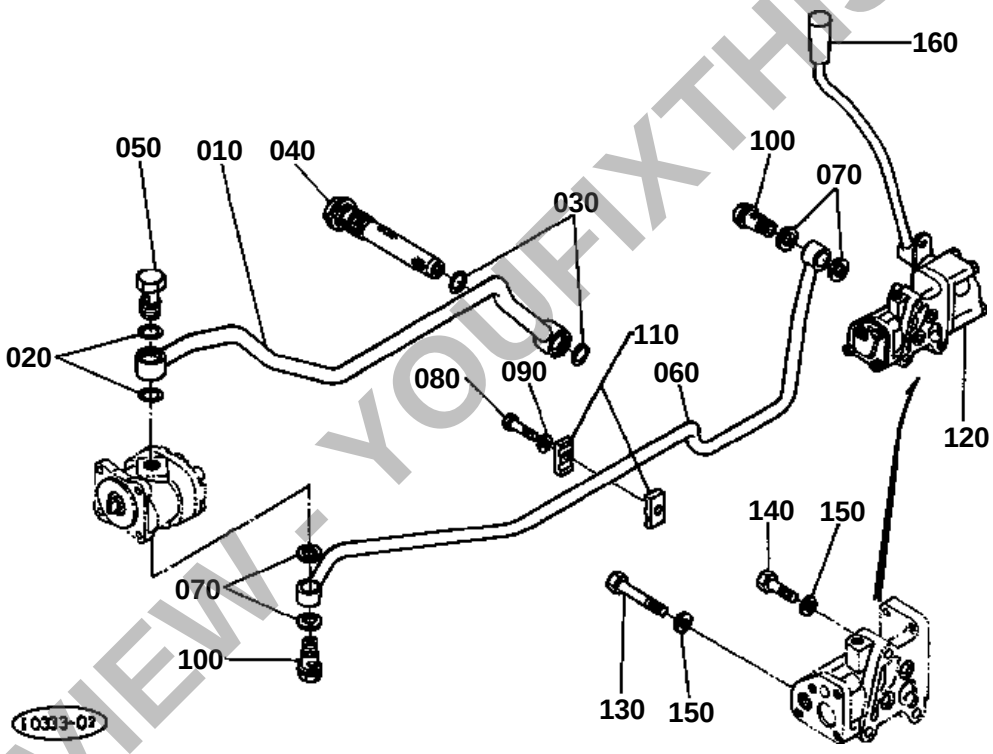


PREVIEW - YOUFIXTHIS.COM




Download full manual at youfixthis.com

| Item | Part No. | Description | Book |
|---|---|---|---|
| FRONT AXLE/FRONT WHEEL | 01T076 | FRONT WHEEL (20 X 8.00-10) | 100K0315 |
| | 01T077 | FRONT AXLE FRAME [A] [CA] [FR] [U] [AU] | 100K0315 |
| STEERING | 01T079 | KNUCKLE ARM | 100K0315 |
| | 01T080 | STEERING | 100K0315 |
| HYDRAULIC SYSTEM | 01T081 | HYDRAULIC PIPE [A] [CA] [FR] [U] [AU] | 100K0315 |
| | 01T083 | CONTROL VALVE (COMPONENT PARTS) | 100K0315 |
| | 01T084 | HYDRAULIC LIFT ARM | 100K0315 |
| | 01T085 | HYDRAULIC CYLINDER CAP | 100K0315 |
| | 01T086 | 3-POINT LINKAGE [A] [CA] [FR] [U] [AU] | 100K0315 |
| HOOD(BONNET)/CHASSIS | 01T088 | HOOD(BONNET) [A] [CA] [U] | 100K0315 |
| | 01T090 | REARVIEW MIRROR (OPTION) [A] [CA] [U] | 100K0315 |
| | 01T091 | FENDER [A] [CA] [FR] [U] [AU] | 100K0315 |
| | 01T093 | SEAT [A] [CA] [FR] [U] [AU] | 100K0315 |
| | 01T095 | STEP/FOOT COVER | 100K0315 |
| LABELS | 01T097 | LABEL | 100K0315 |
| ACCESSORIES | 01T098 | ACCESSORIES | 100K0315 |

PREVIEW - YOUFIXTHIS.COM



Download full manual at youfixthis.com

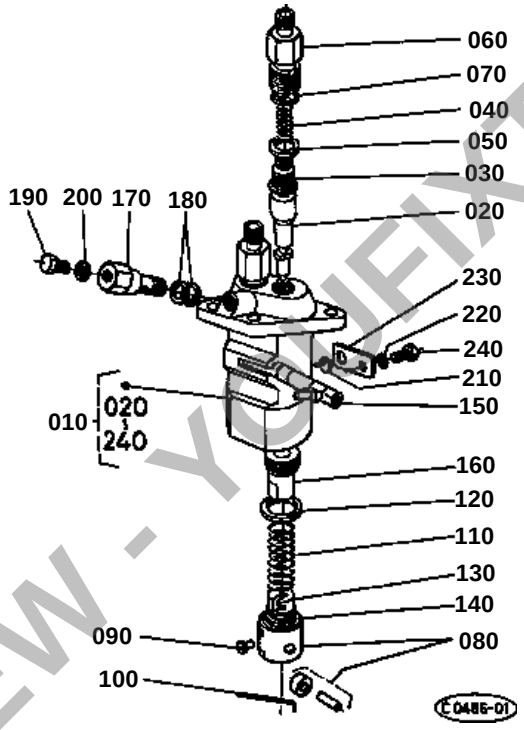


PREVIEW - YOUFIXTHIS.COM



Download full manual at youfixthis.com


# SWITCH

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

| Part No. | Description | S.No./C | REMARKS | Weight (kgf) | Weight (lb) |
|---|---|---|---|---|---|
| 37150-32240 | SWITCH SAFETY | | | 0.12 | 0.264 |
| 67008-54792 | COVER SAFETY SWITCH | | [WG] | 0.03 | 0.066 |
| 66945-83120 | SPRING STOP SWITCH | | [WG] | 0.12 | 0.264 |
| 36330-75480 | SWITCH STOP | | [WG] | 0.08 | 0.176 |
| 66361-51180 | CLAMP CORD | | [WG] | 0.001 | 0.0022 |

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

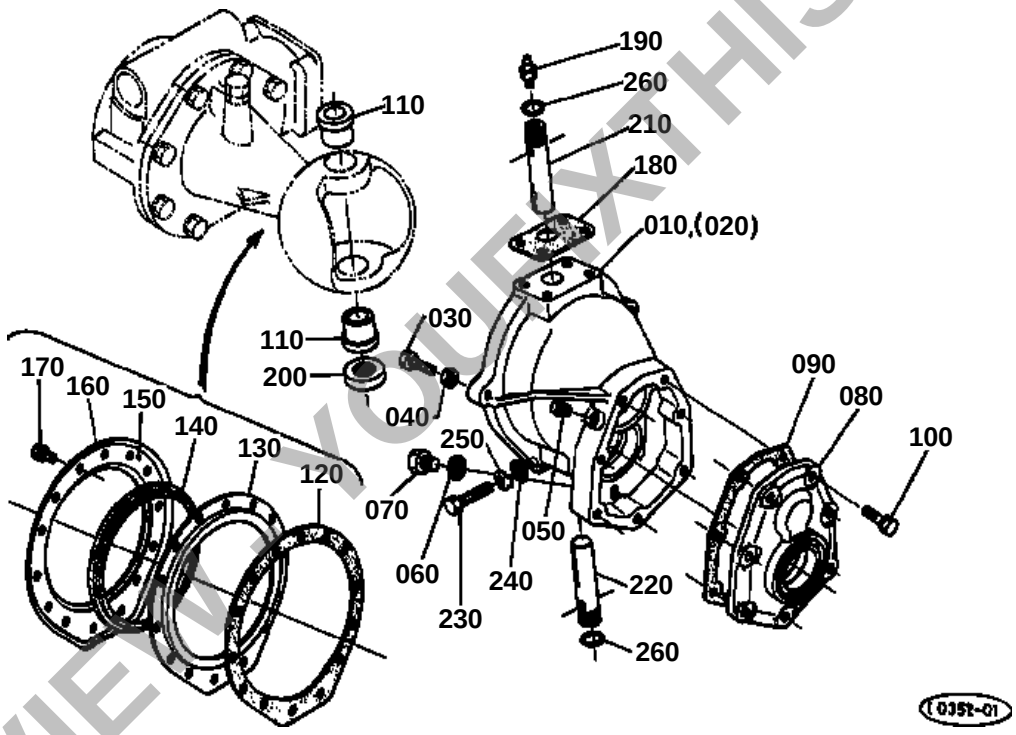


PREVIEW OF YOUFIXTHIS.COM



Download full manual at youfixthis.com

# PREVIEW ONLY

You're viewing 12 of 156 pages

## The full manual includes:

- All 156 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

**GET FULL MANUAL NOW**

**Kubota B4200D Parts Catalog**

**Scan or click anywhere**
**youfixthis.com**

*Click anywhere on this page to get the full manual*