Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts at it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number refering to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quanity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.
>= Your serial number should be greater than or equal to the number shown.
<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.
←→ The part shown will work for the older and later serial number.
The part shown is not interchangable with the other serial number.
← new for old
→ old for new

Remarks → Notes about this particulart part. Sometimes this may say except [FR] or [CA]

Note about Country Codes:


The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France.
That means it will work here in the USA.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

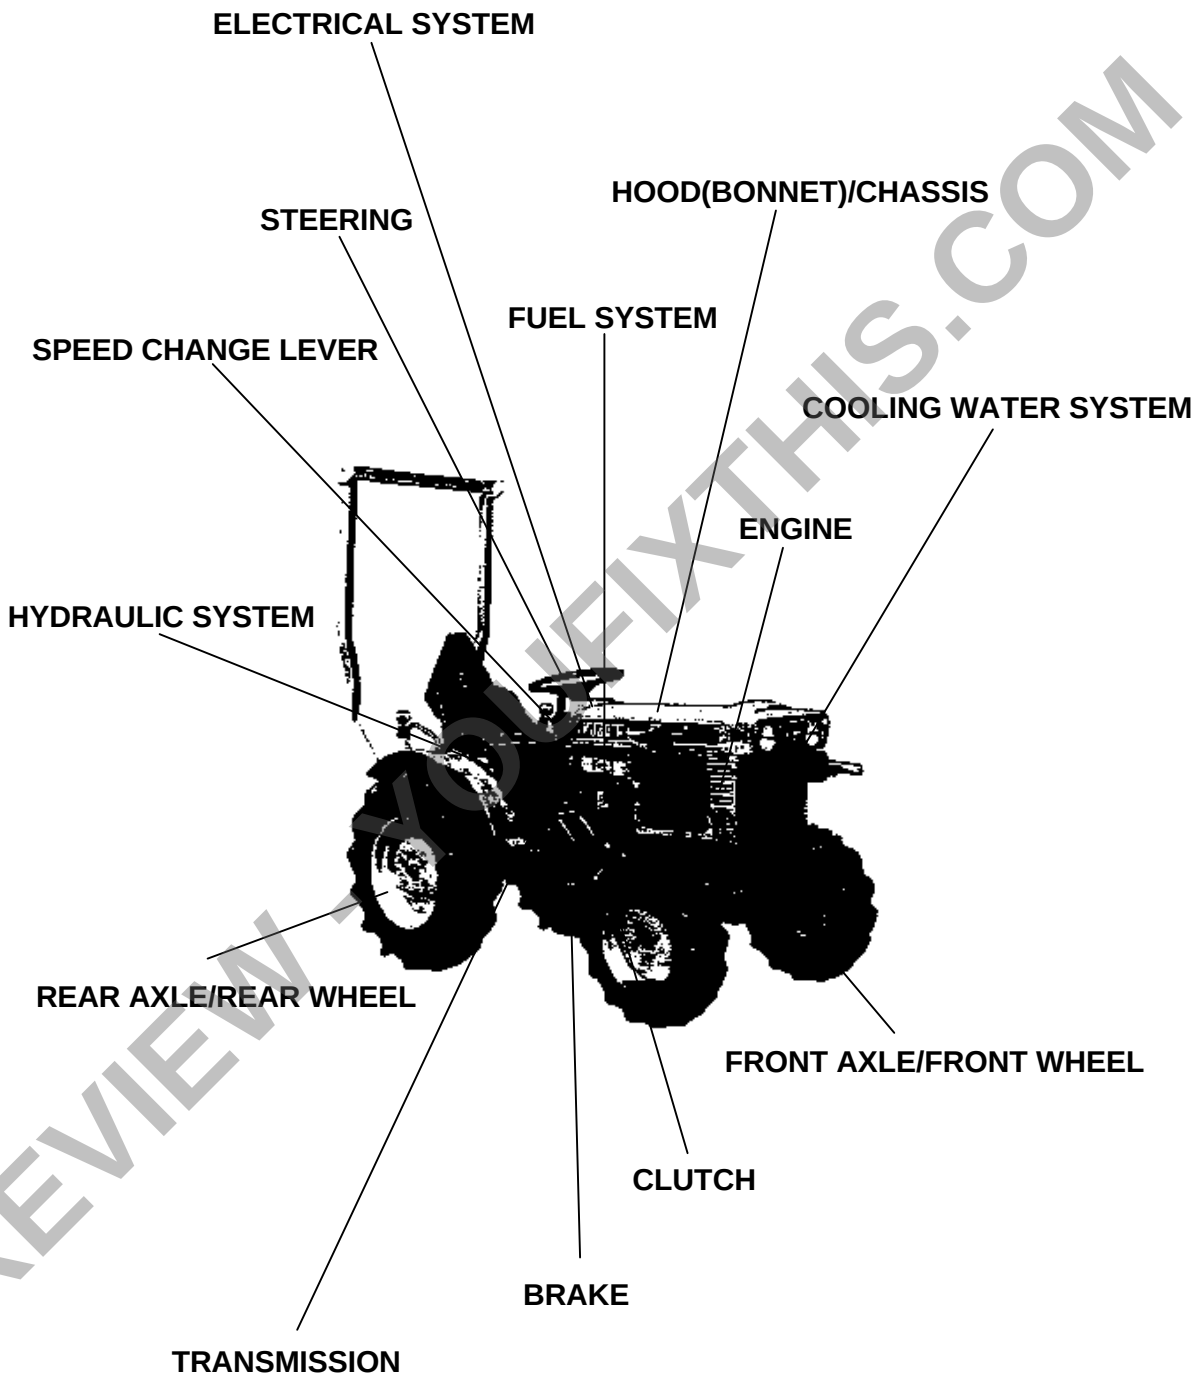

LABELS

ACCESSORIES


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Part No.	Description	Book
ENGINE	01T001	CRANKCASE GROUP	100K0036
	01T002	CYLINDER HEAD GROUP	100K0036
	01T003	GEAR CASE GROUP	100K0036
	01T004	BEARING CASE GROUP	100K0036
	01T005	BREATHER GROUP	100K0036
	01T006	INLET MANIFOLD GROUP	100K0036
	01T007	VALVE ROCKER ARM GROUP	100K0036
	01T008	HEAD COVER GROUP	100K0036
	01T009	CAMSHAFT GROUP	100K0036
	01T010	PISTON CRANK SHAFT GROUP	100K0036
	01T011	FLYWHEEL GROUP	100K0036
	01T012	NOZZLE HOLDER GROUP	100K0036
	01T013	INJECTION PUMP GROUP	100K0036
	01T014	SPEED CONTROL PLATE GROUP	100K0036
	01T015	GOVERNOR GROUP	100K0036
	01T016	DYNAMO GROUP	100K0036
	01T017	CLUTCH GROUP	100K0036
	01T018	NAME PLATE GROUP	100K0036
	01T019	NOZZLE HOLDER GROUP	100K0036
	01T020	INJECTION PUMP GROUP	100K0036
	01T021	DYNAMO GROUP	100K0036
	01T022	STARTER GROUP	100K0036
	01T023	OIL PRESSURE PUMP GROUP	100K0036
TRANSMISSION	01T024	TRANSMISSION CASE GROUP	100K0036
	01T025	CASE COVER GROUP	100K0036
	01T026	AXLE CASE GROUP	100K0036
REAR AXLE/REAR WHEEL	01T02701	REAR WHEEL GROUP	100K0036
CLUTCH	01T028	CLUTCH ROD GROUP	100K0036
REAR AXLE/REAR WHEEL	01T029	1ST SHAFT 4TH SHAFT GROUP	100K0036
	01T030	2ND SHAFT REVERSE SHAFT GROUP	100K0036
	01T031	3RD 5TH PTO SHAFT GROUP	100K0036
	01T032	DIFFERENTIAL GROUP	100K0036
SPEED CHANGE LEVER	01T033	MAIN SPEED CHANGE GROUP	100K0036
	01T034	AUX.SPEED CHANGE GROUP	100K0036
FRONT AXLE/FRONT WHEEL	01T035	FRONT DRIVE GROUP	100K0036
BRAKE	01T036	BRAKE GROUP	100K0036
HYDRAULIC SYSTEM	01T037	OIL PRESSURE PIPE GROUP	100K0036
	01T038	CONTROL VALVE GROUP	100K0036
	01T039	OIL PRESSURE GROUP 1	100K0036
	01T040	OIL PRESSURE GROUP 2	100K0036
STEERING	01T041	STEERING GROUP	100K0036
BRAKE	01T042	BRAKE ROD GROUP	100K0036
ENGINE	01T043	ACCELERATOR PEDAL GROUP	100K0036
HOOD(BONNET)/CHASSIS	01T044	SEAT GROUP	100K0036
LABELS	01T045	NAME PLATE GROUP	100K0036
CLUTCH	01T046	CLUTCH HOUSING GROUP	100K0036
FRONT AXLE/FRONT WHEEL	01T047	FRONT WHEEL SUPPORT GROUP	100K0036
COOLING WATER SYSTEM	01T048	RADIATOR GROUP	100K0036
HOOD(BONNET)/CHASSIS	01T049	FENDER GROUP	100K0036
	01T050	BONNET GROUP	100K0036
ENGINE	01T051	MUFFLER GROUP	100K0036
FUEL SYSTEM	01T052	FUEL TANK GROUP	100K0036
ELECTRICAL SYSTEM	01T053	BATTERY GROUP	100K0036
	01T054	PANEL GROUP	100K0036
FRONT AXLE/FRONT WHEEL	01T055	FRONT AXLE CASE GROUP [B5100D-P]	100K0036
	01T056	FRONT WHEEL GEAR CASE GROUP [B5100D-P]	100K0036
STEERING	01T057	KNUCKLE ARM GROUP [B5100D-P]	100K0036


PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

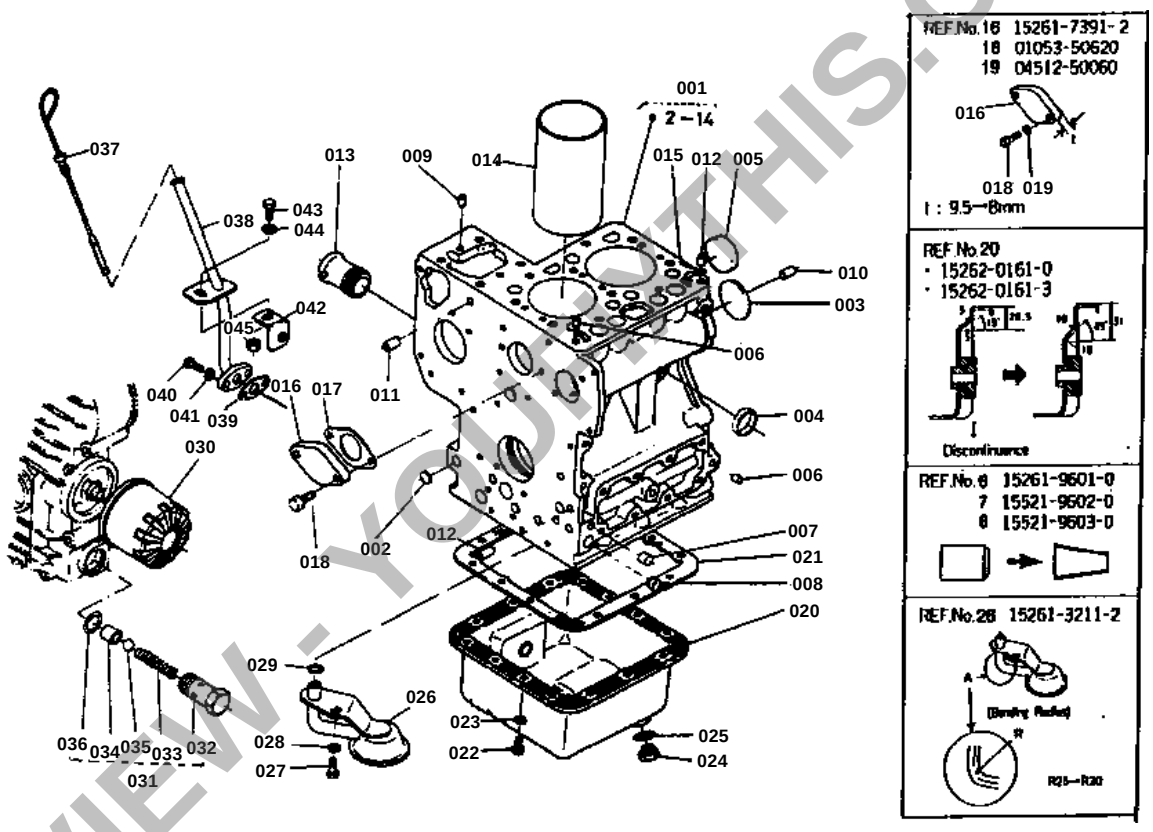

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

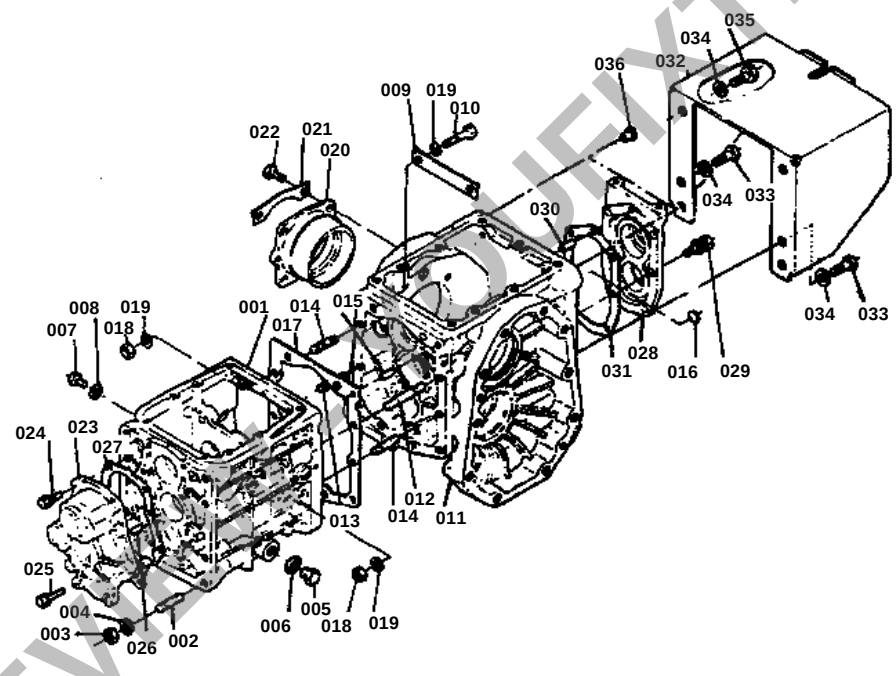

REF. No. 14 01555-51035
Change of material


PREVIEW ONLY YOUFIXTHIS.COM

Download full manual at youfixthis.com

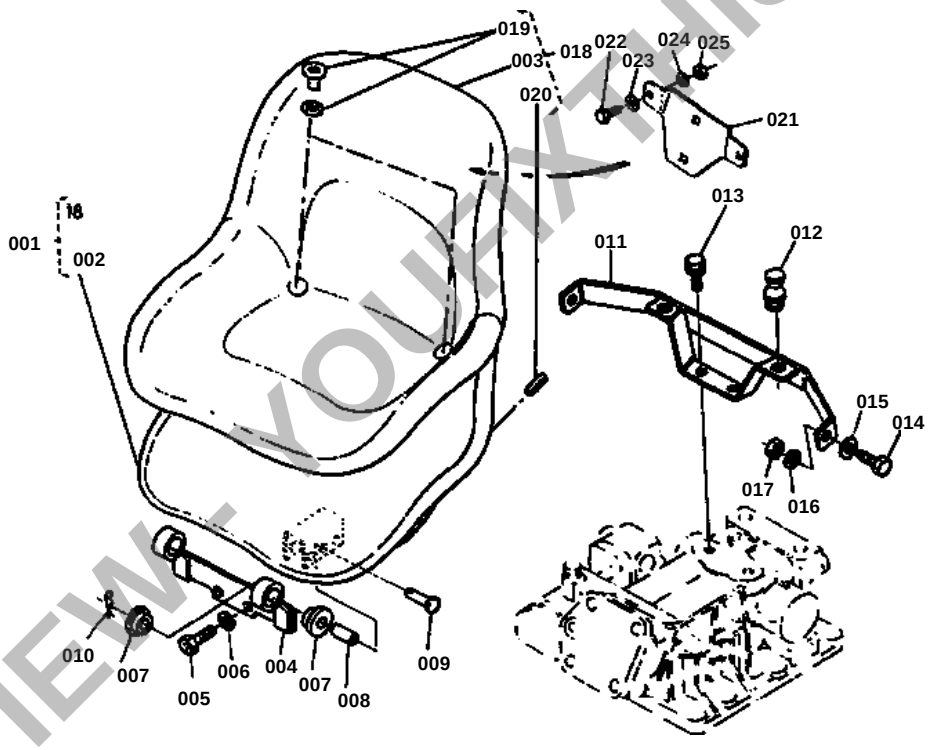

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

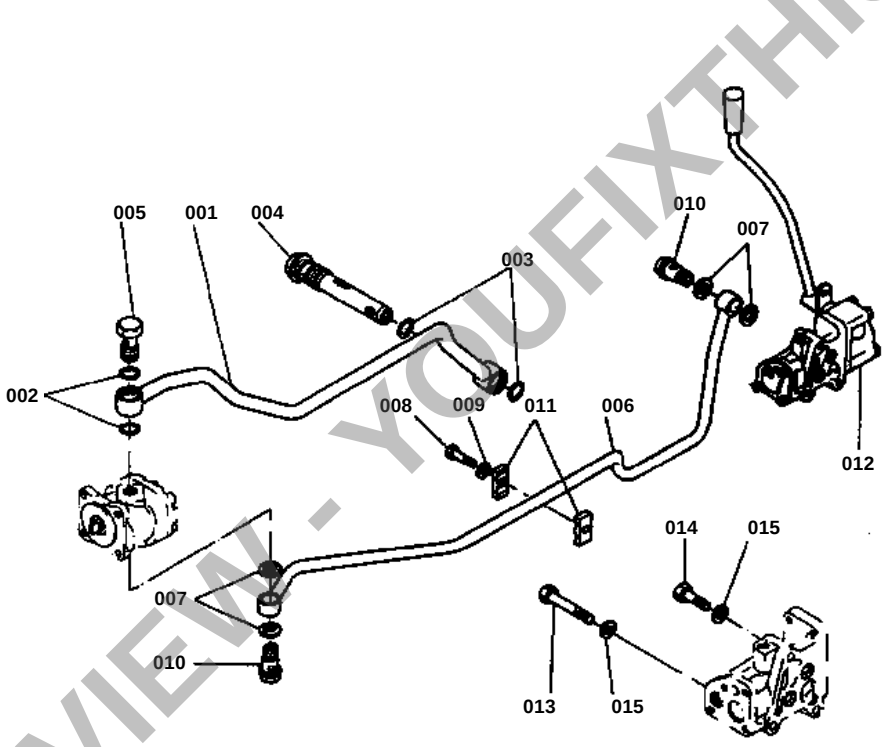

REF. No. 12 66494-3620-0
Change of the grip..


REF. No. 7 67111-3718-0



d : 16.6 → 17.5


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

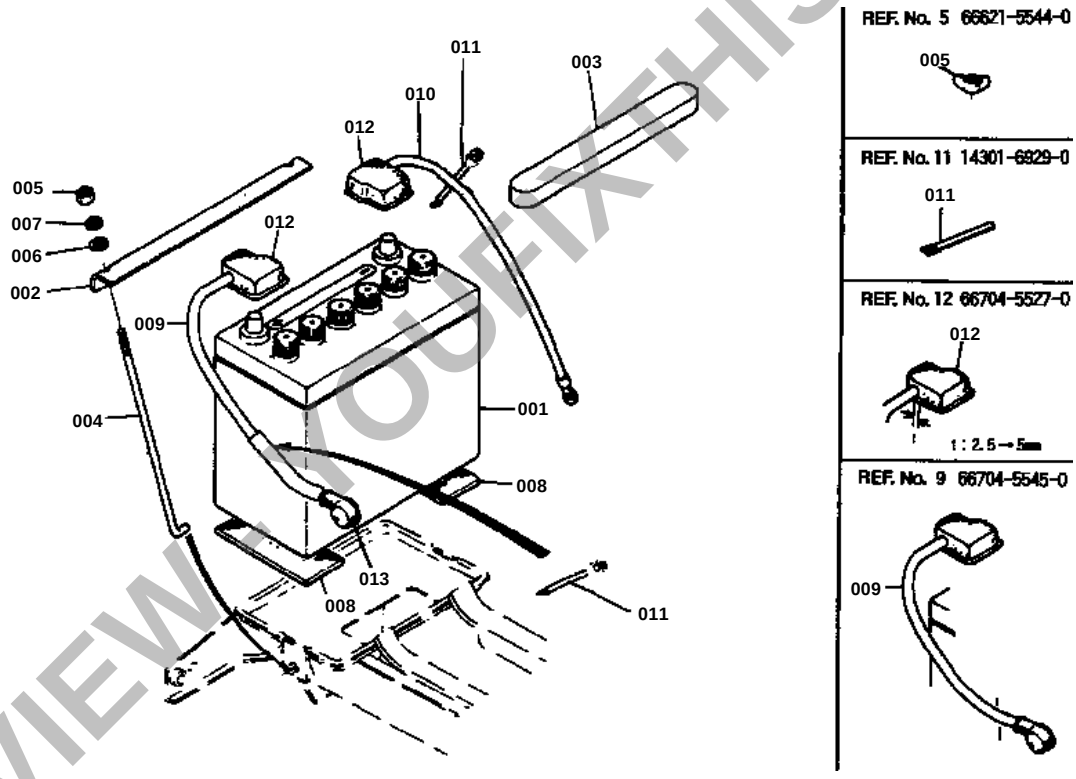


PREVIEW ONLY YOUFIXTHIS.COM

Download full manual at youfixthis.com

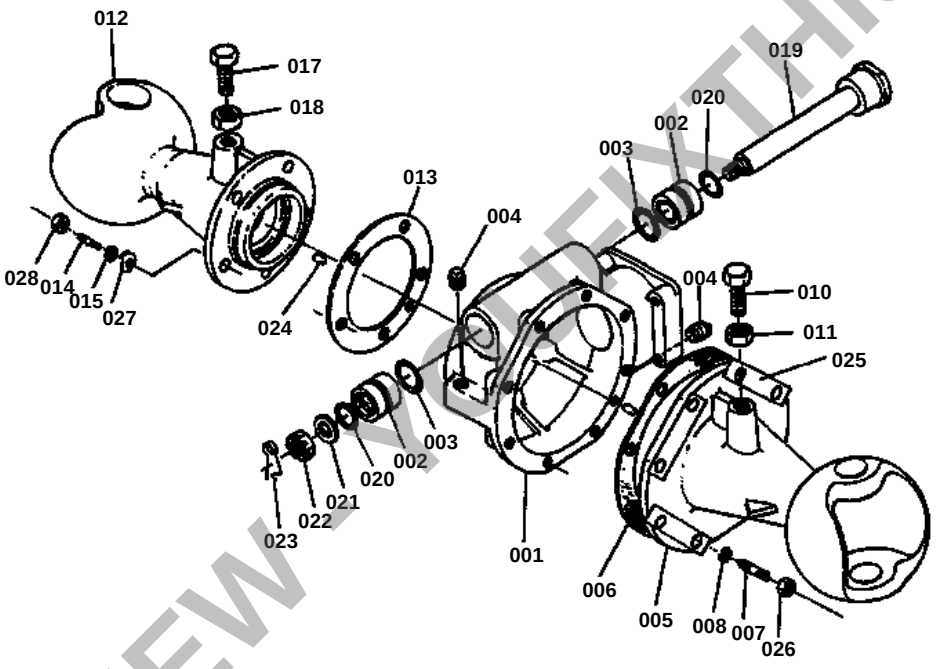


REF. No. 7 01153-50825
14 01153-51028

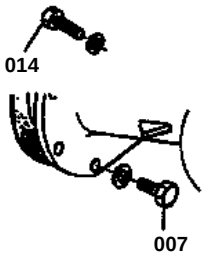

REF. No. 1 66811-5611-2
5 66811-5621-2
12 66811-5631-2
Drill a hole for straight pin.

PREVIEW ONLY YOUFIXTHIS.COM

Download full manual at youfixthis.com

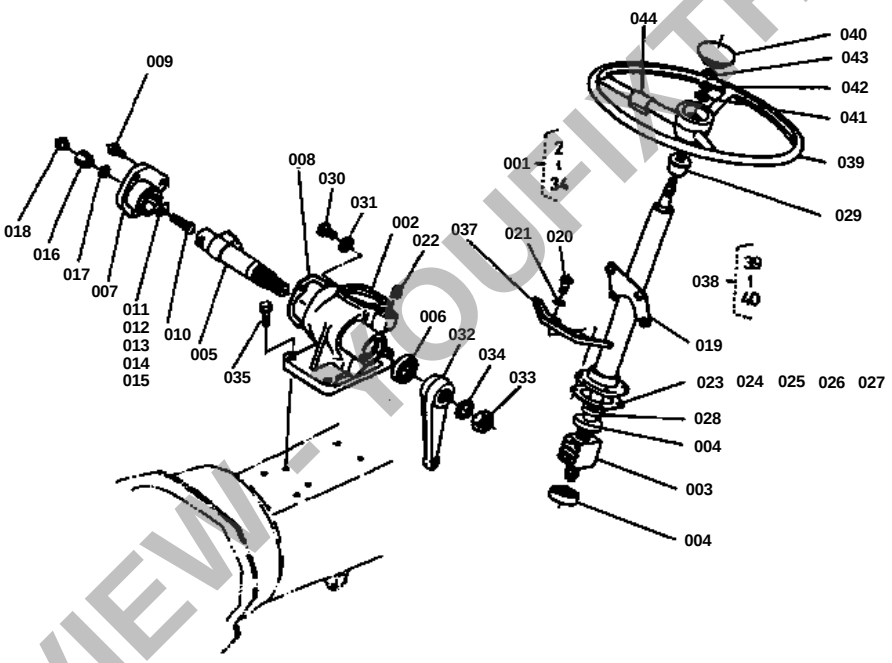

REF. No. 35 01153-50828
36 04512-50060




Change of bolt with spring washer.

REF. No. 44 35217-1837-0


Change of sentence.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

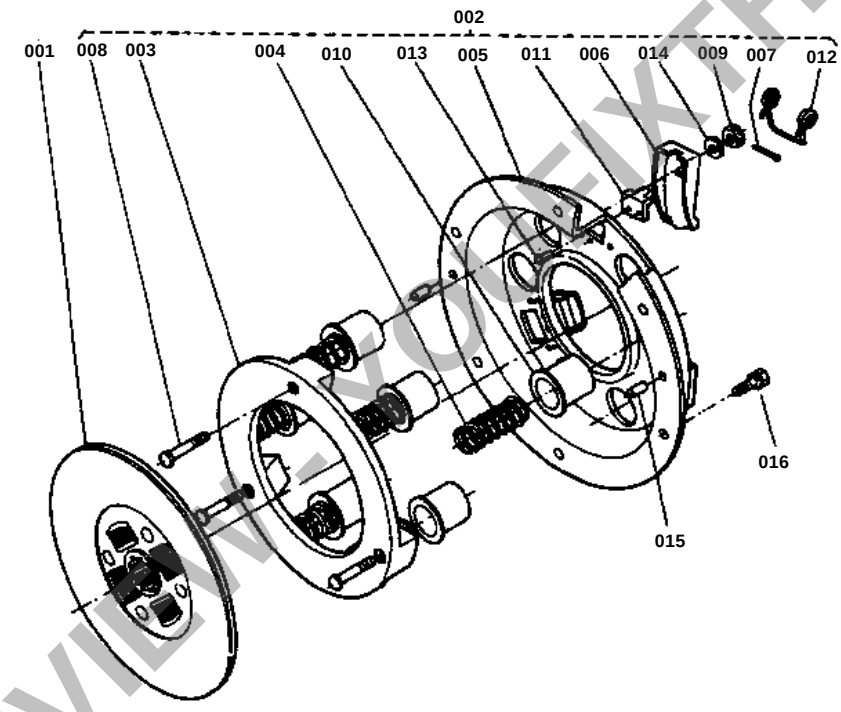


REF. No. 16 01153-50816
17 04512-50080



PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

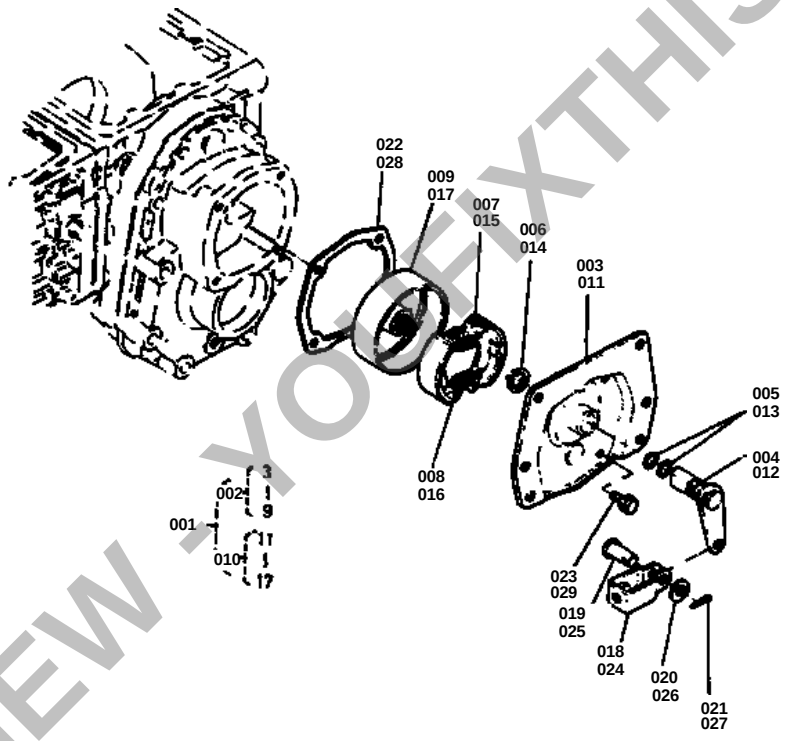

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 12 of 134 pages

The full manual includes:

- All 134 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota B5100D-P Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual