Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts at it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number refering to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quanity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.
>= Your serial number should be greater than or equal to the number shown.
<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.
←→ The part shown will work for the older and later serial number.
The part shown is not interchangable with the other serial number.
← new for old
→ old for new

Remarks → Notes about this particulart part. Sometimes this may say except [FR] or [CA]

Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France.
That means it will work here in the USA.


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Part No.	Description	Book
ENGINE	0101	CRANKCASE GROUP	100K0134
	0102	GEAR CASE GROUP	100K0134
	0103	HEAD COVER GROUP	100K0134
	0104	CAM SHAFT GROUP	100K0134
	0105	FUEL CAMSHAFT GROUP	100K0134
	0106	CRANKSHAFT GROUP	100K0134
	0107	BREATHER AND INJECTION PUMP GROUP	100K0134
	0108	COOLING FAN AND RADIATOR GROUP	100K0134
	0109	AIR CLEANER AND MUFFLER GROUP	100K0134
TRANSMISSION	0110	MISSION AND DIFFERENTIAL GEAR CASE GROUP	100K0134
	0111	MISSION GEAR GROUP	100K0134
	0112	DIFFRENTIAL GROUP	100K0134
SPEED CHANGE LEVER	0113	SPEED CHANGE GROUP	100K0134
REAR AXLE/REAR WHEEL/BRAKE	0114	REAR WHEEL AND BRAKE GROUP	100K0134
CLUTCH	0115	CLUTCH AND PEDAL GROUP	100K0134
HYDRAULIC SYSTEM	0116	OIL PRESSURE GROUP 1	100K0134
	0117	OIL PRESSURE GROUP 2	100K0134
	0118	CONTOL VALVE GROUP	100K0134
STEERING	011901	STEERING GROUP	100K0134
	011902	STEERING GROUP	100K0134
HOOD(BONNET)/ROPS	0120	SEAT AND FENDER GROUP	100K0134
	0121	BONNET AND RADIATOR SUPPORT GROUP	100K0134
ELECTRICAL SYSTEM	0122	PANEL GROUP	100K0134
	0123	FUEL TANK AND BATTERY GROUP	100K0134
FUEL SYSTEM	0124	FUEL FILTER GROUP	100K0134
FRONT AXLE/FRONT WHEEL/CHASSIS	0125	FRONT AXLE CASE GROUP [B6000]	100K0134
	0126	FRONT AXLE DRIVE GROUP [B6000]	100K0134
	0127	FRONT WHEEL AND STEERING GROUP [B6000]	100K0134
	0129	ACCELERTOR PEDAL GROUP	100K0134
	0130	BALUSTRADE GROUP	100K0134
HITCH/DRAWBAR	0131	3 POINT LINKAGE HITCH GROUP [P]	100K0134

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

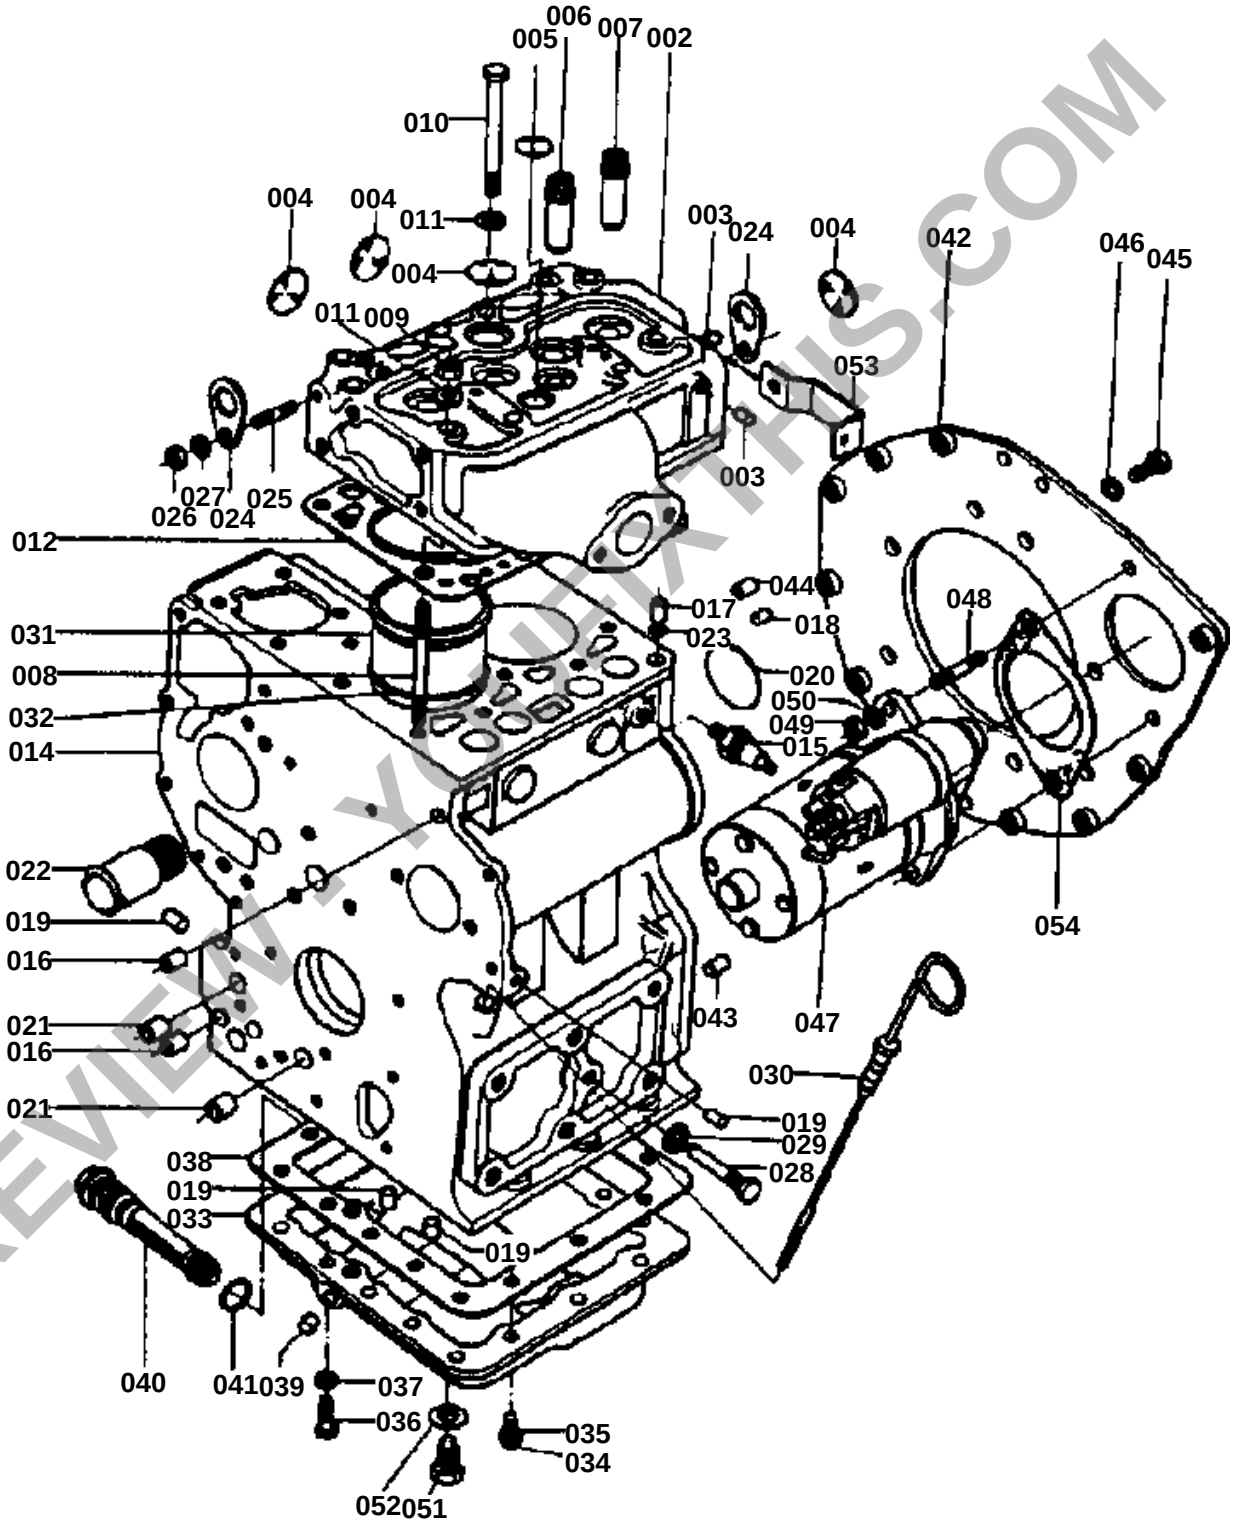


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new


REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
001	15231-03200	COMP HEAD CYLINDER	1			002 TO 007	9	19.8
002	15231-03116	HEAD CYLINDER	1				0	0
003	14301-33622	PLUG PIN	2				0	0
004	06311-75028	PLUG BELCH	4				0.01	0.022
005	06311-75020	PLUG BELCH	1				0.004	0.0088
006	15231-13543	GUIDE INLET VALVE	2				0	0
007	15231-13563	GUIDE EXHAUST VALVE	2				0	0
008	15221-03412	STUD CYLINDER HEAD	2				0	0
009	15221-03510	NUT CYLINDER HEAD	2				0.008	0.0176
010	15231-03450	BOLT CYLINDER HEAD	9				0.058	0.1276
011	15221-03540	WASHER PLAIN	11				0.003	0.0066
012	15231-03312	GASKET CYLINDER HEAD	1				0	0
013	15231-01012	COMP CRANKCASE	1			014 TO 022	0	0
014	15231-01122	CRANKCASE	1				0	0
015	15231-39013	SWITCH OIL	1				0	0
016	15231-33960	PIN PIPE	2				0.001	0.0022
017	15221-33650	PIN PIPE	1				0.004	0.0088
018	15221-33620	PLUG PIN	1				0.002	0.0044
019	14301-33622	PLUG PIN	6				0	0
020	06311-75045	PLUG BELCH	1				0.026	0.0572
021	15231-33952	PIN PIPE	2				0	0
022	15231-72840	PIPE WATER 3	1				0.082	0.1804
023	15221-33700	O RING	1				0.001	0.0022
024	15221-01750	HOOK ENGINE	2				0.04	0.088
025	01513-00818	STUD	2				0	0
026	02114-00080	NUT	2				0	0
027	04512-00080	WASHER SPRING	2				0	0
028	15231-04552	BOLT KNOCK	1				0	0
029	15021-33660	PACKING	1				0.001	0.0022
030	15231-36412	GAUGE OIL	1				0	0
031	15231-02315	LINER CYLINDER	2				0	0
032	15231-02350	PACKING CYLINDER LIN	4				0.002	0.0044
033	15231-01614	COVER OIL	1				0	0
034	01053-50616	BOLT	14				0.005	0.011
035	04512-50060	WASHER SPRING	14				0	0
036	01053-50635	BOLT	1				0.009	0.0198
037	04512-50060	WASHER SPRING	1				0	0
038	15231-01660	PACKING OIL COVER	1				0	0
039	14301-33630	PLUG PIN	1				0.001	0.0022
040	15231-32012	ASSY FILTER OIL	1				0	0
041	14301-32580	O RING	1				0	0
042	15231-04623	PLATE	1				0	0
043	05012-00814	PIN STRAIGHT	1				0.006	0.0132
044	05012-00820	PIN STRAIGHT	1				0.008	0.0176
045	01173-51025	BOLT	8				0.021	0.0462
046	04512-50100	WASHER SPRING	8				0	0
047	15231-63012	ASSY STARTER	1				0	0
048	01511-50832	STUD	2				0.015	0.033
049	02113-50080	NUT	2				0	0
050	04512-50080	WASHER SRPING	2				0	0
051	15231-33710	PLUG	1				0.032	0.0704
052	04714-00200	PACKING	1				0.002	0.0044
053	15231-12492	STAY	1				0	0
054	66591-51160	PACKING	1				0	0

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

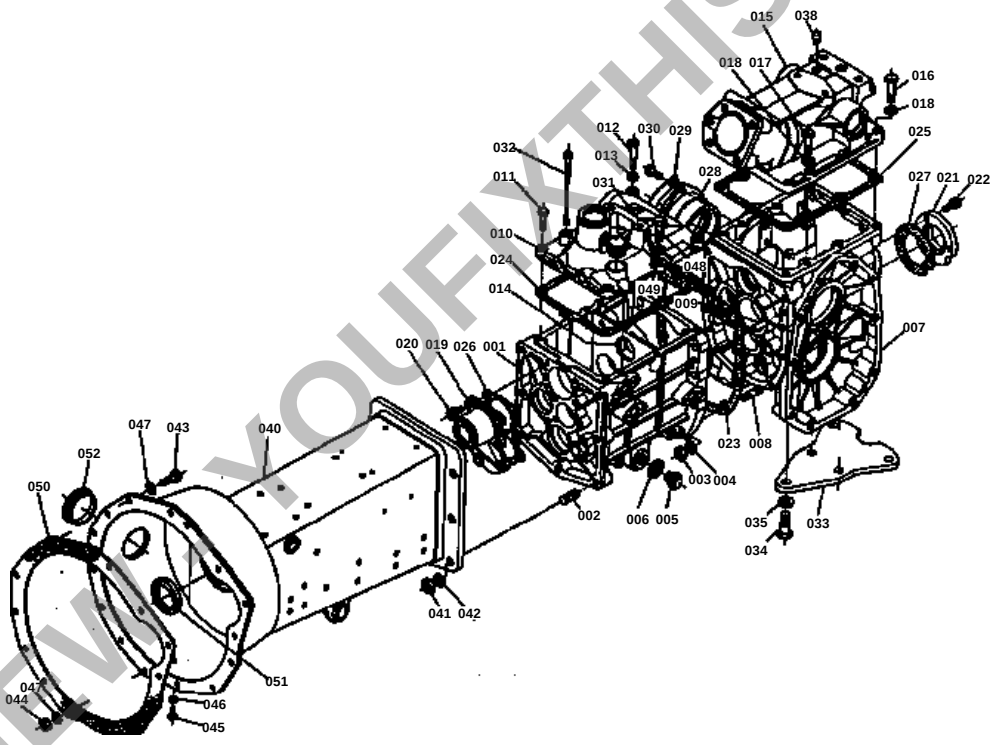


PREVIEW ONLY YOUFIXTHIS.COM

Download full manual at youfixthis.com

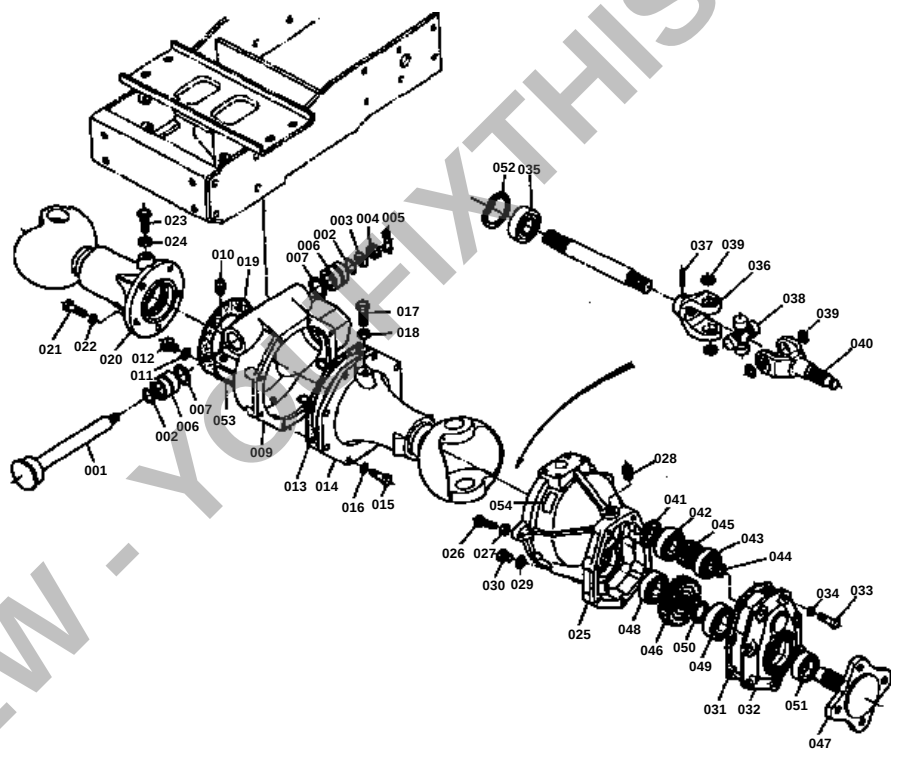


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

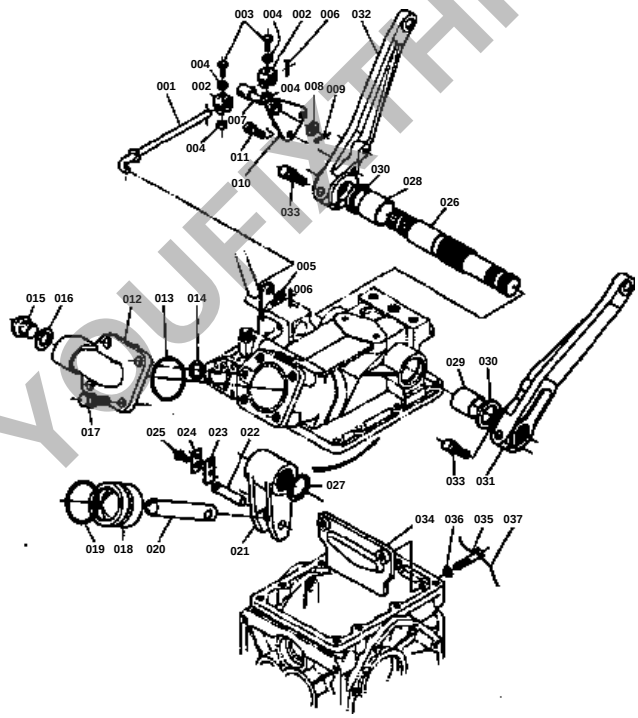

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

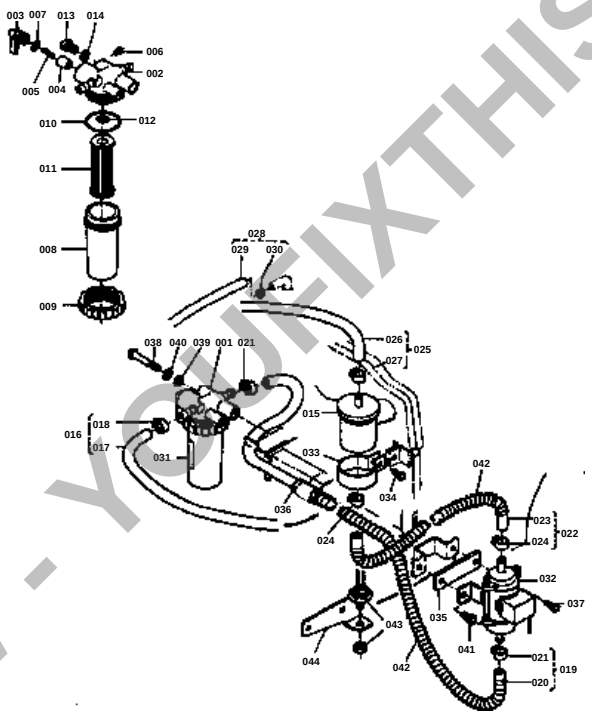

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 8 of 70 pages

The full manual includes:

- All 70 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota B6000 Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual