Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts at it is for the page with the part numbers. B7100HST-D is 4WD model B7100HST-E is 2WD model

Definition of column headings on part number pages:

REF.No → The number refering to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quanity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.
>= Your serial number should be greater than or equal to the number shown.
<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.
←→ The part shown will work for the older and later serial number.
The part shown is not interchangable with the other serial number.
← new for old
→ old for new

Remarks → Notes about this particulart part. Sometimes this may say except [FR] or [CA]

Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia


If the remarks column says for example EXCEPT [FR] this part works in all countries except France.
That means it will work here in the USA.


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Part No.	Description	Book
ENGINE	01T01	CRANKCASE TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T02	OIL PAN TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T03	PISTON/CRANKSHAFT TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T04	MAIN BEARING CASE TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T05	FLYWHEEL TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T06	CYLINDER HEAD TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T07	VALVE/ROCKER ARM TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T08	NOZZLE HOLDER TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T09	NOZZLE HOLDER [COMPONENT PARTS] TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T10	CYLINDER HEAD COVER TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T11	INLET MANIFOLD TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T13	EXHAUST MANIFOLD TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T15	CAMSHAFT TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T16	GEAR CASE TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T17	FUEL PUMP TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T18	INJECTION PUMP TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T19	INJECTION PUMP [COMPONENT PARTS] TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T20	SPEED CONTROL PLATE TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T21	GOVERNOR TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T22	UPPER GASKET KIT TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T23	LOWER GASKET KIT TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
ELECTRICAL SYSTEM	01T28	FAN/DYNAMO TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T29	DYNAMO [COMPONENT PARTS] TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
TRANSMISSION	01T35	CLUTCH TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
HYDRAULIC SYSTEM	01T73	HYDRAULIC GEAR PUMP TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T74	HYDRAULIC GEAR PUMP [COMPONENT PARTS] TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
LABELS	01T86	LABEL 1 TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
ENGINE	01T12	AIR CLEANER TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T14	MUFFLER TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T24	ACCELERATOR ROD TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

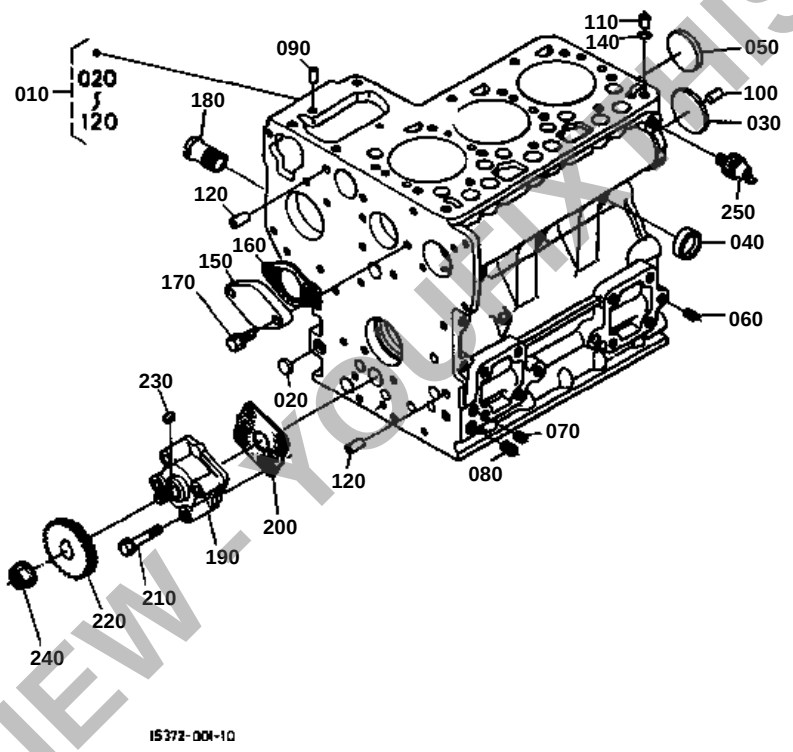

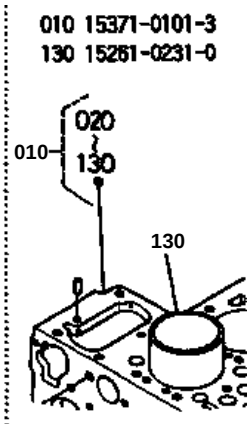

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	15371-01013	COMP.CRANKCASE	1	<=755814			0	0
010	15973-01012	COMP.CRANKCASE	1	>=755815	≠		31	68.2
020	15261-96170	PLUG	3				0.005	0.011
030	15261-96160	PLUG	1				0.02	0.044
040	15321-96260	CAP SEALING	5				0.014	0.0308
050	15221-03490	CAP SEALING	1				0.02	0.044
060	15261-96010	PLUG	6				0.002	0.0044
070	15521-96020	PLUG	3				0.003	0.0066
080	15521-96030	PLUG	1				0.007	0.0154
090	05012-00609	PIN STRAIGHT	2				0.003	0.0066
100	05012-00814	PIN STRAIGHT	2				0.006	0.0132
110	15221-33650	PIN PIPE	1				0.004	0.0088
120	15231-33960	PIN PIPE	2				0.001	0.0022
130	15261-02310	LINER CYLINDER	3	<=755814			0.376	0.8272
140	15221-33700	O RING	1				0.001	0.0022
150	15261-73910	COVER WATER	1				0.13	0.286
160	15261-73920	GASKET WATER COVER	1				0	0
170	01023-50618	BOLT	2				0.006	0.0132
180	15221-72880	PIPE WATER	1				0.115	0.253
190	15261-35010	ASSY PUMP OIL	1				0.32	0.704
200	15261-35150	GASKET OIL PUMP	1				0	0
210	15261-91022	BOLT	4				0.012	0.0264
220	15954-35662	GEAR OIL PUMP DRIVE	1				0.14	0.308
230	05712-00410	KEY FEATHER	1				0.001	0.0022
240	02771-50100	NUT FLANGE	1				0	0
250	15841-39010	SWITCH OIL	1				0.03	0.066


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

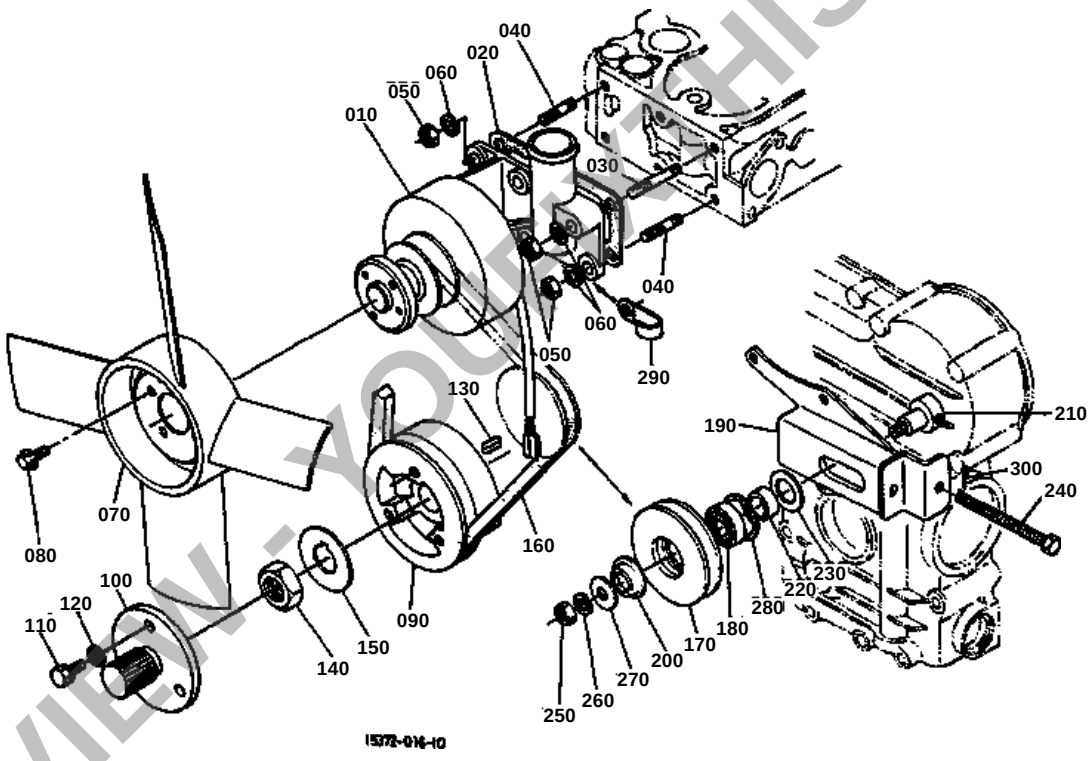


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

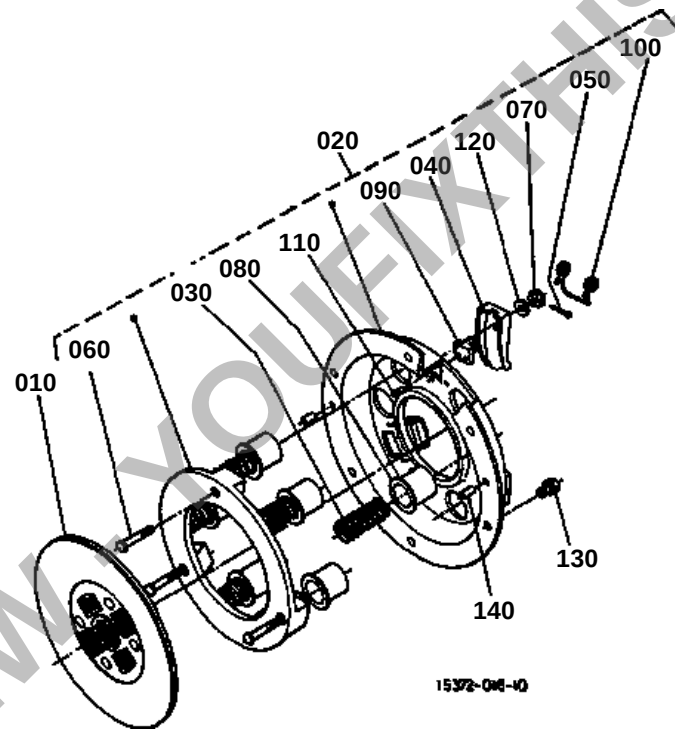

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

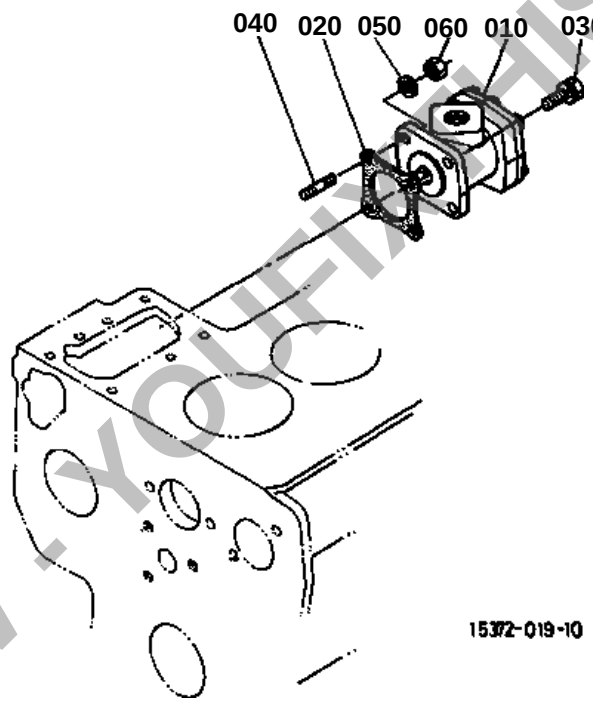

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	66704-17220	ASSY HUB WHEEL	2			[A] [CA]	0	0
010	67011-17300	ASSY HUB WHEEL	2			[AU]	0	0
020	66722-17300	ASSY HUB BOLT	2				0	0
030	66722-17150	HUB WHEEL	2				2.8	6.16
040	66704-17313	BOLT	12				0.049	0.1078
050	35340-11390	NUT	12			[A] [CA]	0.03	0.066
050	02074-50140	NUT	12			[AU]	0.021	0.0462
060	04512-50140	WASHER SPRING	12				0	0
070	04013-50140	WASHER PLAIN	12				0	0
080	63733-17250	SCREW	2				0.08	0.176
090	63512-17230	SPRING SET BOLT	2				0.014	0.0308
100	66621-17160	PIN AXLE	2				0.05	0.11
110	62131-17290	PIN	2				0.004	0.0088

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	66204-65100	ASSY 3-POINT LINKAGE	1				28	61.6
020	66204-65200	ASSY ROD 3-POINT	1				22	48.4
030	96316-06110	BRACKET TOP LINK	1				1.22	2.684
040	01123-51230	BOLT	2				0.04	0.088
050	66706-65332	LINK TOP	1				1	2.2
060	67211-42940	NIPPLE GREASE	2				0.001	0.0022
070	66706-65340	NUT TOP LINK	1				0.05	0.11
080	66706-65352	JOINT TOP LINK LH	1				0.73	1.606
090	66706-65362	JOINT TOP LINK RH	1				0.77	1.694
100	05411-00422	PIN SPRING	2				0.001	0.0022
110	34150-37640	PIN SET	7				0.06	0.132
120	31150-71360	PIN JOINT	2				0.166	0.3652
130	67401-65213	COMP.LINK LOWER	2				5.34	11.748
140	66713-34340	PIN SET	2				0.013	0.0286
150	05511-50425	PIN SPLIT	3				0.003	0.0066
160	66706-65232	ROD LIFT RH	1				0.315	0.693
170	66706-65240	ROD LIFT LOWER RH	1				0.5	1.1
180	66706-65250	NUT	1				0	0
190	66706-65260	SPRING	1				0.041	0.0902
200	05122-51240	PIN JOINT	3				0.039	0.0858
210	66706-65272	COMP.ROD LIFT LH	1				0.9	1.98
220	66706-65280	PIN LIFT	2				0.082	0.1804
230	67401-65290	BRACKET CHECK CHAIN	1				0.63	1.386
240	66204-65350	SPACER	2				0.12	0.264
250	02174-50120	NUT	2				0.01	0.022
260	04512-50120	WASHER SPRING	2				0.003	0.0066
270	67401-65370	JOINT CHAIN	4				0.1	0.22
280	66706-65380	PIN SET	4				0.021	0.0462
290	05511-50318	PIN SPLIT	2				0.001	0.0022
300	05515-51000	PIN SNAP	2				0	0
310	66706-65310	BOLT TURNBUCKLE RH	2				0.153	0.3366
320	66706-65320	BOLT TURNBUCKLE LH	2				0.153	0.3366
330	02112-50120	NUT	2				0.007	0.0154
340	96316-05580	TURNBUCKLE	2				0.14	0.308
350	66704-86110	PIN LOWER LINK	1				1.19	2.618
360	66204-65120	BOLT SET	1				0.055	0.121
370	66616-34550	CHAIN	1				0.66	1.452
380	02174-50140	NUT	1				0.014	0.0308
390	66204-65502	ASSY HITCH	1				3.6	7.92
400	66204-65606	COMP.HITCH	1				3.59	7.898
410	01153-51235	BOLT	3				0.039	0.0858
420	04512-50120	WASHER SPRING	3				0.003	0.0066
430	66204-65610	PIN HITCH	1	<=63885			0	0
430	67800-29320	PIN HITCH	1	>=63886	↔		0.2	0.44
440	31150-29730	PIN SPRING	1				0.044	0.0968
450	66204-86510	DRAWBAR	1			OPTION	3.06	6.732

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Part No.	Description	Book
FUEL SYSTEM	01T25	FUEL TANK/ACCELERATOR LEVER TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T26	FUEL FILTER TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
COOLING WATER SYSTEM	01T27	RADIATOR/OIL COOLER TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
ELECTRICAL SYSTEM	01T30	STARTER TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T31	STARTER [COMPONENT PARTS] TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T32	BATTERY TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T33	LIGHT TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T34	PANEL TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
TRANSMISSION	01T36	CLUTCH ROD TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T37	CLUTCH PEDAL TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T38	CLUTCH HOUSING TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T39	TRANSMISSION CASE TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T40	PTO COVER TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T41	CASE COVER TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T42	HST TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T43	HST [COMPONENT PARTS] TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T44	PROPELLER SHAFT TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T45	2ND SHAFT TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T46	3RD SHAFT/5TH SHAFT TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T47	4TH SHAFT TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T48	FRONT WHEEL DRIVE SHAFT TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T4901	REAR PTO TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T4902	MID PTO TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
SPEED CHANGE	01T50	NEUTRAL HOLDER TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T51	SPEED CONTROL PEDAL TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T52	SPEED CHANGE PLATE TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T53	HI-LO GEAR SHIFT LEVER TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T54	PTO GEAR SHIFT LEVER TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
REAR AXLE	01T55	REAR DIFFERENTIAL TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316
	01T56	REAR AXLE TRACTOR S.No.:B7100HST-D >=60164 B7100HST-E >=20025	100K0316


PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	15372-11010	ASSY CLEANER AIR	1				0	0
020	15241-11150	BODY AIR CLEANER	1				0.69	1.518
030	15221-94430	WASHER WITH RUBBER	1				0.004	0.0088
040	15221-92620	BOLT WING	1				0.04	0.088
050	15221-11410	COVER BAFFLE	1				0.104	0.2288
060	15221-11170	GASKET A/C COVER	1				0.01	0.022
070	15241-11160	COVER AIR CLEANER	1				0.255	0.561
080	66704-85820	HOOK A/C COVER	1				0.009	0.0198
090	15241-11350	CAP AIR CLEANER	1				0.48	1.056
100	15372-87452	LABEL AIR CLEANER	1				0.001	0.0022
110	15222-11220	ELEMENT AIR CLEANER	1				0.344	0.7568
120	15227-87480	LABEL ELEMENT A/C	1				0.004	0.0088
130	15381-11250	BAND AIR CLEANER	1	<=63115			0.21	0.462
130	15371-11252	BAND AIR CLEANER	1	>=63116	←		0.21	0.462
140	15371-11870	CUSHION	1				0.025	0.055
150	01222-50830	BOLT	1				0.013	0.0286
160	04512-50080	WASHER SPRING	1				0.001	0.0022
170	01123-50816	BOLT	2				0.011	0.0242
180	02114-50080	NUT	1				0.005	0.011
190	15371-11620	PIPE INLET	1				0.2	0.44
200	15221-11720	BAND PIPE	2				0.03	0.066
210	66711-54310	STAY AIR CLEANER	1				0.306	0.6732
220	01123-50820	BOLT	2				0.011	0.0242

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

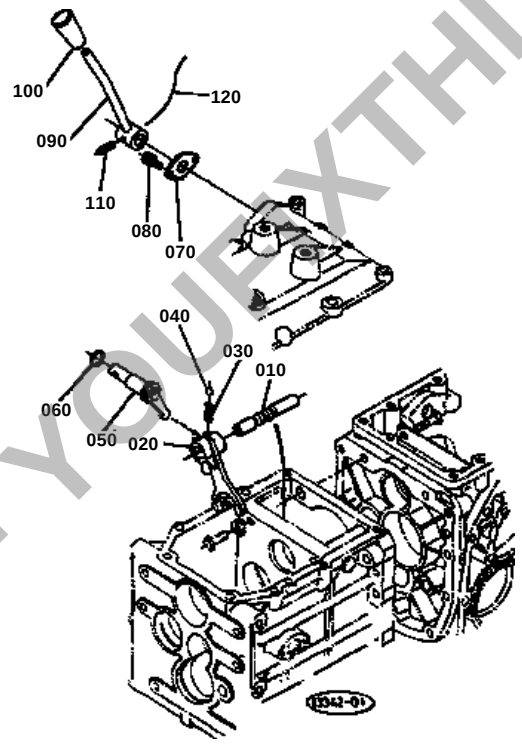

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 12 of 180 pages

The full manual includes:

- All 180 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota B7100HST-D, B7100HST-E Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual