Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts at it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number refering to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quanity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.
>= Your serial number should be greater than or equal to the number shown.
<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.
←→ The part shown will work for the older and later serial number.
The part shown is not interchangable with the other serial number.
← new for old
→ old for new

Remarks → Notes about this particulart part. Sometimes this may say except [FR] or [CA]

Note about Country Codes:


The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France.
That means it will work here in the USA.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

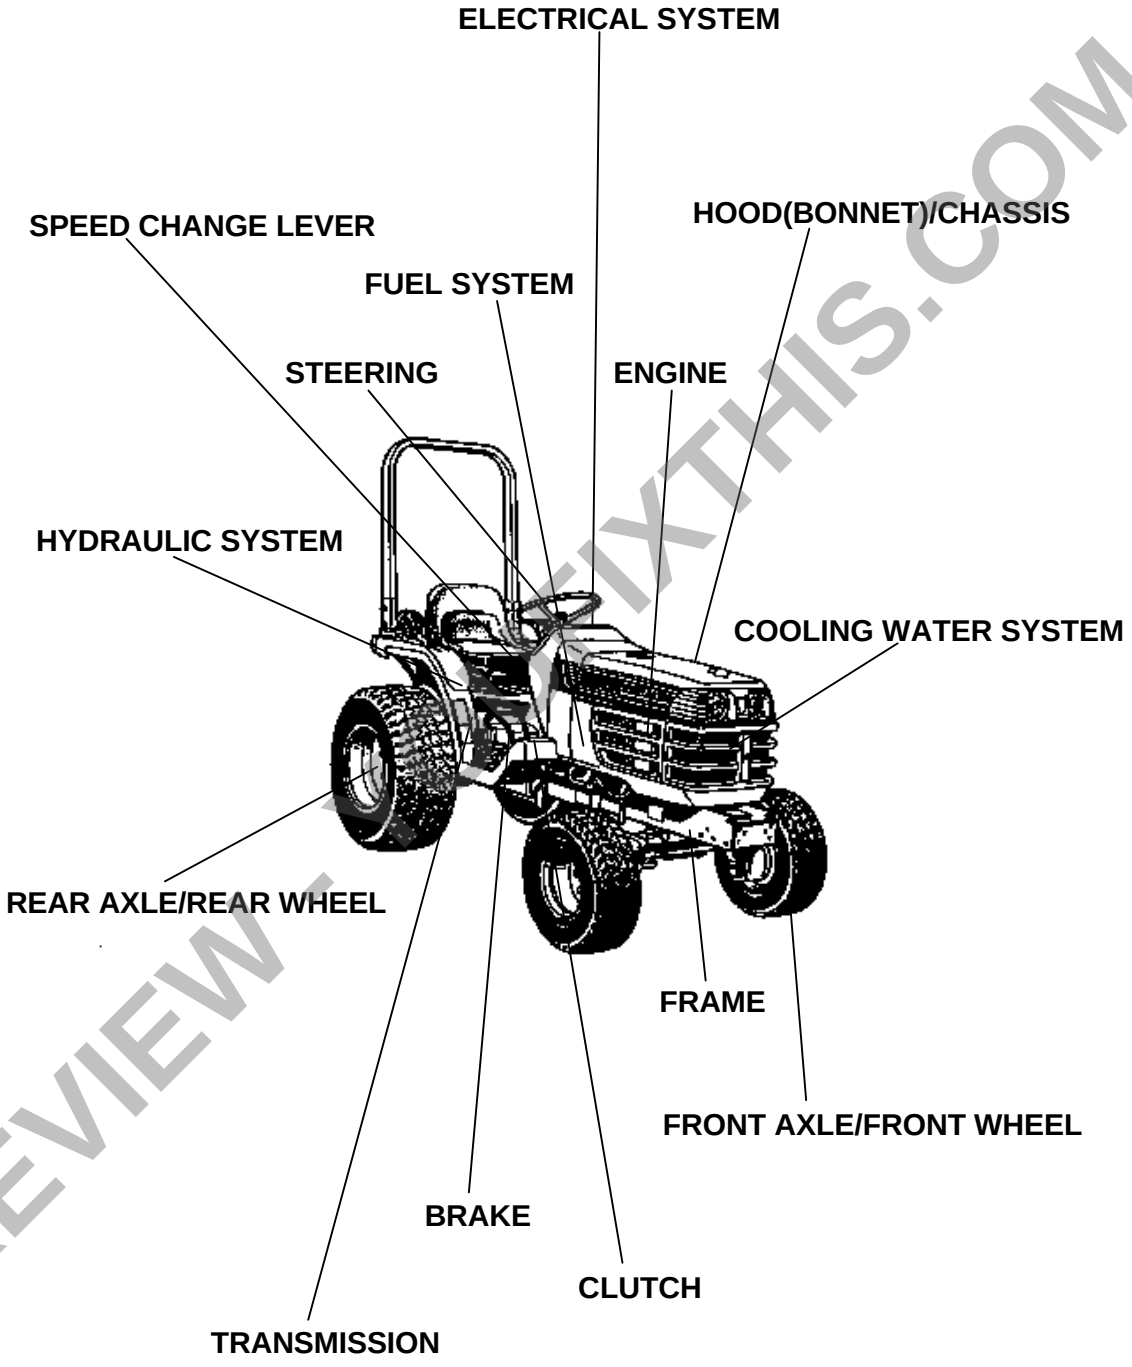


LABELS

ACCESSORIES

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

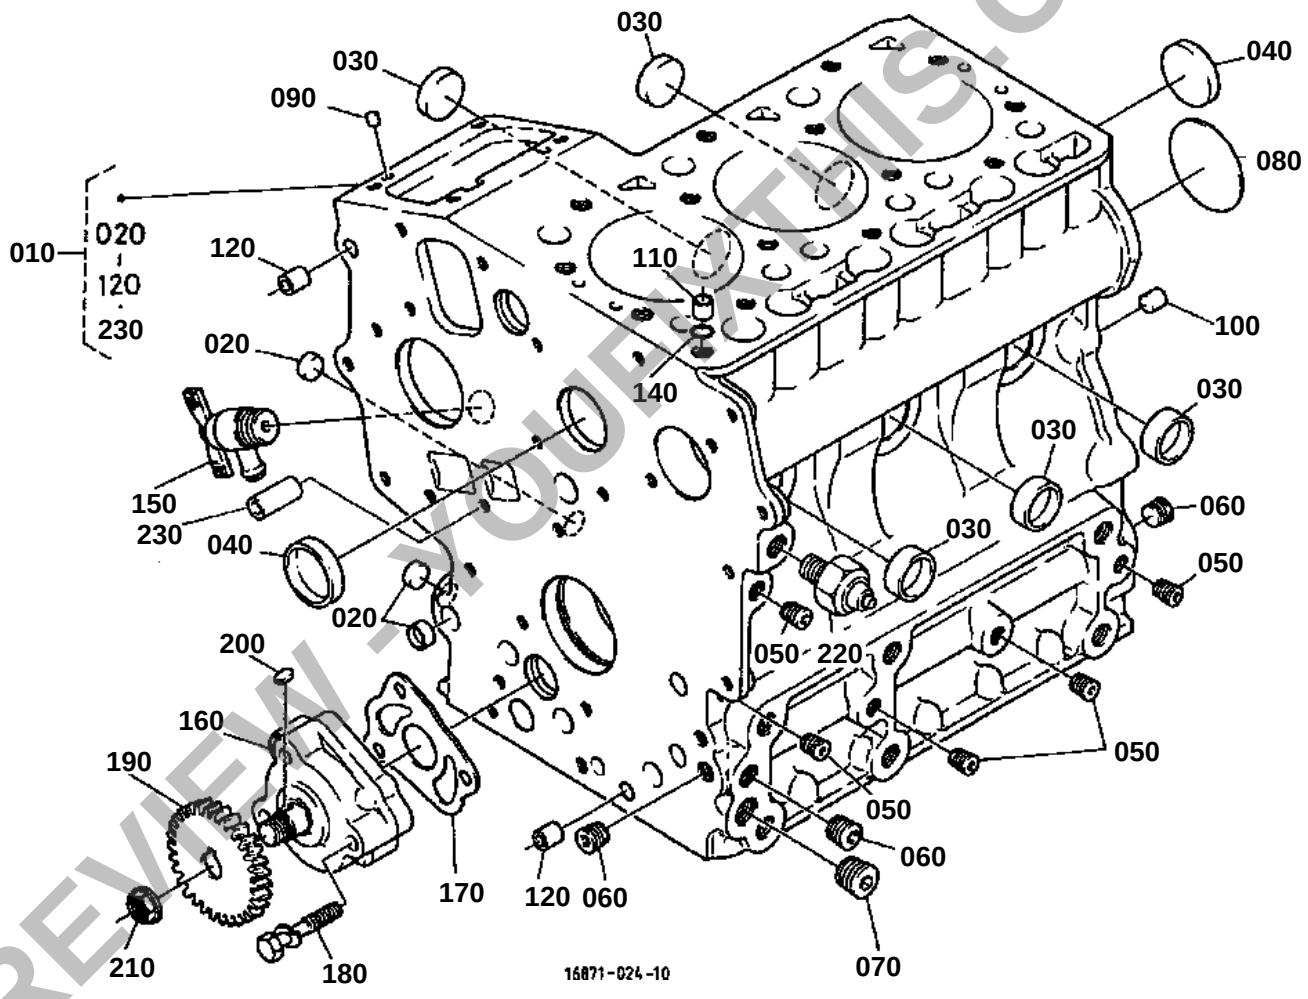

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


CRANKCASE

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	16813-01010	COMP.CRANKCASE	1				22	48.4
020	16851-96260	CAP SEALING	3				0.005	0.011
030	16851-96270	CAP SEALING	5				0.005	0.011
040	15451-96270	CAP SEALING	2				0.012	0.0264
050	15261-96010	PLUG	5				0.002	0.0044
060	15521-96020	PLUG	3				0.003	0.0066
070	15521-96030	PLUG	1				0.007	0.0154
080	15261-96160	PLUG EXPANSION	1				0.02	0.044
090	05012-00508	PIN STRAIGHT	2				0.001	0.0022
100	05012-00820	PIN STRAIGHT	2				0.008	0.0176
110	15221-33650	PIN PIPE	1				0.004	0.0088
120	15231-33960	PIN PIPE	2				0.001	0.0022
140	15221-33700	O RING	1				0.001	0.0022
150	15841-73020	ASSY COCK DRAIN	1				0.03	0.066
160	16851-35010	ASSY PUMP OIL	1				0.24	0.528
170	16851-35152	GASKET	1				0.001	0.0022
180	15841-91050	BOLT	3				0.01	0.022
190	15841-35660	GEAR OIL PUMP DRIVE	1				0.113	0.2486
200	05712-00408	KEY FEATHER	1				0.001	0.0022
210	02783-50100	NUT FLANGE	1				0.01	0.022
220	15531-39010	SWITCH OIL	1				0.032	0.0704
230	17331-59190	PIN PIPE	2				0.02	0.044


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

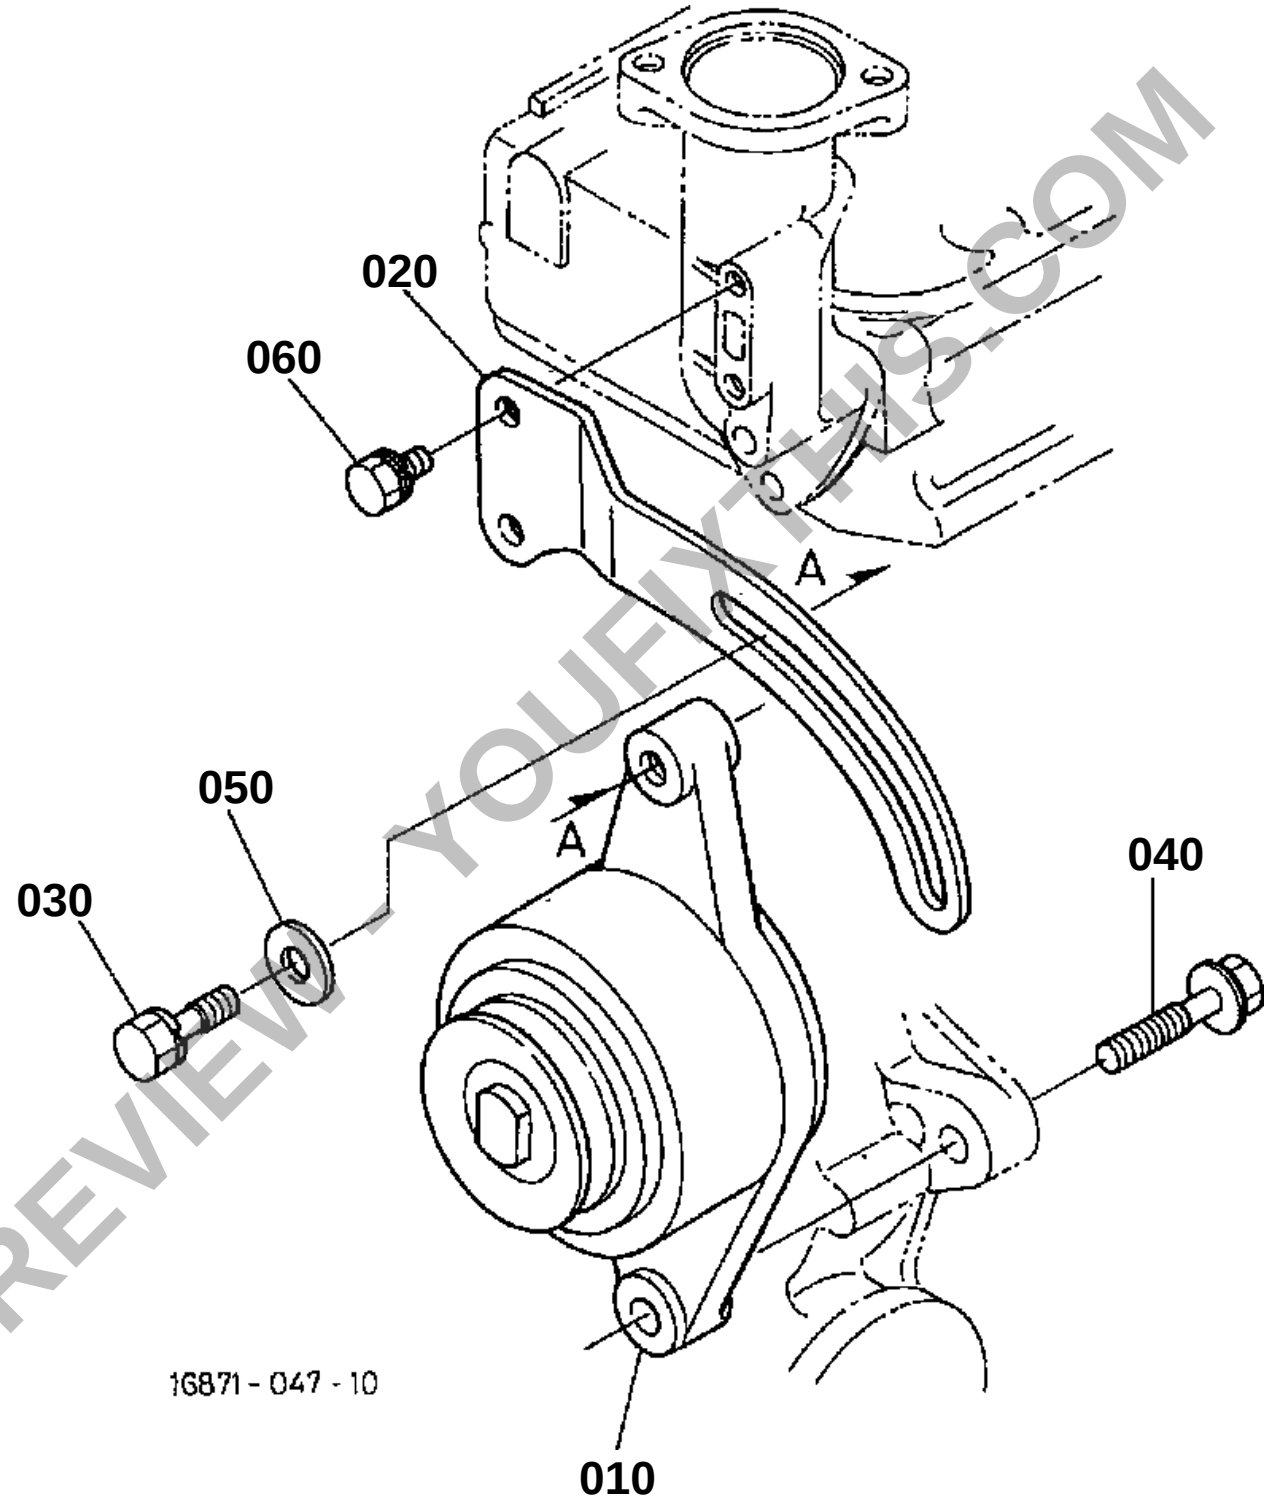


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

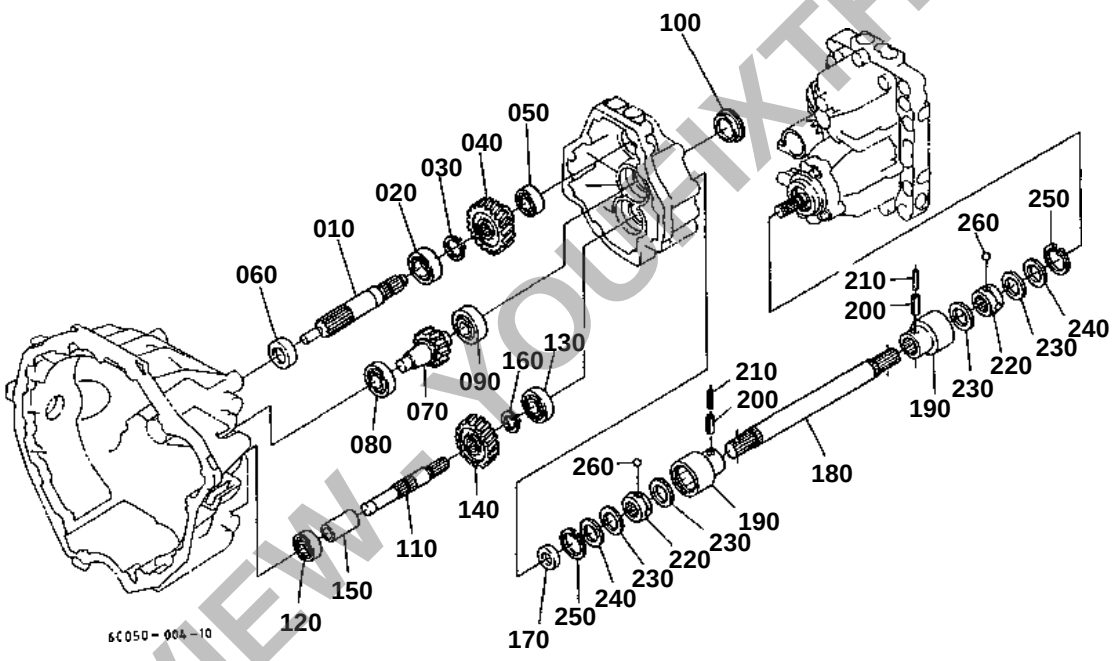


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

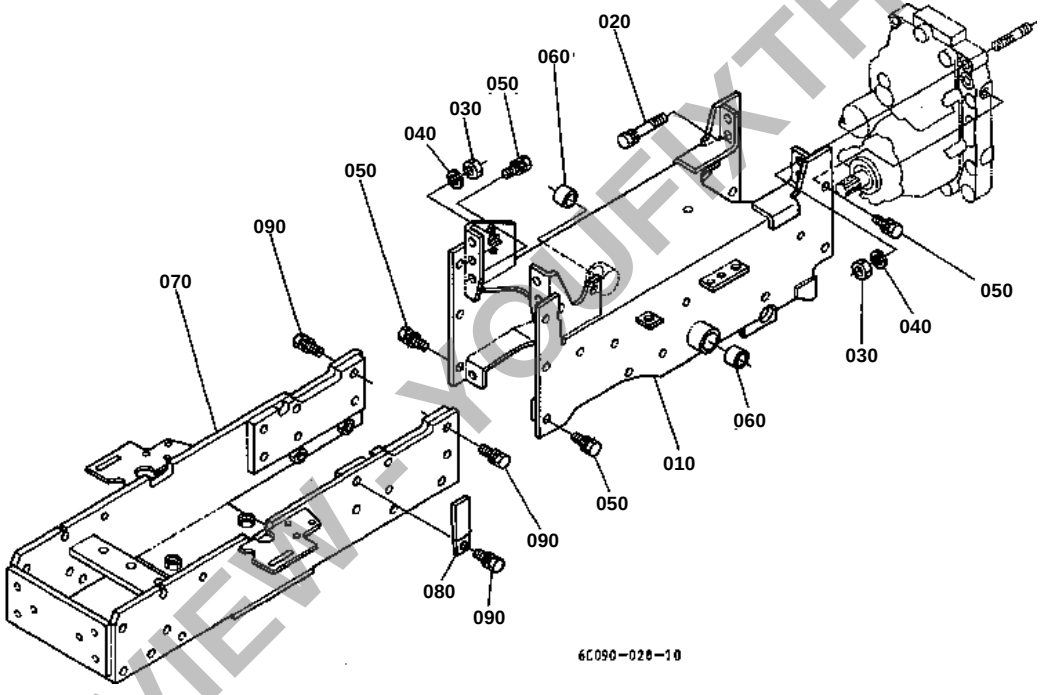

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

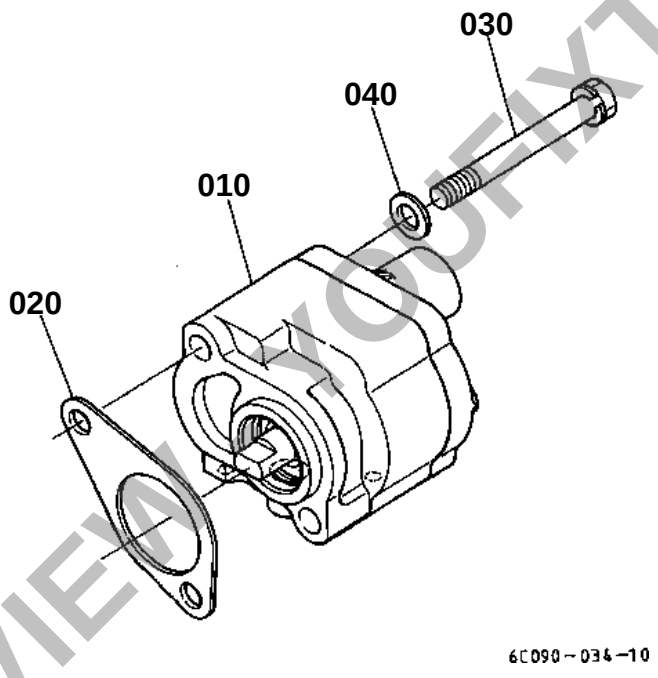

PREVIEW BY YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Part No.	Description	Book
TRANSMISSION	02T055	FRONT WHEEL DRIVE SHAFT	100K0314
	02T056	MID PTO	100K0314
SPEED CHANGE LEVER	02T057	SPEED CHANGE LEVER	100K0314
	02T058	SPEED CONTROL PEDAL	100K0314
	02T059	SPEED SET LEVER	100K0314
	02T060	RANGE GEAR SHIFT LEVER	100K0314
	02T061	PTO GEAR SHIFT LEVER	100K0314
	02T062	FRONT WHEEL DRIVE LEVER	100K0314
	02T063	REAR DIFFERENTIAL	100K0314
	02T064	DIFFERENTIAL LOCK PEDAL	100K0314
REAR AXLE/REAR WHEEL	02T065	REAR AXLE CASE	100K0314
	02T066	REAR AXLE	100K0314
	02T06701	REAR WHEEL (29 X 12.5-15)	100K0314
	02T06702	REAR WHEEL (8.3-16)	100K0314
	02T06703	REAR WHEEL (31 X 15.5-15)	100K0314
BRAKE	02T068	BRAKE	100K0314
	02T069	BRAKE PEDAL	100K0314
	02T070	PARKING BRAKE LEVER	100K0314
FRONT AXLE/FRONT WHEEL	02T071	FRONT DRIVE SHAFT	100K0314
	02T072	FRONT DIFFERENTIAL	100K0314
	02T073	FRONT AXLE CASE	100K0314
	02T074	FRONT BEVEL GEAR CASE	100K0314
	02T075	FRONT AXLE	100K0314
	02T07601	FRONT WHEEL (6-12)	100K0314
	02T07602	FRONT WHEEL (21 X 8.00-10)	100K0314
FRAME	02T077	FRAME	100K0314
STEERING	02T078	KNUCKLE ARM/TIE ROD	100K0314
	02T079	DRAG LINK	100K0314
	02T080	STEERING WHEEL	100K0314
	02T081	STEERING	100K0314
	02T082	STEERING [COMPONENT PARTS]	100K0314
HYDRAULIC SYSTEM	02T085	HYDRAULIC OIL LINE (OIL COOLER)	100K0314
	02T086	HYDRAULIC OIL LINE (T/M)	100K0314
	02T087	HYDRAULIC OIL LINE (SUCTION/DELIVERY)	100K0314
	02T088	FLOW DIVIDING VALVE [COMPONENT PARTS]	100K0314
	02T089	HYDRAULIC OIL LINE (HST)	100K0314
	02T090	OIL COOLER	100K0314
	02T091	HYDRAULIC CYLINDER CASE	100K0314
	02T092	CONTROL VALVE	100K0314
	02T093	CONTROL VALVE [COMPONENT PARTS]	100K0314
	02T094	HYDRAULIC CONTROL LEVER	100K0314
	02T095	TOP LINK	100K0314
	02T096	LOWER LINK	100K0314
	02T097	LIFT ROD	100K0314
HOOD(BONNET)/CHASSIS	02T098	HOOD (BONNET)	100K0314
	02T099	FRONT GRILLE	100K0314
	02T100	SIDE COVER	100K0314
	02T101	FENDER LH	100K0314
	02T102	FENDER RH	100K0314
	02T103	SEAT STAY	100K0314
	02T104	SEAT	100K0314
	02T105	STEP	100K0314
	02T106	ROPS	100K0314
LABELS	02T107	LABEL	100K0314
ACCESSORIES	02T108	ACCESSORIES AND SERVICE PARTS	100K0314

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	6C090-36300	ASSY PUMP HYDRAULIC	1				1.2	2.64
020	6A100-37230	BUSH	2				0.005	0.011
030	05012-00814	PIN STRAIGHT	2				0.006	0.0132
040	6C090-37200	COMP.GEAR HYD.PUMP	1	<=798015			0	0
040	6C090-37202	COMP.GEAR HYD.PUMP	1	>=798016	≠		0.3	0.66
050	6C040-36350	PLATE SIDE	1	<=781718			0.023	0.0506
050	6C040-36352	PLATE SIDE	1	>=781719	≠		0.023	0.0506
060	6C040-36342	RING DOUBLE	1				0.003	0.0066
070	6A100-37402	COMP.COVER	1				0.23	0.506
080	6A100-37230	BUSH	2				0.005	0.011
090	01754-51030	BOLT FLANGE	2				0.03	0.066
100	31381-76390	SEAL OIL	1				0.01	0.022
110	04611-00300	CIR CLIP INTERNAL	1				0.004	0.0088

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	6C050-14290	GEAR	1			14T	0.115	0.253
020	04612-00180	CIRCLIP EXTERNAL	1				0.001	0.0022
030	6C090-14210	GEAR-SHAFT SECOND	1			13-18T	0.8	1.76
040	52300-16180	BEARING	1				0.05	0.11
050	61361-14280	BEARING BALL	1				0.09	0.198
060	6C050-14280	GEAR	1			27T	0.32	0.704
070	04612-00190	CIRCLIP EXTERNAL	1				0.001	0.0022
080	6C090-14310	SHAFT THIRD	1				0.35	0.77
090	08101-06204	BEARING BALL	1				0.102	0.2244
100	08101-06304	BEARING BALL	1				0.146	0.3212
110	6C090-14320	GEAR	1			17-13T	0.44	0.968
120	6C050-14520	COUPLING	1				0.099	0.2178
130	6C050-14410	GEAR-SHAFT FOURTH	1			14T	0.635	1.397
140	08101-06205	BEARING BALL	1				0.14	0.308
150	61361-14280	BEARING BALL	1				0.09	0.198
160	6C050-14450	GEAR	1			18T	0.28	0.616
170	6C050-14520	COUPLING	1				0.099	0.2178

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	6C040-51118	COMP.FRAME CENTER	1				15	33
020	01123-51265	BOLT	2				0.063	0.1386
030	02174-50120	NUT	8				0.01	0.022
040	04512-60120	WASHER SPRING	8				0.005	0.011
050	01123-51230	BOLT	12				0.04	0.088
060	08511-02515	BUSH	2				0.012	0.0264
070	6C090-51210	COMP.FRAME FRONT	1				23.6	51.92
080	35340-29380	CLAMP CORD	1				0.01	0.022
090	01133-51035	BOLT	12				0.03	0.066

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 12 of 233 pages

The full manual includes:

- All 233 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota B7300HSD Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual