Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts at it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number refering to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quanity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.
>= Your serial number should be greater than or equal to the number shown.
<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.
←→ The part shown will work for the older and later serial number.
The part shown is not interchangable with the other serial number.
← new for old
→ old for new

Remarks → Notes about this particulart part. Sometimes this may say except [FR] or [CA]

Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.


Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France.
That means it will work here in the USA.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

FREQUENTLY USED ITEMS

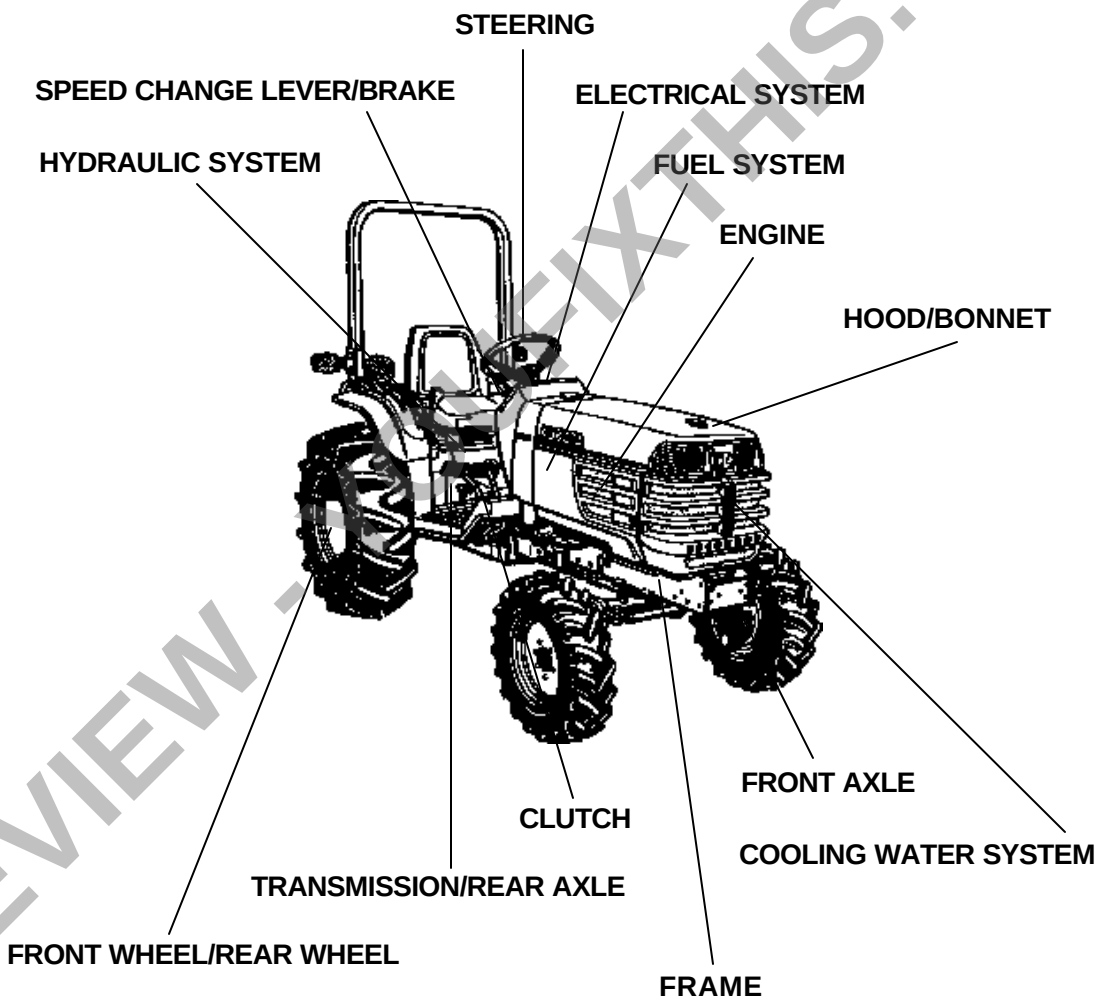

LABELS

OPTION

ACCESSORIES AND SERVICE PARTS


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new


REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	16281-01040	COMP.CRANKCACE	1	<=2E0004			46	101.2
010	16281-01042	COMP.CRANKCASE	1	>=3L0007	¬	NOT SALE SEE NOTE	0	0
010	16281-01043	COMP.CRANKCASE	1	>=3N0007	¬	NOT SALE SEE NOTE	46	101.2
010	16281-01044	COMP.CRANKCASE	1		1		46	101.2
020	15451-96270	CAP SEALING	6				0.001	0.0022
030	15221-03490	CAP SEALING	1				0.02	0.044
040	15261-96010	PLUG	4				0.002	0.0044
050	16683-96020	PLUG	1				0.07	0.154
060	16241-96010	PLUG	3				0.007	0.0154
070	15521-96020	PLUG	2				0.003	0.0066
080	17391-96160	PLUG EXPANSION	3				0.003	0.0066
090	16271-96160	PLUG EXPANSION	1				0.025	0.055
100	16225-94510	PIN STRAIGHT	2				0	0
100	05012-00508	PIN STRAIGHT	2		«		0.001	0.0022
110	16221-94530	PIN STRAIGHT	2				0.006	0.0132
110	05012-00814	PIN STRAIGHT	2		«		0.006	0.0132
120	16221-94520	PIN STRAIGHT	2				0.005	0.011
130	15231-33960	PIN PIPE	2				0.001	0.0022
140	16241-33650	PIN PIPE	1				0.002	0.0044
150	16241-96262	PLUG	1				0.007	0.0154
160	16221-56280	PIN START SPRING	1				0.005	0.011
165	16251-24060	COMP SHAFT IDLE	1				0.18	0.396
170	16251-24260	SHAFT IDLE GEAR	1			NOT SALE	0.18	0.396
180	15521-93610	SCREW SET	1				0.002	0.0044
190	16271-55350	BUSH GOVERNOR GEAR	1				0.06	0.132
200	15469-33610	PLUG	1				0.008	0.0176
210	15021-33660	GASKET	1				0.001	0.0022
220	15221-33700	O RING	1				0.001	0.0022
230	15321-73340	PIPE WATER RETURN	1				0.016	0.0352
240	01754-50610	BOLT FLANGE	1	>=3L0007			0.006	0.0132
250	15601-96650	GASKET	1	>=3L0007			0.001	0.0022

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

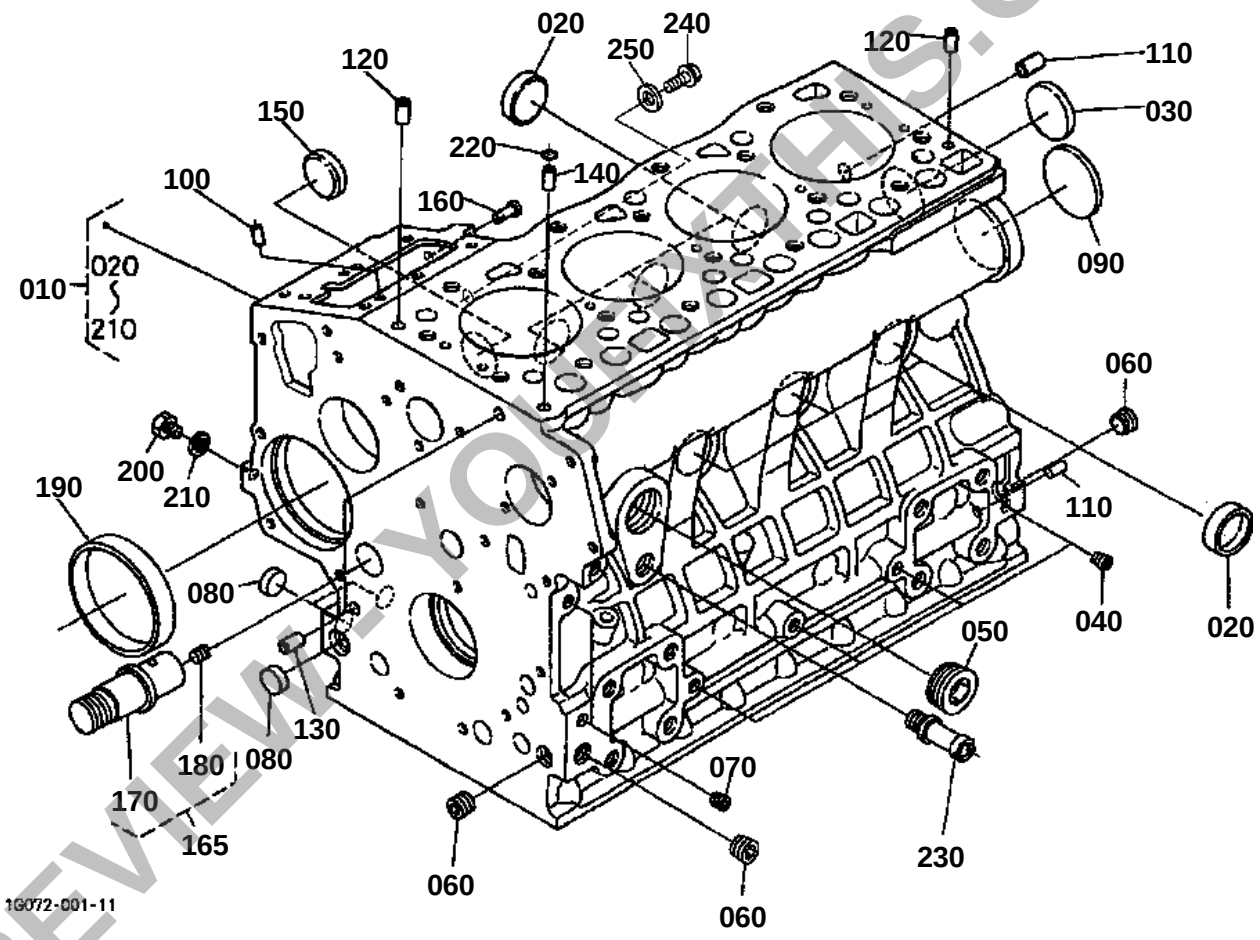


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

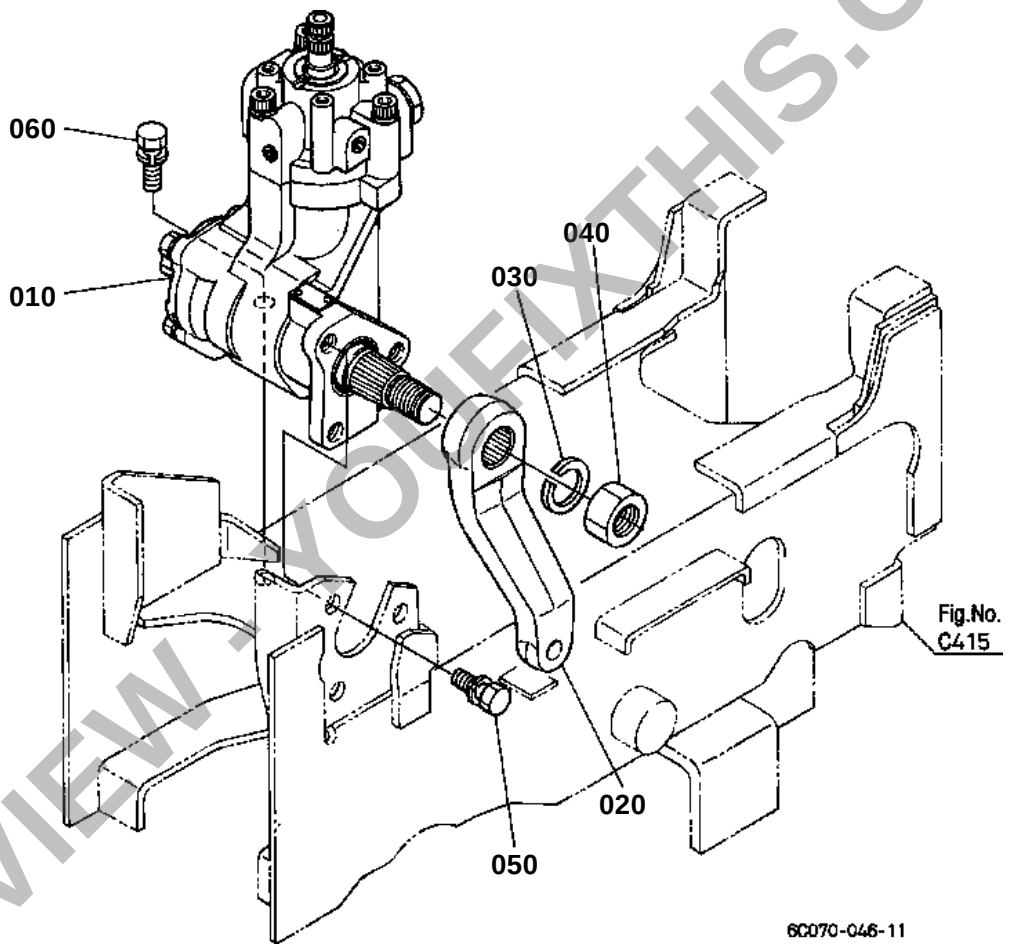


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

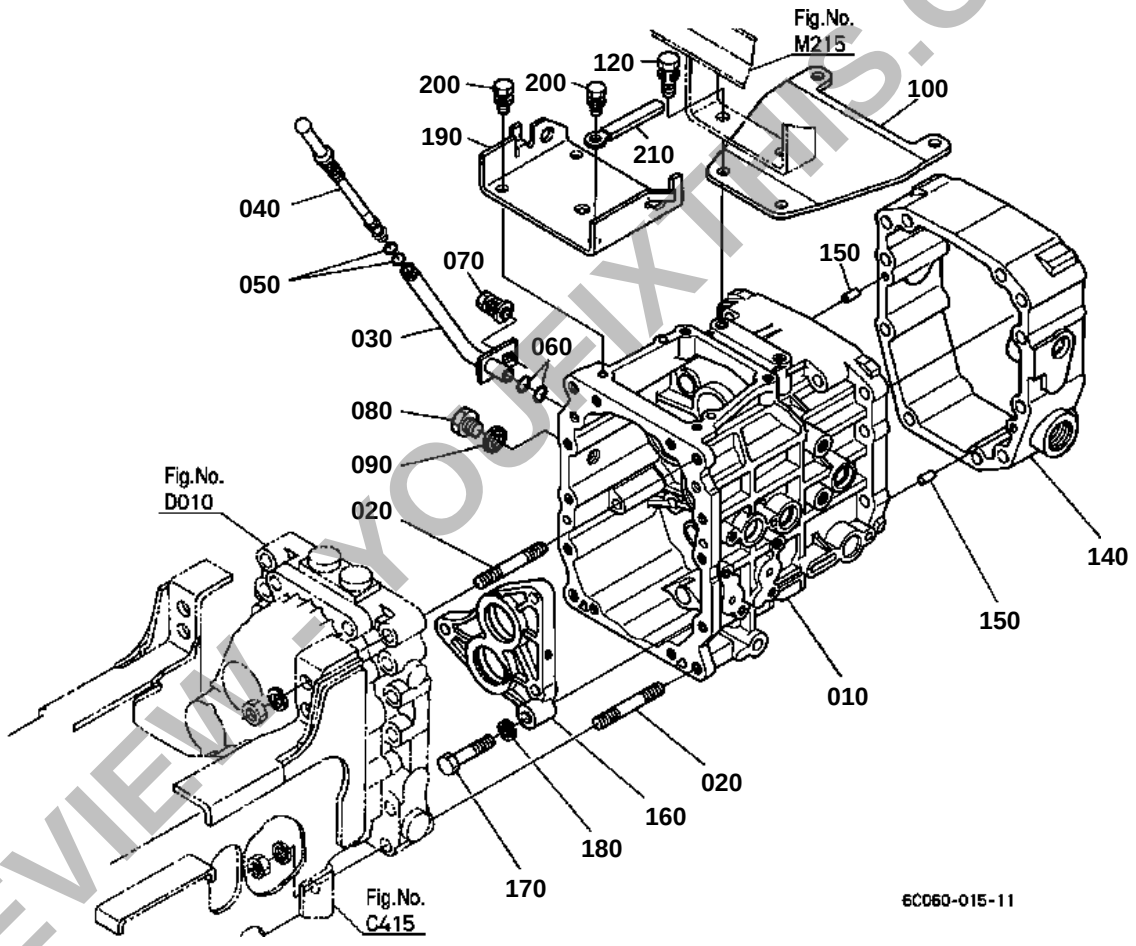


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

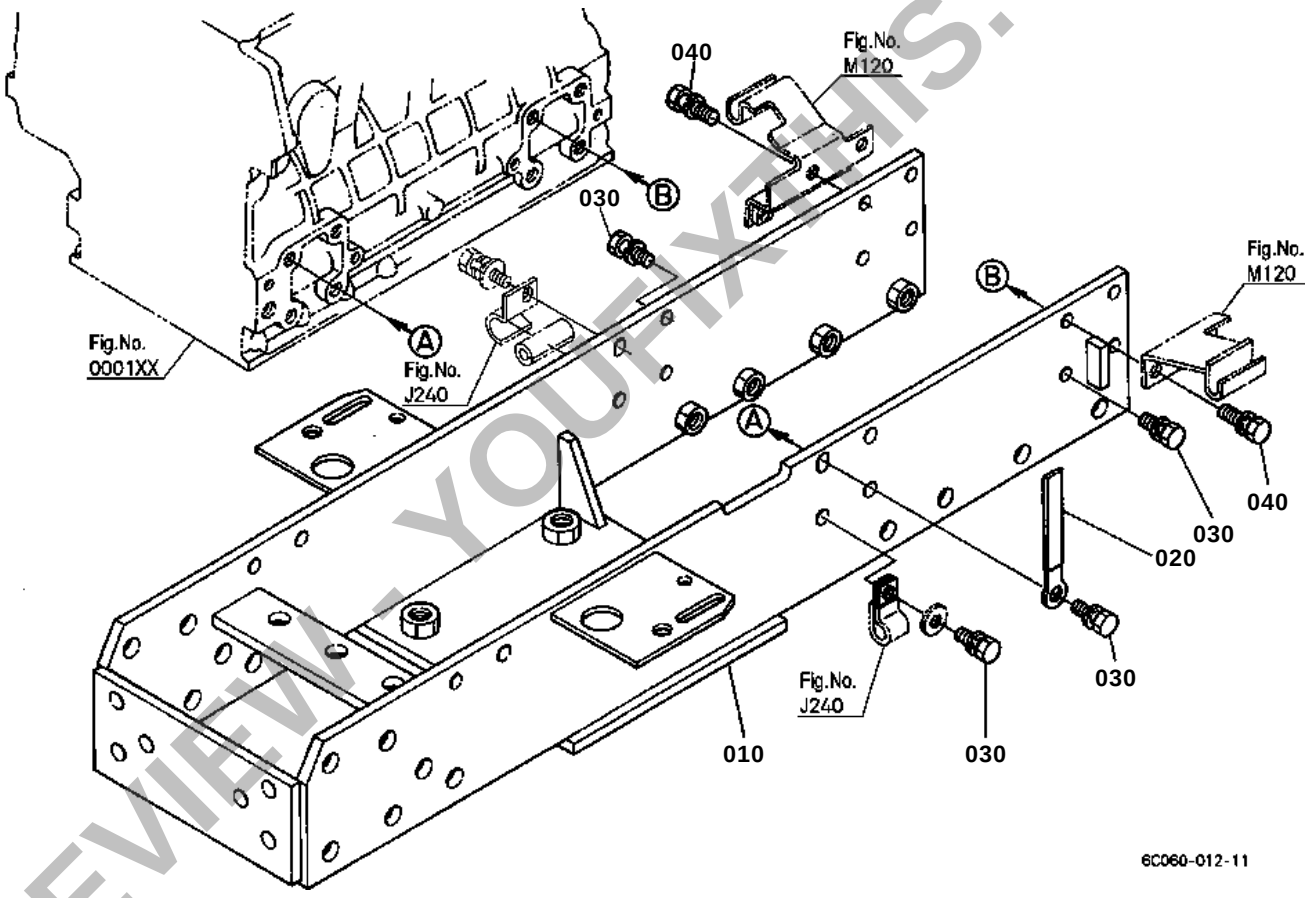


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

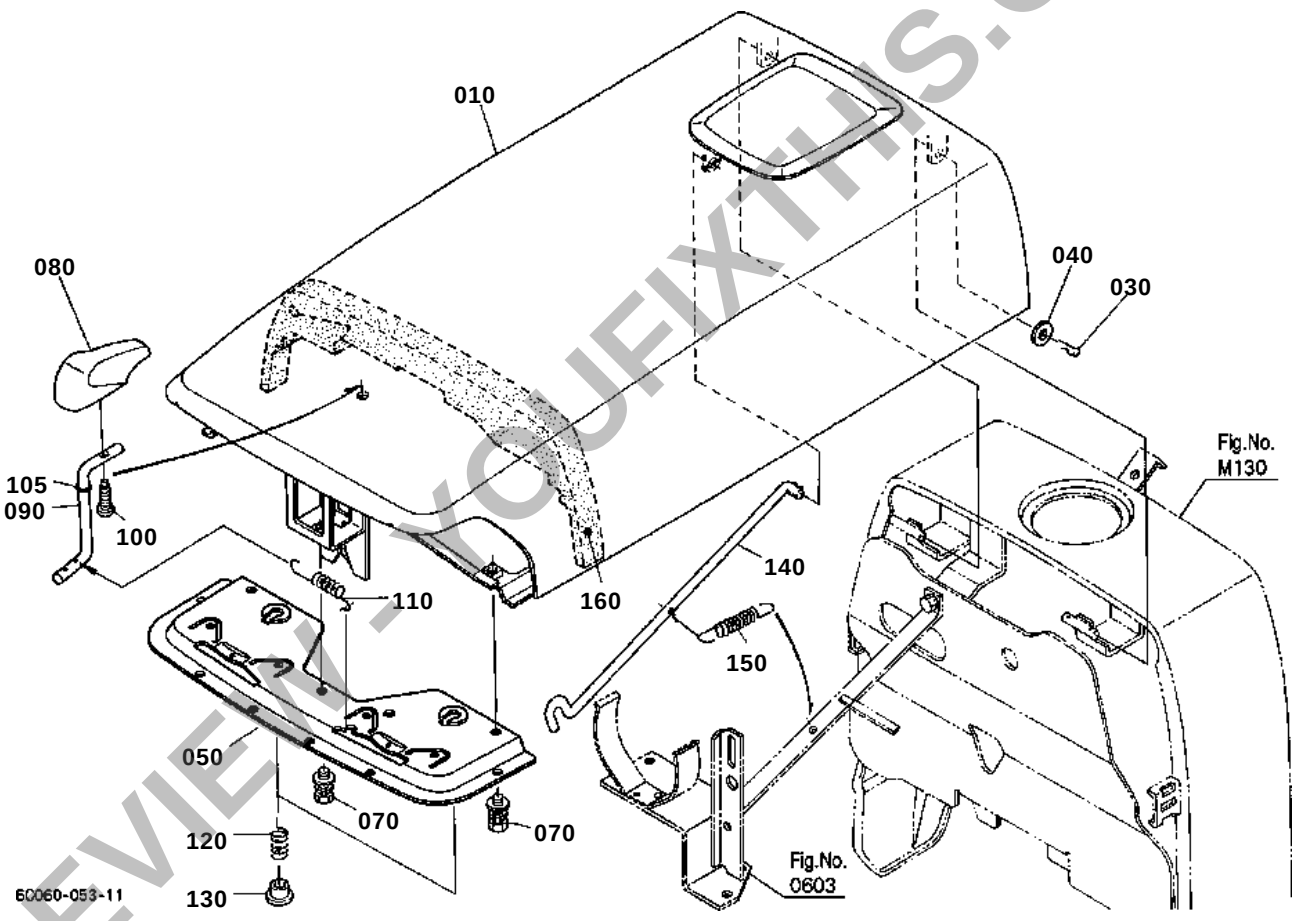

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

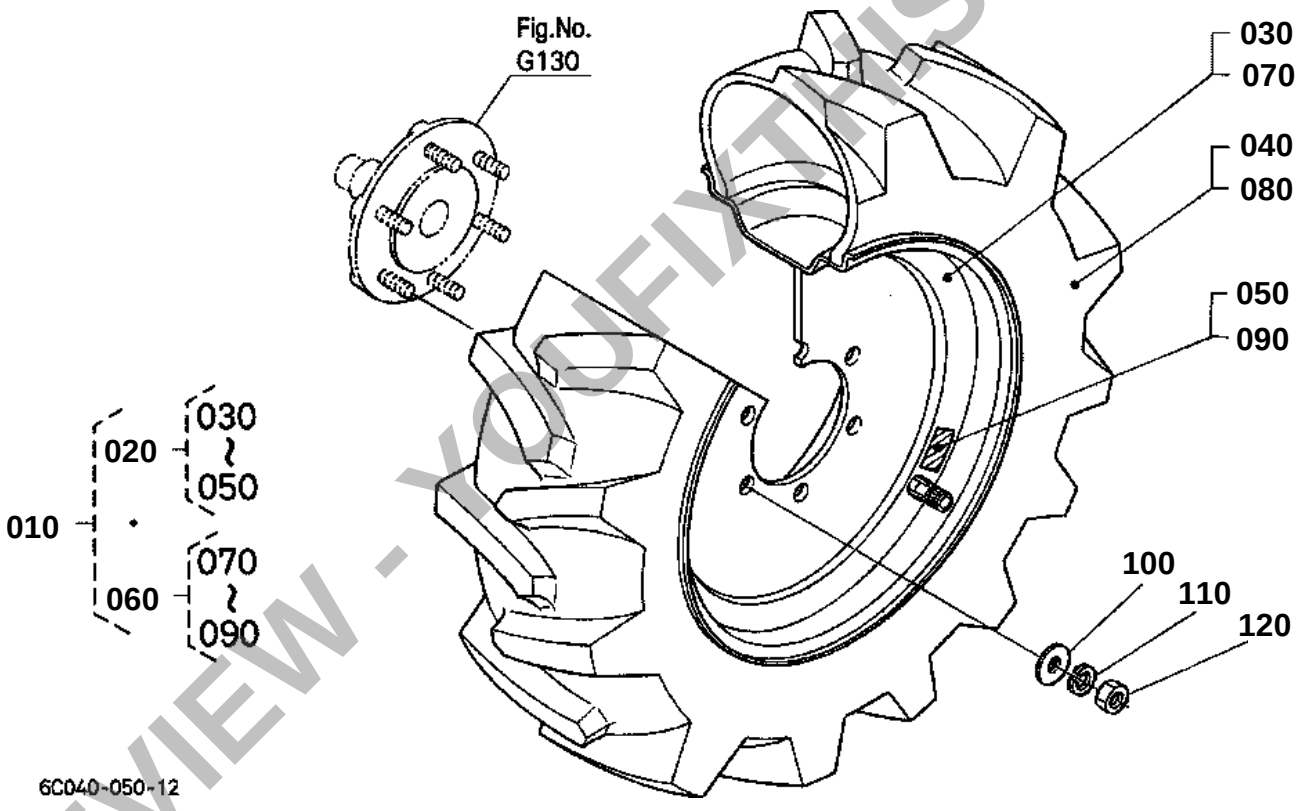

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

Item	Part No.	Description	Book
ELECTRICAL SYSTEM	01B10103	SWITCH [EXCEPT MID PTO TYPE]	100K0716
	01B10104	SWITCH [EXCEPT MID PTO TYPE]	100K0716
	01B115	PANEL BOARD	100K0716
	01B120	PANEL BOARD [COMPONENT PARTS]	100K0716
	01B301	HEAD LIGHT	100K0716
	01B302	HAZARD LIGHT	100K0716
	01B304	TAIL LIGHT	100K0716
	01B310	WINKER LAMP	100K0716
	01B501	ELECTRICAL WIRING	100K0716
CLUTCH	01C101	CLUTCH	100K0716
	01C110	CLUTCH ROD	100K0716
	01C301	CLUTCH PEDAL	100K0716
	01C401	CLUTCH HOUSING	100K0716
FRAME	01C415	CENTER FRAME	100K0716
	01C417	SUB FRAME	100K0716
TRANSMISSION/REAR AXLE	01C420	TRANSMISSION CASE	100K0716
	01C425	DIFFERENTIAL GEAR CASE	100K0716
	01C427	REAR AXLE CASE	100K0716
	01D001	CLUTCH SHAFT	100K0716
	01D005	PROPELLER SHAFT	100K0716
	01D010	HST	100K0716
	01D01501	HST [COMPONENT PARTS]	100K0716
	01D01502	HST [COMPONENT PARTS]	100K0716
	01D01503	HST [COMPONENT PARTS]	100K0716
	01D103	FRONT SHAFT	100K0716
	01D135	PTO SHAFT	100K0716
	01D13701	MID PTO [MID PTO TYPE]	100K0716
	01D13702	MID PTO [EXCEPT MID PTO TYPE]	100K0716
	01D140	REAR DIFFERENTIAL	100K0716
	01D143	FRONT WHEEL PROPELLER SHAFT	100K0716
	01D149	2ND SHAFT	100K0716
	01D152	3RD SHAFT	100K0716
	01D155	4TH SHAFT	100K0716
	01D301	REAR AXLE	100K0716
SPEED CHANGE LEVER/BRAKE	01E001	BRAKE	100K0716
	01E005	BRAKE ROD	100K0716
	01E015	PARKING BRAKE LEVER	100K0716
	01F030	SPEED SET LEVER	100K0716
	01F107	NEUTRAL HOLDER LINK	100K0716
	01F108	SPEED CONTROL PEDAL	100K0716
	01F110	RANGE GEAR SHIFT LEVER	100K0716
	01F113	FRONT WHEEL DRIVE LEVER	100K0716
	01F12501	PTO GEAR SHIFT LEVER [MID PTO TYPE]	100K0716
	01F12502	PTO GEAR SHIFT LEVER [EXCEPT MID PTO TYPE]	100K0716
	01F143	HYDRAULIC CONTROL LEVER	100K0716
	01F201	BRAKE PEDAL	100K0716
	01F205	DIFFERENTIAL LOCK PEDAL	100K0716
FRONT AXLE	01G101	FRONT AXLE FRAME	100K0716
	01G105	FRONT AXLE CASE	100K0716
	01G115	FRONT DIFFERENTIAL	100K0716
	01G120	DIFFERENTIAL GEAR SHAFT	100K0716

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


OLD PARTS

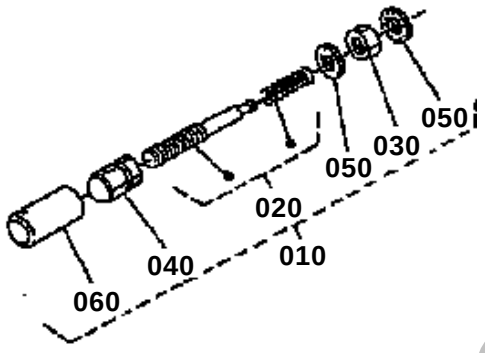

1G072-803-10

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

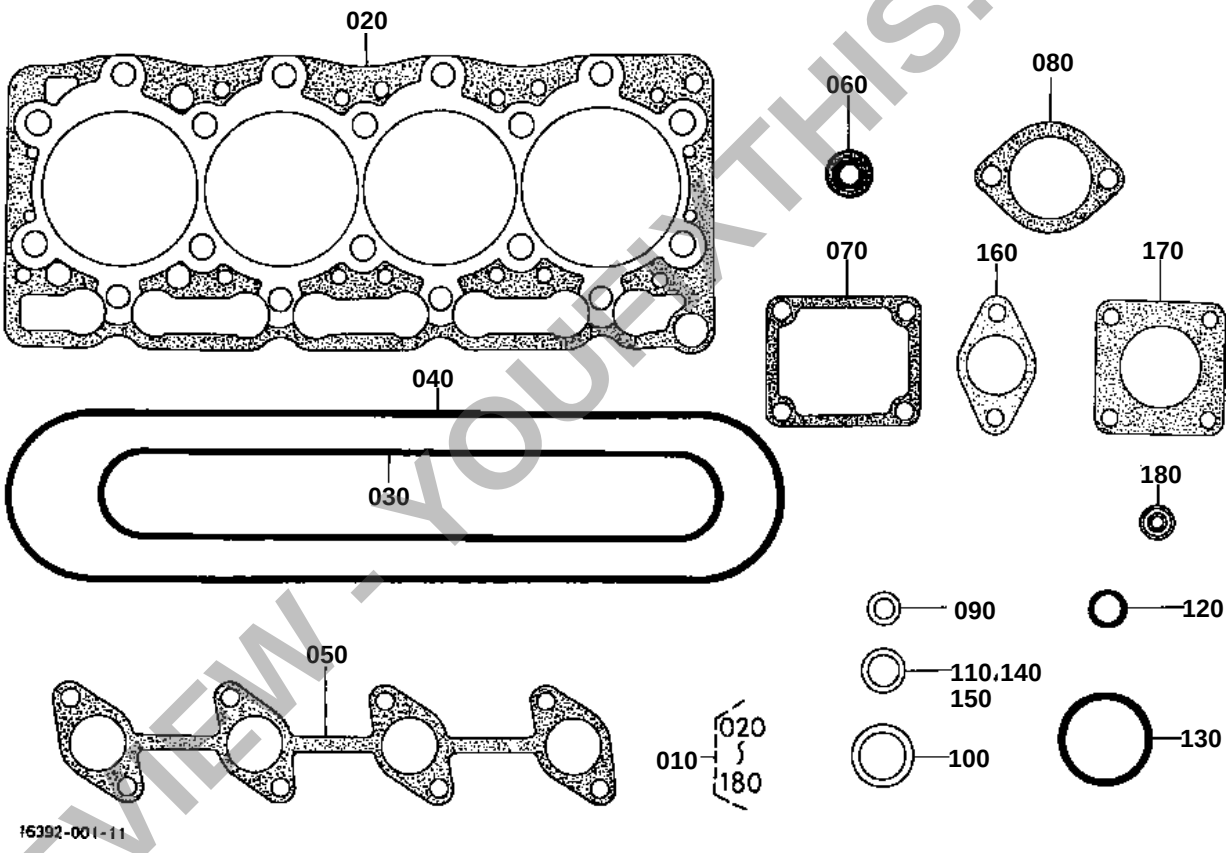

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	6C070-59210	ASSY STARTER	1				3.2	7.04
020	6C070-82610	ARMATURE	1				0.8	1.76
030	6C070-82620	ASSY SHAFT	1				0.52	1.144
040	99999-99999	BLANK	0				0	0
050	99999-99999	BLANK	0				0	0
060	6C040-82650	GEAR PLANETARY	3				0.016	0.0352
070	6C040-82660	CLUTCH OVER RUNNING	1				0.3	0.66
070	16853-63040	CLUTCH OVER RUNNING	1		«		0.25	0.55
080	6C040-82670	STOPPER	1				0.004	0.0088
090	6C070-82680	GASKET	1				0.004	0.0088
100	6C040-82690	BALL	1				0.001	0.0022
110	6C070-82700	YOKE	1				0.65	1.43
120	99999-99999	BLANK	0				0	0
130	6C070-82720	ASSY HOLDER BRUSH	1				0.07	0.154
140	99999-99999	BLANK	0				0	0
150	99999-99999	BLANK	0				0	0
160	6C070-82750	ASSY BRACKET REAR	1				0.16	0.352
170	6C040-82760	BUSH	1				0.005	0.011
180	6C070-82770	ASSY BRACKET FRONT	1				0.57	1.254
190	15852-63240	BUSH	1				0.006	0.0132
200	6C070-82780	BOLT	2				0.012	0.0264
210	6C070-82790	LEVER FORK	1				0.018	0.0396
220	6C040-82800	ASSY SWITCH MAGNETIC	1				0.63	1.386
230	15852-93310	SCREW PAN-HEAD	1				0.02	0.044

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	6C070-51117	COMP.FRAME CENTER	1				22	48.4
020	01123-51265	BOLT	2				0.063	0.1386
030	02174-50120	NUT	8				0.01	0.022
040	04512-60120	WASHER SPRING	8				0.005	0.011
050	01123-51230	BOLT	12				0.04	0.088
060	08511-02515	BUSH	2				0.012	0.0264
070	01155-50845	BOLT	2				0.02	0.044
080	02114-50080	NUT	2				0.005	0.011

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	6C050-14313	SHAFT	1				0.32	0.704
020	08101-06303	BEARING BALL	1				0.112	0.2464
030	08101-06304	BEARING BALL	1				0.146	0.3212
040	6C040-14320	GEAR	1			17T	0.33	0.726
050	6C040-14333	GEAR	1			13T	0.17	0.374
060	6C040-14353	BEARING NEEDLE	1				0.03	0.066
070	67111-14160	COLLAR	1				0.01	0.022
080	6C040-14362	COLLAR	1				0.042	0.0924
090	6C050-14520	COUPLING	1				0.099	0.2178


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

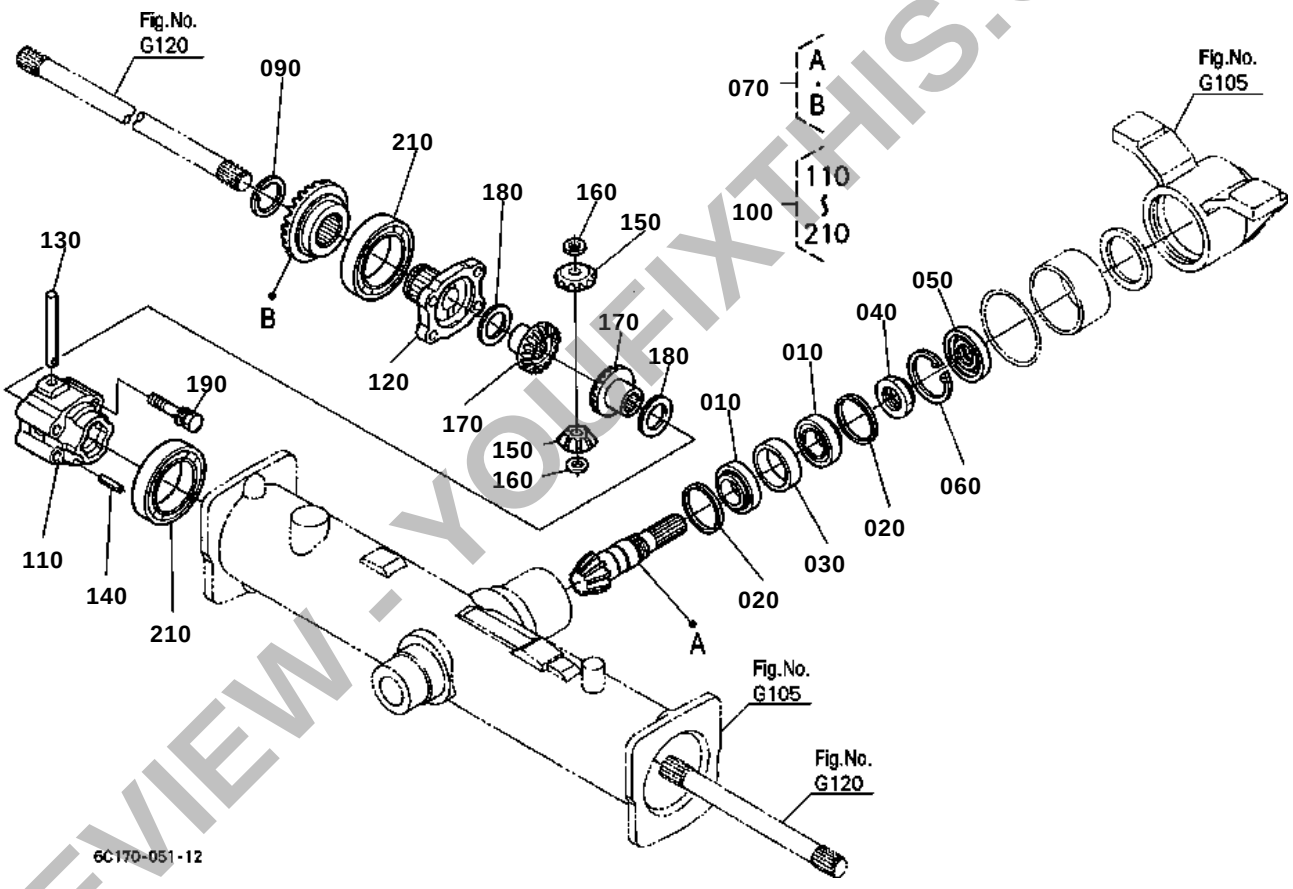


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

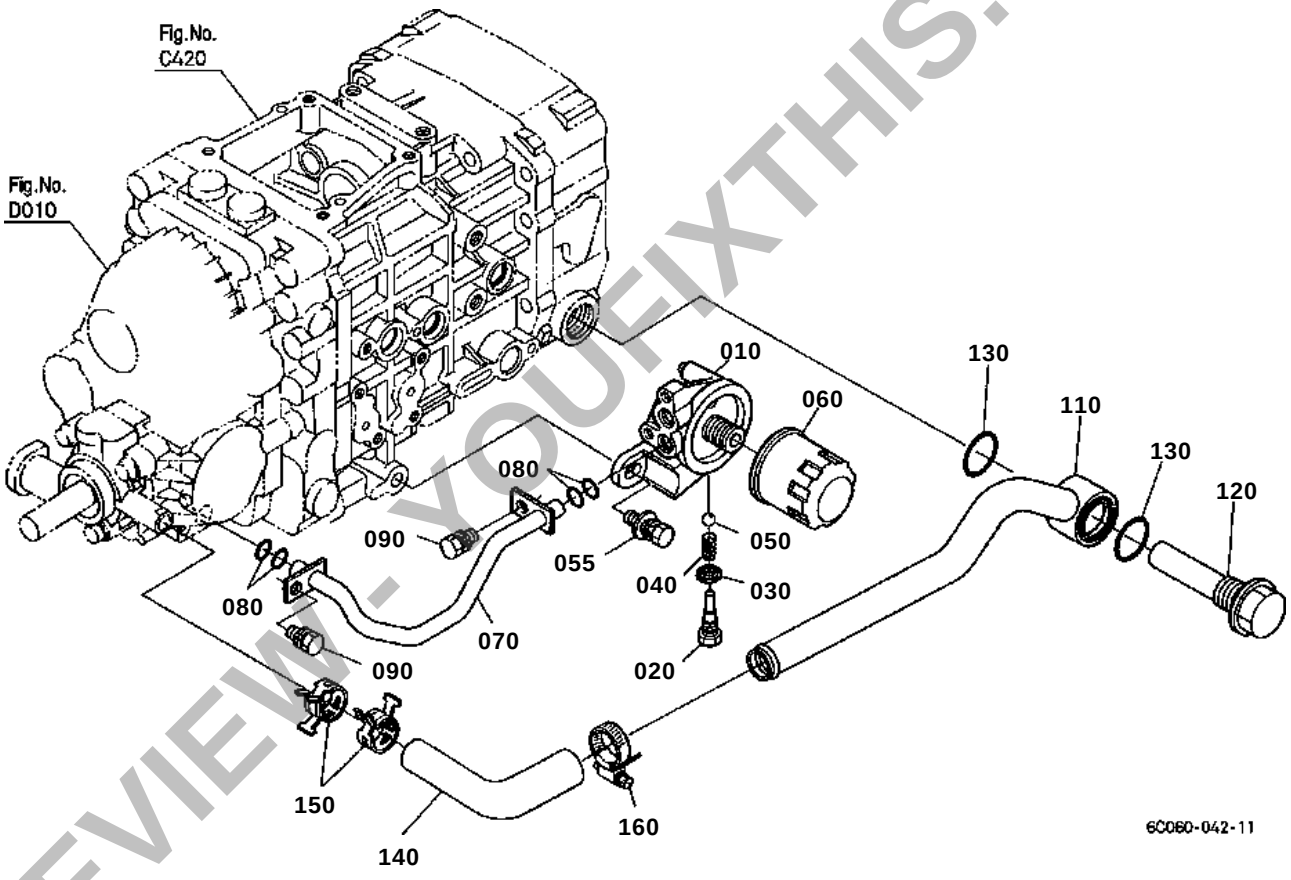

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

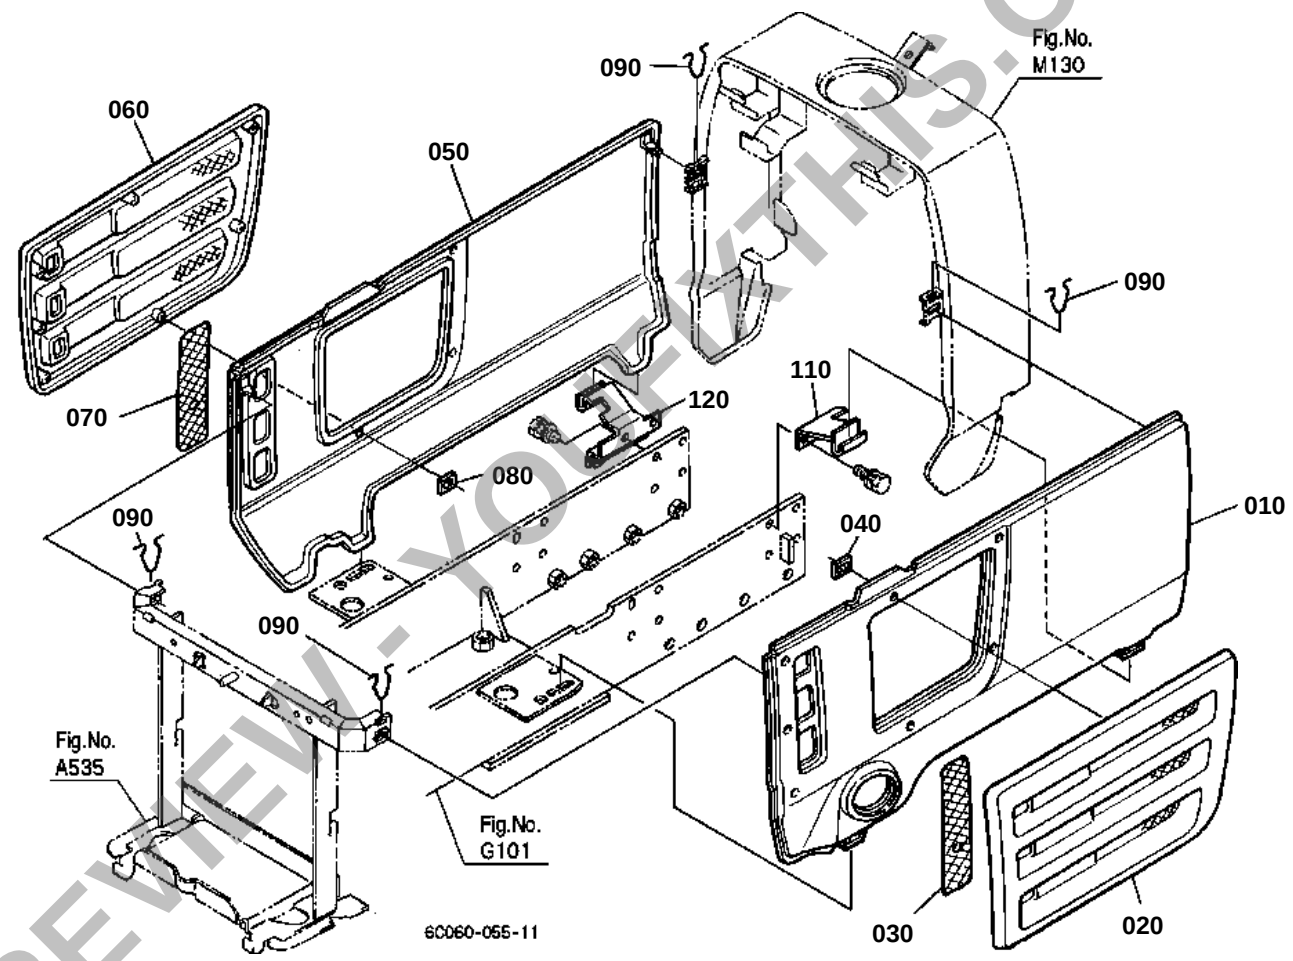

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 18 of 332 pages

The full manual includes:

- All 332 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota B7800HSD Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual