Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts at it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number refering to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quanity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.
>= Your serial number should be greater than or equal to the number shown.
<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.
←→ The part shown will work for the older and later serial number.
The part shown is not interchangable with the other serial number.
← new for old
→ old for new

Remarks → Notes about this particulart part. Sometimes this may say except [FR] or [CA]

Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France.
That means it will work here in the USA.


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Part No.	Description	Book
ENGINE	01T001	CRANKCASE	100K0094
	01T002	OIL PAN	100K0094
	01T003	CYLINDER HEAD	100K0094
	01T004	GEAR CASE	100K0094
	01T005	MAIN BEARING CASE	100K0094
	01T006	CYLINDER HEAD COVER	100K0094
	01T007	INLET MANIFOLD	100K0094
	01T008	VALVE/ROCKER ARM	100K0094
	01T009	CAMSHAFT	100K0094
	01T010	ENGINE STOP LEVER	100K0094
	01T011	GEAR PUMP	100K0094
	01T012	PISTON/CRANKSHAFT	100K0094
	01T013	FLYWHEEL	100K0094
	01T014	NOZZLE HOLDER	100K0094
	01T015	SPEED CONTROL PLATE	100K0094
	01T016	GOVERNOR	100K0094
	01T017	WATER FLANGE	100K0094
	01T018	FUEL CAMSHAFT	100K0094
	01T019	WATER PUMP	100K0094
HYDRAULIC SYSTEM	01T098	GEAR PUMP [SECTION PARTS]	100K0094
ENGINE	01T099	NOZZLE HOLDER [SECTION PARTS]	100K0094
	01T100	NOZZLE HOLDER [SECTION PARTS]	100K0094
	01T101	INJECTION PUMP [SECTION PARTS]	100K0094
ELECTRICAL SYSTEM	01T102	DYNAMO [SECTION PARTS]	100K0094
	01T104	STARTER [SECTION PARTS]	100K0094
TRANSMISSION	01T020	TRANSMISSION CASE	100K0094
	01T021	COVER	100K0094
	01T022	AXLE CASE	100K0094
CLUTCH	01T023	CLUTCH	100K0094
TRANSMISSION	01T024	1 ST SHAFT AND 2 ND SHAFT	100K0094
	01T025	3 RD SHAFT	100K0094
	01T026	4 TH SHAFT AND REVERSE SHAFT	100K0094
	01T027	FRONT DRIVE SHAFT AND 6 TH SHAFT	100K0094
	01T028	7TH SHAFT AND PTO SHAFT	100K0094
REAR AXLE/REAR WHEEL	01T029	REAR DIFFERENTIAL	100K0094
	01T030	REAR AXLE AND REAR WHEEL (8.3-24) [A]	100K0094
	01T031	REAR AXLE AND REAR WHEEL (12.4-16)	100K0094
	01T032	REAR WHEEL (13.6-16) [A] (T)	100K0094
SPEED CHANGE LEVER	01T034	MAIN SPEED CHANGE	100K0094
	01T035	SPEED CHANGE FORK	100K0094
	01T036	FRONT DRIVE FORK	100K0094
	01T037	ROTARY SPEED CHANGE FORK	100K0094
BRAKE	01T038	BRAKE	100K0094
HYDRAULIC SYSTEM	01T039	HITCH	100K0094
	01T040	CASE COVER AND LIFT ARM	100K0094
	01T041	CONTROL VALVE	100K0094
	01T042	CONTROL VALVE	100K0094
	01T044	HYDRAULIC PIPING	100K0094
	01T045	HYDRAULIC PIPING	100K0094
	01T046	HYDRAULIC BLOCK	100K0094
	01T047	HYDRAULIC BLOCK	100K0094
STEERING	01T048	STEERING	100K0094
	01T049	STEERING	100K0094
SPEED CHANGE LEVER	01T050	SPEED CHANGE LEVER 1	100K0094
	01T051	SPEED CHANGE LEVER 2	100K0094
CLUTCH	01T052	CLUTCH PEDAL AND BRAKE PEDAL	100K0094

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

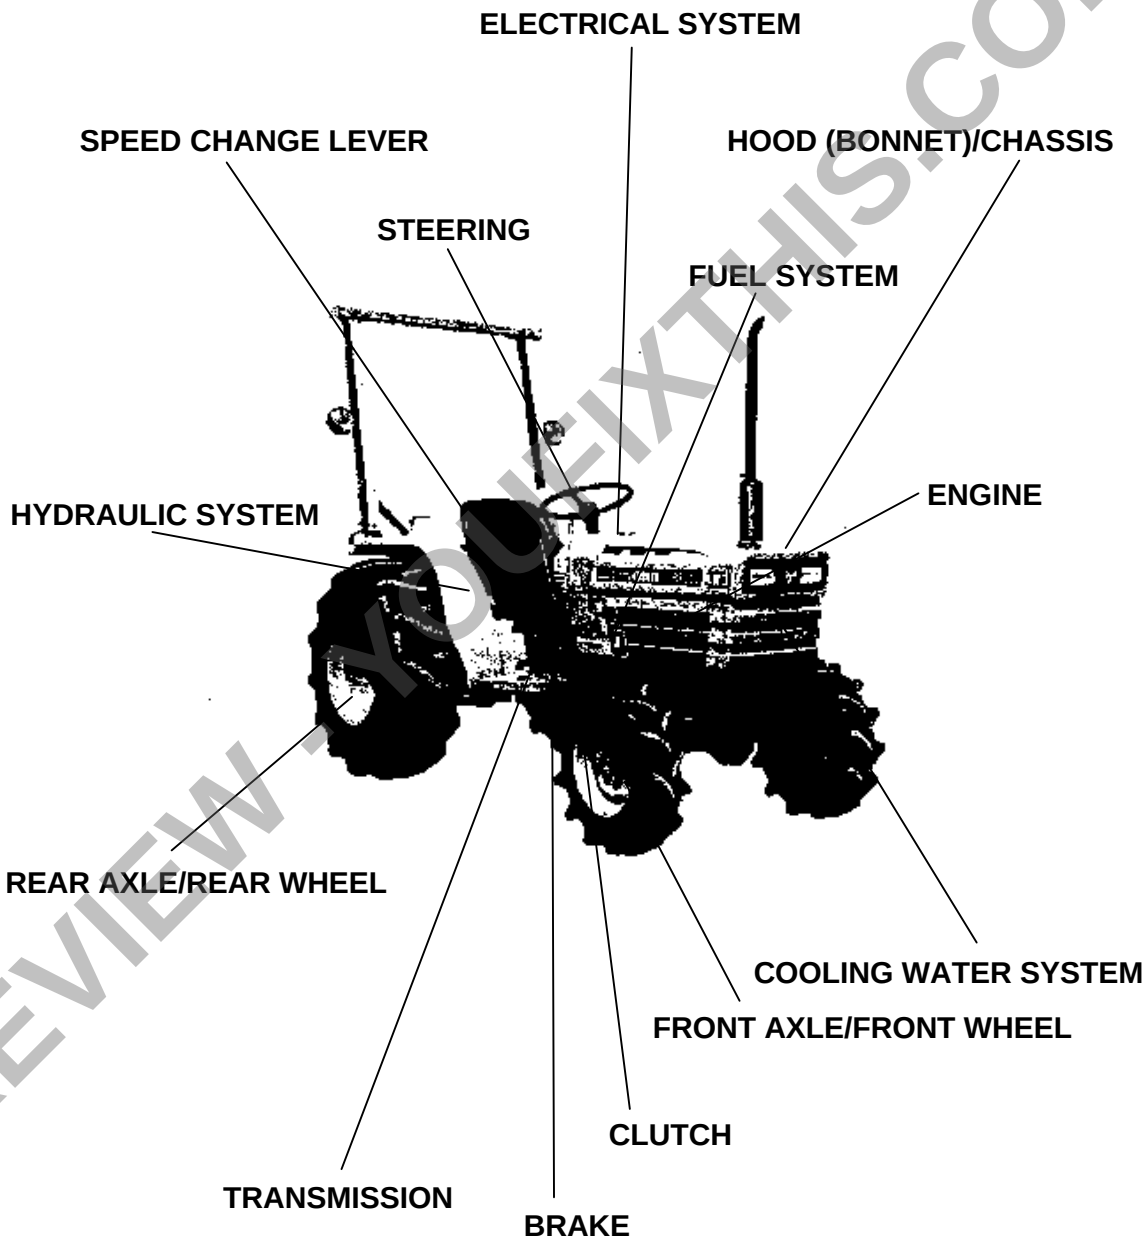

LABELS

ACCESSORIES

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


CRANKCASE

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
001	15532-01010	ASSY CRANKCASE	1			REF.NO.002 TO 014	26.5	58.3
002	99999-99999	BLANK	0			ORDER BY REF.No.001	0	0
003	06311-75015	PLUG, EXPANSION	3				0.002	0.0044
004	06311-75040	PLUG, EXPANSION	1				0.02	0.044
005	15321-96260	PLUG, SEALING	5				0.014	0.0308
006	15221-03490	PLUG, SEALING	1				0.02	0.044
007	15261-96010	PLUG	6				0.002	0.0044
008	15521-96020	PLUG	3				0.003	0.0066
009	15521-96030	PLUG	1				0.007	0.0154
010	05012-00609	PIN, STRAIGHT	2				0.003	0.0066
011	05012-00814	PIN, STRAIGHT	2				0.006	0.0132
012	15231-33960	PIN, PIPE	2				0.001	0.0022
013	15221-33650	PIN, PIPE	1				0.004	0.0088
014	15531-02310	LINER, CYLINDER	3				0.42	0.924
015	15221-33700	O RING	1				0.001	0.0022
016	15261-73910	COVER, WATER	1				0.13	0.286
017	15261-73920	GASKET, WATER COVER	1				0	0
018	01023-50618	BOLT	2				0.006	0.0132
019	15531-73170	JOINT, DRAIN PIPE	1				0.145	0.319
020	15261-35010	ASSY PUMP OIL	1				0.32	0.704
021	15261-35150	GASKET, OIL PUMP	1				0	0
022	15261-91022	BOLT	4				0.012	0.0264
023	15954-35660	GEAR, OIL PUMP DRIVE	1				0.14	0.308
024	05712-00410	KEY, FEATHER	1				0.001	0.0022
025	02016-50100	NUT	1				0.009	0.0198
026	04211-50100	WASHER, CRAW	1				0.002	0.0044
027	15521-39010	SWITCH, OIL	1				0.048	0.1056


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

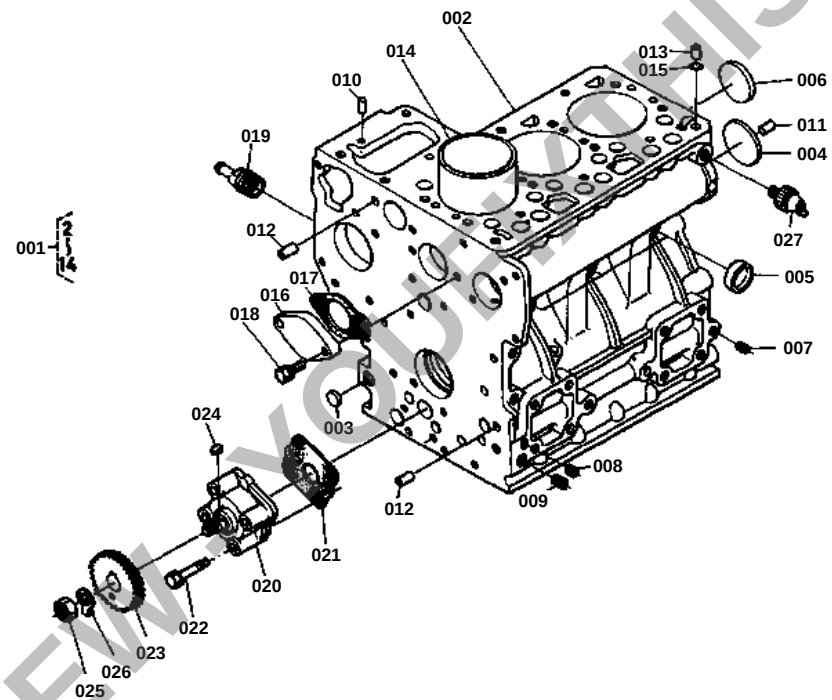


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

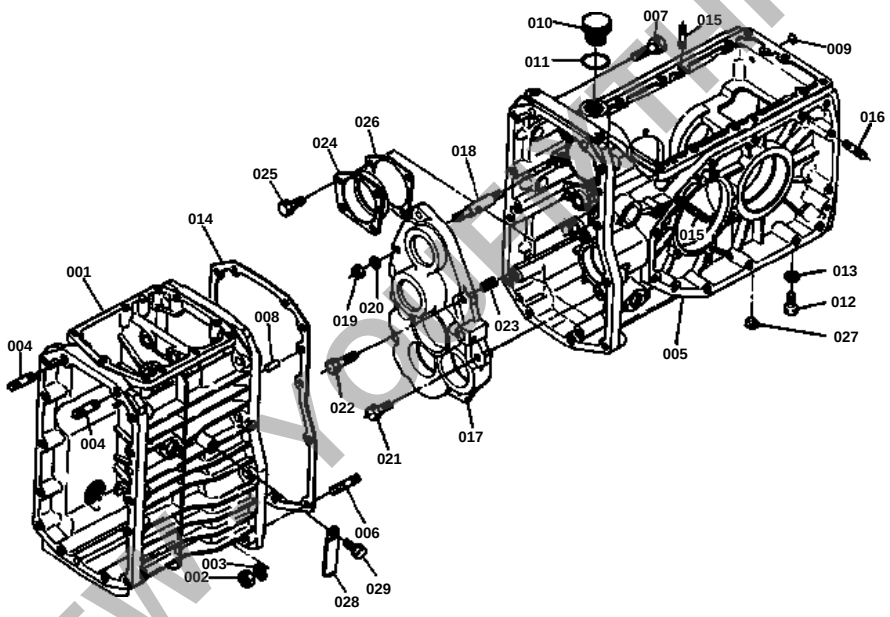


PREVIEW ONLY
YOUFIXTHIS.COM

Download full manual at youfixthis.com

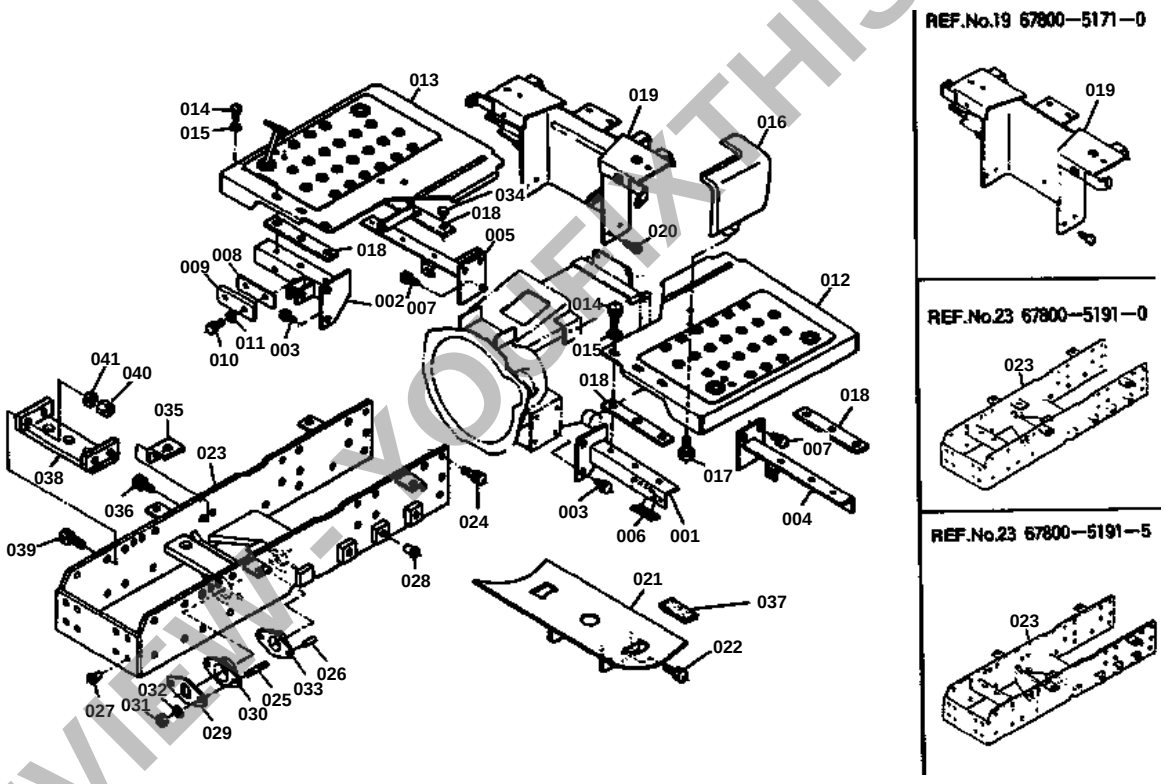


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

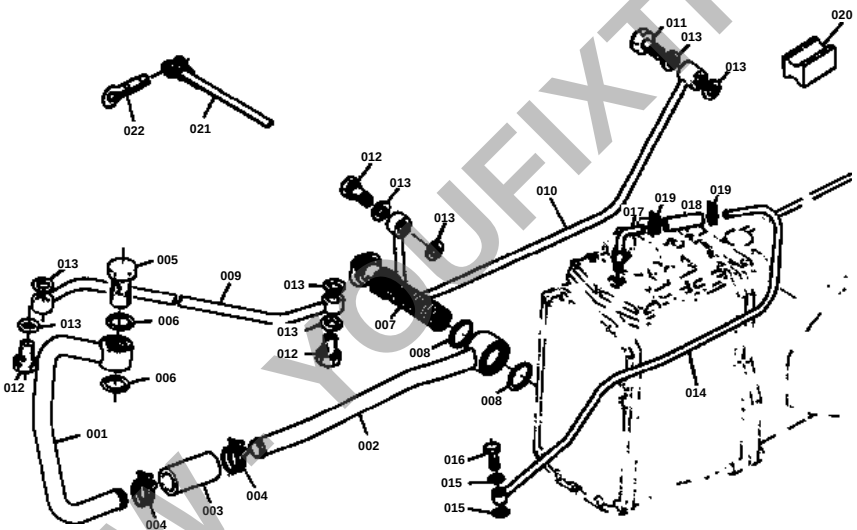


PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

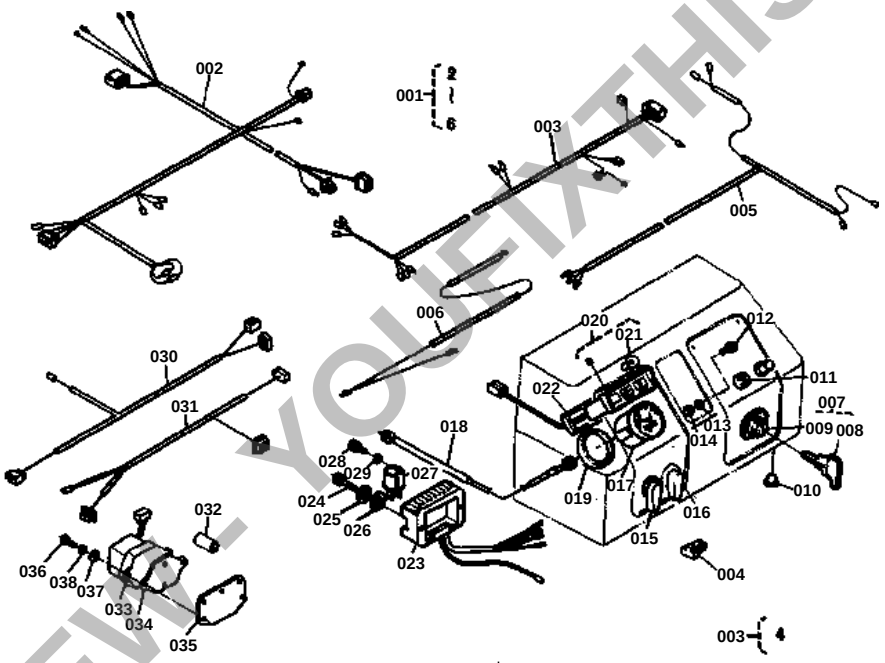

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

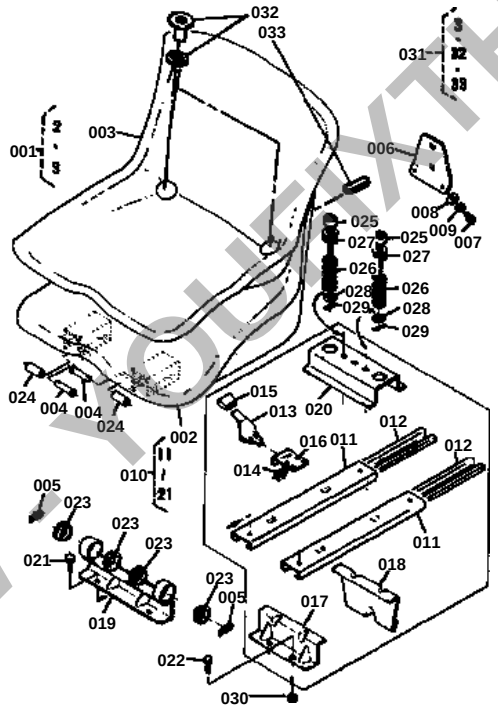


PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Part No.	Description	Book
BRAKE	01T053	BRAKE ROD	100K0094
TRANSMISSION	01T054	RELEASE LEVER	100K0094
LABELS	01T055	NAME PLATE	100K0094
CLUTCH	01T056	CLUTCH HOUSING	100K0094
HOOD (BONNET)/CHASSIS	01T057	STEP AND FRAME	100K0094
	01T058	FENDER	100K0094
	01T060	SEAT	100K0094
	01T061	SEAT	100K0094
ENGINE	01T062	MUFFLER AND MUFFLER PIPET	100K0094
HOOD (BONNET)/CHASSIS	01T063	DUSTPROOF NET	100K0094
FUEL SYSTEM	01T064	FUEL TANK	100K0094
	01T065	FUEL TANK	100K0094
	01T066	FUEL PIPE	100K0094
ENGINE	01T067	DECOMPRESS WIRE AND ENGINE STOP WIRE	100K0094
HOOD (BONNET)/CHASSIS	01T068	HOOD AND PANEL	100K0094
	01T069	HOOD AND PANEL	100K0094
	01T070	SKIRT	100K0094
	01T071	SKIRT	100K0094
	01T072	HOOD BRACKET	100K0094
ELECTRICAL SYSTEM	01T073	BATTERY	100K0094
	01T074	ELECTRICAL SYSTEM	100K0094
	01T075	ELECTRICAL SYSTEM	100K0094
	01T076	HEAD LAMP AND FLASHER LAMP	100K0094
ENGINE	01T077	AIR CLEANER	100K0094
FUEL SYSTEM	01T078	FUEL FILTER	100K0094
COOLING WATER SYSTEM	01T079	RADIATOR	100K0094
ELECTRICAL SYSTEM	01T080	DYNAMO AND STARTER	100K0094
FRONT AXLE/FRONT WHEEL	01T086	FRONT AXLE ARM	100K0094
	01T087	BEVEL GEAR CASE	100K0094
	01T088	FRONT AXLE CASE	100K0094
	01T089	KNUCKLE ARM	100K0094
	01T090	FRONT DIFFERENTIAL	100K0094
	01T091	BEVEL GEAR	100K0094
	01T092	DRIVE SHAFT	100K0094
	01T093	FRONT WHEEL (6-12)	100K0094
	01T094	FRONT WHEEL (24 X 8.50-12) (T)	100K0094
HYDRAULIC SYSTEM	01T095	LIFT ROD	100K0094
	01T096	CHECK CHAIN AND BRACKET	100K0094
HOOD (BONNET)/CHASSIS	01T097	FRONT WEIGHT BRACKET	100K0094
HYDRAULIC SYSTEM	01T106	CONTROL VALVE [SECTION PARTS]	100K0094
	01T107	CONTROL VALVE [SECTION PARTS]	100K0094
ACCESSORIES	01T108	ACCESSORIES AND SERVICE PARTS	100K0094

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

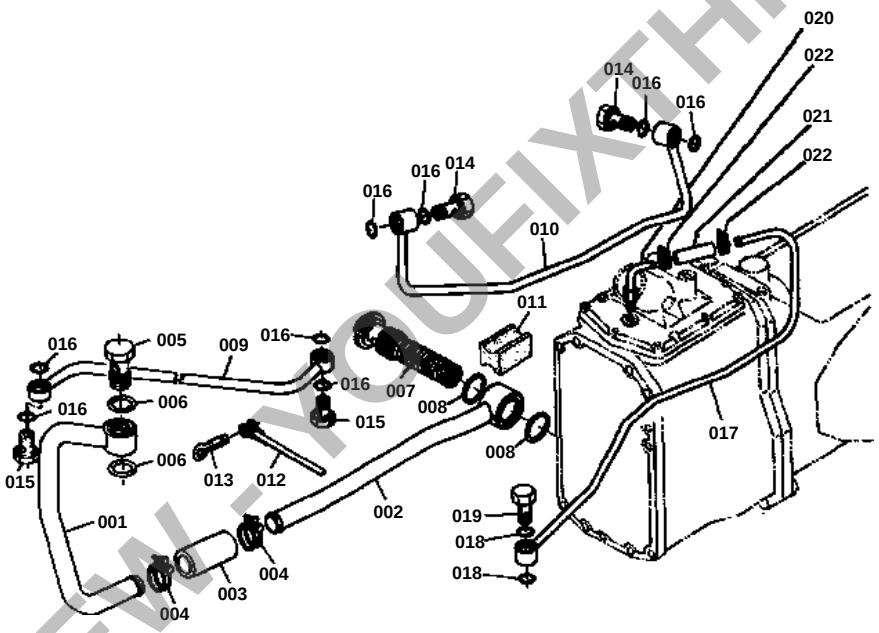

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 12 of 202 pages

The full manual includes:

- All 202 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota B8200DP Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual