Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts at it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number refering to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quanity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.
>= Your serial number should be greater than or equal to the number shown.
<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.
←→ The part shown will work for the older and later serial number.
The part shown is not interchangable with the other serial number.
← new for old
→ old for new

Remarks → Notes about this particulart part. Sometimes this may say except [FR] or [CA]

Note about Country Codes:


The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France.
That means it will work here in the USA.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

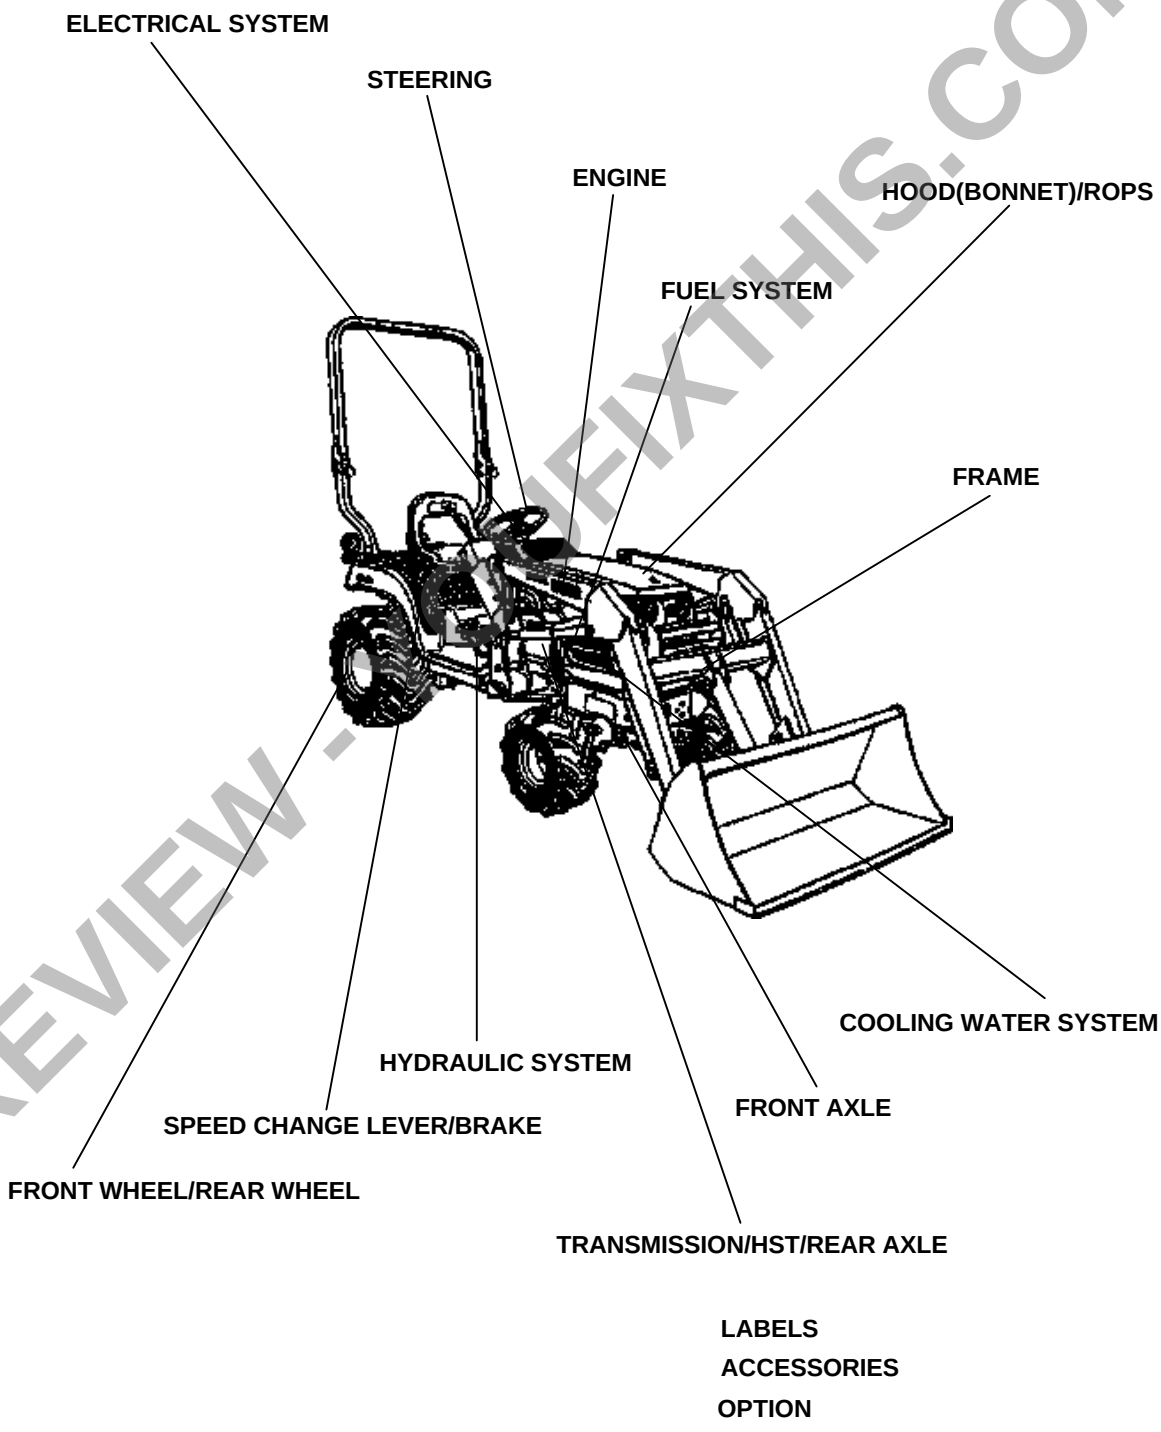

LABELS
ACCESSORIES
OPTION


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Part No.	Description	Book
ENGINE	010001	CRANKCASE	100K0694
	010002	OIL PAN	100K0694
	010003	CYLINDER HEAD	100K0694
	010004	GEAR CASE	100K0694
	010005	HEAD COVER	100K0694
	010006	OIL FILTER	100K0694
	010007	DIPSTICK AND GUIDE	100K0694
	010100	MAIN BEARING CASE	100K0694
	010101	CAMSHAFT AND IDLE GEAR SHAFT	100K0694
	010102	PISTON AND CRANKSHAFT	100K0694
	010103	FLYWHEEL	100K0694
	010105	FUEL CAMSHAFT AND GOVERNOR SHAFT	100K0694
	010200	IDLE APPARATUS	100K0694
	010201	STOP SOLENOID	100K0694
	010202	INJECTION PUMP	100K0694
	010203	INJECTION PUMP [COMPONENT PARTS]	100K0694
	010204	GOVERNOR	100K0694
	010205	SPEED CONTROL PLATE	100K0694
	010206	NOZZLE HOLDER AND GLOW PLUG	100K0694
	010207	NOZZLE HOLDER [COMPONENT PARTS]	100K0694
	010305	COVER	100K0694
	010406	OIL SWITCH/THERMOMETER AND PLUG	100K0694
	010500	WATER FLANGE AND THERMOSTAT	100K0694
	010501	WATER PUMP	100K0694
	010600	VALVE AND ROCKER ARM	100K0694
	010601	INLET MANIFOLD	100K0694
	010602	EXHAUST MANIFOLD	100K0694
	010703	HYDRAULIC PUMP COVER	100K0694
	010900	UPPER GASKET KIT [OPTION]	100K0694
	010901	LOWER GASKET KIT [OPTION]	100K0694
COOLING WATER SYSTEM	01A401	FAN	100K0694
ELECTRICAL SYSTEM	01A521	DYNAMO	100K0694
	01A523	DYNAMO [COMPONENT PARTS]	100K0694
	01A525	STARTER	100K0694
	01A530	STARTER [COMPONENT PARTS]	100K0694
HYDRAULIC SYSTEM	01J120	HYDRAULIC PUMP	100K0694
	01J125	HYDRAULIC PUMP [COMPONENT PARTS]	100K0694
ENGINE	010603	AIR CLEANER	100K0694
	010605	MUFFLER	100K0694
	01A001	ACCELERATOR LEVER	100K0694
FUEL SYSTEM	01A101	FUEL TANK	100K0694
	01A110	FUEL PIPE	100K0694
COOLING WATER SYSTEM	01A410	WATER PIPE	100K0694
	01A420	RADIATOR	100K0694
ELECTRICAL SYSTEM	01A535	BATTERY	100K0694
	01B115	PANEL BOARD	100K0694
	01B215	SWITCH/SENSOR	100K0694
	01B301	HEAD LIGHT	100K0694
	01B303	HAZARD LIGHT/TAIL LIGHT	100K0694
	01B310	WINKER LAMP	100K0694
	01B501	ELECTRICAL WIRING	100K0694
FRAME	01C413	FRONT FRAME	100K0694
	01C417	SUB FRAME	100K0694
	01C419	ENGINE SUPPORT	100K0694
TRANSMISSION/HST/REAR AXLE	01C420	TRANSMISSION CASE	100K0694
	01C427	REAR AXLE CASE	100K0694


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

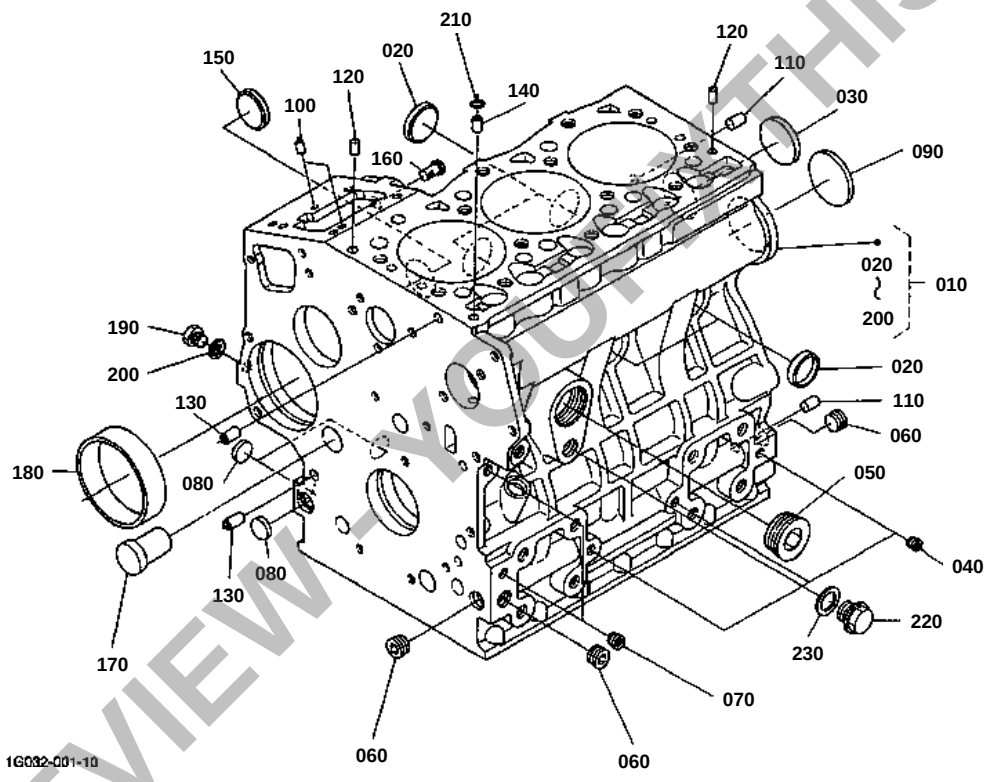


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

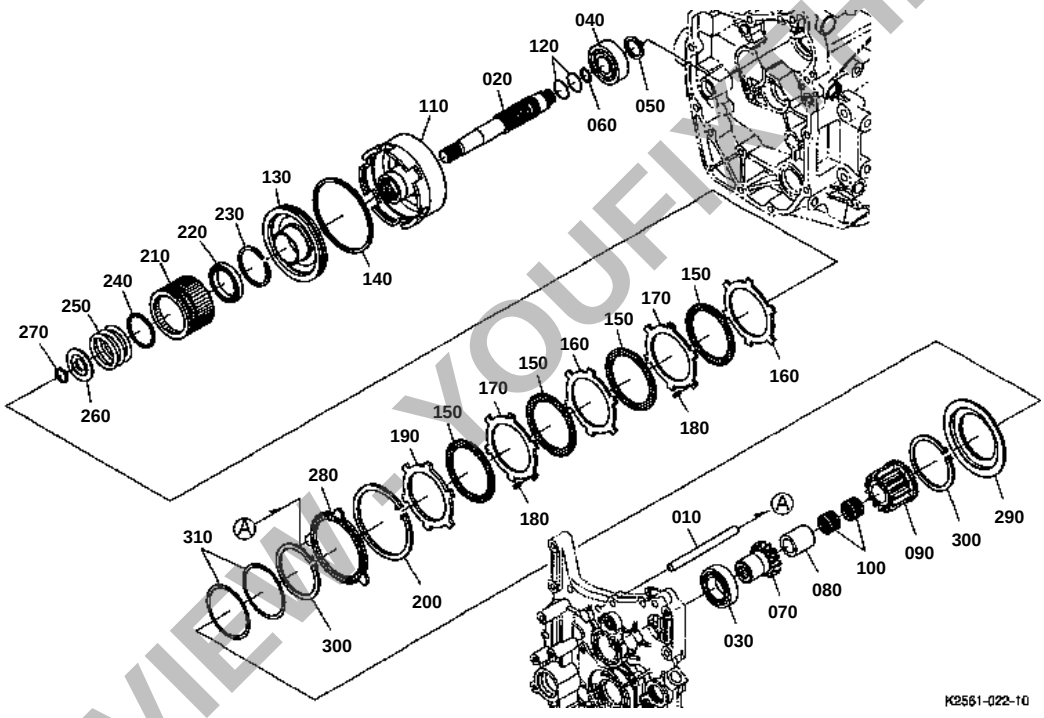


PREVIEW ONLY YOUFIXTHIS.COM

Download full manual at youfixthis.com

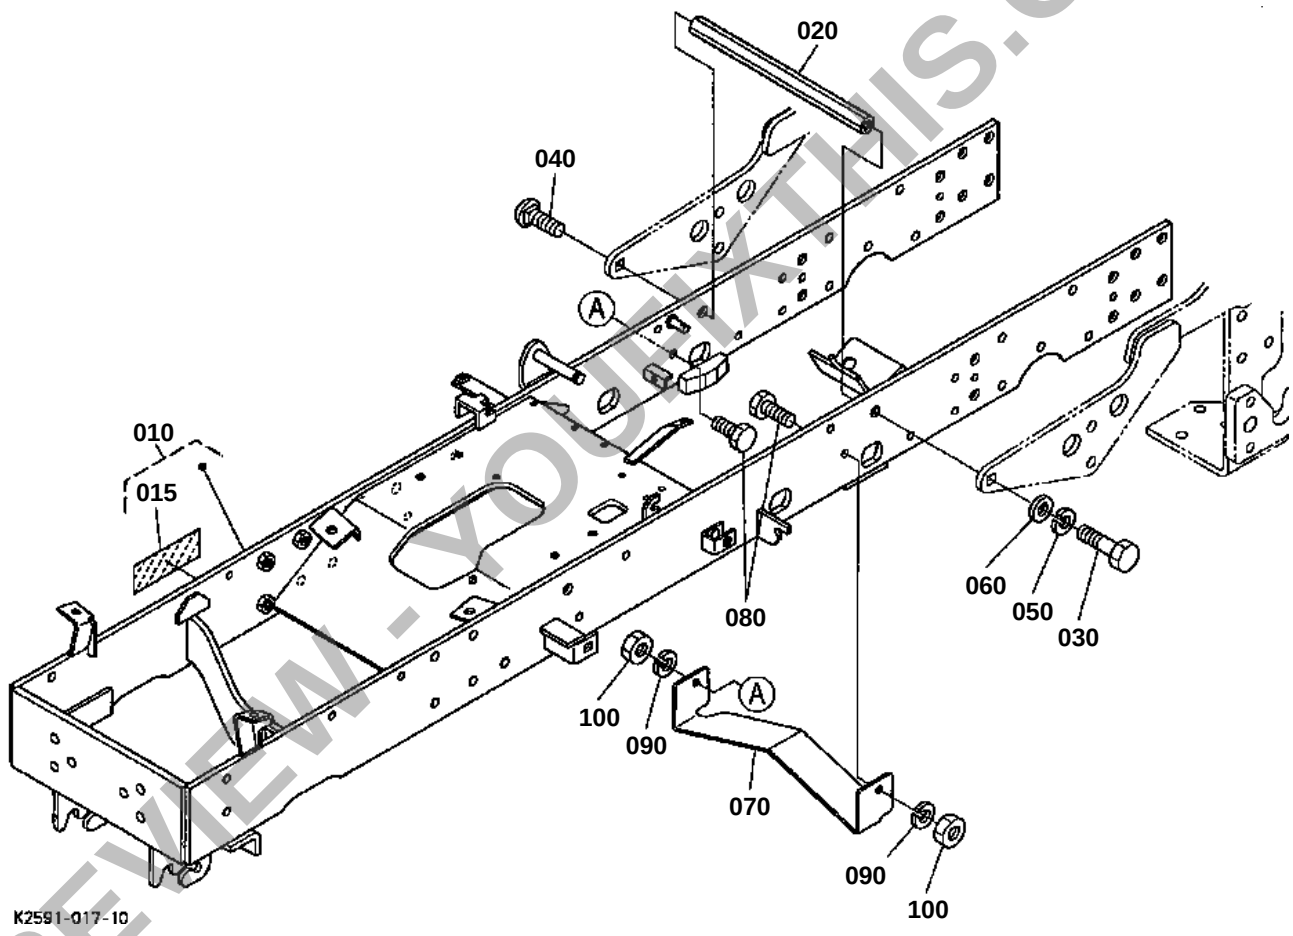


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

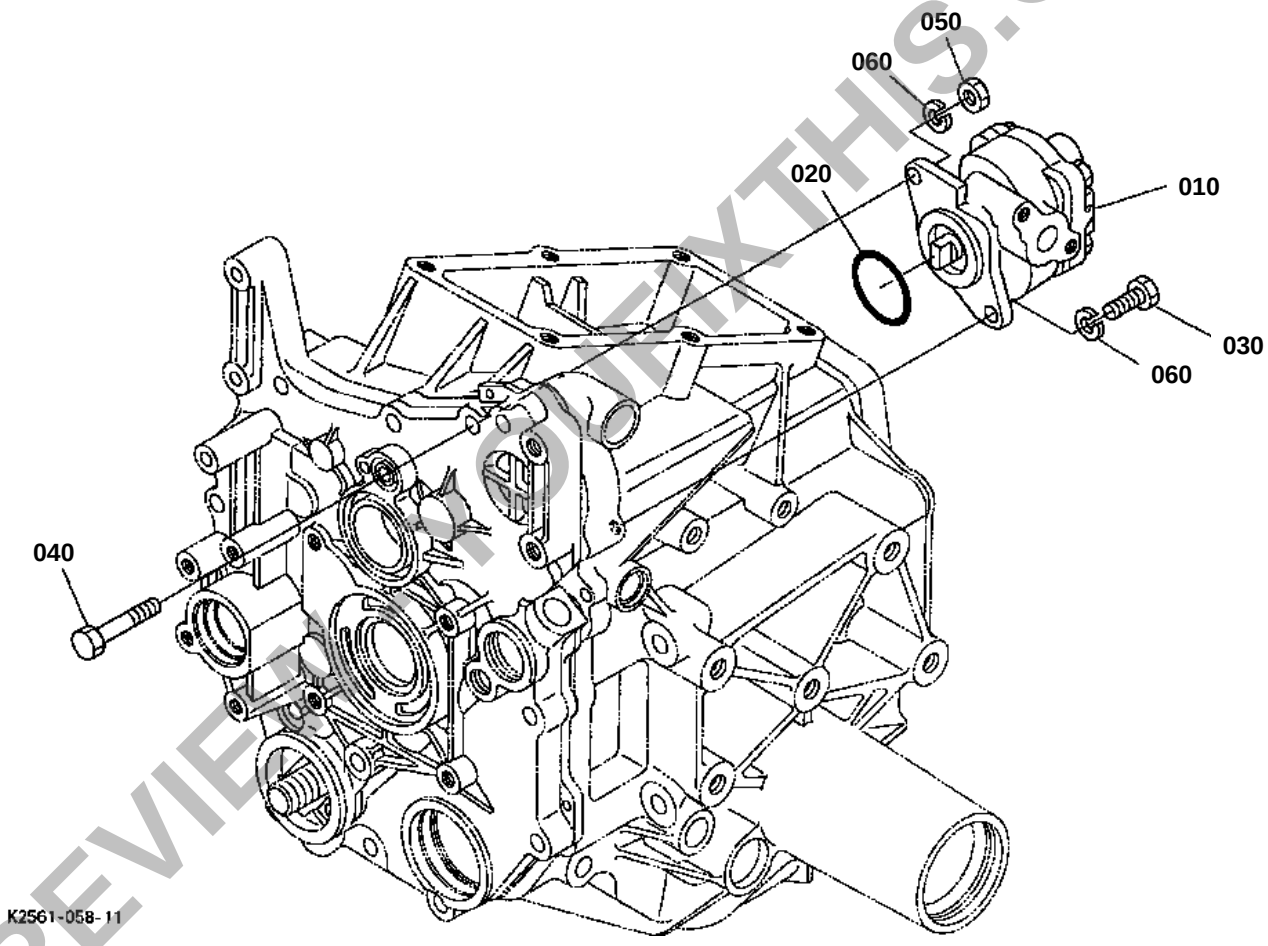


PREVIEW ONLY YOUFIXTHIS.COM

Download full manual at youfixthis.com

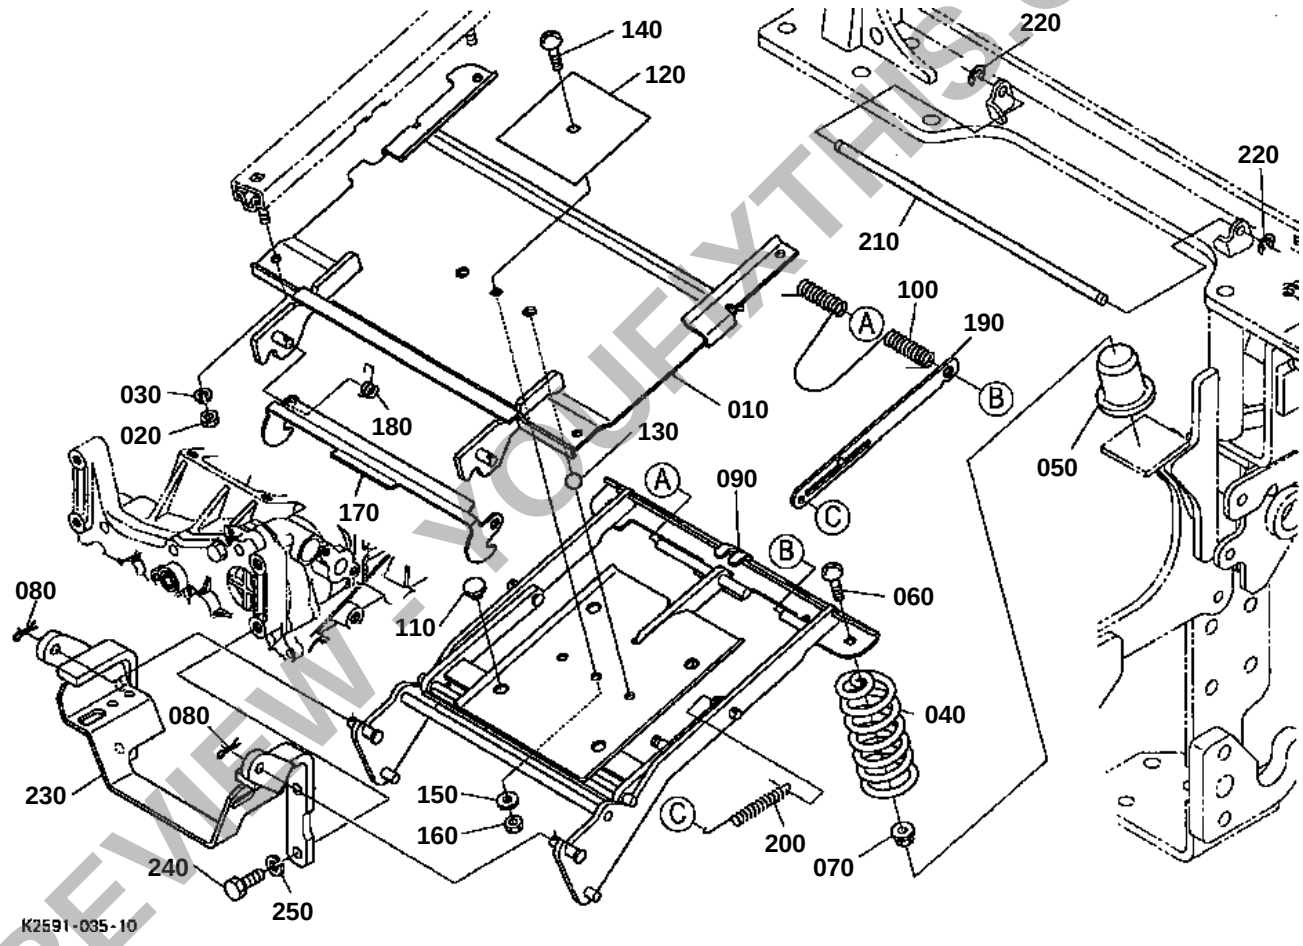

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

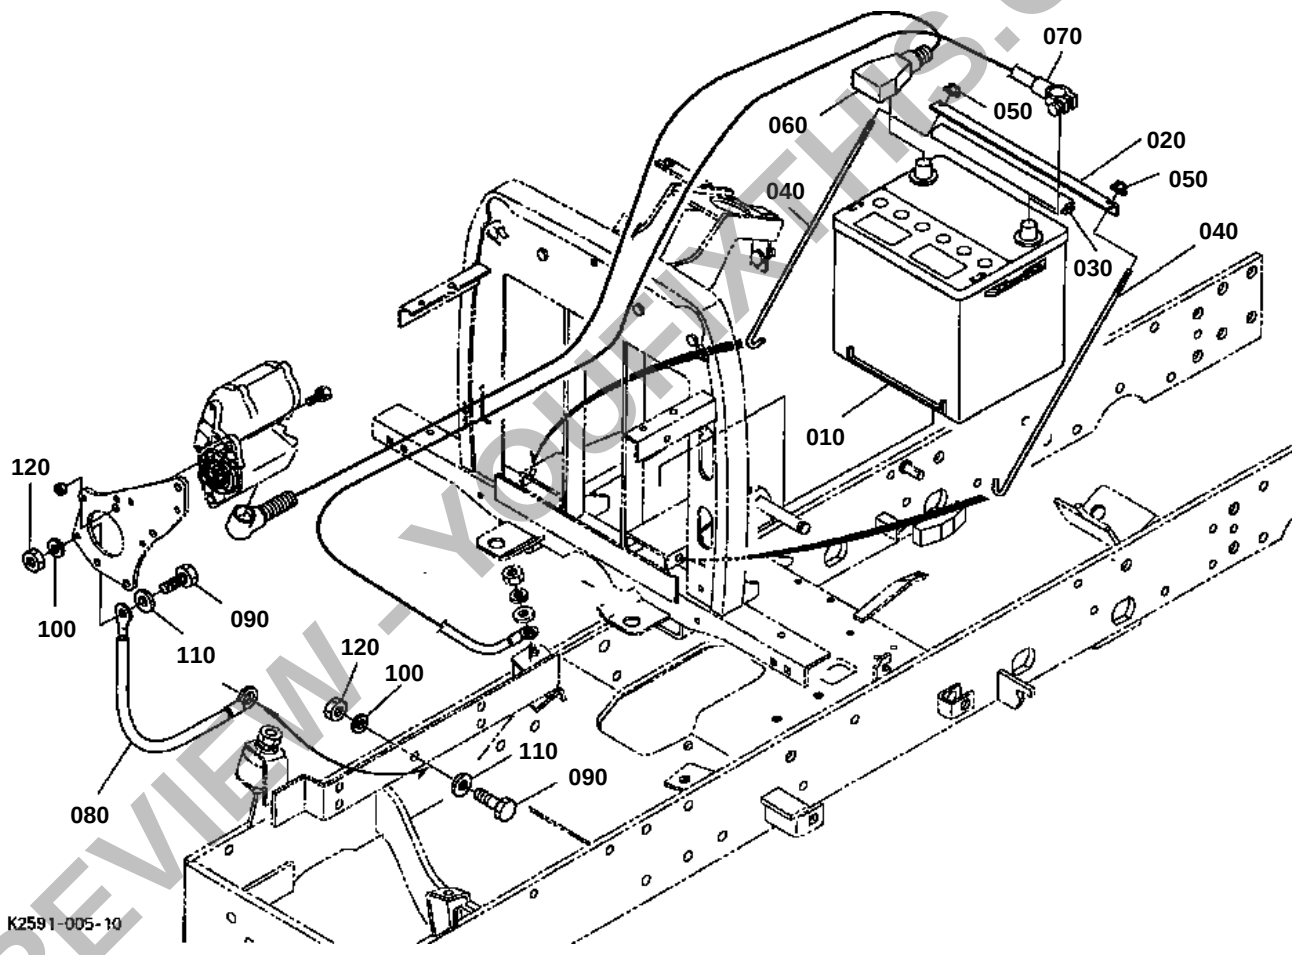

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Part No.	Description	Book
TRANSMISSION/HST/REAR AXLE	01D001	CLUTCH SHAFT/OUTPUT SHAFT	100K0694
	01D005	PROPELLER SHAFT	100K0694
	01D010	HST	100K0694
	01D015	HST [COMPONENT PARTS]	100K0694
	01D107	RANGE GEAR SHAFT	100K0694
	01D135	PTO SHAFT	100K0694
	01D137	MID PTO	100K0694
	01D140	REAR DIFFERENTIAL	100K0694
	01D141	FWD IDLE SHAFT	100K0694
	01D142	GP IDLE SHAFT	100K0694
	01D143	FRONT WHEEL PROPELLER SHAFT	100K0694
	01D217	RANGE GEAR SHIFT FORK	100K0694
	01D220	PTO GEAR SHIFT FORK	100K0694
	01D222	PTO GEAR SHIFT ARM	100K0694
	01D225	DIFFERENTIAL LOCK SHIFT FORK	100K0694
	01D301	REAR AXLE	100K0694
SPEED CHANGE LEVER/BRAKE	01E001	BRAKE	100K0694
	01F107	NEUTRAL HOLDER LINK	100K0694
	01F108	SPEED CONTROL PEDAL	100K0694
	01F110	RANGE GEAR SHIFT LEVER	100K0694
	01F113	FRONT WHEEL DRIVE LEVER	100K0694
	01F122	PTO SELECT LEVER	100K0694
	01F125	PTO GEAR SHIFT LEVER	100K0694
	01F143	HYDRAULIC CONTROL LEVER	100K0694
	01F201	BRAKE PEDAL	100K0694
	01F205	DIFFERENTIAL LOCK PEDAL	100K0694
FRONT AXLE	01G110	FRONT DIFFERENTIAL CASE	100K0694
	01G115	FRONT DIFFERENTIAL	100K0694
	01G120	DIFFERENTIAL GEAR SHAFT	100K0694
	01G125	FRONT AXLE CASE	100K0694
	01G130	FRONT AXLE	100K0694
STEERING	01H101	STEERING HANDLE	100K0694
	01H110	STEERING CONTROLLER	100K0694
	01H120	STEERING LINKAGE	100K0694
	01H122	STEERING CYLINDER [COMPONENT PARTS]	100K0694
HYDRAULIC SYSTEM	01J201	HYDRAULIC OIL LINE(SUCTION)	100K0694
	01J210	HYDRAULIC OIL LINE(DELIVERY)	100K0694
	01J215	HYDRAULIC OIL LINE(STEERING)	100K0694
	01J301	HYDRAULIC CYLINDER	100K0694
	01J310	HYDRAULIC PISTON/LIFT ARM	100K0694
	01J405	CONTROL VALVE	100K0694
	01J410	CONTROL VALVE [COMPONENT PARTS]	100K0694
	01K114	TOP LINK	100K0694
	01K115	LOWER LINK	100K0694
	01K116	LIFT ROD	100K0694
	01K123	TOP LINK BRACKET/FENDER BRACKET	100K0694
	01K130	MOWER REAR LINK RH	100K0694
	01K131	MOWER REAR LINK LH	100K0694
	01L125	PTO PROTECTOR	100K0694
HOOD(BONNET)/ROPS	01M100	FRONT GUARD	100K0694
	01M102	FRONT GLILLE SUPPORT	100K0694
	01M105	BONNET	100K0694
	01M110	BONNET SIDE	100K0694
	01M135	CENTER PILLAR	100K0694
	01M201	PANEL FRAME	100K0694
	01M210	FENDER	100K0694

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	K2561-24420	TUBE FUEL	1				0	0
020	K2561-24470	TUBE FUEL RETURN	1				0	0
030	K2561-24110	ASSY TUBE FUEL TF	1				0	0
040	K2561-24100	ASSY TUBE FUEL TR	1				0	0
050	K2561-24040	ASSY TUBE FUEL	1				0	0
060	K2561-24010	ASSY TUBE FUEL R	1				0	0
070	K2561-24050	ASSY TUBE FUEL	1				0	0
080	K2561-24080	ASSY TUBE FUEL RE.	1				0	0
090	K2561-24090	ASSY TUBE FUEL RE.	1				0	0
100	K2561-24070	ASSY TUBE FUEL RE.	1				0	0
110	99999-99999	BLANK	0				0	0
120	K2561-24060	ASSY TUBE FUEL BR.	1				0	0
130	K1122-61230	CLAMP CORD	4				0.001	0.0022
140	12581-43012	ASSY FILTER FUEL	2				0.035	0.077
150	66021-58330	BAND FILTER	2				0.037	0.0814
160	K2561-24510	STAY FUEL FILTER	1				0	0
170	01754-50616	BOLT FLANGE	2				0.006	0.0132
180	RC601-51350	ASSY PUMP FUEL	1				0.31	0.682
190	01754-50620	BOLT FLANGE	1				0.007	0.0154
200	K1122-91800	NUT(M)	1				0.004	0.0088
210	01754-50820	BOLT FLANGE	1				0.015	0.033
220	K1122-91810	NUT(M)	1				0	0
230	09318-88125	CLAMP HOSE	18				0.001	0.0022
240	09318-88095	CLAMP HOSE	2				0.002	0.0044
250	K2561-24550	JOINT PIPE FUEL	1				0	0

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

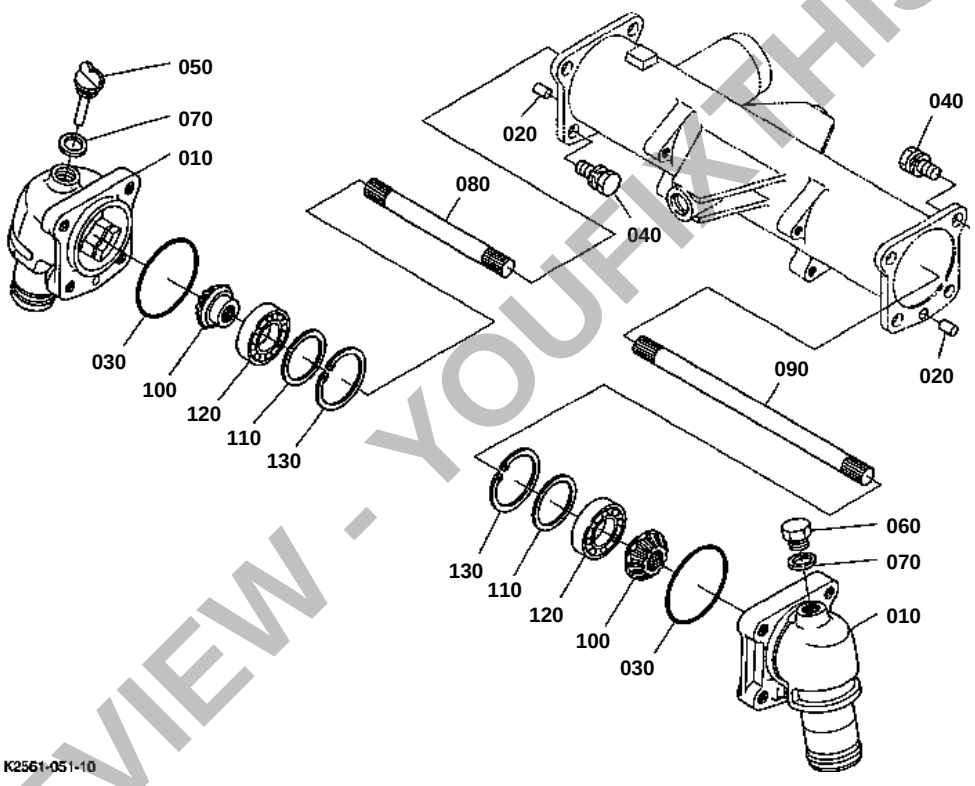

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 12 of 262 pages

The full manual includes:

- All 262 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota BX22D Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual