Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts at it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number refering to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quanity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.
>= Your serial number should be greater than or equal to the number shown.
<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.
←→ The part shown will work for the older and later serial number.
The part shown is not interchangable with the other serial number.
← new for old
→ old for new

Remarks → Notes about this particulart part. Sometimes this may say except [FR] or [CA]

Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.


Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France.
That means it will work here in the USA.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

FREQUENTLY USED ITEMS

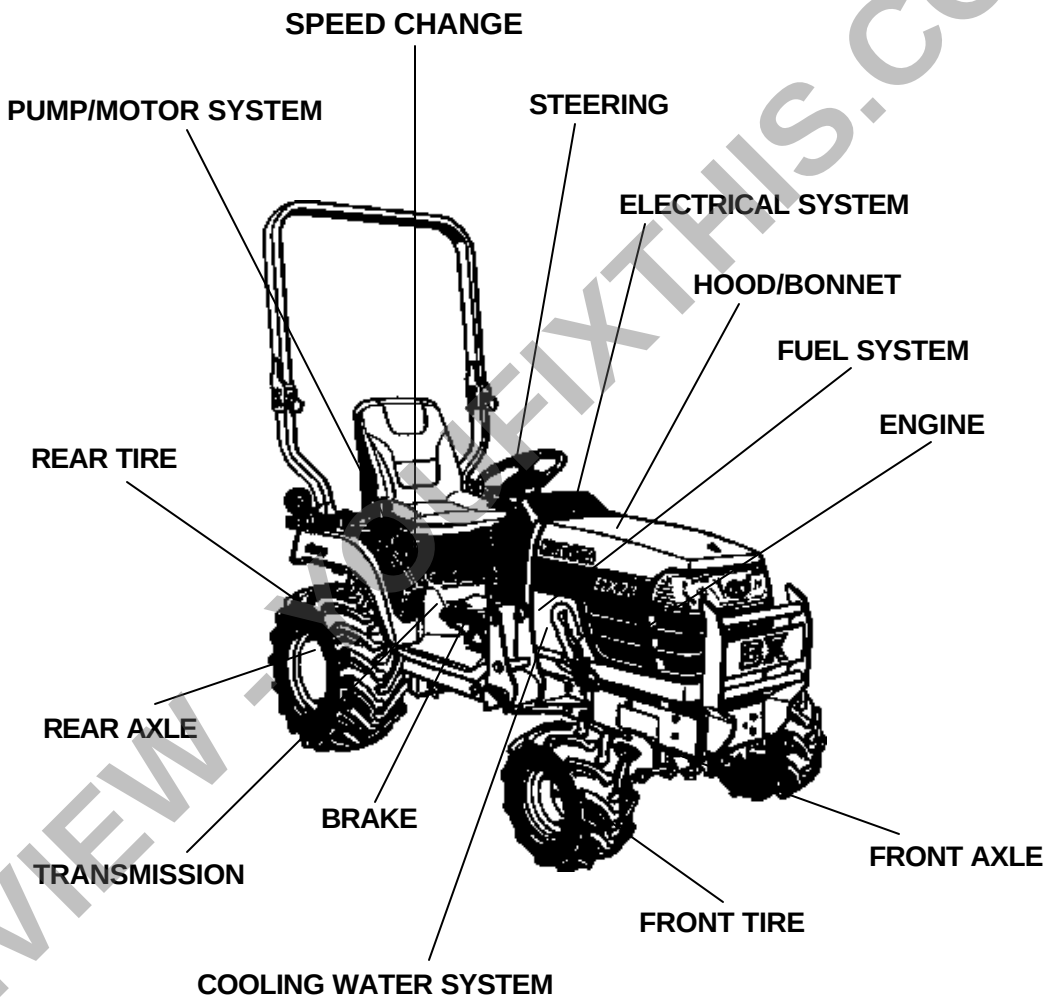

TOP LINK/TOP LINK BRACKET/PTO PROTECTOR

LABELS

ACCESSORIES AND SERVICE PARTS

OPTION


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Part No.	Description	Book
FREQUENTLY USED ITEMS	000000	FREQUENTLY USED ITEMS	100K0805
ENGINE	010001	CRANKCASE	100K0805
	01000101	CRANKCASE	100K0805
	010002	OIL PAN	100K0805
	010003	CYLINDER HEAD	100K0805
	010004	GEAR CASE	100K0805
	010005	HEAD COVER	100K0805
	01000501	HEAD COVER	100K0805
	010006	OIL FILTER	100K0805
	010007	DIPSTICK AND GUIDE	100K0805
	010100	MAIN BEARING CASE	100K0805
	010101	CAMSHAFT AND IDLE GEAR SHAFT	100K0805
	010102	PISTON AND CRANKSHAFT	100K0805
	010103	FLYWHEEL	100K0805
	010105	FUEL CAMSHAFT AND GOVERNOR SHAFT	100K0805
	010200	IDLE APPARATUS	100K0805
	010202	INJECTION PUMP	100K0805
	010204	GOVERNOR	100K0805
	010205	SPEED CONTROL PLATE	100K0805
	010206	NOZZLE HOLDER AND GLOW PLUG	100K0805
	01020601	NOZZLE HOLDER AND GLOW PLUG	100K0805
	010207	NOZZLE HOLDER [COMPONENT PARTS]	100K0805
	01020701	NOZZLE HOLDER [COMPONENT PARTS]	100K0805
	010305	COVER	100K0805
	010406	OIL SWITCH/THERMOMETER AND PLUG	100K0805
	010500	WATER FLANGE AND THERMOSTAT	100K0805
	010501	WATER PUMP	100K0805
	010600	VALVE AND ROCKER ARM	100K0805
	010601	INLET MANIFOLD	100K0805
	01060101	INLET MANIFOLD	100K0805
	010602	EXHAUST MANIFOLD	100K0805
	010603	AIR CLEANER	100K0805
	010605	MUFFLER	100K0805
	010703	HYDRAULIC PUMP COVER	100K0805
	010900	UPPER GASKET KIT	100K0805
	010901	LOWER GASKET KIT	100K0805
	01A001	ACCELERATOR LEVER	100K0805
FUEL SYSTEM	01A101	FUEL TANK	100K0805
	01A110	FUEL PIPE	100K0805
COOLING WATER SYSTEM	01A401	FAN	100K0805
	01A410	WATER PIPE	100K0805
	01A420	RADIATOR	100K0805
ELECTRICAL SYSTEM	01A510	STOP SOLENOID	100K0805
	01A521	DYNAMO	100K0805
	01A523	DYNAMO [COMPONENT PARTS]	100K0805

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

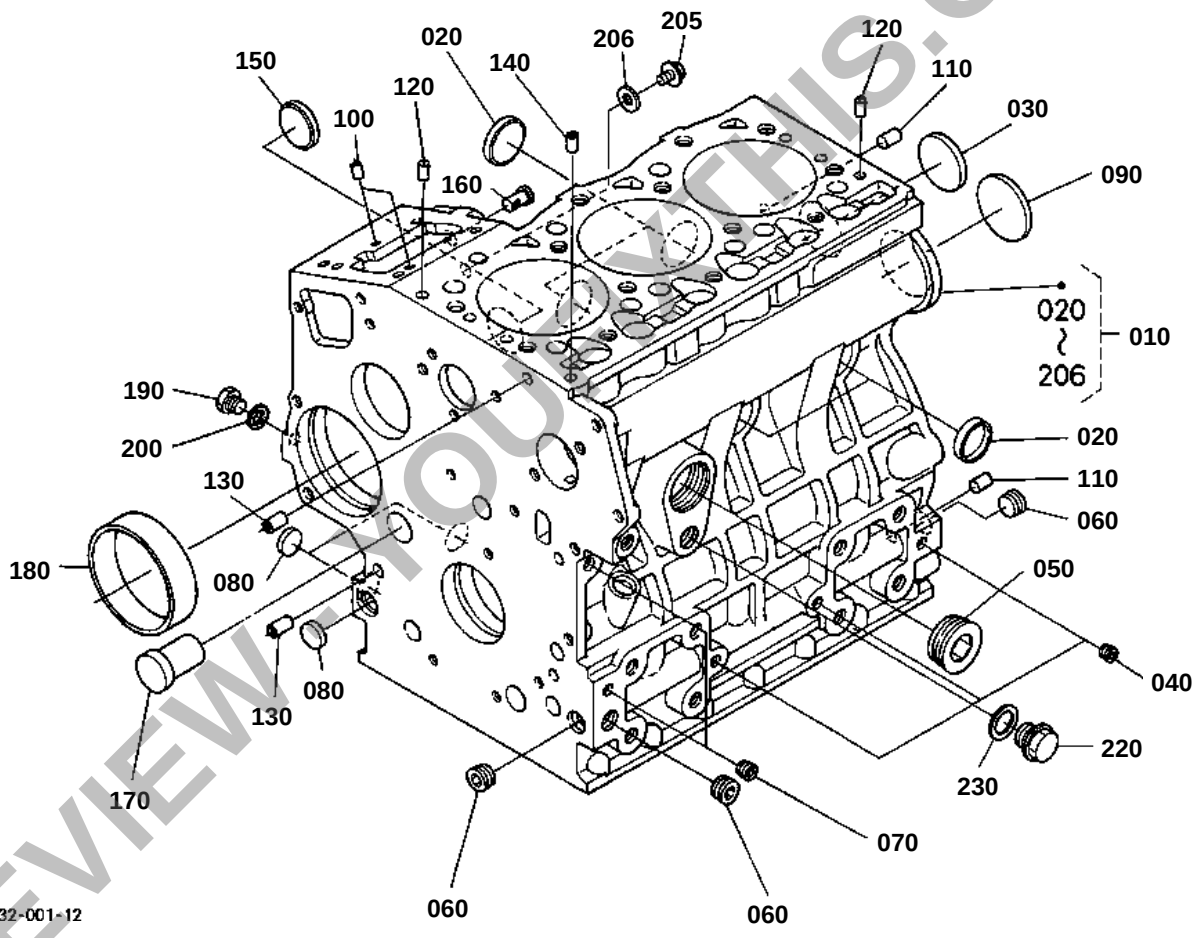


PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new


REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	16611-01017	COMP.CRANKCASE	1				32	70.4
020	15451-96270	CAP SEALING	4				0.001	0.0022
030	15221-03490	CAP SEALING	1				0.02	0.044
040	15261-96010	PLUG	3				0.002	0.0044
050	16683-96020	PLUG	1				0.07	0.154
060	16241-96010	PLUG	3				0.007	0.0154
070	15521-96020	PLUG	2				0.003	0.0066
080	17391-96160	PLUG EXPANSION	3				0.003	0.0066
090	16271-96160	PLUG EXPANSION	1				0.025	0.055
100	05012-00508	PIN STRAIGHT	2				0.001	0.0022
110	16221-94530	PIN STRAIGHT	2	<=3Y9499			0.006	0.0132
110	05012-00814	PIN STRAIGHT	2	>=4A0001	¬		0.006	0.0132
120	16221-94520	PIN STRAIGHT	2				0.005	0.011
130	15231-33960	PIN PIPE	2				0.001	0.0022
140	16241-33650	PIN PIPE	1				0.002	0.0044
150	16241-96262	PLUG FUEL CAMSHAFT	1				0.007	0.0154
160	16261-56280	PIN START SPRING	1				0.004	0.0088
170	16282-96010	PLUG	1				0.09	0.198
180	16271-55350	BUSH GOVERNOR GEAR	1				0.06	0.132
190	15221-33610	PLUG	1				0.009	0.0198
200	15021-33660	GASKET	1				0.001	0.0022
205	01754-50610	BOLT FLANGE	1				0.006	0.0132
206	15601-96650	GASKET	1				0.001	0.0022
210	15221-33700	O RING	1	<=4P0496			0.001	0.0022
220	06311-55020	PLUG	1				0.031	0.0682
230	04724-00130	GASKET	1				0.003	0.0066

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

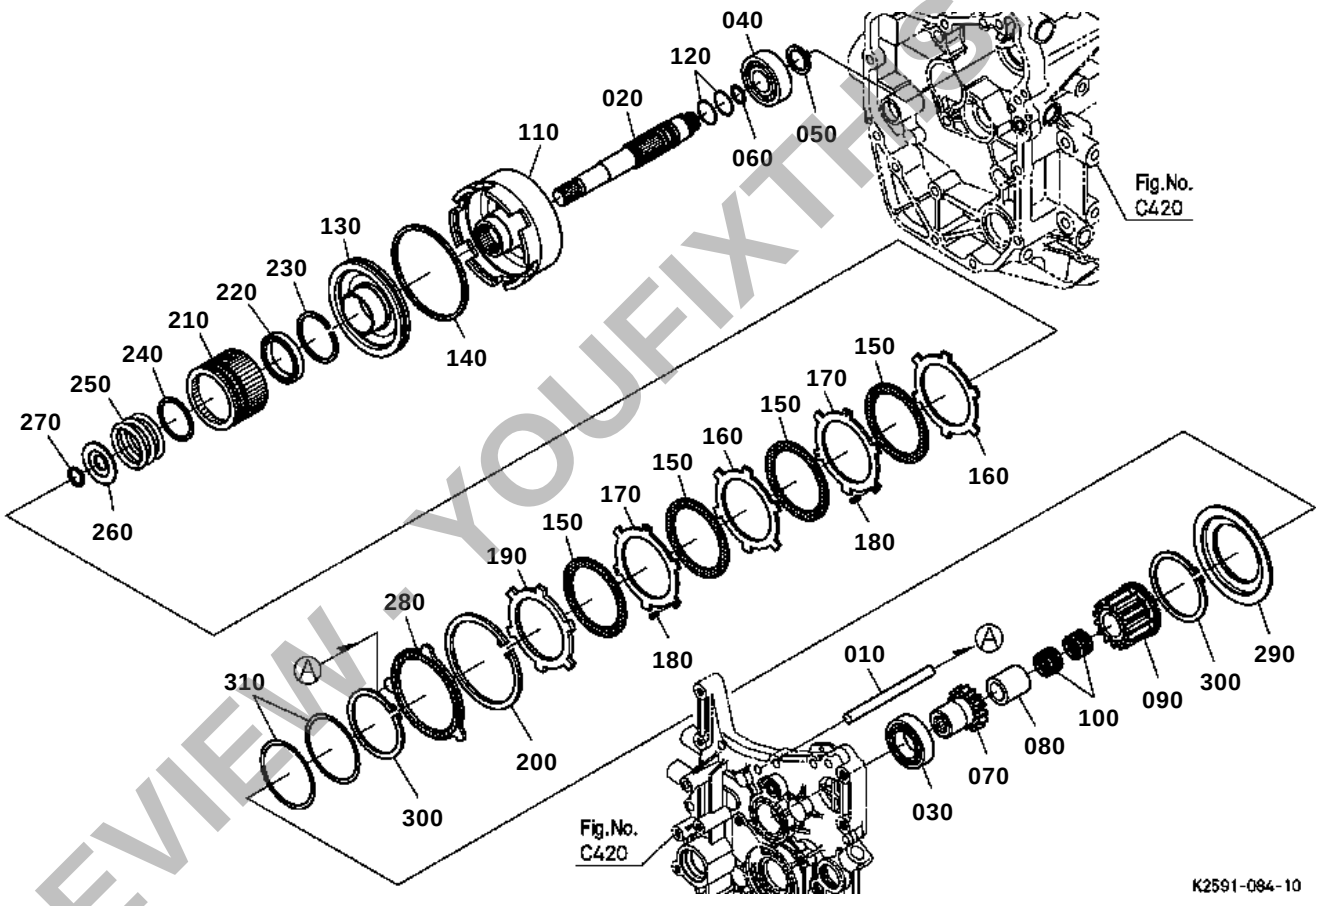


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

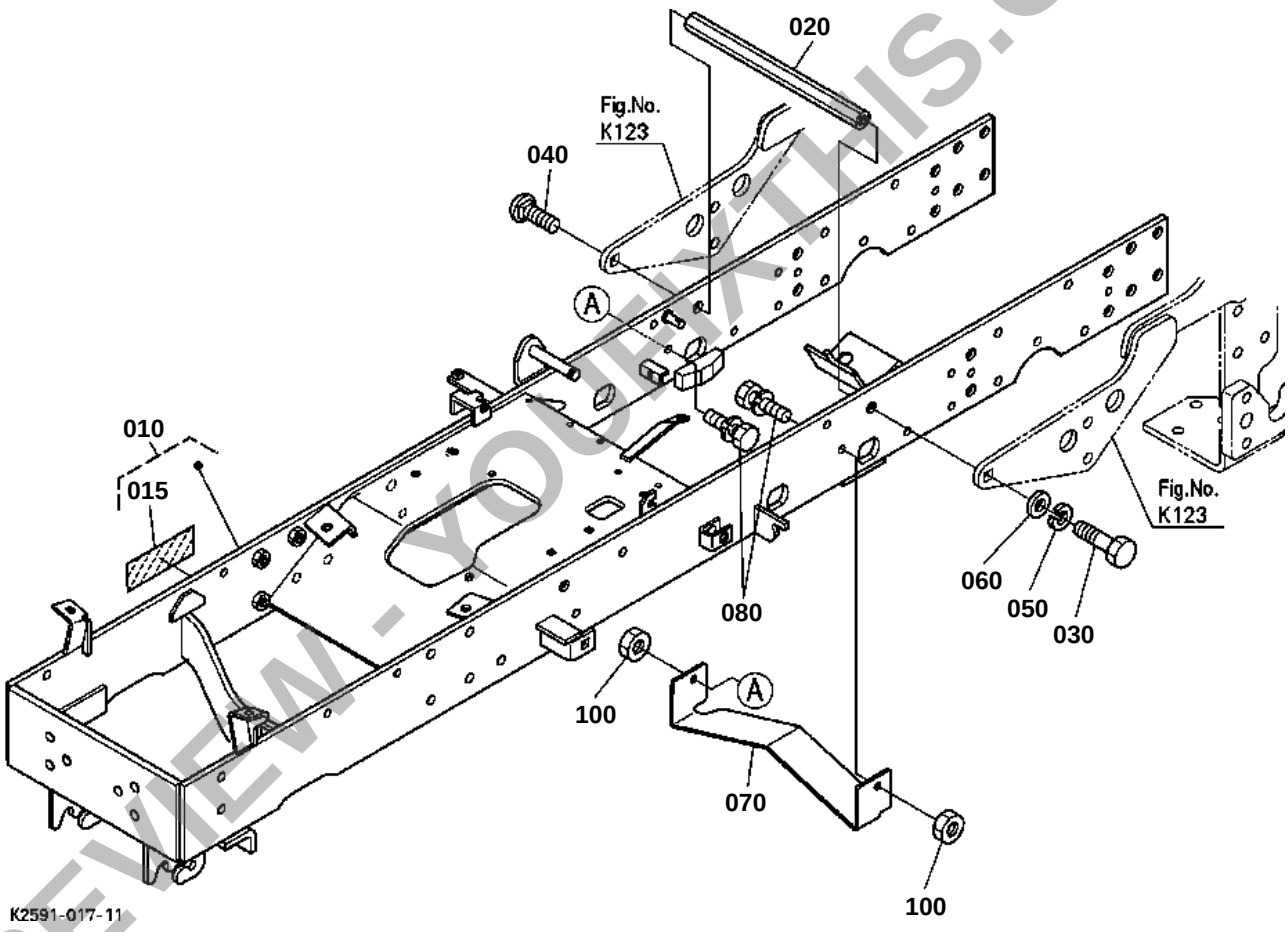

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

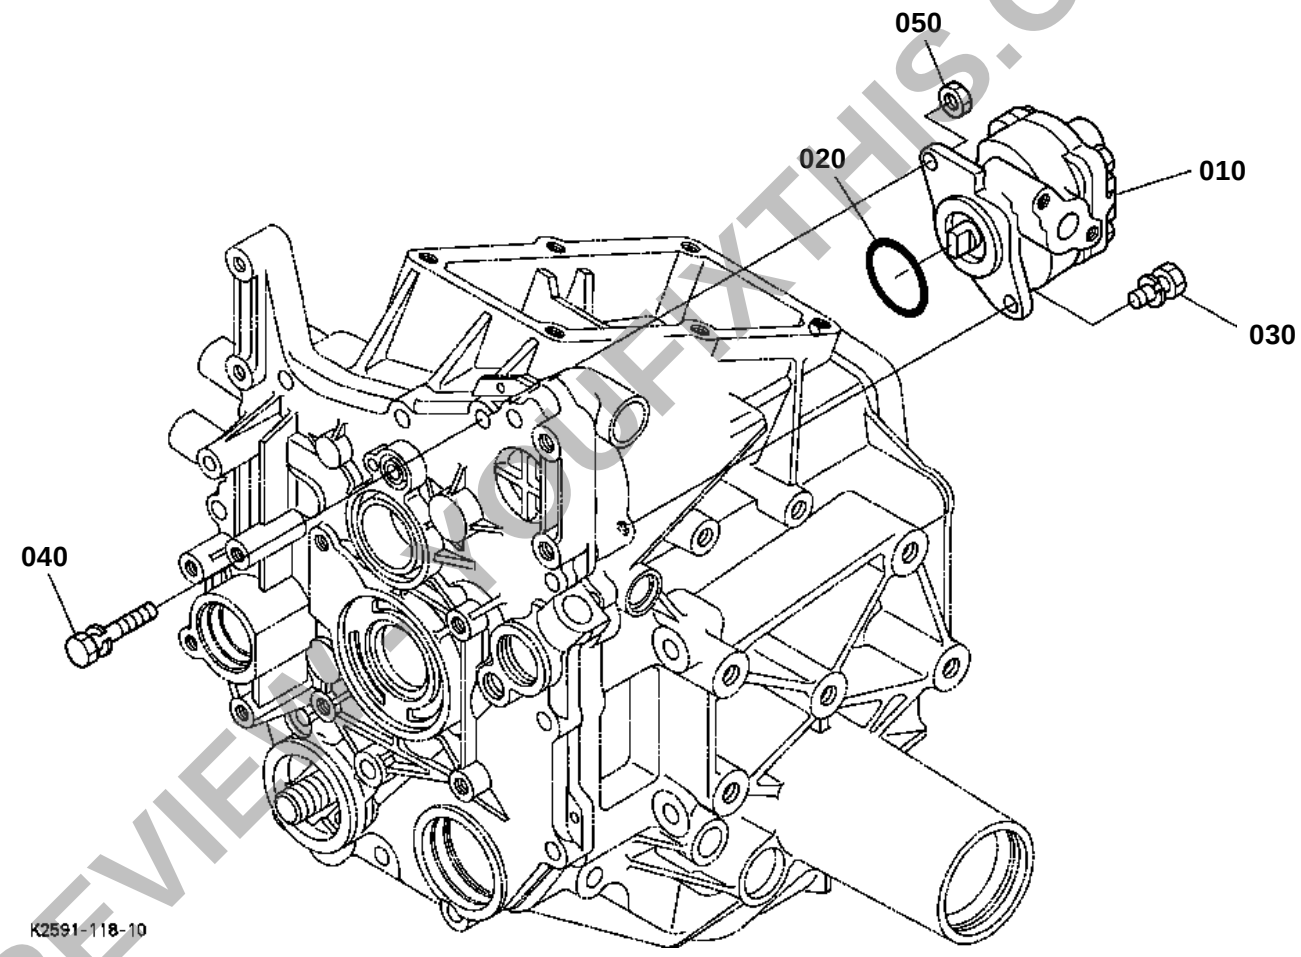


PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Part No.	Description	Book
ELECTRICAL SYSTEM	01A525	STARTER	100K0805
	01A530	STARTER [COMPONENT PARTS]	100K0805
	01A535	BATTERY	100K0805
	01B115	PANEL BOARD	100K0805
	01B215	SWITCH/SENSOR	100K0805
	01B301	HEAD LIGHT	100K0805
	01B303	HAZARD LIGHT/TAIL LIGHT	100K0805
	01B310	WINKER LAMP	100K0805
	01B501	ELECTRICAL WIRING	100K0805
FRONT AXLE	01C413	FRONT FRAME	100K0805
	01C417	SUB FRAME	100K0805
	01C419	ENGINE SUPPORT	100K0805
TRANSMISSION	01C420	TRANSMISSION CASE	100K0805
	01C427	REAR AXLE CASE	100K0805
	01D001	CLUTCH SHAFT/OUTPUT SHAFT	100K0805
	01D005	PROPELLER SHAFT	100K0805
	01D010	HST	100K0805
	01D015	HST [COMPONENT PARTS]	100K0805
	01D107	RANGE GEAR SHAFT	100K0805
	01D135	PTO SHAFT	100K0805
	01D137	MID PTO	100K0805
	01D140	REAR DIFFERENTIAL	100K0805
	01D141	FWD IDLE SHAFT	100K0805
	01D142	GP IDLE SHAFT	100K0805
	01D143	FRONT WHEEL PROPELLER SHAFT	100K0805
SPEED CHANGE	01D217	RANGE GEAR SHIFT FORK	100K0805
	01D220	PTO GEAR SHIFT FORK	100K0805
	01D222	PTO GEAR SHIFT ARM	100K0805
	01D225	DIFFERENTIAL LOCK SHIFT FORK	100K0805
REAR AXLE	01D301	REAR AXLE	100K0805
BRAKE	01E001	BRAKE	100K0805
SPEED CHANGE	01F107	NEUTRAL HOLDER LINK	100K0805
	01F108	SPEED CONTROL PEDAL	100K0805
	01F110	RANGE GEAR SHIFT LEVER	100K0805
	01F113	FRONT WHEEL DRIVE LEVER	100K0805
	01F122	PTO SELECT LEVER	100K0805
	01F125	PTO GEAR SHIFT LEVER	100K0805
PUMP/MOTOR SYSTEM	01F143	HYDRAULIC CONTROL LEVER	100K0805
BRAKE	01F201	BRAKE PEDAL	100K0805
REAR AXLE	01F205	DIFFERENTIAL LOCK PEDAL	100K0805
FRONT AXLE	01G110	FRONT DIFFERENTIAL CASE	100K0805
	01G115	FRONT DIFFERENTIAL	100K0805
	01G120	DIFFERENTIAL GEAR SHAFT	100K0805
	01G125	FRONT AXLE CASE	100K0805
	01G130	FRONT AXLE	100K0805
STEERING	01H101	STEERING HANDLE	100K0805
	01H110	STEERING CONTROLLER	100K0805
	01H120	STEERING LINKAGE	100K0805
	01H122	STEERING CYLINDER [COMPONENT PARTS]	100K0805

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

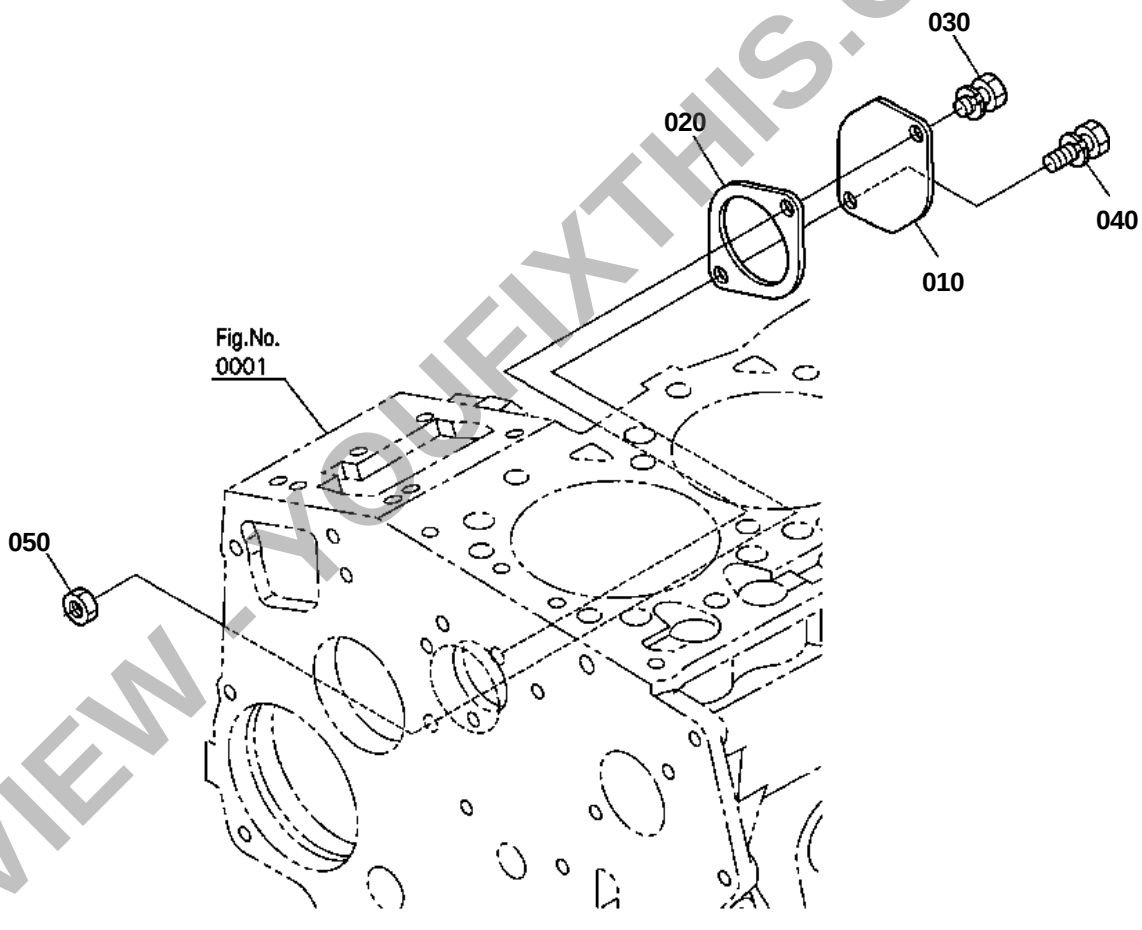

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	K2561-12410	GEAR SHAFT FINAL	1			10T	0.61	1.342
020	32430-44260	BEARING ROLLER	1				0.17	0.374
030	37415-17710	BEARING BALL	1				0.15	0.33
040	K5820-38110	SHIM	1			0.6mm	0.004	0.0088
040	K5820-38120	SHIM	1			0.8mm	0.005	0.011
040	K5820-38130	SHIM	1			1.0mm	0.005	0.011
040	K5820-38140	SHIM	1			1.2mm	0.007	0.0154
040	K5820-38150	SHIM	1			1.4mm	0.008	0.0176
040	36330-28410	SHIM	1			0.3mm	0.002	0.0044
050	K2561-12510	ASSY DIFFERENTIAL	1				4.5	9.9
060	K2561-12490	CASE DIFFERENTIAL	1				2.5	5.5
070	K2561-12480	SHAFT DIFF.PINION	1				0.3	0.66
080	K2561-12470	KEY FEATHER	1				0.002	0.0044
090	99999-99999	BLANK	0				0	0
100	31351-26390	WASHER DIFF.PINION	2				0.012	0.0264
110	99999-99999	BLANK	0				0	0
120	99999-99999	BLANK	0				0	0
130	31331-26470	WASHER SIDE GEAR	2			1.5mm	0.005	0.011
130	31331-26480	WASHER SIDE GEAR	2			1.6mm	0.017	0.0374
130	31331-26490	WASHER SIDE GEAR	2			1.7mm	0.02	0.044
140	K2561-12550	GEAR FINAL	1			66T	3.71	8.162
150	37300-28170	PIN STRAIGHT	2				0.025	0.055
160	37800-43870	BOLT	8				0.026	0.0572
170	K2561-12590	SHIFTER DIFF.LOCK	1				0.4	0.88
180	08101-06208	BEARING BALL	1				0.355	0.781
190	08101-06210	BEARING BALL	1				0.45	0.99
200	K2561-90100	ASSY GEAR BEVEL	1			6-37T	1.57	3.454
210	K2561-90120	ASSY GEAR BEVEL	1			12-20T	0.6	1.32

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	K2561-36050	SHAFT HYD.ARM	1				1.37	3.014
020	K2561-36062	ARM HYDRAULIC	1				1.07	2.354
030	K2561-36122	ROD HYD.PISTON	1				0.27	0.594
040	05411-00640	PIN SPRING	1				0.006	0.0132
050	K2561-36110	PISTON HYD.	1				1.2	2.64
060	K2561-36140	RING BACK UP	1				0.005	0.011
070	04811-00700	O RING	1				0.008	0.0176
080	K2561-36072	ARM LIFT LH	1				1.66	3.652
090	K2561-36082	ARM LIFT RH	1				1.6	3.52
100	04816-00300	O RING	1				0.001	0.0022
110	04816-00320	O RING	1				0.003	0.0066
120	04612-00300	CIR CLIP EXTERNAL	2				0.003	0.0066

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 12 of 285 pages

The full manual includes:

- All 285 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota BX23D Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual