Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts at it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number refering to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quanity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.
>= Your serial number should be greater than or equal to the number shown.
<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.
←→ The part shown will work for the older and later serial number.
The part shown is not interchangable with the other serial number.
← new for old
→ old for new

Remarks → Notes about this particulart part. Sometimes this may say except [FR] or [CA]

Note about Country Codes:

The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia


If the remarks column says for example EXCEPT [FR] this part works in all countries except France.
That means it will work here in the USA.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Part No.	Description	Book
ENGINE	010001	CRANKCASE	100A0267
	010002	OIL PAN	100A0267
	010003	CYLINDER HEAD	100A0267
	010004	GEAR CASE	100A0267
	010005	HEAD COVER	100A0267
	010006	OIL FILTER	100A0267
	010007	DIPSTICK AND GUIDE	100A0267
	010008	OIL PUMP	100A0267
	010100	MAIN BEARING CASE	100A0267
	010101	CAMSHAFT AND IDLE GEAR SHAFT	100A0267
	010102	PISTON AND CRANKSHAFT	100A0267
	010103	FLYWHEEL	100A0267
	010105	FUEL CAMSHAFT AND GOVERNOR SHAFT	100A0267
	010200	IDLE APPARATUS	100A0267
	010201	STOP SOLENOID	100A0267
	010202	INJECTION PUMP	100A0267
	010204	GOVERNOR	100A0267
	010205	SPEED CONTROL PLATE	100A0267
	010206	NOZZLE HOLDER AND GLOW PLUG	100A0267
	010207	NOZZLE HOLDER [COMPONENT PARTS]	100A0267
	010305	FUEL PUMP COVER	100A0267
	010400	DYNAMO AND PULLEY	100A0267
	010401	DYNAMO (COMPONENT PARTS)	100A0267
	010404	STARTER	100A0267
	010405	STARTER [COMPONENT PARTS]	100A0267
	010406	OIL SWITCH AND PLUG	100A0267
	010500	WATER FLANGE AND THERMOSTAT	100A0267
	010501	WATER PUMP	100A0267
	010503	WATER PIPE	100A0267
	010504	FAN	100A0267
	010600	VALVE AND ROCKER ARM	100A0267
	010601	INLET MANIFOLD	100A0267
	010602	EXHAUST MANIFOLD	100A0267
	020603	AIR CLEANER	100A0267
	020605	MUFFLER	100A0267
	010903	PISTON KIT [OPTION]	100A0267
	010906	UPPER GASKET KIT [OPTION]	100A0267
	010907	LOWER GASKET KIT [OPTION]	100A0267
FUEL SYSTEM	02A010	ACCELERATOR LEVER	100A0267
	02A100	FUEL TANK	100A0267
COOLING WATER SYSTEM	02A210	WATER PIPE	100A0267
	02A220	RADIATOR	100A0267
ELECTRICAL SYSTEM	02B010	BATTERY	100A0267
	02B100	ELECTRICAL PARTS	100A0267
TRANSMISSION	02C400	HST	100A0267
	02C40501	HST [COMPONENT PARTS]	100A0267
	02C40502	HST [COMPONENT PARTS]	100A0267
	02C420	UNIVERSAL JOINT/HST FAN	100A0267
REAR TIRE	02D200	REAR WHEEL	100A0267
BRAKE	02D510	BRAKE	100A0267
	02D525	PARKING BRAKE LEVER	100A0267
	02D530	BRAKE ROD	100A0267
SPEED CHANGE	02D700	SPEED CHANGE PEDAL	100A0267
	02D730	PTO CLUTCH CONTROL LEVER/WIRE	100A0267
FRONT AXLE	02E010	FRONT AXLE	100A0267
FRONT TIRE	02E100	FRONT WHEEL	100A0267
CHASSIS	02E500	MAIN FRAME/STEERING SUPPORT	100A0267
ENGINE	02E550	ENGINE SUPPORT	100A0267
STEERING	02E700	POWER STEERING/STEERING HANDLE	100A0267

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

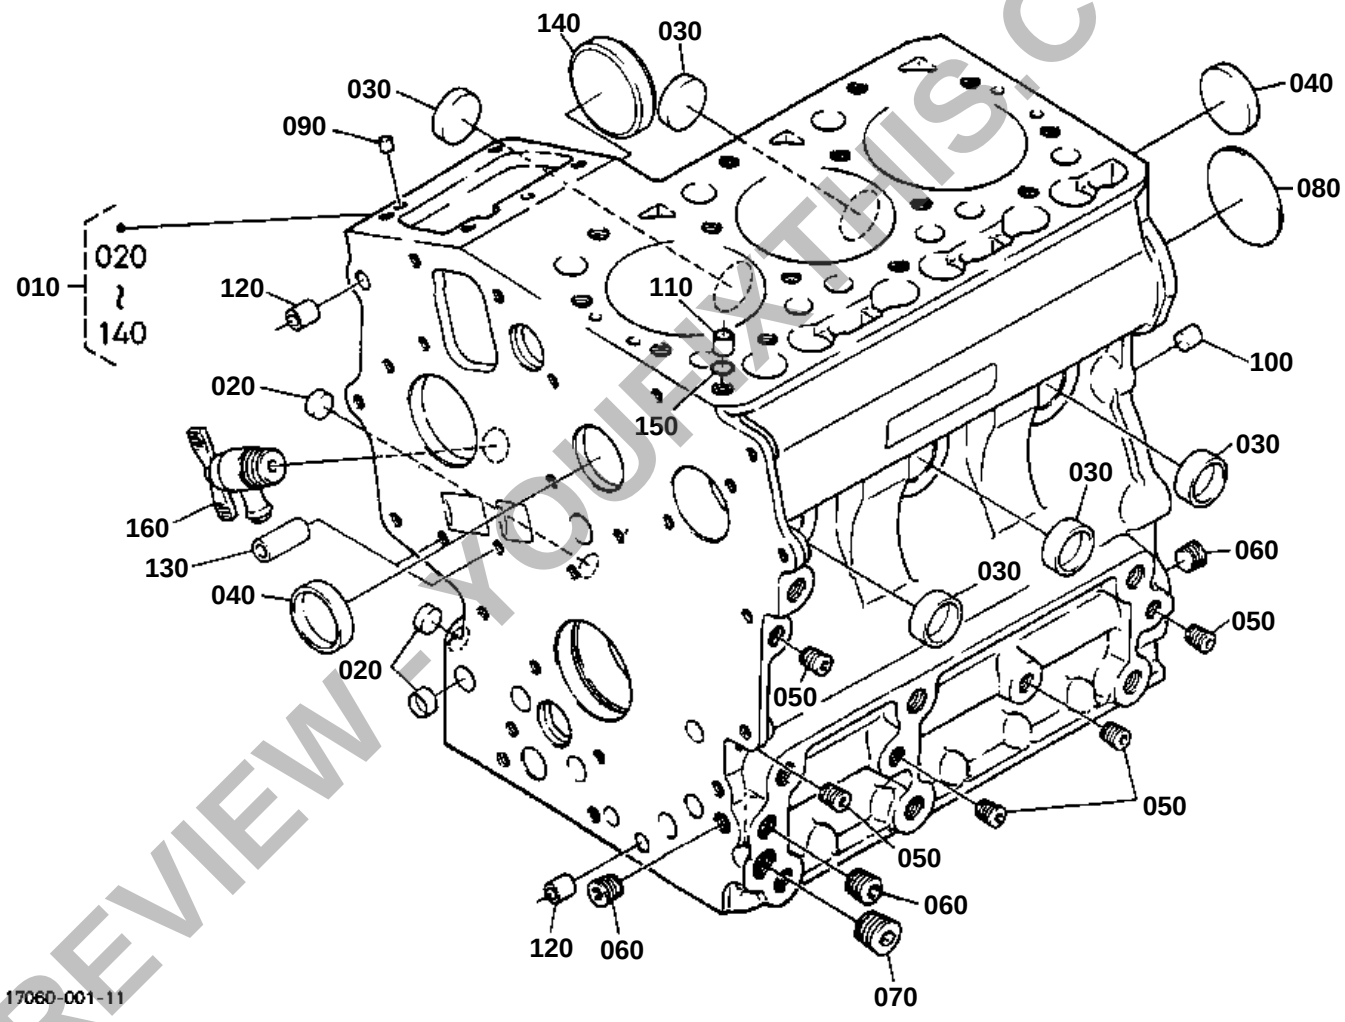

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	1E051-01015	COMP.CRANKCASE	1				15	33
020	16851-96260	CAP SEALING	3				0.005	0.011
030	16851-96270	CAP SEALING	5				0.005	0.011
040	15451-96270	CAP SEALING	2				0.001	0.0022
050	15261-96010	PLUG	5				0.002	0.0044
060	15521-96020	PLUG	3				0.003	0.0066
070	15521-96030	PLUG	1				0.007	0.0154
080	15261-96160	PLUG EXPANSION	1				0.02	0.044
090	05012-00508	PIN STRAIGHT	2				0.001	0.0022
100	05012-00814	PIN STRAIGHT	2				0.006	0.0132
110	15221-33650	PIN PIPE	1				0.004	0.0088
120	15231-33960	PIN PIPE	2				0.001	0.0022
130	17331-59190	PIN PIPE	2				0.02	0.044
140	16851-16212	COVER FUEL CAMSHAFT	1				0.03	0.066
150	15221-33700	O RING	1				0.001	0.0022
160	15841-73020	ASSY COCK DRAIN	1				0.03	0.066


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

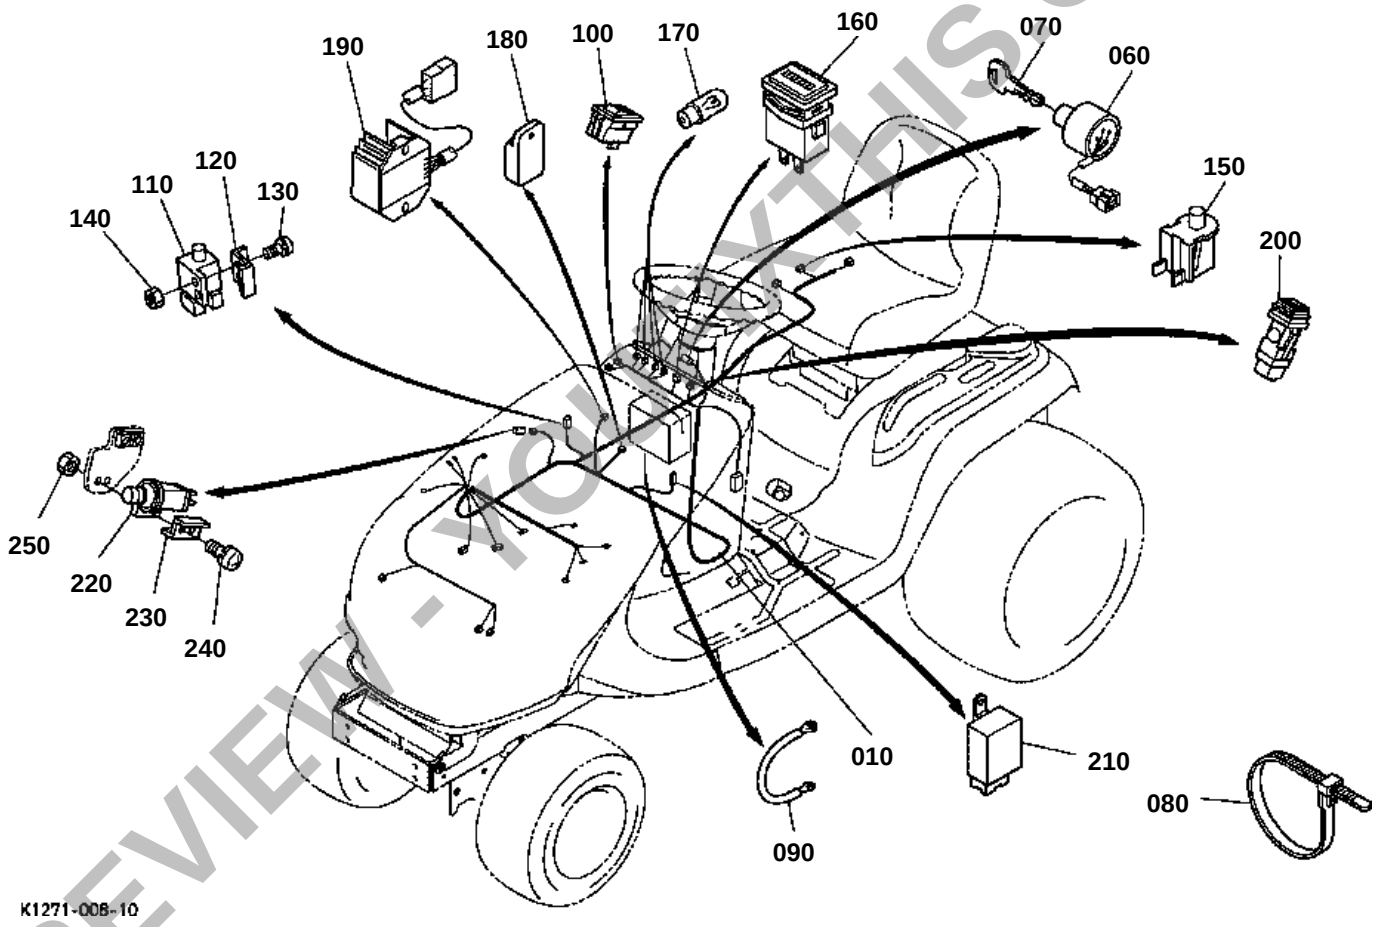


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

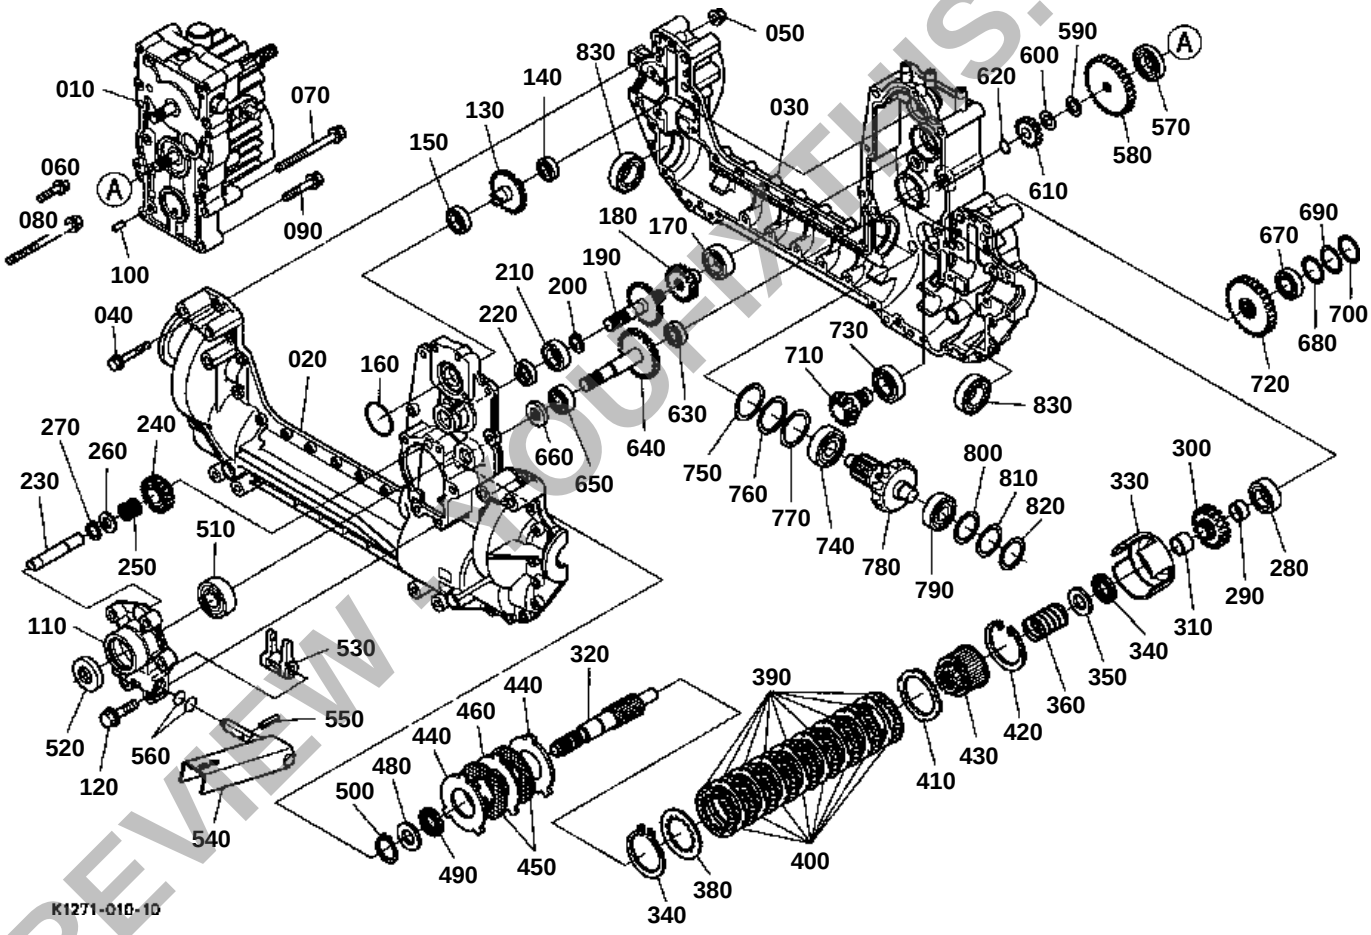


PREVIEW ONLY - YOUFIXTHIS.COM

Download full manual at youfixthis.com

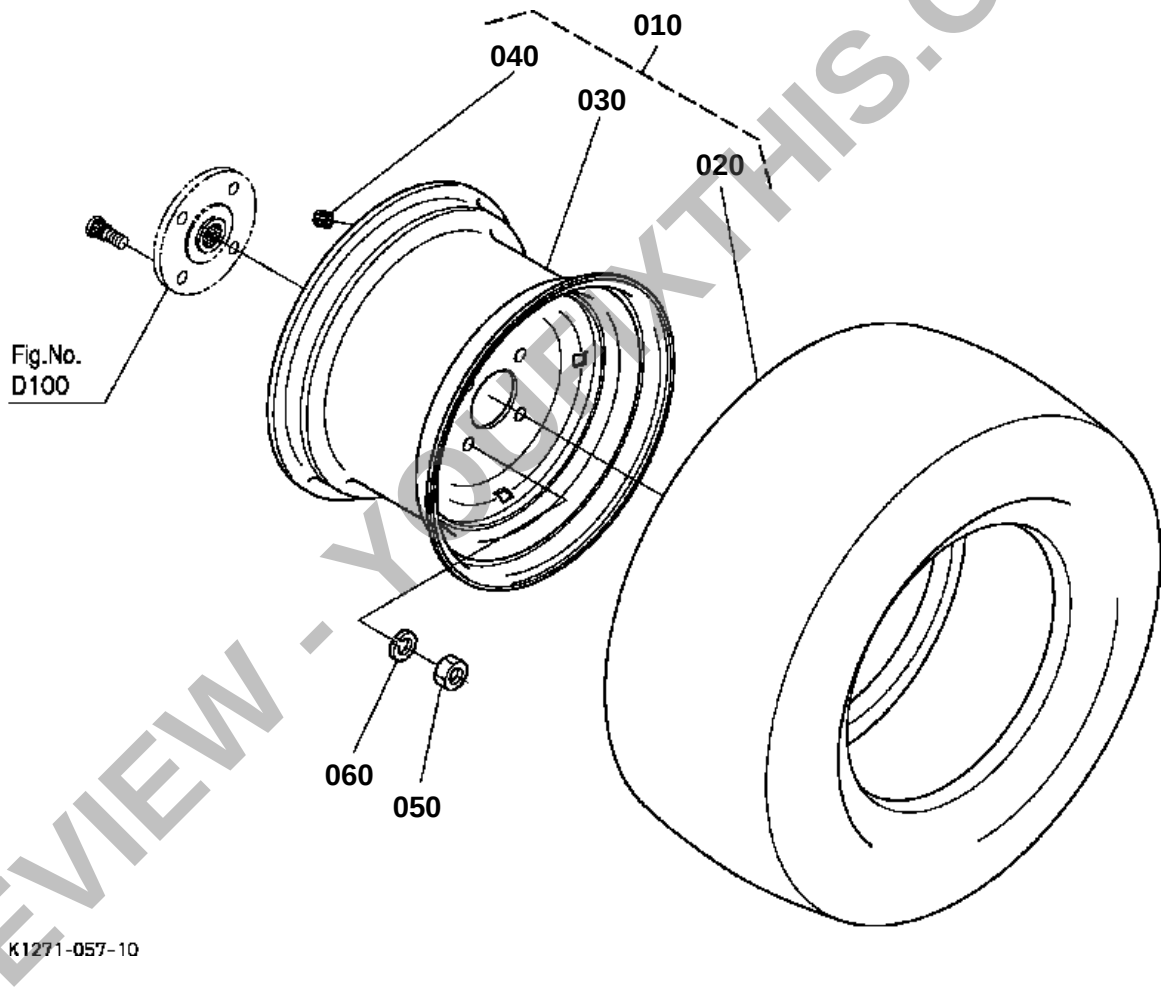


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

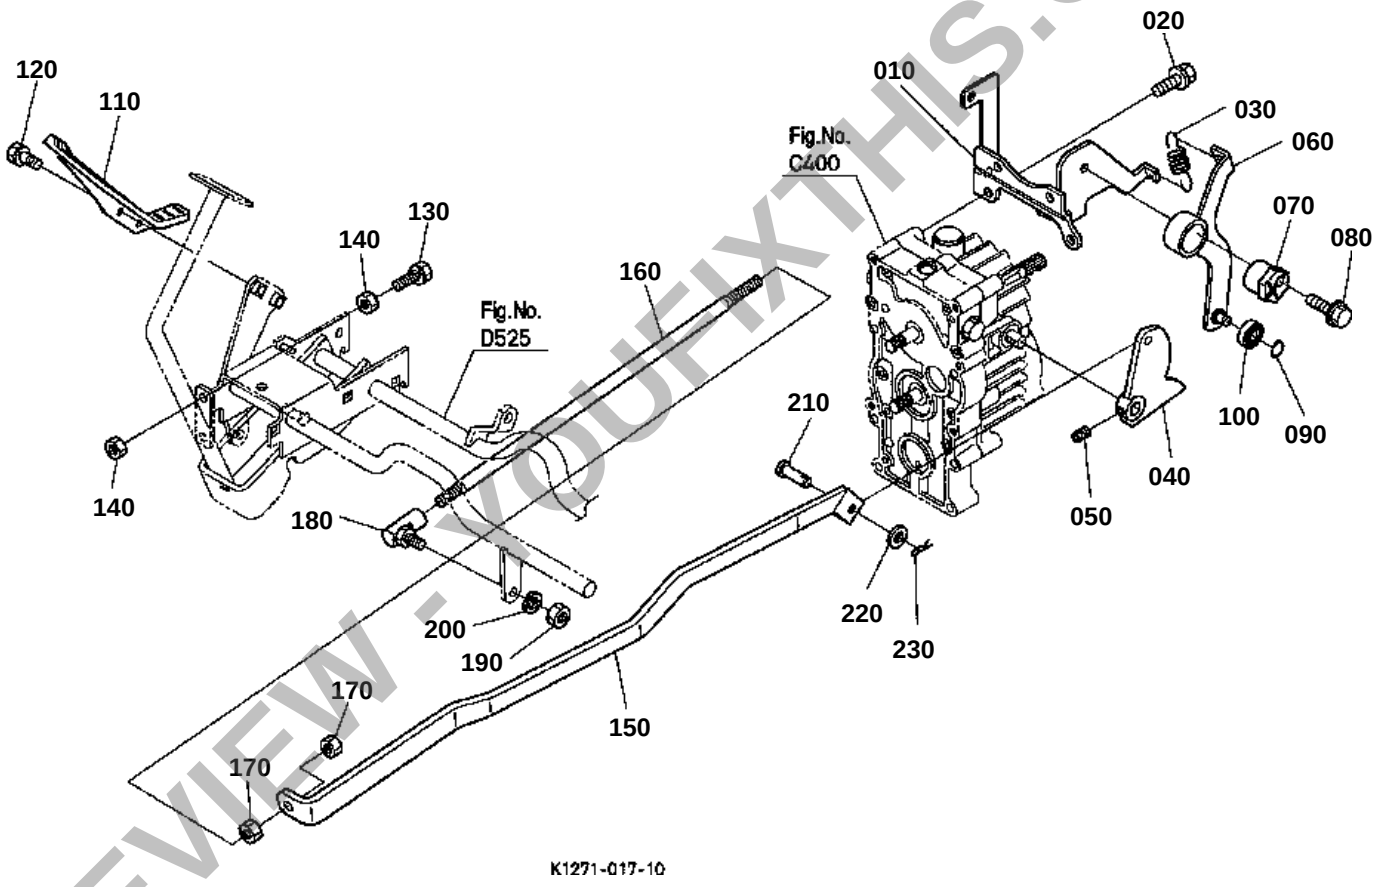

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

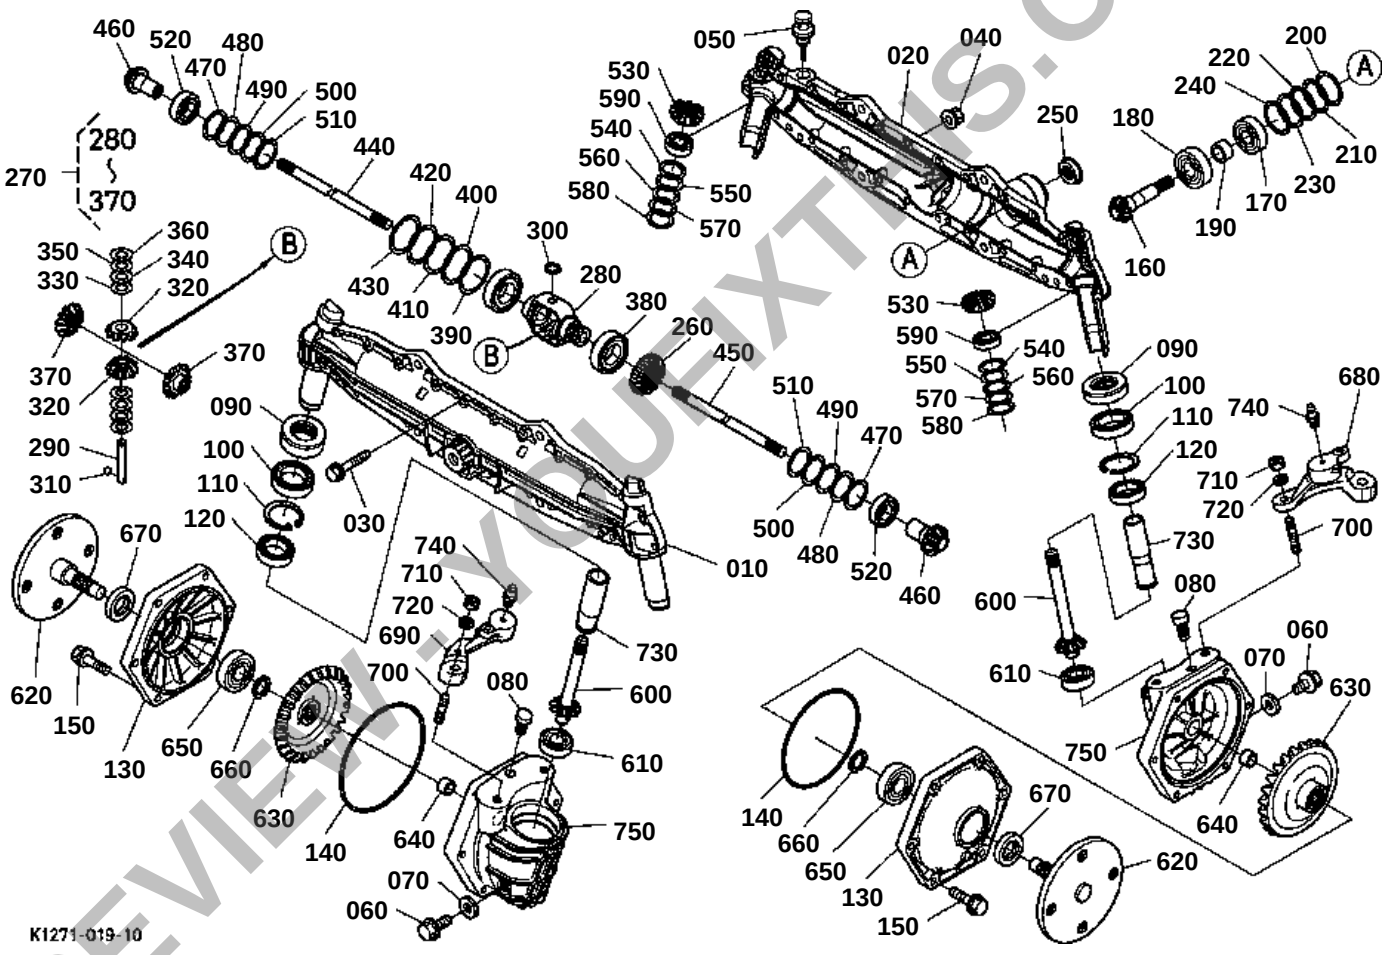

PREVIEW - YOUFIXTHIS.COM


K1271-019-10

Download full manual at youfixthis.com

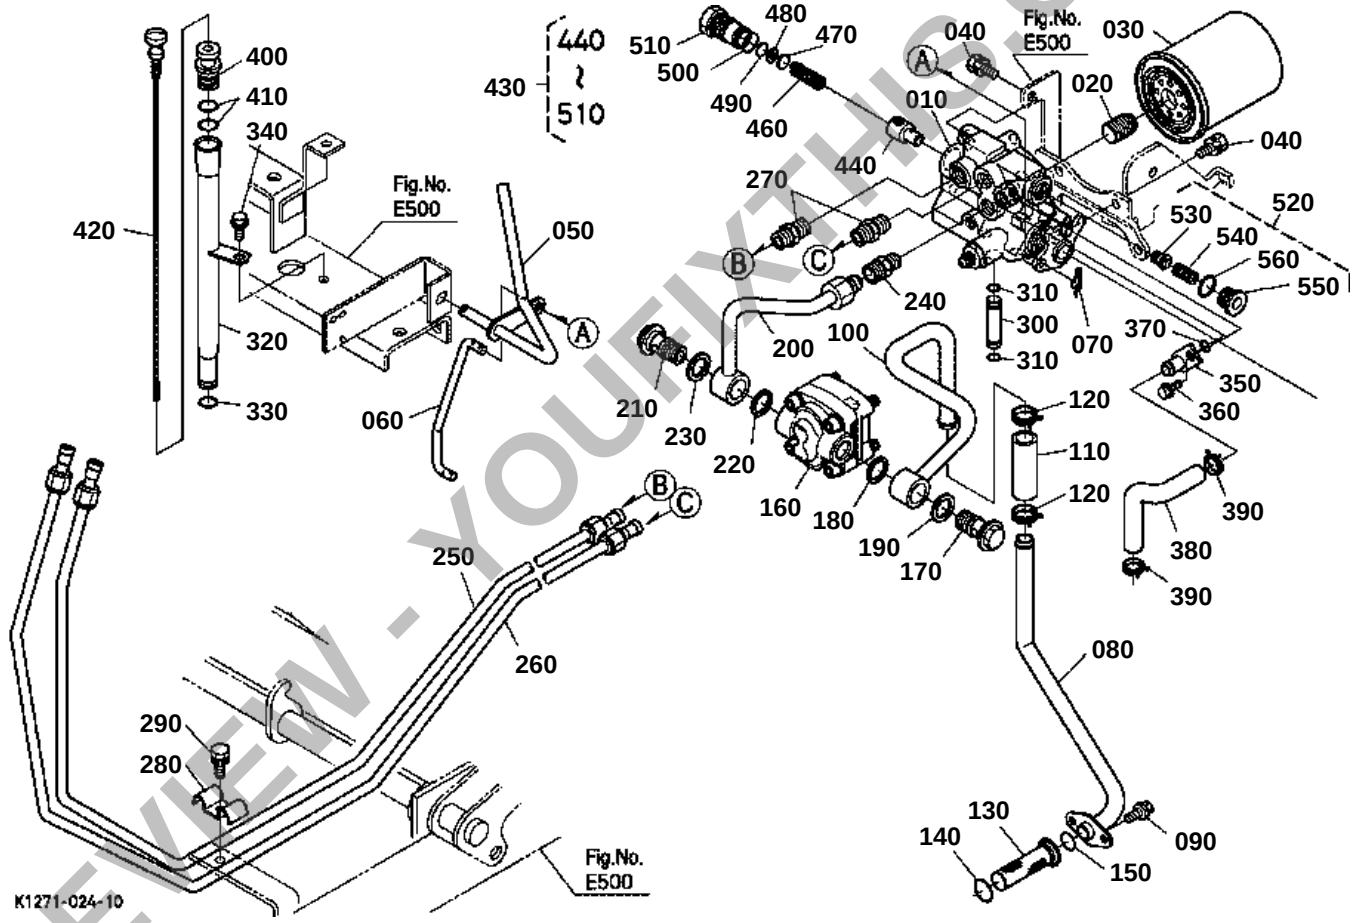

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

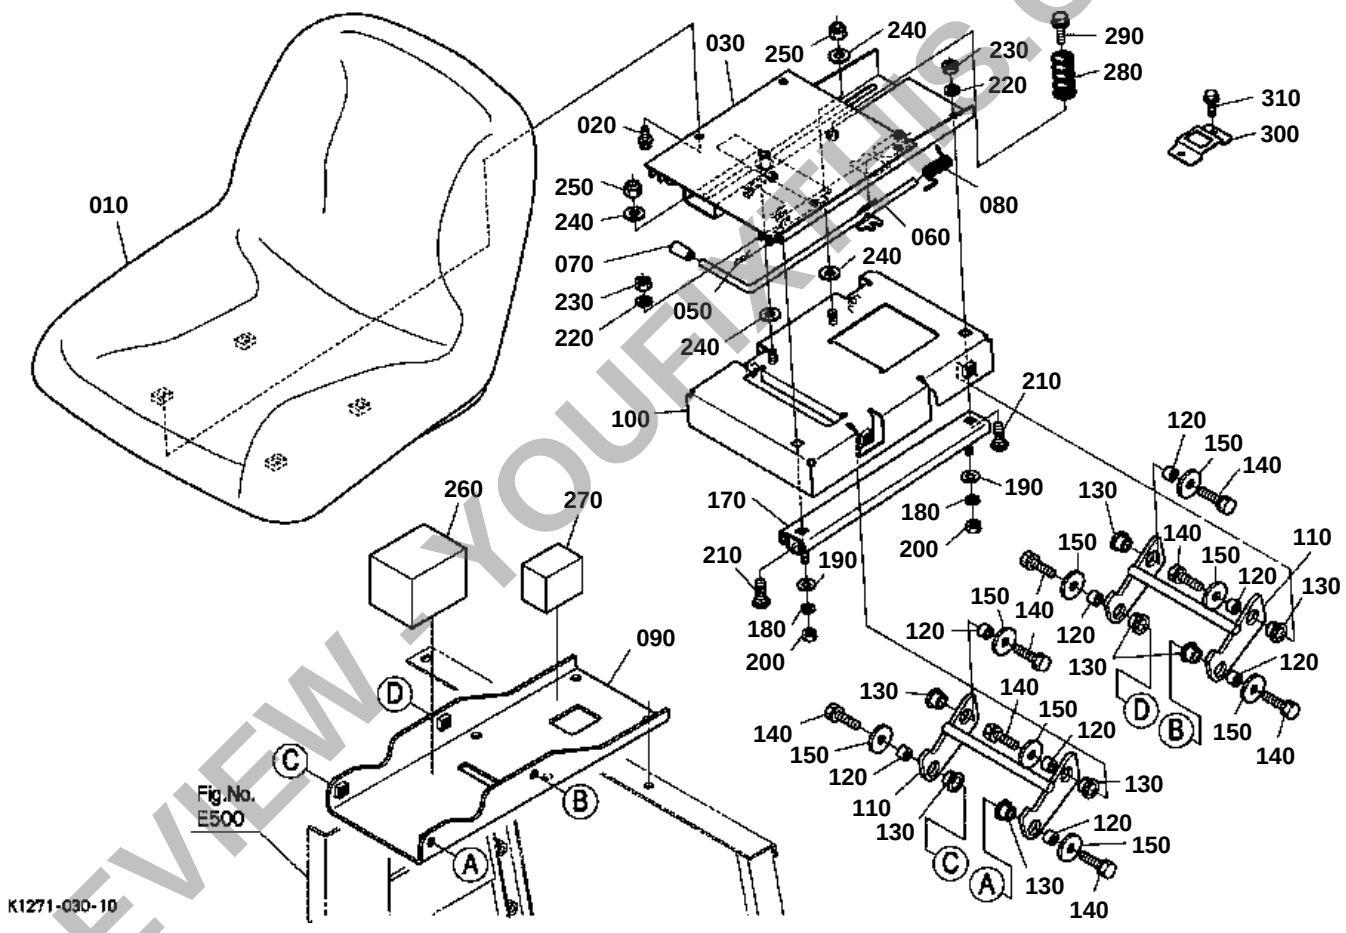

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Part No.	Description	Book
PUMP/MOTOR SYSTEM	02F010	CONTROL VALVE	100A0267
	02F300	HYDRAULIC LIFT CYLINDER	100A0267
	02F350	LIFT LINK	100A0267
HOOD/BONNET	02G001	HOOD(BONNET)	100A0267
	02G010	PANEL	100A0267
	02G030	FENDER	100A0267
	02G040	SEAT	100A0267
LABELS	02G100	LABEL	100A0267
ACCESSORIES	02P001	ACCESSORIES AND SERVICE PARTS	100A0267

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 12 of 143 pages

The full manual includes:

- All 143 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota GR2100 Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual