Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts at it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number refering to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quanity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.
>= Your serial number should be greater than or equal to the number shown.
<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.
←→ The part shown will work for the older and later serial number.
The part shown is not interchangable with the other serial number.
← new for old
→ old for new

Remarks → Notes about this particulart part. Sometimes this may say except [FR] or [CA]

Note about Country Codes:


The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France.
That means it will work here in the USA.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

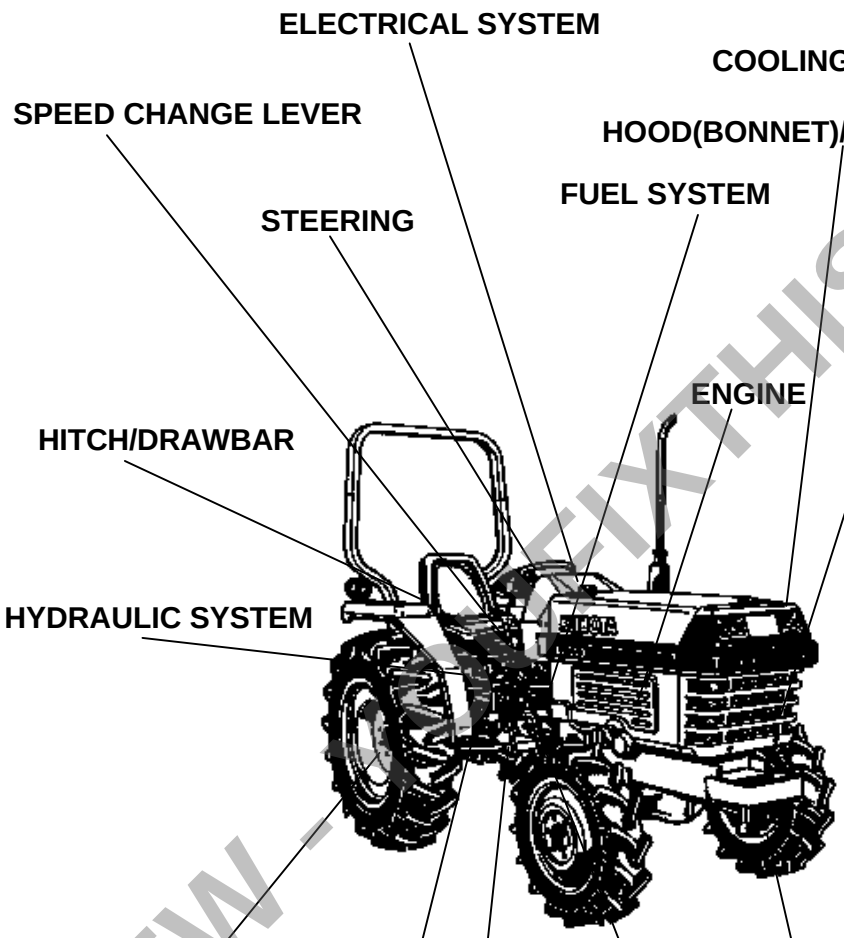

LABELS
ACCESSORIES

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


CRANKCASE

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	16417-01010	COMP.CRANKCASE	1				48.5	106.7
020	15521-96020	PLUG	5				0.003	0.0066
030	15521-96030	PLUG	2				0.007	0.0154
040	17391-96160	PLUG EXPANSION	3				0.003	0.0066
050	06311-75045	PLUG EXPANSION	1				0.026	0.0572
060	15221-03380	CAP SEALING	5				0.017	0.0374
070	16111-03390	CAP SEALING	2				0.027	0.0594
080	05012-00408	PIN STRAIGHT	2				0.001	0.0022
090	05012-00609	PIN STRAIGHT	2				0.003	0.0066
100	05012-00612	PIN STRAIGHT	2				0.003	0.0066
110	05012-01018	PIN STRAIGHT	1				0.012	0.0264
120	15221-33650	PIN PIPE	1				0.004	0.0088
130	06311-85020	CAP SEALING	1				0.002	0.0044
140	15221-33610	PLUG	1				0.009	0.0198
150	15021-33660	GASKET	1				0.001	0.0022
160	15221-33700	O RING	1				0.001	0.0022
170	15471-35010	ASSY PUMP OIL	1				0	0
180	15296-35150	GASKET OIL PUMP	1				0.001	0.0022
190	01053-50650	BOLT	4				0.011	0.0242
200	04512-60060	WASHER SPRING	4				0.001	0.0022
210	19202-35660	GEAR OIL PUMP DRIVE	1				0.23	0.506
220	05712-00410	KEY FEATHER	1				0.001	0.0022
230	15221-35682	NUT FLANGE	1				0.014	0.0308
240	15531-39010	SWITCH OIL	1				0.032	0.0704
250	06312-10020	PLUG	1				0.015	0.033

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

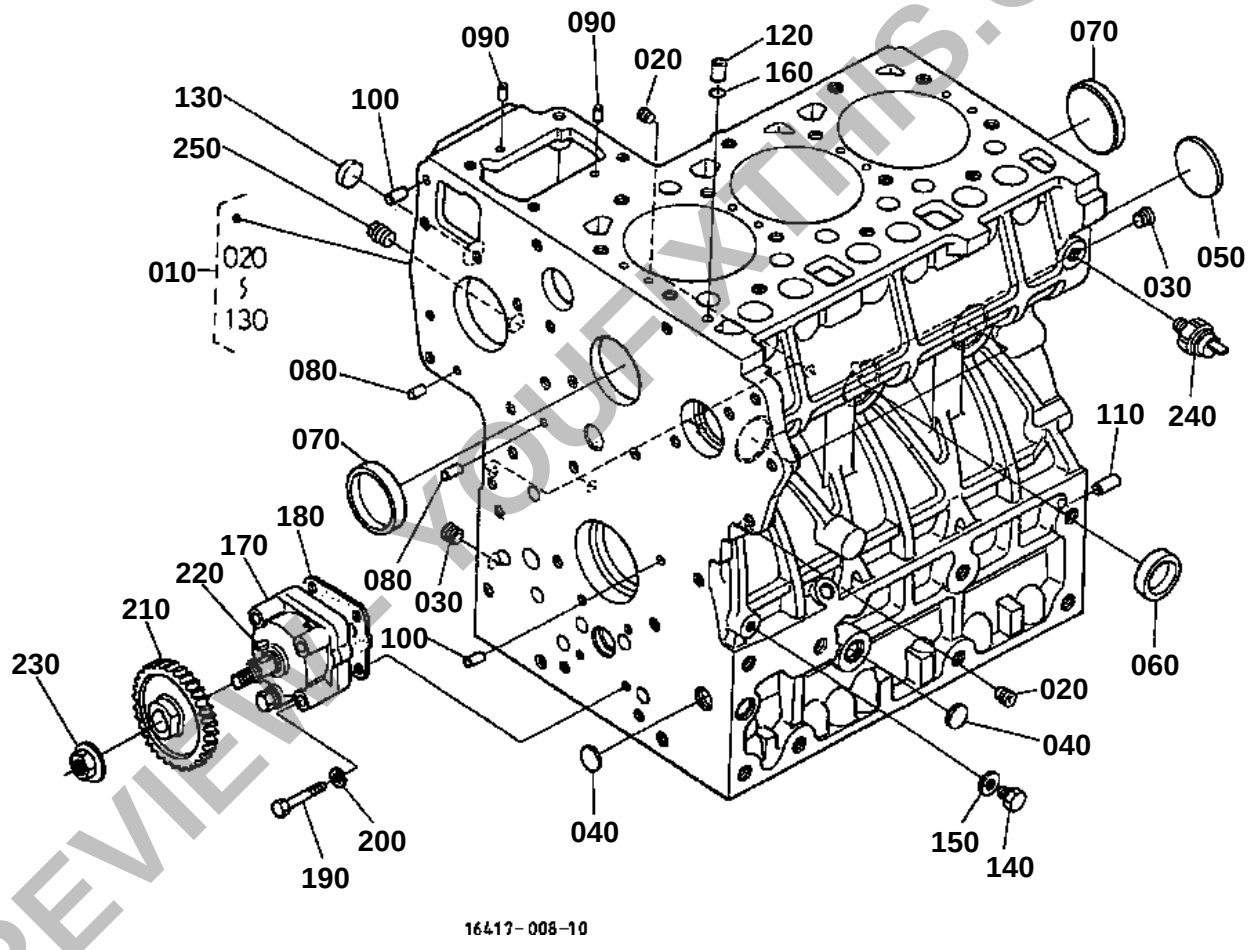

16417-008-10


PREVIEW OF YOUFIXTHIS.COM

Download full manual at youfixthis.com

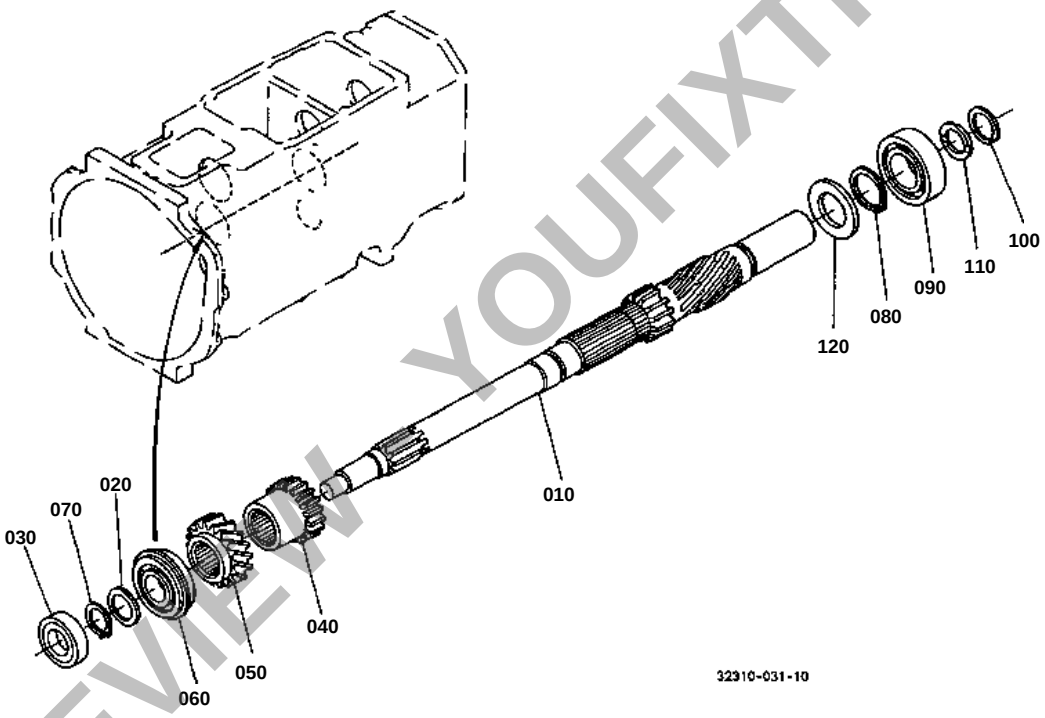


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

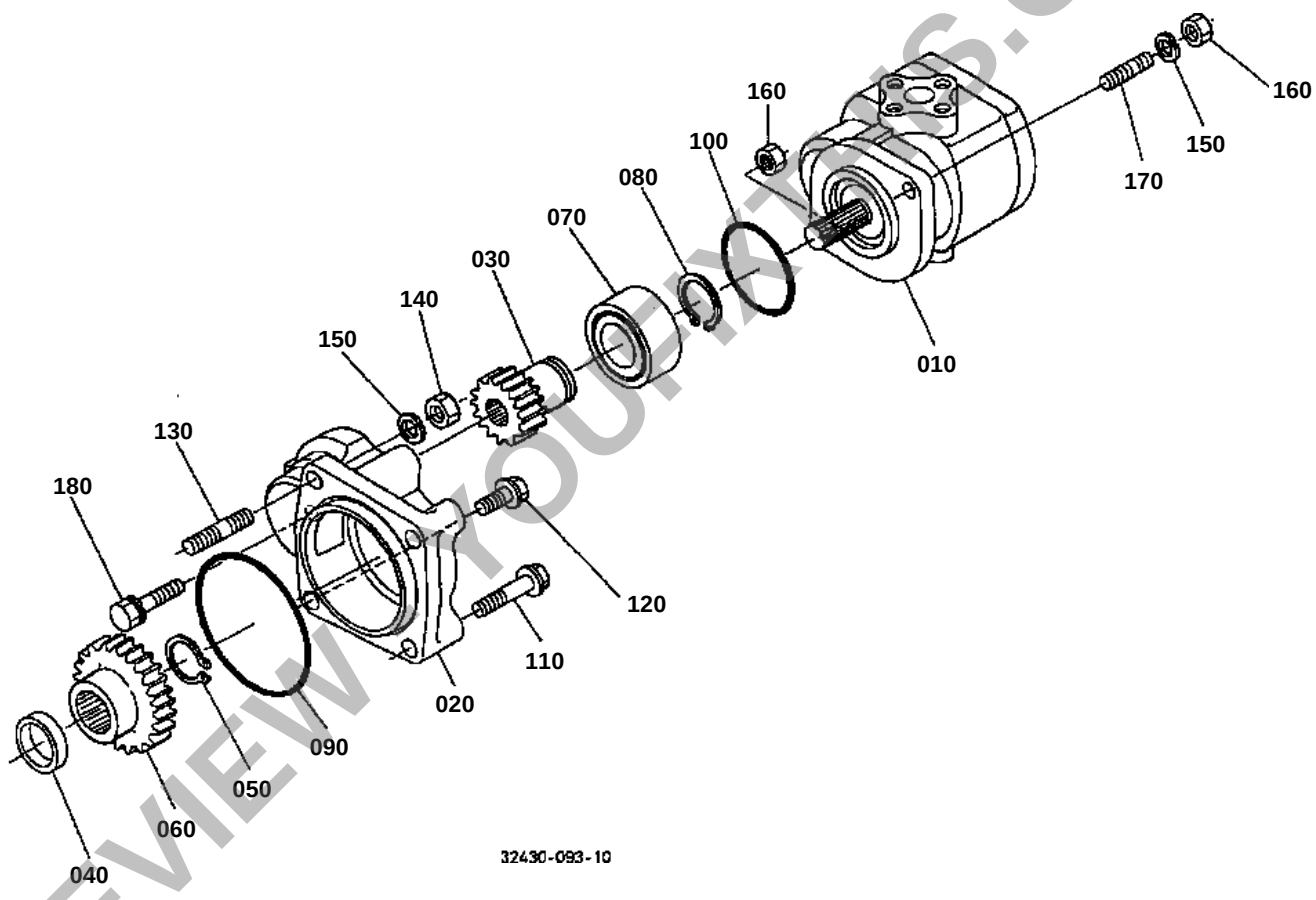


PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

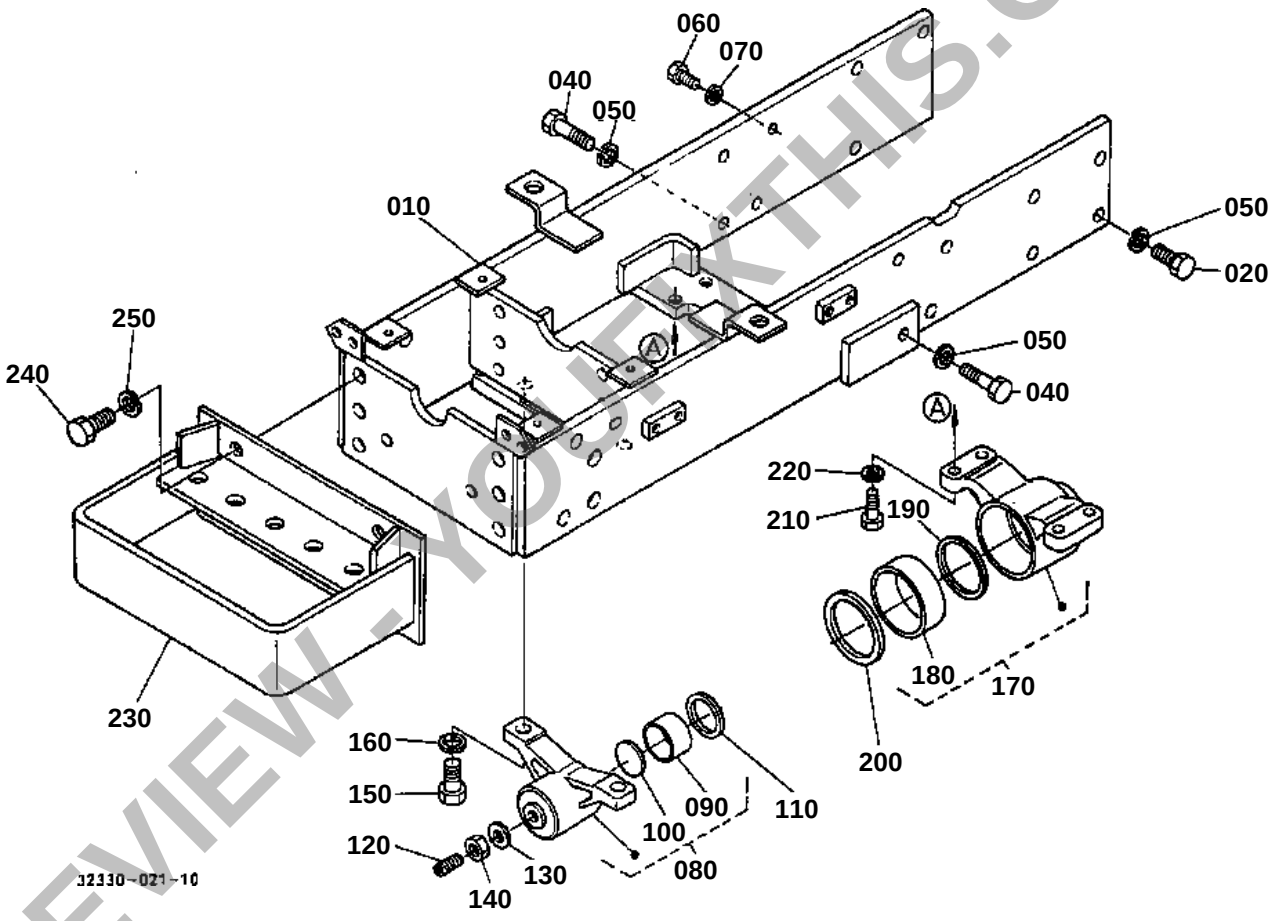


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

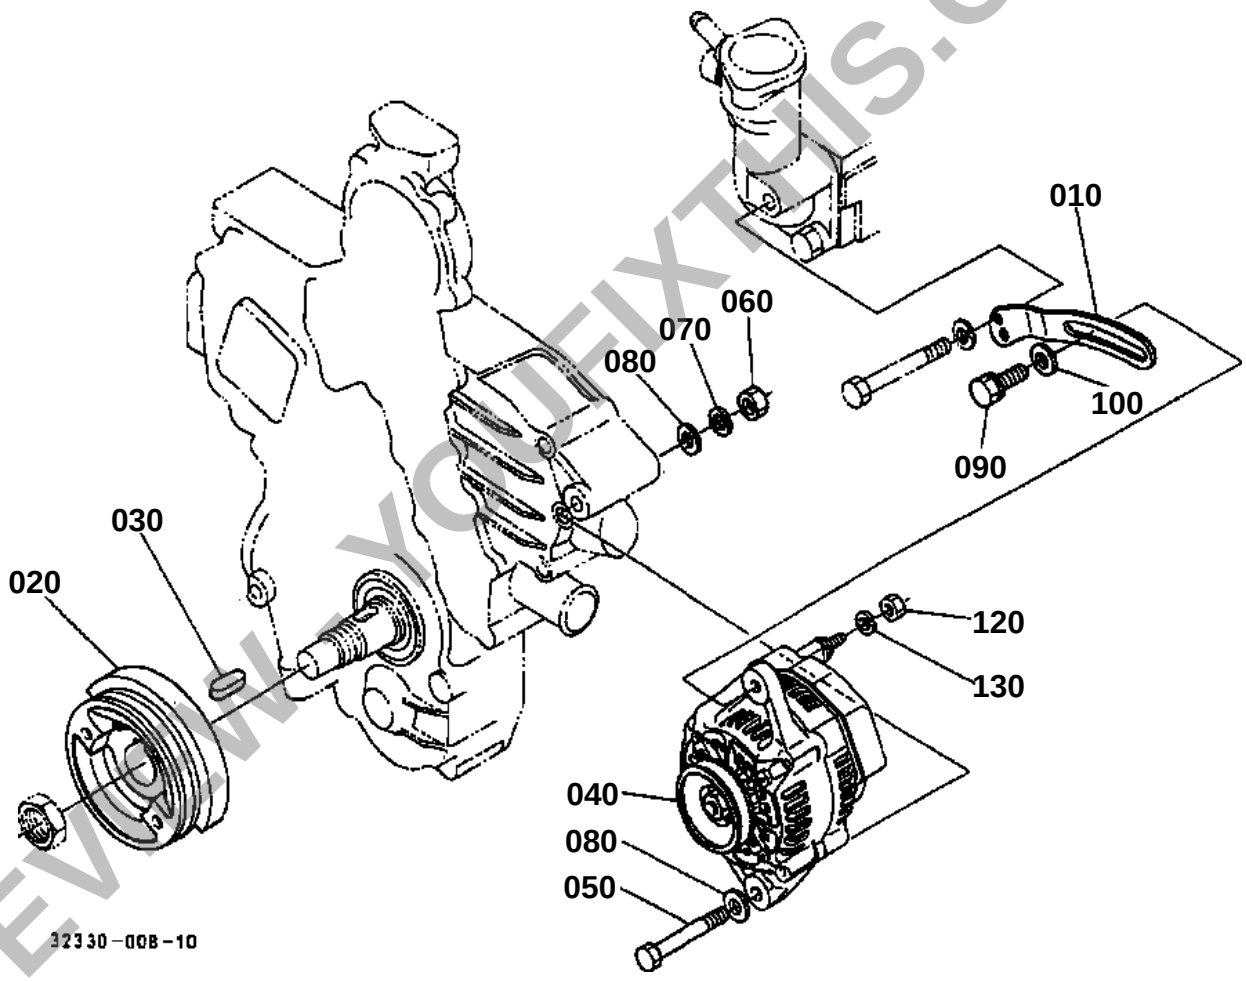

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

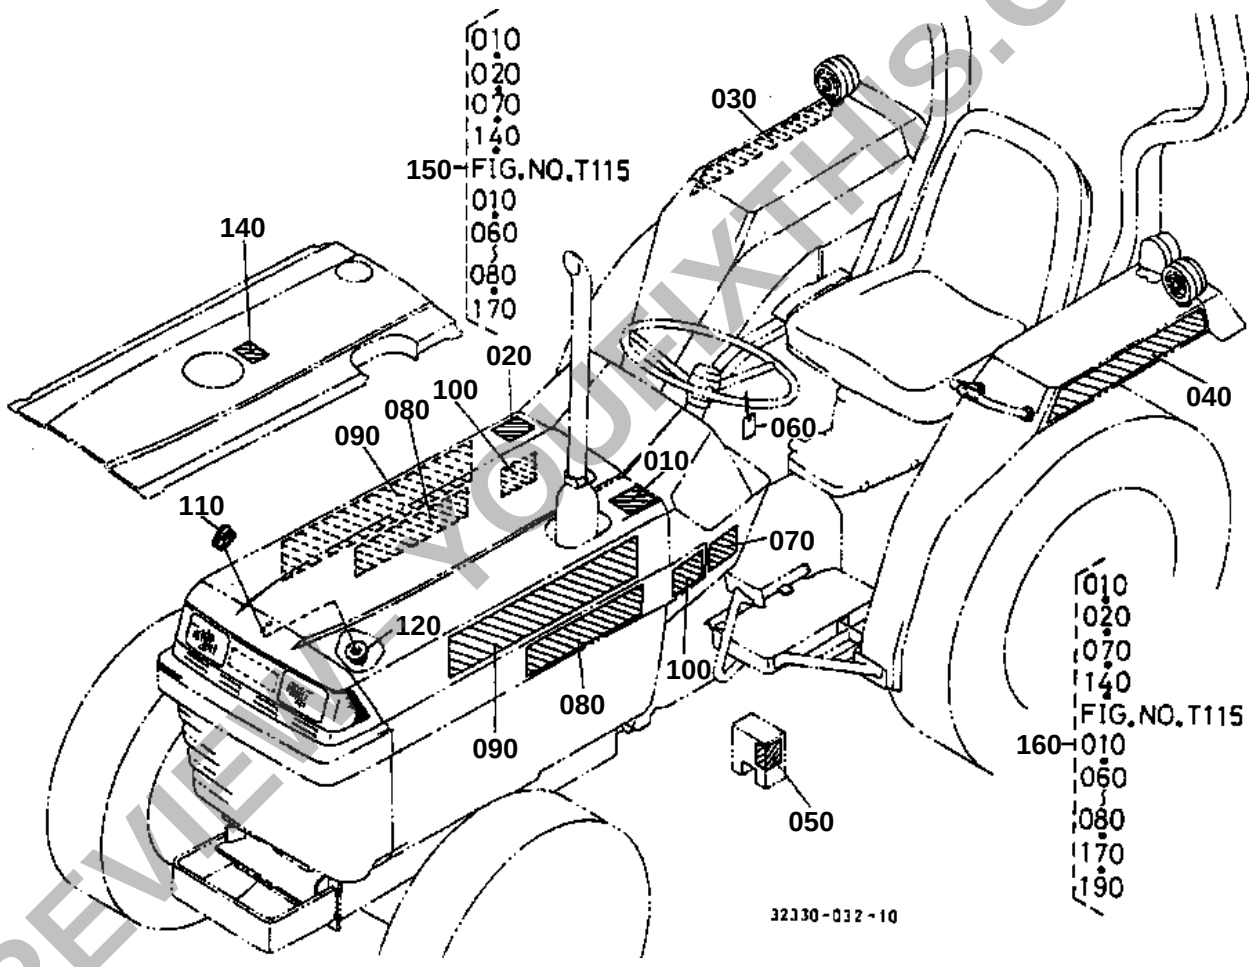


PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Part No.	Description	Book
SPEED CHANGE LEVER	02T053	MAIN GEAR SHIFT LEVER	100K0363
	02T054	PTO GEAR SHIFT LEVER	100K0363
	02T055	MAIN GEAR SHIFT FORK	100K0363
	02T056	PTO GEAR SHIFT FORK	100K0363
	02T057	RANGE GEAR SHIFT FORK AND LEVER	100K0363
REAR AXLE/REAR WHEEL	02T058	SPIRAL BEVEL PINION	100K0363
	02T059	REAR DIFFERENTIAL	100K0363
	02T060	DIFFERENTIAL LOCK PEDAL	100K0363
	02T061	REAR AXLE	100K0363
	02T06201	REAR WHEEL (9.5-24)	100K0363
	02T06202	REAR WHEEL (11.2-24)	100K0363
	02T06203	REAR WHEEL (13.6-16)	100K0363
BRAKE	02T06302	BRAKE	100K0363
	02T064	BRAKE PEDAL	100K0363
	02T065	PARKING BRAKE LEVER	100K0363
FRONT AXLE/FRONT WHEEL/CHASSIS	02T070	FRONT AXLE	100K0363
	02T071	FRONT AXLE CASE	100K0363
	02T072	DIFFERENTIAL GEAR SHAFT	100K0363
	02T073	FRONT DIFFERENTIAL CASE	100K0363
	02T074	FRONT DIFFERENTIAL	100K0363
	02T075	PROPELLER SHAFT	100K0363
	02T076	FRONT SHEEL DRIVE CASE	100K0363
	02T077	FRONT WHEEL DRIVE LEVER	100K0363
	02T07801	FRONT WHEEL (6-14)	100K0363
	02T07802	FRONT WHEEL (7-16)	100K0363
	02T07803	FRONT WHEEL (24X8.50-14)	100K0363
	02T079	FRONT AXLE FRAME	100K0363
STEERING	02T08201	STEERING LINKAGE (DRAG LINK) (MS)	100K0363
	02T08202	STEERING LINKAGE (DRAG LINK) (PS)	100K0363
	02T083	STEERING LINKAGE (TIE ROD)	100K0363
	02T08401	MANUAL STEERING AND HANDLE (MS)	100K0363
	02T08402	POWER STEERING AND HANDLE (PS)	100K0363
	02T08501	MANUAL STEERING [COMPONENT PARTS]	100K0363
	02T08502	POWER STEERING [COMPONENT PARTS]	100K0363
HYDRAULIC SYSTEM	02T08602	HYDRAULIC PUMP	100K0363
	02T08702	HYDRAULIC PUMP [COMPONENT PARTS]	100K0363
	02T08802	HYDRAULIC OIL LINE	100K0363
	02T089	FLOW PRIORITY VALVE (PS)	100K0363
	02T090	CONTROL VALVE	100K0363
	02T09101	CONTROL VALVE (POSITION CONTROL) [COMPONENT PARTS]	100K0363
	02T09102	CONTROL VALVE (DRAFT) [OPTION] [COMPONENT PARTS]	100K0363
	02T092	DRAFT CONTROL VALVE [OPTION]	100K0363
	02T093	DRAFT CONTROL VALVE [OPTION] [COMPONENT PARTS]	100K0363
	02T094	HYDRAULIC CYLINDER	100K0363
	02T095	CYLINDER FRONT COVER	100K0363
	02T096	LIFT ARM	100K0363
	02T097	FEED BACK LEVER	100K0363
	02T098	POSITION CONTROL LEVER	100K0363
	02T099	3-POINT LINKAGE 1 (LOWER LINK/TOP LINK)	100K0363


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

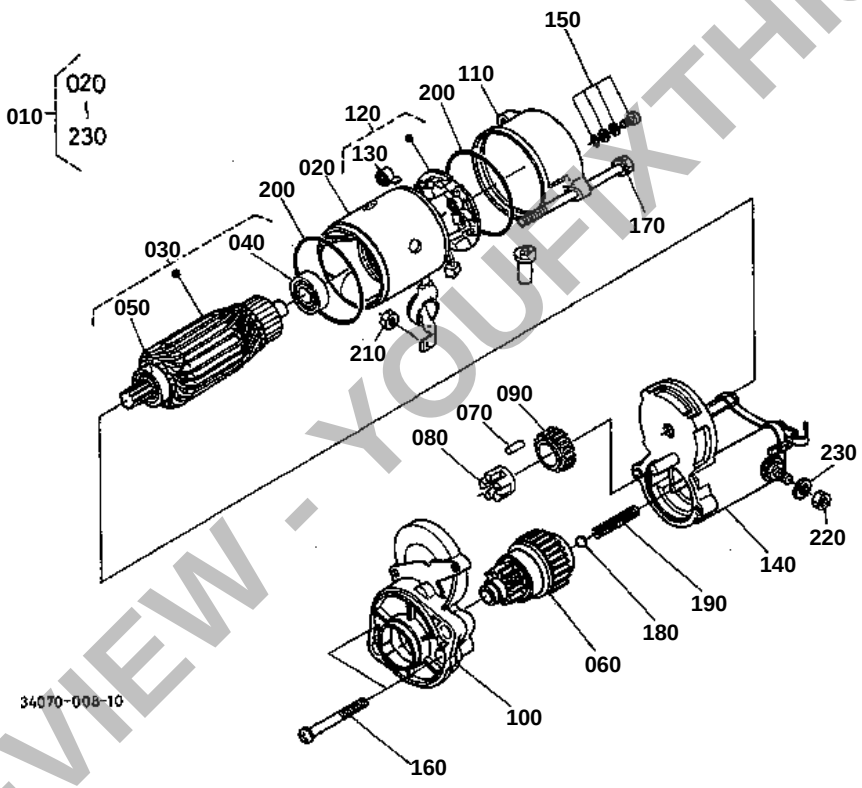

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

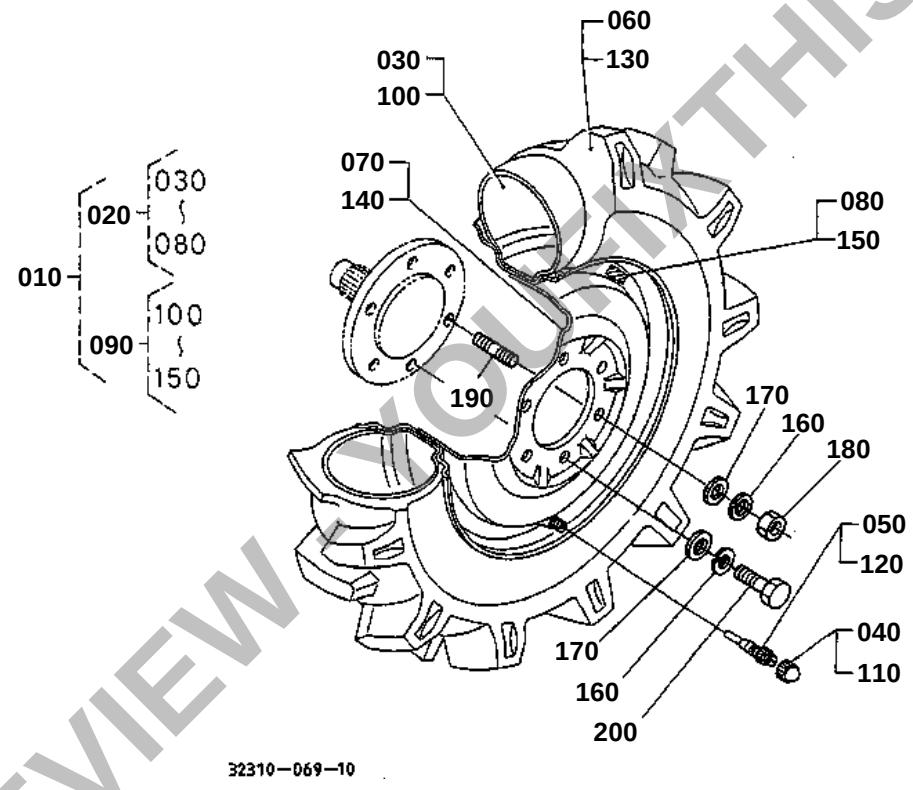

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 12 of 247 pages

The full manual includes:

- All 247 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota L2500DT Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual