Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts at it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number refering to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quanity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.
>= Your serial number should be greater than or equal to the number shown.
<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.
←→ The part shown will work for the older and later serial number.
The part shown is not interchangable with the other serial number.
← new for old
→ old for new

Remarks → Notes about this particulart part. Sometimes this may say except [FR] or [CA]

Note about Country Codes:


The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France.
That means it will work here in the USA.


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

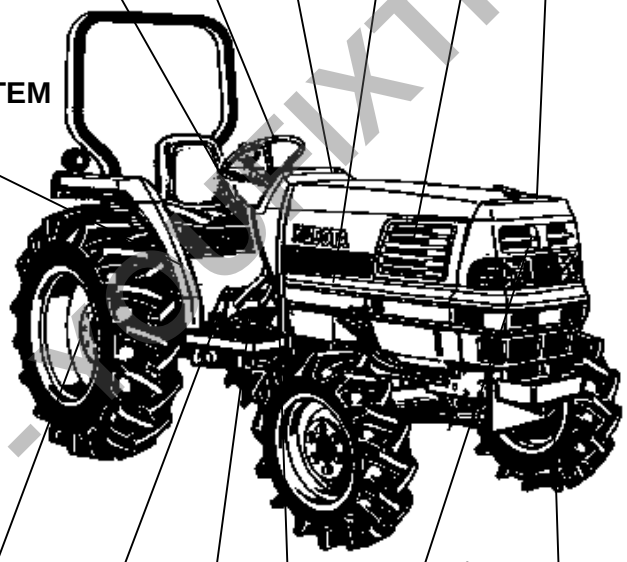

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

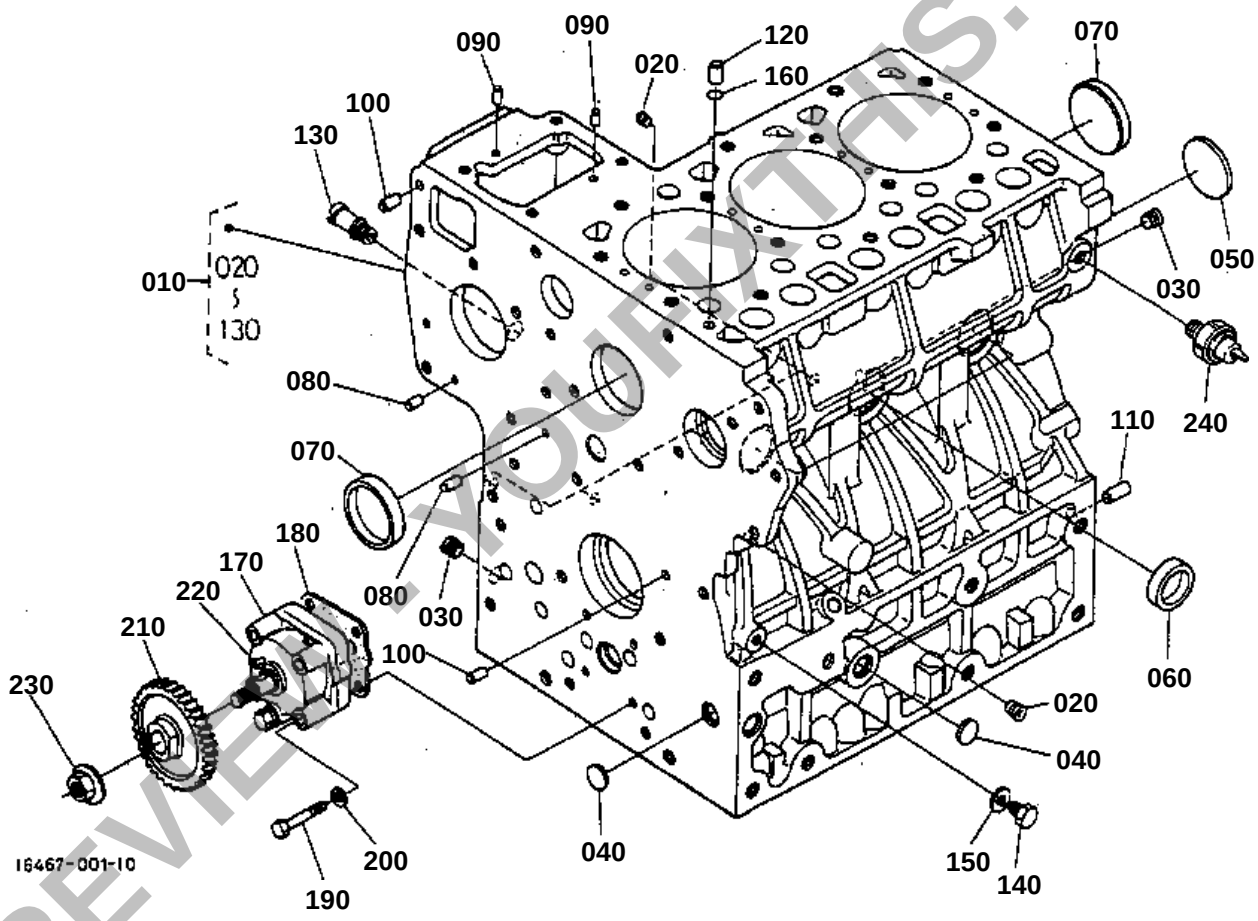

PREVIEW. YOUFIXTHIS.COM

Download full manual at youfixthis.com


CRANKCASE

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	16477-01010	COMP.CRANKCASE	1				48.5	106.7
020	15521-96020	PLUG	5				0.003	0.0066
030	15521-96030	PLUG	2				0.007	0.0154
040	17391-96160	PLUG	3				0.003	0.0066
050	06311-75045	PLUG	1				0.026	0.0572
060	15221-03380	CAP SEALING	5				0.017	0.0374
070	15221-03390	CAP SEALING	2				0.03	0.066
080	05012-00408	PIN STRAIGHT	2				0.001	0.0022
090	05012-00609	PIN STRAIGHT	2				0.003	0.0066
100	05012-00612	PIN STRAIGHT	2				0.003	0.0066
110	05012-01018	PIN STRAIGHT	1				0.012	0.0264
120	15221-33650	PIN PIPE	1				0.004	0.0088
130	15321-73340	PIPE WATER RETURN	1				0.016	0.0352
140	15221-33610	PLUG	1				0.009	0.0198
150	15021-33660	GASKET	1				0.001	0.0022
160	15221-33700	O RING	1				0.001	0.0022
170	15471-35010	ASSY PUMP OIL	1				0	0
180	15296-35150	GASKET OIL PUMP	1				0	0
190	01053-50650	BOLT	4				0.011	0.0242
200	04512-60060	WASHER SPRING	4				0.001	0.0022
210	19202-35660	GEAR OIL PUMP DRIVE	1				0.23	0.506
220	05712-00410	KEY FEATHER	1				0.001	0.0022
230	15221-35682	NUT FLANGE	1				0.014	0.0308
240	15531-39010	SWITCH OIL	1				0.032	0.0704


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

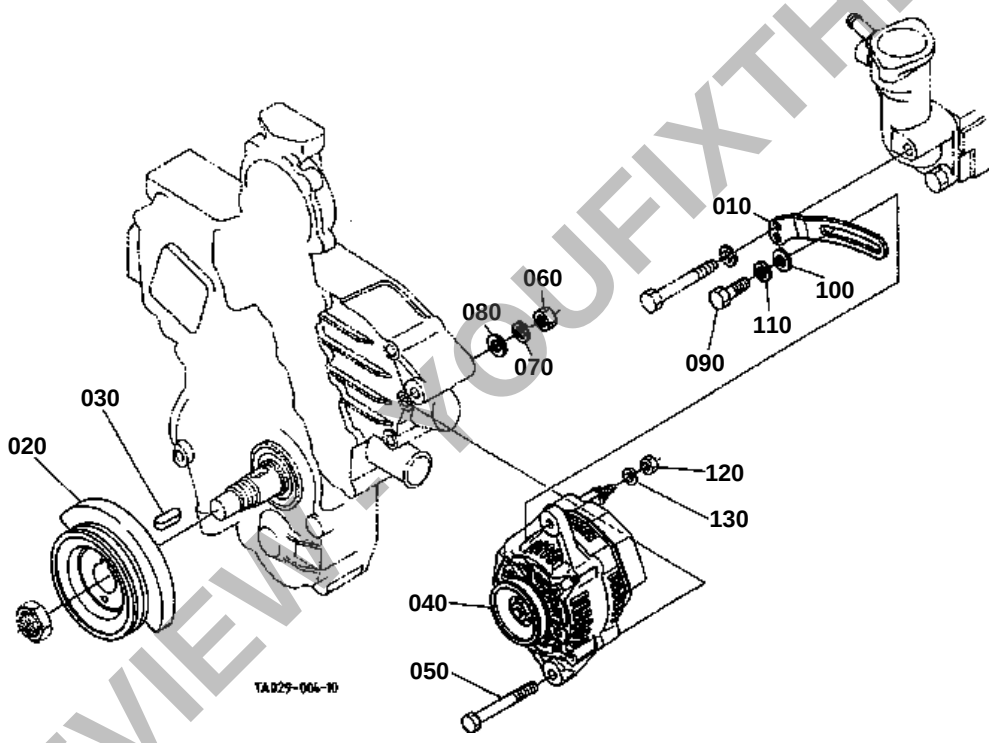


PREVIEW FROM YOUFIXTHIS.COM

Download full manual at youfixthis.com

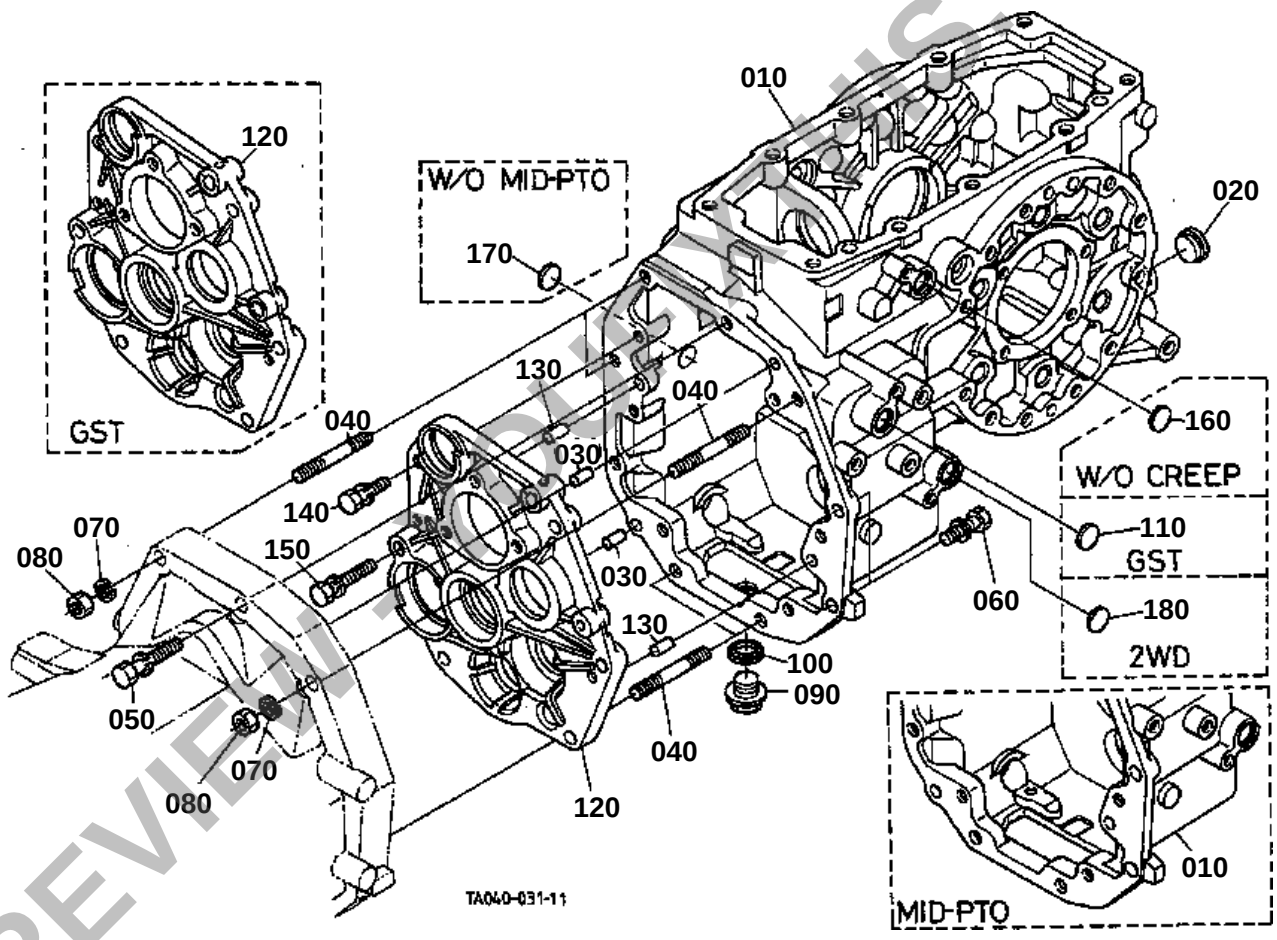


PREVIEW TODAY AT YOUFIXTHIS.COM

Download full manual at youfixthis.com

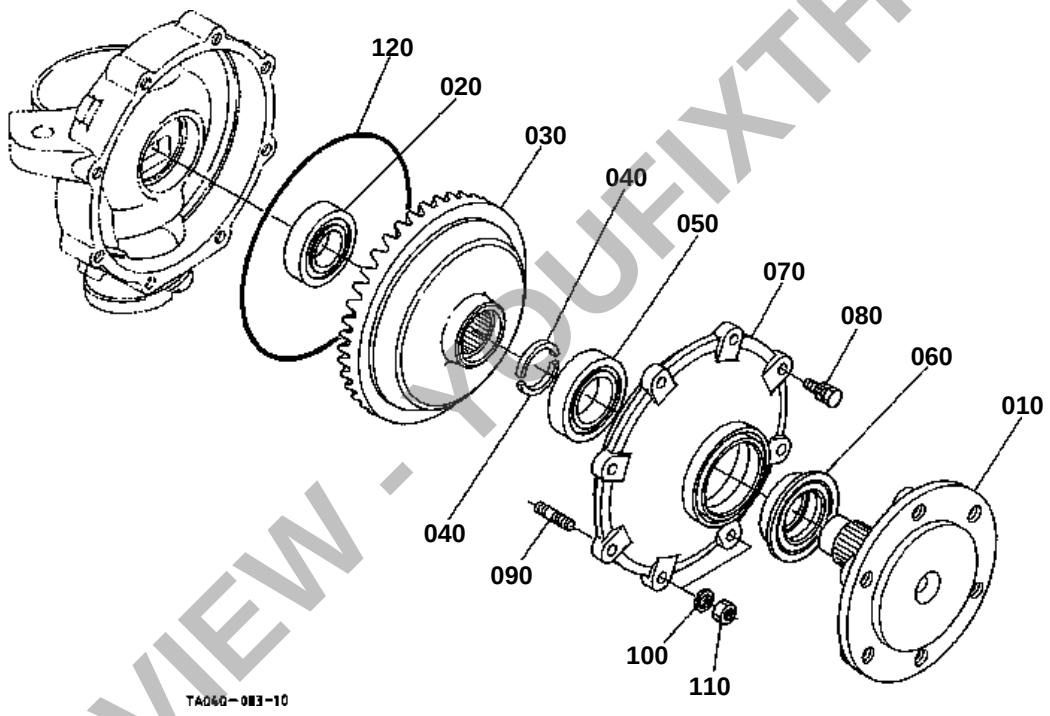

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

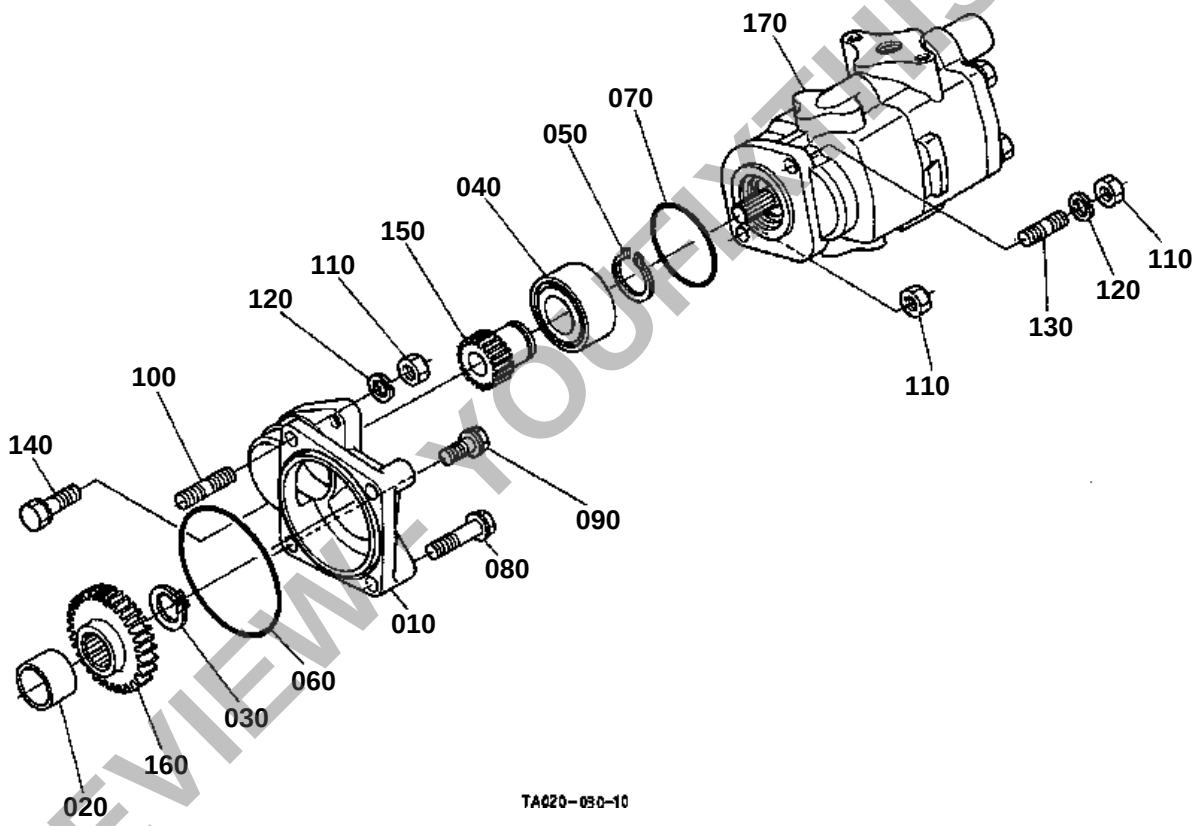


PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Part No.	Description	Book
ELECTRICAL SYSTEM	02T044	PANEL BOARD [COMPONENT PARTS]	100K0369
	02T045	LIGHT	100K0369
	02T046	ELECTRICAL WIRING	100K0369
CLUTCH	02T047	CLUTCH	100K0369
	02T048	CLUTCH LEVER	100K0369
	02T049	CLUTCH PEDAL	100K0369
	02T05001	CLUTCH HOUSING [MANUAL T/M TYPE]	100K0369
	02T05101	MID CASE [MANUAL T/M TYPE] [WITH IND-PTO]	100K0369
TRANSMISSION	02T052	TRANSMISSION CASE	100K0369
	02T05302	MAIN SHAFT [WITH IND-PTO]	100K0369
	02T054	COUNTERSHAFT	100K0369
	02T05601	SHUTTLE SHAFT [MANUAL T/M TYPE]	100K0369
	02T05701	RANGE GEAR SHAFT [MANUAL T/M TYPE]	100K0369
	02T05801	PTO COUNTERSHAFT [WITH IND-PTO]	100K0369
	02T05901	PTO CLUTCH [WITH IND-PTO]	100K0369
	02T06001	PTO SHAFT [W/O MID-PTO]	100K0369
	02T06002	PTO SHAFT [WITH MID-PTO]	100K0369
	02T061	MID PTO [WITH MID-PTO]	100K0369
SPEED CHANGE LEVER	02T06201	MAIN GEAR SHIFT LEVER [MANUAL T/M TYPE]	100K0369
	02T06301	MAIN GEAR SHIFT FORK [MANUAL T/M TYPE]	100K0369
	02T064	SHUTTLE SHIFT LEVER	100K0369
	02T06501	SHUTTLE SHIFT FORK [MANUAL T/M TYPE]	100K0369
	02T06601	RANGE GEAR SHIFT LEVER [MANUAL T/M TYPE] [W/O CREEP]	100K0369
	02T06602	RANGE GEAR SHIFT LEVER/CREEP GEAR SHIFT LEVER [MANUAL T/M TYPE] [WITH CREEP]	100K0369
	02T06701	RANGE GEAR SHIFT FORK AND CREEP GEAR SHIFT FORK [MANUAL T/M TYPE]	100K0369
	02T068	MID PTO SHIFT LEVER [WITH MID-PTO]	100K0369
	02T06901	PTO CLUTCH CONTROL LEVER [WITH IND-PTO]	100K0369
	02T06902	PTO GEAR SHIFT LEVER [W/O IND-PTO]	100K0369
	02T07001	SPIRAL BEVEL PINION [W/O CREEP]	100K0369
	02T07002	SPIRAL BEVEL PINION AND CREEP [WITH CREEP]	100K0369
	02T071	REAR DIFFERENTIAL	100K0369


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

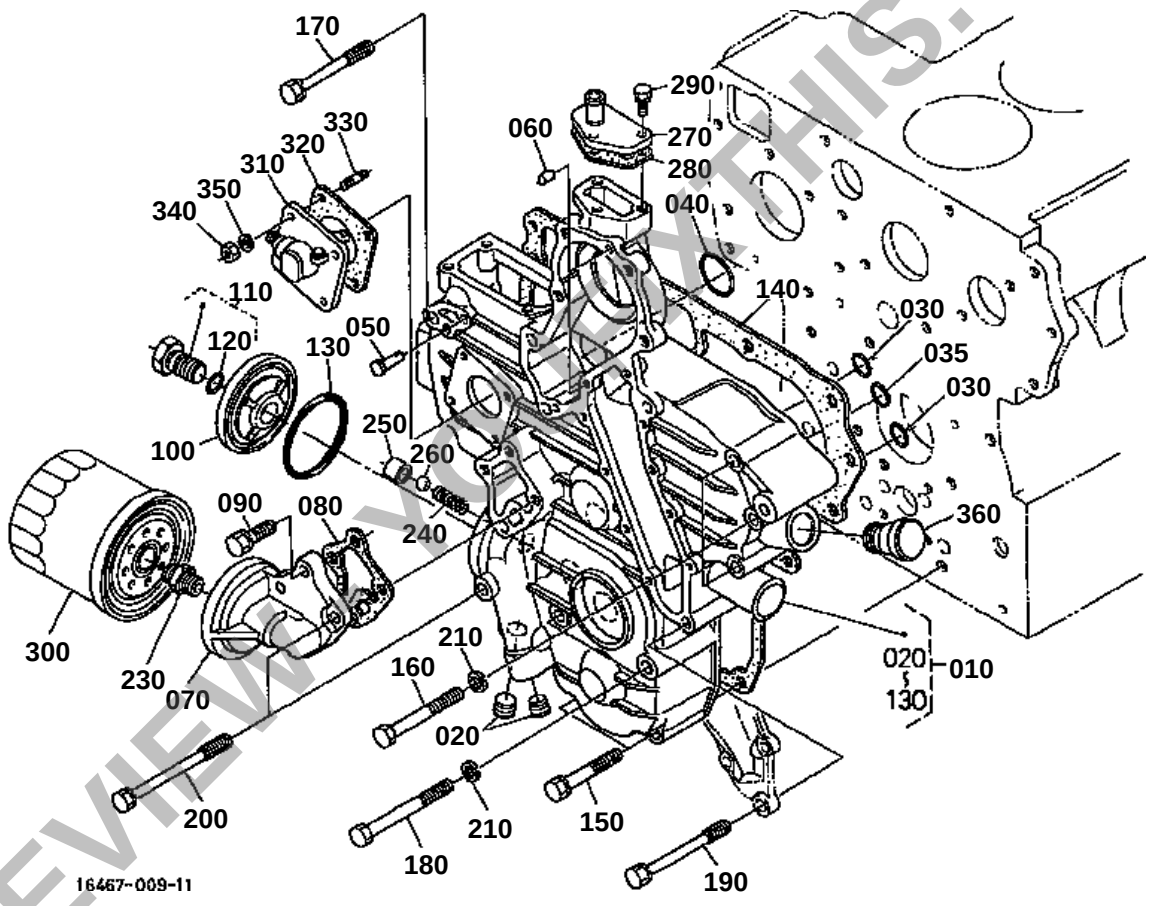


PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

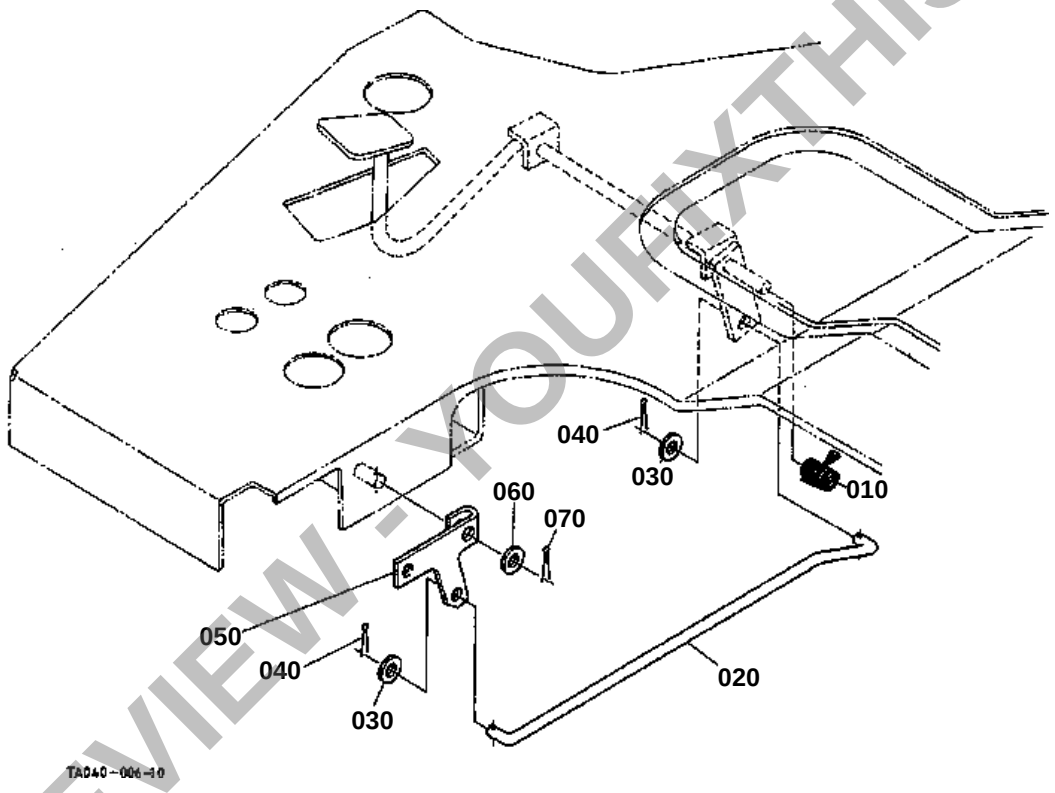

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

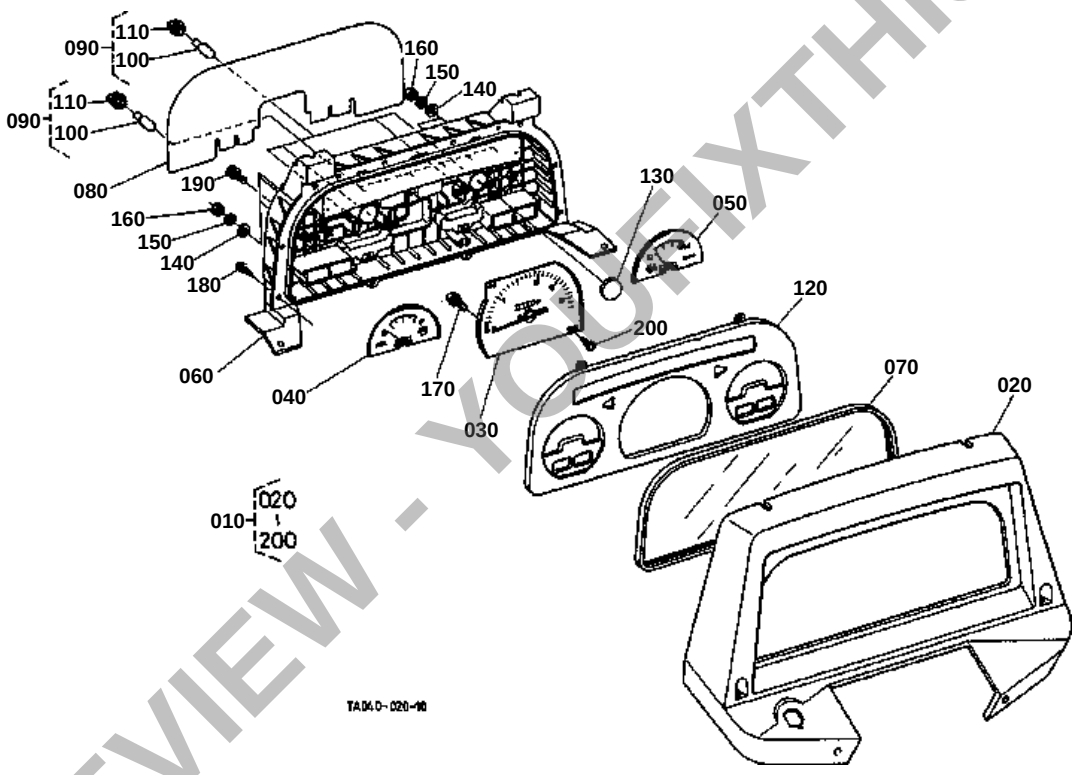

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

120 TA020-2370-0

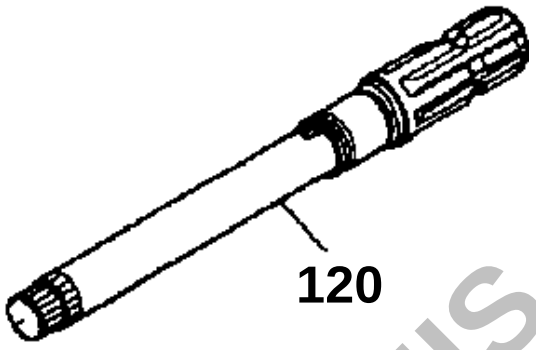


130 34070-2267-0



TA020-806-10


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

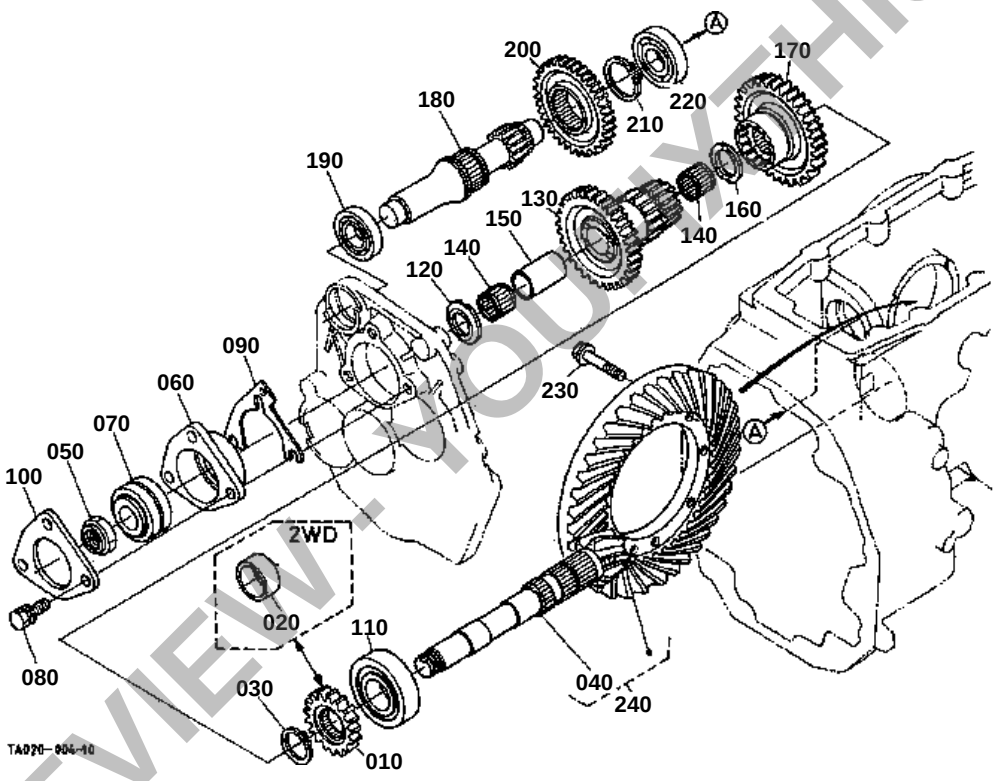

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

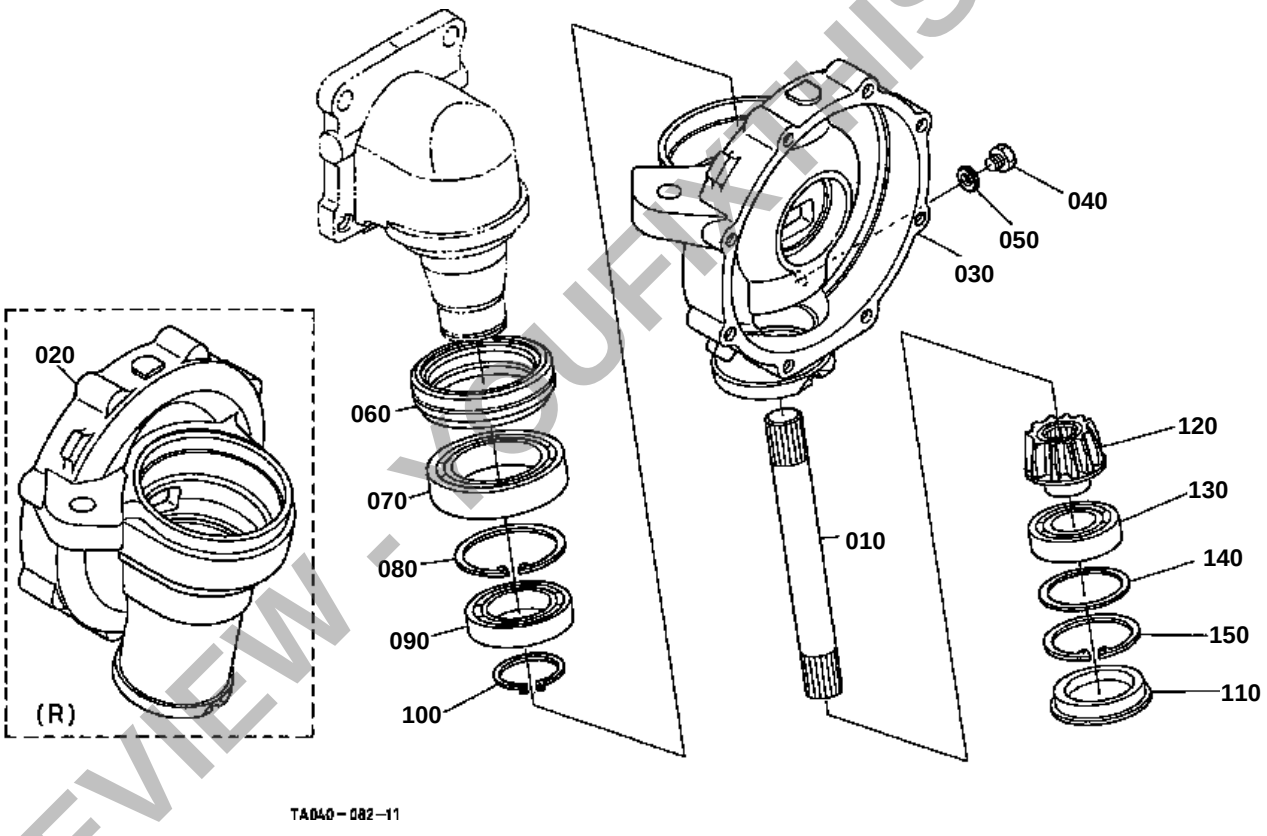

TA040-082-11


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

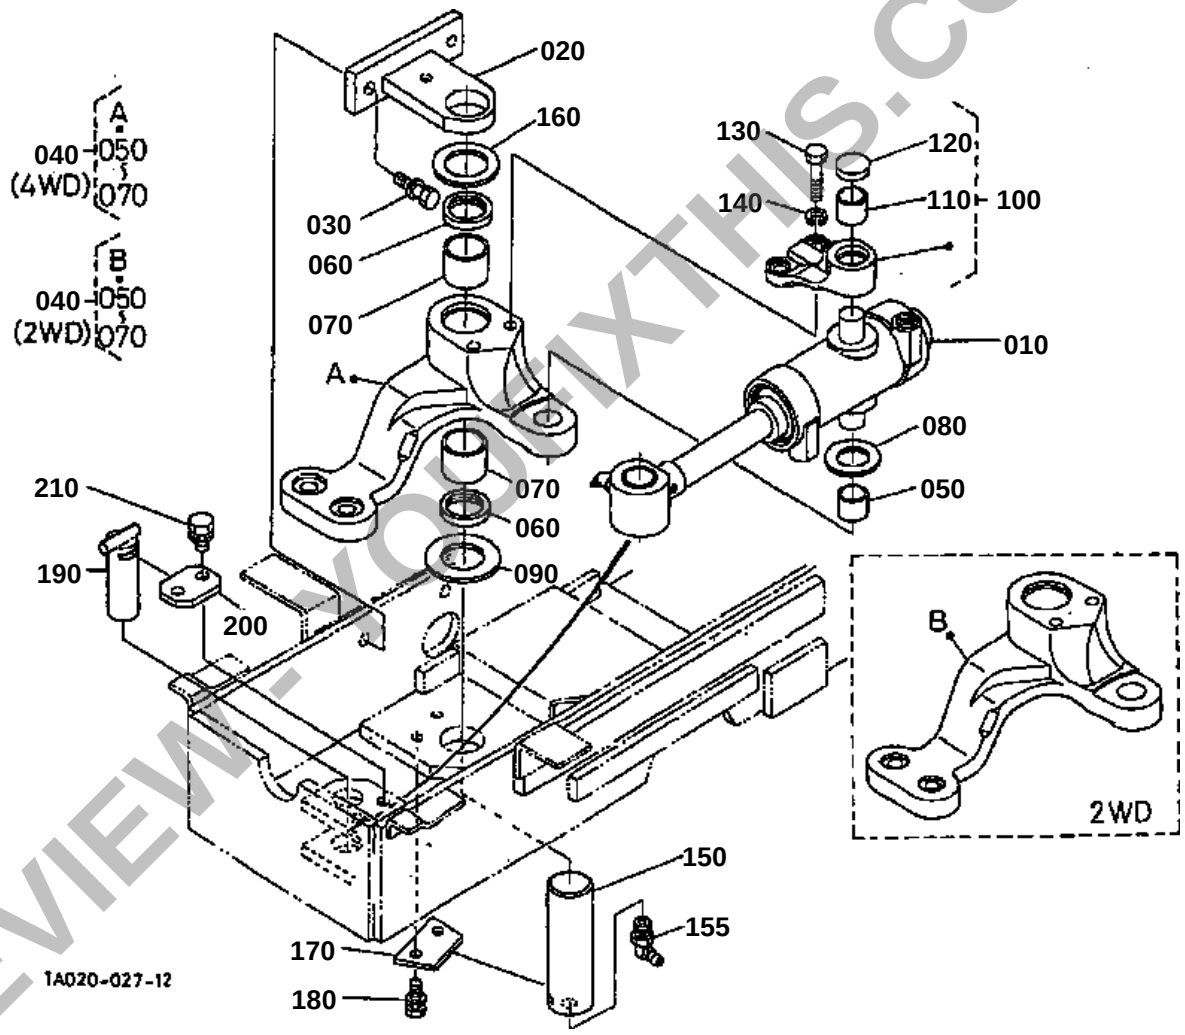


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

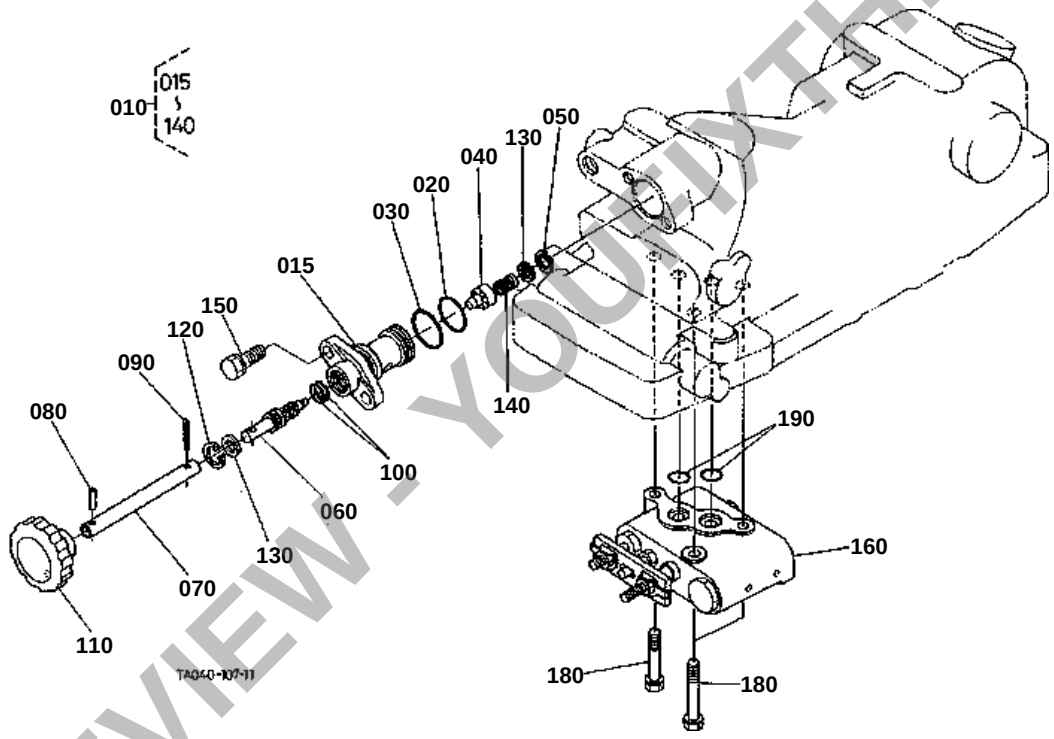

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

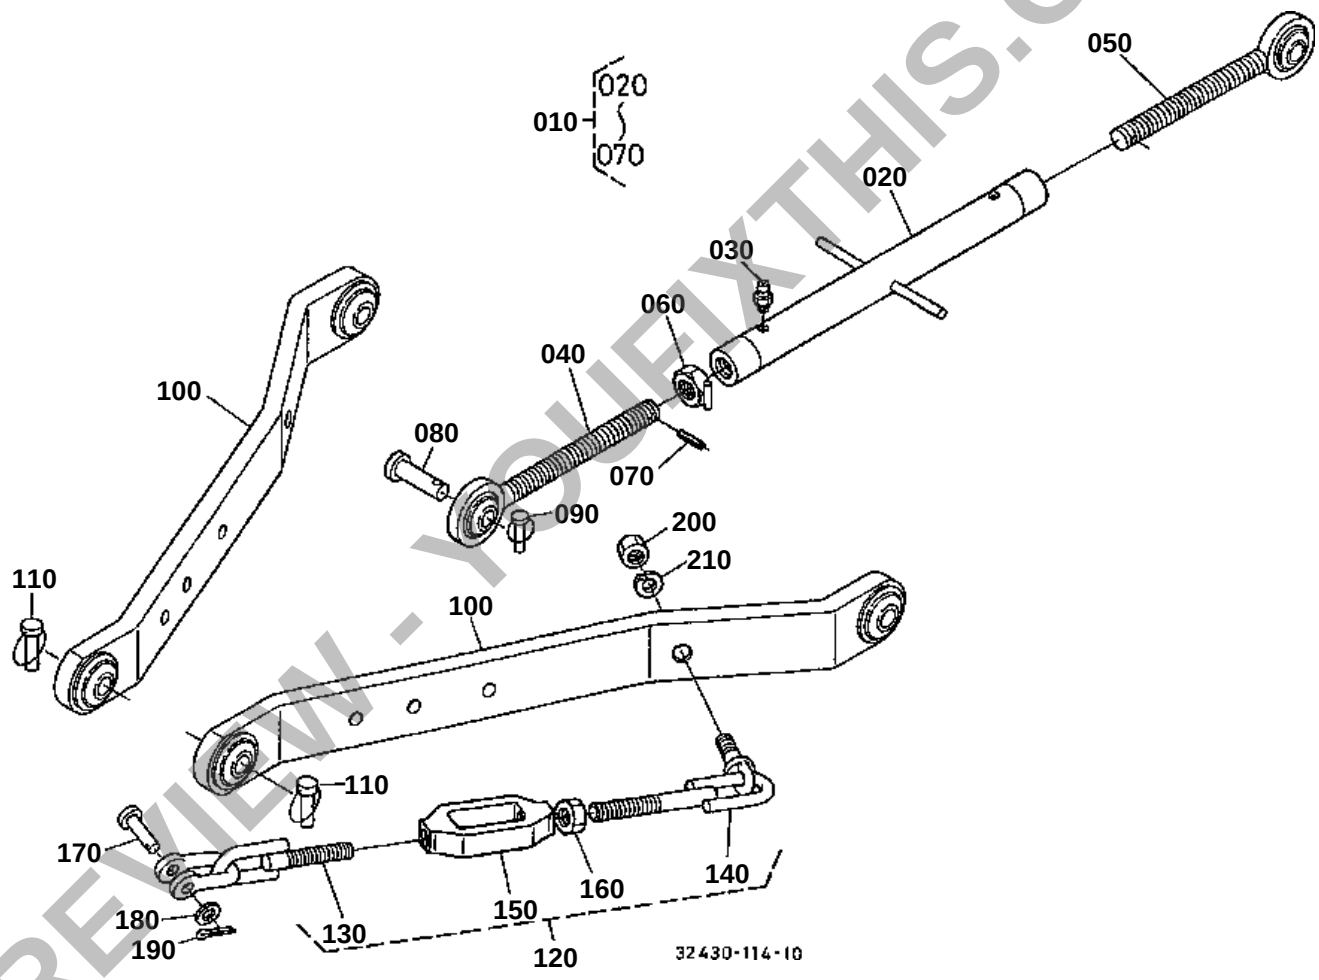

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 18 of 339 pages

The full manual includes:

- All 339 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota L2900DT Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual