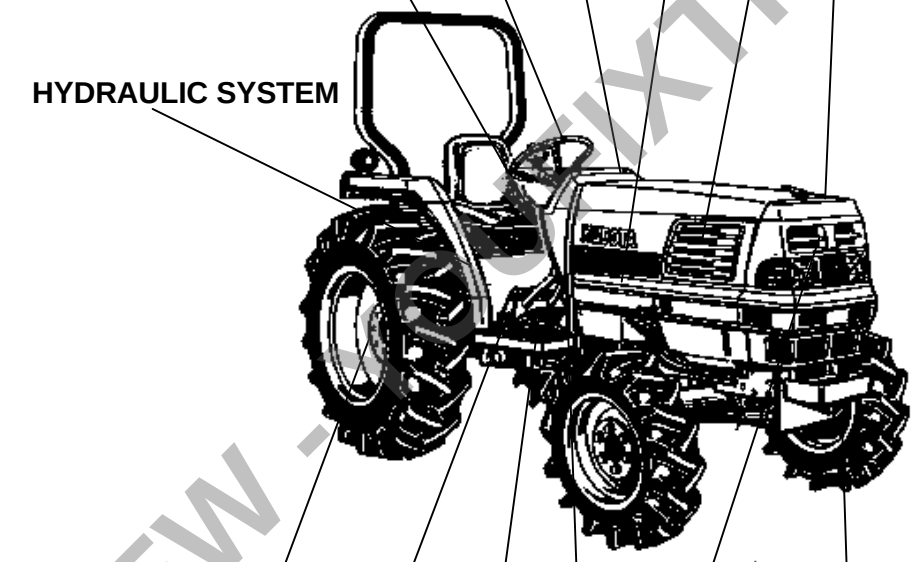



PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Page No.	Description	Book
ENGINE	01T001	CRANKCASE	100K0394
	01T002	OIL PAN	100K0394
	01T003	PISTON AND CRANKSHAFT	100K0394
	01T004	MAIN BEARING CASE	100K0394
	01T00501	FLYWHEEL [W/O IND-PTO]	100K0394
	01T00502	FLYWHEEL [WITH IND-PTO]	100K0394
	01T006	CYLINDER HEAD	100K0394
	01T007	VALVE AND ROCKER ARM	100K0394
	01T008	NOZZLE HOLDER/GLOW PLUG	100K0394
	01T009	NOZZLE HOLDER [COMPONENT PARTS]	100K0394
	01T010	CYLINDER HEAD COVER	100K0394
	01T011	INLET MANIFOLD	100K0394
	01T014	CAMSHAFT	100K0394
	01T015	GEAR CASE	100K0394
	01T016	WATER PUMP	100K0394
	01T017	WATER FLANGE AND THERMOSTAT	100K0394
	01T018	FUEL CAMSHAFT	100K0394
	01T019	INJECTION PUMP	100K0394
	01T020	INJECTION PUMP [COMPONENT PARTS]	100K0394
	01T021	ENGINE STOP LEVER	100K0394
	01T022	SPEED CONTROL PLATE	100K0394
	01T023	GOVERNOR	100K0394
	01T02401	UPPER GASKET KIT	100K0394
	01T025	LOWER GASKET KIT	100K0394
	02T01201	AIR CLEANER	100K0394
	02T01202	DOUBLE AIR CLEANER [OPTION]	100K0394
	02T013	EXHAUST MANIFOLD AND MUFFLER	100K0394
	02T026	STOP SOLENOID AND ENGINE STOP WIRE	100K0394
	02T027	ACCELERATOR LEVER	100K0394
	02T028	ACCELERATOR LINKAGE	100K0394
	02T029	ACCELERATOR ROD	100K0394
FUEL SYSTEM	02T030	FUEL TANK	100K0394
	02T031	FUEL PIPE AND FUEL FILTER	100K0394
	02T032	FUEL FILTER [COMPONENT PARTS]	100K0394
COOLING WATER SYSTEM	02T033	FAN	100K0394
	02T034	WATER PIPE	100K0394
	02T035	RADIATOR	100K0394
	02T036	RESERVE TANK	100K0394
ELECTRICAL SYSTEM	02T037	ALTERNATOR	100K0394
	02T038	ALTERNATOR [COMPONENT PARTS]	100K0394
	02T039	STARTER	100K0394
	02T040	STARTER [COMPONENT PARTS]	100K0394
	02T041	BATTERY	100K0394
	02T042	SWITCH	100K0394
	02T043	PANEL BOARD	100K0394
	02T044	PANEL BOARD [COMPONENT PARTS]	100K0394


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

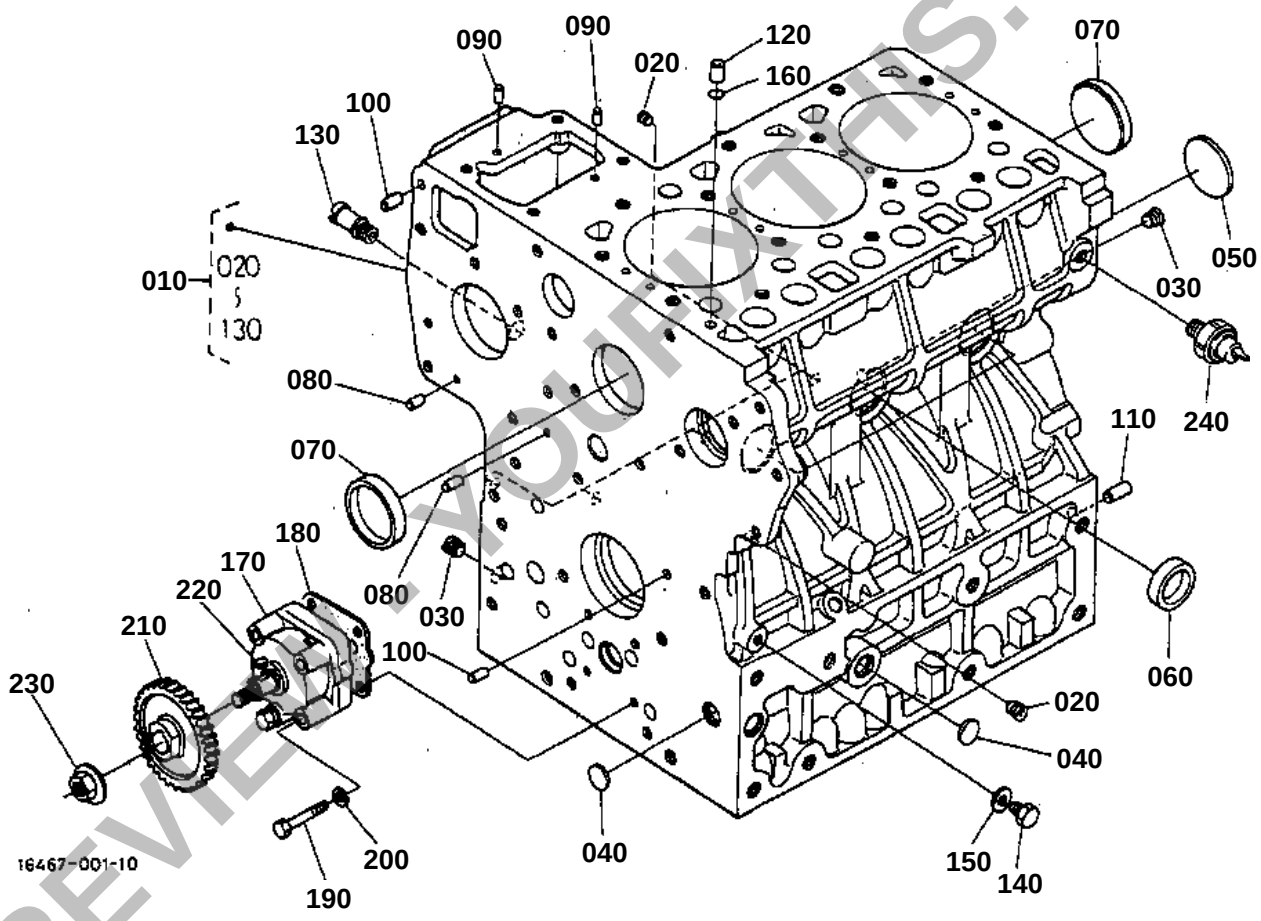


PREVIEW ONLY. YOUFIXTHIS.COM

Download full manual at youfixthis.com

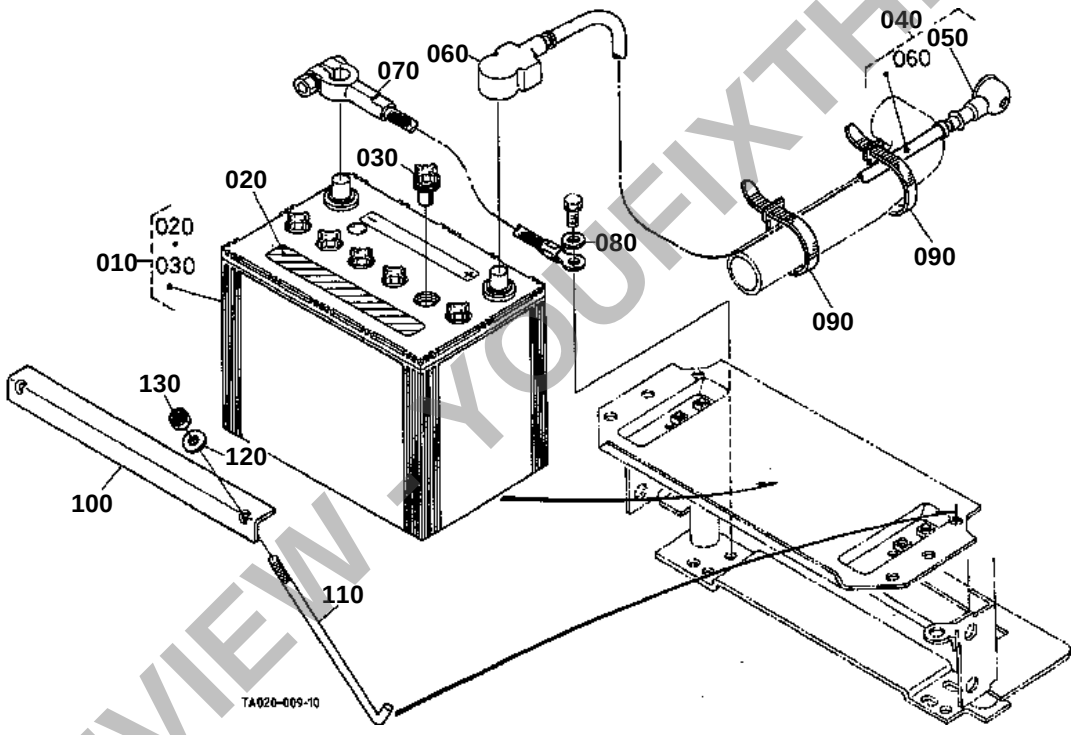


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

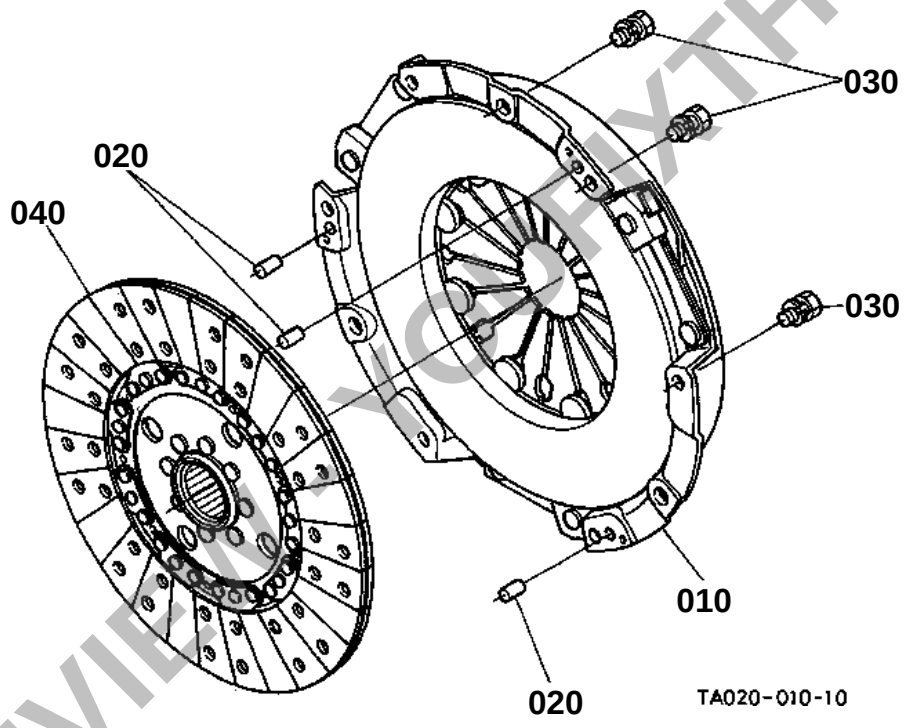


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

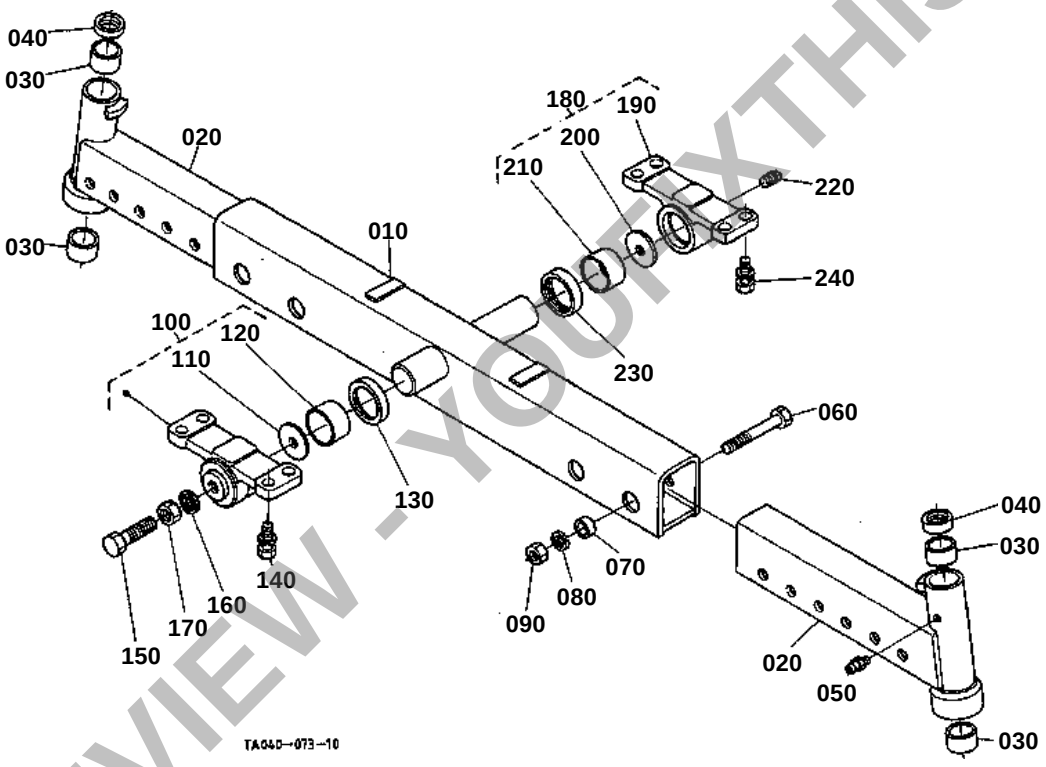

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

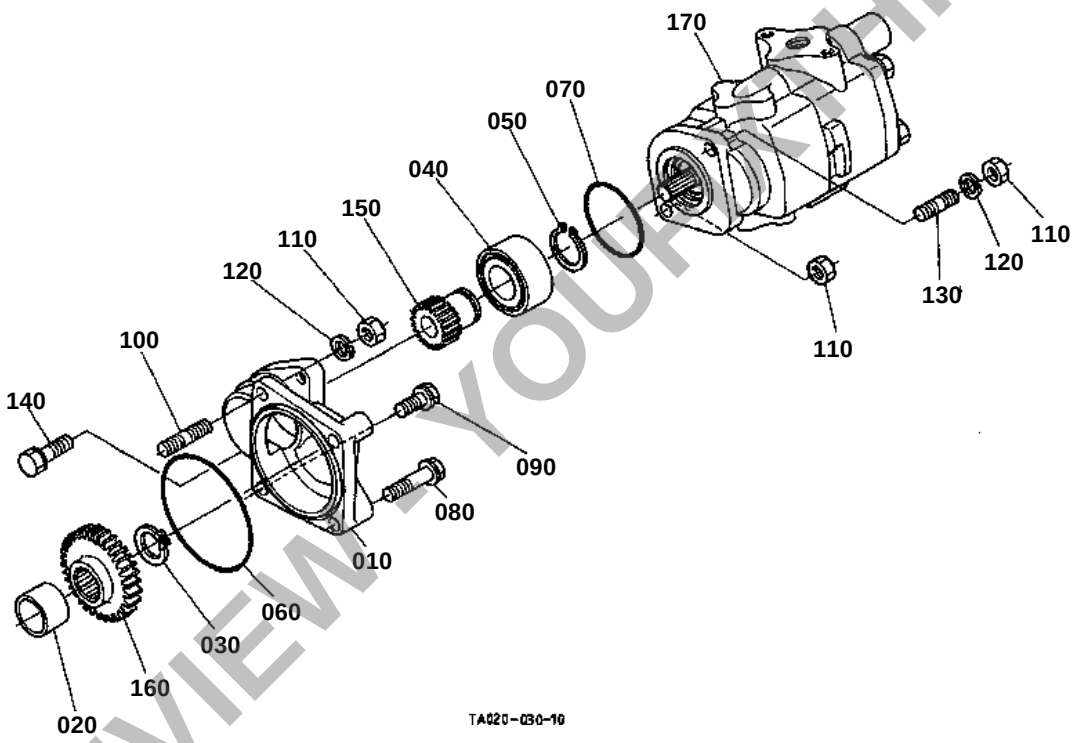

PREVIEW FROM YOUFIXTHIS.COM

Download full manual at youfixthis.com

CRANKCASE

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	16477-01010	COMP.CRANKCASE	1				48.5	106.7
020	15521-96020	PLUG	5				0.003	0.0066
030	15521-96030	PLUG	2				0.007	0.0154
040	17391-96160	PLUG	3				0.003	0.0066
050	06311-75045	PLUG	1				0.026	0.0572
060	15221-03380	CAP SEALING	5				0.017	0.0374
070	15221-03390	CAP SEALING	2				0.03	0.066
080	05012-00408	PIN STRAIGHT	2				0.001	0.0022
090	05012-00609	PIN STRAIGHT	2				0.003	0.0066
100	05012-00612	PIN STRAIGHT	2				0.003	0.0066
110	05012-01018	PIN STRAIGHT	1				0.012	0.0264
120	15221-33650	PIN PIPE	1				0.004	0.0088
130	15321-73340	PIPE WATER RETURN	1				0.016	0.0352
140	15221-33610	PLUG	1				0.009	0.0198
150	15021-33660	GASKET	1				0.001	0.0022
160	15221-33700	O RING	1				0.001	0.0022
170	15471-35010	ASSY PUMP OIL	1				0	0
180	15296-35150	GASKET OIL PUMP	1				0.001	0.0022
190	01053-50650	BOLT	4				0.011	0.0242
200	04512-60060	WASHER SPRING	4				0.001	0.0022
210	19202-35660	GEAR OIL PUMP DRIVE	1				0.23	0.506
220	05712-00410	KEY FEATHER	1				0.001	0.0022
230	15221-35682	NUT FLANGE	1				0.014	0.0308
240	15531-39010	SWITCH OIL	1				0.032	0.0704


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Item	Page No.	Description	Book
BRAKE	02T075	BRAKE	100K0394
	02T076	BRAKE PEDAL	100K0394
	02T077	BRAKE ROD 1	100K0394
	02T078	BRAKE ROD 2	100K0394
FRONT AXLE AND FRONT WHEEL AND CHASSIS	02T079	FRONT AXLE	100K0394
	02T080	KNUCKLE SHAFT	100K0394
	02T08101	FRONT WHEEL (5.00-15)	100K0394
	02T08102	FRONT WHEEL (23*8.50-12)	100K0394
	02T08103	FRONT WHEEL (25*8.50-14)	100K0394
	02T082	FRONT AXLE FRAME [2WD]	100K0394
	02T089	FRONT WHEEL DRIVE SHAFT	100K0394
STEERING	02T09301	STEERING LINKAGE [2WD]	100K0394
	02T094	STEERING CYLINDER	100K0394
	02T095	STEERING CYLINDER [COMPONENT PARTS]	100K0394
	02T096	STEERING CONTROLLER	100K0394
	02T097	STEERING HANDLE	100K0394
HYDRAULIC SYSTEM	02T098	HYDRAULIC OIL LINE (PS)	100K0394
	02T100	REGULATOR VALVE	100K0394
	02T10101	PTO HYDRAULIC OIL LINE [WITH IND-PTO] [MANUAL T/M TYPE]	100K0394
	02T102	HYDRAULIC PUMP	100K0394
	02T103	HYDRAULIC PUMP [COMPONENT PARTS]	100K0394
	02T104	HYDRAULIC OIL LINE (INLET)	100K0394
	02T105	HYDRAULIC OIL LINE (DELIVERY)	100K0394
	02T106	HYDRAULIC OUTLET BLOCK	100K0394
	02T107	HYDRAULIC CYLINDER	100K0394
	02T108	LIFT ARM	100K0394
	02T109	CONTROL VALVE	100K0394
	02T110	CONTROL VALVE [COMPONENT PARTS]	100K0394
	02T111	FEED BACK LEVER	100K0394
	02T112	POSITION CONTROL LEVER	100K0394
	02T113	DRAFT AND POSITION CONTROL LEVER 1 [OPTION]	100K0394
	02T114	DRAFT AND POSITION CONTROL LEVER 2 [OPTION]	100K0394
	02T115	TOP LINK HOLDER [OPTION]	100K0394
	02T11601	DRAWBAR AND PTO PROTECTOR	100K0394
	02T11602	SWINGING DRAWBAR AND CLEVIS DRAWBAR [OPTION]	100K0394
	02T11701	REMOTE CONTROL VALVE LEVER 1 [OPTION]	100K0394
	02T11702	REMOTE CONTROL VALVE LEVER 2 [OPTION]	100K0394
	02T11703	REMOTE CONTROL VALVE LEVER 3 [OPTION]	100K0394
	02T11801	REMOTE CONTROL VALVE COUPLER 1 [OPTION]	100K0394
	02T11802	REMOTE CONTROL VALVE COUPLER 2 [OPTION]	100K0394
	02T11803	REMOTE CONTROL VALVE COUPLER 3 [OPTION]	100K0394

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

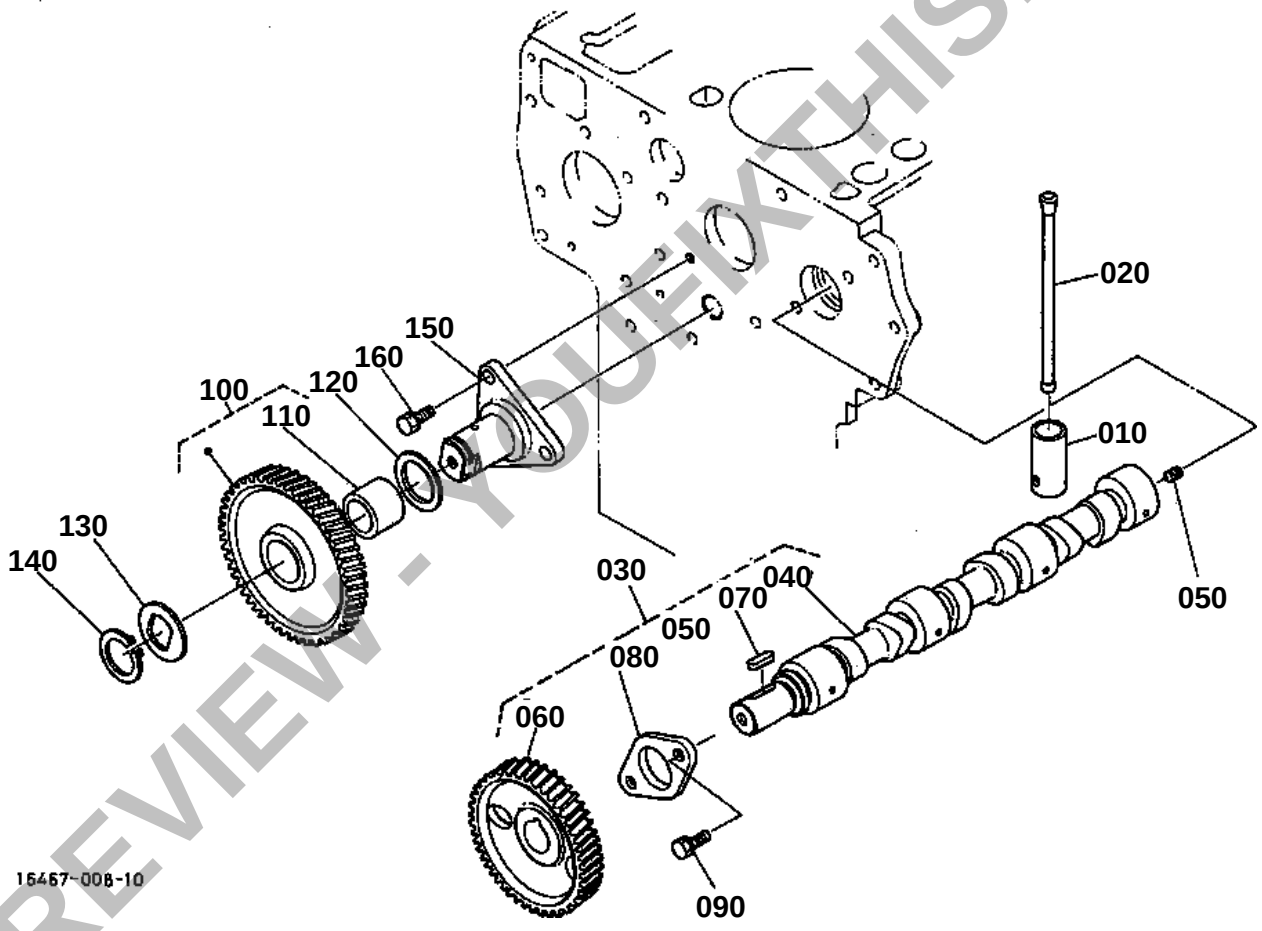

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

070 T0070-4421-0

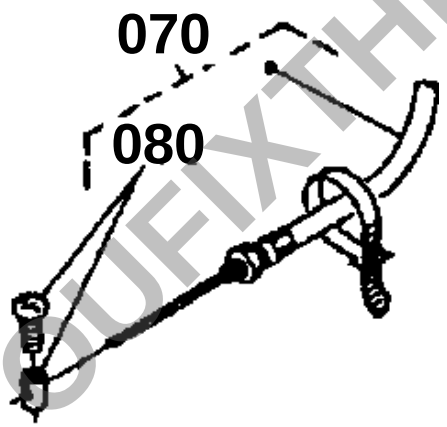

TA020-800-10


PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	34070-16800	ASSY STARTER	1				3.4	7.48
020	11460-63080	YOKE	1				0.8	1.76
030	11460-63070	ARMATURE	1				0.05	0.11
040	11460-63530	BEARING	1				0.02	0.044
050	11460-63500	BEARING	1				0.03	0.066
060	34070-16810	ASSY CLUTCH	1				0.565	1.243
070	19212-63100	ROLLER	5				0.002	0.0044
080	11460-63110	RETAINER	1				0.01	0.022
090	11460-63270	GEAR	1				0.04	0.088
100	34070-16830	ASSY HOUSING	1				0.405	0.891
110	34070-16840	ASSY FRAME END	1				0.1	0.22
120	11470-63380	ASSY HOLDER BRUSH	1				0.3	0.66
130	11460-63390	SPRING BRUSH	4				0.01	0.022
140	34070-16850	ASSY SWITCH MAGNETIC	1				0.955	2.101
150	15511-63760	ASSY BOLT	2				0.005	0.011
160	11460-93310	BOLT	2				0.01	0.022
170	11460-63320	BOLT THROUGH	2				0.02	0.044
180	19212-97130	BALL	1				0.003	0.0066
190	11460-63120	SPRING	1				0.01	0.022
200	15511-96660	O RING	2				0.005	0.011
210	13963-92010	NUT HEXAGON	1				0.005	0.011
220	02114-50080	NUT	1				0.005	0.011
230	04512-50080	WASHER SPRING	1				0.001	0.0022

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

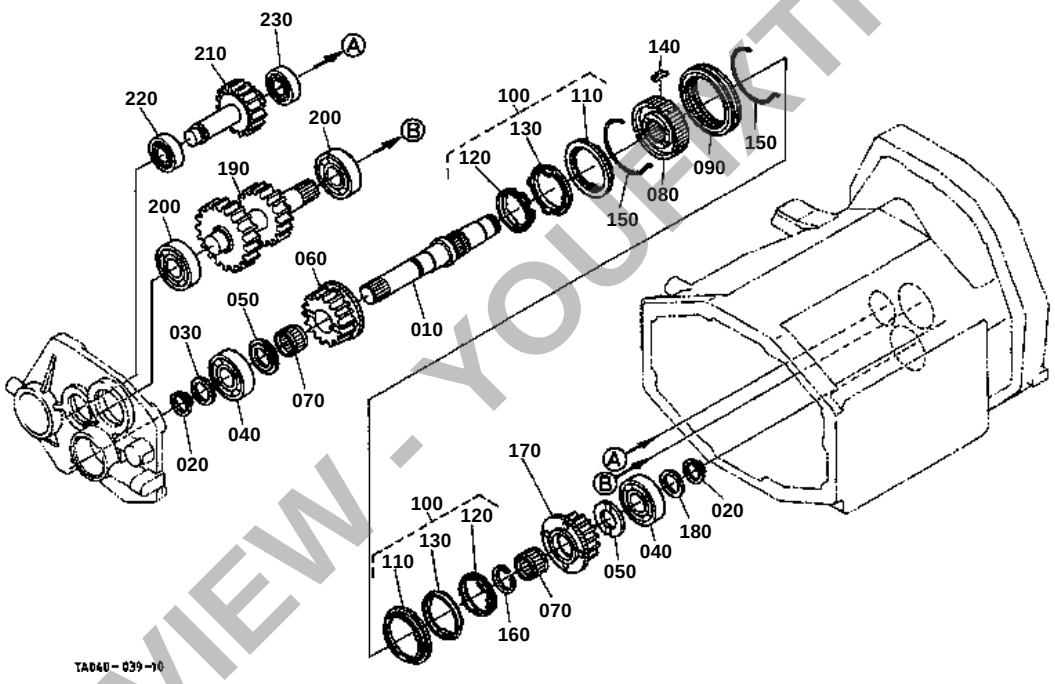

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	34070-24460	LAVER RANGE SHIFT	1	<=11337			0.09	0.198
010	34070-24462	LAVER RANGE SHIFT	1	>=11338	≠		0.09	0.198
020	05411-00628	PIN SPRING	1				0.004	0.0088
030	TA040-24470	ROD	1				0.135	0.297
040	04011-50100	WASHER PLAIN	2				0.002	0.0044
050	05511-50318	PIN SPLIT	2				0.001	0.0022
050	05515-51000	PIN SNAP	2		↔		0	0
060	TA040-24430	LAVER RANGE SHIFT	1				0.71	1.562
070	08511-01810	BUSH	2				0.005	0.011
080	TA040-24490	GRIP LEVER	1				0.033	0.0726
090	TA040-24480	SHAFT FULCRUM	1	<=10217			0.255	0.561
090	TA040-24482	SHAFT FULCRUM	1	>=10218	≠		0.255	0.561
100	04612-00180	CIRCLIP EXTERNAL	1				0.001	0.0022
110	04512-50120	WASHER SPRING	1				0.003	0.0066
120	31351-16590	SHIM	1			1.20mm	0.005	0.011
130	04011-50180	WASHER PLAIN	1				0.012	0.0264
140	TA040-24560	LEVER CREEP	1	<=10217			0.145	0.319
140	TA040-24562	LEVER CREEP	1	>=10218	≠		0	0
140	TA040-24563	LEVER CREEP	1	>=10500	≠		0	0
140	TA040-24564	LEVER CREEP	1	>=10906	←		0.32	0.704
150	05411-00628	PIN SPRING	1				0.004	0.0088
160	34070-24580	ROD CREEP	1				0.085	0.187
170	04011-50100	WASHER PLAIN	2				0.002	0.0044
180	05511-50318	PIN SPLIT	2				0.001	0.0022
180	05515-51000	PIN SNAP	2		↔		0	0
190	34070-24554	ASSY LEVER CREEP	1				0.73	1.606
200	08511-01810	BUSH	2				0.005	0.011
210	TA040-24490	GRIP LEVER	1				0.033	0.0726

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


120 TA020-4400-0

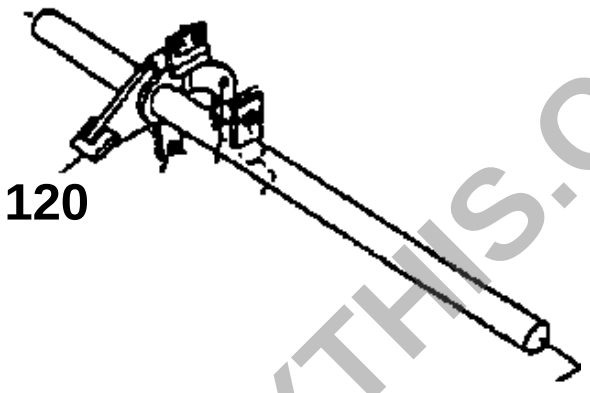

PREVIEW - YOUFIXTHIS.COM

TA020-811-10

Download full manual at youfixthis.com

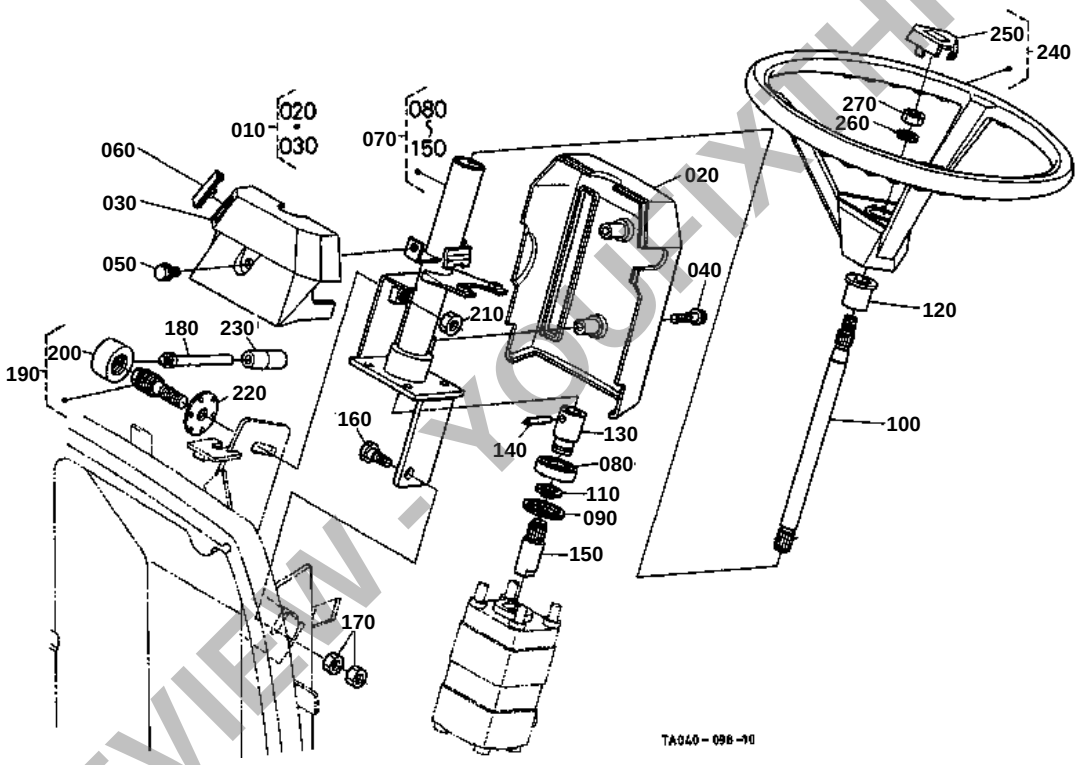

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
005	TA040-99800	ASSY JOINT	1			SERVICE PARTS	0.019	0.0418
010	67531-38280	JOINT SPOOL	1				0.17	0.374
020	37150-36420	JOINT SPOOL	1				0.02	0.044
020	TA040-99810	JOINT SPOOL	1			ORDER BY REF.No.005	0.016	0.0352
026	TA040-99820	MANUAL	1			ORDER BY REF.No.005	0.003	0.0066
030	02112-50080	NUT	1				0.003	0.0066
040	04613-00060	CIRCLIP EXTERNAL	1				0	0
050	31351-37640	LEVER SPOOL DRIVE	1				0.05	0.11
060	31351-37650	ARM CONTROL	1				0.16	0.352
070	04811-00140	O RING	1				0.001	0.0022
080	31351-37660	SET PLATE	1				0.01	0.022
090	01123-50816	BOLT	1				0.011	0.0242
100	04013-50140	WASHER PLAIN	2				0	0
110	34260-36880	SPRING PLATE	2				0.006	0.0132
120	02174-50140	NUT	1				0.014	0.0308
130	02172-50140	NUT	1				0.01	0.022
140	31351-37750	SHAFT BACK LEVER	1				0.1	0.22
150	04811-00120	O RING	1				0.001	0.0022
160	38240-36890	SET PLATE	1				0.013	0.0286
170	01123-50816	BOLT	1				0.011	0.0242
180	31351-37760	LEVER FEED BACK	1				0.08	0.176
190	05411-00525	PIN SPRING	1				0.002	0.0044
200	31321-37770	ROD FEEDBACK	1				0.12	0.264
210	31351-37780	ROD CONTROL	1				0.03	0.066
220	02114-50080	NUT	2				0.005	0.011
230	04013-50080	WASHER PLAIN	1				0.003	0.0066
240	05511-50218	PIN SPLIT	1				0.001	0.0022
250	04013-50080	WASHER PLAIN	1				0.003	0.0066
260	05511-50215	PIN SPLIT	1				0.001	0.0022

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
010	TA020-39310	ASSY ROD LIFT RH	1				2.04	4.488
020	31331-71520	ROD LIFT LOWER	1				0.855	1.881
030	31331-71510	ROD LIFT UPPER	1				0.58	1.276
040	05411-00320	PIN SPRING	1				0.001	0.0022
050	35110-71570	NUT	1				0.05	0.11
060	TA040-39350	TURNBUCKLE	1				0.55	1.21
070	06613-10675	NIPPLE GREASE	1				0.003	0.0066
080	31341-71540	ROD LIFT LH	1				1.57	3.454
090	38687-71582	PIN LIFT ROD	2				0.08	0.176
100	67156-34340	RING SNAP	2				0.01	0.022
110	35080-71750	COMP.RUBBER	1				0.065	0.143

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 18 of 312 pages

The full manual includes:

- All 312 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota L2900F Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual