Instructions for Parts Books

The heading at the top of the page will be the same for the picture of the parts at it is for the page with the part numbers.

Definition of column headings on part number pages:

REF.No → The number refering to the part on the picture page of the parts book.

Part No. → The number assigned to this part at the time of printing the parts book.

Description → Discription of part.

Q'ty → Quanity of part used on that page.

S.No. → Serial number range of the equipment that this part will fit.
>= Your serial number should be greater than or equal to the number shown.
<= Your serial number should be lesser than or equal to the serial number shown.

I/C → Interchangeability of part shown.
←→ The part shown will work for the older and later serial number.
The part shown is not interchangable with the other serial number.
← new for old
→ old for new

Remarks → Notes about this particulart part. Sometimes this may say except [FR] or [CA]

Note about Country Codes:


The parts books we use in the United States of America may also contain information about a part that would be different in another country. It is important that you are aware of the country codes in some instances.

Symbol	Country
A	United States of America
CA	Canada
FR	France
GR	Greece
PO	Portugal
AU	Australia

If the remarks column says for example EXCEPT [FR] this part works in all countries except France.
That means it will work here in the USA.


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

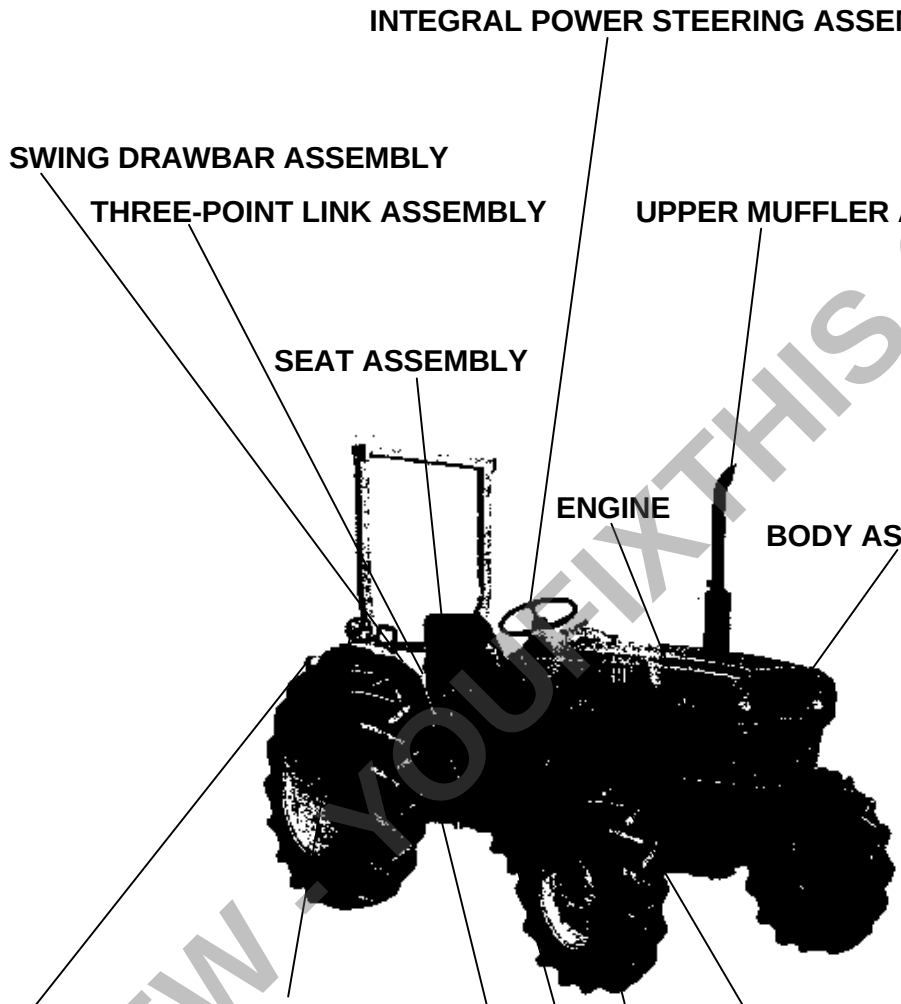


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

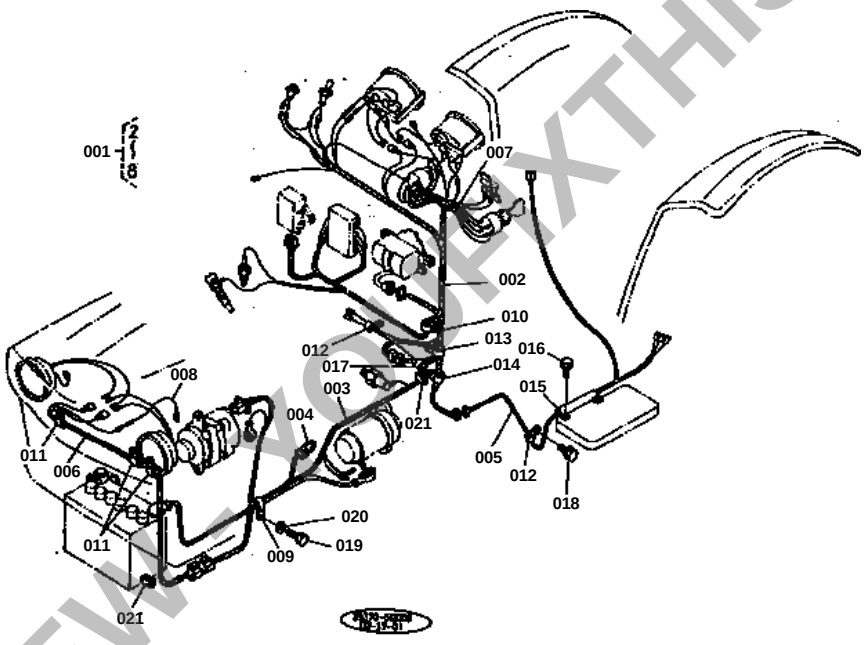


PREVIEW ONLY YOUFIXTHIS.COM

Download full manual at youfixthis.com

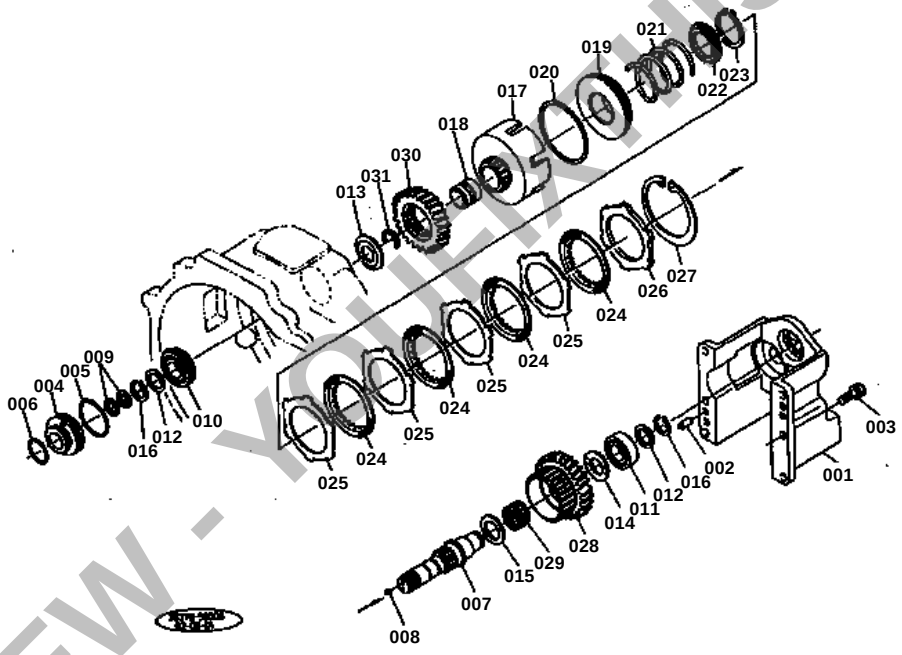


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

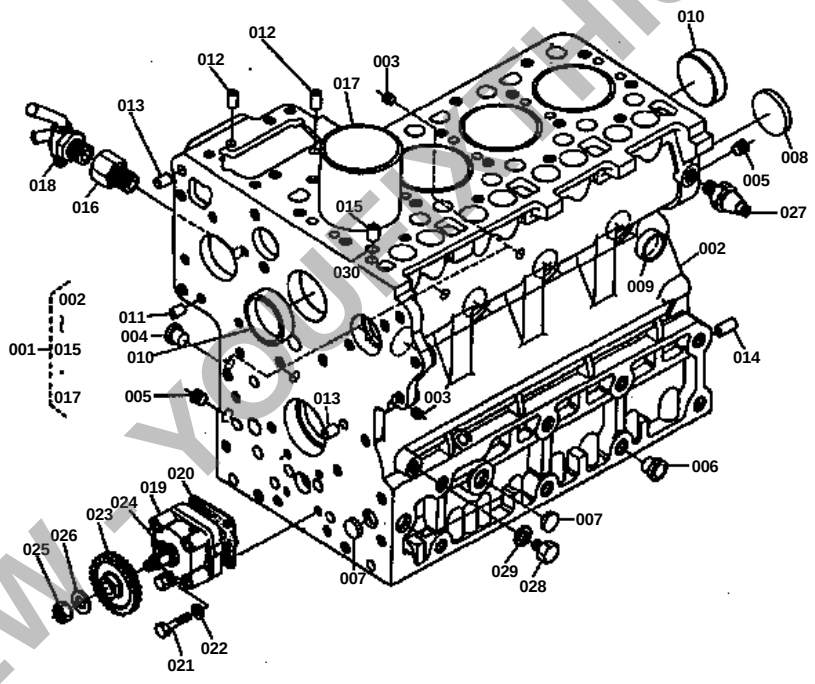

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

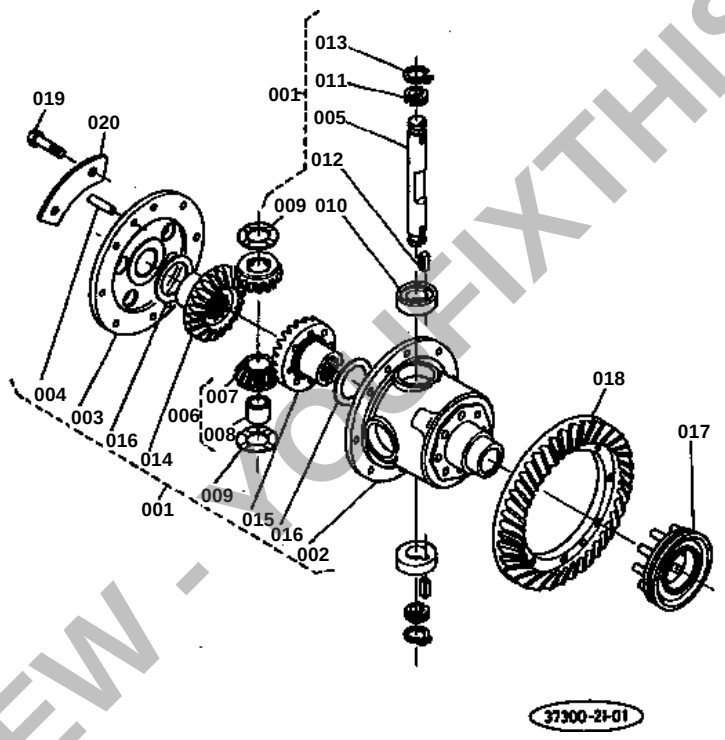

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
001	35170-17120	LEVER,HAND ACCEL	1				0.345	0.759
002	35320-17170	GRIP,ACCELERATOR	1				0.018	0.0396
003	34260-17190	SPRING	2				0.002	0.0044
004	02118-50100	NUT	2				0.005	0.011
005	35260-17320	LINK,ACCELERATOR	1				0.1	0.22
006	34150-17260	SPRING	1				0.01	0.022
007	35340-17570	ROD,ACCELERATOR	1				0.07	0.154
008	34150-17390	JOINT,ROD	1				0.025	0.055
009	02012-50060	NUT	2				0	0
010	04012-50080	WASHER,PLAIN	1				0.001	0.0022
011	04012-50060	WASHER,PLAIN	4				0.001	0.0022
012	05511-50212	PIN,SPLIT	4				0.001	0.0022
013	01155-50840	BOLT	1				0.02	0.044
014	01152-50830	BOLT	1				0.014	0.0308
015	02112-50080	NUT	2				0.003	0.0066
016	35370-17360	ROD,ACCELERATOR	1				1.9	4.18
017	04012-50060	WASHER,PLAIN	2				0.001	0.0022
018	05511-50212	PIN,SPLIT	2				0.001	0.0022
019	35370-17150	ROD,STOP	1				0.2	0.44
020	35260-17160	KNOB	1				0.015	0.033
021	04012-50060	WASHER,PLAIN	1				0.001	0.0022
022	05511-50212	PIN,SPLIT	1				0.001	0.0022

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
001	35260-23510	FORK,SHIFT	1				0.21	0.462
002	35305-23520	FORK,SHIFT	1				0.28	0.616
003	37150-23540	ROD,FORK	1				0.12	0.264
004	37150-23550	ROD,FORK	1				0.12	0.264
005	07715-01605	BALL	4				0.003	0.0066
006	62231-18530	SPRING,STOPPER	2				0.01	0.022
007	05411-00420	PIN,SPRING	1				0.001	0.0022
008	05411-00430	PIN,SPRING	1				0.002	0.0044
009	34150-23610	PIECE,NEUTRUL	1				0.015	0.033
010	34150-23620	SPRING	1				0.003	0.0066
011	35340-24830	COVER,CREEP S-CHANGE	1				0.468	1.0296
012	34650-59330	PACKING	1				0	0
013	01513-50825	STUD	3				0	0
014	01153-50870	BOLT	2				0.026	0.0572
015	04512-50080	WASHER,SPRING	5				0.001	0.0022
016	02156-50080	NUT	3				0.004	0.0088

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
001	35300-21610	COUNTERSHAFT	1				1.115	2.453
002	35370-21510	COLLAR	1				0.09	0.198
003	37150-21550	CIR-CLIP,EXTERNAL	2				0.06	0.132
004	34150-21560	WASHER	2				0.01	0.022
005	08151-06205	BEARING,BALL	2				0.131	0.2882
006	37150-21760	COLLAR,THRUST	2				0.017	0.0374
007	37150-21790	CIR-CLIP	2				0.001	0.0022
008	37150-21750	BOSS,SPLINE	2				0.088	0.1936
009	35340-21782	CIR-CLIP	2				0.007	0.0154
010	35340-21792	WIRE	2				0.001	0.0022
011	35340-21712	GEAR,SPUR 31	1				0.535	1.177
012	35370-21720	GEAR,SPUR 38	1				0.67	1.474
013	35370-21730	GEAR,SPUR 44	1				0.9	1.98
014	37150-21740	GEAR,SPUR 45	1				1.08	2.376
015	08241-03205	BEARING,BALL	1				0	0
016	35340-21810	SHAFT,CREEP S-CHANGE	1				1.43	3.146
017	35300-21660	COUPLING	1				0.19	0.418
018	37150-21550	CIR-CLIP,EXTERNAL	1				0.06	0.132
019	35370-21910	SHAFT,13 GEAR	1				0.98	2.156
020	35370-21920	GEAR,SPUR 22	1				0.67	1.474
021	04612-00300	CIR-CLIP,EXTERNAL	1				0.003	0.0066
022	34150-21560	WASHER	1				0.01	0.022
023	08151-06206	BEARING,BALL	1				0.2	0.44
024	37300-21680	COUPLING	1				0.28	0.616
025	05411-00540	PIN,SPRING	1				0.004	0.0088
026	37300-21940	COLLAR,DISTANCE	1				0.055	0.121
027	08101-06305	BEARING,BALL	1				0.23	0.506
028	37150-21550	CIR-CLIP,EXTERNAL	1				0.06	0.132
029	34150-21942	RETAINER,BEARING	1				0.035	0.077
030	01153-50820	BOLT	1				0.012	0.0264
031	04512-50080	WASHER,SPRING	1				0.001	0.0022

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
001	35370-14120	CASE,SEAL	1				0.245	0.539
002	04811-50550	O RING	1				0.002	0.0044
003	04811-10360	O RING	1				0.001	0.0022
004	35370-14310	SHAFT,CLUTCH	1				0.935	2.057
005	03410-50606	SCREW,SET	1				0.001	0.0022
006	35370-14140	RING,SEAL	2				0.01	0.022
007	38280-21690	BEARING,BALL	1				0.135	0.297
008	67311-14520	BEARING,BALL	1				0.125	0.275
009	35370-13870	WASHER	2				0.005	0.011
010	35370-14200	WASHER	1				0.06	0.132
011	35370-21760	COLLAR,THRUST	1				0.025	0.055
012	38430-25232	COLLAR,THRUST	1				0.02	0.044
013	38430-21550	CIR-CLIP,EXTERNAL	2				0.005	0.011
014	35370-14170	CASE,CLUTCH	1				1.325	2.915
015	35370-14180	RACE,INNER	1				0.12	0.264
016	35370-14190	PISTON	1				0.43	0.946
017	35370-14210	O RING	1				0.005	0.011
018	35370-14220	SPRING	1				0.105	0.231
019	35370-14230	WASHER	1				0.03	0.066
020	04612-00480	CIR-CLIP,EXTERNAL	1				0.002	0.0044
021	35370-14240	DISK,CLUTCH	4				0.06	0.132
022	35370-14250	PLATE,STEEL 1.6	4				0	0
023	35370-14260	PLATE,STEEL 3.5	1				0.095	0.209
024	35370-14270	CIR-CLIP,INTERNAL	1				0.05	0.11
025	35370-14320	GEAR,SPUR 30-78 UNDE	1				1.335	2.937
026	08823-03520	BEARING,NEEDLE	2				0.03	0.066
027	35370-14290	GEAR,SPUR 30	1				0.74	1.628
028	37150-21790	CIR-CLIP	1				0.001	0.0022

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

REF.No	Part No.	Description	Q'ty	S.No.	I/C	REMARKS	Weight (kgf)	Weight (lb)
001	35340-13910	SUPPORT,AIR CLEANER	1				2.3	5.06
002	35340-13920	STAY,A/C SUPPORT	1				0.66	1.452
003	34260-13960	BAND,AIR CLEANER	1				0.675	1.485
004	34260-13970	CUSHION,AIR CLEANER	1				0.065	0.143
005	01150-50838	BOLT	2				0.017	0.0374
006	04512-50080	WASHER,SPRING	2				0.001	0.0022
007	01120-50820	BOLT	7				0	0
008	04012-50080	WASHER,PLAIN	2				0.001	0.0022
009	35340-13710	PLATE,SHUTTER	1				0.435	0.957
010	01123-50818	BOLT	2				0.012	0.0264
011	04015-50080	WASHER,PLAIN	2				0	0

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

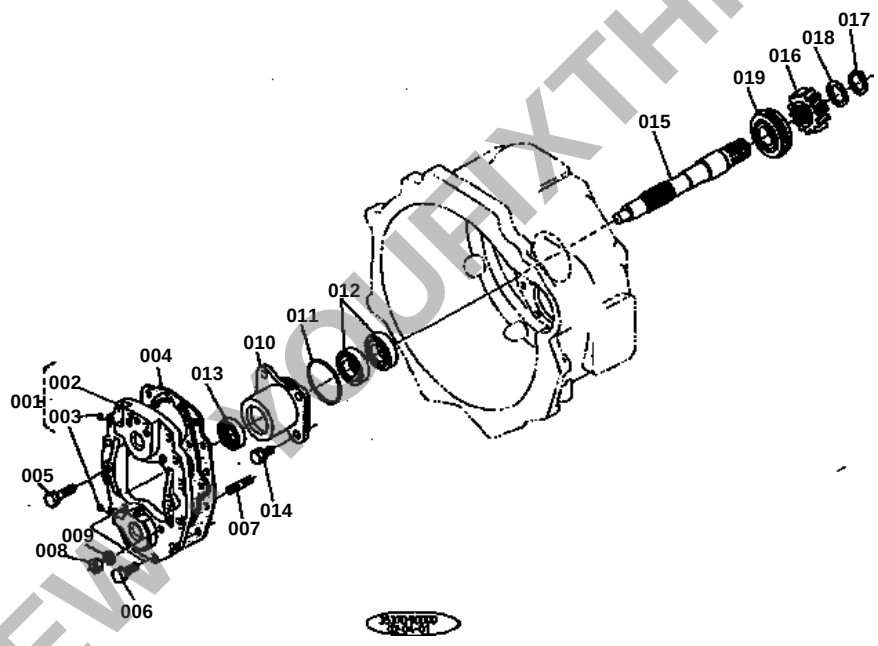

PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 12 of 225 pages

The full manual includes:

- All 225 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota L355SS Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual