ILLUSTRATED PARTS LIST
LISTE DES PIECES

Kubota

MODEL
MODELE **STV32/36/40**

TRACTOR
TRACTEUR




PREVIEW - YOUFIXTHIS.COM

Kubota

97898-23010
AUG.
AOUT
2004

Download full manual at youfixthis.com

CONTENTS

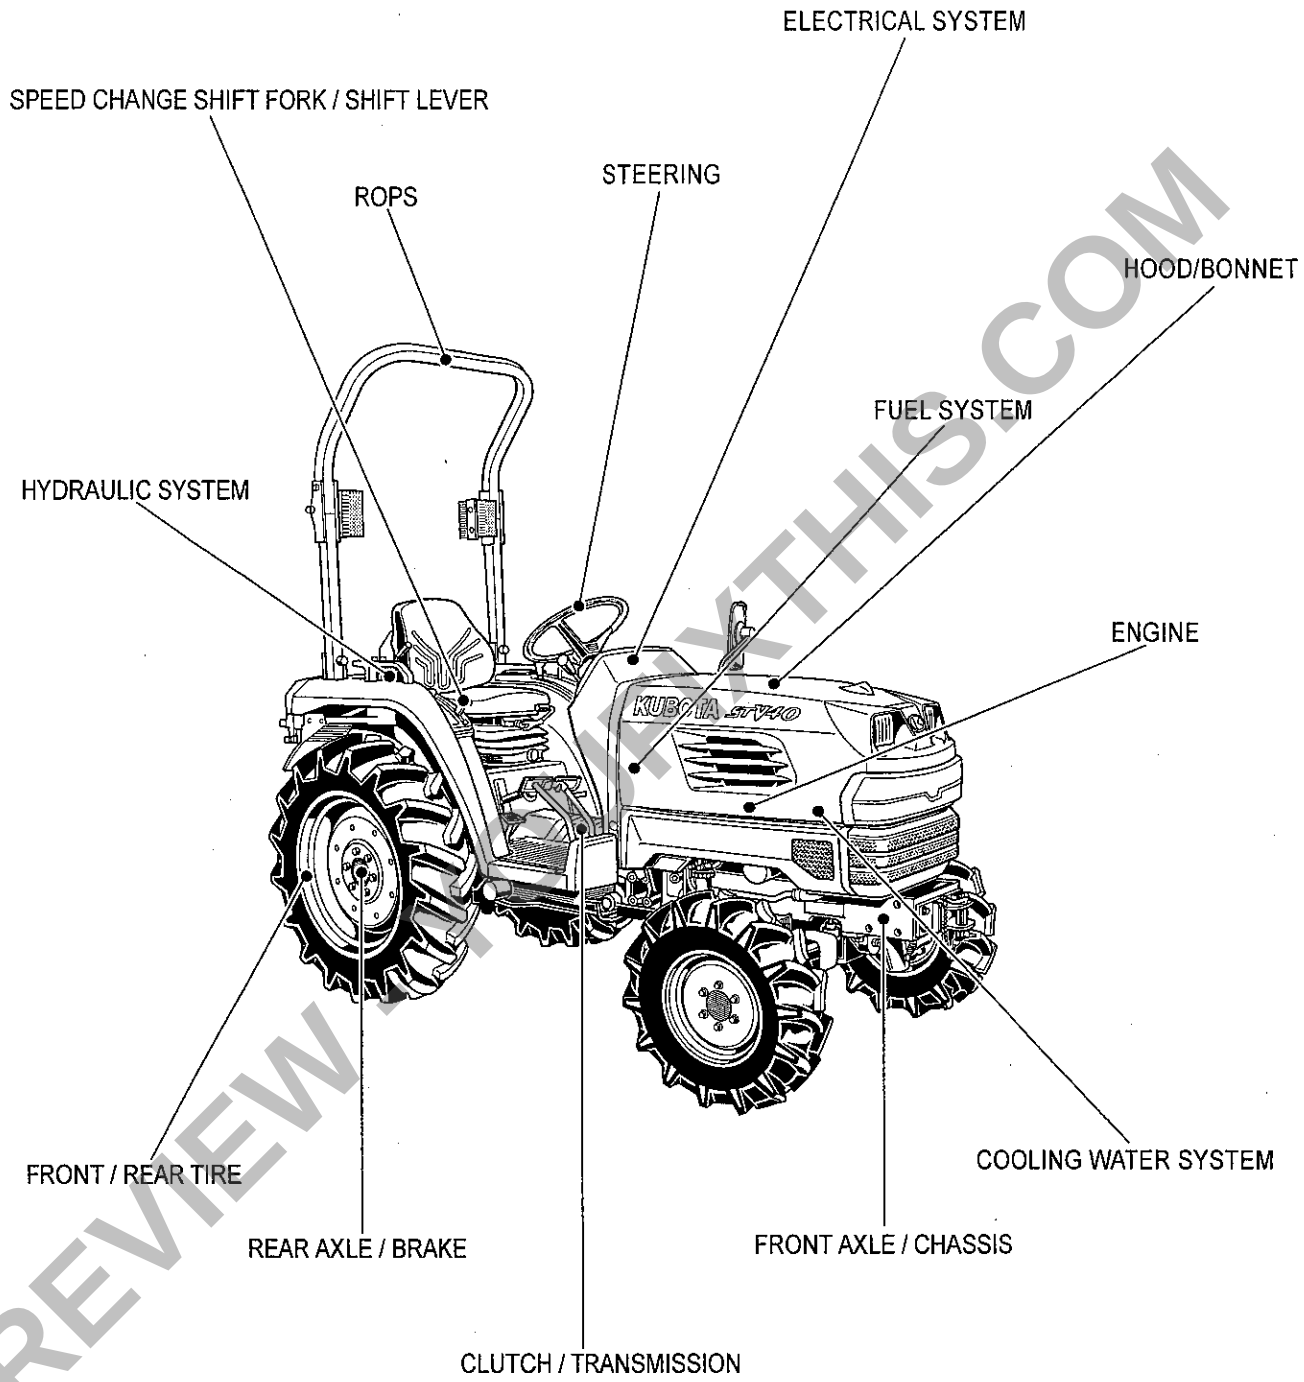

3-POINT LINKAGE / DRAWBAR / HITCH

LABELS

ACCESSORIES

PREVIEW ONLY
Download full manual at youfixthis.com

PREVIEW - YOUFIXTHIS.COM

PIES.No.		TGK0000054		
BLOCK No.	LINE No.	A (1)	B (2)	C (3)
01	01 (ENG.)	1G731-00000 D1503-M-EST-V	1G760-00000 D1703-M-EST-V	1G847-00000 D1803-M-EST-V
	01	TA510-10000 STV-32-FR1	TA520-10000 STV-36-FR1	TA530-10000 STV-40-FR1
	02	TA510-10001 STV-32-FR2	TA520-10001 STV-36-FR2	TA530-10001 STV-40-FR2
	03	TA510-20000 STV-32-UK	TA520-20000 STV-36-UK	TA530-20000 STV-40-UK
	04	TA510-30000 STV-32-GE	TA520-30000 STV-36-GE	TA530-30000 STV-40-GE

DESIGN CHANGE No.
1G700–0630
TA530–0102

Download full manual at youfixthis.com

ENGINE
MOTEUR
MOTOR

Fig.No. 000101

CRANKCASE

BLOC MOTEUR

KURBELGEHAEUSE

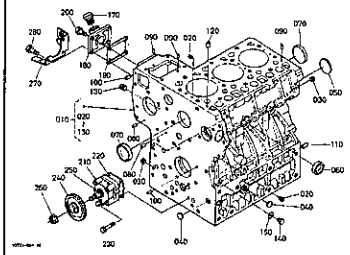


Fig.No. 000102

CRANKCASE

BLOC MOTEUR

KURBELGEHAEUSE

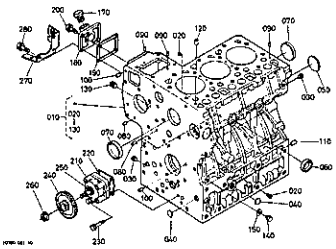


Fig.No. 000103

CRANKCASE

BLOC MOTEUR

KURBELGEHAEUSE

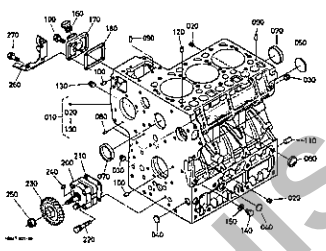


Fig.No. 0002

OIL PAN

CARTER D'HUILE

OELWANNE

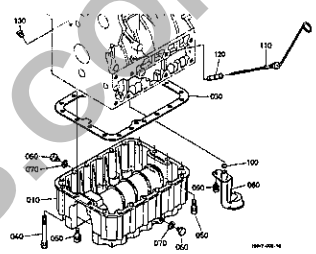


Fig.No. 000301

CYLINDER HEAD

CULASSE

ZYLINDERKOPF

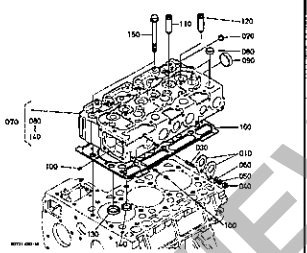


Fig.No. 000302

CYLINDER HEAD

CULASSE

ZYLINDERKOPF

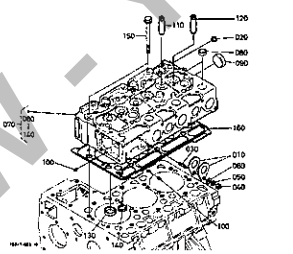


Fig.No. 000401

GEAR CASE

CARTER DE DISTRIBUTION

GETRIEBEGHAEUSE

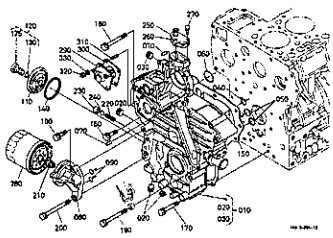


Fig.No. 000402

GEAR CASE

CARTER DE DISTRIBUTION

GETRIEBEGHAEUSE

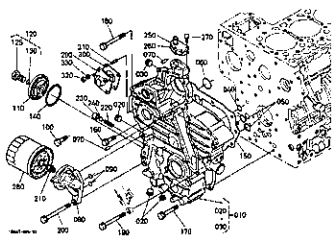


Fig.No. 0005

HEAD COVER

COUVRE-CULASSE

ZYLINDERKOPF-DECKEL

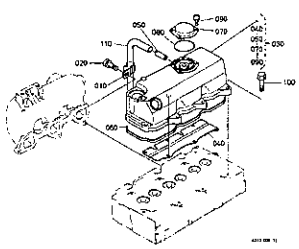


Fig.No. 0100

MAIN BEARING CASE

PALIERS DE VILEBREQUIN

HAUPTLAGERGEHAEUSE

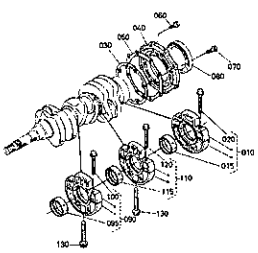


Fig.No. 0101

CAMSHAFT AND IDLE GEAR SHAFT

ARBRE A CAMES ET ARBRE DE PIGNON FOU

NOCKENWELLE UND WELLE, FREILAUFGETR


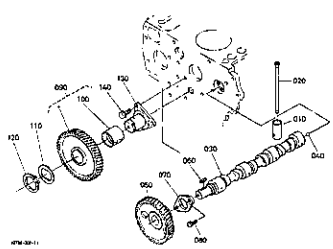


Fig.No. 010201

PISTON AND CRANKSHAFT

PISTON ET VILEBREQUIN

KOLBEN UND KURBELWELLE

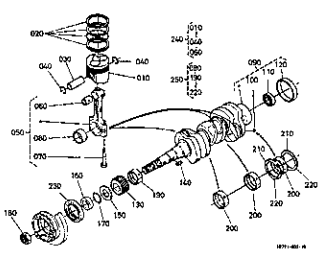

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

FUEL SYSTEM
CARBURANT SYSTEME
BRENNSTOFF SYSTEM

Fig.No. A110

FUEL TANK

RESERVOIR A CARBURANT

KRAFTSTOFFTANK

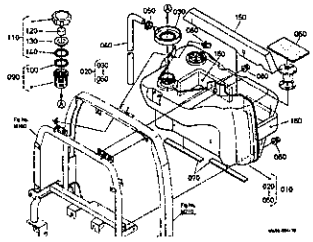


Fig.No. A120

FUEL PIPE

TUYAU A CARBURANT

KRAFTSTOFFROHR


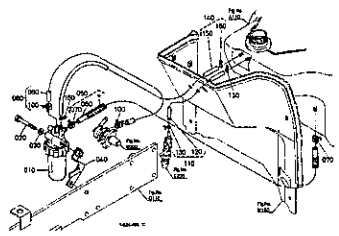


Fig.No. A140

FUEL FILTER [COMPONENT PARTS]

FILTRE A CARBURANT [PARTIES COMPOSANTES]

KRAFTSTOFFFILTER [EINZEL-TEIL]

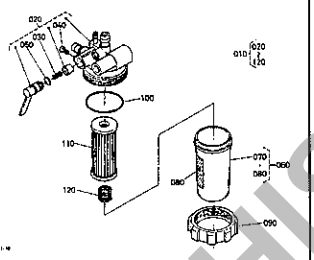

COOLING WATER SYSTEM
REFRIGERATION SYSTEME
ABKUEHLUNG SYSTEM

Fig.No. A410

FAN

VENTLATEUR

VENTILATOR

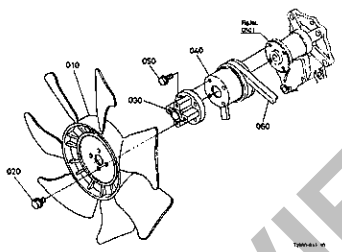


Fig.No. A420

WATER PIPE

TUYAU D'EAU

WASSERROHR

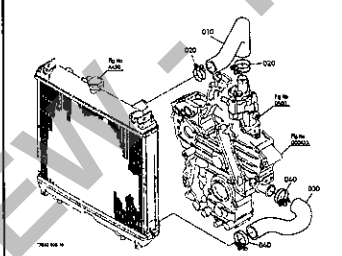


Fig.No. A430

RADIATOR

RADIATEUR

KUEHLER


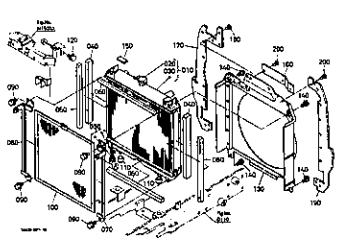


Fig.No. A440

RESERVE TANK

RESERVOIR DU RADIATEUR

RESERVEBEHALTER

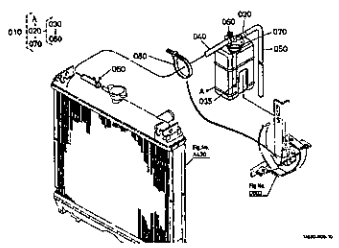

ELECTRICAL SYSTEM
ELECTRICITE SYSTEME
ELEKTRISCH SYSTEM

Fig.No. A53001

ALTERNATOR

ALTERNATEUR

LICHTMASCHINE

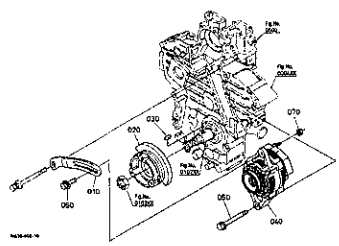


Fig.No. A53002

ALTERNATOR

ALTERNATEUR

LICHTMASCHINE

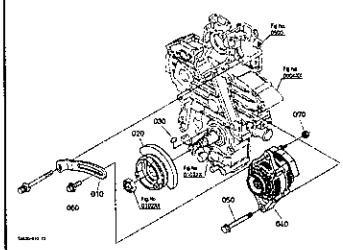


Fig.No. A540

ALTERNATOR [COMPONENT PARTS]

ALTERNATEUR [PARTIES COMPOSANTES]

LICHTMASCHINE [EINZEL-TEIL]


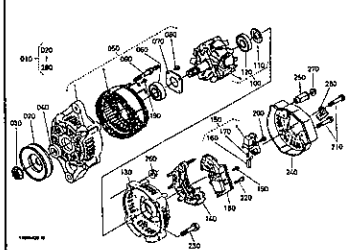


Fig.No. A550

STARTER

DEMARREUR

ANLASSER

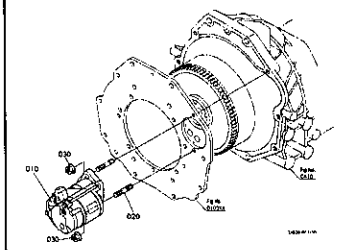

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

CLUTCH/TRANSMISSION
EMBRAYAGE/TRANSMISSION
KUPPLUNG/TRANSMISSION

Fig.No. C110

CLUTCH

EMBRAYAGE

KUPPLUNG

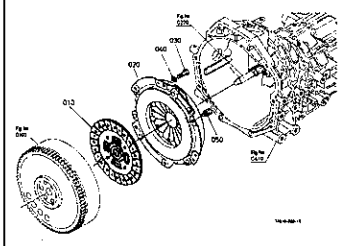


Fig.No. C220

CLUTCH LEVER

LEVIER D'EMBRAYAGE

KUPPLUNG-HEBEL

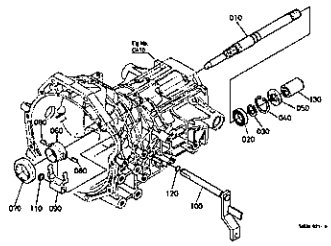


Fig.No. C310

CLUTCH PEDAL

PEDALE D'EMBRAYAGE

KUPPLUNG-PEDAL

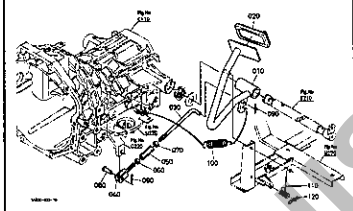


Fig.No. C410

CLUTCH HOUSING

CARTER D'EMBRAYAGE

KUPPLUNG-GEHAEUSE

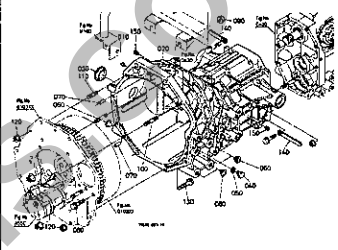


Fig.No. C430

TRANSMISSION CASE/HST

CARTER DE TRANSMISSION/HST

GETRIEBE-GEHAEUSE/HST

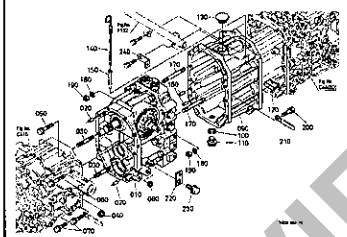


Fig.No. C435

HST [COMPONENT PARTS] 1

HST [PARTIES COMPOSANTES] 1

HST [EINZEL-TEIL] 1

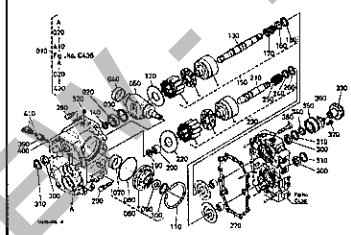


Fig.No. C436

HST [COMPONENT PARTS] 2

HST [PARTIES COMPOSANTES] 2

HST [EINZEL-TEIL] 2

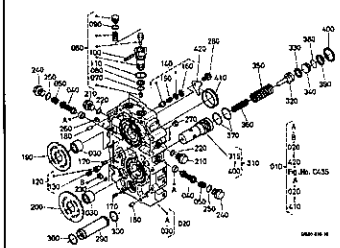


Fig.No. C44001

DIFFERENTIAL GEAR CASE [EXCEPT [G]]

CARTER DE DIFFERENTIEL [EXCEPTE [G]]

DIFFERENTIALGEHAEUSE [AUSGENOMMEN [G]]

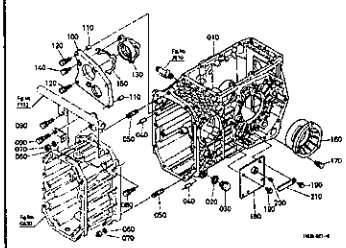


Fig.No. C44002

DIFFERENTIAL GEAR CASE [G]

CARTER DE DIFFERENTIEL [G]

DIFFERENTIALGEHAEUSE [G]

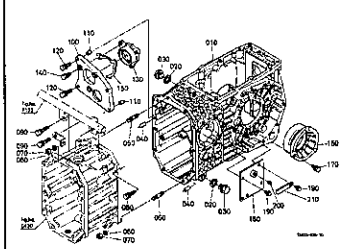


Fig.No. C450

MID PTO CASE

CARTER DE PDF

MITTLERE PTO

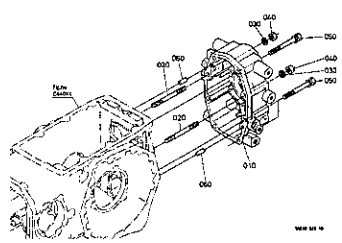


Fig.No. D117

RANGE GEAR SHAFT

ARBRE DE CHANGEMENT DE GAMME

DREHZAHLBEREICHSWELLE


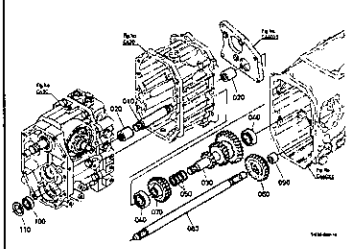


Fig.No. D140

PTO COUNTERSHAFT

ARBRE PDF INTERM

ZAPFWELLEN-VORGELEGEWELLE

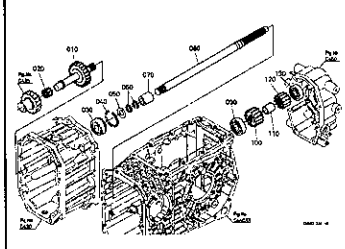

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

STEERING
DIRECTION
LENKUNG

Fig.No. H110

STEERING HANDLE

COLONNE DE DIRECTION

LENKRAD

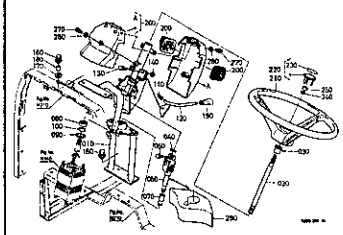


Fig.No. H145

STEERING CONTROLLER

SERVO DIRECTION

HILFSKRAFTLENKUNG

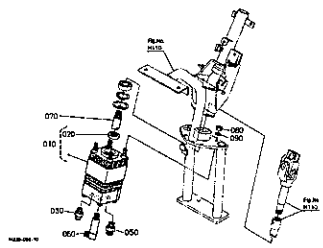


Fig.No. H170

STEERING LINKAGE (TIE ROD)

TIMONERIE DE DIRECTION

LENKUNG-GELENK


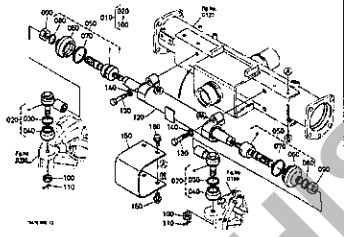


Fig.No. H180

STEERING CYLINDER [COMPONENT PARTS]

CYLINDRE DE DIRECTION [PARTIES COMPOSANTES]

LENKUNGSZYLINDER [EINZEL-TEIL]

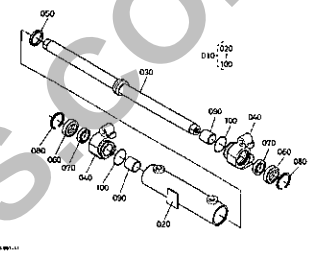

HYDRAULIC SYSTEM
HYDRAULIQUE SYSTEME
HYDRAULIK SYSTEM

Fig.No. J150

HYDRAULIC PUMP

POMPE HYDRAULIQUE

HYDRAULIKPUMPE

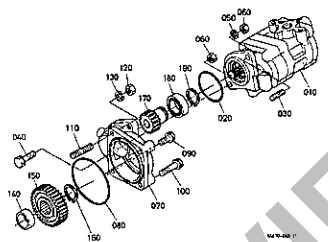


Fig.No. J160

HYDRAULIC PUMP [COMPONENT PARTS]

POMPE HYDRAULIQUE [PARTIES COMPOSANTES]

HYDRAULIKPUMPE [EINZEL-TEIL]

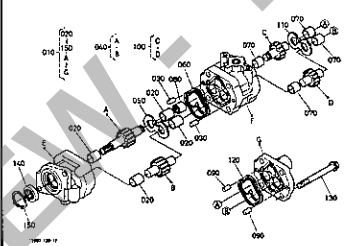


Fig.No. J190

REGULATER VALVE

SOUPAPE DE REGULATEUR

REGLERVENTIL

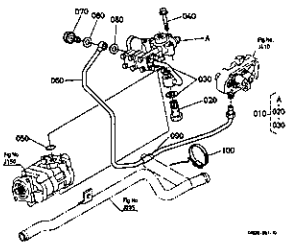


Fig.No. J215

HYDRAULIC OIL LINE (INLET)

CIRCUIT C'HUILE HYDRAULIQUE

HYDRAULIK-KREISLAUF

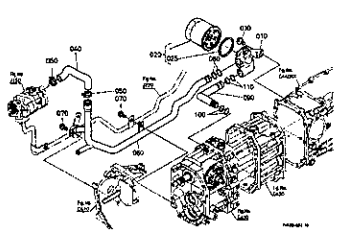


Fig.No. J220

HYDRAULIC OIL LINE (DELIVERY)

CIRCUIT D'HUILE HYDRAULIQUE

HYDRAULIK-KREISLAUF

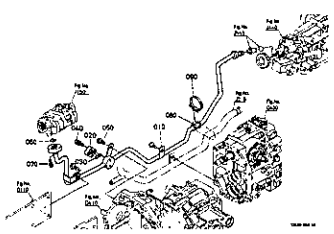


Fig.No. J225

HYDRAULIC OIL LINE (PS)

CIRCUIT D'HUILE HYDRAULIQUE

HYDRAULIK-KREISLAUF

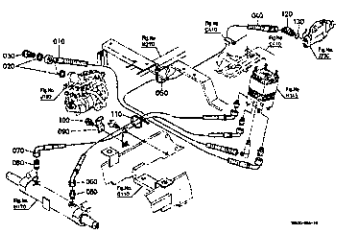


Fig.No. J230

HYDRAULIC PIPE (HST)

TUYAU DE HYDRAULIQUE (HST)

HYDRAULIKROHR (HST)


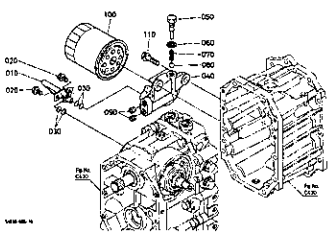


Fig.No. J235

OIL COOLER (HST)

RADIATEUR D'HUILE (HST)


OELKUEHLER (HST)

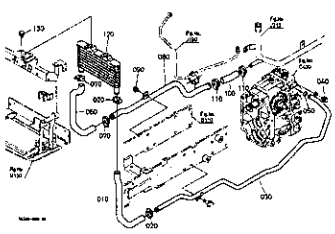

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

000101 CRANKCASE
BLOC MOTEUR
KURBELGEHAEUSE

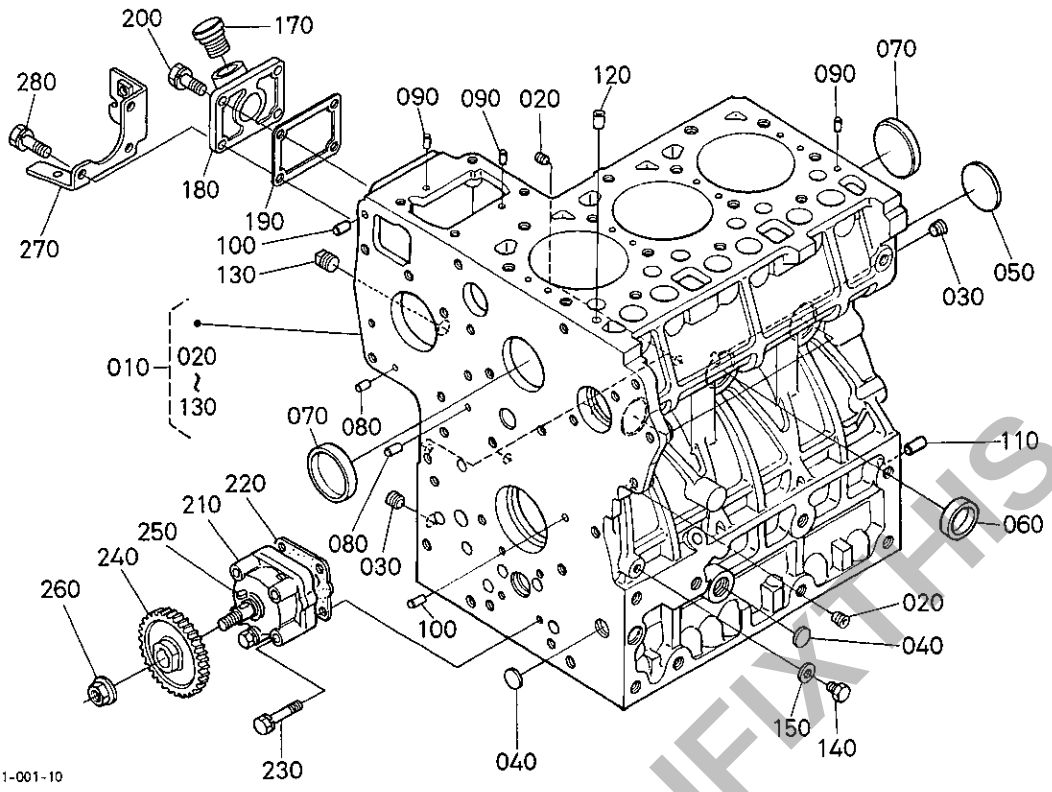

A:D1503-M-EST-V B:D1703-M-EST-V C:D1803-M-EST-V

REF. No. POS. No. BILD-Nr.	PART No. REFERENCE BESELL-Nr.	PART NAME	DESIGNATION	BEZEICHNUNG	Q'TY/S. No. Q'TE/No. S. STUECK/S. Nr. A	B	C	D	I. C.	REMARKS REMARQUES BEMERKUNGEN
010	1G731-0101-0	COMP. CRANKCASE	BLOC MOTEUR COMPLET	KOMP. KURBELGEHAEUSE	1	–	–	–		
020	15521-9602-0	PLUG	BOUCHON	STOPFEN	5	–	–	–		
030	15521-9603-0	PLUG	BOUCHON	STOPFEN	2	–	–	–		
040	17391-9616-0	PLUG, EXPANSION	BOUCHON EXPANSIBLE	STOEPSEL, AUSDEHNUNG	3	–	–	–		
050	16271-9616-0	PLUG, EXPANSION	BOUCHON EXPANSIBLE	STOEPSEL, AUSDEHNUNG	1	–	–	–		
060	15221-0338-0	CAP, SEALING	PASTILLE	STEPSEL, ABDICHTU	5	–	–	–		
070	15221-0339-0	CAP, SEALING	PASTILLE	STEPSEL, ABDICHTU	2	–	–	–		
080	05012-00408	PIN, STRAIGHT	GOUPILLE CYLINDLIQUE	ZYLINDERSTIFT	2	–	–	–		
090	05012-00609	PIN, STRAIGHT	GOUPILLE CYLINDLIQUE	ZYLINDERSTIFT	3	–	–	–		
100	05012-00612	PIN, STRAIGHT	GOUPILLE CYLINDLIQUE	ZYLINDERSTIFT	2	–	–	–		
110	05012-01018	PIN, STRAIGHT	GOUPILLE CYLINDLIQUE	ZYLINDERSTIFT	2	–	–	–		
120	15221-3365-0	PIN, PIPE	GICLEUR	ROHRSTIFT	1	–	–	–		
130	06312-10020	PLUG	BOUCHON	STOPFEN	1	–	–	–		
140	15469-3361-0	PLUG	BOUCHON	STOPFEN	1	–	–	–		
150	15021-3366-0	GASKET	JOINT	DICHTUNGSPLATTE	1	–	–	–		
160	——	BLANK	BLANC	LEERE SPALTE	–	–	–	–		
170	16427-3314-0	PLUG, OIL FILLER	BOUCHON, REMPLIS. H/L	OELEINFUELLSSTOPFEN	1	–	–	–		
180	1A021-3311-0	FLANGE, OIL FILLER	BRIDE DE REMPLISSAGE	EINFUELLSFLANSCH	1	–	–	–		
190	1A021-5166-0	GASKET, PUMP COVER	JOINT	DICHTUNGSPLATTE	1	–	–	–		
200	01023-50618	BOLT	VIS	BOLZEN	1	–	–	–		
210	15471-3501-2	ASSY PUMP, OIL	ENS. POMPE A HUILE	GRP. OELPUMPE	1	–	–	–		
220	1A021-3515-0	GASKET, OIL PUMP	JOINT	DICHTUNGSPLATTE	1	–	–	–		
230	01023-60650	BOLT	VIS	BOLZEN	4	–	–	–		
240	19202-3566-0	GEAR, OIL PUMP DRIVE	PIGNON ENTRAIN. POMPE	GETRIEBE	1	–	–	–		
250	05712-00410	KEY, FEATHER	CLAVETTE	KEIL	1	–	–	–		
260	15221-3568-2	NUT, FLANGE	ECROU A EMBASE	FLANSCHEN-MUTTER	1	–	–	–		
270	1A021-5748-3	BRACKET, ACCEL. CABLE	SUPPORT DE FER	HALTERDRAHT	1	–	–	–		
280	01023-50622	BOLT	VIS	BOLZEN	3	–	–	–		

PREVIEW. YOUFIXTHIS.COM

Download full manual at: youfixthis.com

① Fig. No. ····· Represents No. corresponding to each group name.

② Specifications ····· (for sister models) The types and destinations of sister models are indicated. These indications are given to tell their relevant pages in this book.
The symbols, 〔FR〕〔UK〕 and 〔G〕 in the "REMARKS" column or "HEADING" show the models as to the following types.

〔SYMBOL〕 〔TYPE〕

〔FR〕 ··· STV32(4WD)/STV36(4WD)/STV40(4WD) FRANCE SPEC.

〔UK〕 ··· STV32(4WD)/STV36(4WD)/STV40(4WD) UNITED KINGDOM SPEC.

〔G〕 ····· STV32(4WD)/STV36(4WD)/STV40(4WD) GERMANY SPEC.

③ Components ····· The components of an assembly are identified by a bracket of dotted lines.

④ Point ····· Indicates that the parts is not sold independently.
The assembly (Ref. No.050) containing the part needs to be ordered.

⑤ REF. No. ····· Reference numbers are assigned to parts in the illustration. The code number of a part in the illustration can be identified by referring to the same reference number in the part list.

⑥ Model name ····· The name of the basic model is indicated in this column. Other applicable models are indicated on the "REMARKS" column ⑨.

⑦ S. No. ····· (serial No.) Indicates a group of serial numbers to which a design change is applied.

Engine Serial No. Old Serial No.
654321 ... 6 digits all in numerals.
New Serial No.
Y A 4321
Lower 4 digits in numerals.
5th digit ... Alphabetical letter (Month of manufacture).

Alphabetical letter	A,B	C,D	E,F	G,H	J,K	L,M	N,P	Q,R	S,T	U,V	W,X	Y,Z
Month	1	2	3	4	5	6	7	8	9	10	11	12

6th digit ... Alphabetical letter or numerals (Year of manufacture).

Alphabetical letter or numerals	W	X	Y	1	2	3	4	5	6	7	8	9	A	B	C
Year	'98	'99	2000	'01	'02	'03	'04	'05	'06	'07	'08	'09	'10	'11	'12

⑧ I.C. ····· (interchangeability) Indicates the interchangeability of parts due to design change.

Example-1 ····· ← indicates that a new part can replace an old part, but not vice versa.
15800-0000-0 is applicable to the first serial number to S. No. 15000.
15800-0000-2 is applicable to the first serial number and above.

Example-2 ····· ≠ indicates that the new and old parts are not interchangeable.
15800-1000-0 is applicable to the first serial number to S. No. 15000.
15800-1000-2 is applicable to S. No. 15001 and above.


Example-3 ····· ↔ indicates that the new and old parts are interchangeable. Both 15800-2000-0 and 15830-2000-0 are applicable to the first serial number and above.

⑨ REMARKS 1 ····· In this column, enter other applicable model names, dimensions and other special items. The following symbols and abbreviations are used throughout this book.
29*12.00-15 ... Tire size sq.m ... m^2 sq.mm ... mm^2
cu.m ... m^3 cu.mm ... mm^3 D ... Diameter L ... Length


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

010201 PISTON AND CRANKSHAFT
PISTON ET VILEBREQUIN
KOLBEN UND KURBELWELLE

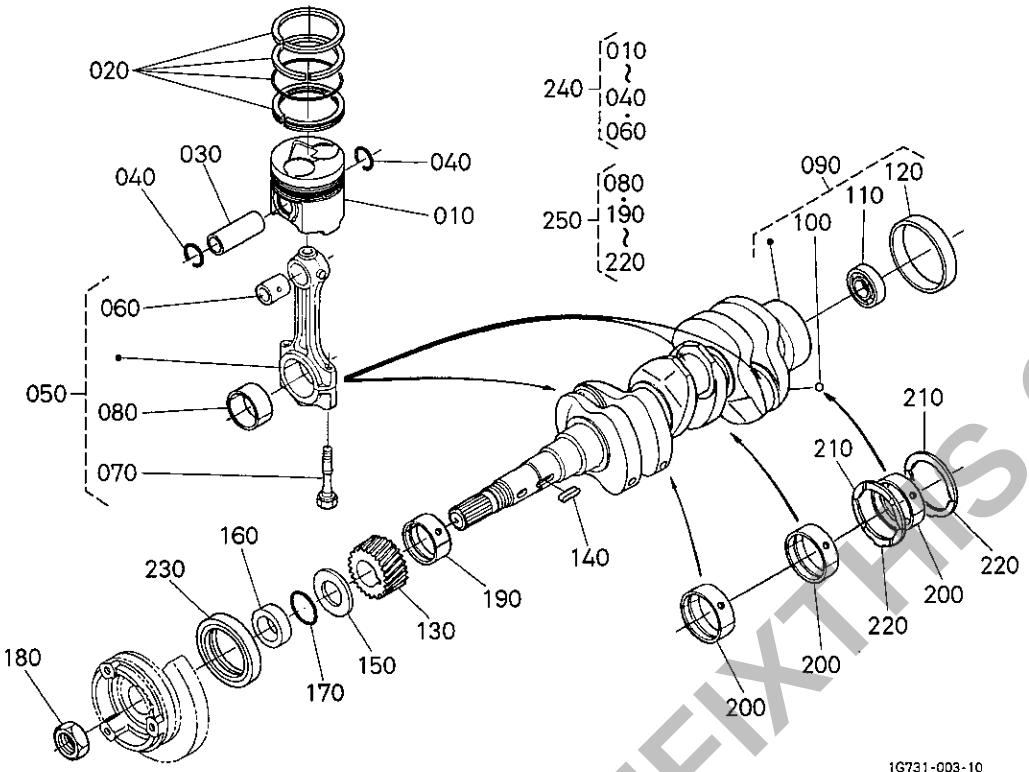

OLD PARTS

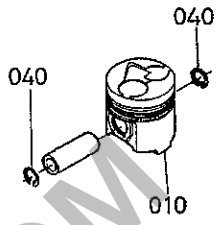

1A021-825-10

A:D1503-M-EST-V B:D1703-M-EST-V C:D1803-M-EST-V


REF. No. POS. No. BILD-Nr.	PART No. REFERENCE BESELL-Nr.	PART NAME	DESIGNATION	BEZEICHNUNG	Q'TY/S. No. Q'TE/No. S. STUECK/S. Nr. A	B	C	D	I. C.	REMARKS REMARQUES BEMERKUNGEN
010	1A021-2111-0	PISTON	PISTON	KOLBEN	3	–	–	–		STD, OLD PART
010	1A021-2111-2	PISTON	PISTON	KOLBEN	3	–	–	–	≠	STD, NEW PART
010	1A021-2190-0	PISTON	PISTON	KOLBEN	3	–	–	–		+0.25mm, OLD PART
010	1A021-2190-2	PISTON	PISTON	KOLBEN	3	–	–	–	≠	+0.25mm, NEW PART
020	1A021-2105-0	ASSY PISTON RING	ENS. SEGMENT	GRP. KOLBENRING	3	–	–	–		STD
020	1A021-2109-2	ASSY PISTON RING	ENS. SEGMENT	GRP. KOLBENRING	3	–	–	–		+0.25mm
030	14901-2131-0	PIN, PISTON	AXE DE PISTON	KOLBENBOLZEN	3	–	–	–		
040	14109-2133-0	CIR CLIP, INTERNAL	CIRCLIP	SPRENGRING	6	–	–	–		OLD PART
040	1G279-2133-0	CIR CLIP, INTERNAL	CIRCLIP	SPRENGRING	6	–	–	–	≠	NEW PART
050	17311-2201-0	ASSY CONNECTING ROD	ENS. BIELLE	GRP. PLEUELSTANGE	3	–	–	–		
060	17331-2198-0	BUSH, PISTON PIN	BAGUE DE BIELLE	BUCHSE, KOLBENSTIFT	3	–	–	–		
070	15521-2214-2	BOLT, CONNECTING ROD	VIS DE BIELLE	BOLZEN	6	–	–	–		
080	17311-2231-0	METAL, CRANKPIN	COUSSINET DE BIELLE	METALLTEIL	3	–	–	–		STD SET
080	17331-2297-0	METAL, CRANKPIN	COUSSINET DE BIELLE	METALLTEIL	3	–	–	–		-0.20mm SET
080	17331-2298-0	METAL, CRANKPIN	COUSSINET DE BIELLE	METALLTEIL	3	–	–	–		-0.40mm SET
090	1A033-2301-2	COMP. CRANKSHAFT	VILEBREQUIN COMPLET	KOMP. KURBELWELLE	1	–	–	–		
100	07715-00401	BALL	BILLE	KUGEL	3	–	–	–		
110	08121-06002	BEARING, BALL	ROULEMENT A BILLES	KUGELLAGER	1	–	–	–		
120	19202-2328-0	BUSH, CRANKSHAFT	BAGUE DE VILEBREQUIN	BUCHSE, KURBELWELLE	1	–	–	–		
130	1A081-2411-0	GEAR, CRANKSHAFT	PIGNON DE VILEBREQ.	KURBELANTRIEBSTEIL	1	–	–	–		
140	05712-00728	KEY, FEATHER	CLAVETTE	KEIL	1	–	–	–		
150	15471-2331-2	SLINGER, OIL	DEFLECTEUR D'HUILE	OELFANGRING	1	–	–	–		
160	19202-2325-0	COLLAR, CRANKSHAFT	COLLIER VILEBREQUIN	HALSRING	1	–	–	–		
170	04811-10300	O RING	JOINT TORIQUE	O RING	1	–	–	–		
180	15221-2336-0	NUT, CRANKSHAFT	ECROU DE VILEB.	MUTTER, KURBELWELLE	1	–	–	–		
190	1A091-2347-0	METAL, CRANKSHAFT	COUSSINET DE VILEBR.	METALLTEIL	1	–	–	–		STD
190	1A091-2391-0	METAL, CRANKSHAFT	COUSSINET DE VILEBR.	METALLTEIL	1	–	–	–		-0.20mm
190	1A091-2392-0	METAL, CRANKSHAFT	COUSSINET DE VILEBR.	METALLTEIL	1	–	–	–		-0.40mm
200	1A091-2348-0	METAL, CRANKSHAFT	COUSSINET DE VILEBR.	METALLTEIL	3	–	–	–		STD SET
200	1A091-2393-0	METAL, CRANKSHAFT	COUSSINET DE VILEBR.	METALLTEIL	3	–	–	–		-0.20mm SET

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

PREVIEW: YOUFIXTHIS.COM

Download full manual at youfixthis.com

C44002 DIFFERENTIAL GEAR CASE [G]
CARTER DE DIFFERENTIEL [G]
DIFFERENTIALGEHAEUSE [G]

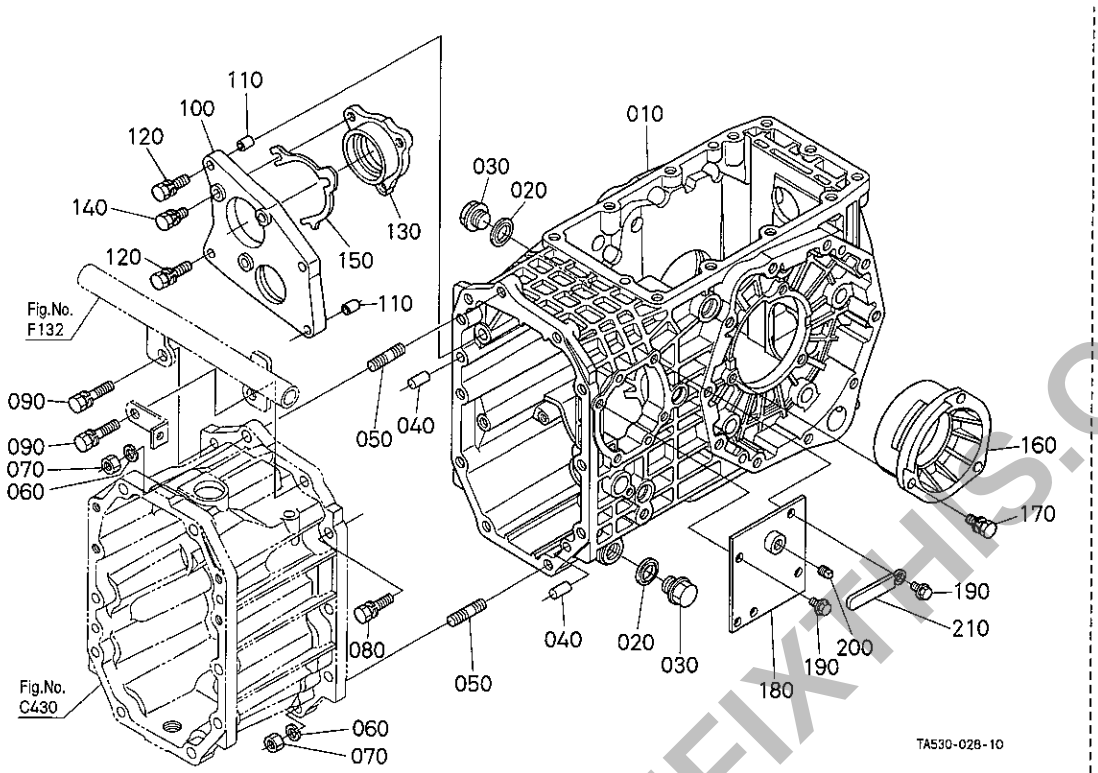

A:STV32 B:STV36 C:STV40


REF. No. POS. No. BILD-Nr.	PART No. REFERENCE BESELL-Nr.	PART NAME	DESIGNATION	BEZEICHNUNG	Q'TY/S. No. Q'TE/No. S. STUECK/S. Nr. A	B	C	D	I. C.	REMARKS REMARQUES BEMERKUNGEN
010	TA470-2121-0	CASE, DIFF. GEAR	CARTER DE DIFF.	GEHAEUSE	1	1	1	–		
020	04717-01700	WASHER, WITH RUBBER	JOINT EN CAOUTCHOUC	GUMMIUNTERLAGE	2	2	2	–		
030	06311-25030	PLUG	BOUCHON	STOPFEN	2	2	2	–		
040	05012-00818	PIN, STRAIGHT	GOUPILLE CYLINDLIQUE	ZYLINDERSTIFT	2	2	2	–		
050	01555-51030	STUD	GOUJON	STEHBOLZEN	2	2	2	–		
060	04512-60100	WASHER, SPRING	RONDELLE GROWER	FEDERRING	2	2	2	–		
070	02176-50100	NUT	ECROU	MUTTER	2	2	2	–		
080	01123-51035	BOLT	VIS	BOLZEN	7	7	7	–		
090	01123-51045	BOLT	VIS	BOLZEN	2	2	2	–		
100	37410-1131-0	COVER, MID	COUVERCLE	DECKEL	1	1	1	–		
110	66116-1119-0	PIPE KNOCK	TUYAU DE FUSEE	KLOPFENROHR	2	2	2	–		
120	01123-50835	BOLT	VIS	BOLZEN	4	4	4	–		
130	37410-1132-0	HOLDER, BEARING	SUPPORT D'ENGRENAGE	LAGERHALTER	1	1	1	–		
140	01123-50830	BOLT	VIS	BOLZEN	3	3	3	–		
150	37410-1133-0	SHIM	CALE	BEILAGE	1	1	1	–		0.4mm
150	37410-1134-0	SHIM	CALE	BEILAGE	1	1	1	–		0.5mm
150	37410-1135-0	SHIM	CALE	BEILAGE	1	1	1	–		0.6mm
150	37410-1136-0	SHIM	CALE	BEILAGE	1	1	1	–		0.7mm
150	37410-1137-0	SHIM	CALE	BEILAGE	1	1	1	–		0.8mm
150	37410-1138-0	SHIM	CALE	BEILAGE	1	1	1	–		0.9mm
150	37410-1139-0	SHIM	CALE	BEILAGE	1	1	1	–		1.0mm
150	37410-1143-0	SHIM	CALE	BEILAGE	1	1	1	–		1.2mm
150	37410-1144-0	SHIM	CALE	BEILAGE	1	1	1	–		1.4mm
160	37410-8934-0	HOLDER, DIFF. BEARING	SUPPORT	HALTER	1	1	1	–		
170	01123-50825	BOLT	VIS	BOLZEN	3	3	3	–		
180	TA470-1846-0	COVER, CREEP	COUVERCLE	DECKEL	1	1	1	–		
190	01754-50816	BOLT, FLANGE	VIS DE BUTEE	FLANSCHEN-BOLZEN	4	4	4	–		
200	06312-10010	PLUG	BOUCHON	STOPFEN	1	1	1	–		
210	32240-3449-0	CLAMP, CORD	ATTACHE-FILS	KABELKLEMME	1	1	1	–		

PREVIEW - KOUFIX.COM

⟷ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

Download full manual at yourfix.com

J435 CONTROL VALVE [COMPONENT PARTS]
DISTRIBUTEUR [PARTIES COMPOSANTES]
REGELUNGSVENTIL [EINZEL-TEIL]

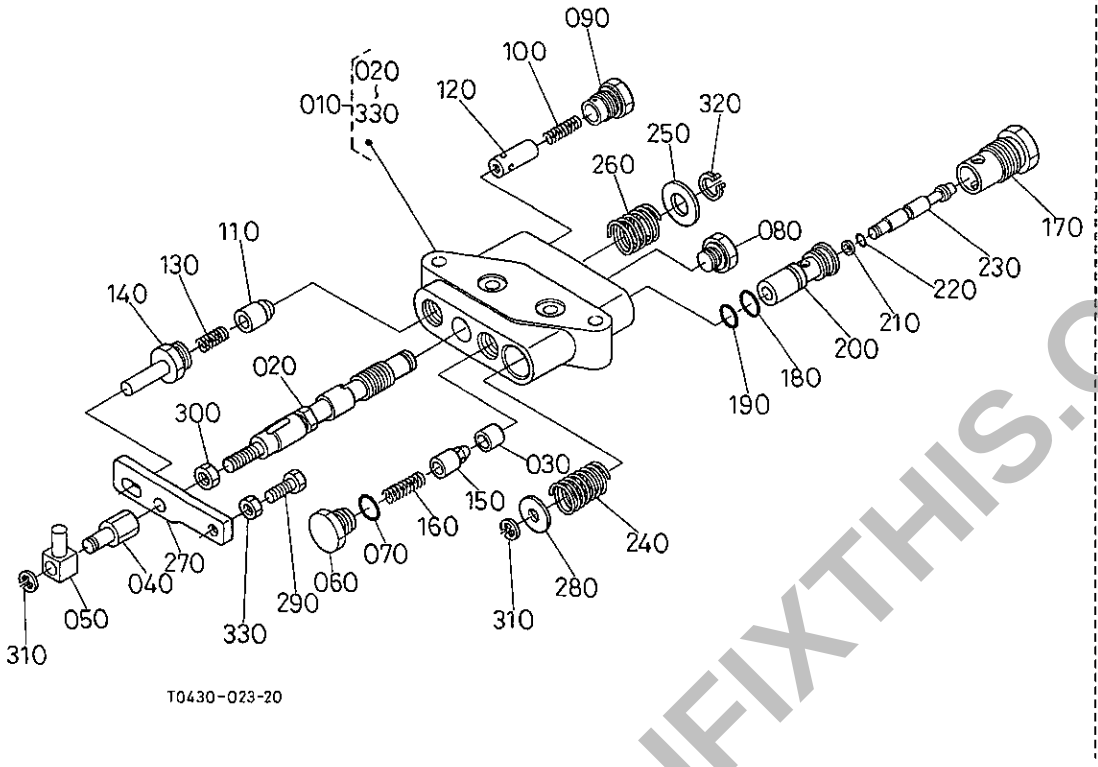

A:STV32 B:STV36 C:STV40

REF. No. POS. No. BILD-Nr.	PART No. REFERENCE BESELL-Nr.	PART NAME	DESIGNATION	BEZEICHNUNG	Q'TY/S. No. Q'TE/No. S. STUECK/S. Nr. A	B	C	D	I. C.	REMARKS REMARQUES BEMERKUNGEN
310	04613-50060	CIR CLIP, EXTERNAL	CIRCLIP	SPRENGRING, AUSSEN	2	2	2	–		
320	04612-00120	CIR CLIP, EXTERNAL	CIRCLIP	SPRENGRING, AUSSEN	1	1	1	–		
330	02014-50060	NUT	ECROU	MUTTER	1	1	1	–		

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 12 of 246 pages

The full manual includes:

- All 246 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota STV32/36/40 Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual