
クボタディーゼルエンジン
KUBOTA DIESEL ENGINE

純正部品表
ILLUSTRATED PARTS LIST

V3307-DI-T-E3B-WLTC1

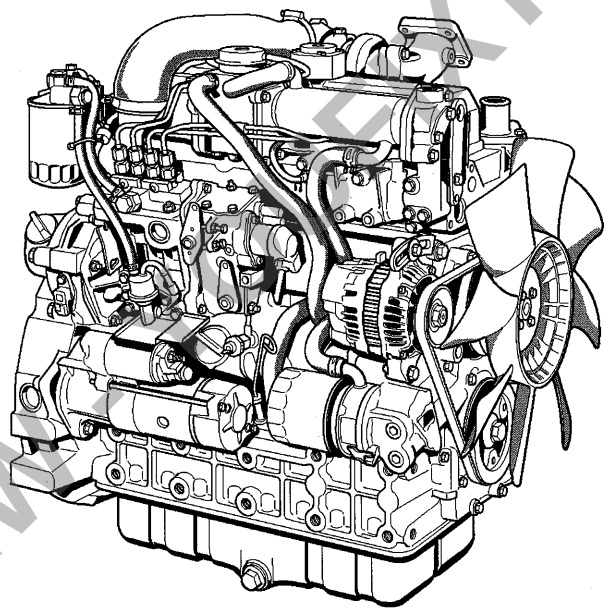

PREVIEW ONLY FIXTHIS.COM

型 式 名	備 考
V3307-DI-T-E3B-WLTC1	FOR WHEEL LOADER 45ZV-2

2009年 1 月初版(07909-C4536)
2010年 7 月改訂版
JUL.2010

部品表番号 CODE No.
07909－C8086

Kubota

Download full manual at youfixthis.com

CONTENTS

[V3307-DI-T-E3B-WLTC1]

500000 CRANK CASE ····1
501000 OIL PAN ····2
501200 DIPSTICK AND GUIDE ····3
502000 CYLINDER HEAD ····4
503000 INLET VALVE AND EXHAUST VALVE ····5
504000 ROCKER ARM SHAFT ····6
505000 HEAD COVER ····7
510000 FRONT COVER ····8
511000 PISTON AND CRANKSHAFT ····9
512000 CAMSHAFT AND IDLE GEAR SHAFT ····12
515000 FLYWHEEL ····13
520000 INJECTION PUMP UNIT ····14
520200 INJECTION PUMP HOUSING ····15
521000 INJECTION PUMP ····16
521700 FUEL PUMP COVER ····17
522000 FUEL CAMSHAFT ····18
523000 GOVERNOR ····19
524000 FORK LEVER (GOVERNOR) ····20
525000 RESTRICTION ADJUSTING BOLT ····21
525500 STOP SOLENOID ····22
531000 FUEL FILTER ····23
532500 SEPARATOR ····24
540000 NOZZLE HOLDER AND GLOW PLUG ····25
545000 INJECTION PIPE ····26
550500 DYNAMO AND PULLEY ····27
551500 DYNAMO [COMPONENT PARTS] ····28
554000 STARTER ····29
555000 STARTER [COMPONENT PARTS] ····30
556000 OIL SWITCH/THERMOMETER ····31
560000 WATER FLANGE AND THERMOSTAT ····32
561000 WATER PUMP ····33
561200 WATER PIPE ····34
567000 FAN AND PULLEY ····35
571000 INLET MANIFOLD ····36
572000 EXHAUST MANIFOLD ····37
572300 EGR VALVE ····38
572400 EGR COOLER ····39
572600 TURBO CHARGER ····40
580000 OIL PIPE (TURBO CHARGER) ····41
582000 OIL COOLER ····42
586500 GLOW LAMP AND TIMER ····43
588000 ACCESSORIES AND SERVICE PARTS ····44
589000 LABEL AND OPERATOR'S MANUAL ····45
591000 UPPER GASKET KIT [OPTION] ····46
592000 LOWER GASKET KIT [OPTION] ····47
593000 METAL KIT [OPTION] ····48
594000 PISTON KIT [OPTION] ····50
■ NUMERICAL INDEX ····51

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

■集録型式

型　式　名	製品コードNo.	備　　考
V3307-DI-T-E3B-WLTC1	1G398-00000	ホイールローダ（45ZV-2）搭載用


■使用色

色　名	スポットカラーS	スポットカラー	ラッカー（1K缶）	ラッカー（4K缶）	スーパーラッカー（4K缶）	スーパーラッカー（16K缶）
青色9号	07935—60027	07935—50027	07913—01051	07913—04051	07913—44051	07913—16001

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

500000 クランクケース CRANK CASE

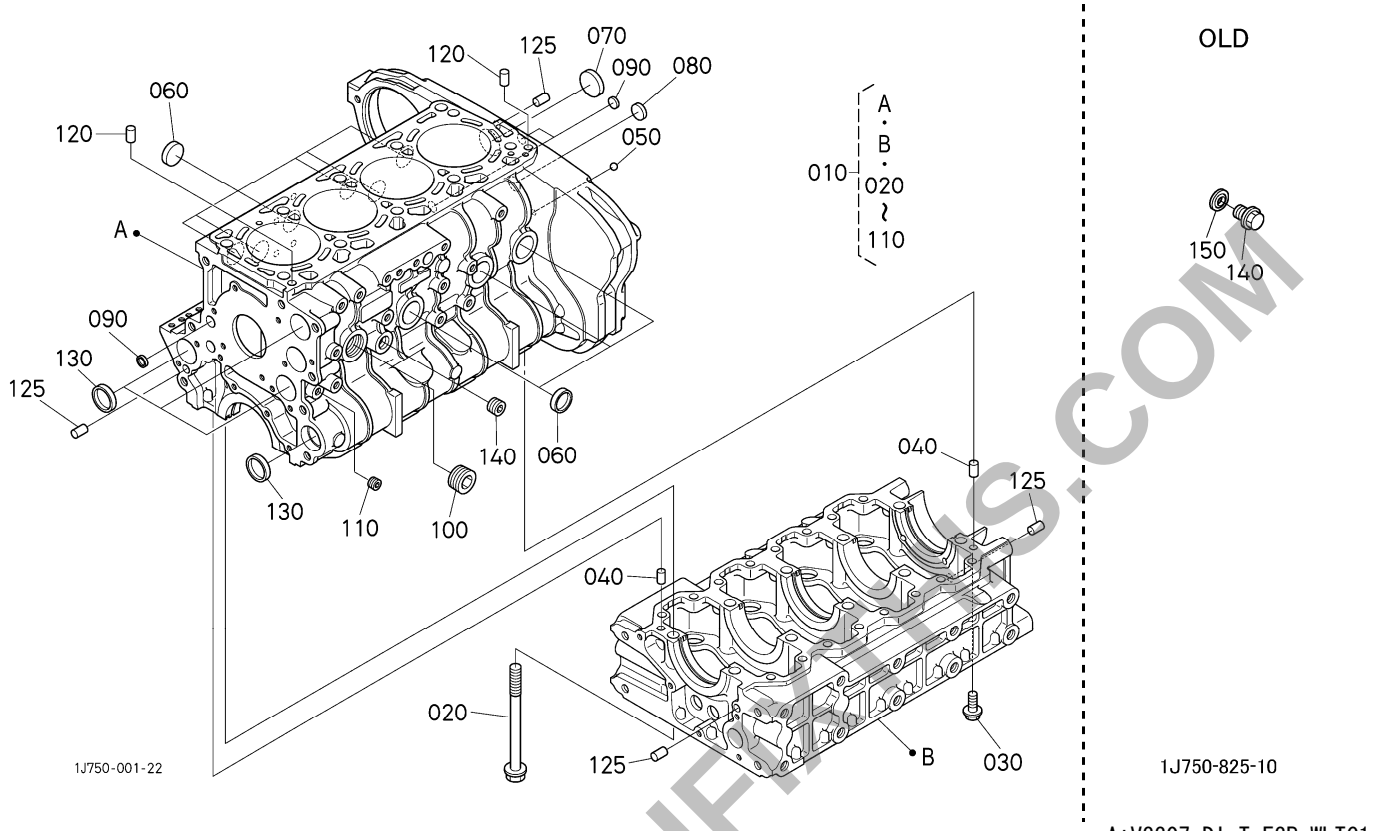

A:V3307-DI-T-E3B-WLTC1


図番 REF.No.	品番 PART No.	部品名称	PART NAME	数量 Q'TY/S.No. A	互換 I.C.	備考 REMARKS
010	1G777-0102-0	ｸﾗﾝｸｹｰｽ, ｱｯｼ	ASSY CRANKCASE	1		
020	1G772-0345-0	ﾎﾞﾙﾄ(CC&HEAD)	BOLT	10		
030	1G772-9102-2	ﾌﾗﾝｼﾞﾎﾞﾙﾄ	BOLT,FLANGE	16		
040	05012-01016	ﾍｲｺｳ ﾋﾟﾝ	PIN,STRAIGHT	2		
050	07715-03209	ｺｳｷｭｳ	BALL	1		
060	15321-9626-0	ﾜﾝｶﾞﾀ ﾌﾟﾗｸﾞ	CAP,SEALING	9		
070	15221-0349-0	ﾜﾝｶﾞﾀ ﾌﾟﾗｸﾞ	CAP,SEALING	1		
080	16851-9627-0	ﾜﾝｶﾞﾀ ﾌﾟﾗｸﾞ 2	CAP,SEALING	1		
090	06311-85016	ﾜﾝｶﾞﾀ ﾌﾟﾗｸﾞ	CAP,SEALING	3		
100	16683-9602-0	ﾌﾟﾗｸﾞ(PT1)	PLUG	1		
110	15521-9602-0	ﾌﾟﾗｸﾞ(R1/8)	PLUG	1		
120	05012-01016	ﾍｲｺｳ ﾋﾟﾝ	PIN,STRAIGHT	6 ~AHZ999		
120	05012-01016	ﾍｲｺｳ ﾋﾟﾝ	PIN,STRAIGHT	2 AJ0001~		
125	1G772-9452-0	ﾍｲｺｳﾋﾟﾝ	PIN,STRAIGHT	4 AJ0001~		
130	15221-0349-0	ﾜﾝｶﾞﾀ ﾌﾟﾗｸﾞ	CAP,SEALING	4		
140	06311-55030	ﾌﾟﾗｸﾞ	PLUG	1 ~ADZ999		
140	1A021-9602-0	ﾌﾟﾗｸﾞ	PLUG	1 AE0001~	≠	
150	04724-00170	ﾊﾟｯｷﾝ	GASKET	1 ~ADZ999		

↔ 新旧部品兼用可; ≠ 新旧部品兼用不可; ← 新部品は旧部品に兼用可; → 旧部品は新部品に兼用可

REVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

511000 ピストン・クランク軸
PISTON AND CRANKSHAFT

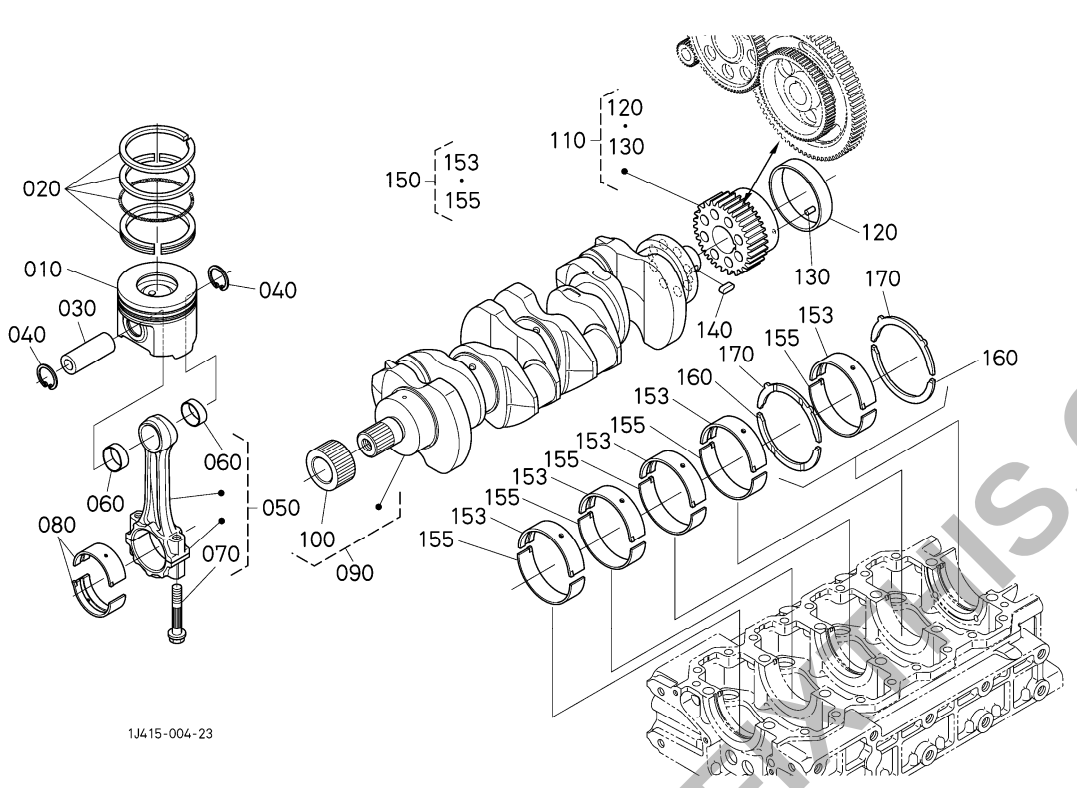

A:V3307-DI-T-E3B-WLTC1


図番 REF.No.	品番 PART No.	部品名称	PART NAME	数量 Q'TY/S.No. A	互換 I.C.	備考 REMARKS
010	1G777-2111-0	ﾋﾟｽﾄﾝ(H05)	PISTON	4 ～9FZ999		(H05)STD
010	1J751-2111-0	ﾋﾟｽﾄﾝ(H05)	PISTON	4 9G0001～	←	(H05)STD
010	1J751-2190-0	ﾋﾟｽﾄﾝ(H05)05	PISTON	4		(H05)+0.50mm
010	1G777-2112-0	ﾋﾟｽﾄﾝ(H00)	PISTON	4 ～9FZ999		(H00)STD
010	1J751-2112-0	ﾋﾟｽﾄﾝ(H00)	PISTON	4 9G0001～	←	(H00)STD
010	1J751-2191-0	ﾋﾟｽﾄﾝ(H00)05	PISTON	4		(H00)+0.50mm
010	1G777-2113-0	ﾋﾟｽﾄﾝ(H10)	PISTON	4 ～9FZ999		(H10)STD
010	1J751-2113-0	ﾋﾟｽﾄﾝ(H10)	PISTON	4 9G0001～	←	(H10)STD
010	1J751-2192-0	ﾋﾟｽﾄﾝ(H10)05	PISTON	4		(H10)+0.50mm
020	1G772-2105-0	ﾋﾟｽﾄﾝﾘﾝｸﾞ,ｱｯｼ	ASSY PISTON RING	4		STD
020	1G772-2109-0	ﾋﾟｽﾄﾝﾘﾝｸﾞ,ｱｯｼ 05	ASSY PISTON RING	4		+0.5mm
030	1G772-2131-0	ﾋﾟｽﾄﾝﾋﾟﾝ	PIN,PISTON	4		
040	04611-00280	ｱﾅ ｻｰｸﾘｯﾌﾟ	CIR CLIP,INTERNAL	8		
050	1G777-2201-0	ｺﾈｸﾃｨﾝｸﾞﾛｯﾄﾞ,ｱｯｼ	ASSY ROD,CONNECTING	4 ～9FZ999		
050	1G772-2201-2	ｺﾈｸﾃｨﾝｸﾞﾛｯﾄﾞ,ｱｯｼ	ASSY ROD,CONNECTING	4 9G0001～	≠	
050	1G772-2201-3	ｺﾈｸﾃｨﾝｸﾞﾛｯﾄﾞ,ｱｯｼ	ASSY ROD,CONNECTING	4	↔	
060	1G772-2198-0	ﾌﾞｯｼｭ(ﾋﾟｽﾄﾝﾋﾟﾝ)	BUSH,PISTON PIN	8		
060	1G772-2198-2	ﾌﾞｯｼｭ(ﾋﾟｽﾄﾝﾋﾟﾝ)	BUSH,PISTON PIN	8	↔	
070	1G772-2214-0	ｺﾝﾛｯﾄﾞﾎﾞﾙﾄ	BOLT,CONNECTING ROD	8		
080	1G772-2231-0	ﾒﾀﾙ(ｸﾗﾝｸﾋﾟﾝ) L	METAL,CRANKPIN	4		STD 青色 SET
080	1G772-2231-2	ﾒﾀﾙ(ｸﾗﾝｸﾋﾟﾝ) L	METAL,CRANKPIN	4	↔	STD 青色 SET
080	1G772-2233-0	ﾒﾀﾙ(ｸﾗﾝｸﾋﾟﾝ) S	METAL,CRANKPIN	8		STD/SET
080	1G772-2233-2	ﾒﾀﾙ(ｸﾗﾝｸﾋﾟﾝ) S	METAL,CRANKPIN	8	↔	STD/SET
080	1G772-2297-0	ﾒﾀﾙ(ｸﾗﾝｸﾋﾟﾝ 1) 02	METAL,CRANKPIN	4		STD 緑色 SET
080	1G772-2297-2	ﾒﾀﾙ(ｸﾗﾝｸﾋﾟﾝ 1) 02	METAL,CRANKPIN	4	↔	STD 緑色 SET
080	1G772-2298-0	ﾒﾀﾙ(ｸﾗﾝｸﾋﾟﾝ 1) 04	METAL,CRANKPIN	4		STD 赤色 SET
080	1G772-2298-2	ﾒﾀﾙ(ｸﾗﾝｸﾋﾟﾝ 1) 04	METAL,CRANKPIN	4	↔	STD 赤色 SET
090	1G777-2301-0	ｸﾗﾝｸｼｬﾌﾄ,ｺﾝﾌﾟ	COMP.CRANKSHAFT	1		
100	1G772-3563-0	ｷﾞﾔ(ｵｲﾙﾎﾟﾝﾌﾟﾄﾞﾗｲﾌﾞ)	GEAR,OIL PUMP DRIVE	1		
110	1G772-2410-0	ｷﾞﾔ,ｱｯｼ(ｸﾗﾝｸｼｬﾌﾄ)	ASSY GEAR,CRANKSHAFT	1		

↔ 新旧部品兼用可; ≠ 新旧部品兼用不可; ← 新部品は旧部品に兼用可; → 旧部品は新部品に兼用可

Download full manual at youfixthis.com

520000 燃料噴射ポンプ ユニット
INJECTION PUMP UNIT

(注):構成部品に関してはFig.No.521000～525500に掲載

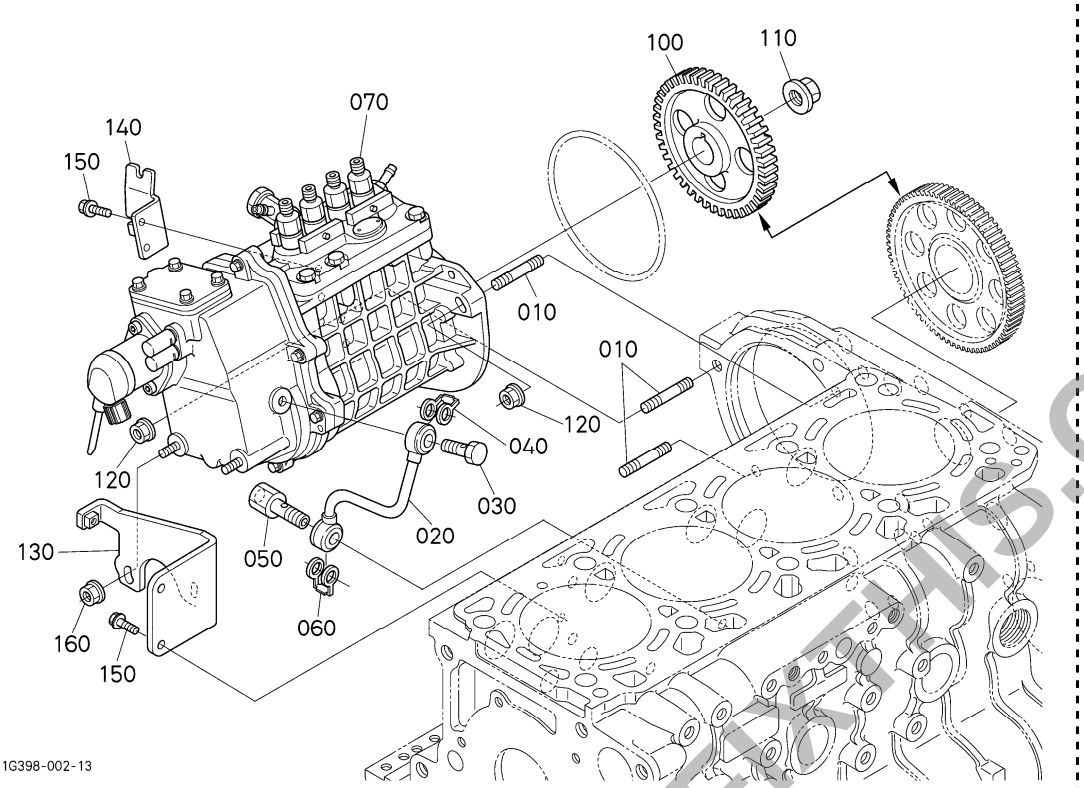


A:V3307-DI-T-E3B-WLTC1

図番 REF.No.	品番 PART No.	部品名称	PART NAME	数量 Q'TY/S.No. A	互換 I.C.	備考 REMARKS
010	1C010-9149-0	ｽﾀｯﾄﾞ(M8X25)	STUD	3		
010	1J700-9149-0	ｽﾀｯﾄﾞ(M8X23)	STUD	3	↔	
020	1G772-3332-0	ﾊﾟｲﾌﾟ,ｺﾝﾌﾟ(IP,ｵｲﾙ)	COMP.PIPE,IP OIL	1		
030	17371-9580-0	ｱｲｶﾝ ﾂｷﾞﾃ ﾎﾞﾙﾄ	BOLT,EYE JOINT	1		
040	1C020-9665-0	ｶﾞｽｹｯﾄ	GASKET	1		
050	1G772-3336-0	ﾂｷﾞﾃﾎﾞﾙﾄ	BOLT,JOINT	1		
060	1G557-9665-0	ｶﾞｽｹｯﾄ	GASKET	1		
070	1G398-5010-0	ｲﾝｼﾞｪｸｼｮﾝﾎﾟﾝﾌﾟ,ｷｯﾄ	KIT PUMP,INJECTION	1		上記(注)参照
070	1G398-5010-2	ｲﾝｼﾞｪｸｼｮﾝﾎﾟﾝﾌﾟ,ｷｯﾄ	KIT PUMP,INJECTION	1 ～9KZ999	↔	
070	1G398-5010-3	ｲﾝｼﾞｪｸｼｮﾝﾎﾟﾝﾌﾟ,ｷｯﾄ	KIT PUMP,INJECTION	1 9L0001～	←	
070	1G398-5010-4	ｲﾝｼﾞｪｸｼｮﾝﾎﾟﾝﾌﾟ,ｷｯﾄ	KIT PUMP,INJECTION	1 AG0001～	←	
080	1G772-5115-0	ｷﾞﾔ(ｲﾝｼﾞｪｸｼｮﾝﾎﾟﾝﾌﾟ)	GEAR,INJECTION PUMP	1		
090	1G772-1620-0	ﾅｯﾄ(INJﾎﾟﾝﾌﾟｷﾞﾔ)	NUT,INJ.PUMP GEAR	1		
100	----	ﾌﾞﾗﾝｸ	BLANK	-		
110	----	ﾌﾞﾗﾝｸ	BLANK	-		
120	02751-50080	ﾌﾗﾝｼﾞﾅｯﾄ	NUT,FLANGE	3		
130	1G772-5162-0	ﾌﾞﾗｹｯﾄ(INJ,ﾎﾟﾝﾌﾟ)	BRACKET,INJ.PUMP	1		
140	1G777-5748-2	ﾌﾞﾗｹｯﾄ(ｱｸｾﾙｹｰﾌﾞﾙ)	BRACKET,ACCEL.CABLE	1 9L0001～		
150	01754-50814	ﾌﾗﾝｼﾞﾎﾞﾙﾄ(M8X1.25)	BOLT,FLANGE	2 ～9KZ999		
150	01754-50814	ﾌﾗﾝｼﾞﾎﾞﾙﾄ(M8X1.25)	BOLT,FLANGE	4 9L0001～		
160	02751-50080	ﾌﾗﾝｼﾞﾅｯﾄ	NUT,FLANGE	2		

↔ 新旧部品兼用可; ≠ 新旧部品兼用不可; ← 新部品は旧部品に兼用可; → 旧部品は新部品に兼用可

Download full manual at youfixthis.com

554000 スタータ STARTER

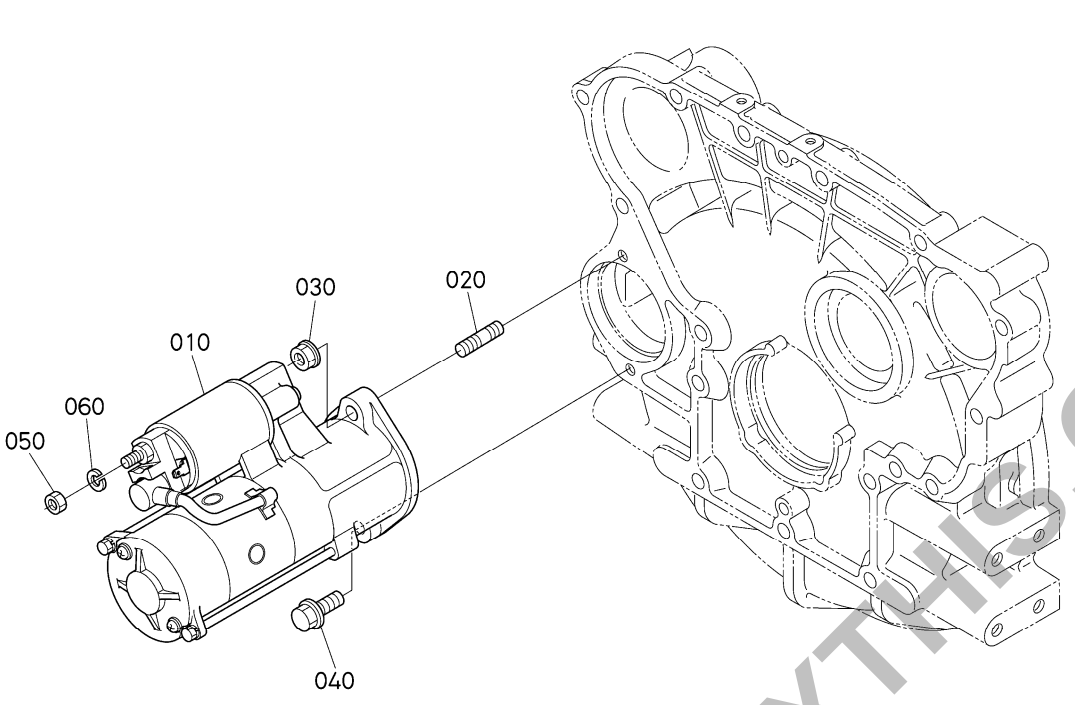


A:V3307-DI-T-E3B-WLTC1

図番 REF.No.	品番 PART No.	部品名称	PART NAME	数量 Q'TY/S.No. A	互換 I.C.	備考 REMARKS
010	1G777-6301-0	ｽﾀｰﾀ,ｱｯｼ(3KW)	ASSY STARTER	1		12V 3.0KW
020	01517-61030	ｽﾀｯﾄﾞ	STUD	1		
030	02771-50100	ﾌﾗﾝｼﾞﾅｯﾄ	NUT,FLANGE	1		
040	01774-51035	ﾌﾗﾝｼﾞﾎﾞﾙﾄ	BOLT,FLANGE	1		
050	02114-50080	ﾅｯﾄ	NUT	1		
060	04512-60080	ﾊﾞﾈ ｻﾞｶﾞﾈ	WASHER SPRING	1		

↔ 新旧部品兼用可; ≠ 新旧部品兼用不可; ← 新部品は旧部品に兼用可; → 旧部品は新部品に兼用可

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

561000 ウォータポンプ
WATER PUMP

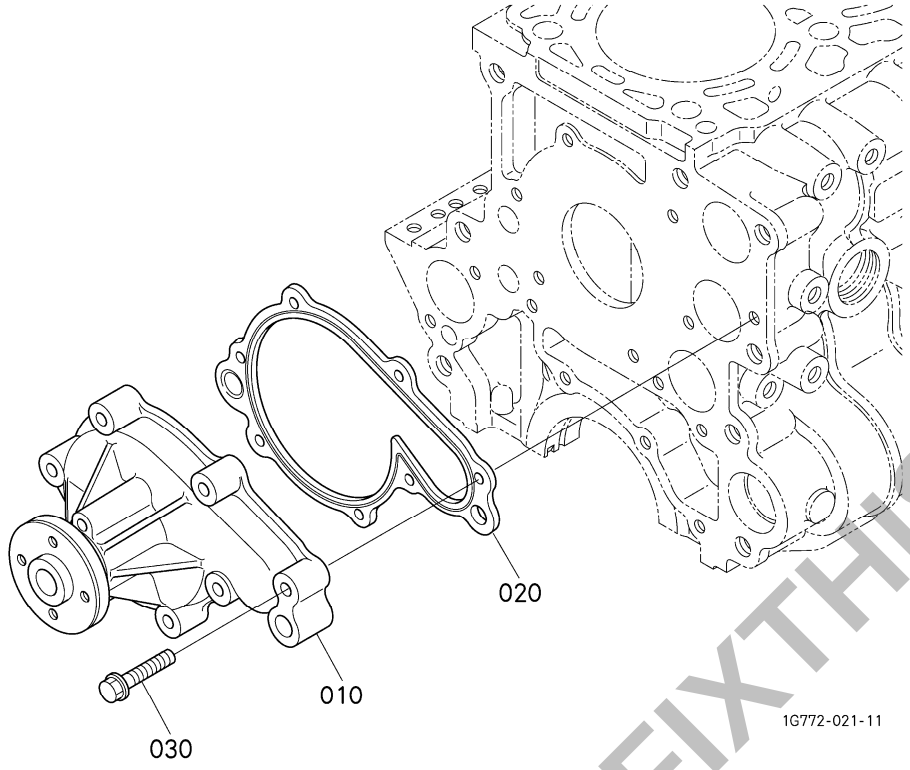

A:V3307-DI-T-E3B-WLTC1

図番 REF.No.	品番 PART No.	部品名称	PART NAME	数量 Q'TY/S.No. A	互換 I.C.	備考 REMARKS
010	1G772-7303-2	ﾎﾟﾝﾌﾟ,ｱｯｼ(ｳｵｰﾀ)	ASSY PUMP,WATER	1		
020	1G772-7343-0	ｶﾞｽｹｯﾄ(ｳｵｰﾀﾎﾟﾝﾌﾟ)	GASKET,WATER PUMP	1		
030	01754-50840	ﾌﾗﾝｼﾞﾎﾞﾙﾄ	BOLT, FLANGE	7		

↔ 新旧部品兼用可; ≠ 新旧部品兼用不可; ← 新部品は旧部品に兼用可; → 旧部品は新部品に兼用可

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 8 of 64 pages

The full manual includes:

- All 64 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Kubota V3307-DI-T-E3B-WLTC1 Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual