ENGINE


A-05 01

A0501

ENGINE ASSEMBLY - "1004-40T" REEN ENGINE

Atlas- (ATLANTIS) 100

1	3650686M93	⊣	AQ81013	1	ENGINE
		⊣	ALTERNATIVE		

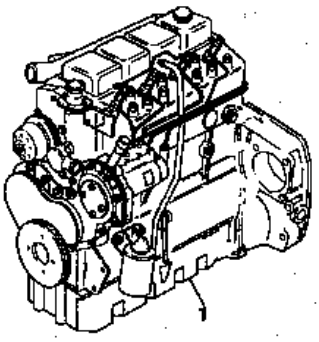


ENGINE

A-05 02

A0502

CYLINDER BLOCK - PLATE D - "1004-40T" GREEN ENGINE


Atlas- (ATLANTIS) 100

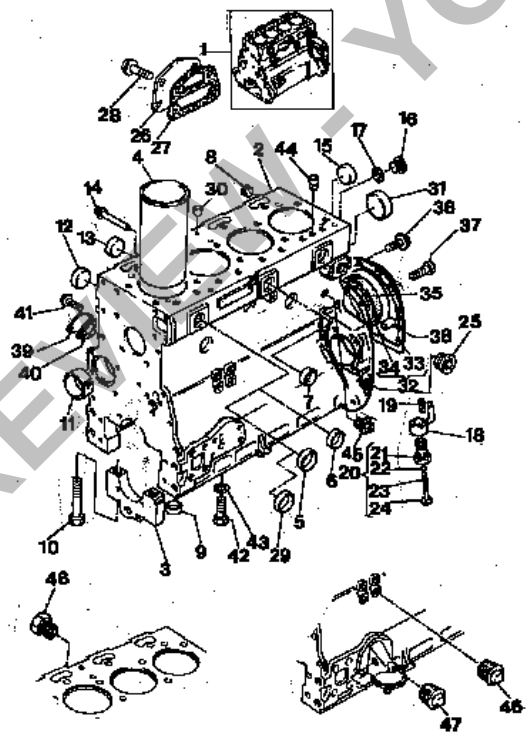

1	ZZ50266	●	ZZ50297 (1)	1	CYLINDER B
2		!	1	1	BLOCK
		▰	REF.N.1		
3		!	1	5	SUPPORT
		▰	REF.N.1		
4	3135X062		B	4	LINER
4	3135X063	!	1	4	LINER
			A		
			(X) 0.4.8.16		
5	0650710	!	1	5	PLUG
			C		
6	0650713	!	1	1	PLUG
			C		
7	0650710	!	1	1	PLUG
			E		
8	0650588	!	1	1	PLUG
			E		
9	33142111	!	1	10	SLEEVE
10	32166329	!	1	10	SCREW
11	31134165	!	1	1	BUSH
12	32418122	!	1	4	PLUG
			E		
13	32416118	!	1	4	PLUG
			F		
14	2485A204	!	1	1	PLUG
			G		
15	32418122	!	1	2	PLUG
			J		
16	0650582	!	1	1	PLUG
			N		
17	3311R003	●	2415D108 (1)	1	WASHER
		!	1		
			N		

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

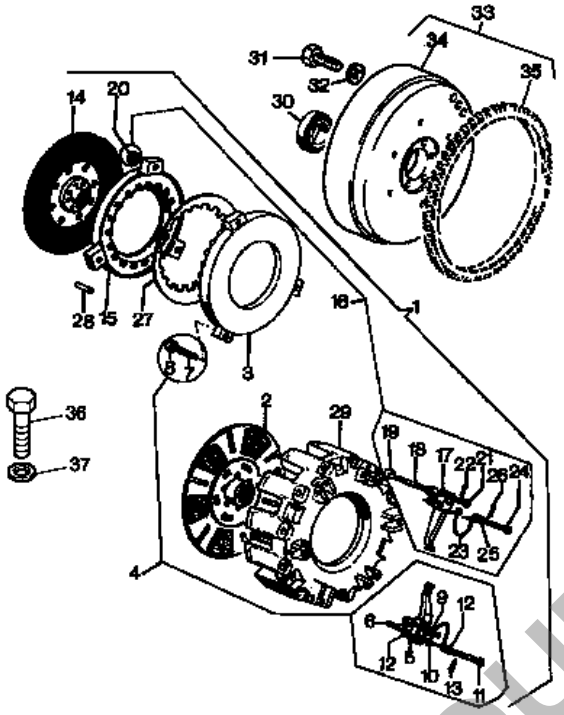

1	3304583M95	●	1424135M93 (1) 3540480M91 (1)	1	CLUTCH
1	3540480M91		E	1	CLUTCH
2	3311325M91	!	1 A (X) 0.1.2.8	1	DISC
3	3311959M1	!	1 A (X) 0.1.2.8	1	BASE PLATE
4	3106322M91	!	1 A (X) 0.3.6.9	1	KIT
5		! ➧	4 REF.N.4	3	LEVER
6		! ➧	4 REF.N.4	3	STEM
7	1424130M1	!	4 (X) 0.3.6.9	3	REGISTER
8	392310X1	!	4 (X) 0.3.6.9	3	NUT
9		! ➧	4 REF.N.4	3	PIN
10		! ➧	4 REF.N.4	3	SPRING
11		! ➧	4 REF.N.4	3	PIN
12	1440273X1	!	4	6	WASHER
13	391401X1	!	4	3	LINCH PIN
14	1424135M93	!	1 D (X) 0.0.1.2	1	DISC
15	3311960M1	!	1 D (X) 0.0.1.2	1	BASE PLATE


TRANSMISSION

E-04
01

E0401

CLUTCH - DUAL CLUTCH "LUK" - 11"


Atlas- (ATLANTIS) 100

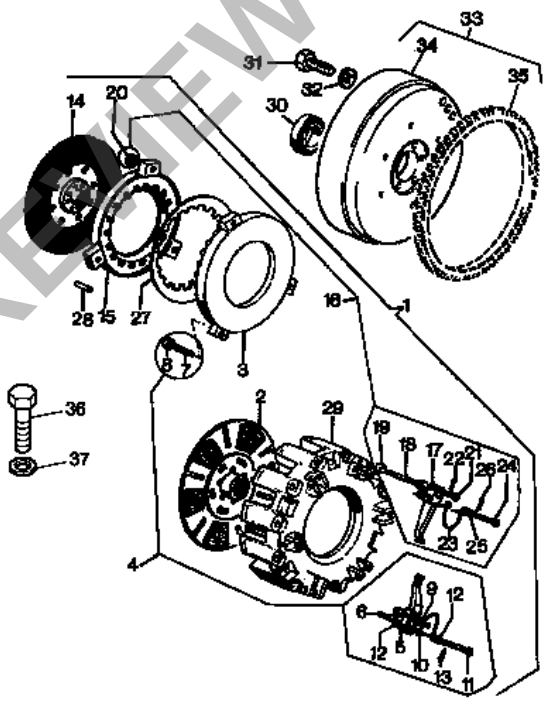

16	3106323M91	!	1 D (X) 0.1.2.8	1	KIT
17		! ➧	16 REF.N.16	3	LEVER
18		! ➧	16 REF.N.16	3	STEM
20		! ➧	16 REF.N.16	3	NUT
21		! ➧	16 REF.N.16	3	PIN
22	391401X1	!	16	3	LINCH PIN
23		! ➧	16 REF.N.16	3	SPRING
24		! ➧	16 REF.N.16	3	PIN
25	1440273X1	!	16	6	WASHER
26	391401X1	!	16 (X) 0.3.6.9	3	LINCH PIN
27	3310800M1	!	1 (X) 0.0.1.2	1	SPRING
28	1440961X1	!	1 (X) 0.3.6.9	3	DOWEL
29	1424122M1	!	1	1	BOX
30	339599X1		(X) 0.1.2.8	1	BEARING
31	973013M1			6	BOLT
32	33117127		B	6	WASHER
33	3653185M91			1	FLYWHEEL
34	1825511M1	● !	3653185M91 (1) 33	1	STEERING W
35	3552228M1	!	33	1	CROWNWHEEL
36	339084X1		M8X100	12	SCREW
37	1440313X1	●	339374X1 (12)	12	LOCK WASHER

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

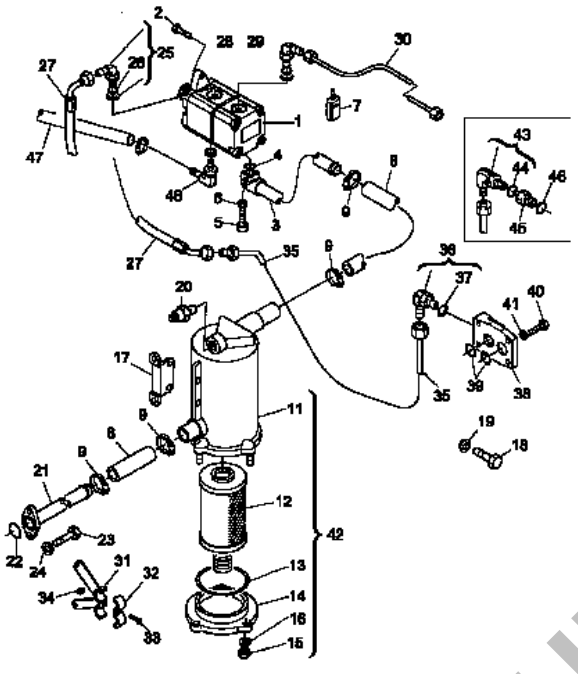

1		◇	P-42 02 1	1 PUMP
		◇	P-42 023 1	
		◇	P-42 025 1	
			A	
2			A	2 SCREW
3	3655107J9A	◐	3655107M91 (1)	1 PIPE
		⊣	J10165	
			F	
3	3660417M91	⊢	J10166	1 PIPE
			F	
4	371468X1			1 O RING
			(X) 0.5.10.20	
5	390796X1			3 SCREW
6	1440313X1	◐	339374X1 (3)	3 LOCK WASHER
7	3308788M1			1 LOCTITE
8	3307152M1	⊢	J10166	1 SLEEVE
			D	
8	3307152M1	⊣	J10165	2 SLEEVE
8	3660418M1	⊢	J10166	1 SLEEVE
			E	
9	1442232X1	⊢	J10166	4 CLAMP
9	394301X1	⊣	J10165	4 CLAMP
11	3532598M91	!	42	1 BODY
			(X) 0.0.1.2	
12	3530223M92	!	42	1 CARTRIDGE
			(X) 2.4.6.12	
13	1007242M1	!	42	1 RING
			(X) 0.5.10.20	
14	3532630M1	!	42	1 COVER
15	1440086X1	!	42	3 NUT
16	1440313X1	◐	339374X1 (3)	3 LOCK WASHER
		!	42	
17	3533143M1			2 STIRRUP


HYDRAULICS AND LINKAGE

P-42
01

HYDRAULICS EQUIPMENT - PIPINGS AND PUMP

Atlas- (ATLANTIS) 100


P4201

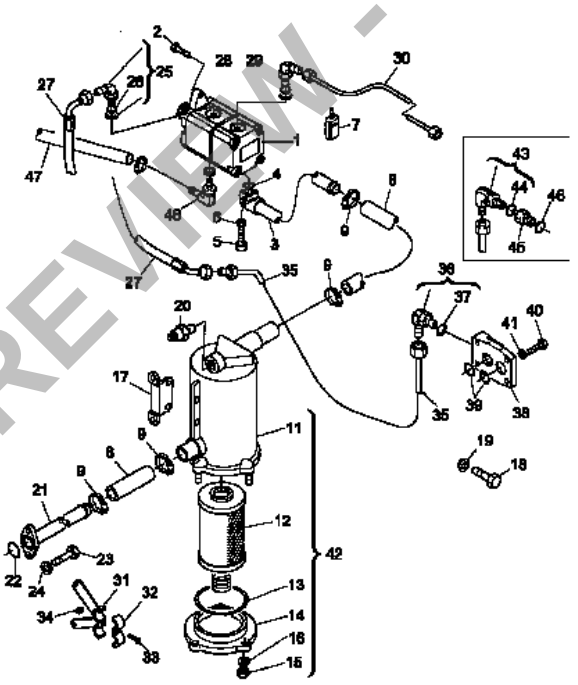

18	1442692X1			2 SCREW
19	339375X1			2 LOCK WASHER
20	3530225M92	⊣	M19142	1 SWITCH,IND
			(X) 0.2.4.6	
20	3663168M1	⊢	M19143	1 SWITCH
21	3655334J9A	◐	3662369J9A (1)	1 PIPE
			G	
22	1004637M1			1 RING
23	1441757X1			2 SCREW
24	1440314X1			2 LOCK WASHER
25	1424959M94		B	1 UNION
			90^	
26	3019914X1	!	25	1 O RING
27	3655097J9A		L	1 PIPE
28	1426265M93	⊣	J10165	1 UNION
			C	
28	3656164M92	⊢	J10166	1 UNION
29	3015163X1	!	28	1 O RING
30	3655095J9A	⊣	J10165	1 PIPE
			C	
			L	
30	3660238M91	⊢	J10166	1 PIPE
		⊣	.....	
			C	
			L	
30	3662791M92	⊢	.....	1 PIPE
			C	
			L	
31	3533138M91			1 SUPPORT
32	3533140M1			1 NAMEPLATE
33	339761X1			1 SCREW
34	394367X1			1 NUT
35	3533079M92	⊣	J10165	1 PIPE
			B	
			C	


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

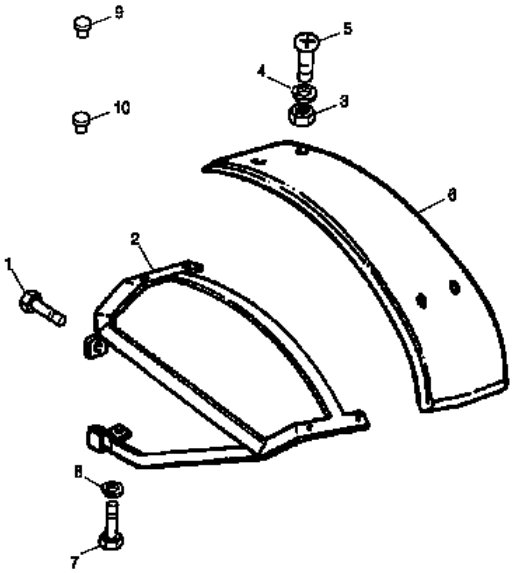

1	390913X1	▼I ►	M12X85	1	SCREW
1	392241X1	▼I ◄	M12X70	1	SCREW
2	3304600M92	▼I ◄	A B D	1	FRAME
2	3304601M92	▼I ►	A B D	1	FRAME
2	3530502M91	▼I ◄	C	1	FRAME
2	3530503M91	▼I ►	C	1	FRAME
3	339169X1	●D ▼I	394367X1 (8)	8	NUT
4	1440313X1	●D ▼I	339374X1 (8)	8	LOCK WASHER
5	390018X1	▼I		8	BOLT
6	3304607M2	▼I	B C D	2	GUARD
6	3547033M1	▼I	A	2	FENDER
7	339761X1	▼I		2	SCREW

FENDERS FOOTSTEPS AND PLATFORM | S-22 01 | S2201 | FENDERS - FRONT - 2WHEEL DRIVE
Atlas- (ATLANTIS) 100

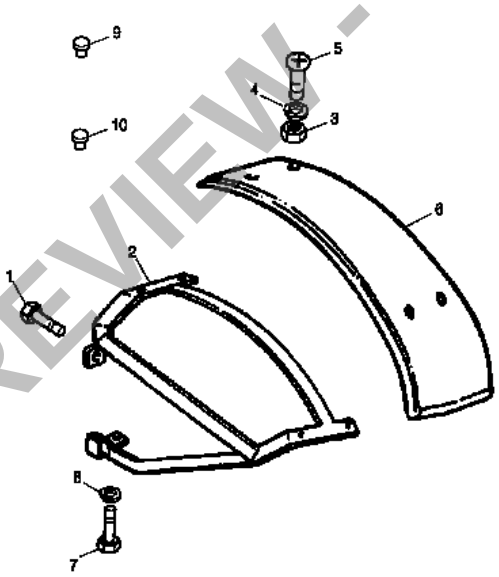

8	1440313X1	●D ▼I	339374X1 (2)	2	LOCK WASHER
9	973162M1	●D	1440731X1 (2) E	2	PLUG
10	3302001M1	E		14	PLUG

A FOR USE WITH 7.50 - 16 TYRES
B FOR USE WITH 7.50-18 TYRES
C FOR USE WITH 9.00-16 TYRES
▼I 2 WHEEL DRIVE
D FOR USE WITH 7.50-20 FRONT
E WITHOUT FRONT FENDER
◄ LEFT HAND
► RIGHT HAND

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com


LIGHTING EQUIPMENT

D-00 02

D0002

ELECTRICAL WIRING - "FRONT"

Atlas- (ATLANTIS) 100

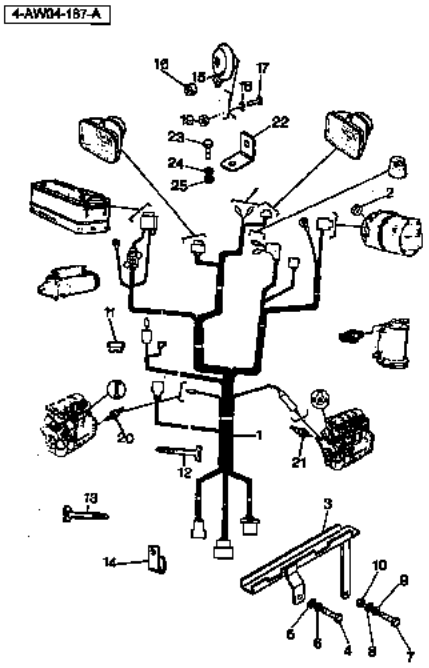

1	3656813M91	⊣	M22189	1	HARNESS
1	3666164M91	⊢	M22190	1	HARNESS
2	390995X1		A	1	NUT
3	3649610M91			1	GUARD
4	339560X1			1	SCREW
5	390971X1			1	WASHER
6	339375X1			1	LOCK WASHER
7	339337X1			1	SCREW
8	390972X1			2	WASHER
9	339374X1			2	LOCK WASHER
10	394367X1			2	NUT
11	3539335M92			1	RELAY
12	3533937M1			16	CLAMP
13	3301575M1			1	CLAMP
14	3307613M1			2	CLAMP
15	3653709M91	◐	3539770M91 (1)	1	HORN
16	1825225M1			1	SPACER
17	339124X1			1	SCREW
18	1440313X1	◐	339374X1 (1)	1	LOCK WASHER
19	339169X1	◐	394367X1 (1)	1	NUT
20	1877731M92			1	BULB
			(X) 0.4.8.12		
21	1877721M92			1	BULB
			(X) 0.4.8.12		
22	3543713M1			1	SUPPORT
23	339123X1			1	SCREW
24	339585X1			1	WASHER
25	394367X1			1	NUT

⊢ FROM SERIAL OR ENGINE NUMBER

⊣ UP TO SERIAL OR ENGINE NUMBER

A FOR ALTERNATOR CABLE

(X) QTY PER TRACTORS SOLD (AA.BBB.CCC.DDD) (AA) FOR 1,(BBB) 2-10 (CCC) 11-25 (DDD) 26-50


LIGHTING EQUIPMENT

D-00 03

D0003

INSTRUMENT PANEL - EQUIPMENT INSTRUMENT PANEL - EQUIPMENT INSTRUMENT PANEL


Atlas- (ATLANTIS) 100

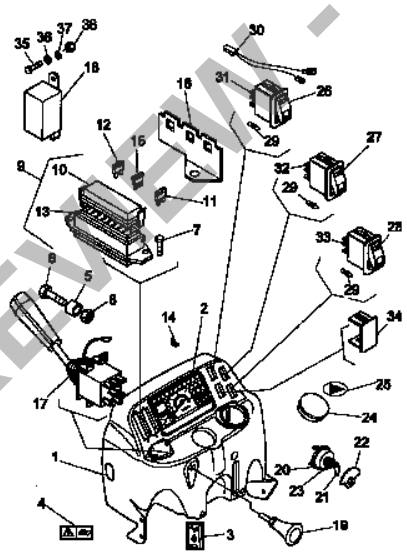

1			A	1	BONNET
2			A	1	PANEL
3		!	1 G	1	DECAL
4		!	1 G	1	DECAL
5	3536745M1			3	SPACER
6	3015030X1			3	SCREW
7	3015002X1			4	SCREW
8	3019139X1			3	NUT
9	3533900M91			2	BOX
10	3311512M1	!	9	1	COVER
11	3533928M91		7,5 AMP (X) 2.10.20.30	4	FUSE
11	3539311M91		5 AMP	1	FUSE
12	3536581M91		15 AMP (X) 2.10.20.30	5	FUSE
13		!	9	1	BOX
		⇒	REF N.9		
14	3536709M1			1	JUNCTION
15	3534038M91		20 AMP (X) 2.10.20.30	2	FUSE
16	3654433M1			1	SUPPORT
17	3533174M92			1	SWITCH,IND
18	3533171M92			1	SWITCH,IND
18	3715413M1		H	1	SWITCH,IND
19			A L	1	CABLE
20	3547633M91	⊰	- JORDA	1	STARTING AID
20	3654627M91	⊰	- LUCAS (X) 1.4.8.16	1	SWITCH,IND
21	3813361M1	◐	3666665M1 (1)	1	KEY
		!	20 (X) 2.2.4.8		


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

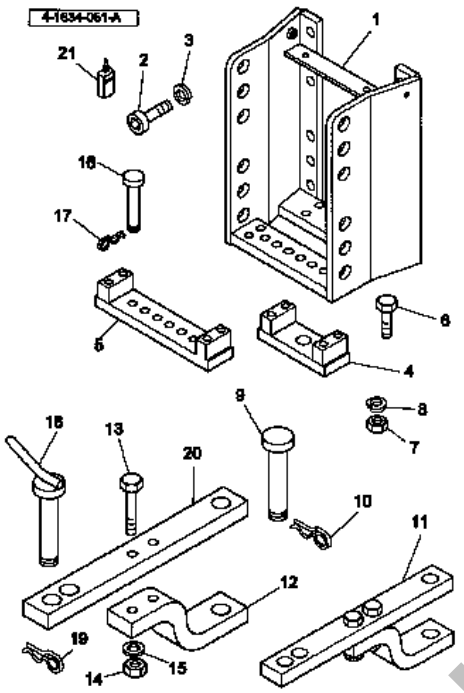

1	3654142M91	◐ 3666260M92 (1) ➡ 3670768M91 (1)	1	ARMATURE
		.....		
1	3666260M92	➡	1	ARMATURE
2	390419X1		12	SCREW
3	391414X1		12	LOCK WASHER
4	3647903M91		1	SUPPORT
5	3556728M92		1	SUPPORT
6	3015158X1		8	SCREW
7	1440200X1		8	NUT
8	1440315X1		8	LOCK WASHER
9	3556729M1		1	PIN
10	1433140M1		1	PIN
11	3559585M91	A	1	BAR
12	3556732M1	! 11 A	1	STIRRUP
13	390864X1	! 11	2	SCREW
14	391414X1	! 11	2	LOCK WASHER
15	1440202X1	! 11	2	NUT
16	3530803M1		2	DOWEL
17	1433140M1		2	SPRING
18	1821178M91		1	PIN
19	1433140M1		1	PIN
20		! 11 ➡ REF.N.11 A	1	BAR
21	1427801M2		1	LOCTITE

! THIS IS A COMPONENT OF AN ASSEMBLY
➡ FROM SERIAL OR ENGINE NUMBER
➡| UP TO SERIAL OR ENGINE NUMBER
➡ NOT SERVICED, ORDER
A "A" TYPE

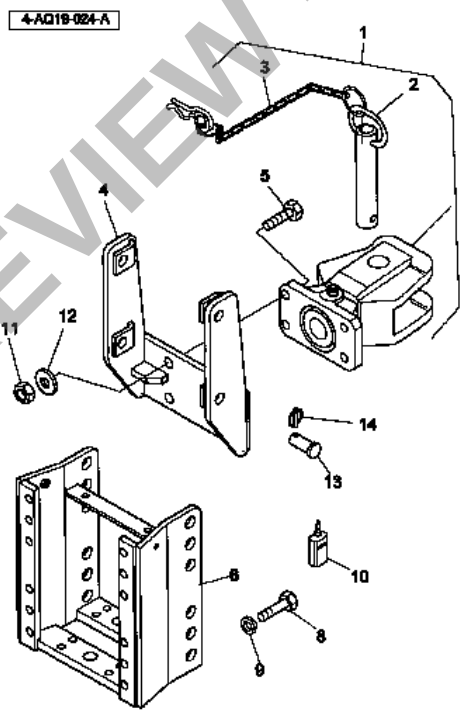


1	4203626M92	KRAMER	1	HOOK
2	3654653M1	! 1 KRAMER	1	PIN
3		! 2 ➡ REF.N.2	1	CHAIN
4	3654925M91	◐ 3654925M92 (1)	1	STIRRUP
5	3015125X1		4	SCREW
6	3654142M91	◐ 3666260M92 (1) ➡ 3670768M91 (1)	1	ARMATURE
		.....		
6	3666260M92	➡	1	ARMATURE
8	390419X1		12	SCREW
9	391414X1		12	LOCK WASHER
10	1427801M2		1	LOCTITE
11	3010349X1		4	NUT
12	390973X1		4	WASHER
13	3556736M2	➡|	4	PIN
13	3669576M1	➡	4	PIN
14	3303352M91	◐ 3670719M91 (4) ➡	4	DOWEL
14	3670719M91	➡	4	DOWEL

! THIS IS A COMPONENT OF AN ASSEMBLY
➡ FROM SERIAL OR ENGINE NUMBER
➡| UP TO SERIAL OR ENGINE NUMBER
➡ NOT SERVICED, ORDER

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

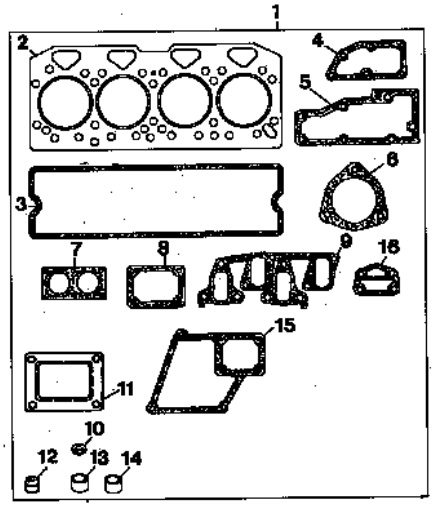


1	U5LT0202	●	U5LT1202 (1) A (X) 0.1.2.4	1	KIT
2	3681E037	!	1	1	GASKET
3	3681E037	!	1	1	GASKET
4	3685R009	!	1	1	GASKET
5	3685A013	!	1	1	GASKET
5	3686D007	!	1	1	GASKET
6	3688C018	!	1	1	UNIVERSAL
7	3684N017	!	1	1	GASKET
8	3684N505	!	1	1	UNIVERSAL
9	3688C035	!	1	2	GASKET
10	L311FF02	!	1	4	WASHER
11	3688A029	!	1	1	UNIVERSAL
12	2418M505	!	1 EXHAUST	4	SEAL
12	U2418M506	●	2418M506 (4) ! 1 INLET	4	SEAL
13	376525X1	!	1	1	SPINNER
14	376526X1	!	1	10	SPINNER
15	3687M034	!	1	1	GASKET
16	3686L007	!	1	1	UNIVERSAL

! THIS IS A COMPONENT OF AN ASSEMBLY

A WITHOUT ASBESTOS

(X) QTY PER TRACTORS SOLD (AA.BBB.CCC.DDD) (AA) FOR 1,(BBB) 2-10 (CCC) 11-25 (DDD) 26-50

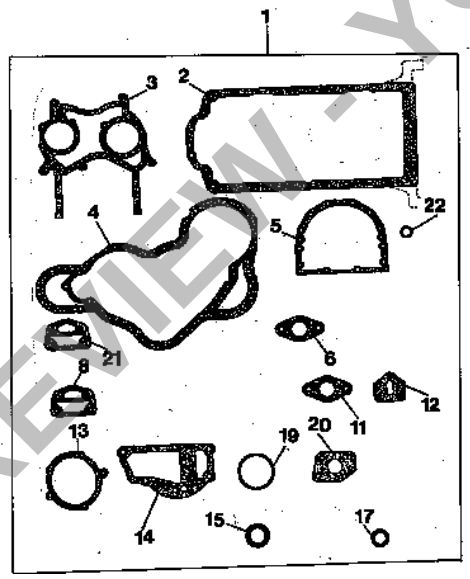

1	U5LB1160		A (X) 0.1.2.4	1	KIT
2	3681K003	!	1	1	GASKET
3	36814162	!	1	1	GASKET
4	U5MK0601	!	1	1	GASKET
5	3681T018	!	1	1	GASKET
6	36833163	!	1	1	GASKET
8	3687M025			1	UNIVERSAL
11	3683L005	!	1	1	GASKET
12	36851123	●	3685R007 (1) ! 1	1	GASKET
13	3682M003	!	1	1	GASKET
14	3687Y018	!	1	1	UNIVERSAL
15	36832144	!	1	1	GASKET
17	2415A052	!	1	1	RING
19	26420318	!	1	1	RING
20	36861466	!	1	1	GASKET
21	2415715	!	1	1	RING
22	3687W008	●	N.L.S. (2) ! 1	2	GASKET


! THIS IS A COMPONENT OF AN ASSEMBLY

A WITHOUT ASBESTOS

(X) QTY PER TRACTORS SOLD (AA.BBB.CCC.DDD) (AA) FOR 1,(BBB) 2-10 (CCC) 11-25 (DDD) 26-50

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

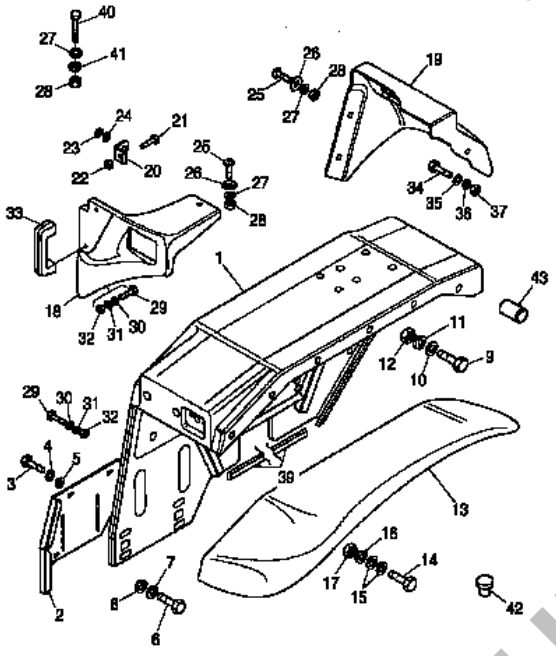

18	3655219JA	◄	A	1	SLIPPER
19	3655220JA	►	B	1	SLIPPER
19	3655221JA	◄	B	1	SLIPPER
20	3307678M1			2	SUPPORT
21	339009X1			2	SCREW
22	394367X1			2	NUT
23	390972X1			2	WASHER
24	391576X1	⧗	4	8	LOCK WASHER
25	3015137X1		M5X16	6	SCREW
26	1427000M1			6	WASHER
27	390469X1			7	LOCK WASHER
28	390995X1			7	NUT
29	339009X1		N M8X35	2	SCREW
29	339123X1		D M8X20	2	SCREW
29	339761X1		N M8X25	6	SCREW
30	390972X1			10	WASHER
31	339374X1		N	6	LOCK WASHER
31	339374X1		D	6	LOCK WASHER
32	339169X1	●	394367X1 (6)	6	NUT
32	339169X1	●	D 394367X1 (6) N	6	NUT
33	1425837M1			2	HANDLE
34	339666X1			4	SCREW
35	390971X1			4	WASHER
36	339375X1			4	LOCK WASHER
37	339030X1	●	1441500X1 (4)	4	NUT


FENDERS FOOTSTEPS AND PLATFORM

S-22
05

S2205

FENDERS AND PLATFORM

Atlas- (ATLANTIS) 100

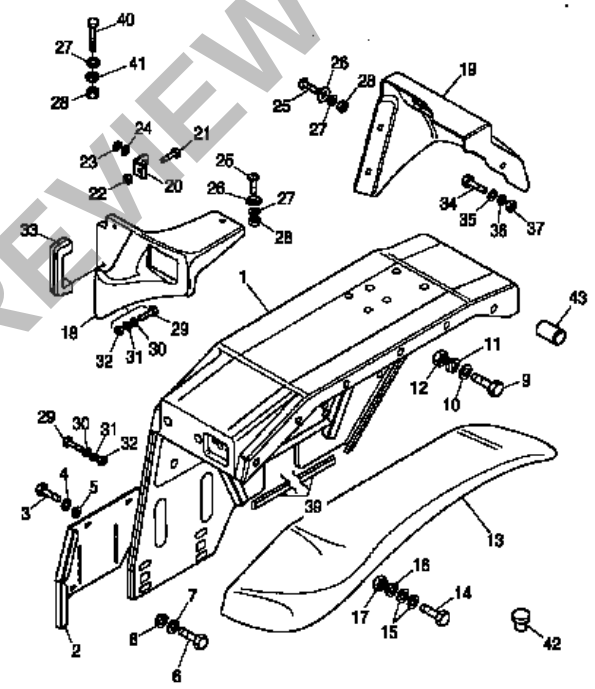


38	3658725M1			2	GASKET
39	3649658M1			2	SHEATH
40	3015002X1		M5X20	1	SCREW
41	1440312X1			1	WASHER
42	3308502M1			24	PLUG
43	3531661M2	►	E	1	SPACER

⊢	FROM SERIAL OR ENGINE NUMBER
⊣	UP TO SERIAL OR ENGINE NUMBER
A	FRONT
⧗	SHIM
B	REAR
D	NOT FOR HIGH CLEARANCE VERSION
E	MUDGUARD
◄	LEFT HAND
►	RIGHT HAND
N	FOR HIGH CLEARANCE VERSION

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

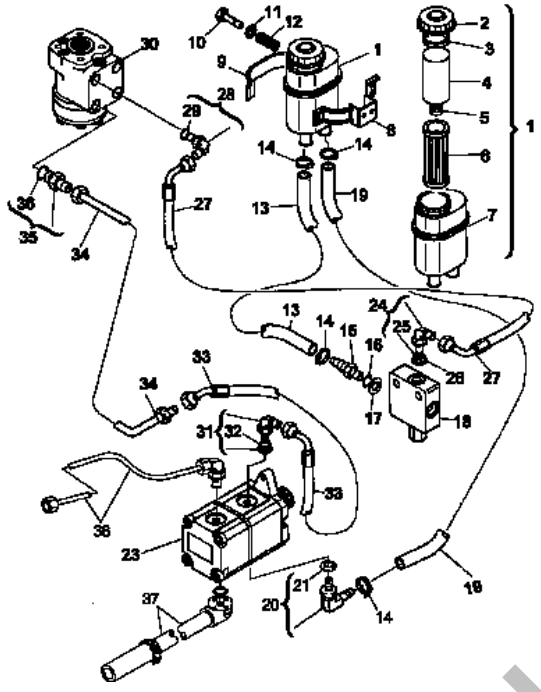

1	3530018M92			1	TANK
2	3300898M4	!	1	1	PLUG
			(X) 0.2.4.8		
3	3534311M1	!	1	1	GASKET
4	3300900M1	!	1	1	CAP
5	3300902M1	!	1	1	SPRING
6	3300901M91	!	1	1	CARTRIDGE
			(X) 0.2.4.8		
7		!	1	1	BODY
			REF.N.1		
8			B	1	SUPPORT
9			B	1	RING
10			B	1	SCREW
11			B	1	WASHER
12			B	1	SPRING
13	3655101JA			1	PIPE
14	394299X1			4	RETAINER
15	3655098JA			1	UNION
16			C	1	RING
17	VP112569			1	WASHER
18			G-40 05 1	1	VALVE
19	3530693M2			1	PIPE
20	3658719M92			1	UNION
21		!	20	1	GASKET
			REF.N.20		
23			A	1	PUMP
24	1424959M94			1	UNION
25	3019914X1	!	24	1	O RING
26	1440702X1			1	WASHER
27	3532768M91			1	HYDR HOSE
28	1424962M92			1	ELBOW
29	831497M1	!	28	1	RING
30			A	1	DISTRIBUTOR
31	1424959M94			1	UNION


FRONT AXLE AND STEERING

J-09
135

J09135

STEERING HYDRAULIC LINES - OIL TANK AND POWER STEERING

Atlas- (ATLANTIS) 100

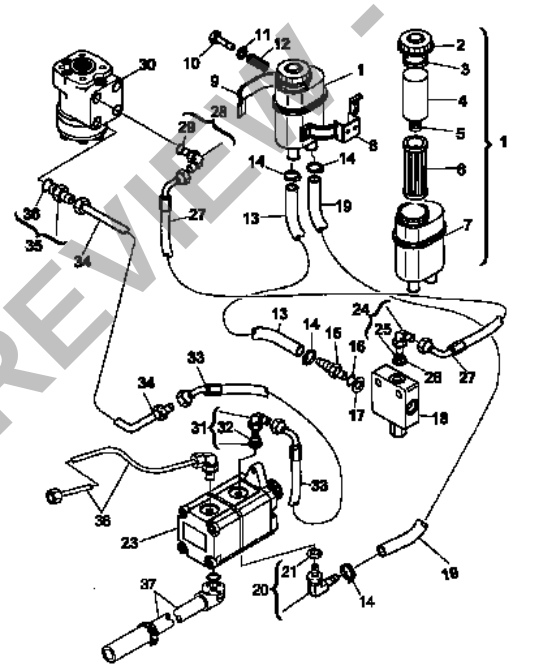

32	3019914X1	!	31	1	RING
33	3655097J9A			1	PIPE
34	3533079M92	➡	J10165	1	PIPE
34	3660702M91	➡	J10166	1	PIPE
35	3531243M93			1	UNION
36	831497M1	!	35	1	RING
37			P-42 01 30	1	PIPE
38			P-42 01 3	1	PIPE

! THIS IS A COMPONENT OF AN ASSEMBLY

➡ FROM SERIAL OR ENGINE NUMBER

⬅ UP TO SERIAL OR ENGINE NUMBER

SEE PAGE - REFERENCE NUMBER

NOT SERVICED, ORDER

A FOR DETAIL SEE PAGE APPROPRIATE

B SEE PAGE AIR FILTER

C TO BE ADVISED

(X) QTY PER TRACTORS SOLD (AA.BBB.CCC.DDD) (AA) FOR 1,(BBB) 2-10 (CCC) 11-25 (DDD) 26-50

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

HYDRAULICS AND LINKAGE

P-42
15

P4215


Atlas- (ATLANTIS) 100

PLATE FOR AUXILIARY HYDRAULIC VALVE - - HIDROIRMA TYPE.

1	3547487M91	●	3547487M93 (1) A	1	PLATE
2	1441612X1			3	SCREW
3	3667967X1	●	3673774M1 (3) ! 1	3	O RING
3	3667968X1	!	1	1	O RING

! THIS IS A COMPONENT OF AN ASSEMBLY

A WITHOUT FLOW DIVIDER SLICE

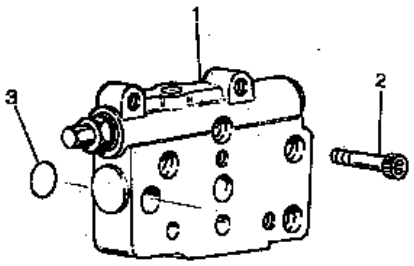

HYDRAULICS AND LINKAGE

P-42
16

P4216

Atlas- (ATLANTIS) 100


PLATE FOR AUXILIARY HYDRAULIC VALVE - - HIDROIRMA TYPE.

1	3655287J9A	●	3659264M93 (1) C	1	PLATE
2	1441612X1		(X)	3	SCREW
3		!	1 A	1	RING

! THIS IS A COMPONENT OF AN ASSEMBLY


A TO BE ADVISED

C WITH "FLOW DIVIDER SLICE"

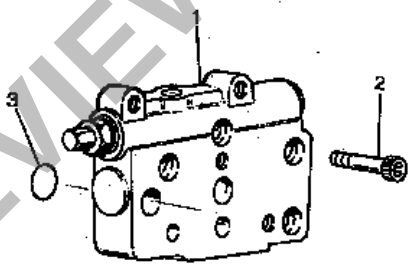

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

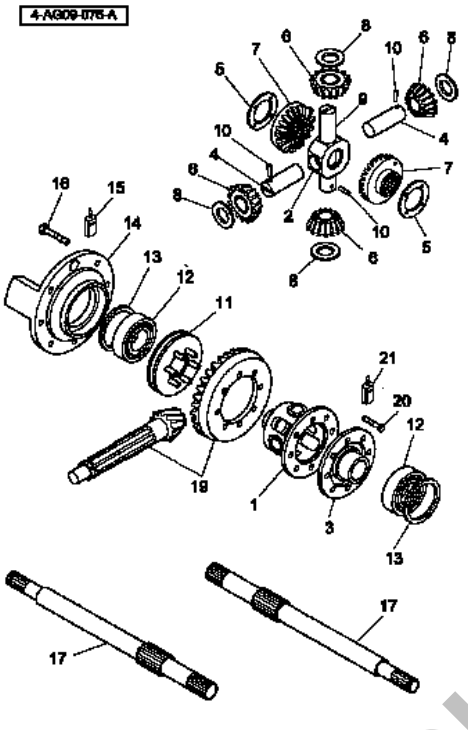

			D E		
1	3534673M2	!	22	1	BOX
2	3534680M2	!	22	1	PIN
3	3534674M2	!	22	1	COVER
4	3534679M2	!	22	2	PIN
5	3534677M1	!	22	2	WASHER
6	3307224M1	!	22	4	GEAR
7	3534675M1	! ◄	22	1	GEAR
7	3534676M1	! ►	22	1	GEAR
8	1423579M2	!	22	4	LOCK WASHER
9	3307184M2	!	22	1	PIN
10	395557X1	!	22	3	DOWEL
11	1423582M92			1	COUPLER
12	339439X1			2	BEARING
13	3534126M1	⧗	(X) 0.0.1.2 0,9MM	999	SHIM
13	3534127M1	⧗	(X) 0.4.8.16 1,0MM	999	SHIM
13	3534128M1	⧗	1,1MM	999	SHIM
13	3534129M1	⧗	1,2MM	999	SHIM
13	3534130M1	⧗	1,3MM	999	SHIM
13	3534131M1	⧗	1,4MM	999	SHIM
13	3534132M1	⧗	1,5MM	999	SHIM
13	3534133M1	⧗	1,6MM	999	SHIM
13	3534134M1	⧗	1,7MM	999	SHIM
13	3662868M1	⧗	0,7MM	999	SHIM
13	3662869M1	⧗	0,8MM	999	SHIM
13	3680416M1	⧗	0,15MM	999	SHIM
14	3534681M1			2	SUPPORT
15	3663814M1	●	1427801M2 (1)	1	LOCTITE


REAR AXLE AND REAR BRAKES

G-40
01

G4001

REAR AXLE - DIFFERENTIAL

Atlas- (ATLANTIS) 100

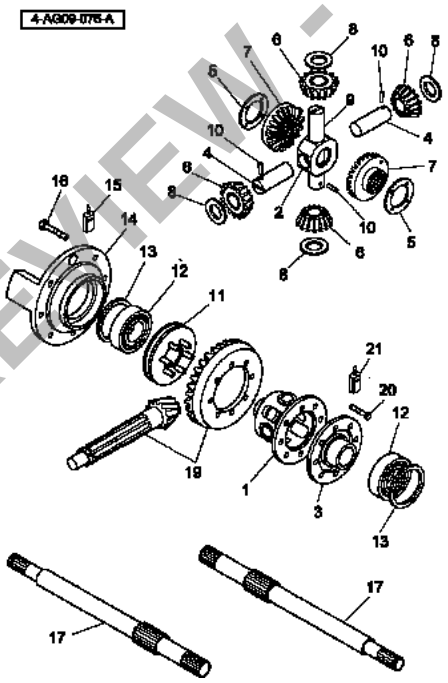


16	392892X1			14	SCREW
17			B	2	HALFSHAFT
19			A	1	KIT
20	3015058X1			8	SCREW
21	3663814M1	●	1427801M2 (1)	1	LOCTITE
22	3655662M91		C	1	DIFFERENTIAL


!	THIS IS A COMPONENT OF AN ASSEMBLY
A	REFER TO STD TRANSMISSION SECTION
⧗	SHIM
B	FOR DETAIL SEE PAGE
C	NOT ILLUSTRATED
D	DIFFERENTIAL "WITH 4 SUN GEARS"
E	NOT FOR HIGH CLEARANCE VERSION
◄	LEFT HAND
►	RIGHT HAND
	QTY PER TRACTORS SOLD (AA.BBB.CCC.DDD) (AA) FOR 1,(BBB) 2-10 (CCC) 11-25 (DDD) 26-50

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

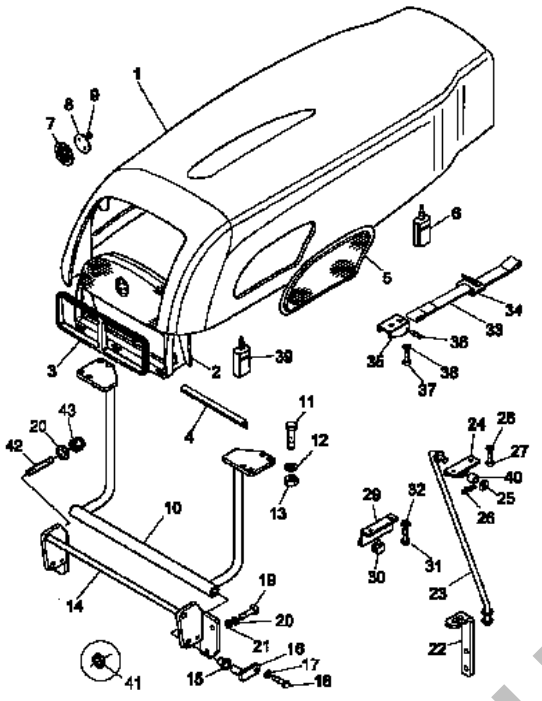

1	3661333M92	3660326M1 (1) 3660327M1 (1) 3661333M93 (1)		1 BONNET
			A	
1	3661336M92		B	1 BONNET
2	3654541M93		A	1 GRILLE
2	3654542M92		B	1 GRILLE
3	3651456M1			1 SKIRT
4	3651800M1			1 GASKET
5	3660326M1		◄	1 GRILLE
			(X) 0.0.1.2	
5	3660327M1		►	1 GRILLE
6	3552262M1	3684730M1 (999)		999 LOCTITE
7	3652102M1			2 MEDALLION
			(X) 0.0.1.2	
8	3652098M1			1 SUPPORT
			(X) 0.0.1.2	
9	3552504M1	3552504M2 (2)		2 SPRING
10	3650431M92			1 HINGE
11	3015459X1			8 SCREW
12	339375X1			8 LOCK WASHER
13	1442021X1			8 NUT
14	3650430M93			1 SUPPORT
15	3650439M1			2 BUSH
16	3650433M91			2 PIN
17	339375X1			2 LOCK WASHER
18	391894X1			2 SCREW
19	1441268X1	392536X1 (4)		4 SCREW
20	390971X1			8 WASHER
21	339375X1			4 WASHER
22	3655268JA			1 STIRRUP

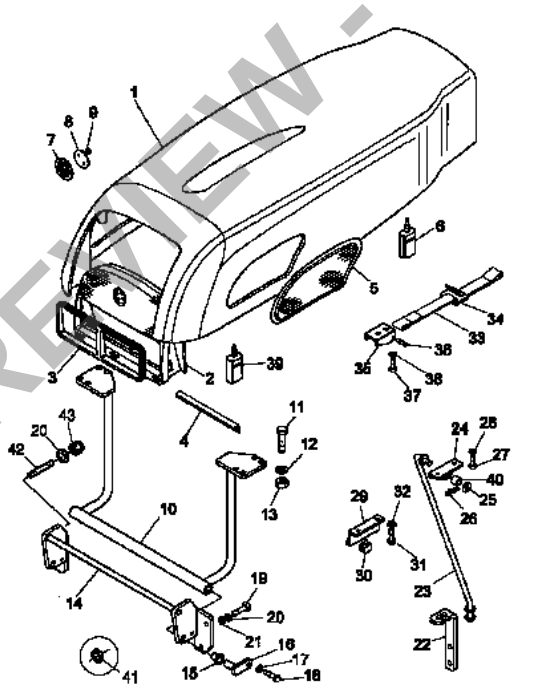

23	3650432M93			1 ROD
24	3650481M3			1 HINGE
25	390971X1			1 WASHER
26	1442864X1			1 LINCH PIN
27	3009536X1			2 SCREW
28	339381X1			2 WASHER
29	3672680M1			1 NAMEPLATE
30	3672637M1			1 RETAINER
31	3009536X1			2 SCREW
32	339381X1			2 WASHER
33	3551728M91			1 BELT
34	3551724M1			1 TIGHTENER
35	3652870M1			1 STIRRUP
36	1825051M3			1 PIN
37			C	2 SCREW
38			C	2 WASHER
39	3552262M1	3684730M1 (999)		999 LOCTITE
40	1427500M1			1 CHOCK
41	3532803M1			4 DISC
42	3019057X1			4 STUD
43	1442021X1			4 NUT

A BLUE

B RED

C TO BE ADVISED

◄ LEFT HAND

► RIGHT HAND

QTY PER TRACTORS SOLD (AA.BBB.CCC.DDD) (AA) FOR 1,(BBB) 2-10 (CCC) 11-25 (DDD) 26-50

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 12 of 148 pages

The full manual includes:

- All 148 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Landini Atlas 100, Atlantis 100, Atlas- (ATLANTIS) 100 Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual