
FIG.01 LOWER FRAME

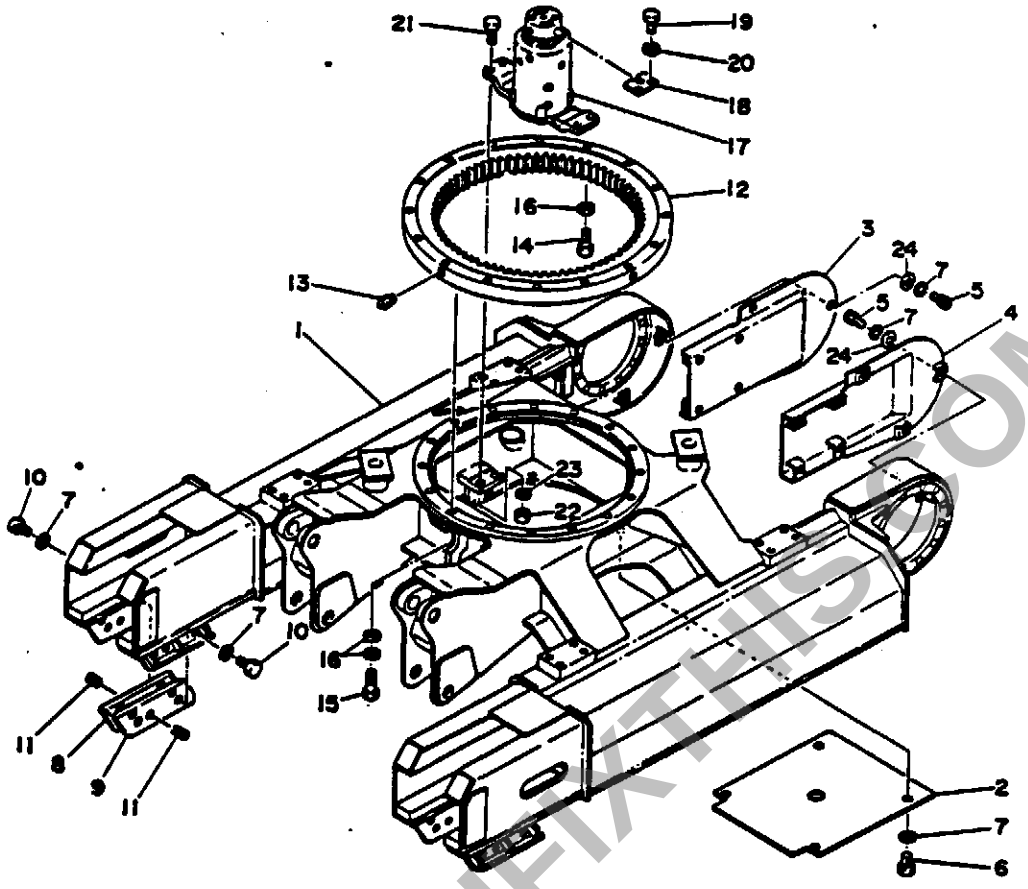

Item	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
1	01410-56100	FRAME	1	
2	01310-01100	COVER	1	
3	01410-54000	COVER (R. HD	1	
4	01410-55000	COVER (L. HD	1	
5	11100-51016	BOLT, Socket	14	
6	11000-51020	BOLT	4	
7	11400-10010	WASHER, Spring	24	
8	01410-53400	GUIDE (R. HD	2	
9	01410-53500	GUIDE (L. HD	2	
10	11000-51025	BOLT	16	
11	12530-01025	PIN, Spring	4	
12	19130-23000	BEARING, Slew	1	
13	13000-11000	NIPPLE, Grease	4	
14	11010-51260	BOLT	16	
15	11000-51260	BOLT	16	
16	11415-40012	WASHER	48	
17	19040-02400	JOINT, Swivel	1	#70~#152
	19040-03300	JOINT, Swivel	1	#153~#220
	19040-04100	JOINT, Swivel	1	#221~
18	11321-00100	STOPPER	1	
19	11010-51430	BOLT	2	
20	11415-40014	WASHER	2	
21	11010-51240	BOLT	4	
22	11305-50012	NUT	4	
23	11400-10012	WASHER, Spring	4	

NOTE #152~

No.4

Item	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
24	11415-40010	WASHER	14	

NOTE


#152~

No.4

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

FIG.09-1 PIPING, LOWER

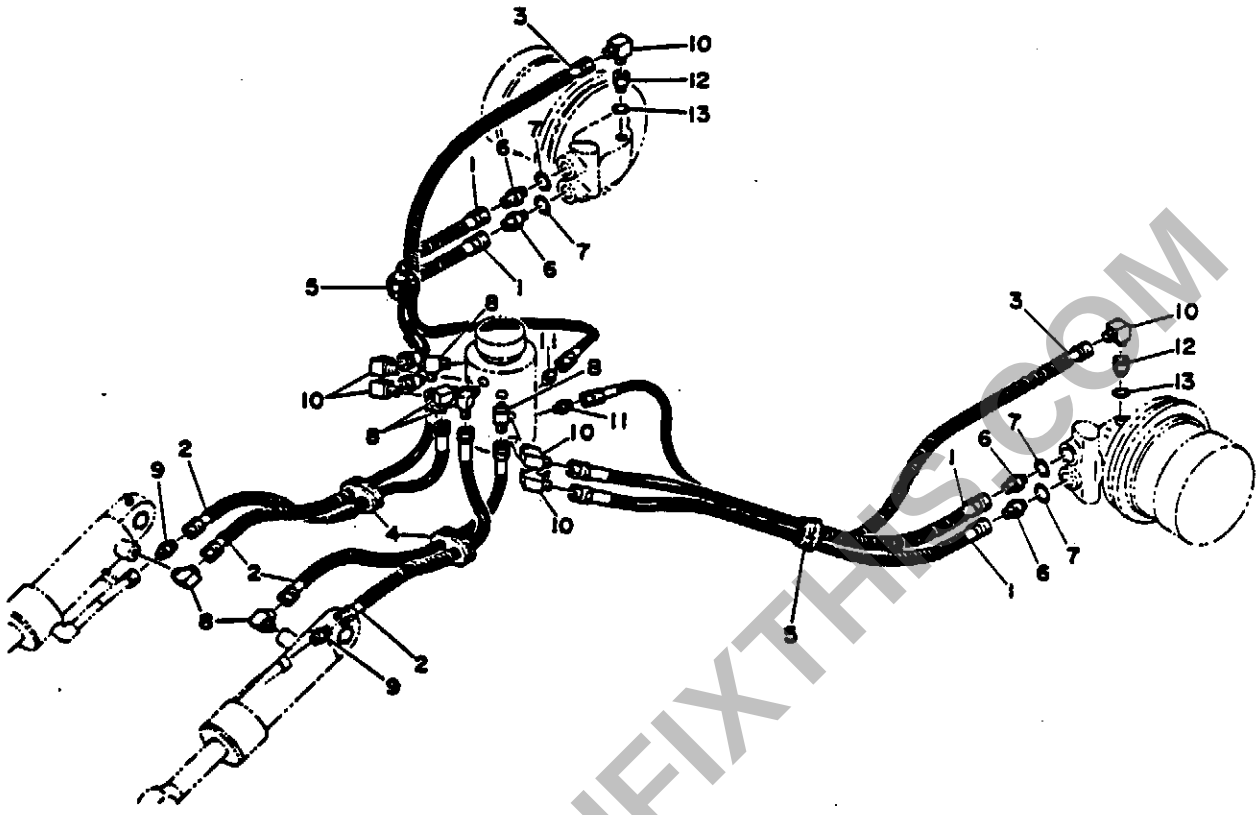


Item	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
1	19086-12085	HOSE ASSY	4	
2	19086-09070	HOSE ASSY	4	
3	19095-06090	HOSE ASSY	2	
4	99972-10300	GUARD	2	
5	81772-25100	GUARD	2	
6	15131-08016	ADAPTOR	4	
7	14203-10908	O-RING	4	
8	15111-08003	ELBOW, 90°	6	
9	15110-08003	ADAPTOR	2	
10	15111-08004	ELBOW, 90°	6	
11	15110-08002	ADAPTOR	2	
12	15134-08001	ADAPTOR	2	
13	14200-10140	O-RING	2	

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

FIG.12-1 CONTROL LEVER, TRACTION

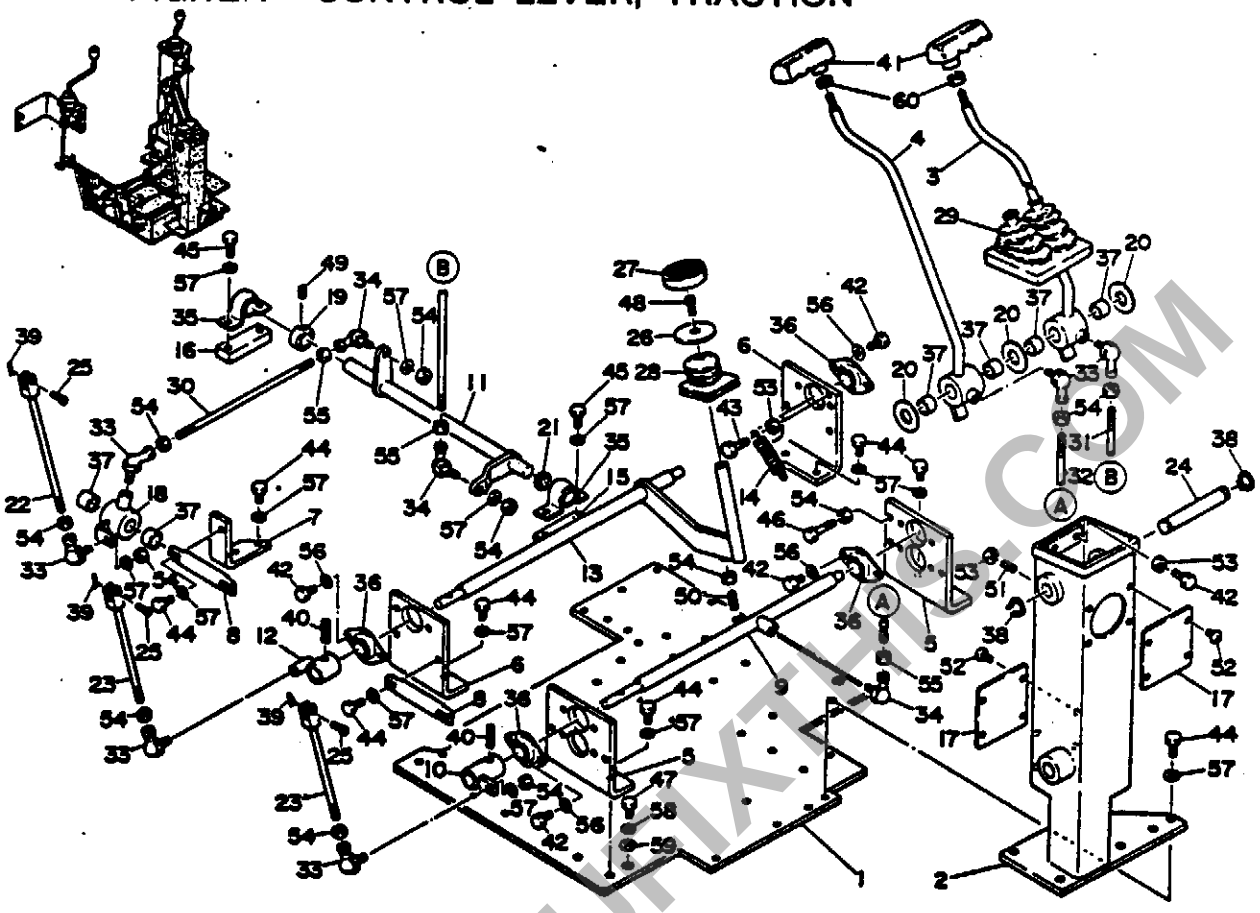

Item	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
1	81432-88100	PLATE, Lever	1	
2	81432-88400	STAND, Lever	1	
3	85632-11800	LEVER, Traction	1	
4	85632-11700	LEVER, Traction	1	
5	81432-81200	BRACKET	2	
6	81432-81300	BRACKET	2	
7	81432-71200	ANGLE	1	
8	81432-71300	SHAFT	2	
9	81432-81900	LEVER	1	
10	81432-82000	LEVER	1	
11	81432-82500	LEVER	1	
12	81432-83000	LEVER	1	
13	81432-83100	PEDAL	1	
14	81432-83400	SPRING	1	
15	00062-00001	SPACER	1	
16	00062-00003	SPACER	1	
17	81432-72100	COVER	2	
18	82232-43000	LEVER	1	
19	81532-89400	STOPPER	1	
20	81632-16200	WASHER	3	
21	00030-20005	COLLAR	1	
22	00053-05200	ROD, Yoke	1	
23	00053-05035	ROD, Yoke	2	
24	00042-20121	SHAFT, Lever	1	
25	00040-05117	PIN	3	

NOTE 82X ~ for England, Singapore, U.S.A., & Norway Ver.0


Item	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
26	81432-84400	WASHER	1	
27	81432-84800	COVER	1	
28	81432-84500	BOOT	1	
29	00032-02000	BOOT	1	
30	00050-08270	ROD	1	
31	00050-08390	ROD	1	
32	00050-08320	ROD	1	
33	13400-00080	ROD, End	6	
34	13400-00085	ROD, End	3	
35	13320-02022	MINI-PILLOW	2	
36	13320-51518	MINI-PILLOW	4	
37	13330-02015	BUSHING	6	
38	12200-00020	RING, Snap	2	
39	12140-00006	PIN, Snap	3	
40	12130-00630	PIN, Spring	2	
41	16536-14359	GRIP	2	
42	11000-40620	BOLT	10	
43	11000-40640	BOLT	1	
44	11000-40820	BOLT	18	
45	11000-40830	BOLT	4	
46	11000-40850	BOLT	1	
47	11000-41035	BOLT	4	
48	11100-40820	BOLT, Socket	1	
49	11210-50816	SET, Screw	2	
50	11210-50840	SET, Screw	2	

NOTE 82X ~ for England, Singapore, U.S.A., & Norway Ver.2

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

FIG.16-1 ENGINE & ACCESSORIES

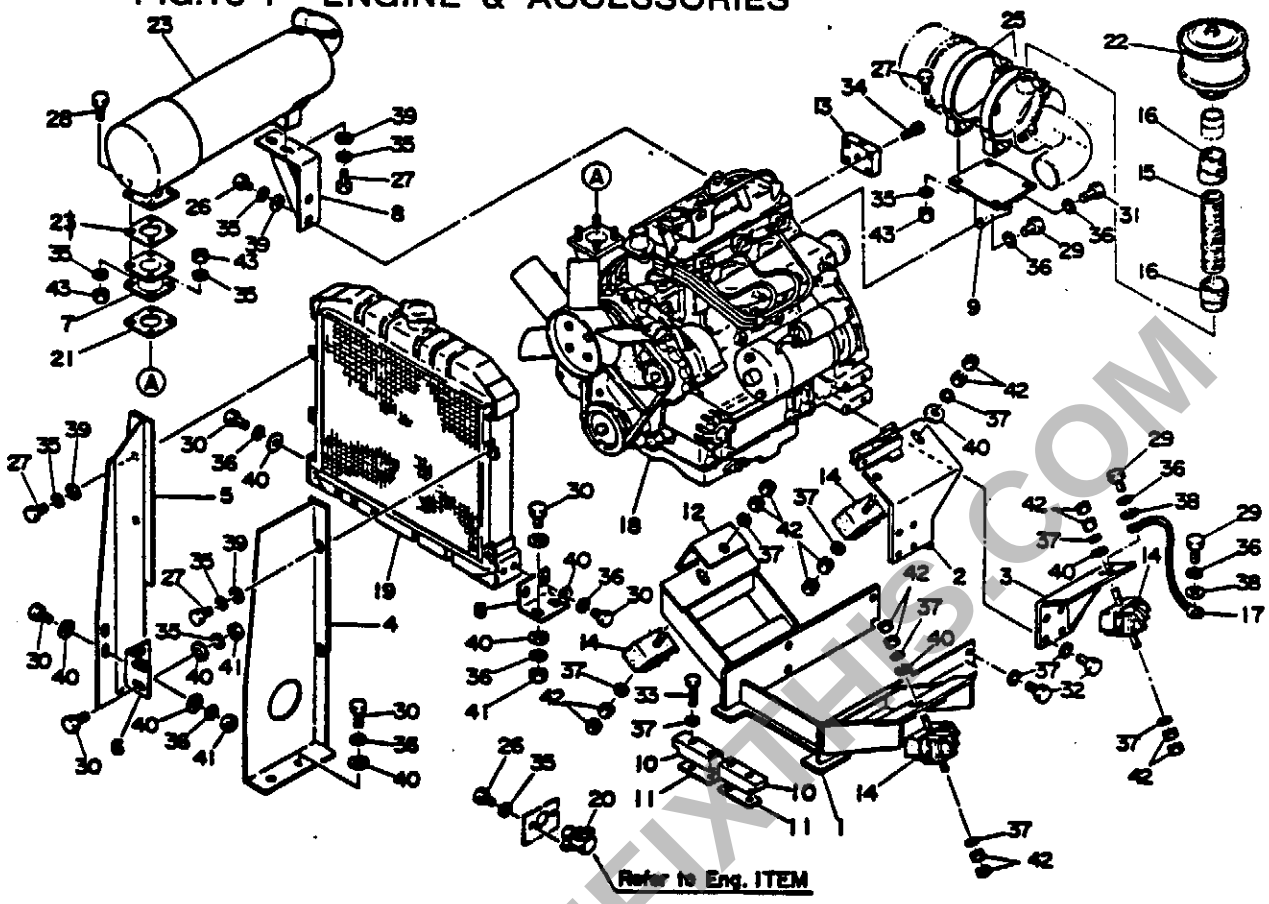

Item	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
1	01440-58100	FOOT, Engine	1	
2	01440-58700	FOOT, Engine	1	
3	01440-58200	FOOT, Engine	1	
4	01440-58100	PLATE, Baffle	1	
5	01440-58200	PLATE, Baffle	1	
6	01440-56600	ANGLE	2	
7	01440-58300	TUBE	1	
8	01440-58400	BRACKET	1	
9	01440-58500	BRACKET	1	
10	01440-55100	STOPPER	2	
11	01440-55300	SHIM	40	
	01440-55400	SHIM	40	
12	01440-55500	COVER	1	
13	01440-57100	PORT, Heater	1	
14	16510-49014	RUBBER, Cushion	4	
15	15660-58018	HOSE	1	
16	15660-08050	CUFF	2	
17	17024-30280	CABLE, Earth	1	
0-1	------	ENGINE ASSY	1	[illegible]
18	------	*ENGINE	1	
19	------	*RADIATOR	1	Y12[illegible]
20	------	*PLUG, Drain	1	Y72[illegible]
21	------	*GASKET	1	Y12[illegible]
22	------	*PRE-CLEANER	1	Y12[illegible]
23	01440-58600	*SILENCER	1	

NOTE [illegible]

Item	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
24	19100-23051	GASKET	1	Y12[illegible]
25	19113-02348	BAND, Mounting	2	
26	11000-40816	BOLT	4	
27	11000-40820	BOLT	10	
28	11000-40825	BOLT	4	
29	11000-41020	BOLT	3	
30	11000-41025	BOLT	12	
31	11000-41035	BOLT	1	
32	11000-41225	BOLT	16	
33	11000-41250	BOLT	4	
34	11100-40825	BOLT, Socket	4	
35	11400-20008	WASHER, Spring	22	
36	11400-20010	WASHER, Spring	16	
37	11400-20012	WASHER, Spring	28	
38	11411-10010	WASHER, Plain	2	
39	00036-08252	WASHER	8	
40	00036-00006	WASHER	15	
41	11300-40010	NUT	6	
42	11300-40012	NUT	16	
43	11300-40008	NUT	12	


NOTE

[illegible]

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

FIG.02 TRACK SHOE

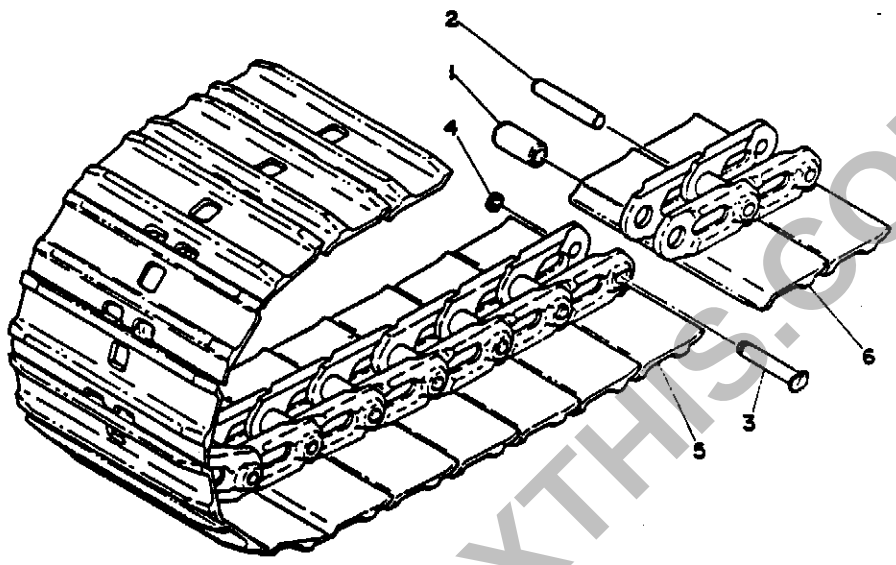

Item	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
	15200			
0-1	19140-15100	SHOE ASSY. Track	1	#199 ~#249
0-2	19140-15200	SHOE ASSY. Track	1	#250 ~
1	19140-00205	★BUSHING	41	
2	19140-00209	★PIN. Track	40	
3	19140-14008	★PIN. Master	1	
4	12255-26019	★SPIRO-LOX	1	
5	19140-15114	★PLATE ASSY. Master	1	#199 ~#249
	19140-15214	★PLATE ASSY. Master	1	#250 ~
6	19140-15013	★PLATE ASSY	40	#199 ~#249
	19140-15213	★PLATE ASSY	40	#250 ~

NOTE


#199 ~

Item..1

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

FIG.09-2 PIPING, LOWER

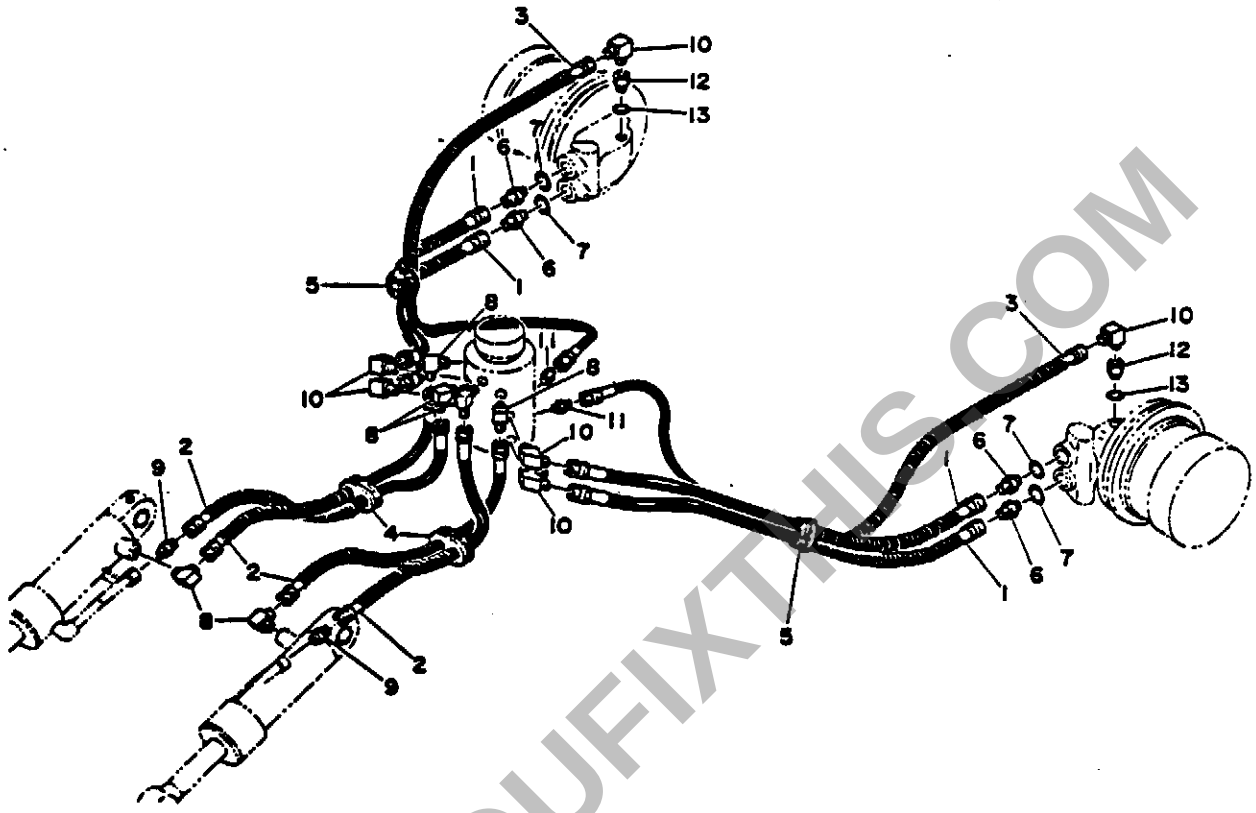

Item	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
1	19086-12085	HOSE ASSY	4	
2	19086-63070	HOSE ASSY	4	
3	19095-06058	HOSE ASSY	2	
4	81472-56180	GUARD	2	
5	81772-25180	GUARD	2	
6	15131-00010	ADAPTOR	4	
7	14203-10008	O-RING	4	
8	15111-00003	ELBOW, 90°	6	
9	15110-00003	ADAPTOR	2	
10	15111-00004	ELBOW, 90°	6	
11	15110-00002	ADAPTOR	2	
12	15134-00001	ADAPTOR	2	
13	14200-10140	O-RING	2	

NOTE


SSC - for Sedan

Rev.0

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

FIG.12-2 CONTROL LEVER, TRACTION

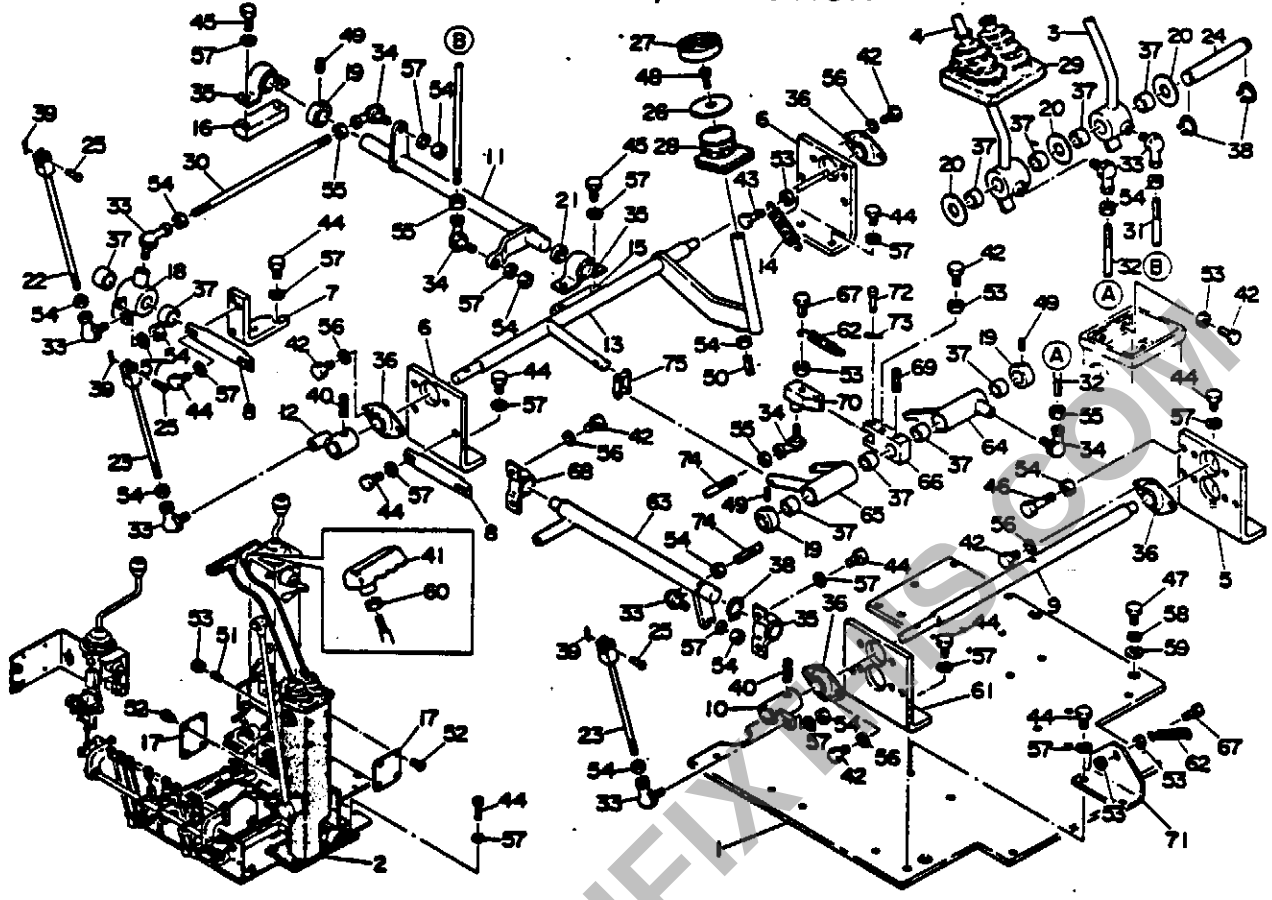

Item	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
1	01432-80100	PLATE, Lever	1	
2	01432-80400	STAND, Lever	1	
3	05632-11000	LEVER, Traction	1	
4	05632-11700	LEVER, Traction	1	
5	01432-81200	BRACKET	1	
6	01432-81300	BRACKET	2	
7	01432-80200	ANGLE	1	
8	01432-71300	SHAFT	2	
9	01432-80400	LEVER	1	
10	01432-82000	LEVER	1	
11	01432-82500	LEVER	1	
12	01432-83000	LEVER	1	
13	01432-81300	PEDAL	1	
14	01432-83400	SPRING	1	
15	00062-00001	SPACER	1	
16	00062-00003	SPACER	1	
17	01432-72100	COVER	2	
18	02232-43000	LEVER	1	
19	01632-09400	STOPPER	3	
20	01632-16200	WASHER	3	
21	00030-20005	COLLAR	1	
22	00053-05220	ROD, Yoke	1	
23	00053-05235	ROD, Yoke	2	
24	00040-20121	SHAFT, Lever	1	
25	00040-05117	PIN	3	

NOTE ※25 ~ for Frame Ass.1


Item	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
26	01432-64400	WASHER	1	
27	01432-64800	COVER	1	
28	01432-64300	BOOT	1	
29	00032-02000	BOOT	1	
30	00050-08270	ROD	1	
31	00050-08390	ROD	1	
32	00050-08320	ROD	1	
33	13400-00000	ROD, End	7	
34	13400-00005	ROD, End	4	
35	13320-02022	MINI-PILLOW	3	
36	13320-51510	MINI-PILLOW	4	
37	13330-02015	BUSHING	10	
38	12200-00020	RING, Snap	3	
39	12140-00006	PIN, Snap	3	
40	12130-00630	PIN, Spring	2	
41	16536-14359	GRIP	1	
42	11000-40620	BOLT	13	
43	11000-40640	BOLT	1	
44	11000-40820	BOLT	22	
45	11000-40830	BOLT	4	
46	11000-40850	BOLT	1	
47	11000-41035	BOLT	4	
48	11100-40620	BOLT, Socket	1	
49	11210-50816	SET, Screw	3	
50	11210-50840	SET, Screw	1	

NOTE ※28 ~ for Frame Ass.1

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

FIG.16-2 ENGINE & ACCESSORIES

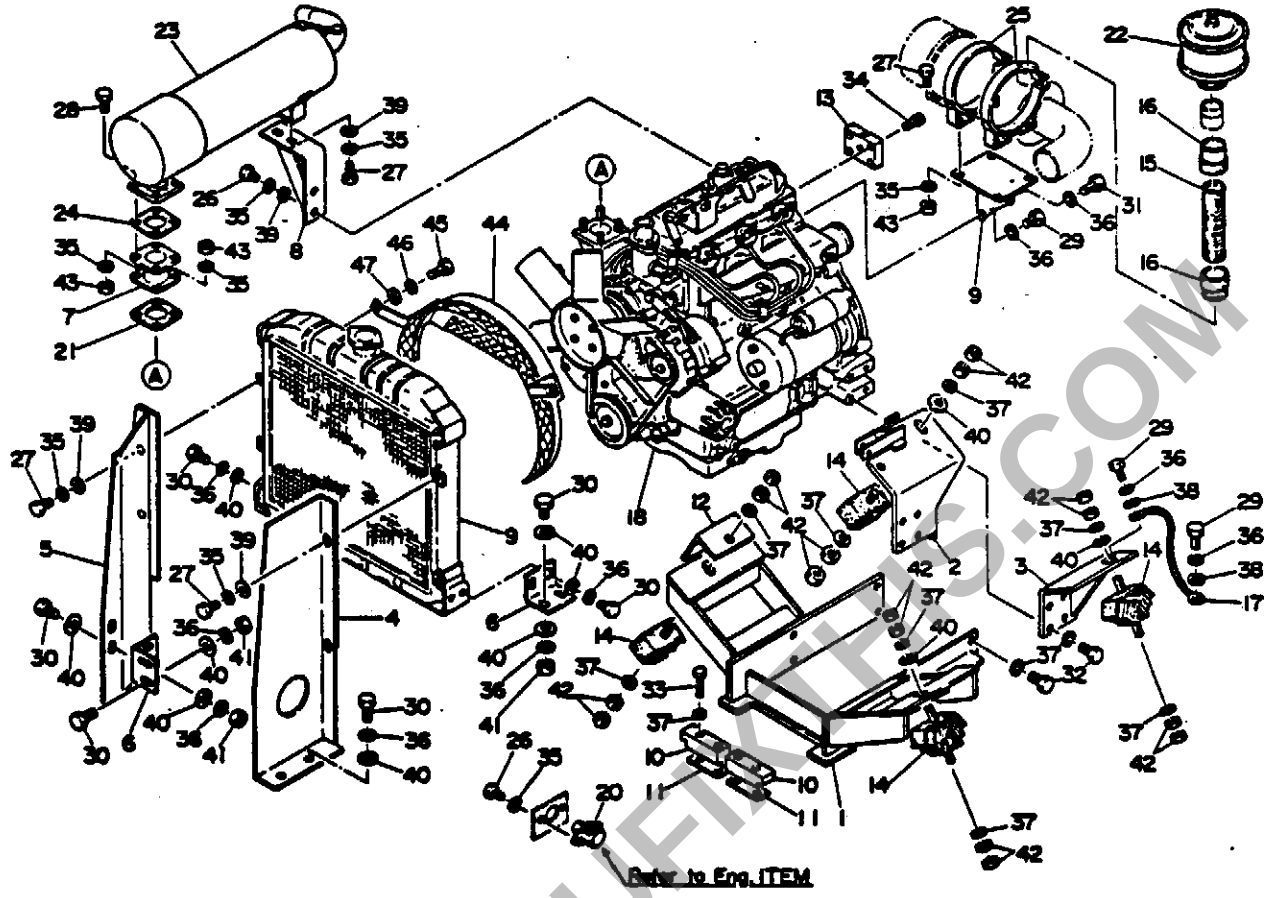

Item	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
1	01440-56100	FOOT, Engine	1	
2	01440-56700	FOOT, Engine	1	
3	01440-56200	FOOT, Engine	1	
4	01440-56100	PLATE, Baffle	1	
5	01440-56200	PLATE, Baffle	1	
6	01440-56600	ANGLE	2	
7	01440-56300	TUBE	1	
8	01440-56400	BRACKET	1	
9	01440-56500	BRACKET	1	
10	01440-55100	STOPPER	2	
11	01440-55300	SHIM	4	
	01440-55400	SHIM	4	
12	01440-55500	COVER	1	
13	01440-57100	PORT, Heater	1	
14	16510-49014	RUBBER, Cushion	4	
15	15650-56016	HOSE	1	
16	15650-66050	CUFF	2	
17	17024-36200	CABLE, Earth	1	
0-1	------	ENGINE ASSY	1	
18	------	*ENGINE	1	
19	------	*RADIATOR	1	
20	------	*PLUG, Drain	1	
21	------	*GASKET	1	
22	------	*PRE-CLEANER	1	
23	01440-56600	*SILENCER	1	

NOTE #240 ~ for Sweden Ref.①

Item	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
24	19100-23051	GASKET	1	
25	19112-02340	BAND, Mounting	2	
26	11000-40816	BOLT	4	
27	11000-40820	BOLT	10	
28	11000-40825	BOLT	4	
29	11000-41020	BOLT	3	
30	11000-41025	BOLT	12	
31	11000-41035	BOLT	1	
32	11000-41225	BOLT	16	
33	11000-41250	BOLT	4	
34	11100-40825	BOLT, Socket	4	
35	11400-20008	WASHER, Spring	22	
36	11400-20010	WASHER, Spring	16	
37	11400-20012	WASHER, Spring	28	
38	11411-10010	WASHER, Plain	2	
39	00036-08252	WASHER	8	
40	00036-00006	WASHER	19	
41	11300-40010	NUT	6	
42	11300-40012	NUT	16	
43	11300-40002	NUT	12	
44	01440-63100	COVER, Fan	1	
45	11000-40616	BOLT	2	
46	11400-20006	WASHER, Spring	2	
47	11400-10006	WASHER, Plain	2	


NOTE

#240 ~ for Sweden Ref.②

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

FIG.03 CARRIER ROLLER

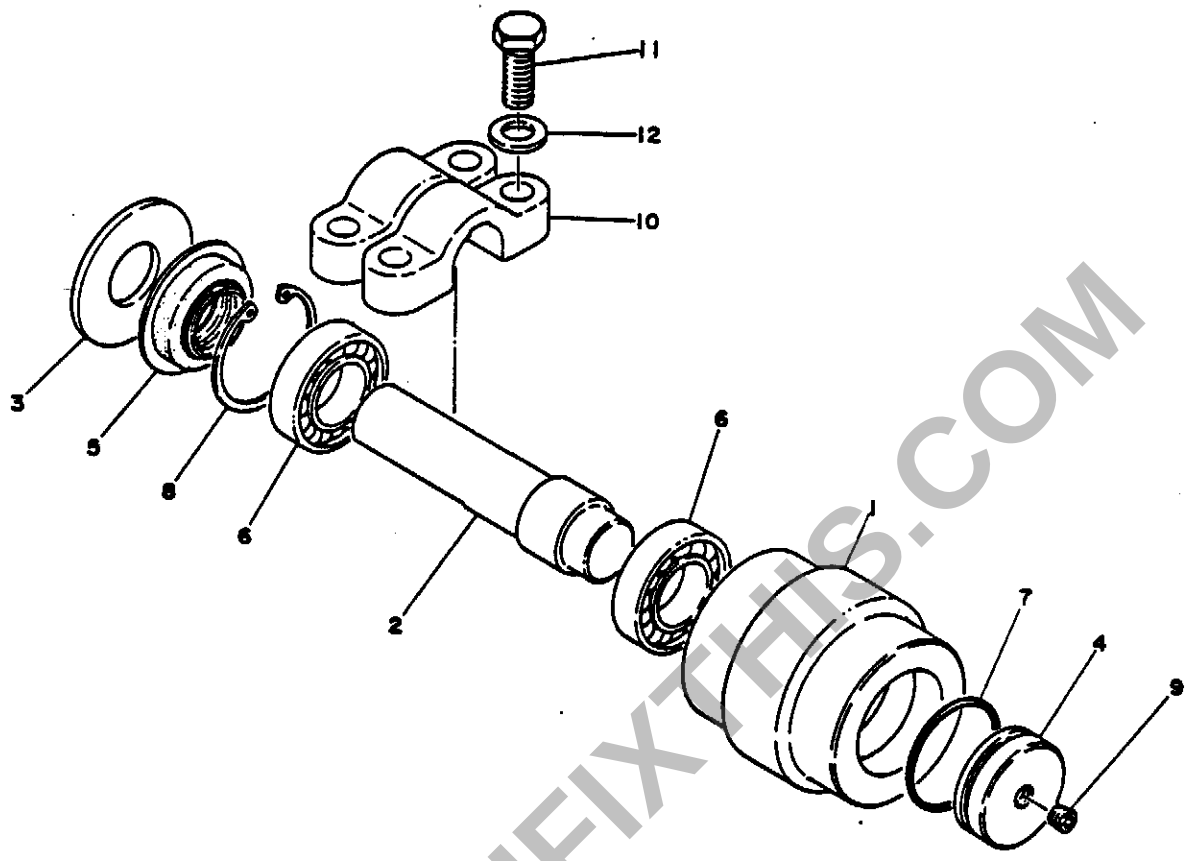

Item	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
0-1	01412-00000	ROLLER ASSY. Carrier	4	
1	01412-01100	★ROLLER	1	
2	01412-01200	★SHAFT	1	
3	01412-01300	★COVER	1	
4	01712-00400	★COVER	1	
5*	14312-03002	★SEAL Oil	1	
6	13000-06205	★BEARING	2	
7	14201-00500	★O-RING	1	
8	12210-00002	★RING Snap	1	
9	15010-20001	★PLUG	1	
10	01613-00300	BRACKET	8	
11	11010-51235	BOLT	16	
12	11415-40012	WASHER	16	


NOTE

★N-

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

FIG.10-1 SLEW GEARBOX

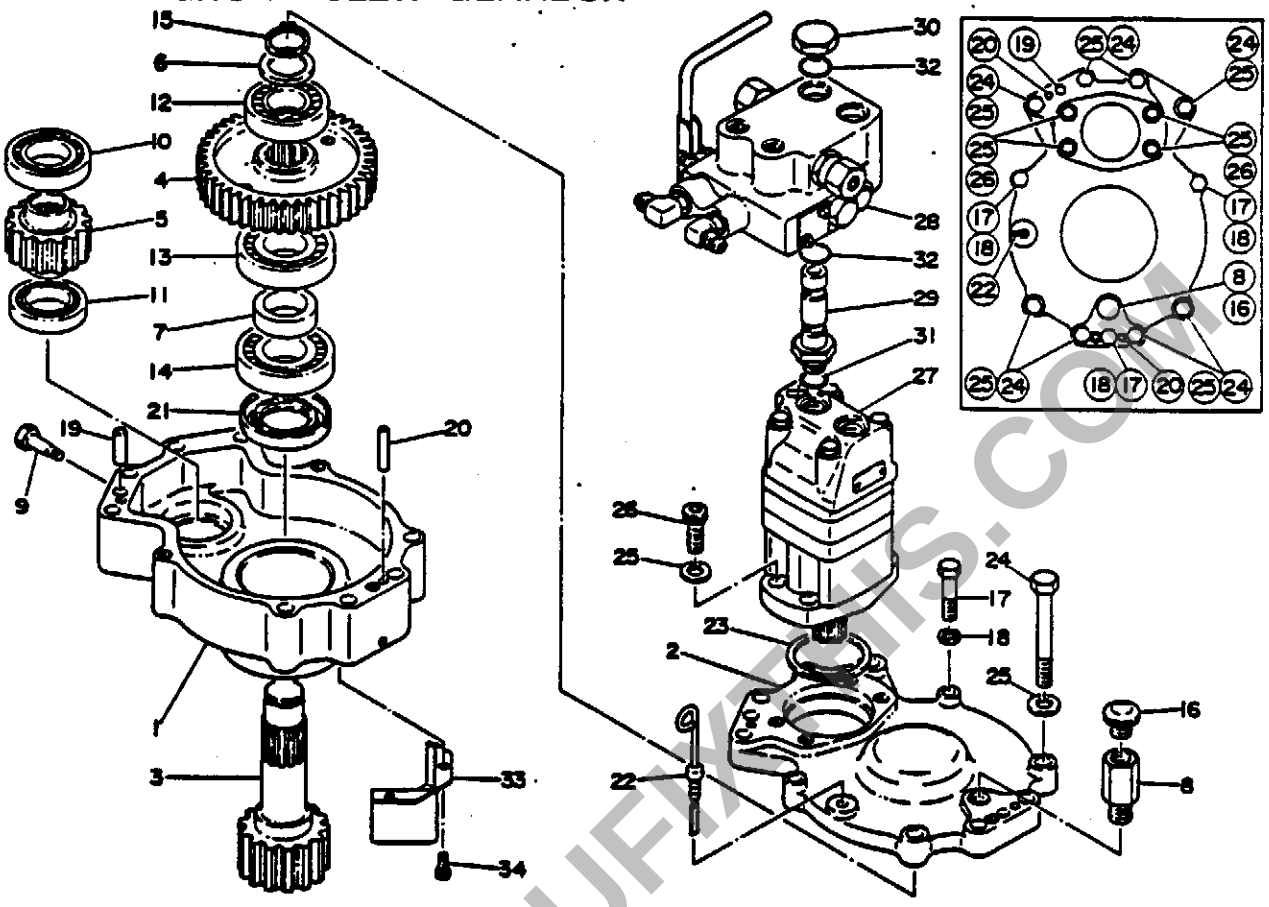


Item	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
0-1	01123-00100	GEARBOX ASSY	1	
1	01423-10100	★CASE	1	
2	01423-00200	★COVER	1	
3	01123-20300	★PINION	1	
4	01423-00500	★GEAR	1	
5	01423-10600	★GEAR	1	
6	00036-35505	★WASHER	1	
7	00030-41020	★COLLAR	1	
8	00072-00012	★BUSHING	1	
9	01300-10700	★PLUG	1	
10	13000-00200	★BEARING	1	
11	13000-00000	★BEARING	1	
12	13001-06307	★BEARING	1	
13	13000-06300	★BEARING	1	
14	13000-99300	★BEARING	1	
15	12200-00035	★RING. Snap	1	
16	15540-00004	★CAP. Oil	1	
17	11000-51050	★BOLT	2	
18	11400-10010	★WASHER. Spring	2	
19	12120-01030	★PIN. Dowel	1	
20	12120-00845	★PIN. Dowel	2	
21	14002-02007	★SEAL. Oil	1	
22	15531-10403	★GAUGE	1	
23	00030-00007	★WASHER	1	
24	11011-51210	★BOLT	8	

Item	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
25	11415-00012	WASHER	12	
26	11110-51235	BOLT. Socket	4	
27	19030-04100	MOTOR ASSY	1	
28	19017-02500	VALVE	1	
29	00072-00010	FITTING	2	
30	00072-00009	PLUG	2	
31	14203-10910	O-RING	2	
32	14200-10250	O-RING	4	
33	01423-17100	COVER	1	95 -
34	11100-50614	BOLT. Socket	2	

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

FIG.13-1 CONTROL LEVER, OPERATION

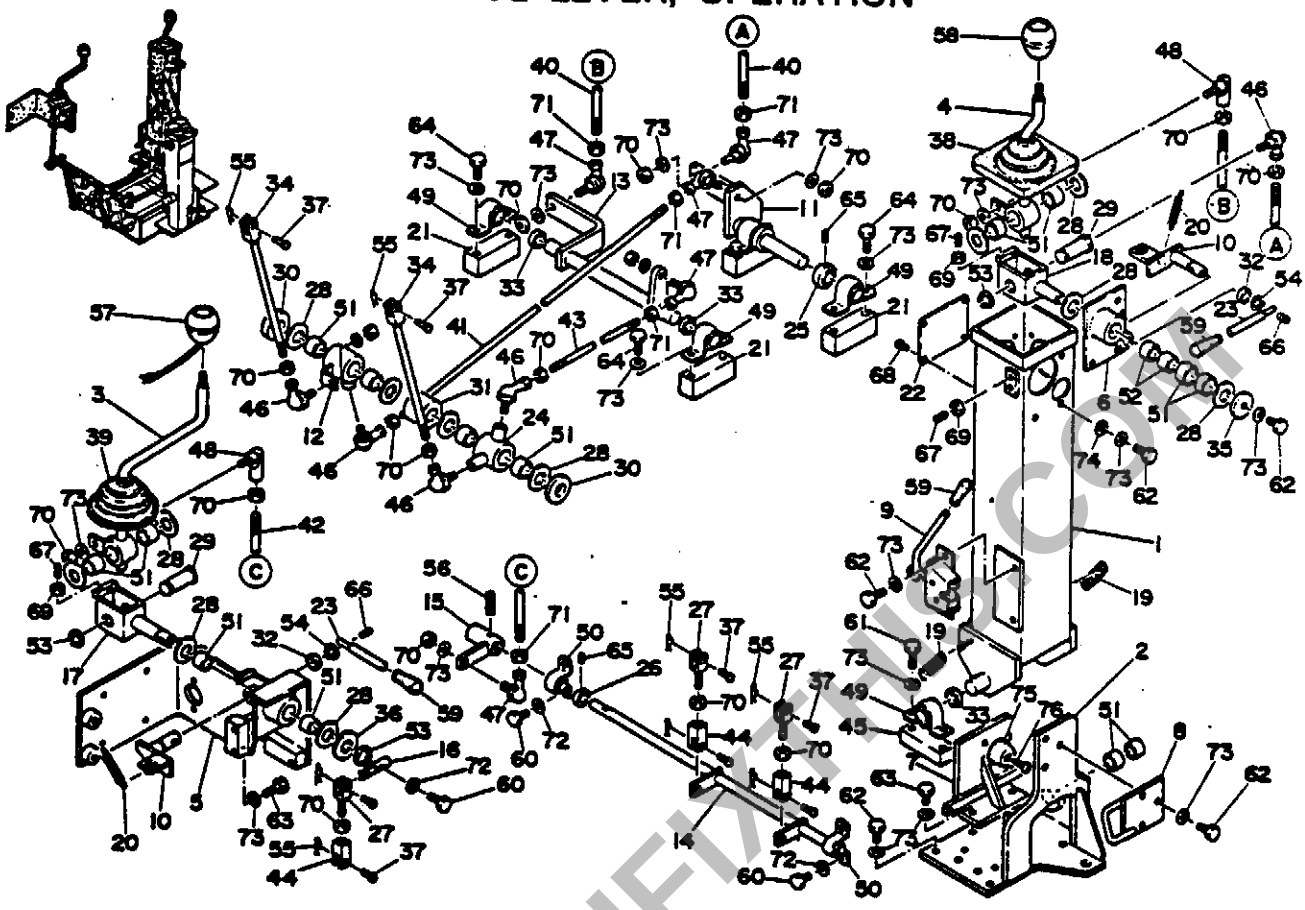

Item	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
1	01432-88200	STAND. Lever	1	
2	01432-88300	BRACKET. Stand	1	
3	01432-84100	LEVER. (R. H)	1	
4	01432-84200	LEVER. (L. H)	1	
5	01432-81000	BRACKET. (R. H)	1	
6	01432-81100	BRACKET. (L. H)	1	
7	01432-81500	STOPPER. Stand	1	
8	01432-81600	STRIKER	1	
9	01432-81700	LOCK. Stand	1	
10	01432-81800	LEVER. Lock	2	
11	01432-82400	LEVER	1	
12	01432-73100	LEVER	1	
13	01432-82600	LEVER	1	
14	01432-82700	LEVER	1	
15	01432-82800	LEVER	1	
16	01432-72600	LEVER	1	
17	01432-83200	LEVER. Yoke	1	
18	01432-83300	LEVER. Yoke	1	
19	01432-83400	SPRING	2	
20	01432-83500	SPRING	2	
21	01432-83600	SPACER	4	
22	01432-72100	COVER	3	
23	01432-73000	LEVER	2	
24	01332-11500	LEVER	1	
25	01632-89400	STOPPER	2	

NOTE for France, England, Singapore, Spain, & U.S.A. 8127 ~ No.① 1


Item	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
26	01632-88200	STOPPER	1	
27	00932-70800	ROD. Yoke	3	
28	01632-16200	WASHER	12	
29	02232-24700	PIN	2	
30	00830-20810	COLLAR	2	
31	00830-00831	COLLAR	1	
32	00830-15005	COLLAR	2	
33	00830-20005	COLLAR	3	
34	00853-05200	ROD. Yoke	2	
35	00836-05425	WASHER	1	
36	00830-00830	WASHER	1	
37	00840-05117	PIN	8	
38	02132-12600	BOOT. (L. H)	1	
39	00932-21100	BOOT. (R. H)	1	
40	00850-02490	ROD	2	
41	00850-05480	ROD	1	
42	00850-05270	ROD	1	
43	00850-05410	ROD	1	
44	00855-05032	YOKE	3	
45	01432-83700	SPACER	1	
46	13400-00080	ROD. End	5	
47	13400-00085	ROD. End	5	
48	13405-00080	ROD. End	2	
49	13320-00000	MINI-PILLOW	5	
50	13320-01516	MINI-PILLOW	2	

NOTE for France, England, Singapore, Spain, & U.S.A. 8127 ~ No.①

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

FIG.17-1 CONTROL BOX

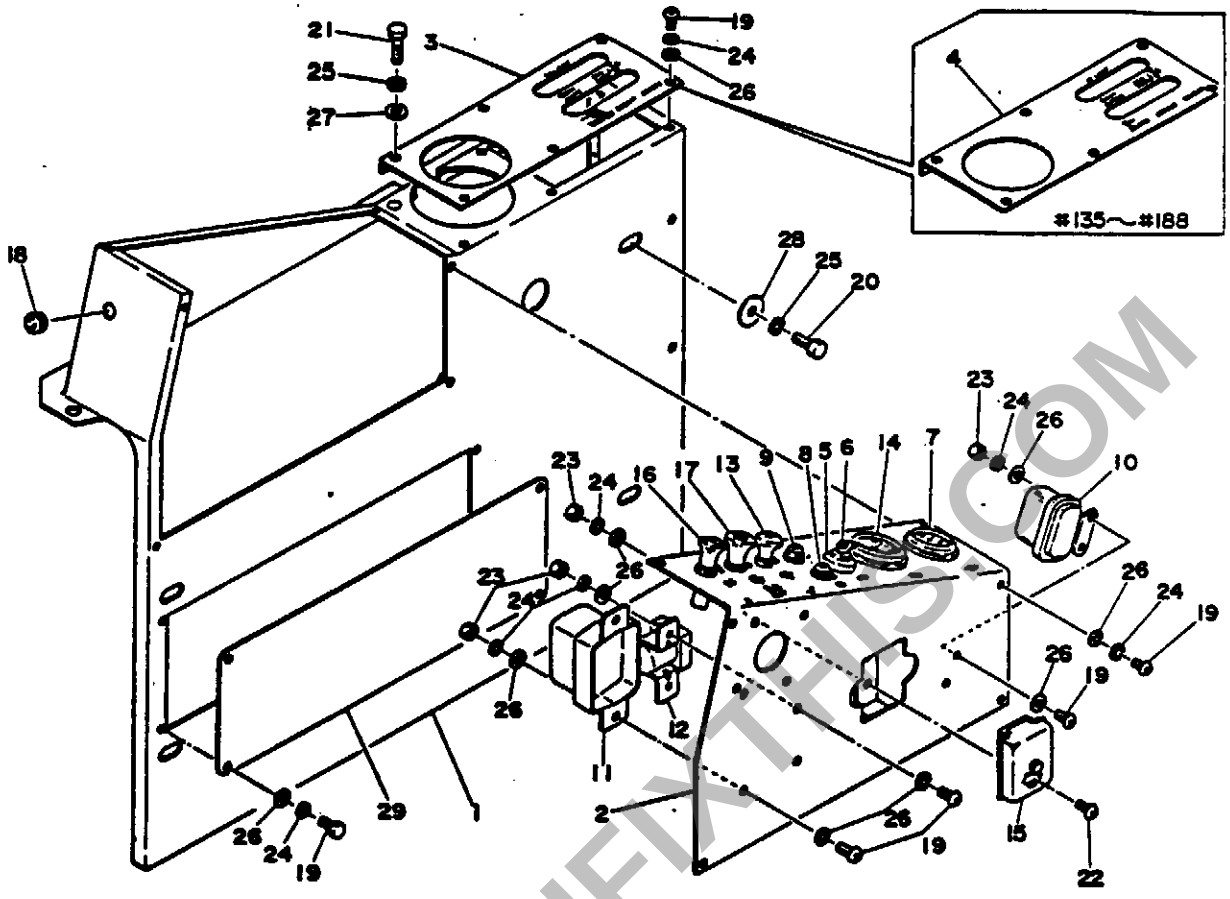

Item	PARTS NUMBER	DESCRIPTION	Q'ty	REMARKS
1	81443-57100	BOX, Control	1	
2	81443-57200	PANEL, Control	1	
3	81443-55100	PANEL, Control	1	#135~#188
4	81443-61100	PANEL, Control	1	#188~
5	●●●●●-●●●●●	SWITCH, Starter	1	Y [illegible]
6	●●●●●-●●●●●	★KEY	1	Y [illegible]
7	●●●●●-●●●●●	THERMOMETER	1	Y [illegible]
8	●●●●●-●●●●●	LAMP, Charge	1	Y [illegible]
9	●●●●●-●●●●●	LAMP, Oil	1	Y [illegible]
10	●●●●●-●●●●●	RELAY, Safety	1	Y [illegible]
11	●●●●●-●●●●●	REGULATOR	1	Y [illegible]
12	●●●●●-●●●●●	SWITCH, Solenoid	1	Y [illegible]
13	17010-60102	SWITCH, Light	1	
14	17300-65970	METER, Hour	1	
15	17012-60200	BOX, Fuse	1	
16	19110-60200	SWITCH, Heater	1	
17	17043-60002	SWITCH, Wiper	1	
18	16520-60002	GROMMET	1	
19	11205-30616	SCREW, Pan-head	21	#163~
20	11000-40820	BOLT	5	
21	11000-40830	BOLT	1	
22	11205-30614	SCREW, Pan Head	2	
23	11300-40006	NUT	8	
24	11400-20006	WASHER, Spring	23	
25	11400-30008	WASHER, Spring	6	
26	11411-10006	WASHER, Plain	30	
27	11411-10008	WASHER, Plain	1	
28	00836-03003	WASHER	5	
29	81443-57400	COVER	1	

NOTE #163 ~for all except France & Sweden
#163 ~#225 for France & Sweden

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 12 of 190 pages

The full manual includes:

- All 190 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Takeuchi TB-35S Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual