
TEREX

TXC 225 LC-1

SHOP MANUAL

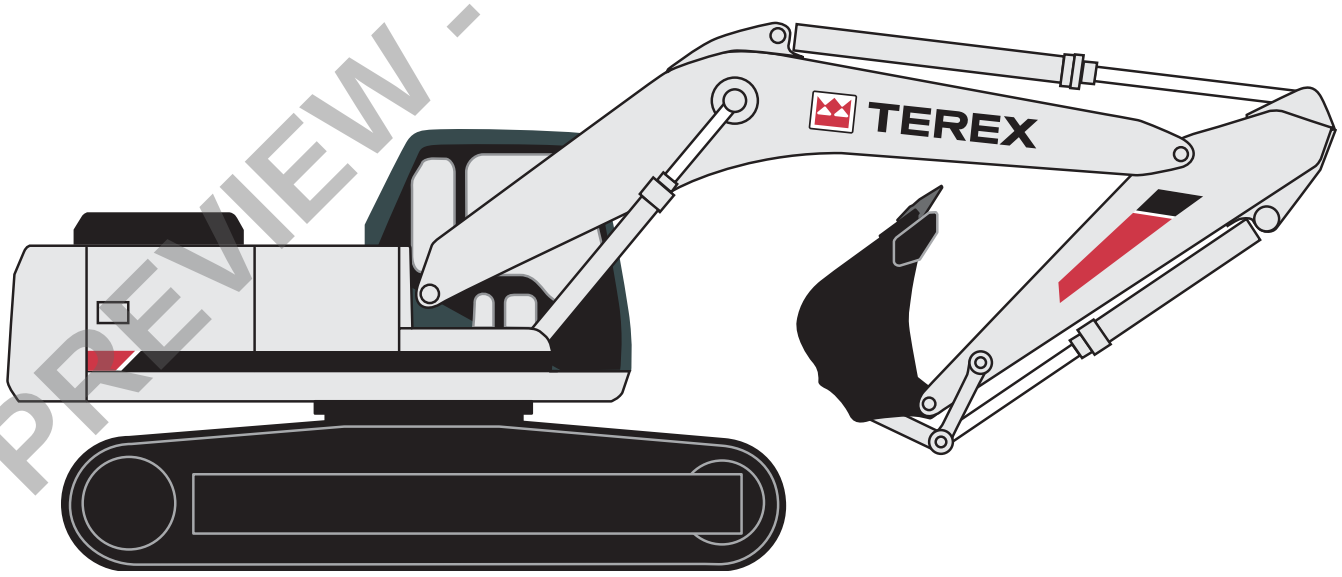

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

TABLE OF CONTENTS

Safety

Track Excavator Safety S0102000T

Specifications

Specifications for TXC 225LC-1 ..... S0205015KT

General Maintenance

General Maintenance Procedures S0302000T

Standard Torques S0309000T

Upper Structure

Cab S0402040KT

Counterweight S0403050KT

Fuel Tank S0405005KT

Fuel Transfer Pump S0405500T

Swing Bearing S0407000T

Swing Reduction Gearbox S0408015KT

Lower Structure and Chassis

Track Assembly S0505030T

Engine and Drive Train

Air-Conditioner S0605060KT

Drive Coupling (Main Pump) S0609000T

Hydraulics

Hydraulic System Troubleshooting, Testing and Adjustment S0702170KT

Accumulator S0703010KT

Center Joint (Swivel) S0704010T

Cylinders S0705000T

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

TRACK EXCAVATOR SAFETY

⚠ CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
TXC 225LC-1	30001 and Up
TXC 255LC-1	30001 and Up
TXC 300LC-1	30001 and Up
TXC 340LC-1	30001 and Up
TXC 420LC-1	30001 and Up
TXC 470LC-1	30001 and Up

PREVIEW - YOUFIXTHIS.COM

Copyright 2004 TEREX

January 2004

Download full manual at youfixthis.com

SPECIFICATIONS FOR TXC 225LC-1

⚠ CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
TXC 225LC-1	30001 and UP

PREVIEW - YOUFIXTHIS.COM

Copyright 2004 TEREX

January 2004

Download full manual at youfixthis.com

COMPONENT LOCATIONS

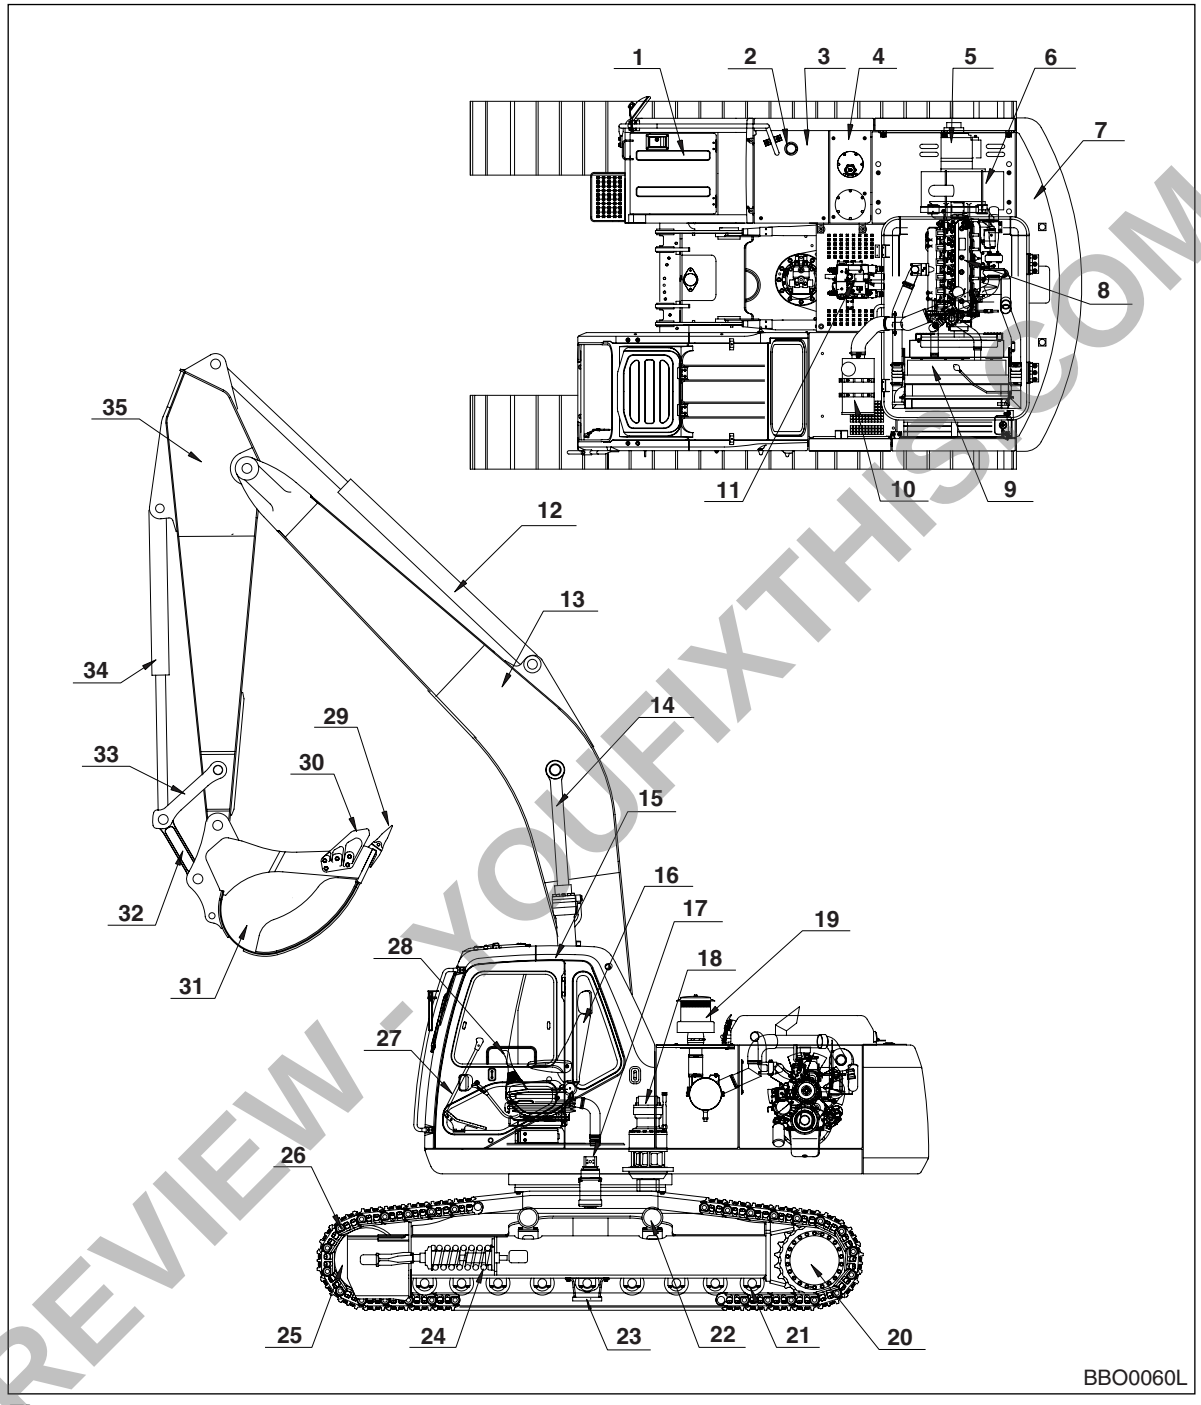


Figure 1

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

TORQUE VALUES FOR STANDARD METRIC FASTENERS

NOTE: *The units for the torque values are kg•m (ft lb).*

Dia. x Pitch (mm)	Grade										
	3.6 (4A)	4.6 (4D)	4.8 (4S)	5.6 (5D)	5.8 (5S)	6.6 (6D)	6.8 (6S)	6.9 (6G)	8.8 (8G)	10.9 (10K)	12.9 (12K)
M5 x Std.	0.15 (1.08)	0.16 (1.15)	0.25 (1.80)	0.22 (1.59)	0.31 (2.24)	0.28 (2.02)	0.43 (3.11)	0.48 (3.47)	0.50 (3.61)	0.75 (5.42)	0.90 (6.50)
M6 x Std.	0.28 (2.02)	0.30 (2.16)	0.45 (3.25)	0.40 (2.89)	0.55 (3.97)	0.47 (3.39)	0.77 (5.56)	0.85 (6.14)	0.90 (6.50)	1.25 (9.04)	1.50 (10.84)
M7 x Std.	0.43 (3.11)	0.46 (3.32)	0.70 (5.06)	0.63 (4.55)	0.83 (6.00)	0.78 (5.64)	1.20 (8.67)	1.30 (9.40)	1.40 (10.12)	1.95 (14.10)	2.35 (16.99)
M8 x Std.	0.70 (5.06)	0.75 (5.42)	1.10 (7.95)	1.00 (7.23)	1.40 (10.12)	1.25 (9.04)	1.90 (13.74)	2.10 (15.18)	2.20 (15.91)	3.10 (22.42)	3.80 (27.48)
M8 x 1	0.73 (5.28)	0.80 (5.78)	1.20 (8.67)	1.00 (7.23)	1.50 (10.84)	1.35 (9.76)	2.10 (15.18)	2.30 (16.63)	2.40 (17.35)	3.35 (24.23)	4.10 (29.65)
M10 x Std.	1.35 (9.76)	1.40 (10.12)	2.20 (15.91)	1.90 (13.74)	2.70 (19.52)	2.35 (19.99)	3.70 (26.76)	4.20 (30.37)	4.40 (31.18)	6.20 (44.84)	7.20 (52.07)
M10 x 1	1.50 (10.84)	1.60 (11.57)	2.50 (18.08)	2.10 (15.18)	3.10 (22.42)	2.80 (20.25)	4.30 (31.10)	4.90 (35.44)	5.00 (36.16)	7.00 (50.63)	8.40 (60.75)
M12 x Std.	2.40 (17.35)	2.50 (18.08)	3.70 (26.76)	3.30 (23.86)	4.70 (33.99)	4.20 (30.37)	6.30 (45.56)	7.20 (52.07)	7.50 (54.24)	10.50 (75.94)	12.50 (90.41)
M12 x 1.5	2.55 (18.44)	2.70 (19.52)	4.00 (28.93)	3.50 (25.31)	5.00 (36.16)	4.50 (32.54)	6.80 (49.18)	7.70 (55.69)	8.00 (57.86)	11.20 (81.00)	13.40 (96.92)
M14 x Std.	3.70 (26.76)	3.90 (28.20)	6.00 (13.23)	5.20 (37.61)	7.50 (54.24)	7.00 (50.63)	10.00 (72.33)	11.50 (83.17)	12.00 (86.79)	17.00 (122.96)	20.00 (144.66)
M14 x 1.5	4.10 (29.65)	4.30 (31.10)	6.60 (47.73)	5.70 (41.22)	8.30 (60.03)	7.50 (54.24)	11.10 (80.28)	12.50 (90.41)	13.00 (94.02)	18.50 (11.26)	22.00 (158.12)
M16 x Std.	5.60 (40.50)	6.00 (43.39)	9.00 (65.09)	8.00 (57.86)	11.50 (83.17)	10.50 (75.94)	15.50 (112.11)	17.90 (129.47)	18.50 (133.81)	26.00 (188.05)	31.00 (224.22)
M16 x 1.5	6.20 (44.84)	6.50 (47.01)	9.70 (70.16)	8.60 (62.20)	12.50 (90.41)	11.30 (81.73)	17.00 (122.96)	19.50 (141.04)	20.00 (144.66)	28.00 (202.52)	35.50 (256.77)
M18 x Std.	7.80 (56.41)	8.30 (60.03)	12.50 (90.41)	11.00 (79.56)	16.00 (115.72)	14.50 (104.87)	21.00 (151.89)	27.50 (198.90)	28.50 (206.14)	41.00 (296.55)	43.00 (311.01)
M18 x 1.5	9.10 (65.82)	9.50 (68.71)	14.40 (104.15)	12.50 (90.41)	18.50 (133.81)	16.70 (120.79)	24.50 (177.20)	27.50 (198.90)	28.50 (206.14)	41.00 (296.55)	49.00 (354.41)
M20 x Std.	11.50 (83.17)	12.00 (86.79)	18.00 (130.19)	16.00 (115.72)	22.00 (159.12)	19.00 (137.42)	31.50 (227.83)	35.00 (253.15)	36.00 (260.38)	51.00 (368.88)	60.00 (433.98)
M20 x 1.5	12.80 (92.58)	13.50 (97.64)	20.50 (148.27)	18.00 (130.19)	25.00 (180.82)	22.50 (162.74)	35.00 (253.15)	39.50 (285.70)	41.00 (296.55)	58.00 (419.51)	68.00 (491.84)
M22 x Std.	15.50 (112.11)	16.00 (115.72)	24.50 (177.20)	21.00 (151.89)	30.00 (216.99)	26.00 (188.05)	42.00 (303.78)	46.00 (332.71)	49.00 (354.41)	67.00 (484.61)	75.00 (542.47)
M22 x 1.5	17.00 (122.96)	18.50 (133.81)	28.00 (202.52)	24.00 (173.59)	34.00 (245.92)	29.00 (209.75)	47.00 (339.95)	52.00 (44.76)	56.00 (405.04)	75.00 (542.47)	85.00 (614.80)
M24 x Std.	20.50 (148.27)	21.50 (155.50)	33.00 (238.68)	27.00 (195.29)	40.00 (289.32)	34.00 (245.92)	55.00 (397.81)	58.00 (419.51)	63.00 (455.67)	82.00 (593.10)	92.00 (655.43)
M24 x 1.5	23.00 (166.35)	35.00 (253.15)	37.00 (267.62)	31.00 (224.22)	45.00 (325.48)	38.00 (202.52)	61.00 (441.21)	67.00 (484.61)	74.00 (535.24)	93.00 (672.66)	103.00 (744.99)

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

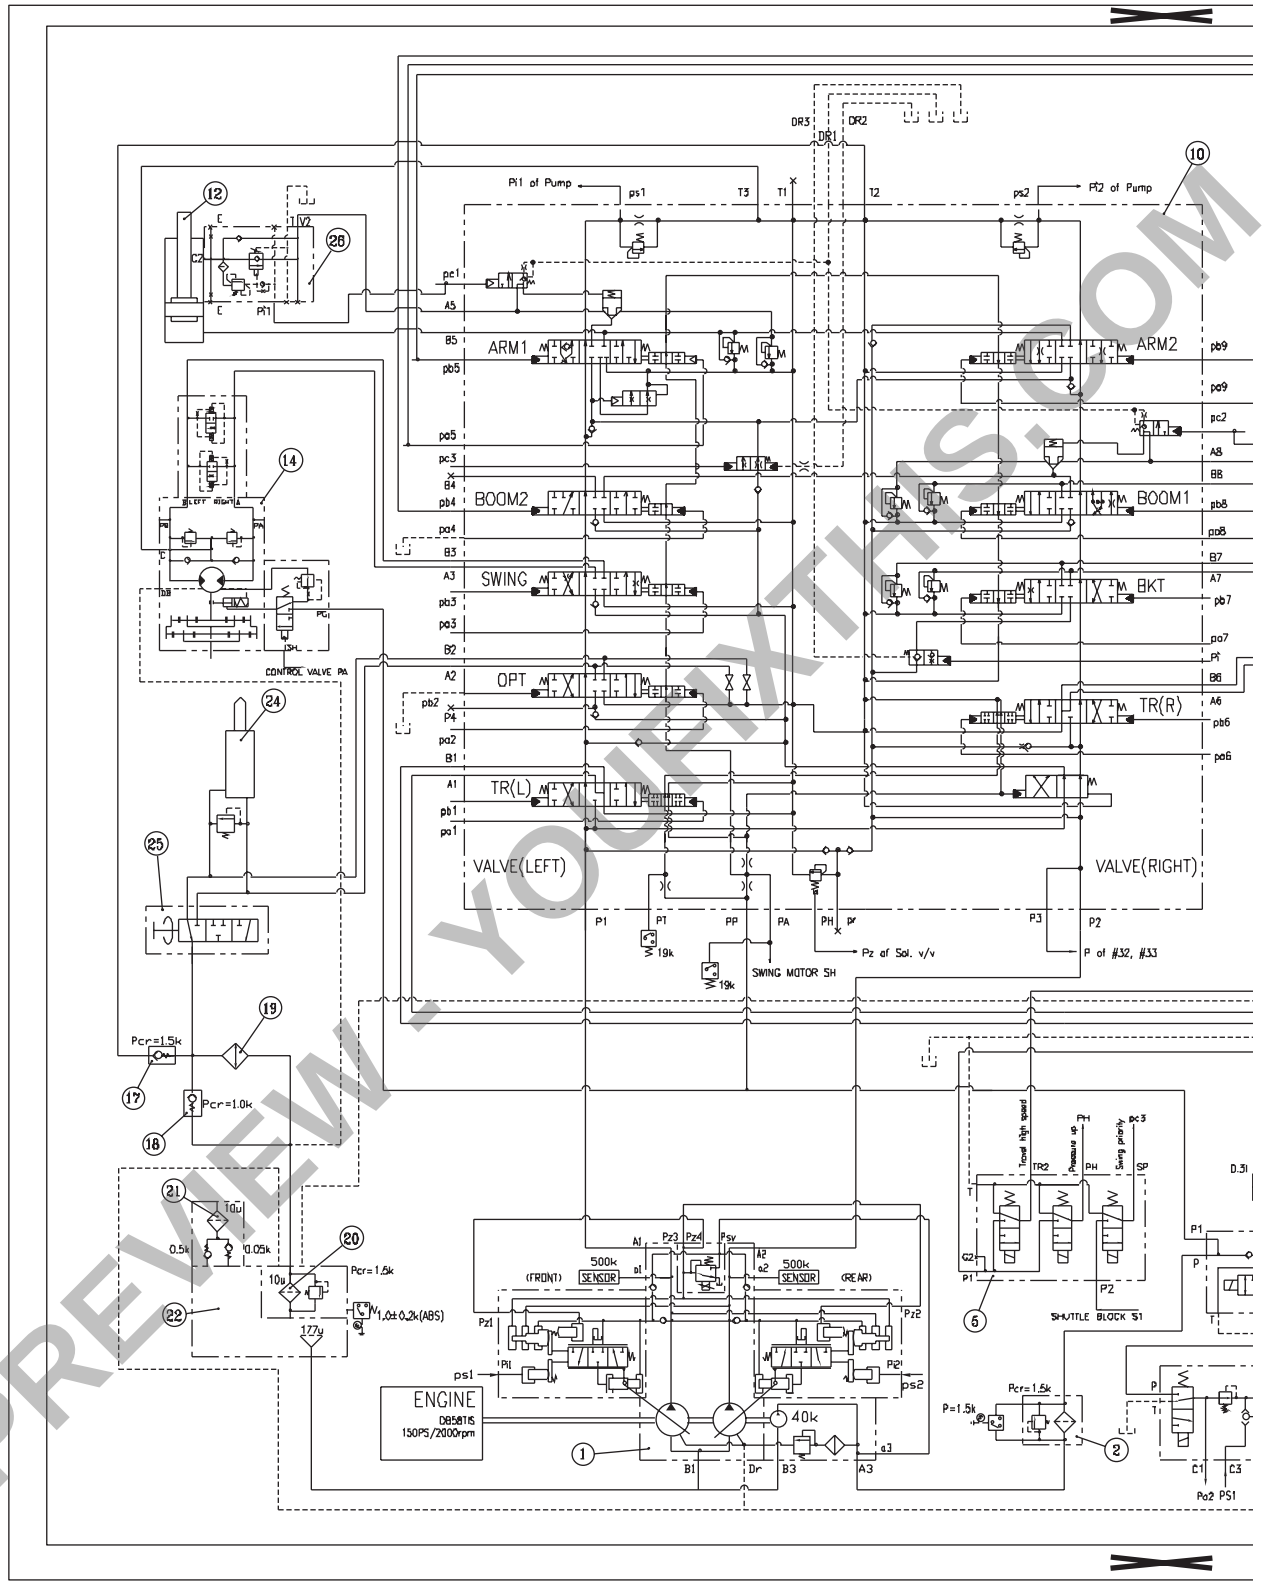


Figure 2

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

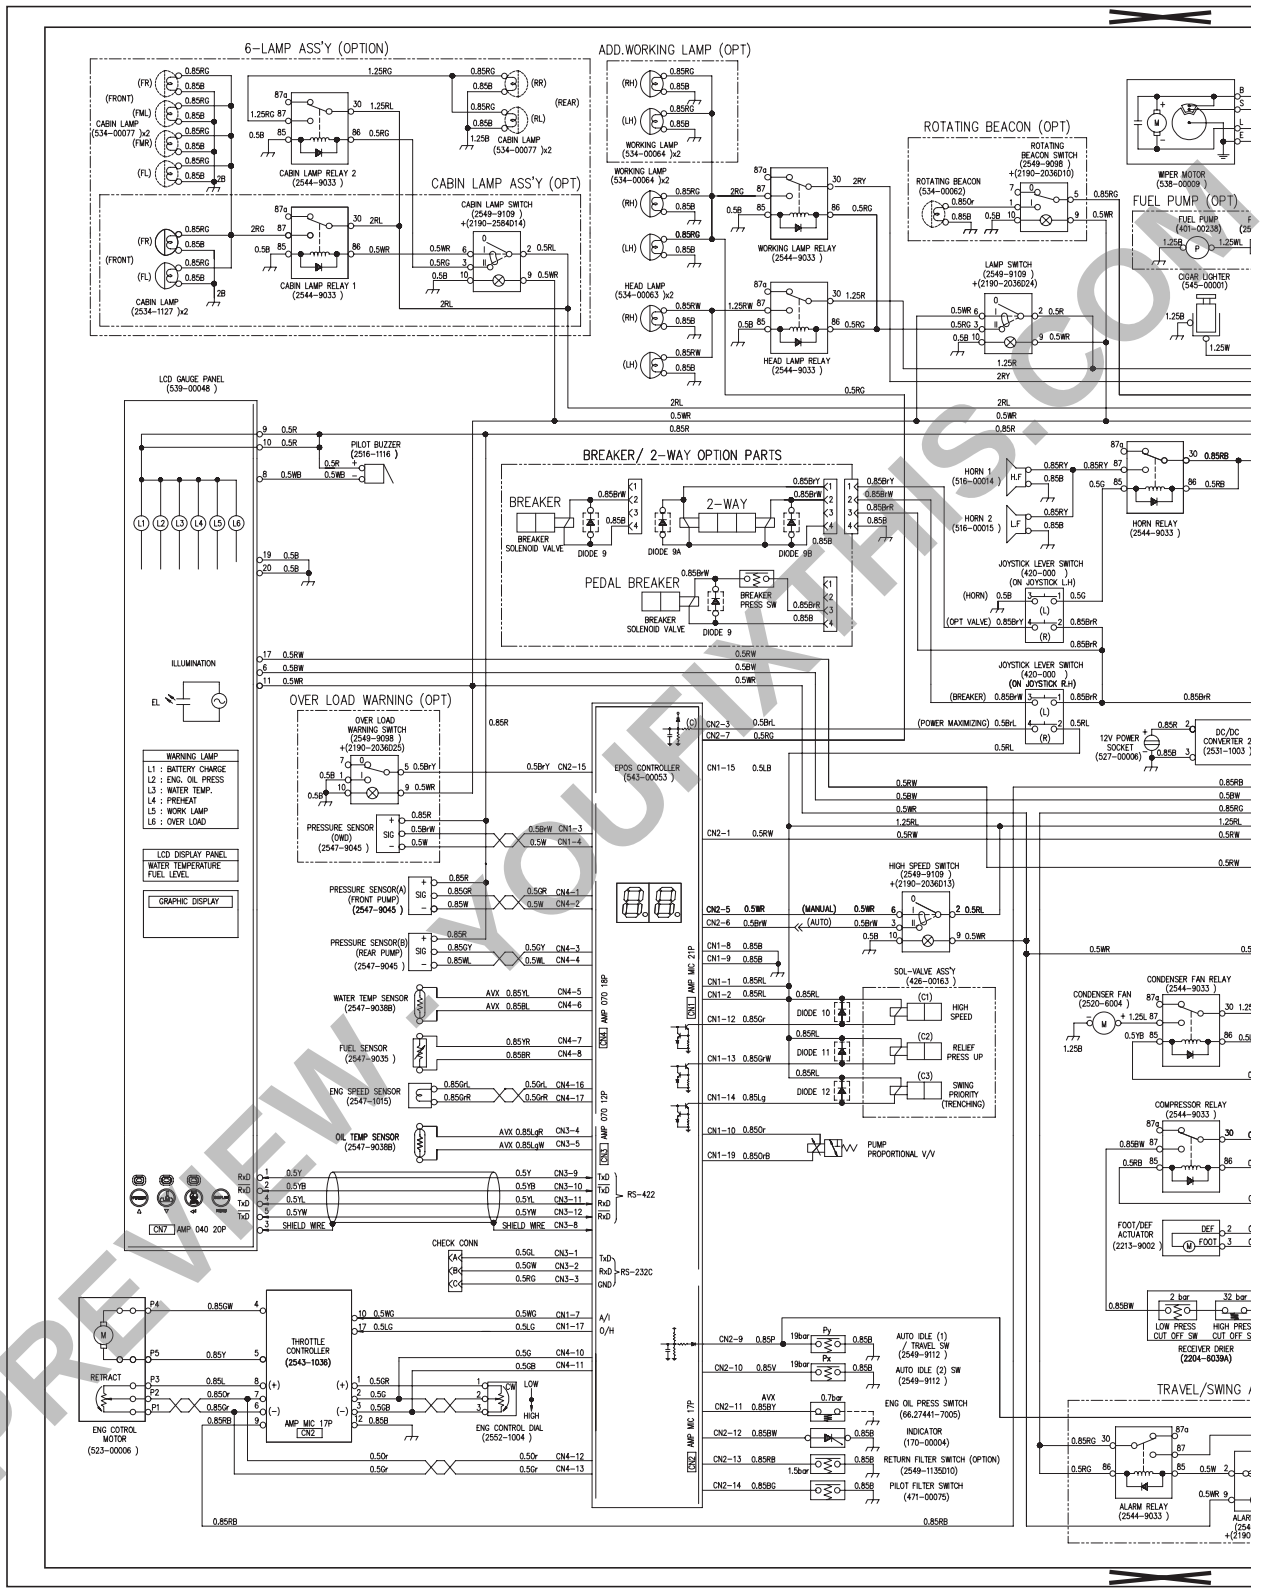


Figure 2

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

TROUBLESHOOTING – SWING GEARBOX

Problem	Possible Causes	Remedies
Swing motor fails to operate and:		
Three pressure tests at motor, brake or makeup valve show low reading(s).	Swing relief valve defective Brake release valve defective Motor makeup valve defective.	Adjust pressure to recommended range in affected valve. OR Disassemble and clean valve assembly. Replace all valve components that show damage.
All three pressure checks are OK but left travel also fails to run.	Exchange front and rear pump inlet and outlet hoses to test pump function.	If swing and left travel are restored but right travel stops working, replace or repair P1 pump.
All three pressure tests are OK, but machine fails to swing at all.	Brake assembly or motor friction plate failing to release.	Check for binding. Disassemble and repair.
	Pilot (control) pressure low or swing control valve stuck.	Disassemble / Repair pilot pressure swing spool (305) and / or swing control valve.
	Swing motor defective.	Test motor drain rate. Replace / Repair motor.
	Gear train defective.	Refer to “Swing Gear Troubleshooting” procedure.
Swing functions but only at reduced rpm.	Causes listed above could also produce dragging swing, OR hot or wrong oil OR worn-out parts.	Check above list; then replace oil, test motor drain rate and check for “03” reading (e-EPOS self-test).
Left travel speed is also reduced.	Low output at P1 pump or external pilot piping leaks/is clogged.	Clean and repair piping or repair or replace pump P1.
Swing control movement is reversed.	Inlet / outlet piping reversed.	Reset controls or reverse piping.
Machine swings but continues coasting on past stopping point.	Swing control valve spool not centered.	Replace return spring; clean/ repair valve piston and spool.
	Pilot pressure may be outside range.	Disassemble, clean or replace pilot relief valve or pilot valve.
	Swing relief valve may be faulty.	Repair/Replace swing relief valve.
Swing movement is in one direction only.	Check to see that pilot pressure is the same right and left.	If pilot pressure is unequal, clean or repair piping or repair/ replace valve.
	Swing control valve spool may be stuck.	Repair/Replace the swing control valve.
	Swing relief valve may be faulty.	Repair/Replace the swing relief valve.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Display Contents of Failure Information Code

Code	Contents	Cause	Operation	Reset Procedure
82	Communication Err!!	Communication error between e-EPOS controller and instrument panel	* Note	Automatic reset when problem is corrected
01	EPPR v/v short	Short Circuit	Cut off output current (0 mA)	After correcting problem, turn start switch from "OFF" to "ON."
02	Press Up s/v short	Short Circuit		
03	Swing pri. s/v short	Short Circuit		

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

REMOVAL

⚠ CAUTION!

Avoid disassembling cab if there are strong wind gusts, which could catch large surface area of cab shell and push it sideways during lift.

1. Park on firm and level ground.
2. Lower front attachment (bucket) to the ground.
3. Shut down engine.
4. Set safety lever on "RELEASED" position.
5. Turn starter switch "ON."

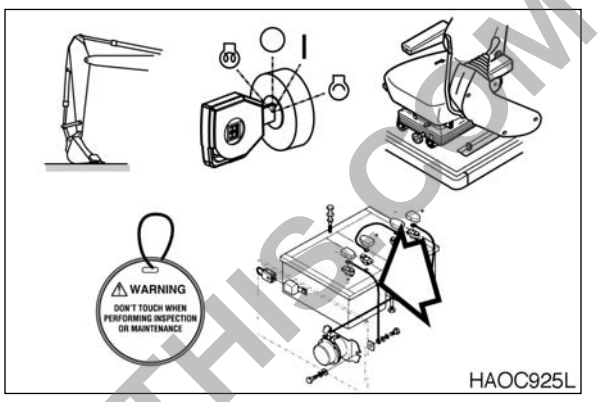


Figure 1

⚠ WARNING!

If engine must be run while performing maintenance, use extreme care. Always have one person in the cab at all times. Never leave the cab with the engine running.

6. Fully stroke work levers (joysticks) in all directions to relieve pressure from accumulators.
7. Set safety lever on "LOCK" position.
8. Turn key to "OFF" position and remove from starter switch.
9. Hang maintenance warning tag on controls.
10. Disconnect negative (-) battery cable leading to frame from battery.
11. Prepare cab shell for removal by disconnecting wiring connectors for:
    A. Cab interior lighting.
    B. External light wiring.
    C. Radio antenna and connections.
    D. Wiper/washer connections.

NOTE: *Control console wiring harnesses and hydraulic piping lines that pass through the floor of the cab do not need to be disassembled.*

NOTE: *If unit is equipped with a cab protective structure (for forestry, or hazardous working conditions), it must be removed.*

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

GENERAL SPECIFICATIONS

Shipping Weight	21.5 metric tons (47,400 lb), includes 10% fuel, boom, 2,900 mm (9’ 6") arm, standard bucket and standard shoes
Operating Weight	Add weight of full fuel tank and operator.
Shipping Weights With Optional Track Shoes	Add 300 kg (660 lb) for 700 mm (28") shoes
	Add 600 kg (1,320 lb) for 800 mm (32") shoes
	Add 900 kg (1,980 lb) for 900 mm (35.4") shoes
Major Component Weights	Standard Boom 1,374.0 kg (3,023 lb)
	2,400.0 mm (7’ 10") Arm 801.0 kg (1,762 lb)
	2,900.0 mm (9’ 6") Arm 817.0 kg (1,797 lb)
	3,500.0 mm (11’ 6") Arm 956.0 kg (2,103 lb)
	6,200.0 mm (20’ 4") Arm 1,554.0 kg (3,419 lb)
	Boom Cylinders 171.0 kg (376 lb) each
	Arm Cylinder 257.0 kg (566 lb)
	Bucket Cylinder 144.0 kg (317 lb)
	Counterweight 3,900.0 kg (8,580 lb)
	Upper Turntable 5,950.0 kg (13,090 lb)
	Lower - below Swing Bearing 7,850.0 kg (17,270 lb)
Digging Forces:	
Bucket Cylinder	119 KN or 12,100 kg (26,620 lb) - with 2,900 mm (9’ 6") arm
	117 KN or 12,000 kg (26,400 lb) - with 2,400 mm (7’ 10") arm
Arm Cylinder	100 KN or 10,200 kg (22,400 lb) - with 2,900 mm (9’ 6") arm
	121 KN or 12,300 kg (27,060 lb) - with 2,400 mm (7’ 10") arm
Fuel Tank Capacity	350 liters (92.5 gal)
Hydraulic System Capacity	240 liters (63.4 gal.)
Hydraulic Reservoir Capacity	140 liters (37 gal)
Bucket Heaped Capacity Range	PCSA 0.50 - 1.18 m^3 (0.65 - 1.55 yd^3)
	IMPORTANT: Refer to the Load Weight, Bucket and Arm Length Compatibility Table for information on which bucket sizes may be used safely with which arm length, for load material weights.
Shoe Type	Triple Grouser
Shoe Width and Optional Sizes	600 mm (24") - standard
	700 mm (28") - optional
	800 mm (32") - optional
	900 mm (35") - optional
Ground Pressure Ratings:	
Standard 600 mm (24") shoe -	0.45 kg/cm^2 (6.4 psi)
Optional 700 mm (28") shoe -	0.39 kg/cm^2 (5.5 psi)
Optional 800 mm (32") shoe -	0.35 kg/cm^2 (5.0 psi)
Optional 900 mm (35") shoe -	0.31 kg/cm^2 (4.4 psi)

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

IMPORTANT

Hydraulic system operating conditions (repetitive cycling, heavy work loads, fluid circulating under high pressure) make it extremely critical that dust, grit or any other type of contamination be kept out of the system. Observe fluid and filter change maintenance interval recommendations and always pre-clean any exterior surface of the system before it is exposed to air. For example, the reservoir filler cap and neck area, hoses that have to be disassembled, and the covers and external surfaces of filter canisters should all be cleaned before disassembly.

MAINTENANCE SERVICE AND REPAIR PROCEDURE

GENERAL PRECAUTIONS

Fluid level and condition should always be checked whenever any other type of maintenance service or repair is being performed.

NOTE: *If the unit is being used in an extreme temperature environment (in sub-freezing climates or in high temperature, high humidity tropical conditions), frequent purging of moisture condensation from the hydraulic reservoir drain tap should be a regular and frequent part of the operating routine. In more moderate, temperate climates, draining reservoir sediment and moisture may not be required more than once or twice every few months.*

Inspect drained oil and used filters for signs of abnormal coloring or visible fluid contamination at every oil change. Abrasive grit or dust particles will cause discoloration and darkening of the fluid. Visible accumulations of dirt or grit could be an indication that filter elements are overloaded (and will require more frequent replacement) or that disintegrating bearings or other component failures in the hydraulic circuit may be imminent or have already occurred. Open the drain plugs on the main pump casings and check and compare drain oil in the pumps. Look for evidence of grit or metallic particles.

Vibration or unusual noise during operation could be an indication of air leaking into the circuit (Refer to the appropriate Troubleshooting section for component or unit for procedures.), or it may be evidence of a defective pump. The gear-type pilot pump could be defective, causing low pilot pressure, or a main pump broken shoe or piston could be responsible.

NOTE: *If equipped, indicated operating pressure, as shown on the multidisplay digital gauge on the Instrument Panel ("F-Pump" and "R-Pump") will be reduced as a result of a mechanical problem inside the pump. However, pressure loss could also be due to cavitation or air leakage, or other faults in the hydraulic system.*

Check the exterior case drain oil in the main pumps. If no metallic particles are found, make sure there is no air in the system. Unbolt and remove the tank return drain line from the top part of the swing motor, both travel motors and each main pump. If there is air in any one of the drain lines, carefully pre-fill the assembly before bolting together the drain line piping connections. Run the system at low rpm.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

CONTROL PANEL

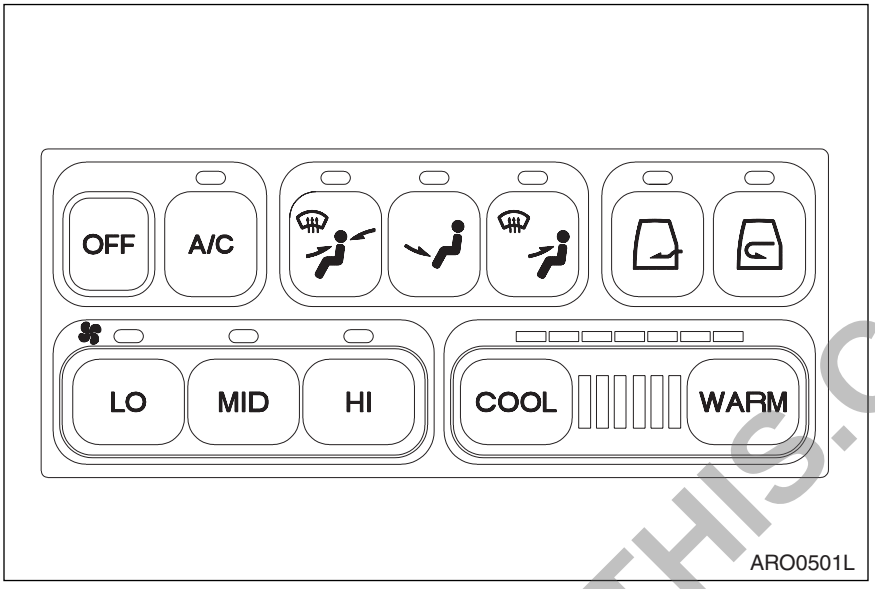


Figure 5

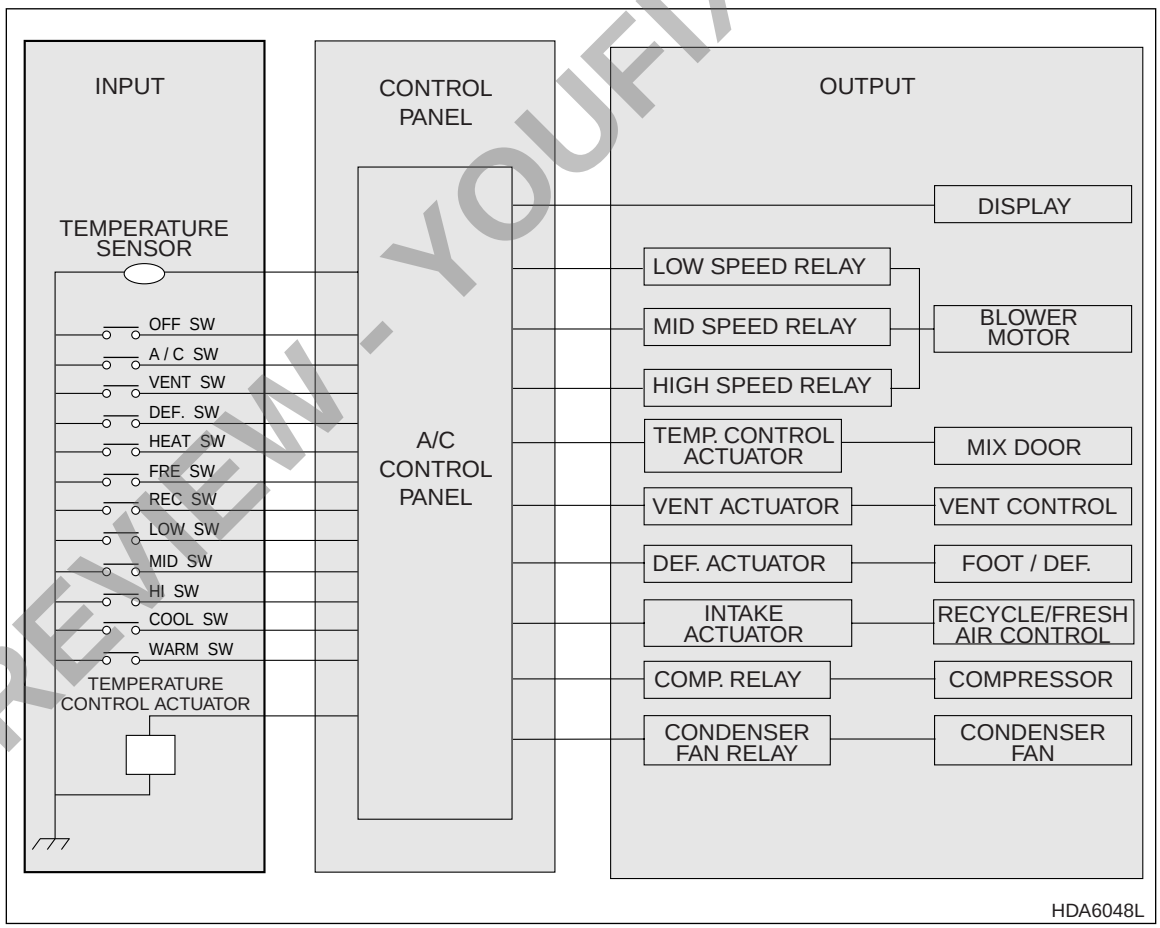


Figure 6

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

FRONT ATTACHMENT PIN SPECIFICATIONS

The table below has a complete listing of dimensional specifications for all mounting pins used on the front attachment.

NOTE: *Some mounting pins must be drilled and tapped for lubrication fittings and piping, or may have other required specifications. Consult TEREX After Sales Service for information on wear tolerances and replacement limits for mounting pins.*

Mounting Pin	Diameter, mm (Inches)	Length, mm (Inches)
A	90.0 mm (3.54 in)	792.0 mm (31.18 in)
B	80.0 mm (3.15 in)	792.0 mm (31.18 in)
C	80.0 mm (3.15 in)	225.0 mm (8.86 in)
D	90.0 mm (3.54 in)	529.0 mm (20.83 in)
E	80.0 mm (3.15 in)	225.0 mm (8.86 in)
F	80.0 mm (3.15 in)	211.0 mm (8.31 in)
G	71.0 mm (2.80 in)	448.0 mm (17.64 in)
H	80.0 mm (3.15 in)	448.0 mm (17.64 in)
I	80.0 mm (3.15 in)	509.0 mm (20.04 in)
J	80.0 mm (3.15 in)	509.0 mm (20.04 in)
K	80.0 mm (3.15 in)	211.0 mm (8.31 in)

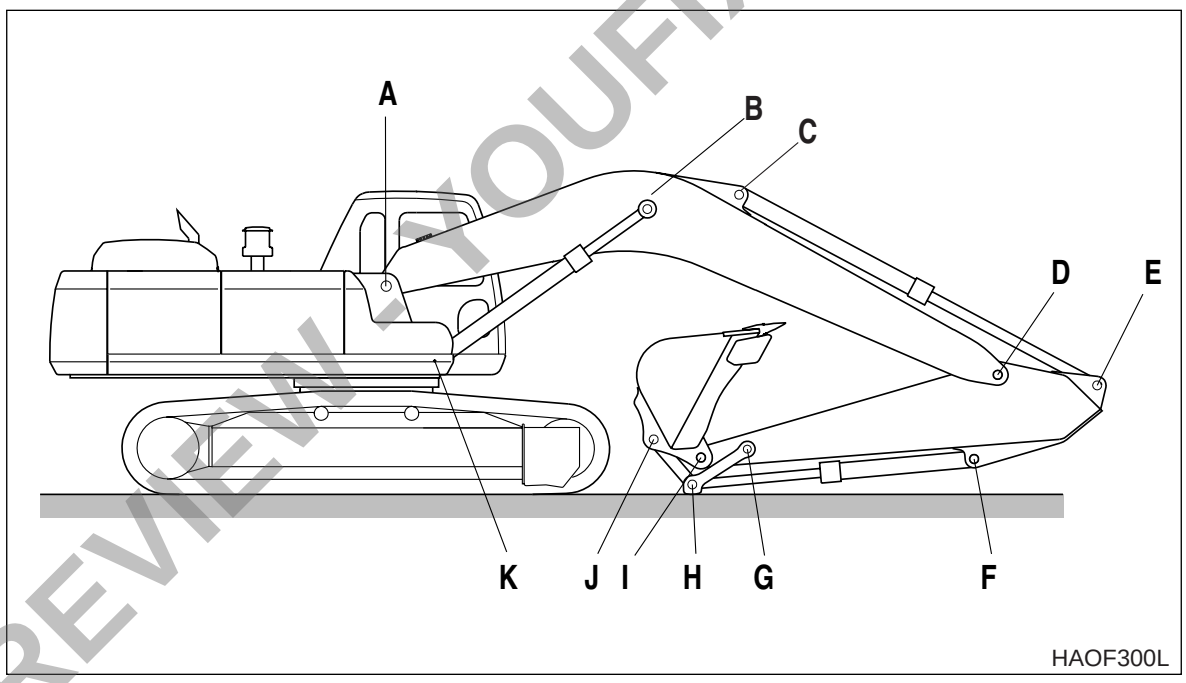


Figure 1

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Swing Motor S0707200T
Travel Motor (With Gearbox) (GM35VL) S0707330T
Main Pump (With Regulator) S0708320T
Main Control Valve (Kayaba) S0709401KT
Pilot Control Valve (Work Lever / Joystick) S0709451KT
Travel Control Valve (With Damper) S0709820KT
Hydraulic Schematic (TXC 225LC-1) S0792105KT

Electrical System

Electrical System S0802220KT
Electrical Schematic (TXC 225LC-1) S0892105KT

Attachments

Boom and Arm S0902010T
Bucket S0904015KT

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

SWING BEARING

CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
TXC 225LC-1	30001 and Up
TXC 255LC-1	30001 and Up
TXC 300LC-1	30001 and Up
TXC 340LC-1	30001 and Up
TXC 420LC-1	30001 and Up
TXC 470LC-1	30001 and Up

PREVIEW - YOUFIXTHIS.COM

Copyright 2004 TEREX

January 2004

Download full manual at youfixthis.com

REFRIGERANT CIRCULATION

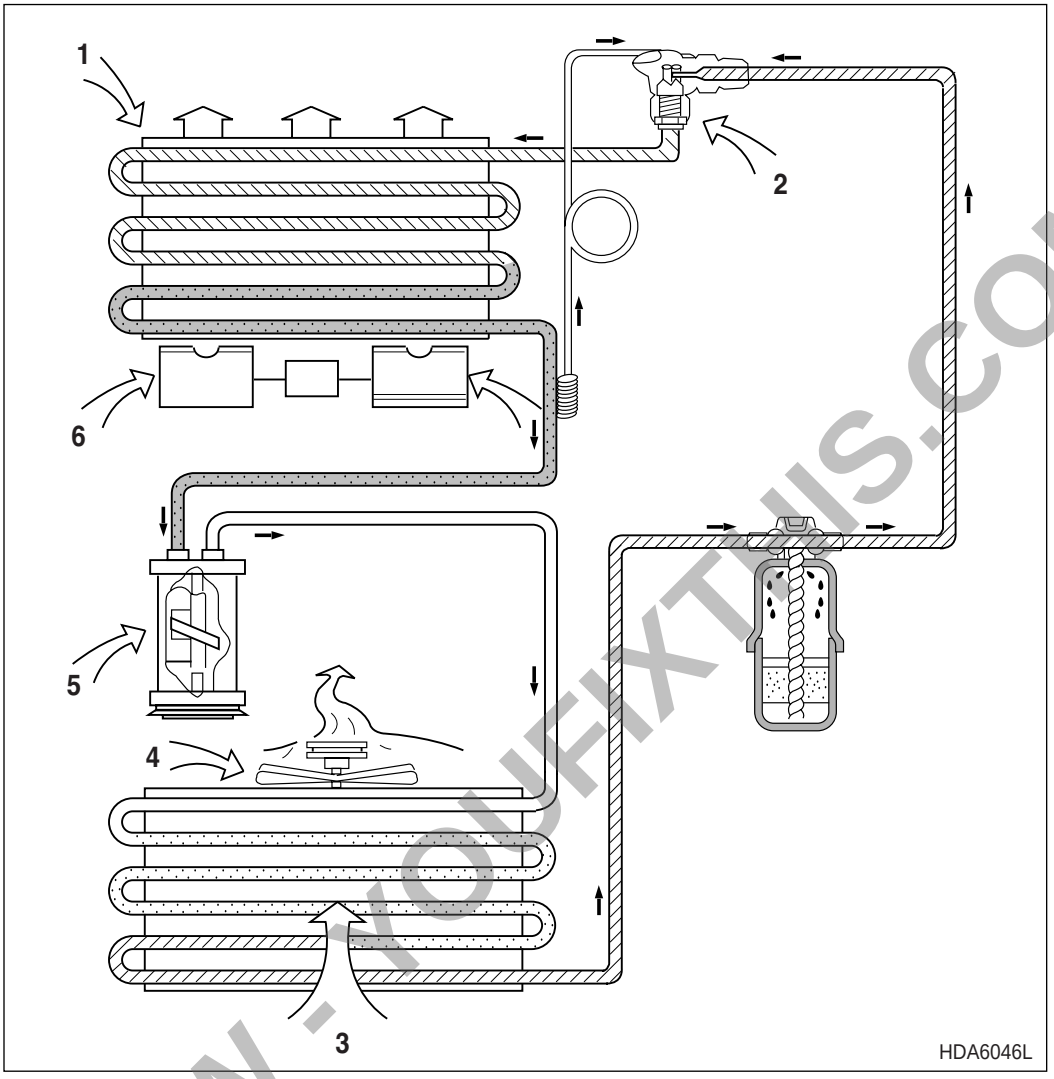


Figure 4

Reference Number	Description
1	Evaporator
2	Expansion Valve
3	Condenser
4	Condenser Fan

Reference Number	Description
5	Compressor
6	Blower Fan
7	Receiver Dryer

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Problem	Possible Causes	Remedies
No rotation and:		
Pressure at swing motor inlet increases.	Swing brake not releasing.	Check brake engagement and disengagement; check release pressure.
	Internal damage to gearbox drive train.	Replace broken gears and drive train assemblies.
	Overload.	Reduce load weight.
Pressure at swing motor inlet shows no increase, and the swing motor is making irregular noises.	Swing motor drive shaft damage.	Replace swing motor.
	Internal damage to gearbox drive train.	Repair/Replace broken or faulty assemblies.
Pressure at swing motor inlet shown no increase, but without irregular noises from the swing motor.	Hydraulic pump or valve problem.	Troubleshoot hydraulic system.
Oil Leakage:		
From drive shaft From bolted connections or other assembled surfaces.	Oil seal damaged Assembly compound (joint sealer) old and not sealing, bolt not tight or flange warped.	Replace oil seal Disassemble and check mating surfaces. Reapply Loctite; torque bolts to specifications.
Excess heat:		
Gearbox casing becomes excessively hot, with or without irregular noise (s), during operation.	Low oil level.	Replace oil; refill to specified level.
	Bearings or gears worn but not completely inoperative.	Repair or replace gearbox.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

8. Loosen and remove all four socket head bolts (401) and separate upper valve casing (303) from lower casing (301).

   NOTE: *Valve plate (131) inside upper valve casing (303) must be separated from assembly but take extra care to make sure that it is not scratched or damaged by an accidental fall, after cover is removed.*

9. Remove all twenty brake springs.

   NOTE: *If brake springs are to be reused and not replaced, check and record spring free height. If a test stand is available, check height of all twenty springs under consistent loading. Replace all springs that show excessive variation or weakness.*

10. Disassemble brake piston assembly using special tool and corresponding piston bolt hole.

    NOTE: *See "Special Tools" portion of this section for manufacturing details of special tool.*

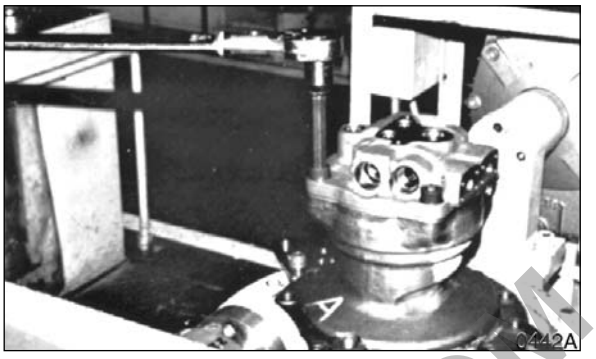


Figure 13

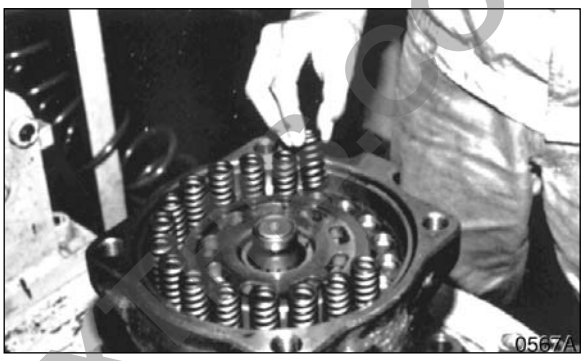


Figure 14



Figure 15

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Motor Reassembly

1. Insert five needle type rollers (151) into cylinder block (104) and place collar (111) and thrust ball (108) on it.
2. Put piston pin assembly (105 and 106) into retainer plate (107).



Figure 94

3. Coating hydraulic oil on piston assembly and install into cylinder block (104).
4. Coat sliding face of shoe (106) and spherical surface of thrust ball (108) with hydraulic oil.



Figure 95

5. Assemble swash plate (103), thrust ball (108), collar (111), retainer plate (107), needle type roller (151), cylinder block (104), piston assembly (105).
6. Install lifting jig onto spline part of shaft (102) and lift assembly.
7. Insert assembly onto motor shaft by slowly lowering into housing.
8. After installing, remove the hanging tool.

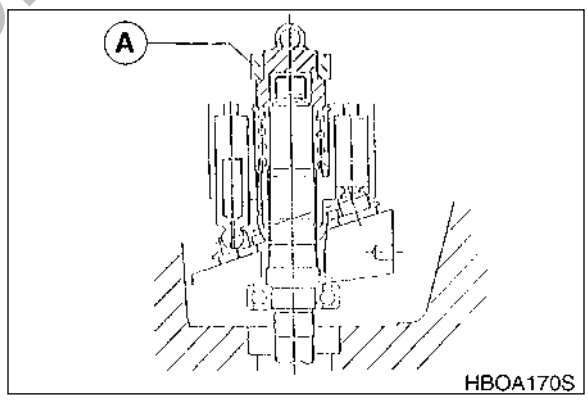


Figure 96

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

3. Arm Crowd (Variable Regeneration)

When crowding arm, after return oil from port (A5, Figure 12) flows through notch (a), one portion of the oil returns through fixed orifice (d), passage (e) and variable orifice (f) and to tank passage (Ta). The other portion of the oil flows through fixed orifice (b), regeneration check (c), and fixed orifice (i) in arm 1 spool, and joins in bridge passage (S5-1).

From there, if load pressure of port (B) is increased, it flows through regeneration release valve piston (g) and pushes regeneration release spool (h), as a result area of variable orifice (f) is increased, and oil returning to tank (Ta) is increased, and some oil to regenerate in port (B5) is decreased.

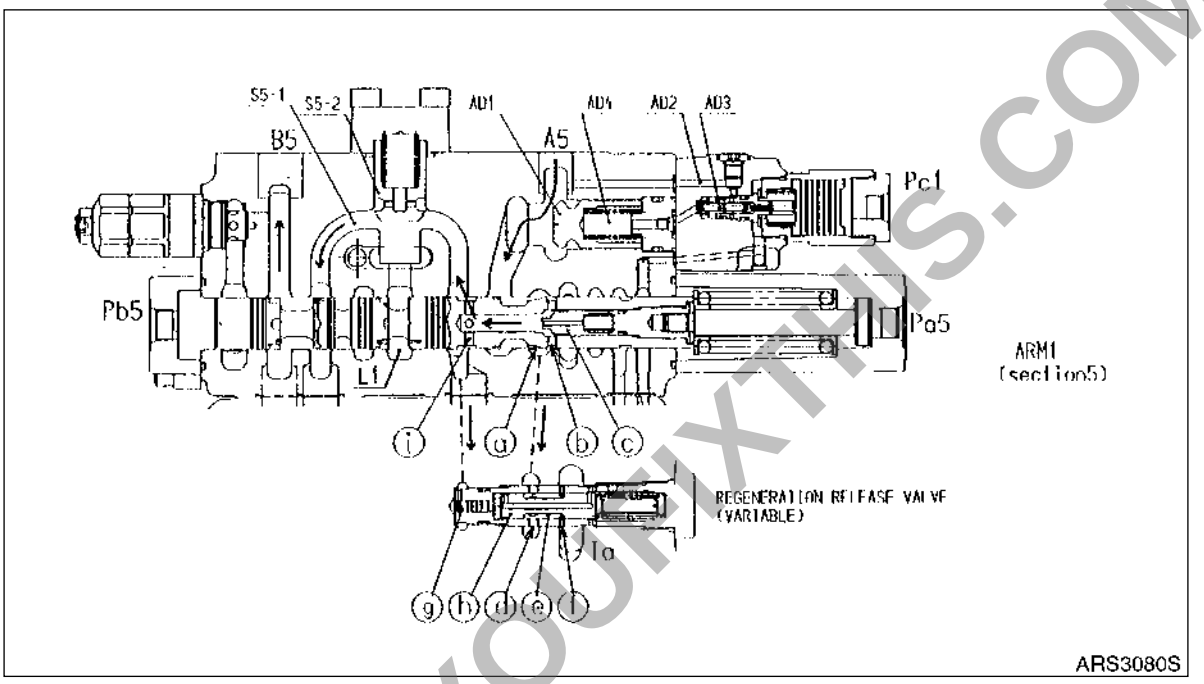


Figure 12

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

GENERAL DESCRIPTION

THEORY OF OPERATION

The damper valve is divided into two areas of operation. There is the pressure reducing valve (a) and the damper mechanism (b). The following hydraulic circuit is an example of a remotely located control valve.

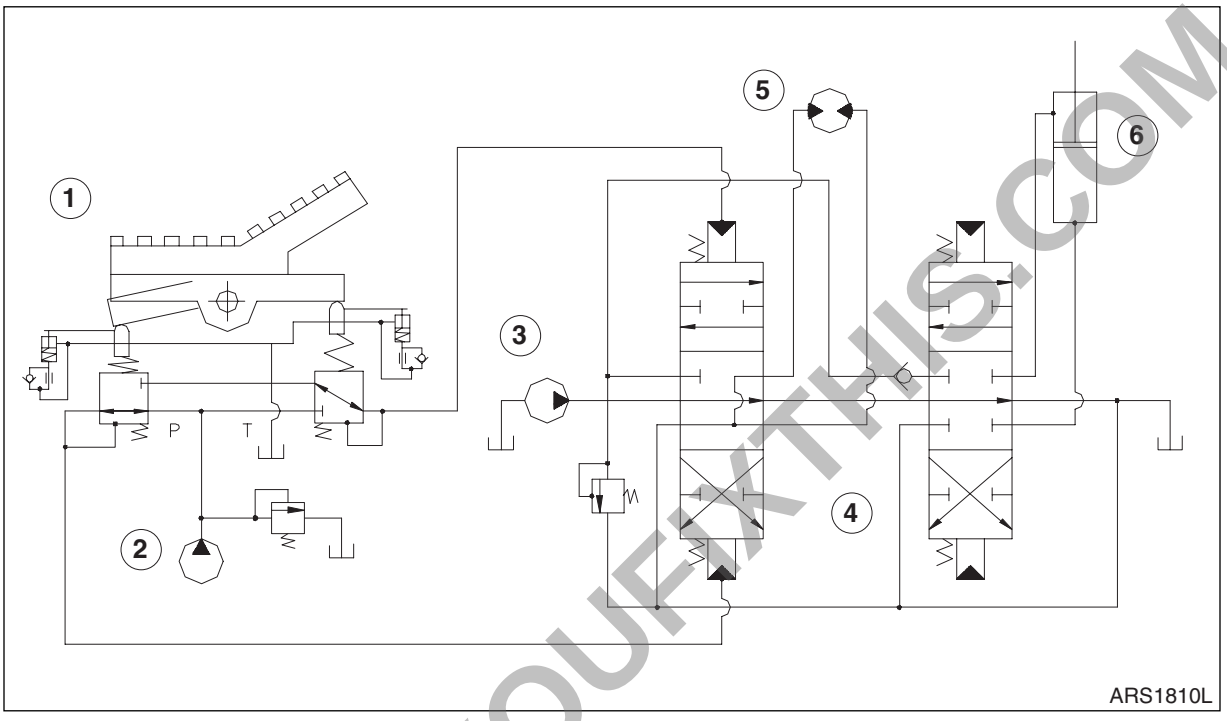


Figure 1

Reference Number	Description
1	Remote Control Valve
2	Pilot Pump
3	Main Pump

Reference Number	Description
4	Control Valve
5	Hydraulic Motor
6	Hydraulic Cylinder

Pressure Reducing Valve

1. Neutral Condition

   If pedal is in neutral, spool is pushed up by return spring and spring seat. Port (P) is blocked by bottom part of spool and four operating ports (left forward and backward, right forward and backward) are connected to port (T) through inner hole of spool.

2. Half Operation Condition

   If pedal is moved, push rod moves down, and they transmit this force through spring seat and control spring to spool. If spool is moved, primary pressure is transmitted through an inner hole of spool to operating port. If lever is stopped in middle position, compressed control spring force and secondary pressure transmitted through hole acts at bottom part of spool, balance is maintained by hydraulic force acted upward, and then this pressure is transmitted to traveling spool of control valve. That is,

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

A. Current failure information

Current status of failure is displayed (Failure code, failure contents).

When a number of failures are produced, failure information can be checked by using "PRV" (▲, 1 on Figure 18) or "NXT" (▼, 2 on Figure 18) button.

* CODE: 12: Unique code of failure information.
* 01/02: A serial number of current failure/ total quantity of failure.

This example shows one of two failures.

B. Past failure information

Memorized record of past failure is displayed (Failure code, failure contents).

When a number of failures are produced, failure information can be checked by using "PRV" (▲, 1 on Figure 18) or "NXT" (▼, 2 on Figure 18) button.

NOTE: *" N: xxx " : "xxx" means that the totally counted number of the same failure.*

" xxxx Hr " : It will display the operation hour until the failure is generated. (Above example screen shows that breaking of a wire of pressure solenoid valve is generated at 75Hr.)

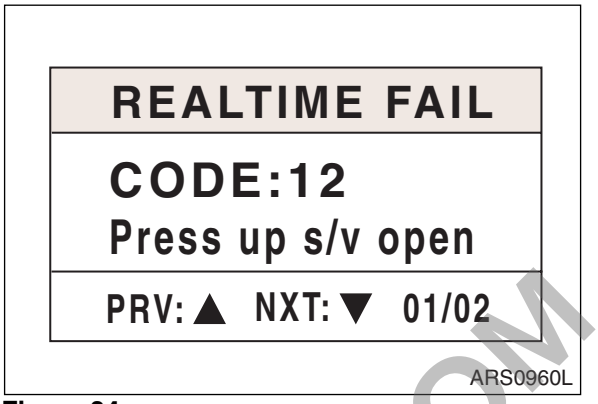


Figure 34

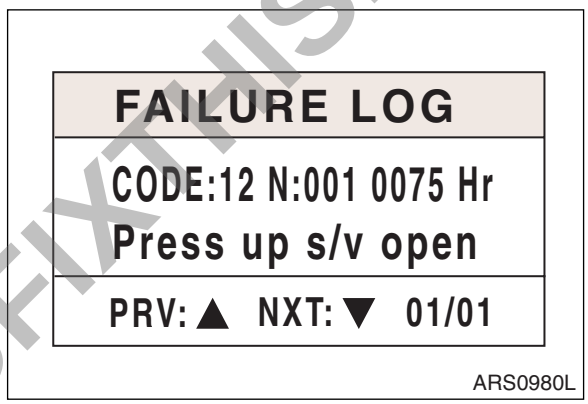


Figure 35

PREVIEW: YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 25 of 633 pages

The full manual includes:

- All 633 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Terex TXC 225LC-1 Shop Manual

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual