
How to read this Parts Catalog.

1. Parts mentioned in this Parts Catalog may not necessarily be standard equipping parts.
2. Parts change may be made without prior notice.
3. Form of this Parts Catalog.

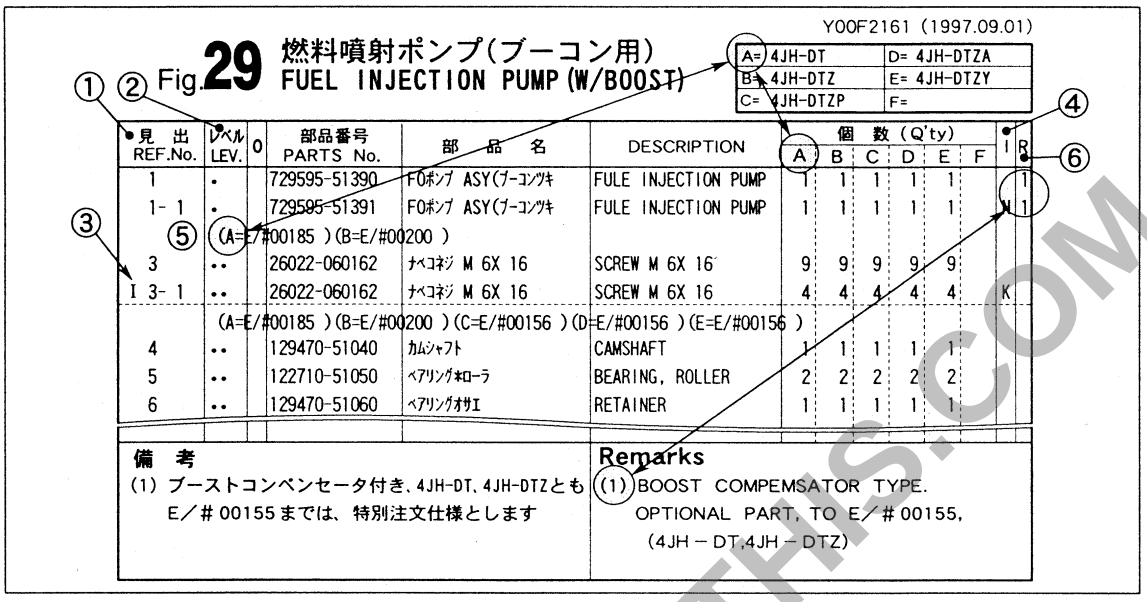

Y00F2161 (1997.09.01)

Fig. 29 燃料噴射ポンプ(ブーコン用)
FUEL INJECTION PUMP (W/BOOST)

A=	4JH-DT	D=	4JH-DTZA
B=	4JH-DTZ	E=	4JH-DTZY
C=	4JH-DTZP	F=	

●見出 REF.No.	レベル LEV.	0	部品番号 PARTS No.	部品名	DESCRIPTION	個数 (Q'ty) A	B	C	D	E	F	I	R
1	•		729595-51390	FOポンプ ASY(ブーコンツキ	FULE INJECTION PUMP	1	1	1	1	1			1
1- 1	•		729595-51391	FOポンプ ASY(ブーコンツキ	FULE INJECTION PUMP	1	1	1	1	1		N	1
⑤	(A=E/#00185)(B=E/#00200)												
3	••		26022-060162	ナベコネジ M 6X 16	SCREW M 6X 16	9	9	9	9	9			
I 3- 1	••		26022-060162	ナベコネジ M 6X 16	SCREW M 6X 16	4	4	4	4	4		K	
	(A=E/#00185)(B=E/#00200)(C=E/#00156)(D=E/#00156)(E=E/#00156)												
4	••		129470-51040	カムシャフト	CAMSHAFT	1	1	1	1	1			
5	••		122710-51050	ベアリング*ローラ	BEARING, ROLLER	2	2	2	2	2			
6	••		129470-51060	ベアリングオサエ	RETAINER	1	1	1	1	1			

備考
(1) ブーストコンペンセータ付き、4JH-DT、4JH-DTZとも E／#00155までは、特別注文仕様とします

Remarks
(1) BOOST COMPEMSATOR TYPE. OPTIONAL PART, TO E／#00155, (4JH－DT,4JH－DTZ)

① Ref. No.

The Ref. No. in the list may not be accord with the Ref. No. on illustration.

(Ex.) Illustration No. 1 — List head No. 1 (Befor change) ⟶ 1 −1 (After change)

When interchangeable symbol N, R, and K, illustrations for new parts are sometimes omitted.

② Lev.(Level)

Indication and Meaning of Level

Level : Hereunder is given the relation among the number of dots(•),the level and the nominal parent- child relationship.

- • ……Parent parts(Assembly parts)
- •• ……Child parts included in "•" (Semi- Assembly parts,component parts of Assembly parts.)
- ••• ……Child parts included in "••", Grand- child parts in terms of "•". (Compornent parts of Semi- Assembly parts.)

Note) A parts of non- sale parts are illustlated but not listed.

③ Change Mark

Change Mark "I" is given to the part for which a desigh change was made at this time.
The design change was not shown in the last published Parts Catalog.

④ Interchangeability Mark

In the case where a part change took place,one of the following interchangeability marks is indicated for that part.

Symbol	interchangeability	Contents note
N	Old ⟶ New	New Part is interchangeable for Old Part but not interchangeable conversely.
Q	Old ⟶ New	New Part is not interchangeable for Old Part but interchangeable conversely.
R	Old ⟷ New	New Part is interchangeable for Old Part and vice versa.
S	Old ⟷ New	New Part is not interchangeable for Old Part and vice versa.
W		Part newly added.
Z		Part discontinued.
F		Not interchangeable single part but interchangeable by set of the related parts.
K		Changed only in quantity used.

⑤ Effective Machine No.

When a part is changed,Effective Machine No. of a Model for which the part is applicable is indication in each column of (A)- (F).

Product Symbol	Product No.	Product Symbol	Product No.
C	Clutch No. Compressor No.	M	Machine No.
D	Drive No.	T	Tractor No.
E	Engine No.	Note1) ※	Date

Note1) Date may follow the symbol in some cases. (Ex.) ※1996.01
Note2) As far as engine models shown by "XXX" are concerned, the modification of the parts could not be predicted or the engine models themselves could not be identified.
Note3) (A=E/#00185) means that the design change on the part has been effective for the model at the column (A)(in this case, for 4JH- DT) on and from E/#(Engine Serial Number) 00185.

⑥ Remarks Mark

Figures or alphabets (Symbols) are entered in the remark column.
The comments(remarks)on the pertinent parts are indicated in the lower part of the list by the same symbols as those stated above.

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

NAME	PAGE
CYLINDER BLOCK	Fig. 1
GEAR HOUSING	Fig. 2
FLYWHEEL HOUSING & OIL SUMP	Fig. 3
CYLINDER HEAD & BONNET	Fig. 4
SUCTION MANIFOLD & AIR CLEANER	Fig. 5
EXHAUST MANIFOLD & SILENCER	Fig. 6
CAMSHAFT & DRIVING GEAR	Fig. 7
CRANKSHAFT & PISTON	Fig. 8
LUB. OIL SYSTEM	Fig. 9
COOLING WATER SYSTEM	Fig. 10
FUEL INJECTION PUMP	Fig. 11
GOVERNOR	Fig. 12
FUEL INJECTION VALVE	Fig. 13
FUEL LINE	Fig. 14
STARTING MOTOR	Fig. 15
GENERATOR	Fig. 16
GASKET SET & TOOLS	Fig. 17

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

NUMERICAL INDEX

Part number	Page	Item
11960011450	4	22
101304-59020	14	31
101720-55750	14	44
102103-55520	14	8
	14	39
103954-13201	6	10
	17	31
104200-55321	14	35
104200-55330	14	5
	14	36
104200-55341	14	37
104200-55750	14	12
	14	45
104200-59170	14	22
	17	17
104200-92350	17	32
104264-59030	14	26
	14	29
105010-11230	4	32
	4	36
105025-59550	13	42
105027-12540	5	8
105027-12570	5	7
105546-51330	11	24
105582-59150	14	21
110250-55610	14	9
	14	40
114250-11120	4	16
114250-11180	4	17
114250-53130	13	11
114250-53400	13	13
114371-77110	15	5
114371-77140	15	6
114371-77160	15	7
114371-77170	15	11
114371-77180	15	2
114371-79040	15	8
114371-79050	15	9
114371-79060	15	10
114371-79070	15	17
119000-59560	13	43
119131-18320	6	5
119209-35030	9	7
	17	24
119225-51100	11	3
119225-51300	11	21
119230-59031	14	30
119230-59080	14	33
119232-13500	6	8
119232-61540	12	44
119233-12210	5	10
119233-12610	5	11
119244-50920	14	25
119254-12500	5	5
119255-53100	13	7
119255-55620	14	4
119260-02020	1	6
119260-02800	1	19
119260-02930	1	22
119260-11110	4	15
119260-11200	4	24
119260-11240	4	25
119260-11260	4	28
119260-11270	4	29
119260-11280	4	30
119260-11340	4	20
	17	5
119260-11370	4	21
119260-11800	4	8
119260-13100	6	1
119260-13110	6	2
	17	10
119260-14100	7	7
119260-14200	7	1
119260-14400	7	2
119260-14580	7	3
119260-25100	7	10
119260-59520	13	40
119260-59530	13	41
119263-26001	2	55
119263-26201	2	56
119265-11260	4	40
119265-22300	8	23
119265-22500	8	17
119265-22950	8	35
119265-23100	8	25
119265-23200	8	30
119266-01200	1	25
119266-01330	1	26
	17	2
119266-01580	2	5
119266-01840	2	30
119266-01870	2	47
	17	28
119266-01880	2	36
119266-01890	2	37
	17	16
119266-01900	7	16
119266-01910	2	15
119266-02410	1	16
119266-03200	4	49
119266-03210	4	50
	17	4
119266-11100	4	14
119266-11310	4	52
	17	8
119266-11390	4	48
119266-11530	4	44
119266-11710	4	4
119266-12580	5	12
119266-13580	6	7
119266-14200	7	17
119266-21200	8	5
119266-21560	8	12
119266-21660	8	8
119266-21700	8	1
119266-22900	8	33
119266-25050	7	9
119266-25900	7	22
119266-32000	2	8
119266-35310	9	4
119266-42020	10	8
	17	12
119266-42050	10	13
119266-42100	10	1
119266-49350	10	25
119266-59501	13	47
119266-59540	13	38
119266-59570	13	48
119266-59580	13	49
119266-59811	13	25
119266-59821	13	29
119266-59831	13	33
119266-61100	12	5
119266-61200	12	16
119266-61230	12	12
119266-61510	12	29
119266-61650	12	47
119266-77330	16	15
119270-12110	5	2
	17	9
119275-01770	3	6
119275-12100	5	1
119275-35080	9	6
119285-66080	12	53
119285-66500	12	65
119305-35150	9	3
119326-22081	8	15
119332-92751	17	33
119462-26010	2	50
119462-59190	14	17
119600-11460	4	23
	17	6
119600-61200	12	6
119600-61541	12	45
119600-61900	12	51
119600-66020	12	62
119600-66530	12	70
119600-66840	12	102
119610-66700	12	76
119620-01800	2	4
119620-02450	7	4
119620-11080	4	11
119620-11350	4	57
119620-21941	8	10
119620-23910	8	29
119620-25912	7	12
119620-42291	10	16
119620-51170	11	6
119620-51180	11	7
119620-51190	11	8
119620-51250	11	9
119620-51340	11	25
119620-51350	11	26
119620-51370	11	27
119620-51450	11	28
119620-51461	11	29
119620-51510	11	31
119620-51650	11	33
119620-51660	11	34
119620-51670	11	35
119620-51680	11	36
119620-51700	11	37
119620-53000	13	3
119620-53080	13	6
119620-53120	13	10
119620-53140	13	12
119620-59700	13	46
119620-77820	4	56
119621-21680	8	9
119623-01950	2	39
119624-01600	3	2
119624-01740	2	13
119624-01750	2	14
	17	27
119626-07900	4	2
119631-77011	15	1
119631-77651	15	12
119631-77780	15	16
119632-44520	10	36

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

ｼﾘﾝﾀﾞﾌﾞﾛｯｸ　CYLINDER BLOCK

見出 REF NO.	部品番号 PARTS NO.	部品名	Description	数量 Q'ty	互換性 I	R	備考
1	719266-01560	ｼﾘﾝﾀﾞﾌﾞﾛｯｸASSY	BLOCK ASSY, CYLINDER	1			
5	124060-01050	・ﾌﾟﾗｸﾞ PT1/8	・PLUG PT1/8	2			
6	119260-02020	・ﾎﾞﾙﾄ (ﾒﾀﾙｷｬｯﾌﾟ	・BOLT	8			
11	27221-060100	・ｳﾁｺﾐﾌﾟﾗｸﾞ 6X10	・PLUG 6X10	1			
12	27231-400000	・ｻﾗｶﾞﾀﾌﾟﾗｸﾞ 40	・PLUG 40	1			
13	27241-100000	・ﾜﾝｶﾞﾀﾌﾟﾗｸﾞ 10	・PLUG 10	2			
14	27241-250000	・ﾜﾝｶﾞﾀﾌﾟﾗｸﾞ 25	・PLUG 25	3			
15	27241-300000	・ﾜﾝｶﾞﾀﾌﾟﾗｸﾞ 30	・PLUG 30	4			
16	119266-02410	・ﾌﾞｯｼｭ	・BUSH	1			
17	22190-080002	・ｼｰﾙﾜｯｼｬ (ｺﾏﾙ. ﾆﾄﾘﾙ) 8	・SEAL WASHER 8S	1			
18	26106-080122	・ﾂﾊﾞﾎﾞﾙﾄ 8X12	・BOLT M8X12 PLATED	1			
19	119260-02800	・ﾒｲﾝﾍﾞｱﾘﾝｸﾞ (YSM)	・MAIN BEARING	4			
22	119260-02930	・ｽﾗｽﾄﾍﾞｱﾘﾝｸﾞ (YSM)	・THRUST BEARING	2			
25	119266-01200	ﾍｯﾄﾞﾎﾞﾙﾄ	STUD, CYL. HEAD	14			
26	119266-01330	ﾍｯﾄﾞｶﾞｽｹｯﾄ	GASKET, CYL. HEAD	1			
27	26106-060122	ﾂﾊﾞﾎﾞﾙﾄ M6X12	BOLT M6X12 PLATED	2			
28	719260-02870	ﾒｲﾝﾍﾞｱﾘﾝｸﾞ U.S=0.25	MAIN BEARING US=0.25	4		(1)	ｱﾝﾀﾞｰｻｲｽﾞ(U.S=0.25)ﾌﾞﾋﾝﾃﾞｽ.


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

CYLINDER BLOCK

Y00D6550
3TNE68-NTB

1 シリンダブロック
CYLINDER BLOCK

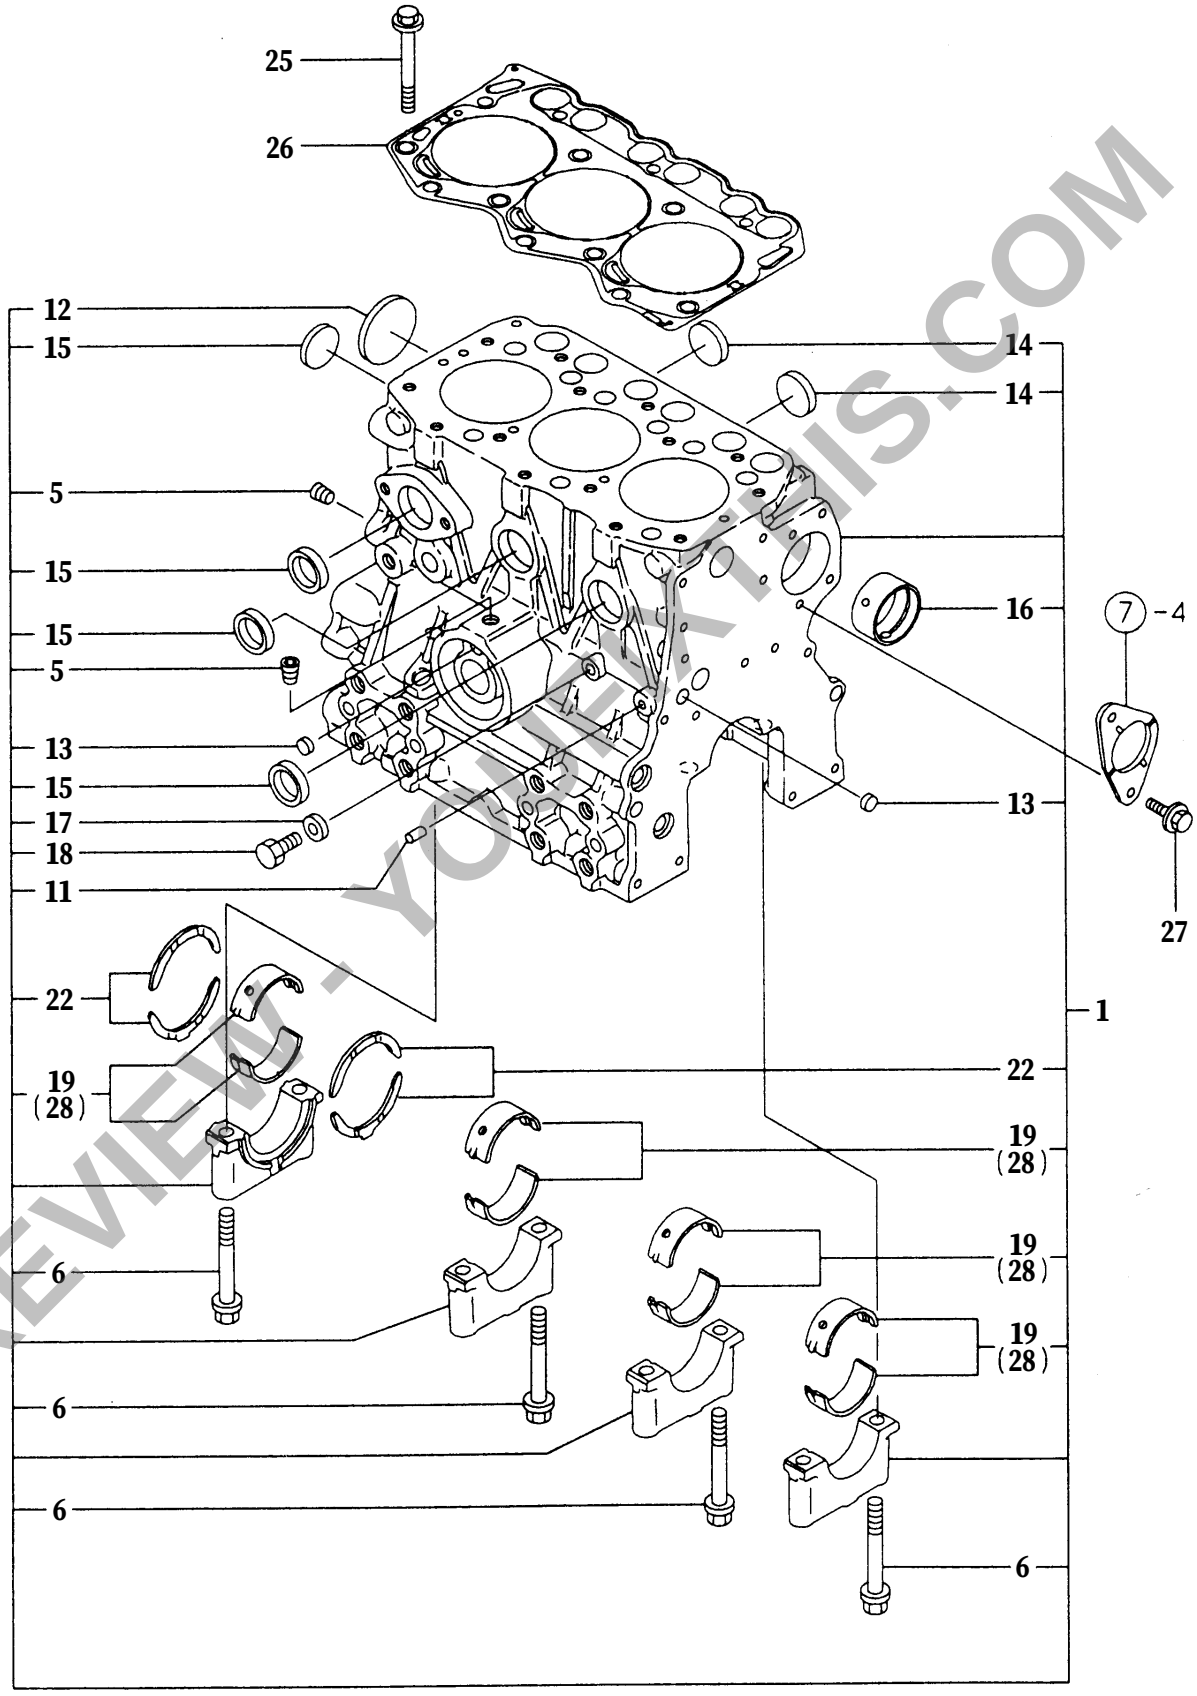


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Y00D6550
3TNE68-NTB

13 FOフンシャベン
FUEL INJECTION VALVE

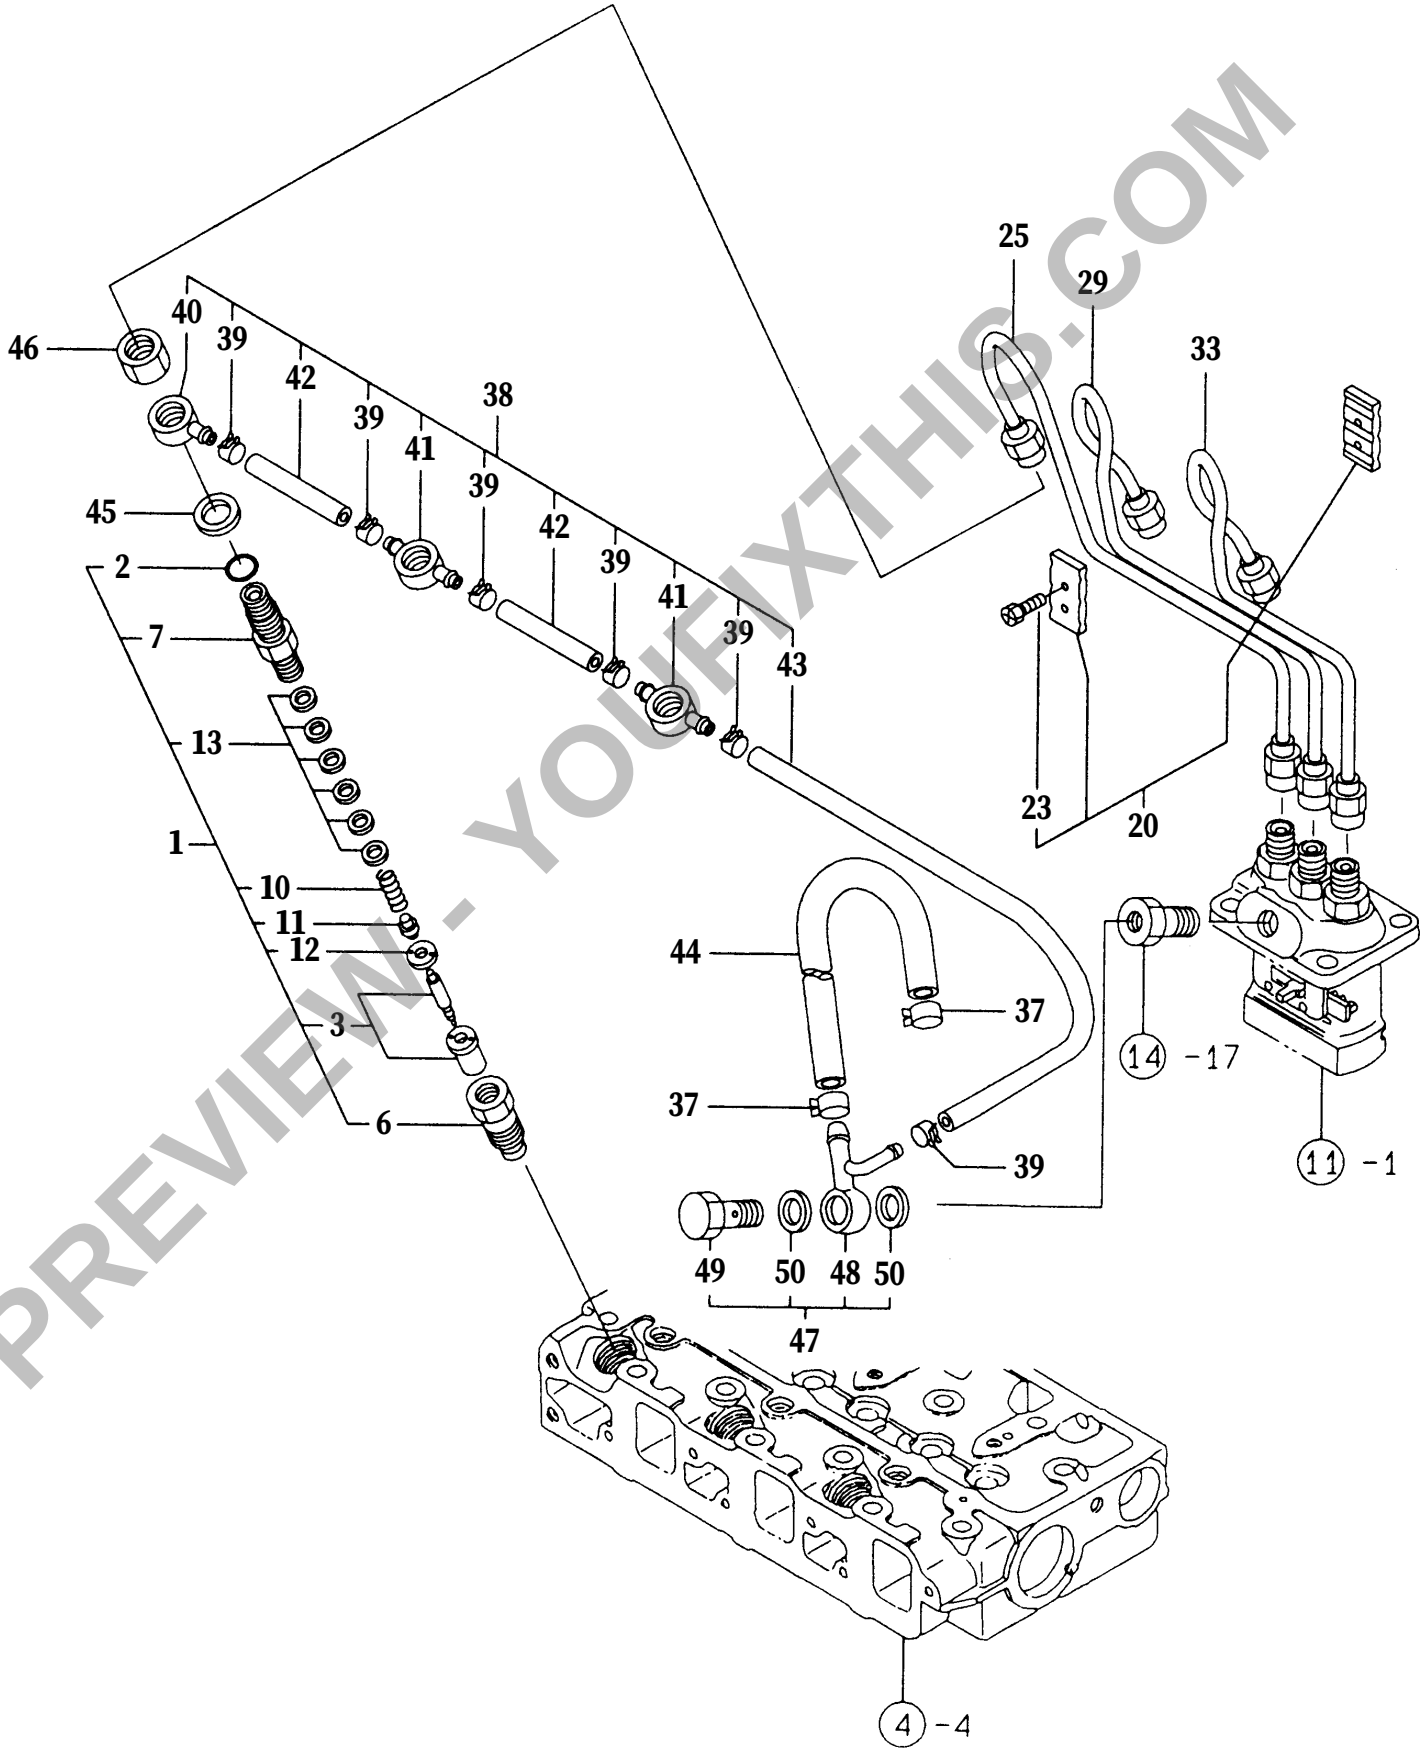


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Y00D6701
3TNE68-(E) TB1

5 キュウキマニホールド & エアクリーナ
SUCTION MANIFOLD & AIR CLEANER

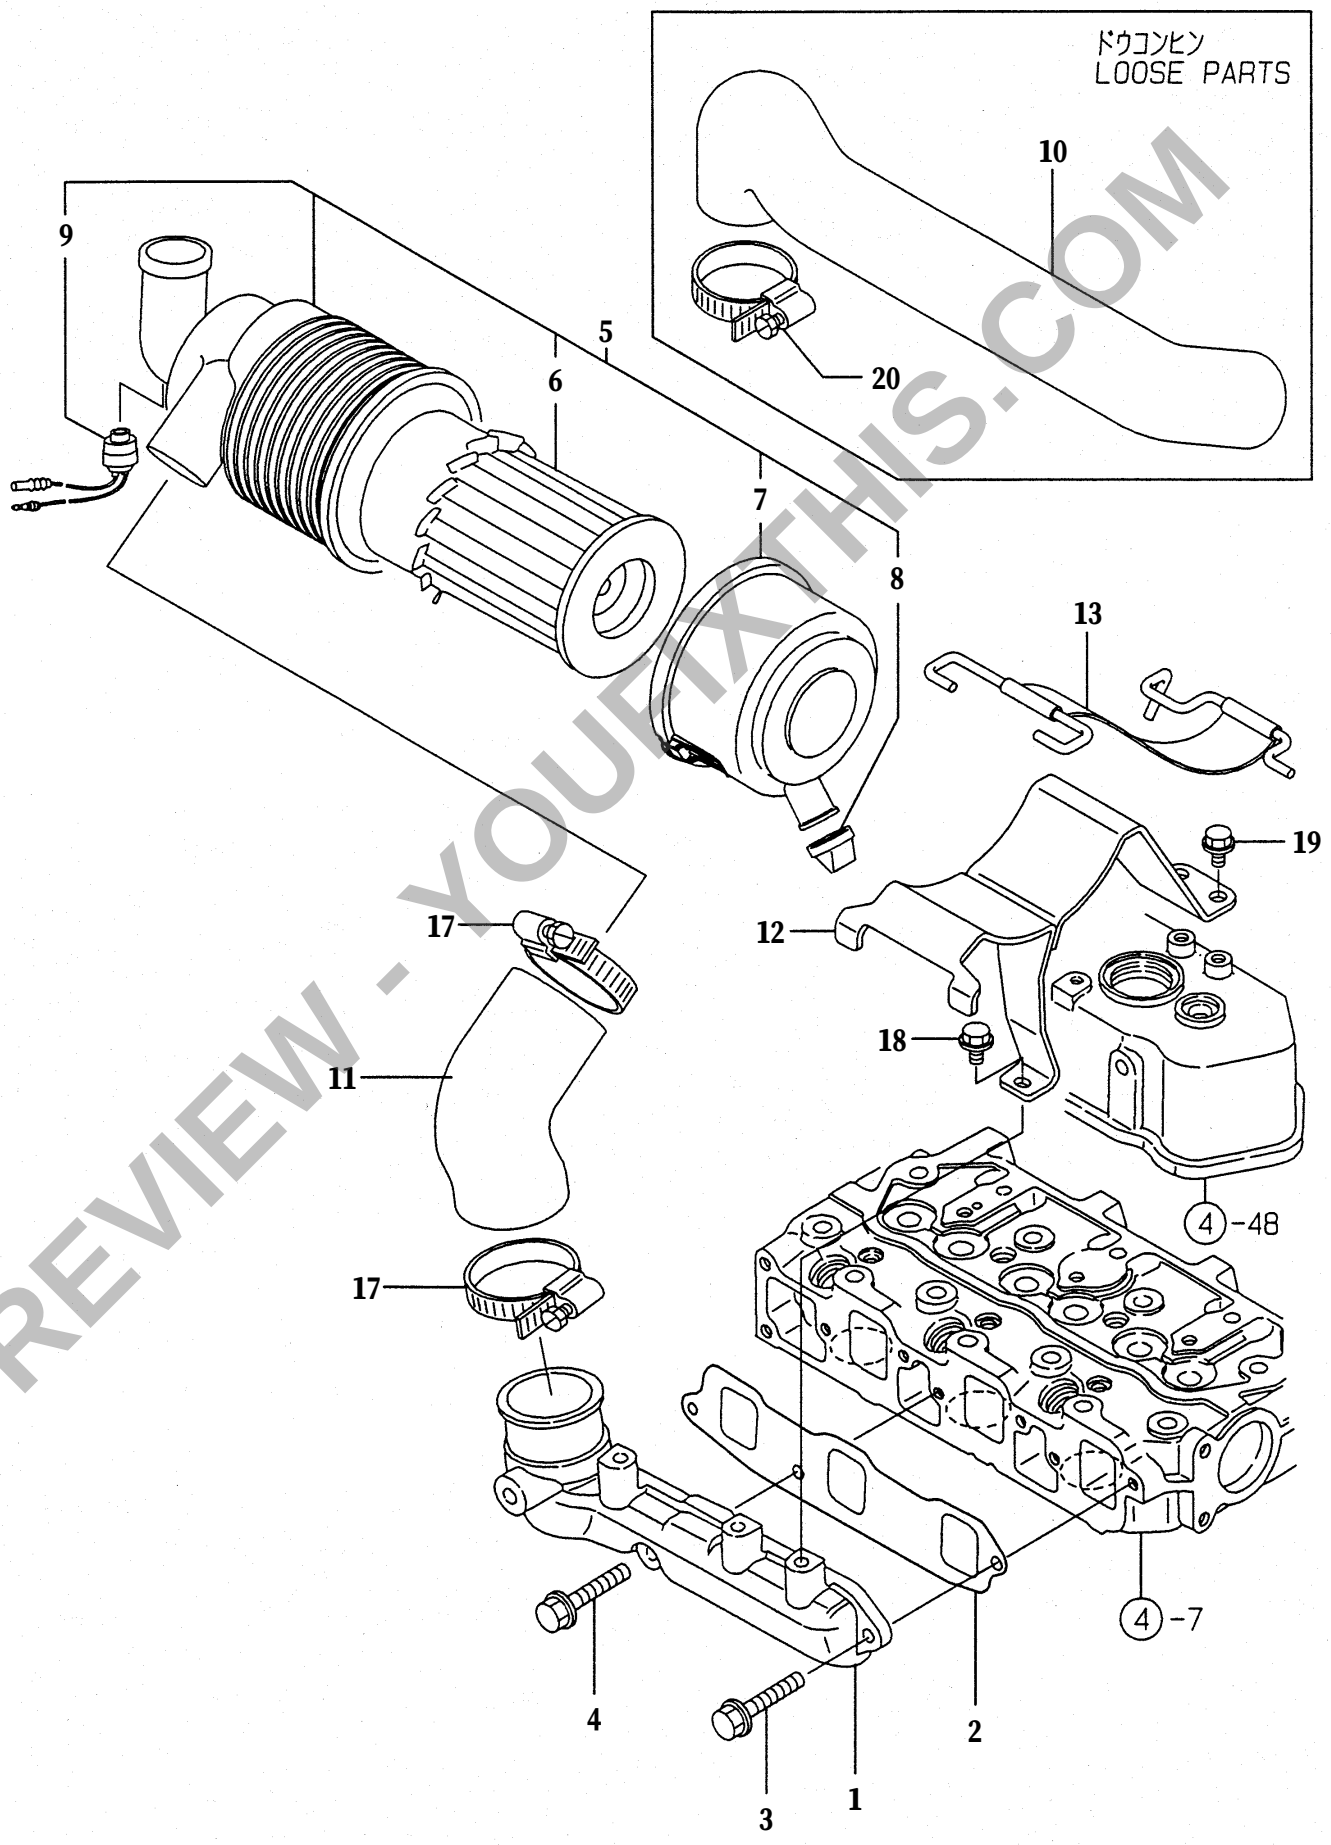

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 7 of 80 pages

The full manual includes:

- All 80 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Yanmar 3TNE68-NTB, 3TNE68-TB1, ETB1, TB014, TB016, Y00D6550 Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual