
パーツカタログの見方

1. このパーツカタログに記載されている部品は、必ずしも標準装備部品ではありません。
2. 部品変更は、予告なく行うことがあります。
3. パーツカタログリスト様式

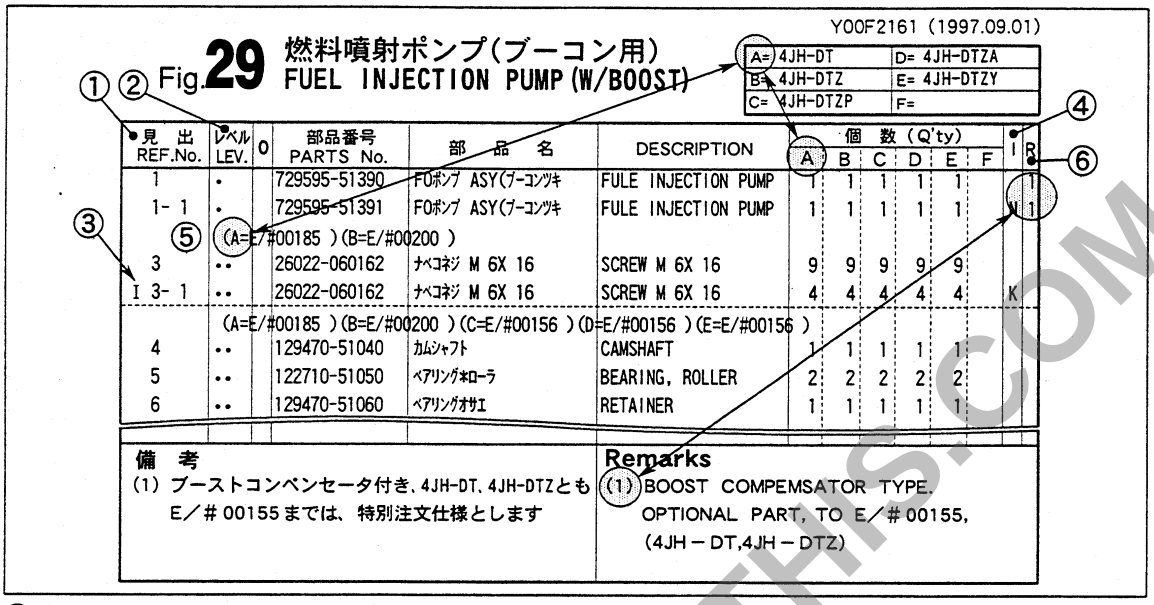

Y00F2161 (1997.09.01)

Fig.29 燃料噴射ポンプ(ブーコン用)
FUEL INJECTION PUMP (W/BOOST)

A=	4JH-DT	D=	4JH-DTZA
B=	4JH-DTZ	E=	4JH-DTZY
C=	4JH-DTZP	F=	

●見出 REF.No.	レベル LEV.	0	部品番号 PARTS No.	部品名	DESCRIPTION	個数 (Q'ty) A	B	C	D	E	F	I	R
1	•		729595-51390	FOポンプ ASY(ブーコンツキ	FULE INJECTION PUMP	1	1	1	1	1			
1-1	•		729595-51391	FOポンプ ASY(ブーコンツキ	FULE INJECTION PUMP	1	1	1	1	1		N	1
	(A=E/#00185) (B=E/#00200)												
3	••		26022-060162	ナベコネジ M 6X 16	SCREW M 6X 16	9	9	9	9	9			
I 3-1	••		26022-060162	ナベコネジ M 6X 16	SCREW M 6X 16	4	4	4	4	4		K	
	(A=E/#00185) (B=E/#00200) (C=E/#00156) (D=E/#00156) (E=E/#00156)												
4	••		129470-51040	カムシャフト	CAMSHAFT	1	1	1	1	1			
5	••		122710-51050	ベアリングキローラ	BEARING, ROLLER	2	2	2	2	2			
6	••		129470-51060	ベアリングオサエ	RETAINER	1	1	1	1	1			

備考	Remarks
(1) ブーストコンペンセータ付き、4JH-DT、4JH-DTZとも E／＃00155までは、特別注文仕様とします	(1) BOOST COMPEMSATOR TYPE. OPTIONAL PART, TO E／＃00155, (4JH－DT,4JH－DTZ)

① 見出No.(REF.No.)

リスト頁の見出No.とイラスト図番の末尾が一致しない場合があります。

(例) イラスト図番 リスト頁の見出No.

1 1 (変更前) ⟶ 1 [－1] (変更後)

互換性記号N、R、Kの場合は新部品のイラストを省略している場合があります。

② レベル (LEV.)

レベル

• ……表示している ÿ 印の数をレベルと呼び親子の関係を示します。(•は親部品です)

•• ……は ÿ に含まれる子部品です。

••• ……はÿ•に含まれる子部品 (•から見れば孫部品) です。

注) 非販売部品のイラストは一部展開しておりますが、リストには記載しておりません。

③ 変更マーク

前回出版したパーツカタログには無く、今回新規に設計変更が発生した部品について"Ｉ"印が表示されます。

④ 互換性区分

部分変更が行われた場合、その部品に対して下記の互換性記号が表示されます。

記号	互換性	内容
N	旧 ⟵⊗ 新	新部品は、旧部品に対して互換性有り、その逆は無し。
Q	旧 ⊗⟶ 新	新部品は、旧部品に対して互換性無し、その逆は有り。
R	旧 ⟵○ 新	新・旧部品双方に対して互換性有り。
S	旧 ⊗⟶ 新	新・旧部品双方に対して互換性無し。
W		新規追加となった部品。
Z		廃止された部品。
F		単品では、互換性無し。但し関連部品セットにて互換性有り。
K		使用個数のみの変更。

⑤ 実施号機

部品が変更された時には、適用される商品形式の実施号機が (A) ～ (F) 欄毎に表示されます。

商品記号	商品 No.	商品記号	商品 No.
C	クラッチNo. コンプレッサNo.	M	本機No.
D	ドライブNo.	T	トラクタNo.
E	エンジンNo.	注1)※	西暦年月

注1) 記号の後の西暦年月を記載している事もあります。(例) ※1996. 01

注2) 実施号機が×××は、部品変更の予告又は、実施号機が確定できなかった部品です。

注3) (A＝E／＃00185)は、A欄の商品形式(＝4JH－DT)の部品変更実施号機は、E／＃(＝エンジンNo.)が00185号機以降であることを示します。

⑥ 備考(リマークス)区分

R …… 欄に数字又は、英字 (記号) を表示してあります。

リスト下段に上記の記号と同一記号を表記して当該部品に対するコメント(備考)を表示しています。

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

目次 CONTENSTS

コウモクNO. GROUP	コウモク メイ	GROUP NAME
1	シリンダ゛ブ゛ロック	CYLINDER BLOCK
2	キ゛ヤケース	GEAR HOUSING
3	フライホイルハウシ゛ング゛ & オイルパ゜ン	FLYWHEEL HOUSING & OIL SUMP
4	シリンダ゛ヘツト゛ & ボ゛ンネツト	CYLINDER HEAD & BONNET
5	キユウキマニホールト゛ & エアクリーナ	SUCTION MANIFOLD & AIR CLEANER
6	ハイキマニホールト゛ & サイレンサ	EXHAUST MANIFOLD & SILENCER
7	カムシヤフト & クト゛ウキ゛ヤ	CAMSHAFT & DRIVING GEAR
8	クランクシヤフト & ピ゜ストン	CRANKSHAFT & PISTON
9	LOシステム	LUB.OIL SYSTEM
10	CWシステム	COOLING WATER SYSTEM
11	FOフンシヤポ゜ンフ゜	FUEL INJECTION PUMP
12	カ゛バナ	GOVERNOR
13	FOフンシヤヘ゛ン	FUEL INJECTION VALVE
14	FOハ゜イフ゜	FUEL LINE
15	スターテイング゛モータ	STARTING MOTOR
16	シ゛エネレータ	GENERATOR
17	ハ゜ツキンセツト	GASKET SET


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

CYLINDER BLOCK

Y00D6942
3TNE82A-(E) TB(Z)

1 シリンダブロック
CYLINDER BLOCK

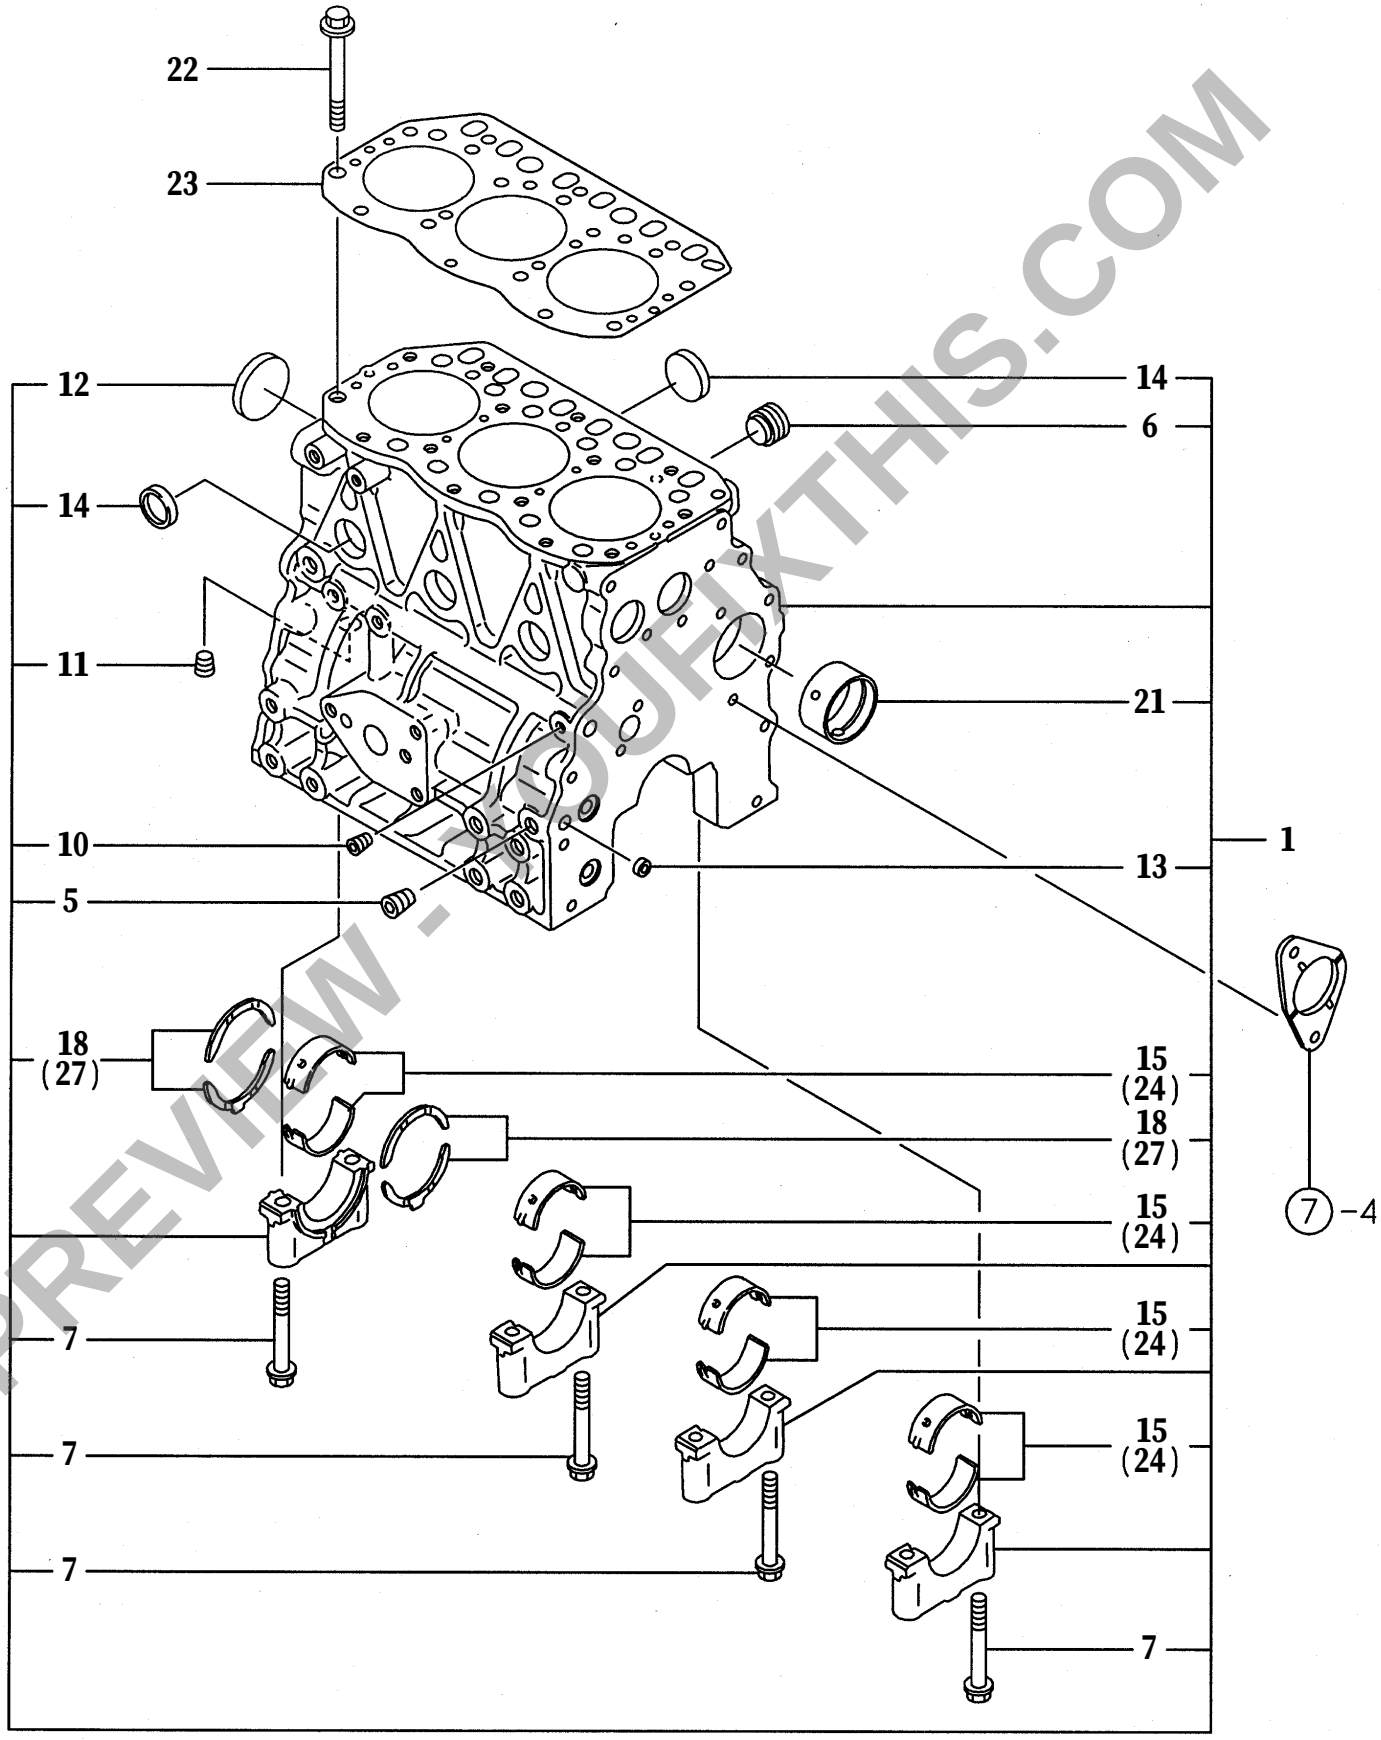


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Y00D6942
3TNE82A- (E) TB (Z)

6 ハイキマニホールド & サイレンサ
EXHAUST MANIFOLD & SILENCER

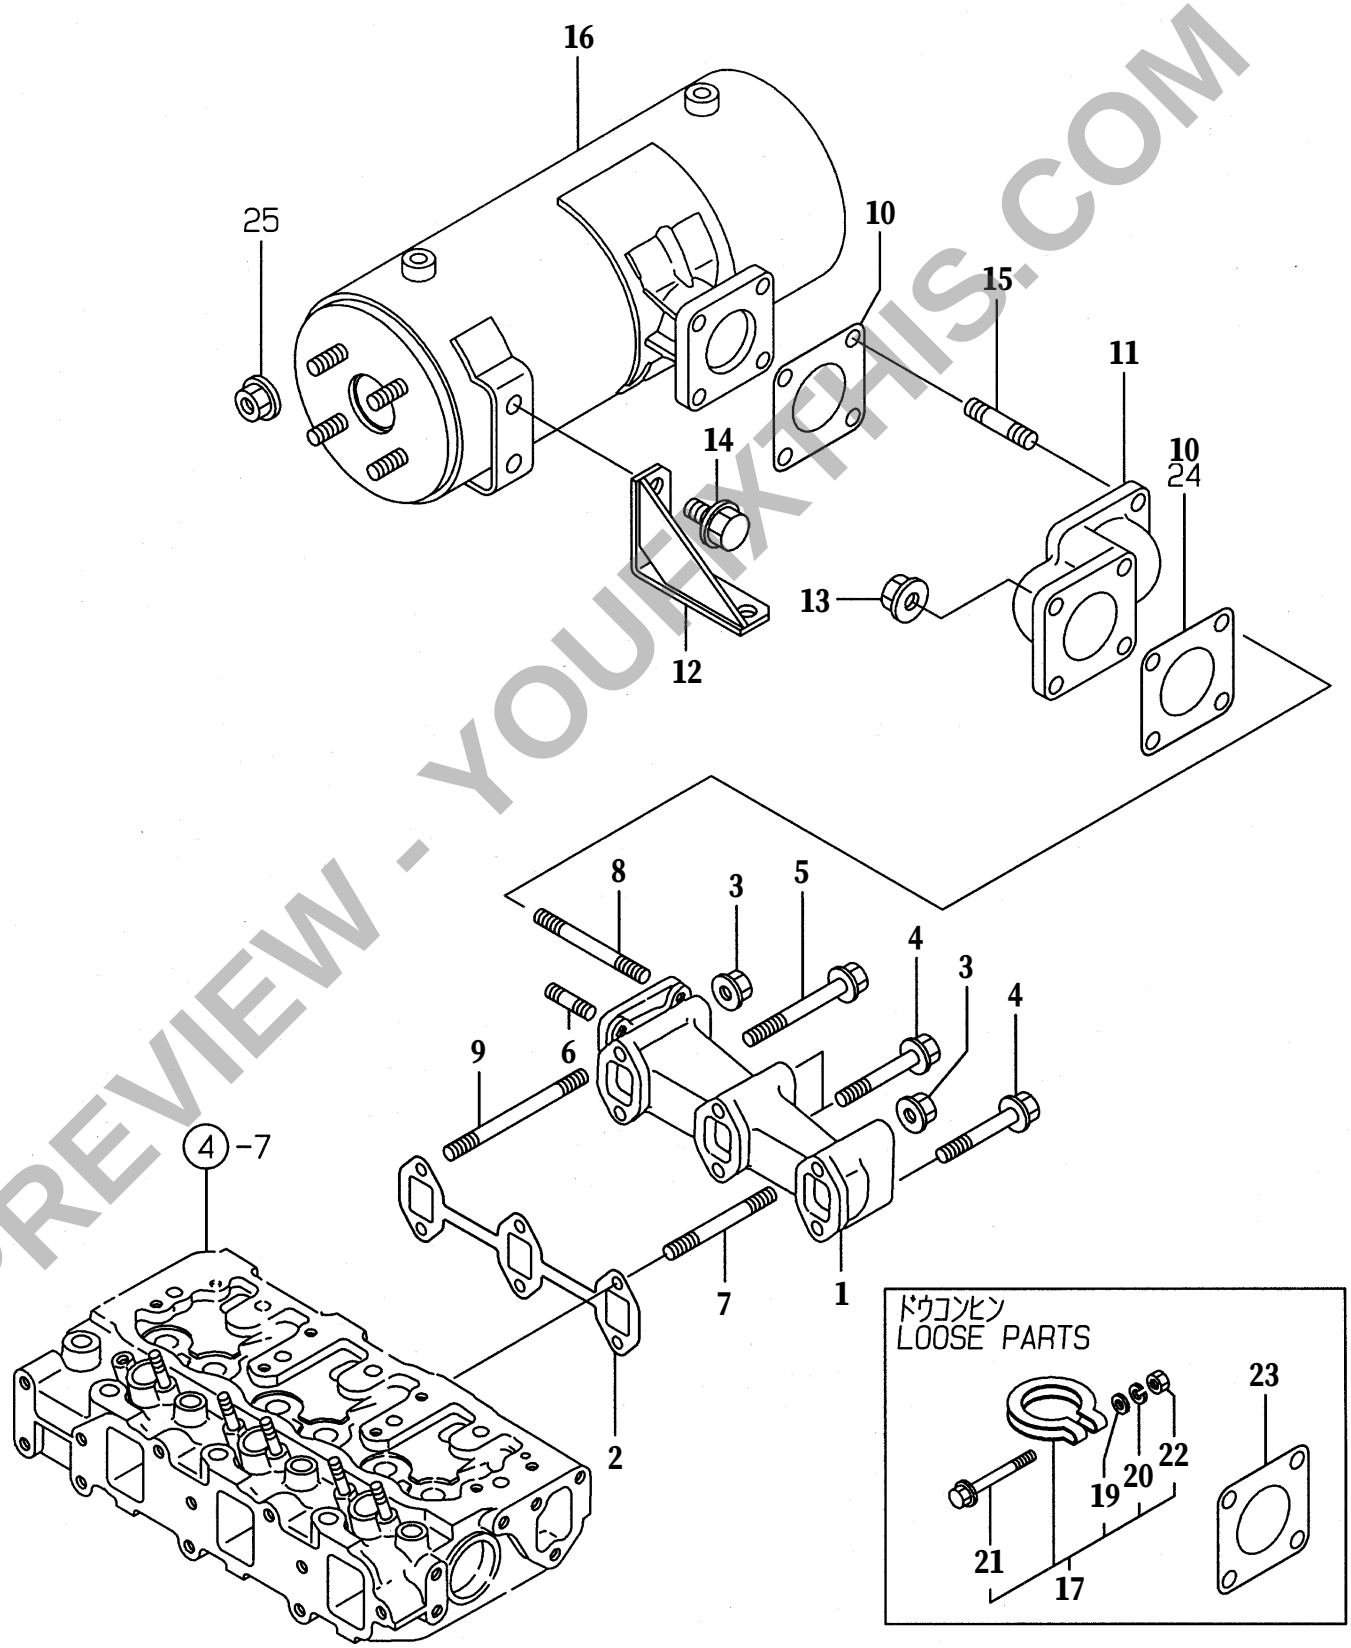


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Y00D6942
3TNE82A- (E) TB (Z)

15 スターティングモータ STARTING MOTOR

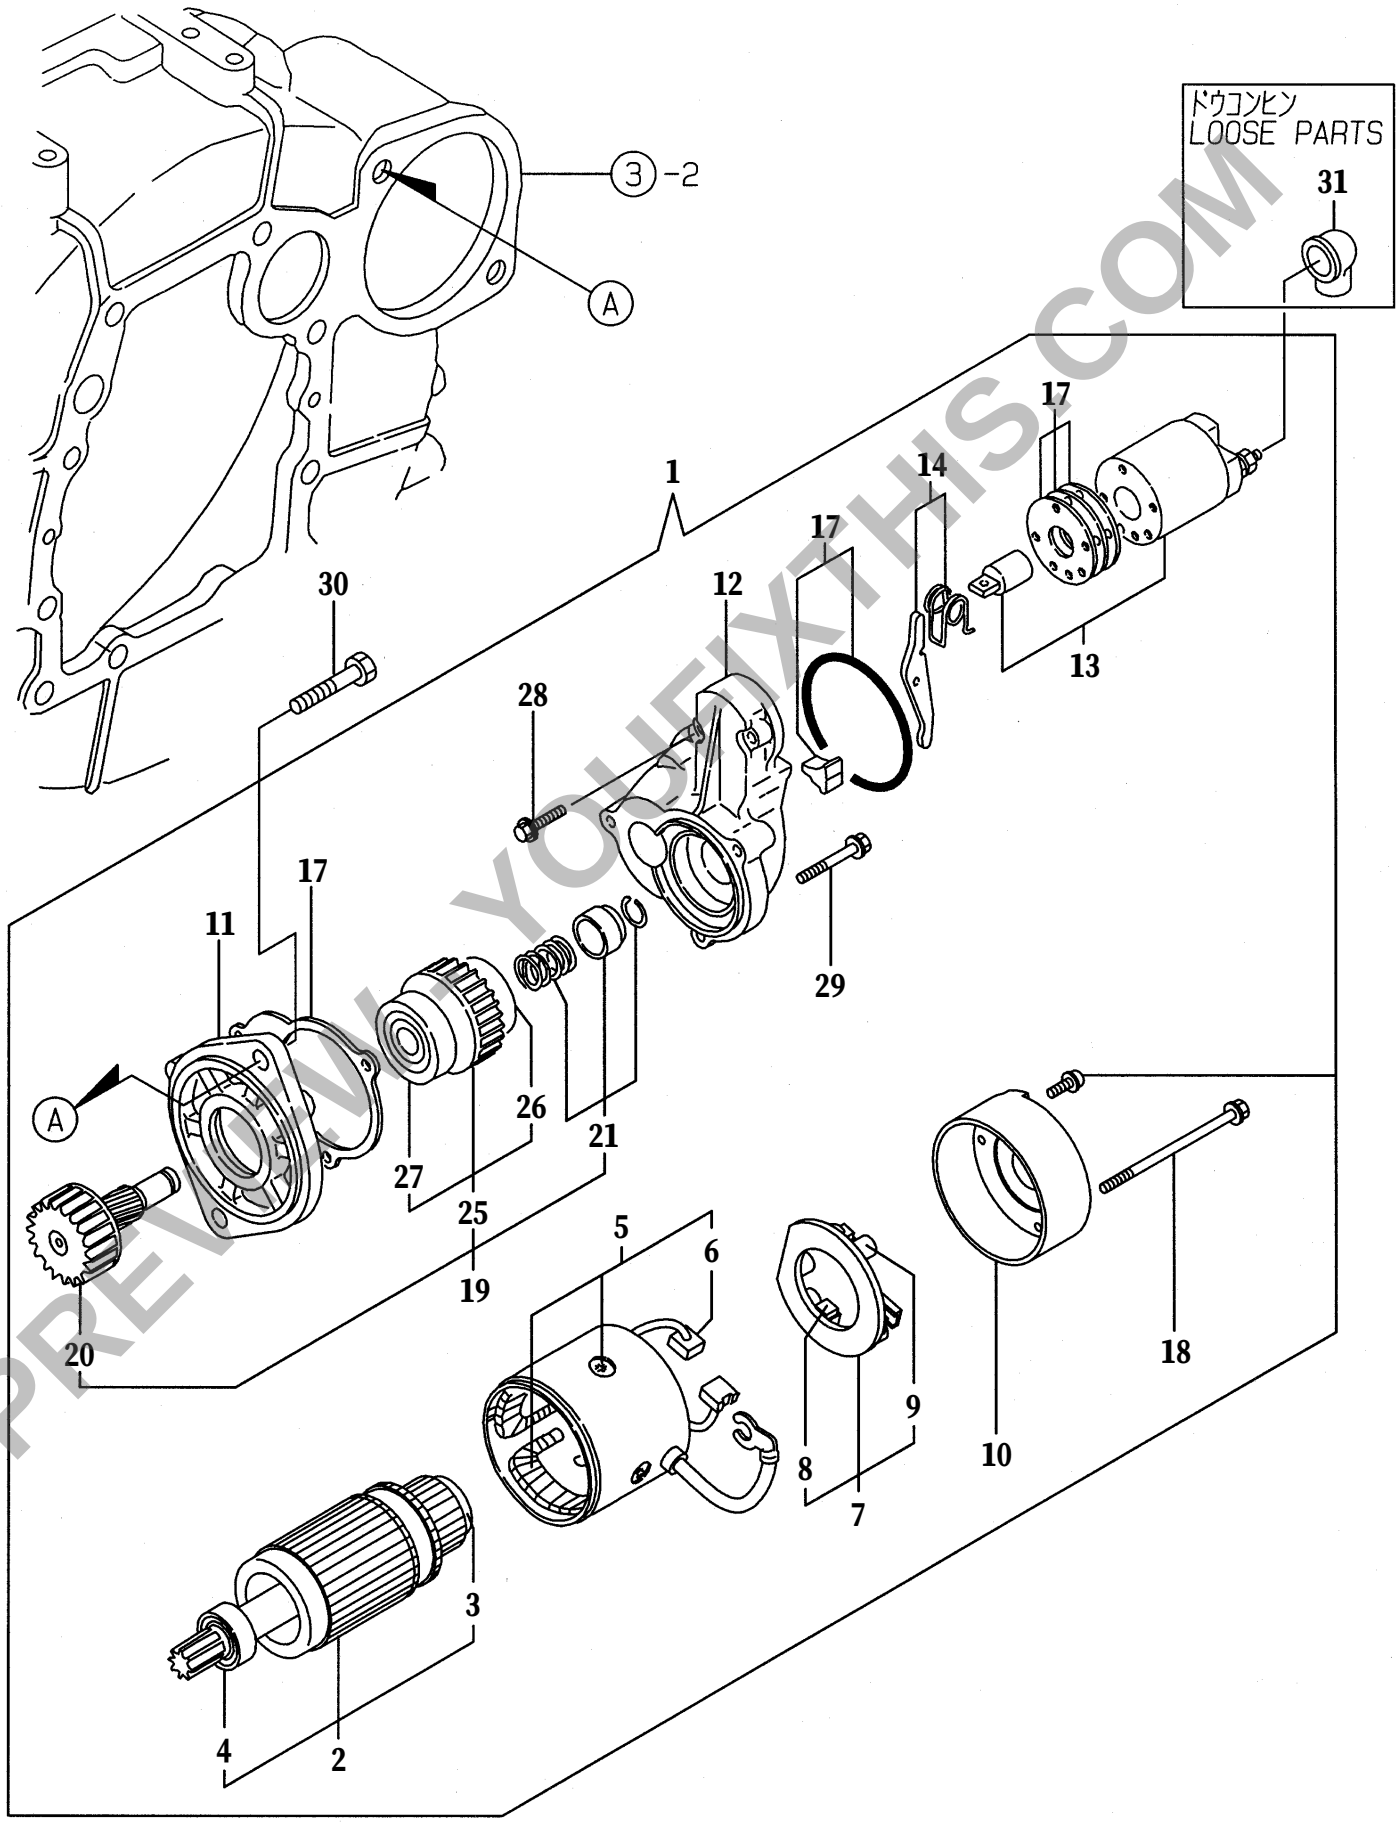

PREVIEW ONLY YOUFIXTHIS.COM

Download full manual at youfixthis.com

ｼﾘﾝﾀﾞﾌﾞﾛｯｸ　CYLINDER BLOCK


見出 REF NO.	部品番号 PARTS NO.	部品名	Description	数量 Q'ty	互換性 I	互換性 R	備考
1	719813-01560	ｼﾘﾝﾀﾞﾌﾞﾛｯｸASSY	BLOCK ASSY, CYLINDER	1			
5	124160-01910	・ﾌﾟﾗｸﾞ PT1/4	· PLUG PT1/4	2			
6	171051-01921	・ﾌﾟﾗｸﾞ NPTF1	· PLUG	1			
7	119620-02020	・ﾎﾞﾙﾄ (ﾒﾀﾙｷｬｯﾌﾟ	· BOLT	8			
10	23876-010000	・ﾈｼﾞﾌﾟﾗｸﾞPT1/8	· PLUG PT1/8,SCREW	1			
11	124160-01910	・ﾌﾟﾗｸﾞ PT1/4	· PLUG PT1/4	1			
12	129001-01250	・ｻﾗｶﾞﾀﾌﾟﾗｸﾞ 50	· PLUG 50	1			
13	27241-120000	・ﾜﾝｶﾞﾀﾌﾟﾗｸﾞ 12	· PLUG 12	2			
14	27241-300000	・ﾜﾝｶﾞﾀﾌﾟﾗｸﾞ 30	· PLUG 30	6			
15	119810-02800	・ﾒｲﾝﾍﾞｱﾘﾝｸﾞ	· MAIN BEARING	4			
18	119810-02930	・ｽﾗｽﾄﾍﾞｱﾘﾝｸﾞ	· BEARING, THRUST	2			
21	129795-02411	・ﾌﾞｯｼｭ (A	· BUSH, CAMSHAFT	1			
22	119810-01200	ﾍｯﾄﾞﾎﾞﾙﾄ	BOLT, CYL. HEAD	14			
23	119812-01330	ﾍｯﾄﾞｶﾞｽｹｯﾄ	GASKET, HEAD	1			
24	119810-02870	ﾒｲﾝﾍﾞｱﾘﾝｸﾞ U.S=0.25	MAIN BEARING US=0.25	4		(1)	ｱﾝﾀﾞｰｻｲｽﾞ(U.S=0.25)ﾌﾞﾋﾝﾃﾞｽ
27	119810-02940	ｽﾗｽﾄﾒﾀﾙCMP 0.S=0.25	BEARING,THRUST .250S	2		(2)	ｵｰﾊﾞｰｻｲｽﾞ(0.S=0.25)ﾌﾞﾋﾝﾃﾞｽ

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Y00D6942
3TNE82A- (E) TB (Z)

11 FOフンシャポンプ
FUEL INJECTION PUMP

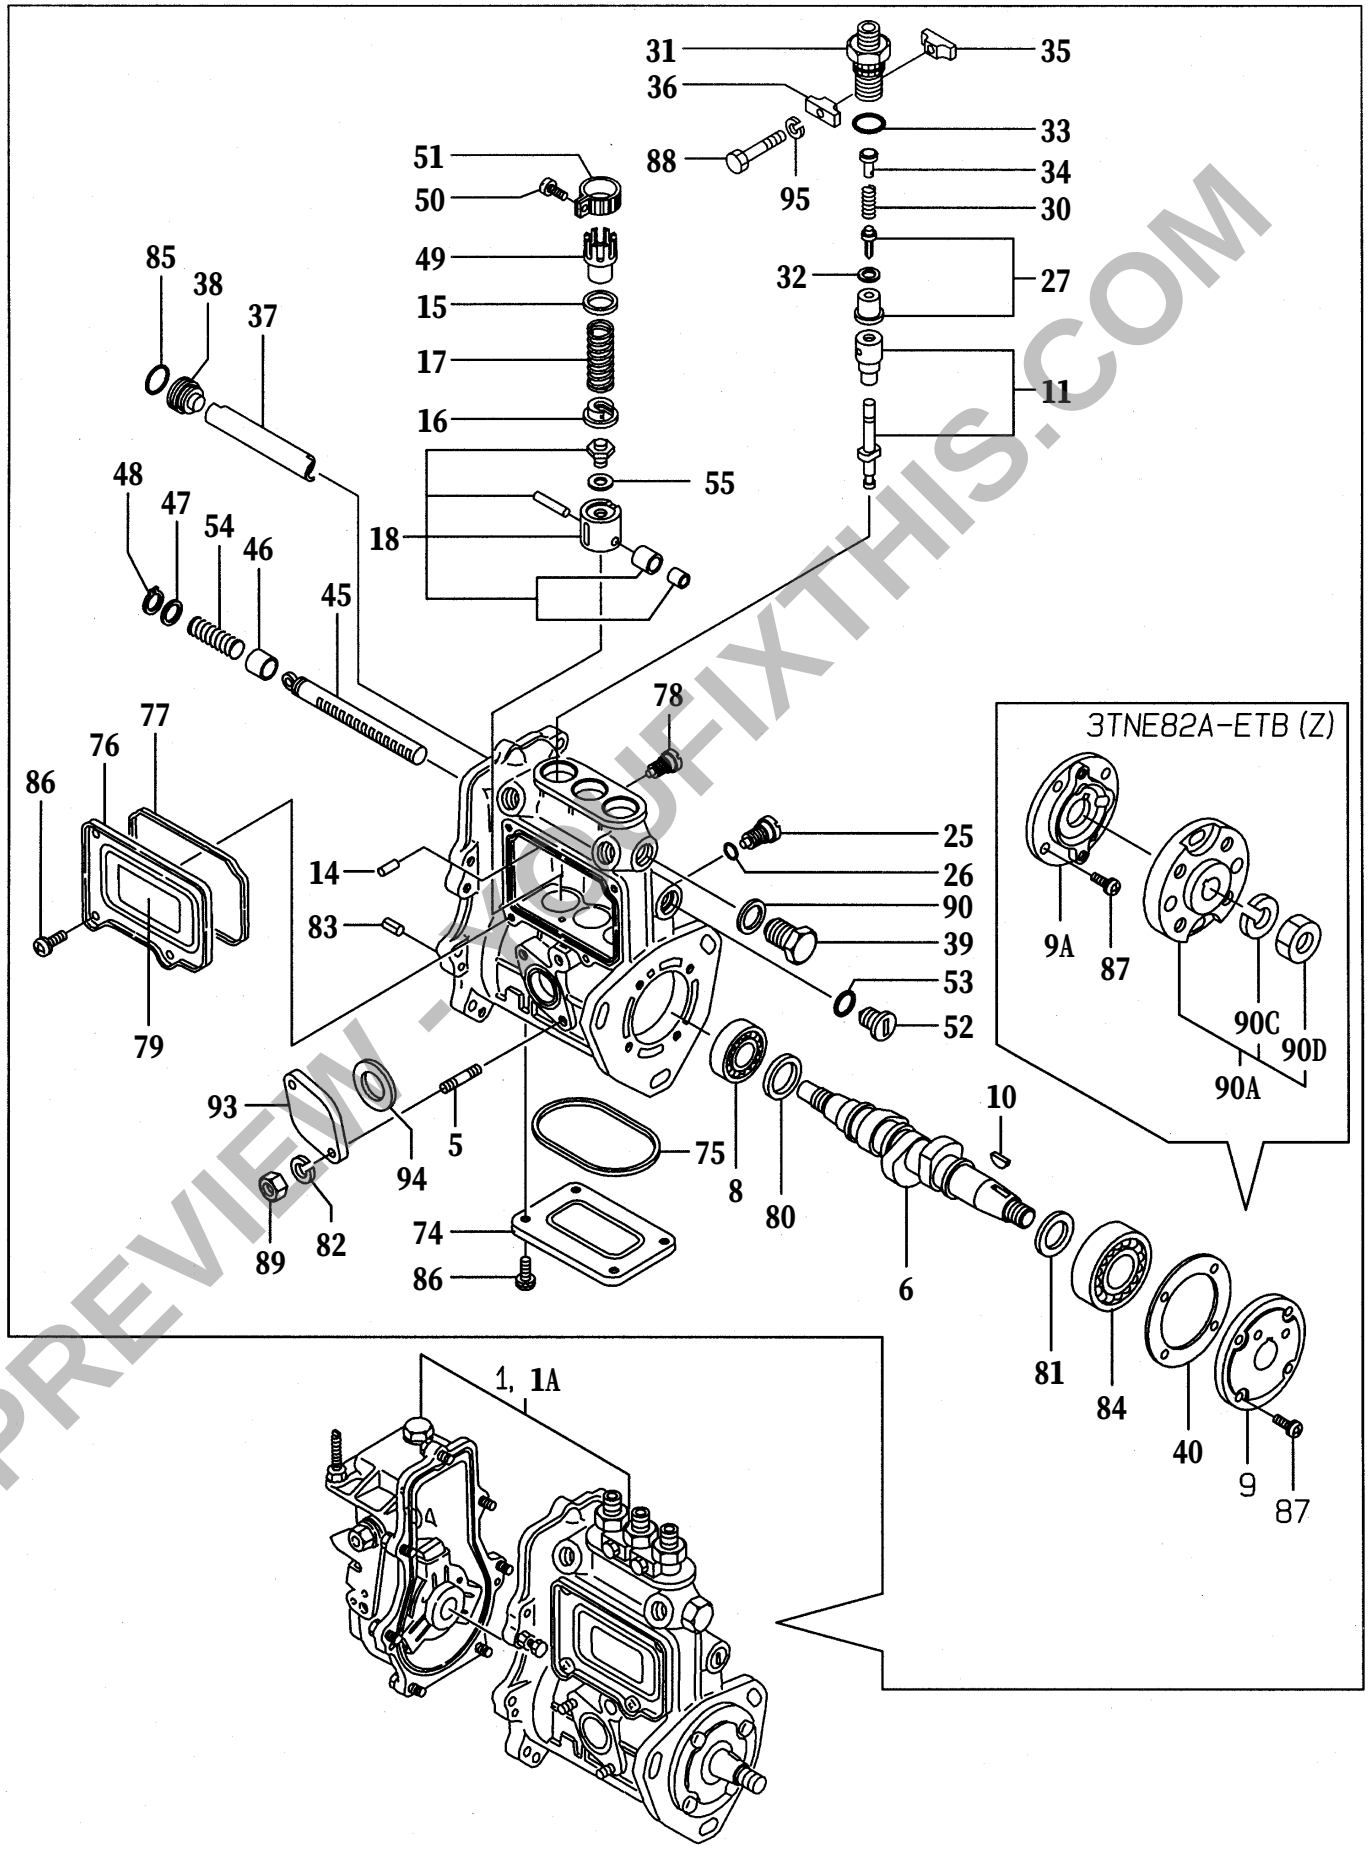


PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

Y00D6942
3TNE82A- (E) TB (Z)

10 CWシステム
COOLING WATER SYSTEM

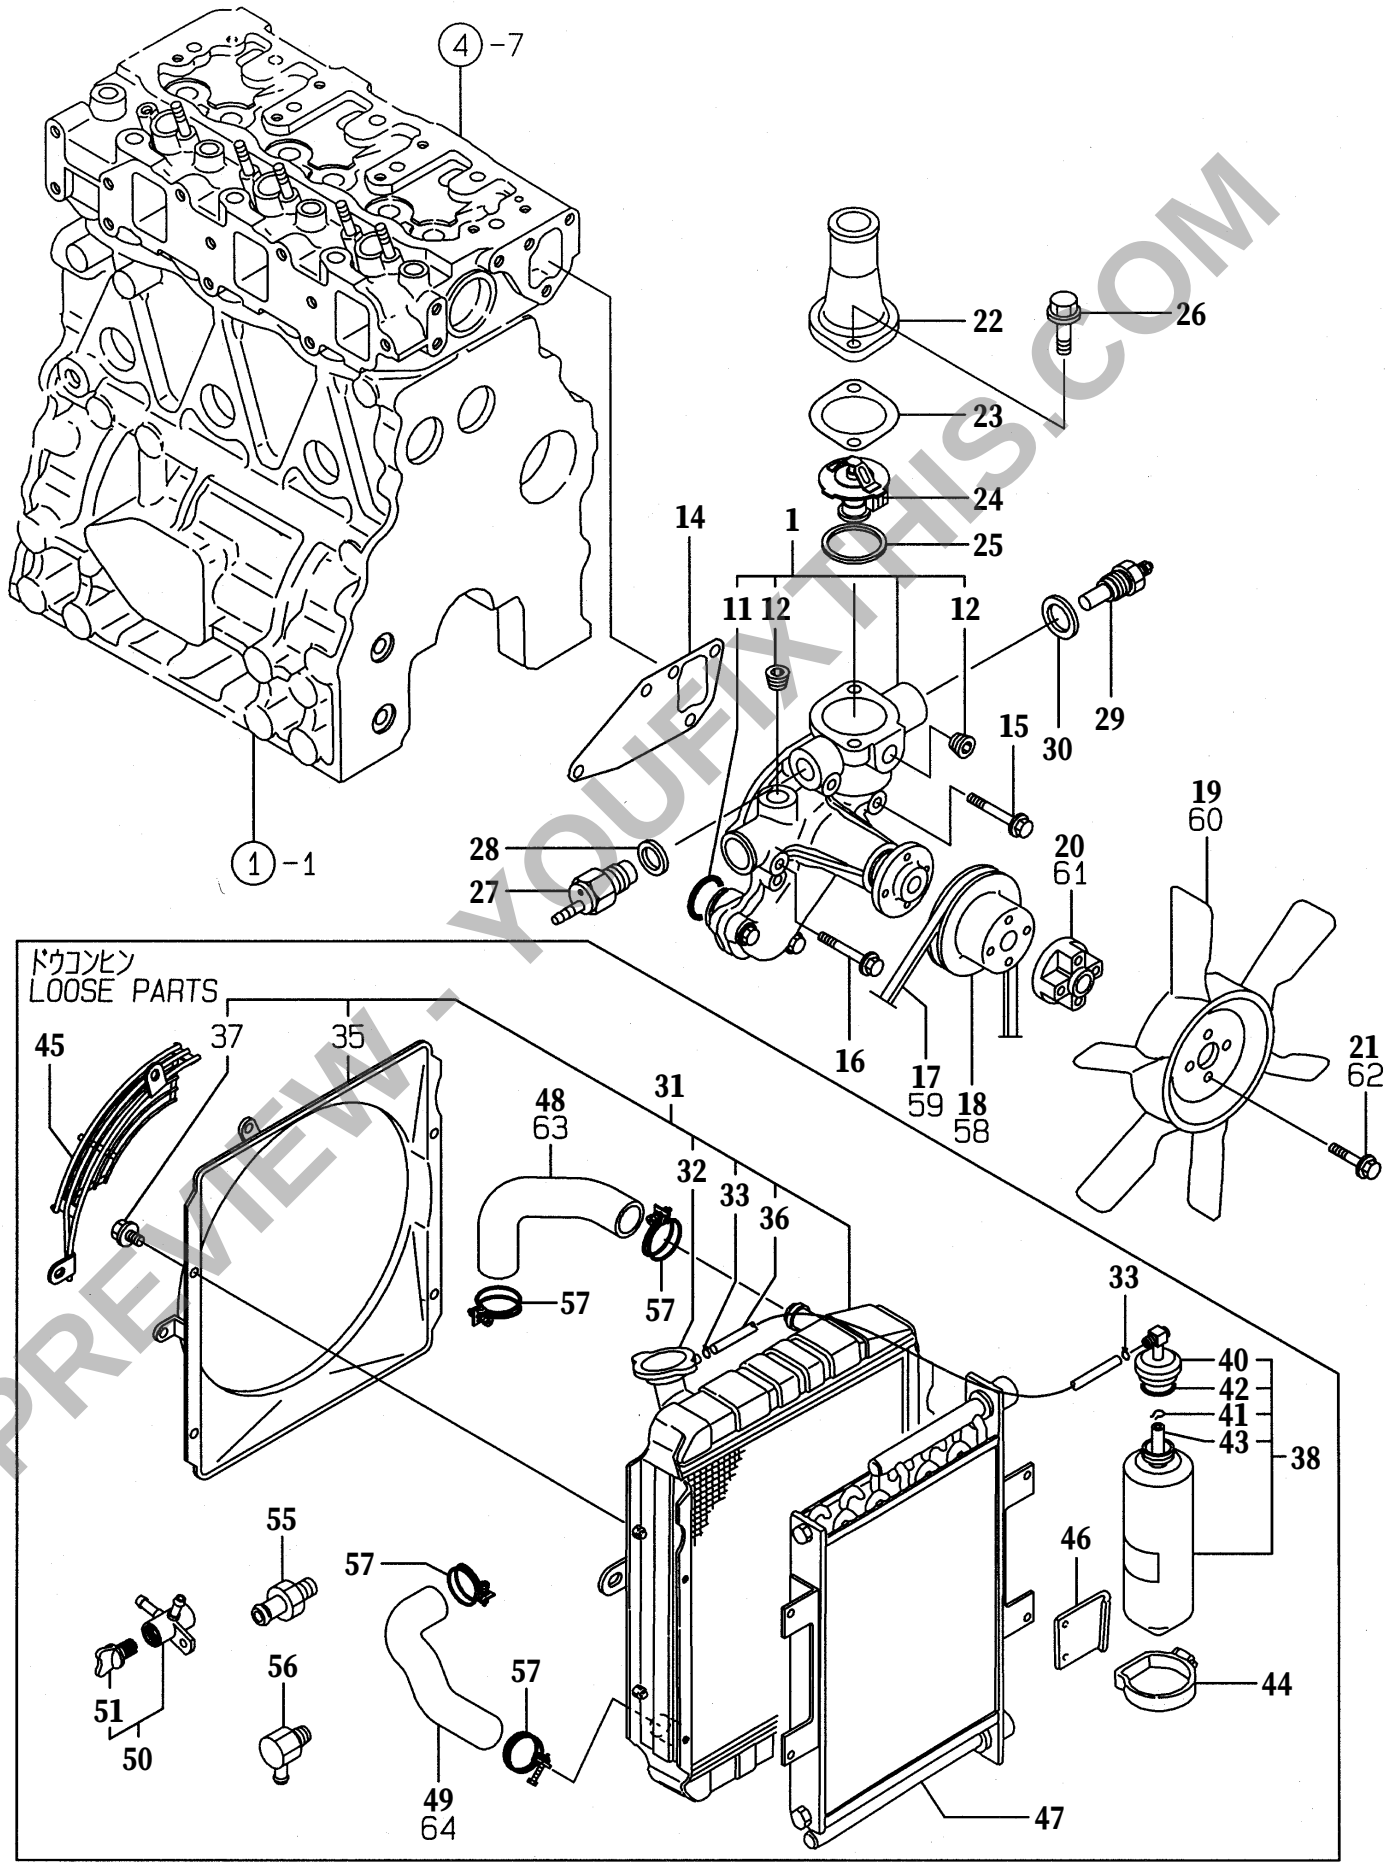

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

NUMERICAL INDEX

Part number	Page	Item
101304-59020	14	14
101720-55750	14	29
102103-55520	14	8
102103-55520	14	24
103854-39140	14	13
104200-55321	14	20
104200-55330	14	3
104200-55330	14	21
104200-55341	14	22
104200-55750	14	5
104200-55750	14	30
104200-92350	17	27
104211-11180	4	18
104211-11370	4	22
105025-59750	13	57
110250-55610	14	7
110250-55610	14	25
114250-39450	9	36
114250-53080	13	5
114250-53120	13	9
114250-53130	13	10
114250-53140	13	11
114250-53210	13	12
114250-53400	13	13
119032-77910	16	14
119131-18320	6	6
119131-18320	6	15
119140-12680	5	13
119259-44570	10	32
119266-49350	10	29
119285-77951	12	78
119285-77952	12	I 78-1
119305-59120	13	20
119620-01750	3	3
119620-02020	1	7
119625-11870	4	23
119625-11870	17	6
119625-11880	4	24
119625-11880	17	7
119625-11900	4	25
119632-77920	16	15
119640-01640	3	9
119640-13510	6	16
119640-34800	9	16
119640-92750	17	28
119660-61901	12	56
119808-12520	5	10
119808-12540	5	12
119810-01200	1	22
119810-01730	3	6
119810-01780	3	17
119810-01790	3	8
119810-02800	1	15
119810-02870	1	24
119810-02930	1	18
119810-02940	1	27
119810-11100	4	15
119810-11110	4	16
119810-11120	4	17
119810-11240	4	27
119810-13110	6	2
119810-13110	17	11
119810-14400	7	2
119810-14580	7	3
119810-23200	8	30
119810-23600	8	31
119810-23610	8	33
119810-23910	8	29
119810-35401	9	19
119810-39200	9	32
119810-51040	11	6
119810-55340	14	2
119810-55650	14	9
119810-77340	16	12
119812-01330	1	23
119812-01330	17	2
119812-11700	4	7
119813-12100	5	2
119813-12110	5	1
119813-12110	17	10
119813-21000	8	1
119813-22080	8	17
119813-22300	8	23
119813-22500	8	19
119813-22900	8	35
119813-44580	10	36
119813-59812	13	25
119813-59821	13	29
119813-59831	13	33
119820-77340	16	9
119823-12210	5	25
119823-13600	6	8
119823-42000	10	1
119833-55620	14	1
119836-77201	16	1
119836-77920	16	4
119840-13100	6	1
119840-13150	6	11
119840-13650	6	12
119840-59500	13	38A
119840-59560	13	39
119840-59570	13	40
119840-59601	14	34
119840-59621	14	37
119859-49010	10	48
119865-11210	4	26
119865-11310	4	47
119865-11310	17	8
119865-21600	8	16
119866-12541	5	11
119867-77331	16	11
119869-49020	10	49
119908-61501	12	I 31-1
119910-12210	5	5
119910-12510	5	9
119910-12560	5	6
120323-61470	12	I 80-1
121023-01550	2	25
121111-21501	8	12
121120-13590	6	17
121250-44590	10	33
121250-44901	10	27
121250-55620	14	10
121250-59550	13	38
121254-55510	14	6
121256-44600	10	46
121257-55720	14	26
121257-55731	14	27
121450-01560	2	6
121450-44531	10	40
121470-44581	10	42
121520-34810	9	17
121520-44740	10	19
121550-49111	10	55
121750-49110	10	56
121850-21680	8	11
121850-51960	2	12
121850-51960	17	4
121855-12060	5	23
122117-51560	11	50
122710-51090	11	10
124060-11800	4	11
124064-55510	14	23
124066-59100	13	37
124066-59100	13	38B
124160-01751	2	7
124160-01751	4	41
124160-01910	1	5
124160-01910	1	11
124160-11340	4	20
124160-11340	17	5
124160-11360	4	51
124160-39140	9	31
124240-01871	2	8
124240-01883	2	I 9
124240-01883	17	I 3
124450-44550	10	44
124450-44560	10	41
124465-44950	10	28
124465-44950	17	21
124550-51350	11	32
124550-51370	11	33
124550-59820	9	38
124550-59830	9	37
124550-66370	12	58
124550-77030	15	31
124701-11911	6	10
124701-11911	6	23
124701-11911	17	20
124736-07900	4	5
124766-59050	13	56
124766-59050	14	16
124766-59050	14	35
124950-11340	4	21
124950-11340	17	12
124950-51190	11	17
129001-01250	1	12
129001-32001	9	1
129001-35300	9	27
129001-91841	2	21
129003-22950	8	37
129030-12201	5	24
129030-44520	10	31
129030-44760	10	20
129052-61050	12	5
129052-61060	12	6
129052-61070	12	7
129052-61390	12	30
129052-61500	12	31
129052-61540	12	46
129100-01580	3	1
129100-01580	3	14
129100-01580	8	2
129100-25061	7	9
129100-52200	11	93
129100-53100	13	6
129100-59951	13	42
129100-61400	12	16
129100-61440	12	75
129100-61650	12	76

Download full manual at youfixthis.com

PREVIEW - YOUFIXTHIS.COM

目次 CONTENST


コウモクNO. GROUP	コウモク メイ	GROUP NAME
1	ｼﾘﾝﾀﾞﾌﾞﾛｯｸ	CYLINDER BLOCK
2	ｷﾞﾔｹｰｽ	GEAR HOUSING
3	ﾌﾗｲﾎｲﾙﾊｳｼﾞﾝｸﾞ & ｵｲﾙﾊﾟﾝ	FLYWHEEL HOUSING & OIL SUMP
4	ｼﾘﾝﾀﾞﾍｯﾄﾞ & ﾎﾞﾝﾈｯﾄ	CYLINDER HEAD & BONNET
5	ｷｭｳｷﾏﾆﾎｰﾙﾄﾞ & ｴｱｸﾘｰﾅ	SUCTION MANIFOLD & AIR CLEANER
6	ﾊｲｷﾏﾆﾎｰﾙﾄﾞ & ｻｲﾚﾝｻ	EXHAUST MANIFOLD & SILENCER
7	ｶﾑｼｬﾌﾄ & ｸﾄﾞｳｷﾞﾔ	CAMSHAFT & DRIVING GEAR
8	ｸﾗﾝｸｼｬﾌﾄ & ﾋﾟｽﾄﾝ	CRANKSHAFT & PISTON
9	LOｼｽﾃﾑ	LUB.OIL SYSTEM
10	CWｼｽﾃﾑ	COOLING WATER SYSTEM
11	FOﾌﾝｼｬﾎﾟﾝﾌﾟ	FUEL INJECTION PUMP
12	ｶﾞﾊﾞﾅ	GOVERNOR
13	FOﾌﾝｼｬﾍﾞﾝ	FUEL INJECTION VALVE
14	FOﾊﾟｲﾌﾟ	FUEL LINE
15	ｽﾀｰﾃｲﾝｸﾞﾓｰﾀ	STARTING MOTOR
16	ｼﾞｪﾈﾚｰﾀ	GENERATOR
17	ﾊﾟｯｷﾝｾｯﾄ	GASKET SET

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

How to read this Parts Catalog.

1. Parts mentioned in this Parts Catalog may not necessarily be standard equipping parts.
2. Parts change may be made without prior notice.
3. Form of this Parts Catalog.

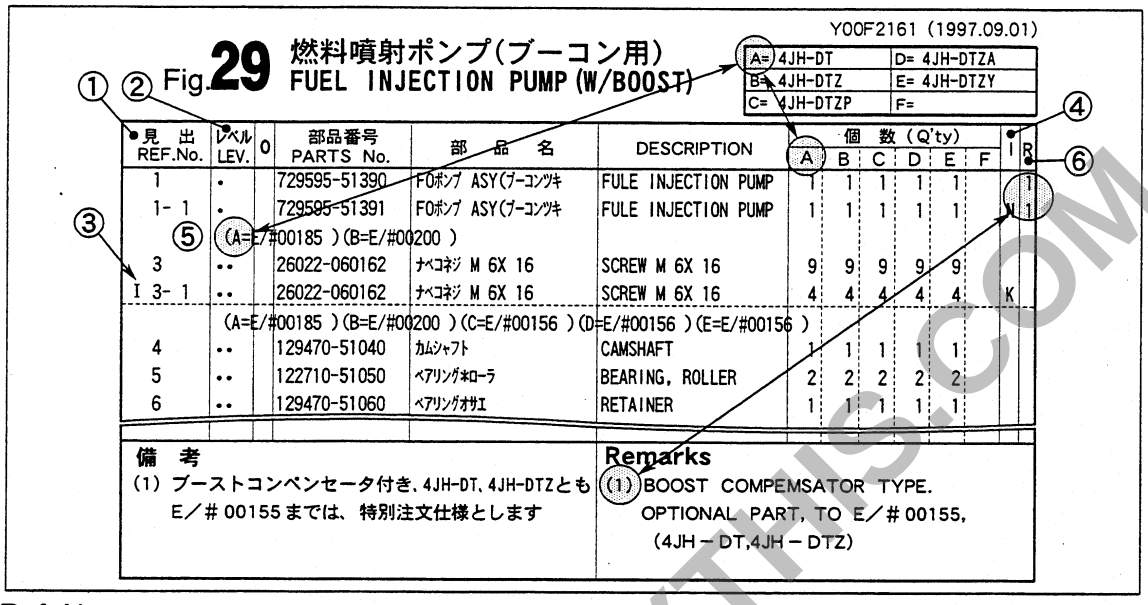

Y00F2161 (1997.09.01)

Fig. 29 燃料噴射ポンプ(ブーコン用)
FUEL INJECTION PUMP (W/BOOST)

A= 4JH-DT	D= 4JH-DTZA
B= 4JH-DTZ	E= 4JH-DTZY
C= 4JH-DTZP	F=

見出 REF.No.	レベル LEV.	0	部品番号 PARTS No.	部品名	DESCRIPTION	個数 (Q'ty) A	B	C	D	E	F	I	R
1	•		729595-51390	FOポンプ ASY(ブーコンツキ	FULE INJECTION PUMP	1	1	1	1	1			1
1- 1	•		729595-51391	FOポンプ ASY(ブーコンツキ	FULE INJECTION PUMP	1	1	1	1	1			1
	(A=E/#00185) (B=E/#00200)												
3	••		26022-060162	ナベコネジ M 6X 16	SCREW M 6X 16	9	9	9	9	9			
I 3- 1	••		26022-060162	ナベコネジ M 6X 16	SCREW M 6X 16	4	4	4	4	4		K	
	(A=E/#00185) (B=E/#00200) (C=E/#00156) (D=E/#00156) (E=E/#00156)												
4	••		129470-51040	カムシャフト	CAMSHAFT	1	1	1	1	1			
5	••		122710-51050	ベアリングキローラ	BEARING, ROLLER	2	2	2	2	2			
6	••		129470-51060	ベアリングオサエ	RETAINER	1	1	1	1	1			

備考	Remarks
(1) ブーストコンペンセータ付き、4JH-DT、4JH-DTZとも E／# 00155までは、特別注文仕様とします	(1) BOOST COMPEMSATOR TYPE. OPTIONAL PART, TO E／# 00155, (4JH－DT,4JH－DTZ)

① Ref. No.

The Ref. No. in the list may not be accord with the Ref. No. on illustration.

(Ex.) Illustration No. 1 — List head No. 1 (Befor change) ⟶ 1 [－1] (After change)

When interchangeable symbol N, R, and K, illustrations for new parts are sometimes omitted.

② Lev.(Level)

Indication and Meaning of Level

Level : Hereunder is given the relation among the number of dots(•),the level and the nominal parent- child relationship.

- • ……Parent parts(Assembly parts)
- •• ……Child parts included in "•" (Semi- Assembly parts,component parts of Assembly parts.)
- ••• ……Child parts included in "••", Grand- child parts in terms of "•". (Compornent parts of Semi- Assembly parts.)

Note) A parts of non- sale parts are illustlated but not listed.

③ Change Mark

Change Mark "I" is given to the part for which a desigh change was made at this time.
The design change was not shown in the last published Parts Catalog.

④ Interchangeability Mark

In the case where a part change took place,one of the following interchangeability marks is indicated for that part.

Symbol	interchangeability	Contents note
N	Old ⟵ New	New Part is interchangeable for Old Part but not interchangeable conversely.
Q	Old ⟵ New	New Part is not interchangeable for Old Part but interchangeable conversely.
R	Old ⟷ New	New Part is interchangeable for Old Part and vice versa.
S	Old ⟷ New	New Part is not interchangeable for Old Part and vice versa.
W		Part newly added.
Z		Part discontinued.
F		Not interchangeable single part but interchangeable by set of the related parts.
K		Changed only in quantity used.

⑤ Effective Machine No.

When a part is changed,Effective Machine No. of a Model for which the part is applicable is indication in each column of (A)- (F).

Product Symbol	Product No.	Product Symbol	Product No.
C	Clutch No. Compressor No.	M	Machine No.
D	Drive No.	T	Tractor No.
E	Engine No.	Note1) ※	Date

Note1) Date may follow the symbol in some cases. (Ex.) ※ 1996.01
Note2) As far as engine models shown by "XXX" are concerned, the modification of the parts could not be predicted or the engine models themselves could not be identified.
Note3) (A=E/#00185) means that the design change on the part has been effective for the model at the column (A)(in this case, for 4JH- DT) on and from E/#(Engine Serial Number) 00185.

⑥ Remarks Mark

Figures or alphabets (Symbols) are entered in the remark column.
The comments(remarks)on the pertinent parts are indicated in the lower part of the list by the same symbols as those stated above.

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 11 of 124 pages

The full manual includes:

- All 124 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Yanmar 3TNE82A-ETB, 3TNV82A-QTB, QTB1, TB125 Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual