
How to read this Parts Catalog.

1. Parts mentioned in this Parts Catalog may not necessarily be standard equipping parts.
2. Parts change may be made without prior notice.
3. Form of this Parts Catalog.

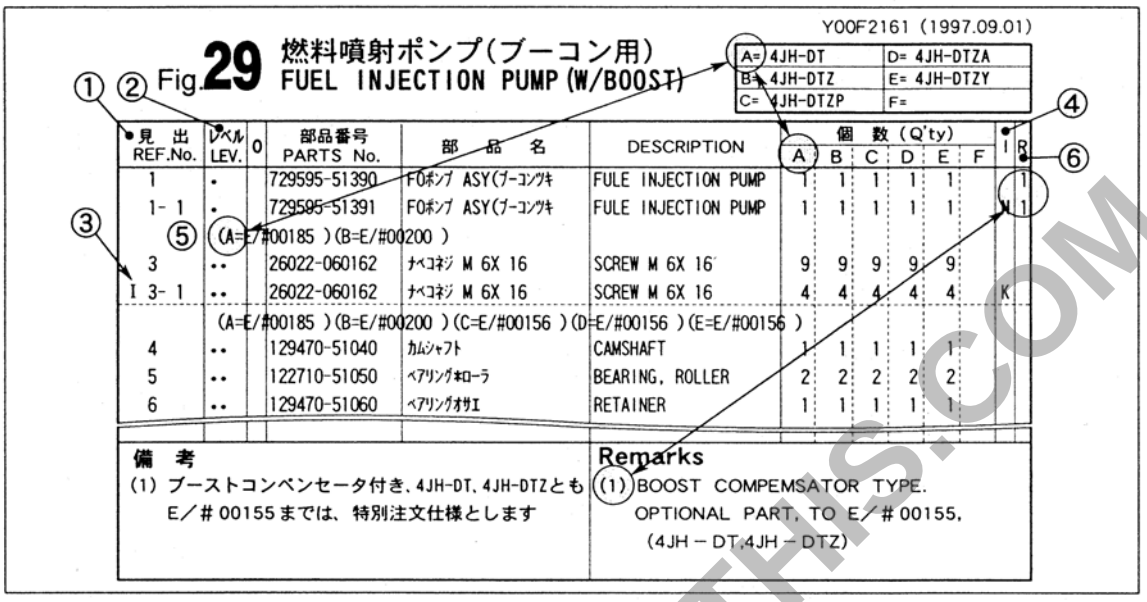

Y00F2161 (1997.09.01)

Fig.29 燃料噴射ポンプ(ブーコン用)
FUEL INJECTION PUMP (W/BOOST)

A=	4JH-DT	D=	4JH-DTZA
B=	4JH-DTZ	E=	4JH-DTZY
C=	4JH-DTZP	F=	

①見出 REF.No.	②レベル LEV.	O	部品番号 PARTS No.	部品名	DESCRIPTION	個数 (Q'ty) A	B	C	D	E	F	I	R
1	•		729595-51390	FOポンプ ASY(ブーコンツキ	FULE INJECTION PUMP	1	1	1	1	1			1
1- 1	•		729595-51391	FOポンプ ASY(ブーコンツキ	FULE INJECTION PUMP	1	1	1	1	1			N 1
	⑤		(A=E/#00185) (B=E/#00200)										
3	••		26022-060162	ナベコネジ M 6X 16	SCREW M 6X 16	9	9	9	9	9			
I 3- 1	••		26022-060162	ナベコネジ M 6X 16	SCREW M 6X 16	4	4	4	4	4			K
	(A=E/#00185) (B=E/#00200) (C=E/#00156) (D=E/#00156) (E=E/#00156)												
4	••		129470-51040	カムシャフト	CAMSHAFT	1	1	1	1	1			
5	••		122710-51050	ベアリングキローラ	BEARING, ROLLER	2	2	2	2	2			
6	••		129470-51060	ベアリングオサエ	RETAINER	1	1	1	1	1			

備考	Remarks
(1) ブーストコンペンセータ付き、4JH-DT、4JH-DTZとも E／# 00155までは、特別注文仕様とします	(1) BOOST COMPEMSATOR TYPE. OPTIONAL PART, TO E／# 00155, (4JH－DT,4JH－DTZ)

① Ref. No.

The Ref. No. in the list may not be accord with the Ref. No. on illustration.

(Ex.) Illustration No. 1 — List head No. 1 (Befor change) ⟶ 1 −1 (After change)

When interchangeable symbol N, R, and K, illustrations for new parts are sometimes omitted.

② Lev.(Level)

Indication and Meaning of Level

Level : Hereunder is given the relation among the number of dots(•),the level and the nominal parent- child relationship.

- • ……Parent parts(Assembly parts)
- •• ……Child parts included in "•" (Semi- Assembly parts,component parts of Assembly parts.)
- ••• ……Child parts included in "••", Grand- child parts in terms of "•". (Compornent parts of Semi- Assembly parts.)

Note) A parts of non- sale parts are illustlated but not listed.

③ Change Mark

Change Mark "I" is given to the part for which a desigh change was made at this time.
The design change was not shown in the last published Parts Catalog.

④ Interchangeability Mark

In the case where a part change took place,one of the following interchangeability marks is indicated for that part.

Symbol	interchangeability	Contents note
N	Old ⟶ New	New Part is interchangeable for Old Part but not interchangeable conversely.
Q	Old ⟶ New	New Part is not interchangeable for Old Part but interchangeable conversely.
R	Old ⟶ New	New Part is interchangeable for Old Part and vice versa.
S	Old ⟶ New	New Part is not interchangeable for Old Part and vice versa.
W		Part newly added.
Z		Part discontinued.
F		Not interchangeable single part but interchangeable by set of the related parts.
K		Changed only in quantity used.

⑤ Effective Machine No.

When a part is changed,Effective Machine No. of a Model for which the part is applicable is indication in each column of (A)- (F).

Product Symbol	Product No.	Product Symbol	Product No.
C	Clutch No. Compressor No.	M	Machine No.
D	Drive No.	T	Tractor No.
E	Engine No.	Note1) ※	Date

Note1) Date may follow the symbol in some cases. (Ex.) ※ 1996.01
Note2) As far as engine models shown by "XXX" are concerned, the modification of the parts could not be predicted or the engine models themselves could not be identified.
Note3) (A=E/#00185) means that the design change on the part has been effective for the model at the column (A)(in this case, for 4JH- DT) on and from E/#(Engine Serial Number) 00185.

⑥ Remarks Mark

Figures or alphabets (Symbols) are entered in the remark column.
The comments(remarks)on the pertinent parts are indicated in the lower part of the list by the same symbols as those stated above.

PREVIEW - YOUFIXTHIS.COM


Download full manual at youfixthis.com

Page	Index
FIG01	CYLINDER BLOCK
FIG02	GEAR HOUSING
FIG03	FLYWHEEL HOUSING & OIL SUMP
FIG04	CYLINDER HEAD & BONNET
FIG05	SUCTION MANIFOLD & AIR CLEANER
FIG06	EXHAUST MANIFOLD & SILENCER
FIG07	CAMSHAFT & DRIVING GEAR
FIG08	CRANKSHAFT & PISTON
FIG09	LUB.OIL SYSTEM
FIG10	COOLING WATER SYSTEM
FIG11	FUEL INJECTION PUMP
FIG12	GOVERNOR
FIG13	FUEL INJECTION VALVE
FIG14	FUEL LINE
FIG15	STARTING MOTOR
FIG16	GENERATOR
FIG17	GASKET SET

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

CYLINDER BLOCK

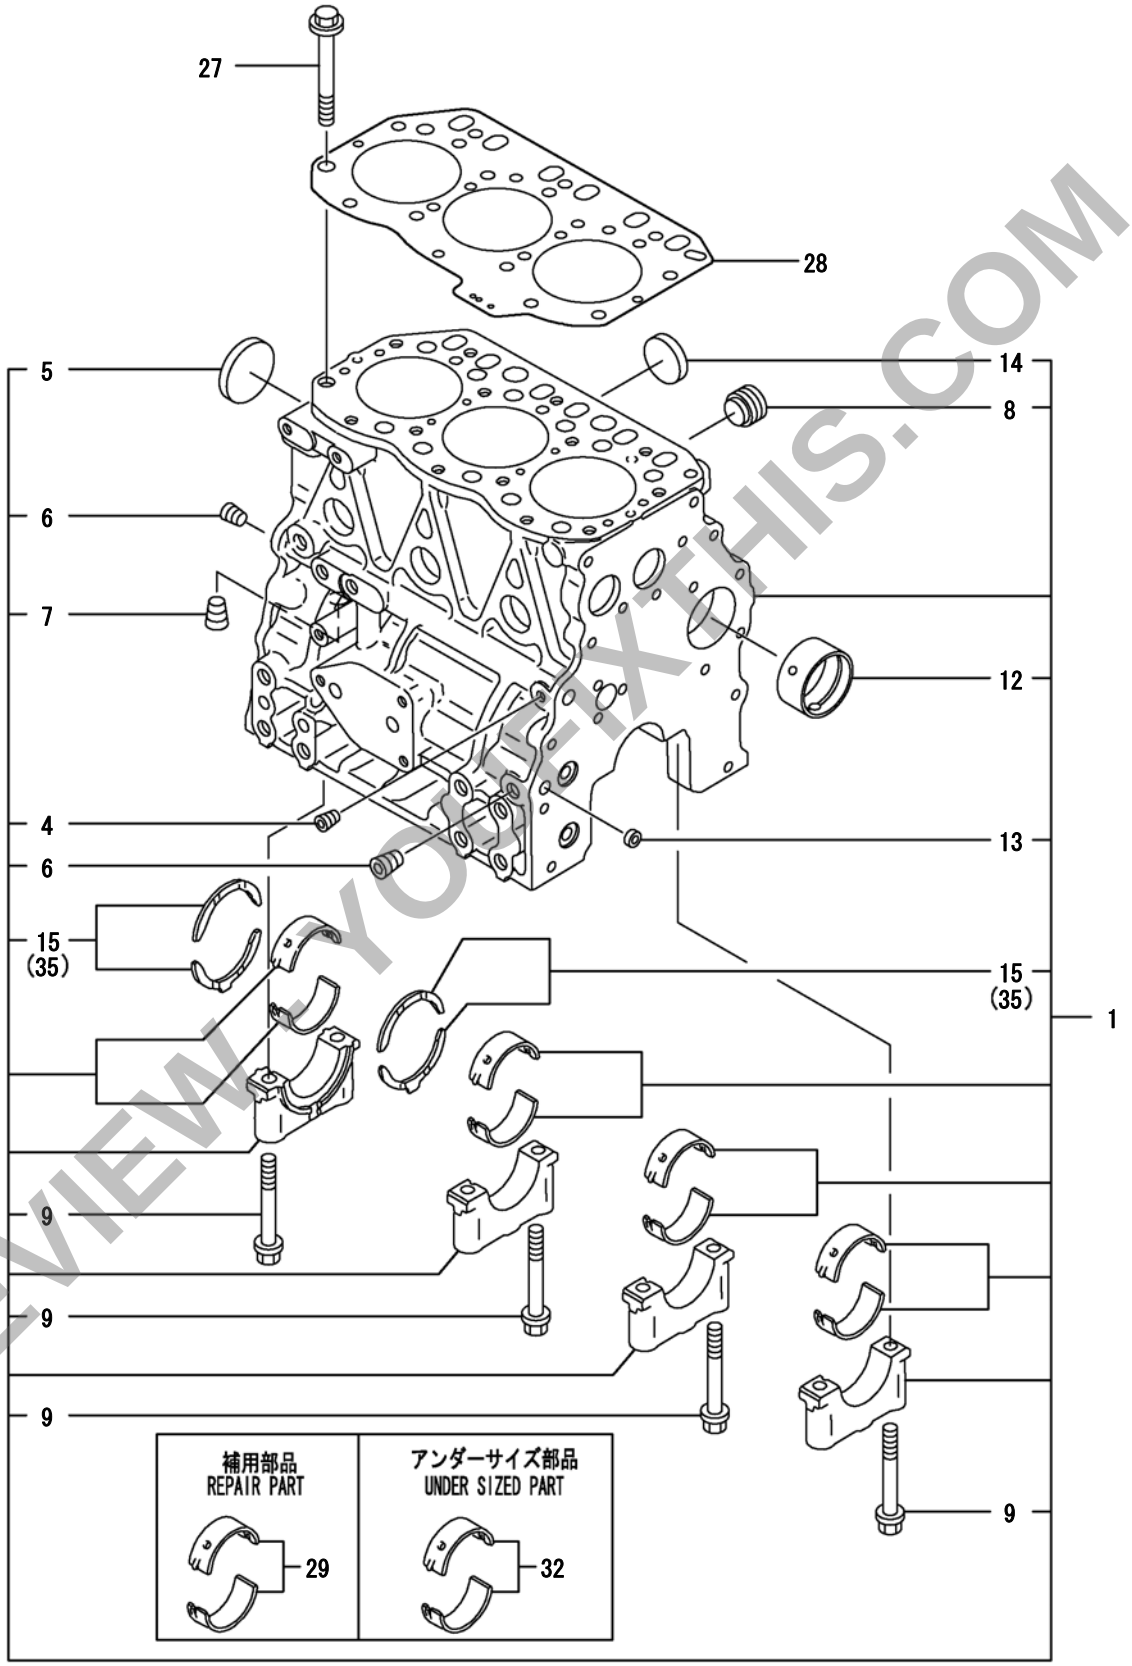


Y00D9980	1. シリンダブロック				
3TNV82A-BPTB, BPTB1	1. 08/02	2	3	PLUS	

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

FUEL INJECTION PUMP

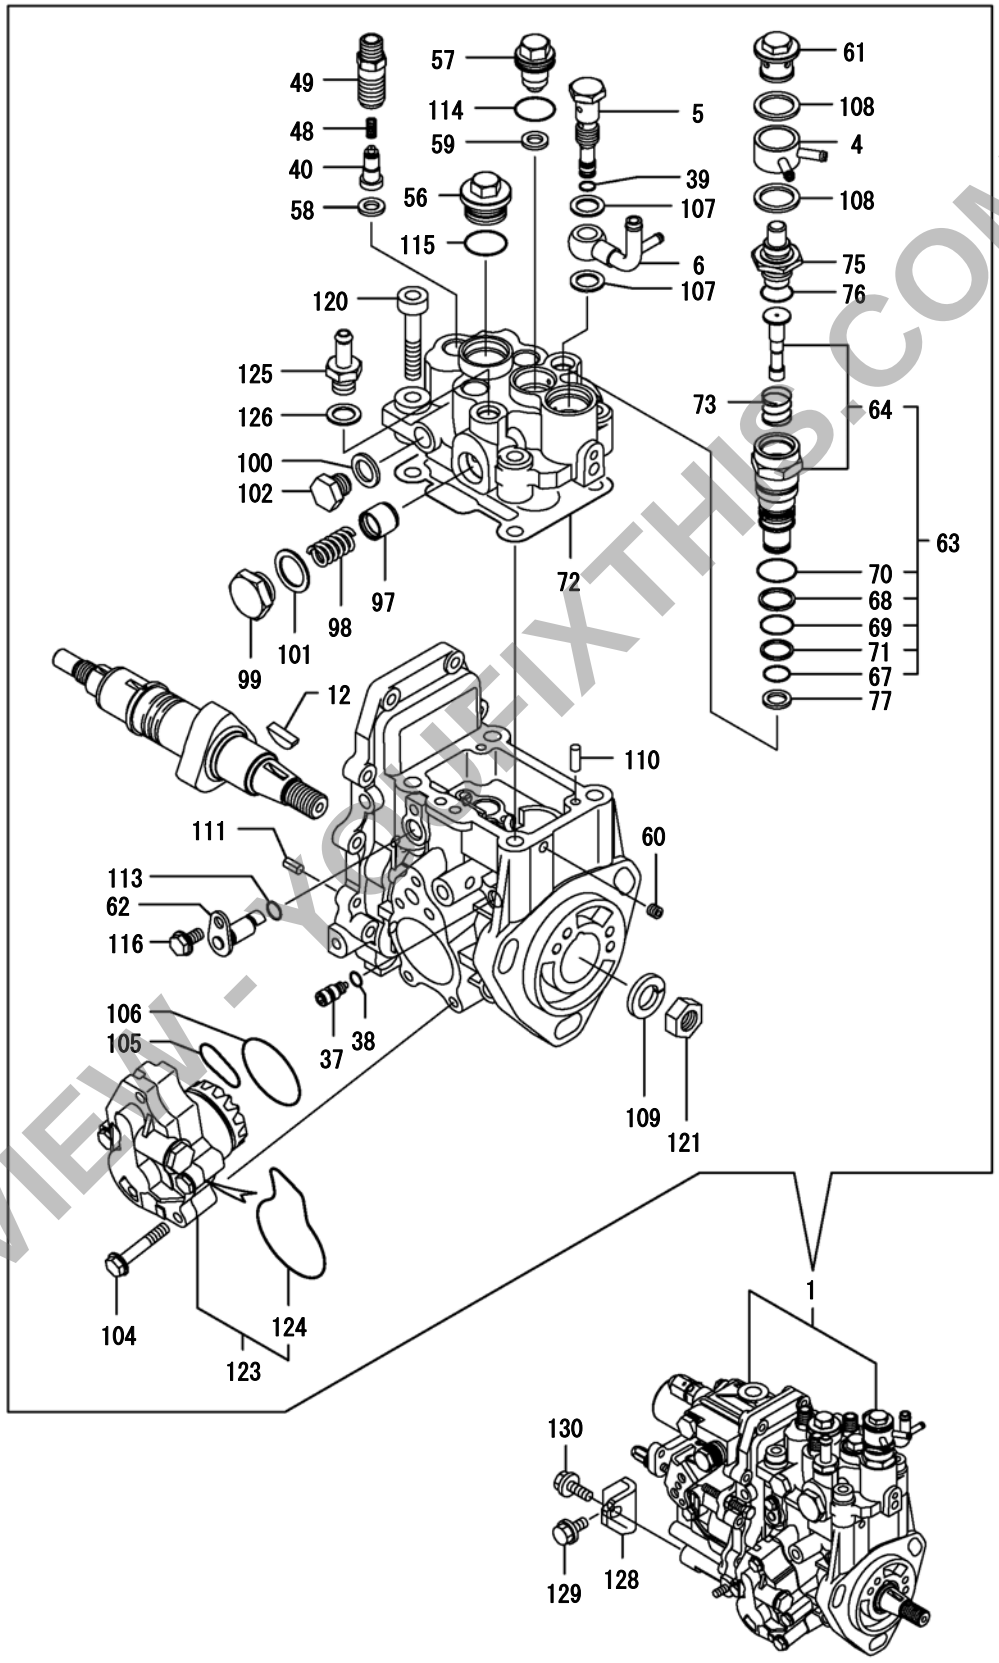


Y00D9980	11, FOフンシャポンプ				
3TNV82A-BPTB, BPTB1	1, 08/02	2	3	PLUS	

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

STARTING MOTOR

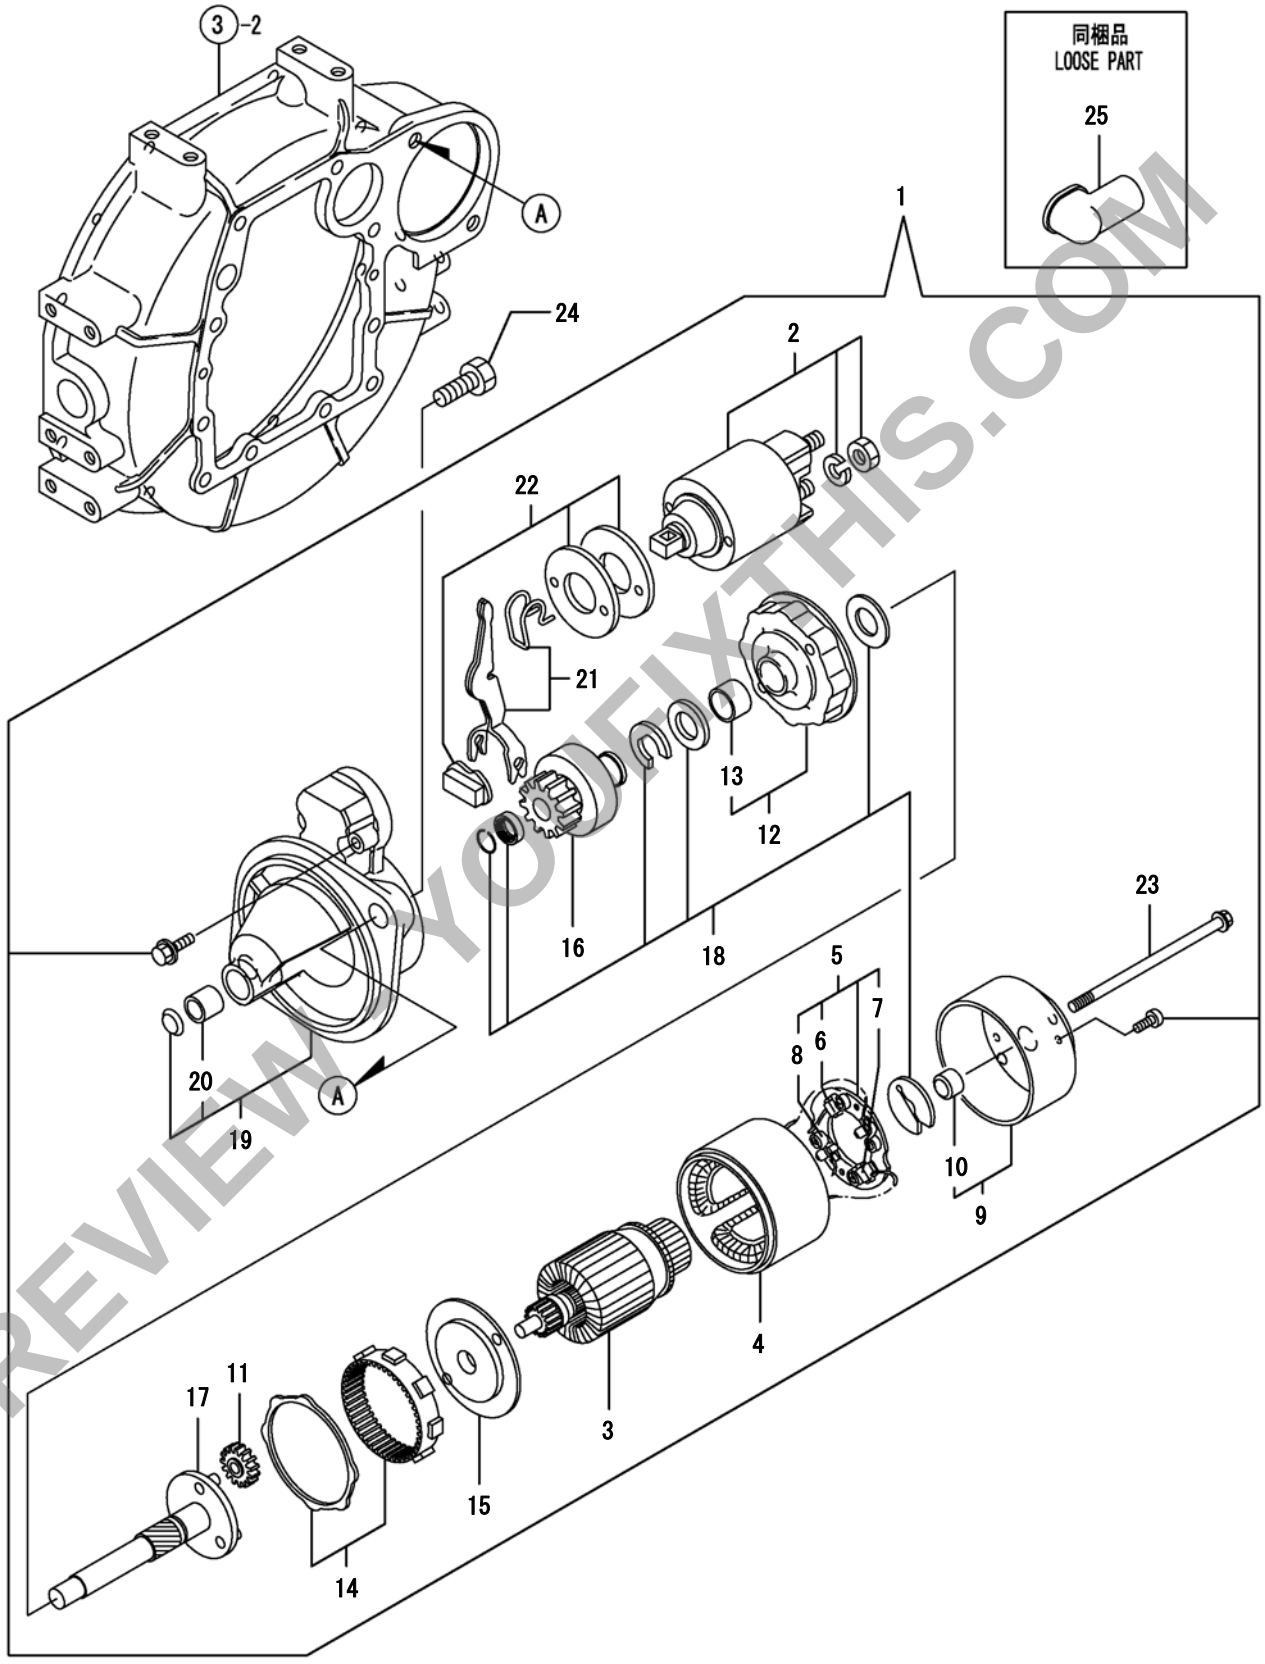

Y00D9980	15, スターティングモータ				
3TNV82A-BPTB, BPTB1	1, 08/02	2	3	PLUS	

PREVIEW YOUFIXTHIS.COM

Download full manual at youfixthis.com


ハイキマニホールド & サイレンサ EXHAUST MANIFOLD & SILENCER

REF NO.	PARTS NO.	Description	Q'ty	I	R	Remarks
1	Y119810-13110	GASKET, EXH.MANIFOLD	1			
2	Y119802-13129	MANIFOLD, EXHAUST	1			
3	Y123900-13610	STUD BOLT M 8X 80	2			
4	Y123900-13630	BOLT 8X80	4			
5	Y119131-18320	BOLT M 8X 22	4			
6	Y26306-080002	NUT	2			
7	Y129004-13200	GASKET, SILENCER	1			
8	Y129242-13510	SILENCER(cab)	1			
9	Y129242-13520	SILENCER(canopy)	1			
10	Y26106-100202	BOLT M10X 20 PLATED	2			
11	Y26306-080002	NUT	4			
12	Y121120-13590	CLAMP	1			
14	Y22117-100000	· WASHER 10	1			
15	Y22217-100000	· SPRING WASHER 10	1			
16	Y26106-100652	· BOLT M10X 65 PLATED	1			
17	Y26706-100002	· NUT M10	1			

PREVIEW - YOUFIXTHIS.COM

Download full manual at youfixthis.com

GOVERNOR

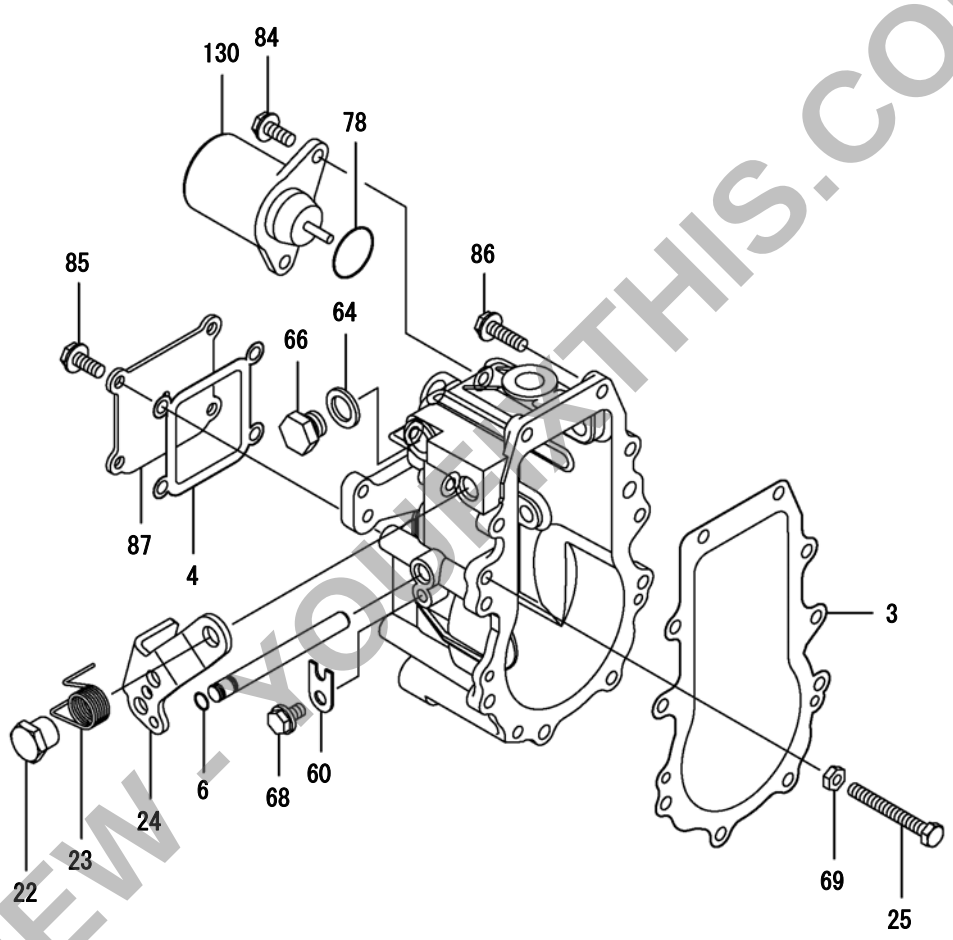

Y00D9980	12, ガ バ ナ				
3TNV82A-BPTB, BPTB1		1, 08/02	2	3	PLUS

PREVIEW - YOUFIXTHIS.COM
Download full manual at youfixthis.com

PREVIEW ONLY

You're viewing 7 of 40 pages

The full manual includes:

- All 40 pages, complete
- Searchable PDF (find any keyword)
- No watermarks
- Instant download
- Print-ready quality

GET FULL MANUAL NOW

Yanmar 3TNV82A-BPTB, BPTB1, TB228 Parts Catalog

Scan or click anywhere
youfixthis.com

Click anywhere on this page to get the full manual